

Ceiling Fan with Light

"What we can offer you is not only a fan
but also an attitude towards life"



Technical specifications

Ceiling Fan Light

Model No	SKU NO	Fan Size	Input Voltage	Power
90025	TLY52-WE-3D-I3	52 Inch	AC 100-240V 50/60Hz	Fan : 35W Main Light : 8W
	TLY52-CF-3D-13			
	TLY52-WW-3D-I3			
	TLY52-BH-3D-I3			
	TLY52-BW-3D-I3			
	TLY52-BX-3D-I3			
	TLY52-SW-3D-I3			
	TLY52-BK-3D-I3			



WARNING

Disconnect power prior to installation, inspection, or removal

Do not touch when light is on or when it is hot

If there is any problem with the fixture, turn power off and do not attempt to repair unless you are a qualified technician

Do not expose to water or rain


Ensure the lowest point of the fan is no less than 2.1 meters from the ground after it is installed.



ON/OFF switch



Dimmable switch

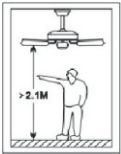

Packing List



Hanger Bracket



Canopy



Cover A

6" Downrod



Down Rod and Hanger Ball



Cover B



Motor



Lamp



Remote Control




Blade



Screw Pack


Installation Guide

1

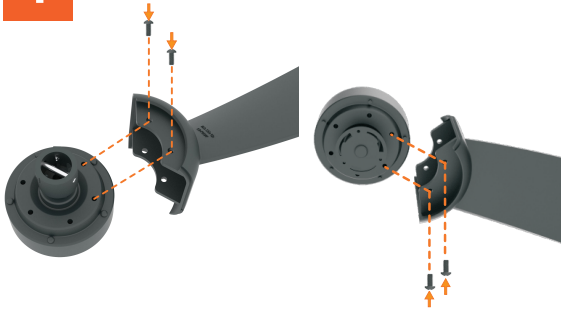

Screw the fan blades onto the fan motor.

2

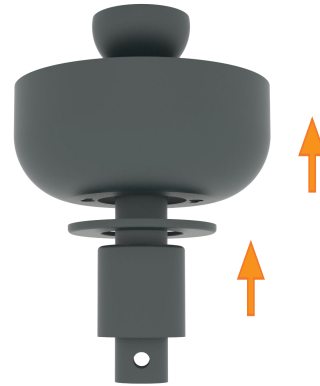


Slide the canopy and cover A&B onto the downrod

3



Loosen the fixed screws.

4

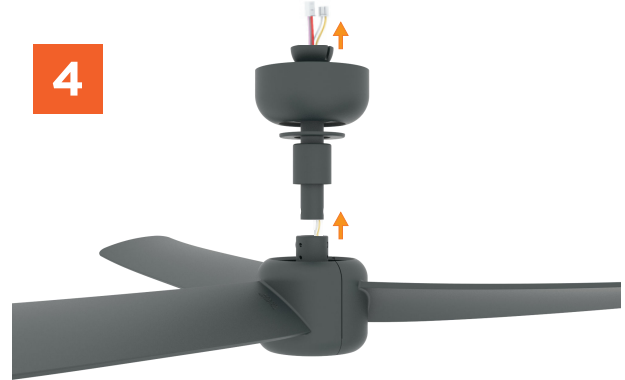


Pass the wires through the downrod.



5

Assemble the downrod and fan motor assembly, then secure them together.

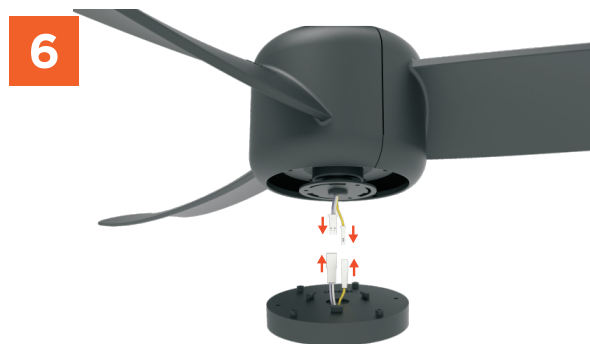

6

Connect the lamp's wires.



7

Align the lamp with the slot and install it onto the motor as shown in the picture.



8


Secure the hanger bracket to the ceiling.

9




Hang the assembled fan onto the hanger bracket on the ceiling.

10

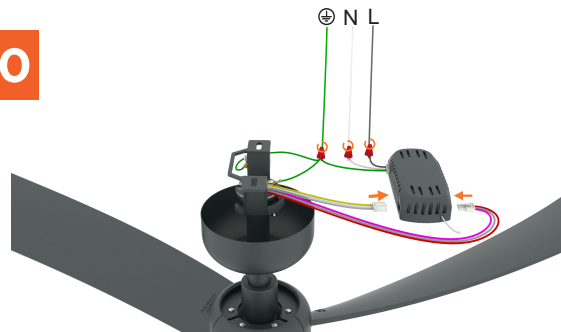


Connect the controller wires.

11

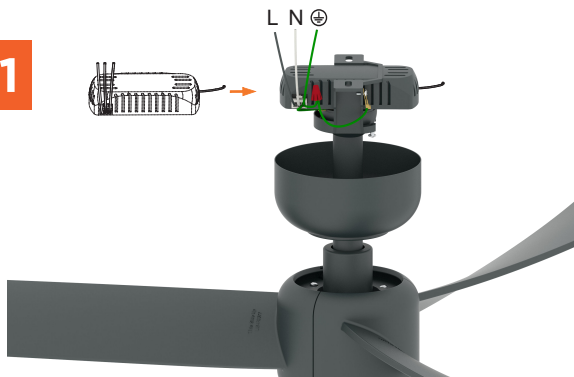

Insert the controller into the gap of the mounting bracket.

12

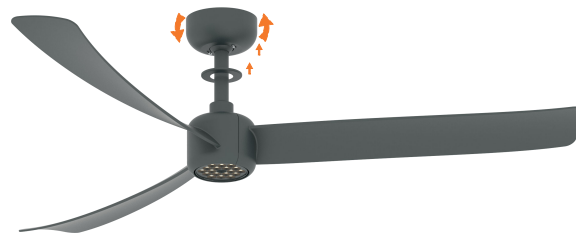

Secure the canopy with screws.

Ceiling Fan Remote Control Manual



Kindly Reminders:

If the remote control unable to operate the fan, please follow the steps below to troubleshoot:

1. Check the remote control's battery for proper contact, correct placement and sufficient charge. Low battery voltage can decrease the range and sensitivity of the remote. If the remote control is not used for an extended period, please remove the batteries.
2. Try re-pair the remote control with ceiling fan.

Pairing Method:

Turn on the power, press and hold the "  " button within the first 5 seconds of the light turning on. When you hear the "beep" sound or see the light flashing, the pairing is successful. If you need to pair again, wait for 30 seconds after turning off the power and repeat the above steps.

Input voltage: AC100V-240V 50/60Hz Power by 2×AAA batteries (not included)