


INSTALLATION STEPS FOR TIRE SNOW CHAINS



Attention: During driving, the speed should not exceed 40 kilometers per hour, and sudden braking and turning are prohibited. Additionally, snow chains cannot be installed on iron wheels, and chains cannot be installed at the inflation holes

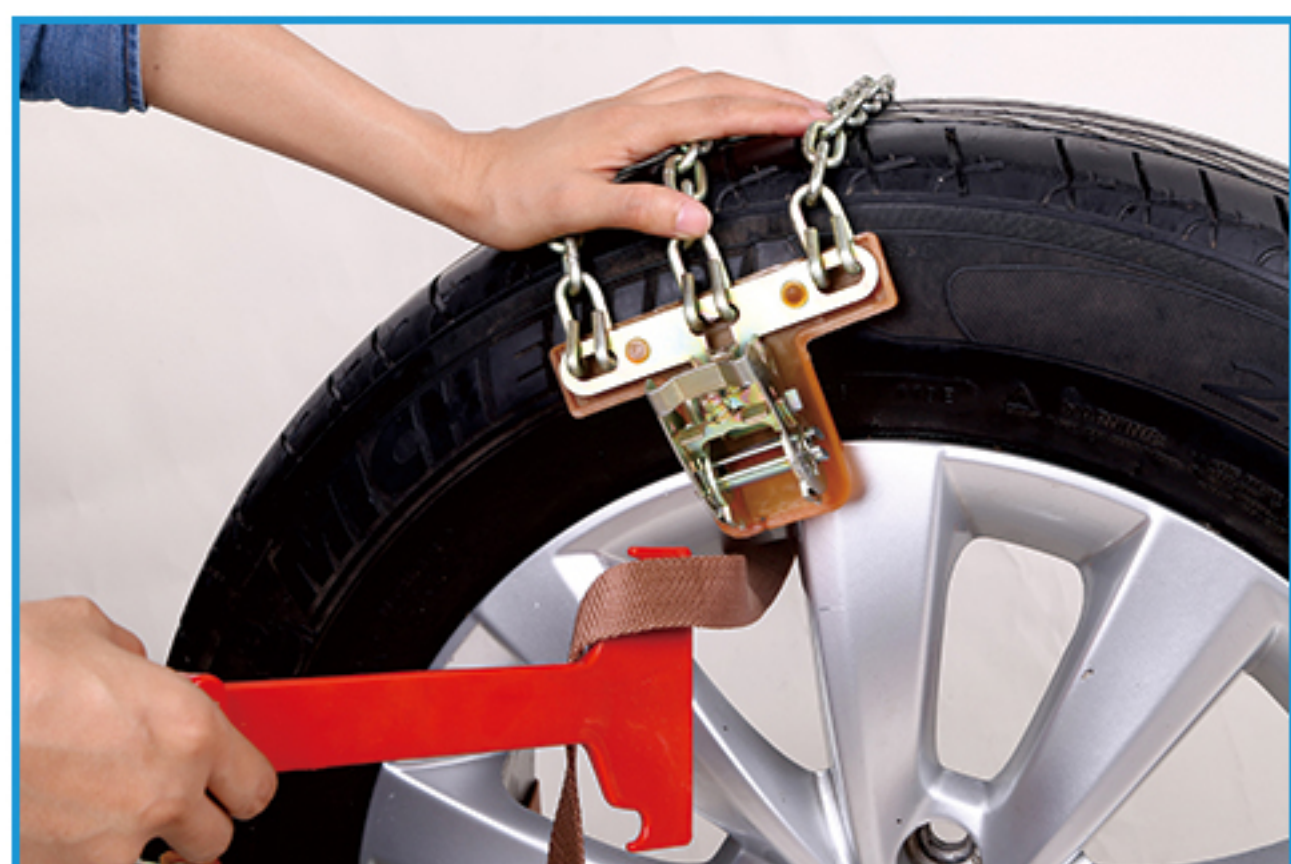

Step1

Use a tool to pull the webbing out of the wheel hub



Step2

Thread the webbing through the hole in the middle of the tensioner shaft and pull it out



Step3

Grasp the metal tightening handle and press it up and down until you get the webbing to the tightest



Step4

Finally installation completed

This product is suitable for vehicles with aluminum alloy hub with tire widths ranging from 215-285mm

INSTALLATION STEPS FOR TIRE SNOW CHAINS



Attention: During driving, the speed should not exceed 40 kilometers per hour, and sudden braking and turning are prohibited. Additionally, snow chains cannot be installed on iron wheels, and chains cannot be installed at the inflation holes



Step1

Press and hold the spring button on the metal handle



Step2

While holding down the spring, straighten the handle



Step3

Grasp the tensioner and pull it outward



Step4

Finally disassembly completed

This product is suitable for vehicles with aluminum alloy hub with tire widths ranging from 215-285mm