 


MANUAL INSTRUCTION

Fireplace TV cabinet

TS318BK01A&
TS318WH01A

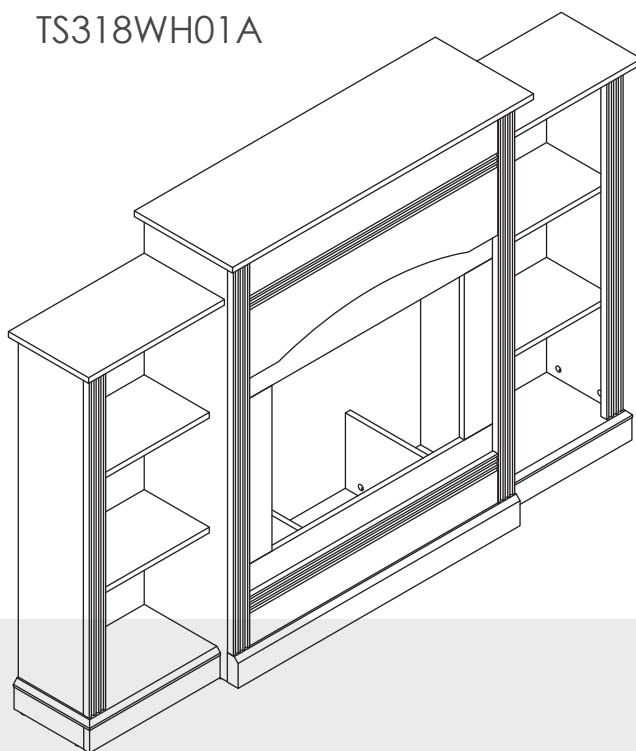

We offer a diverse range of products to
meet the needs of customers.

Indoor Furniture

We are a professional furniture provider with top-notch factories and outstanding designs, Our mission is to provide consumers with new lifestyles. By collecting consumer feedback, we constantly improve our products and create more choices for consumers. If you want to create your space, We are an ideal choice.

Always.



WARNING

- Do not allow children to climb on unit
- Serious or fatal crushing injuries can occur from furniture tip-over. To prevent this furniture from tipping over it must be permanently fixed to the wall.
- Fixing devices for the wall are not included since different wall materials require different types of fixing devices. Use fixing devices suitable for the walls in your home. For advice on suitable fixing systems, contact your local specialized dealer
- This unit contains small parts which can be swallowed by children and pets. Keep children and pets away during assembly. To avoid danger of suffocation, always keep plastic bags away from children and pets.

BEFORE YOU START

 
- Separate and count all parts and hardware.
- Have the following tools: Flat head Screwdriver, #2 Philips HeadScrewdriver.
- If using a power tools, please be ware to slow down and stop when screw is tight. Failure to do so may result in stripping the screw.
- Requires two people for assembly.




CAM LOCK FASTENING SYSTEM

Insert the cam bolt into the hole first, then insert the cam lock and lock it.


1

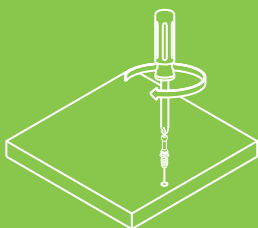


2

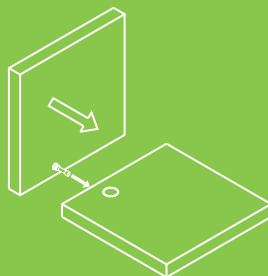 

3

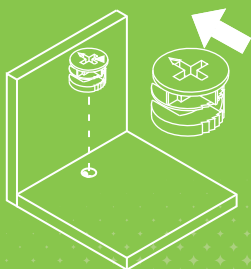 

4

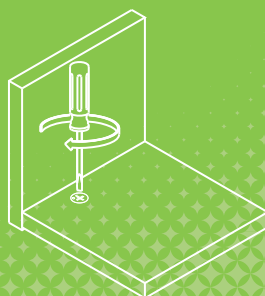 

The opening must point toward
the edge of the board

NOTICE

1. Children are not allowed to operate.
2. Faster installation is possible with power tools.
3. Do not pull the door vigorously to prevent the storage cabinet from tipping over.
4. Please attach the storage cabinet to the wall with an anti-tip device after installation is complete.
5. When using the storage cabinet for the first time, please keep it in a ventilated environment to allow the smell to fully evaporate.
6. When placing the partitions, please make sure the nails are firmly installed to prevent the partitions from falling off.
7. If any parts are missing, broken, damaged or worn, discontinue use of the product until repairs are made and/or factory replacement parts are installed.
8. Do not use this product in a manner inconsistent with the manufacturer's instructions, as this may void the product warranty.
9. If accessories are missing, please contact customer service for communication in time, we provide 7x24 hours customer care.
10. Do not use any attachments or accessories other than the original factory attachments and accessories.
11. Do not alter this equipment. Any alteration will create a safety hazard.

WARNING

The product must be assembled by adult before use. Serious or fatal injury may occur from unexpected assembly or use.

1. During the assembly process, keep all parts away from babies or children.
2. Always securely fix this product to the wall. Make sure the wall area to be drilled is free from hidden electrical wires, water and gas pipes.
3. Use of tip-over restraints may only reduce, but not eliminate the risk of tip-over.
4. Unless specially designed to accommodate, do not set heavy objects on top of this product.
5. Place the heaviest items on the lowest shelf.
6. Never allow children to climb or bang on drawers, doors or shelves.

TOOLS REQUIRED



PHILLIPS
SCREWDRIVER



 
2Persons Assembly



Minimum 60 Minutes For Assembly


PARTS

A

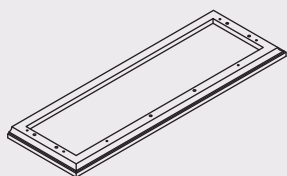


1 PCS

 B

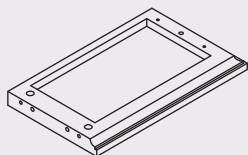


1 PCS

 C

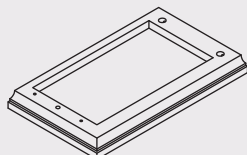


1 PCS

 D

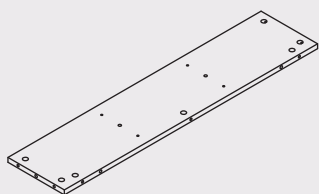


2 PCS

 E

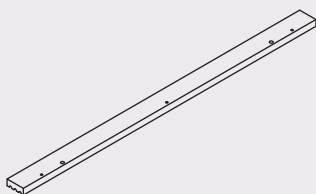


2 PCS

 F

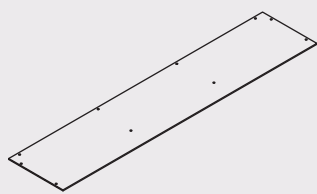


4 PCS

 G

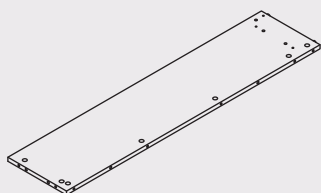


1 PCS

 H

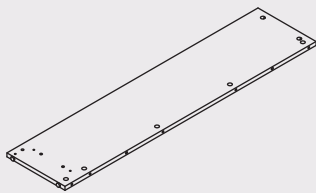










1 PCS

 I






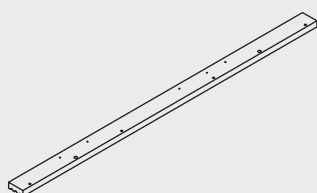


1 PCS

         PARTS

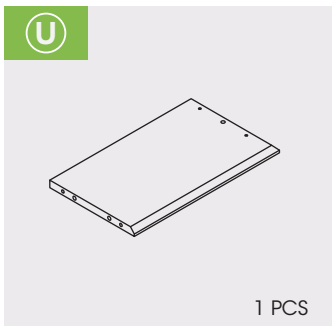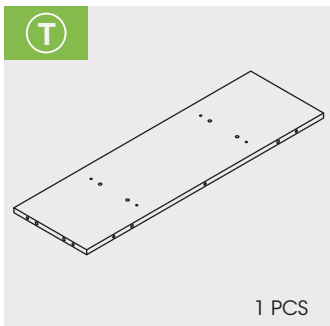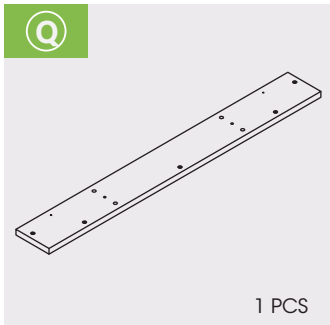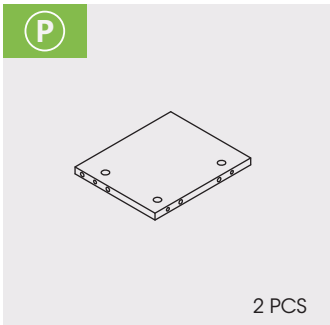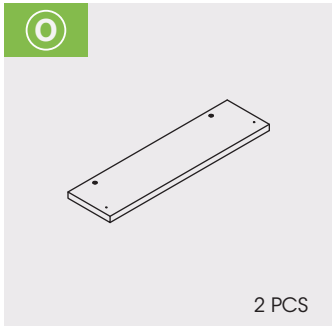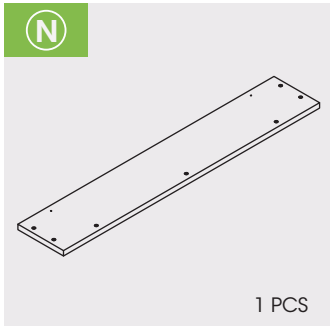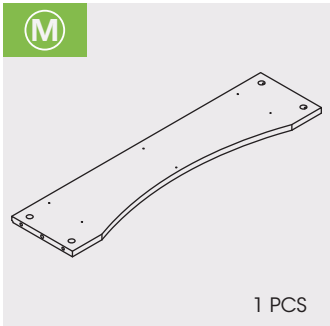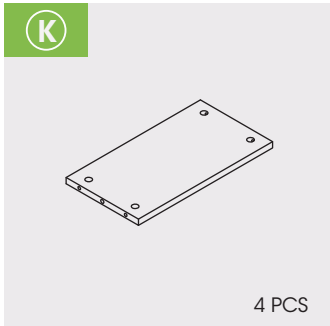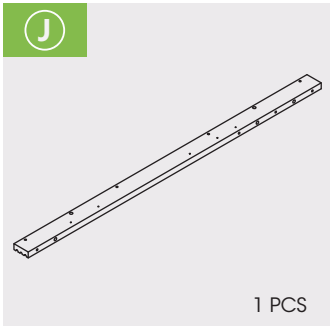

PARTS

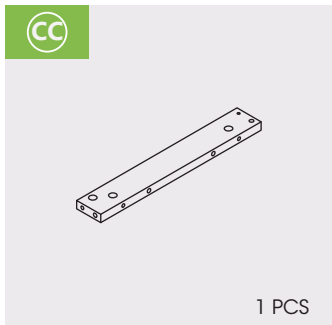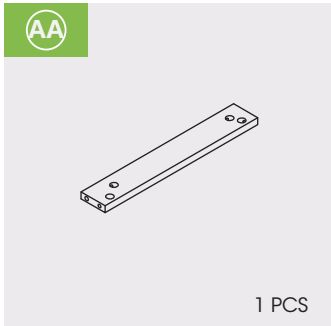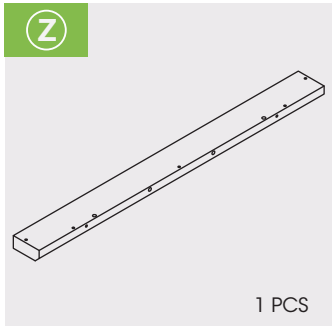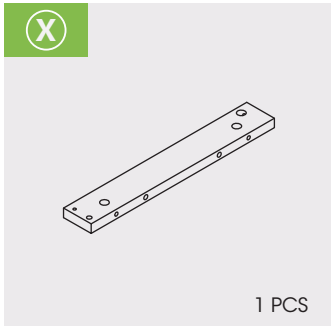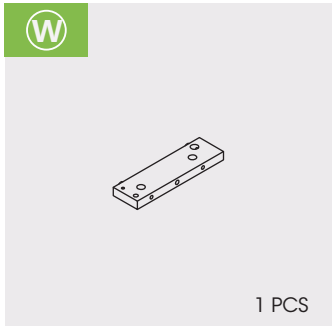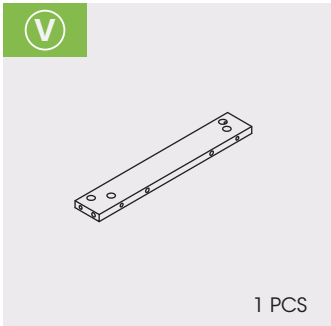      


HARDWARE

1




Ø15x11mm 102 PCS

 2

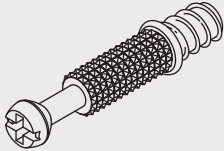


Ø6.5x35mm 102 PCS

 3

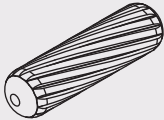


Ø8x30mm 78 PCS

 4




Ø3x14mm 54 PCS

 5




Ø3.5x25mm 16 PCS

 6




50x20x2mm 7 PCS

 7

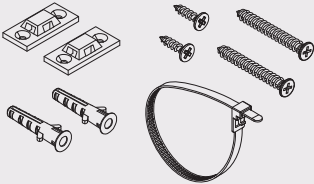


1 SET

 I BOARD IDENTIFICATION

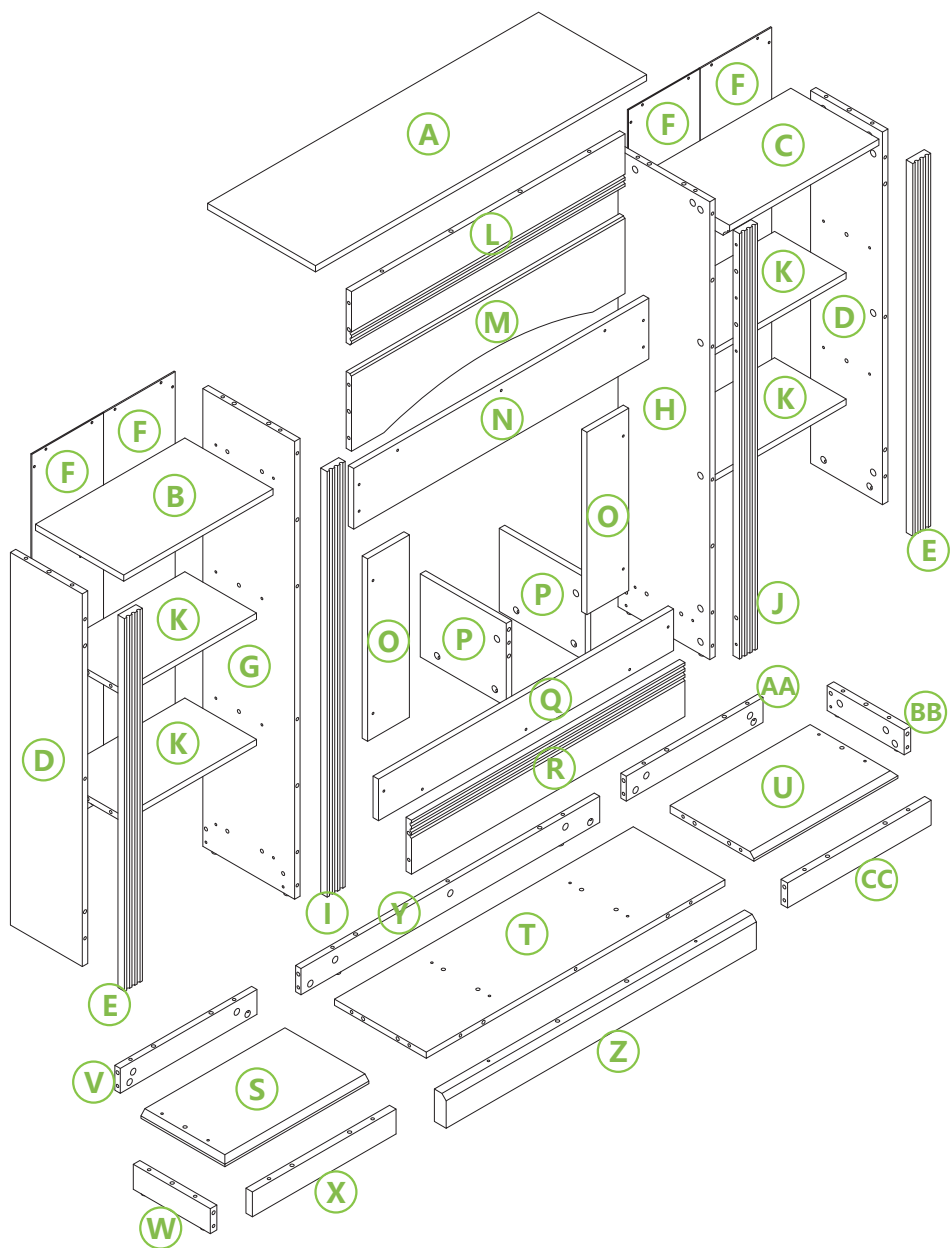


PRODUCT ASSEMBLY

 1

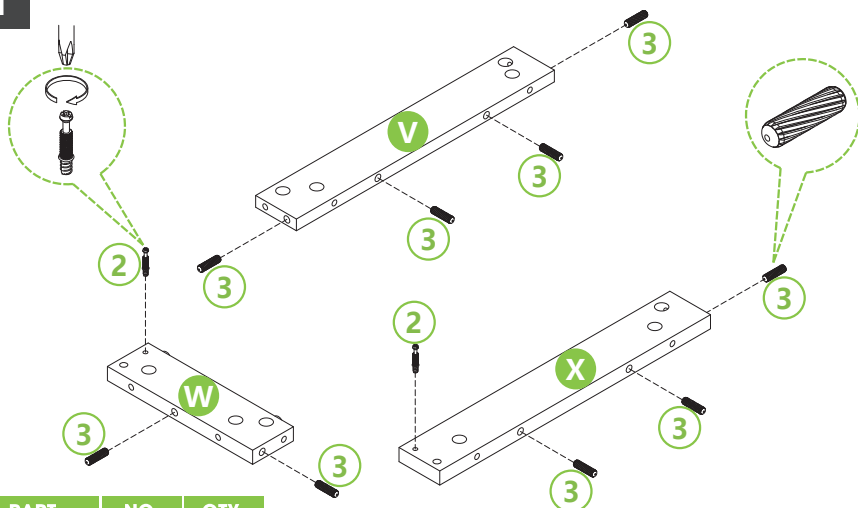

PART	NO.	QTY.
	②	2
	③	9

 
2

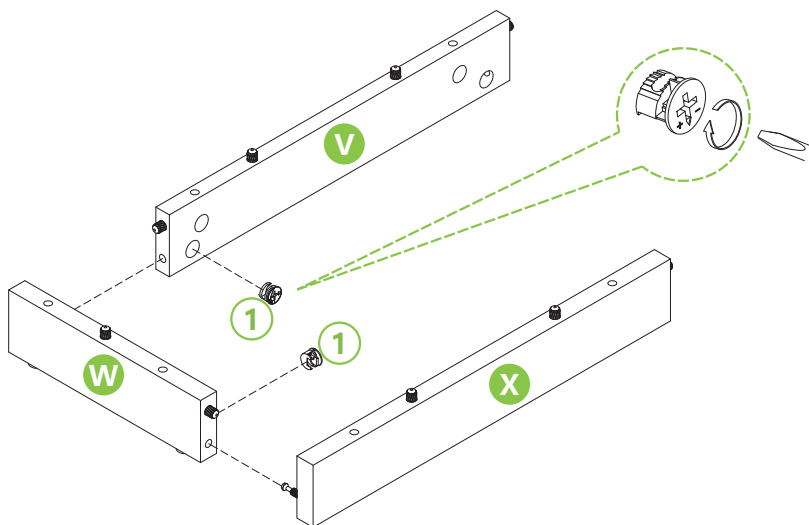


PART	NO.	QTY.
	①	2

PRODUCT ASSEMBLY

 3

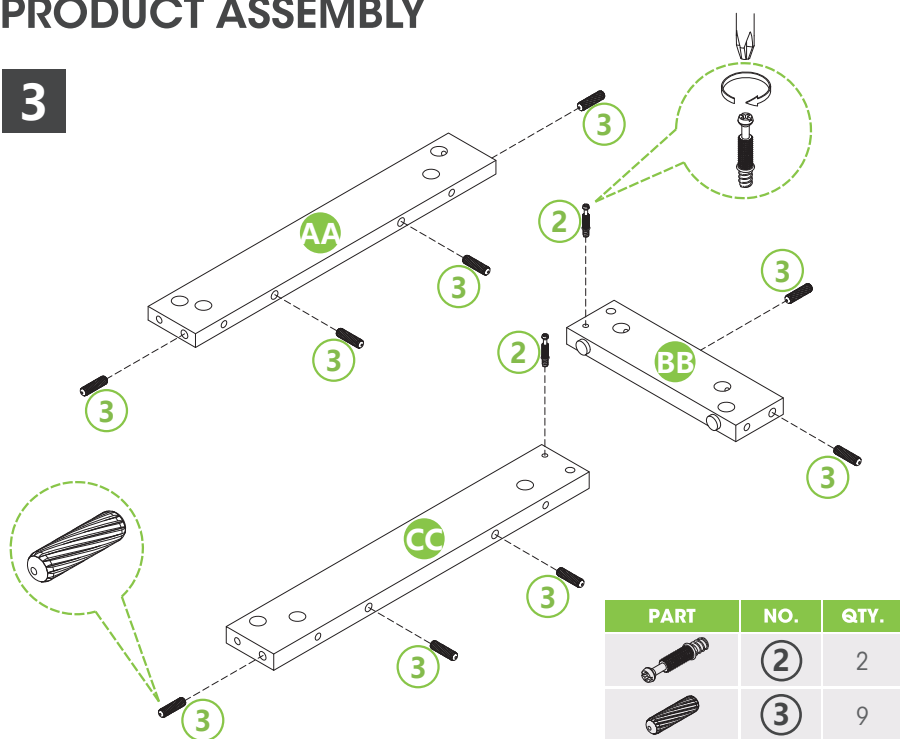


4

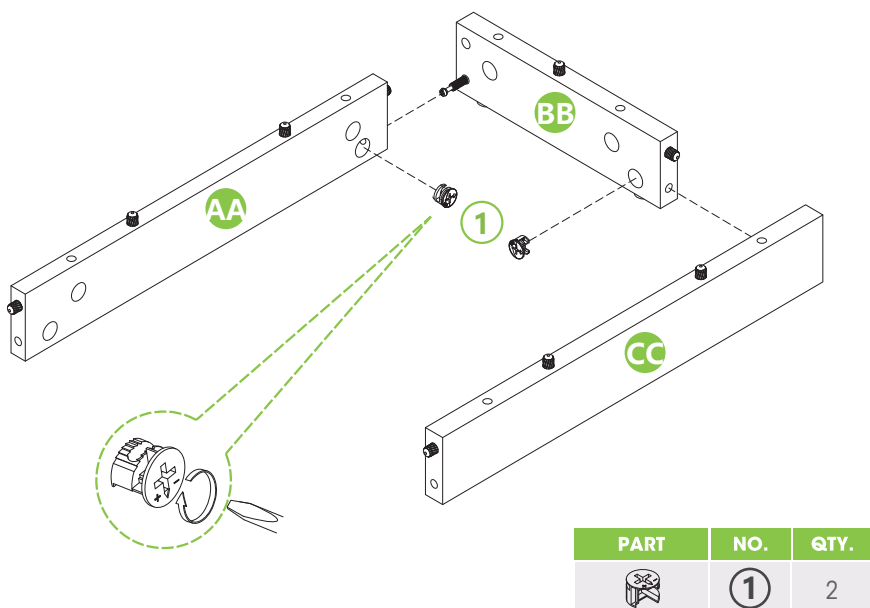 


PRODUCT ASSEMBLY

 5

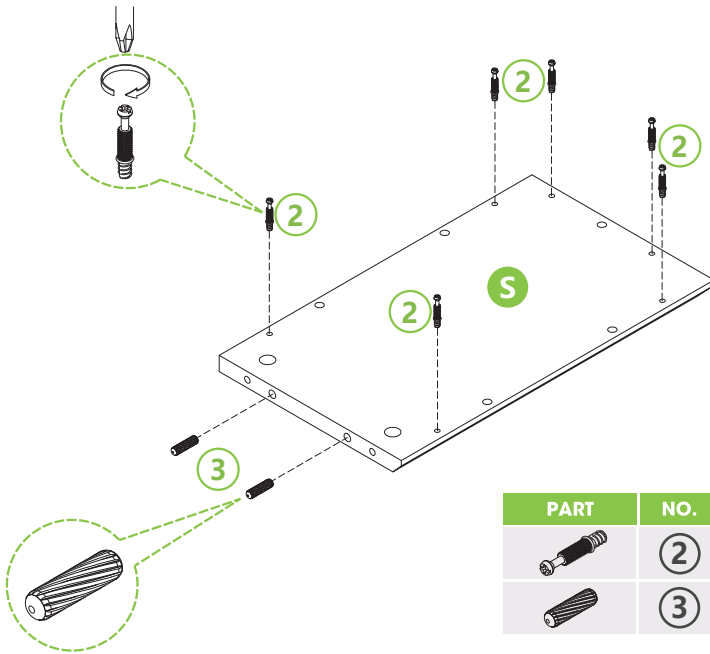

PART	NO.	QTY.
	2	6
	3	2

 
6

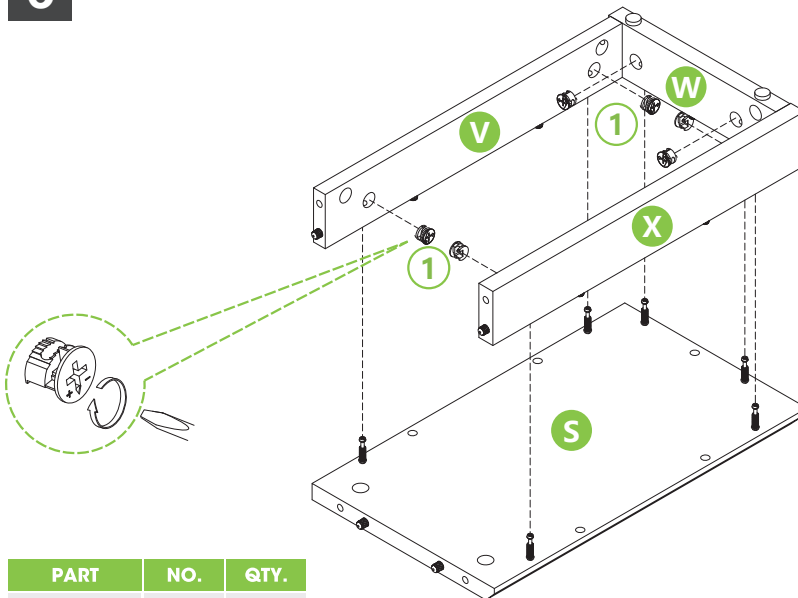

PART	NO.	QTY.
	1	6


PRODUCT ASSEMBLY

 7

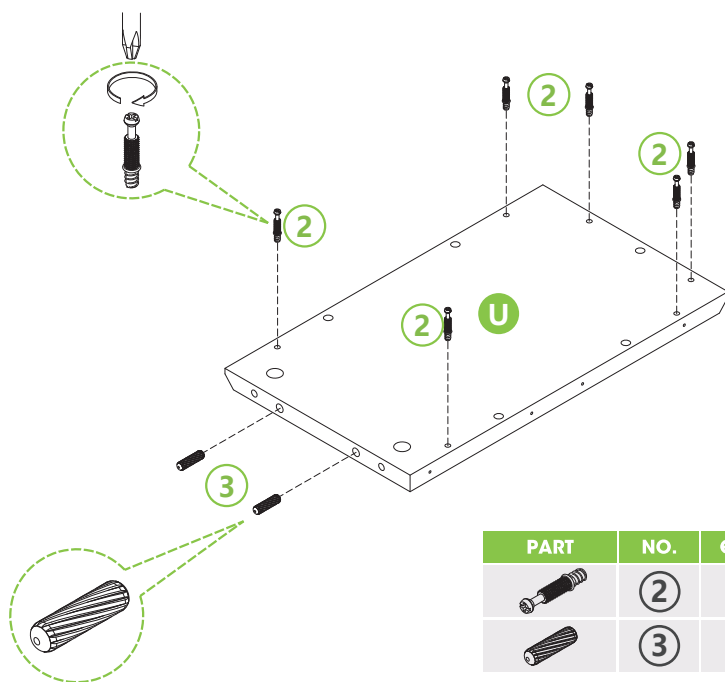

PART	NO.	QTY.
	②	6
	③	2

 
8

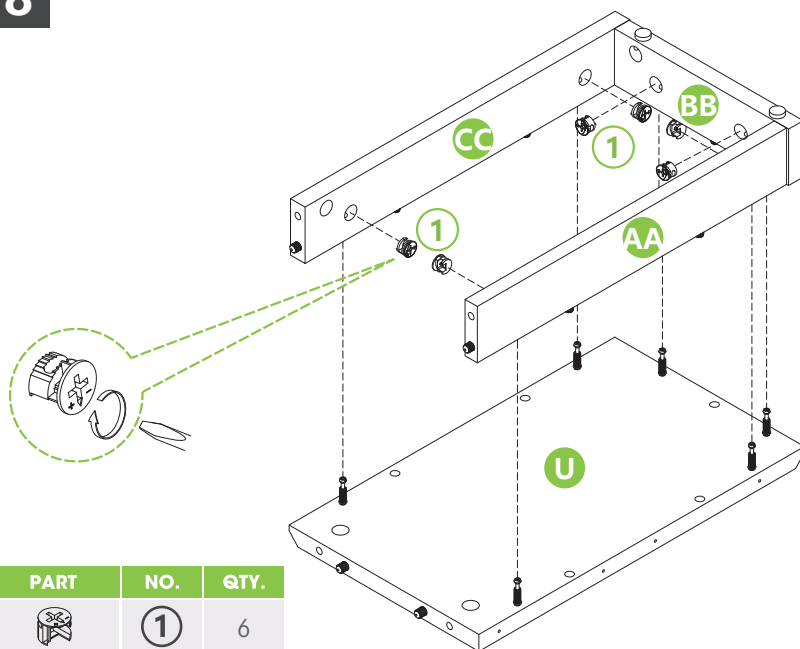

PART	NO.	QTY.
	①	6


PRODUCT ASSEMBLY

 9

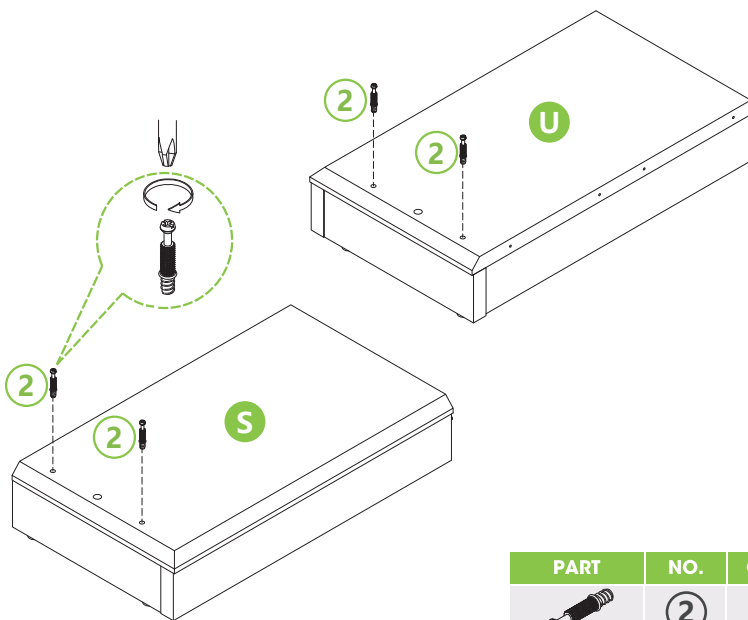

PART	NO.	QTY.
	(2)	4

 
10

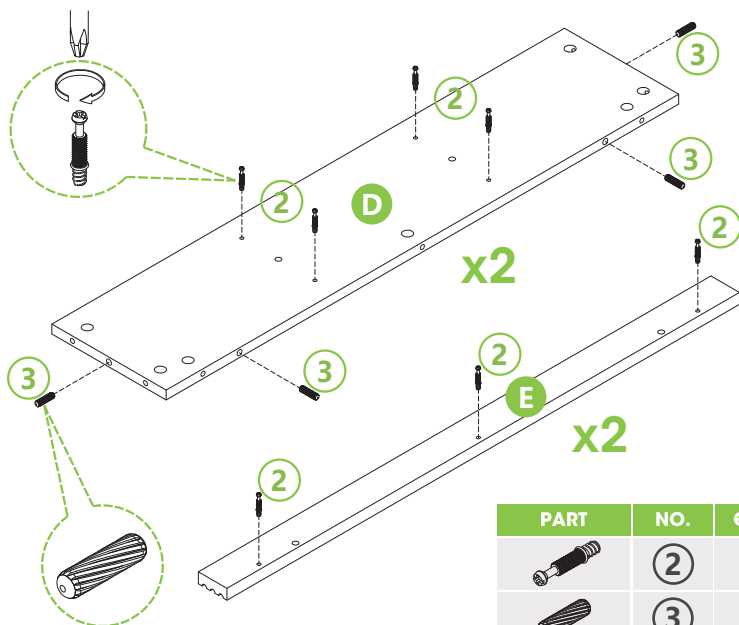

PART	NO.	QTY.
	(2)	14
	(3)	8


PRODUCT ASSEMBLY

 11

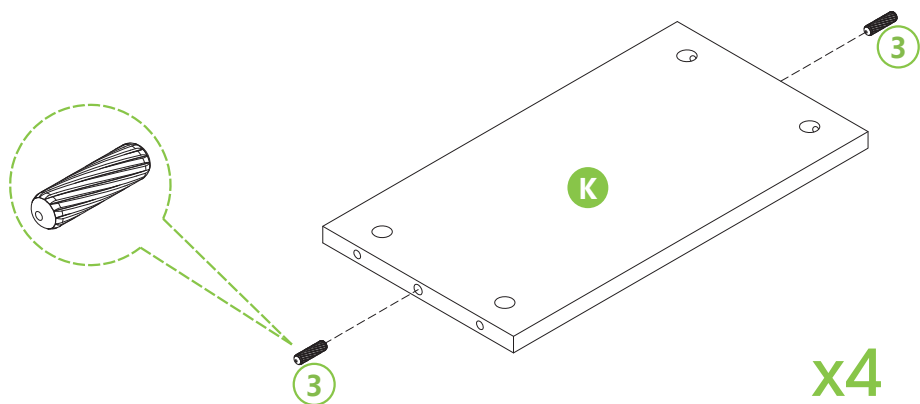

PART	NO.	QTY.
	3	8

 
12

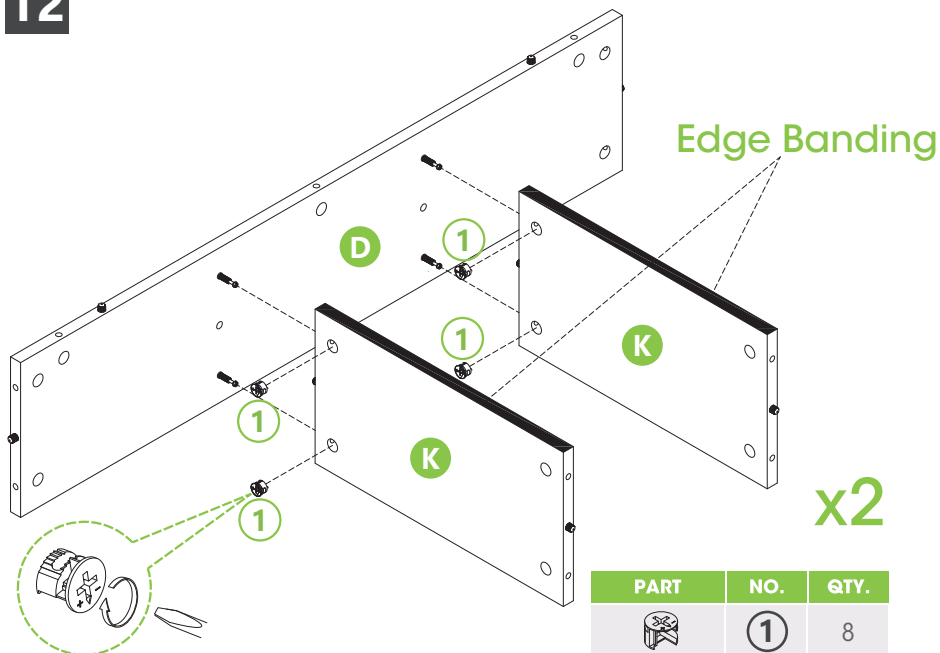


PART	NO.	QTY.
	1	8

PRODUCT ASSEMBLY

 13

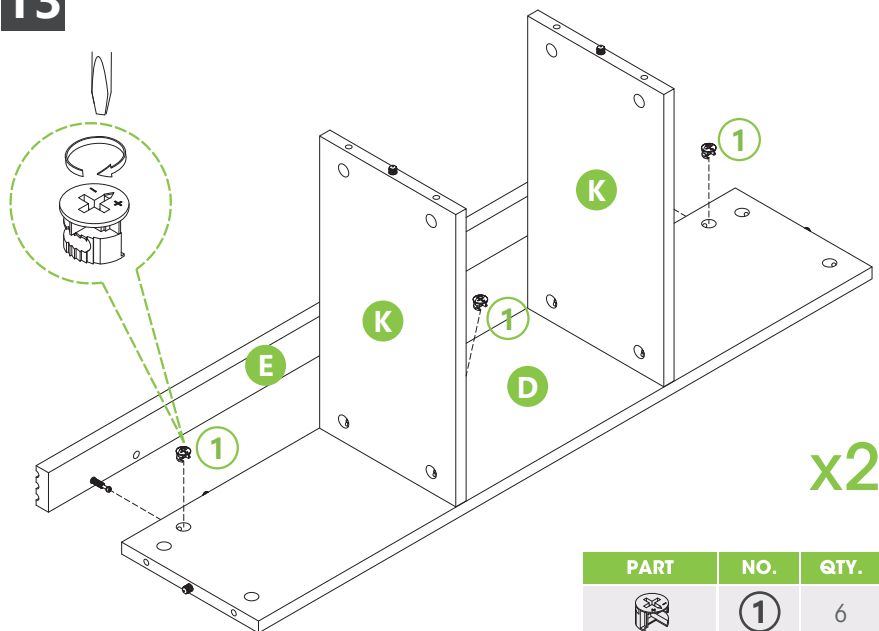


14

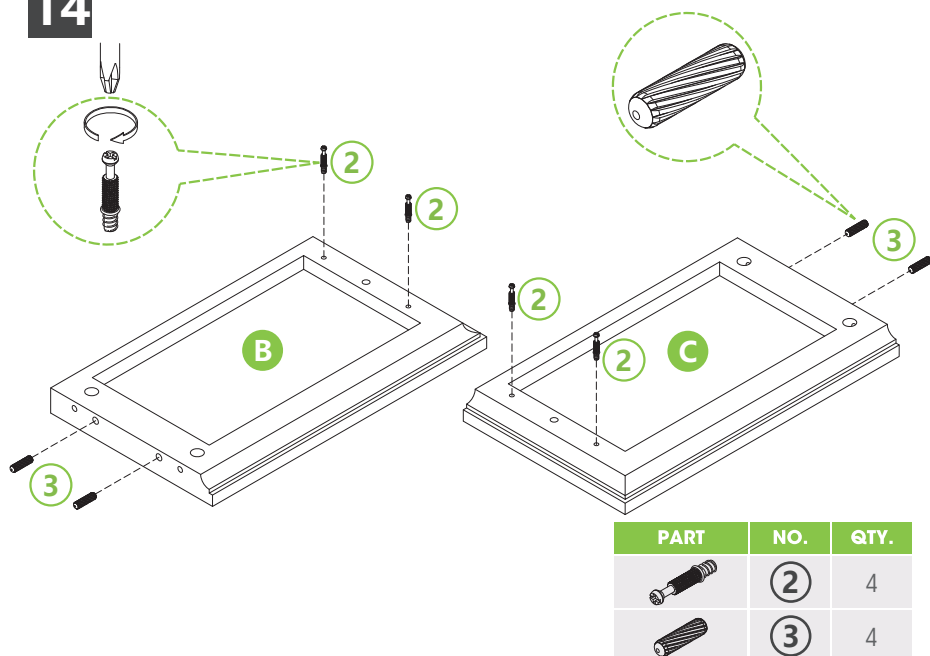 


PRODUCT ASSEMBLY

 15

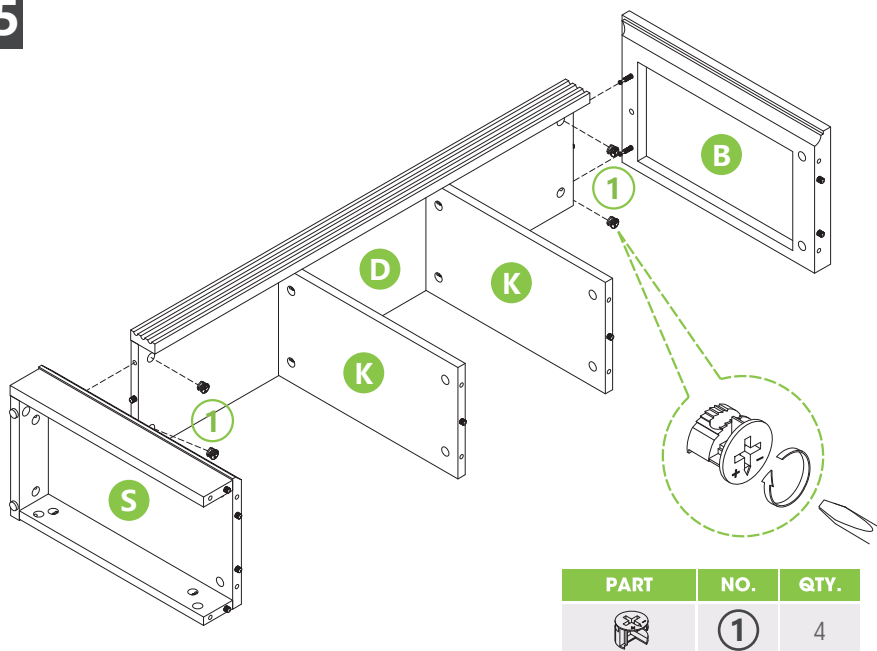


16

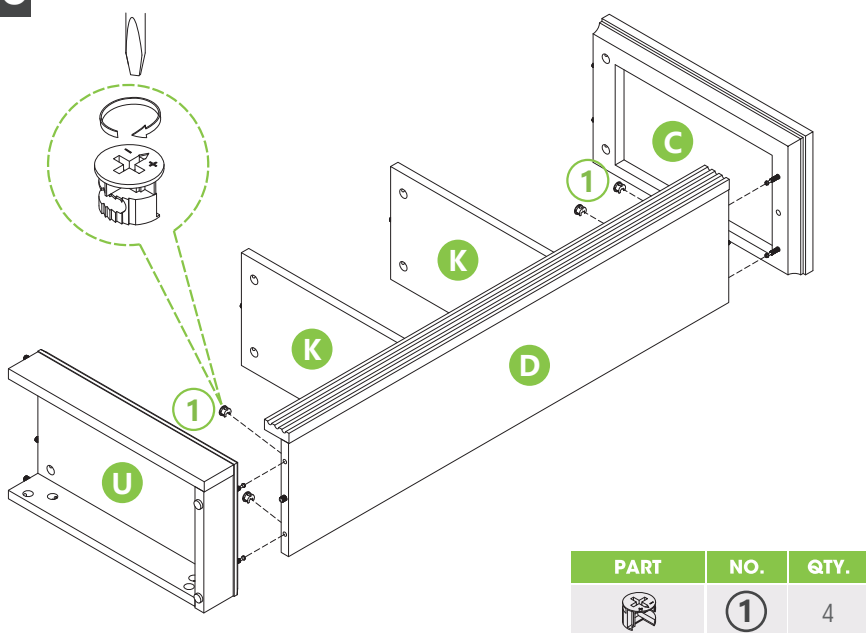 

PRODUCT ASSEMBLY

 
17

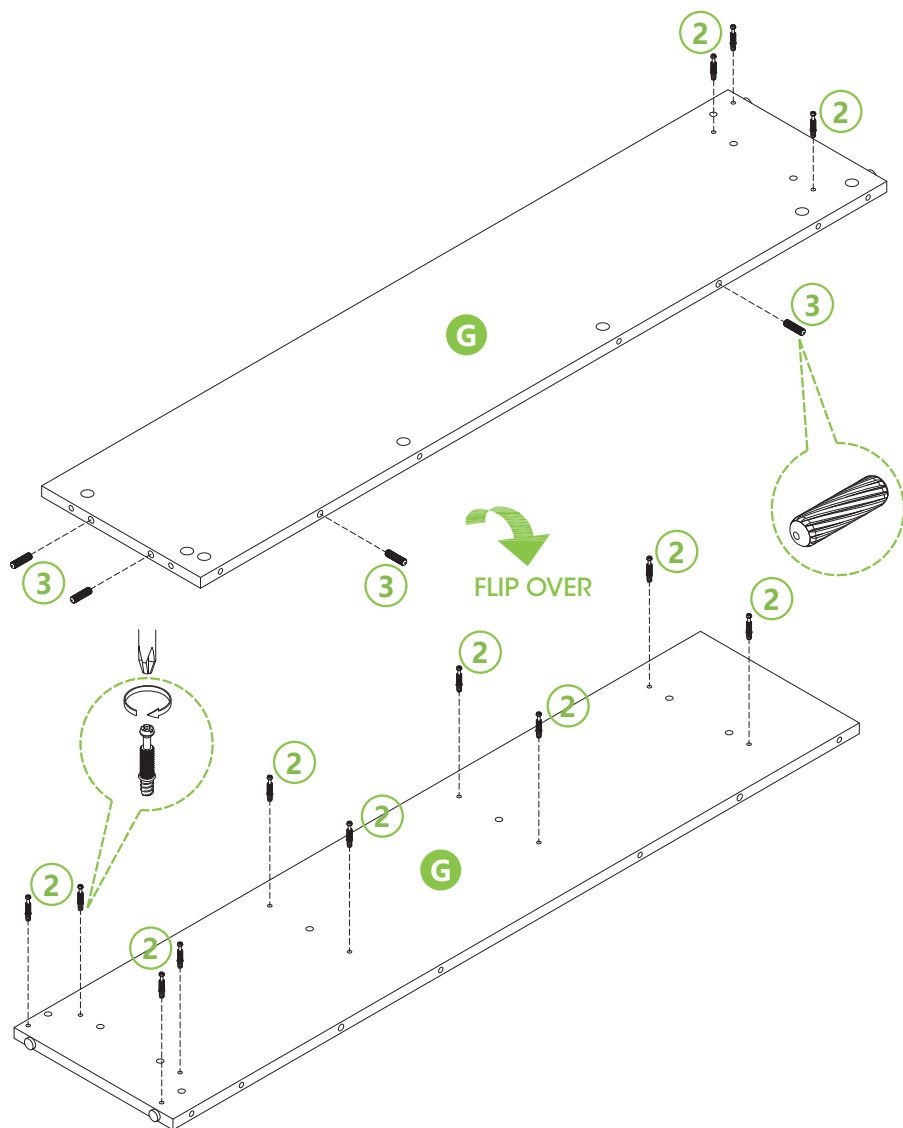

PART	NO.	QTY.
	(2)	13
	(3)	4

PRODUCT ASSEMBLY

 
18

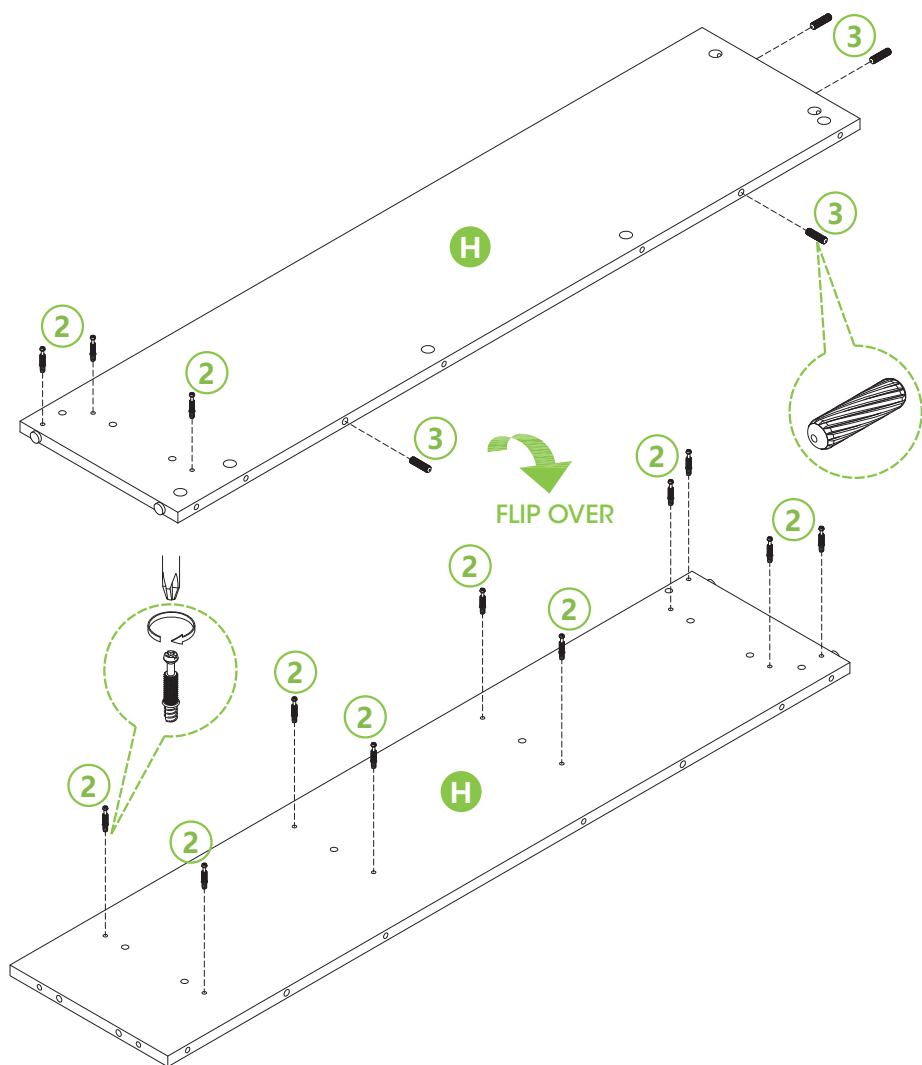

PART	NO.	QTY.
	(2)	13
	(3)	4


PRODUCT ASSEMBLY

 19

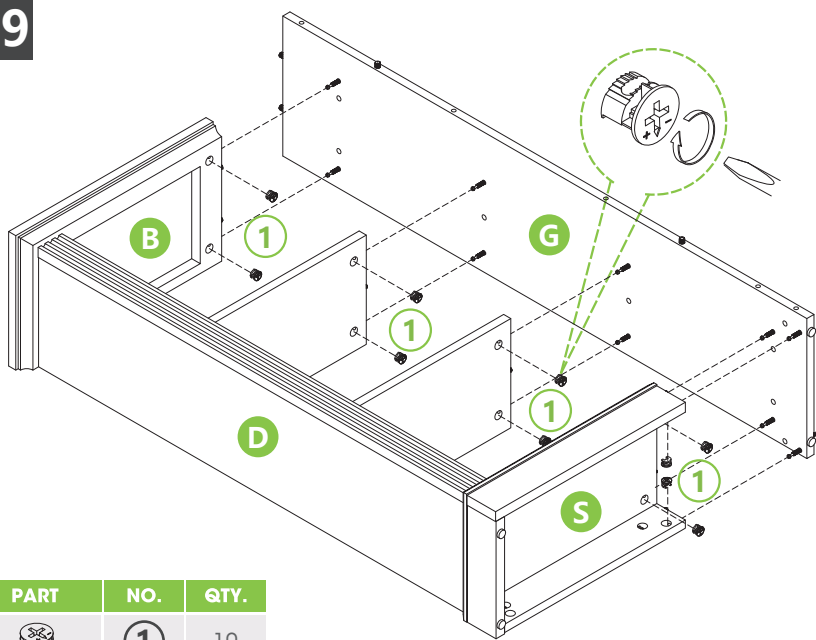

PART	NO.	QTY.
	1	10

 
20

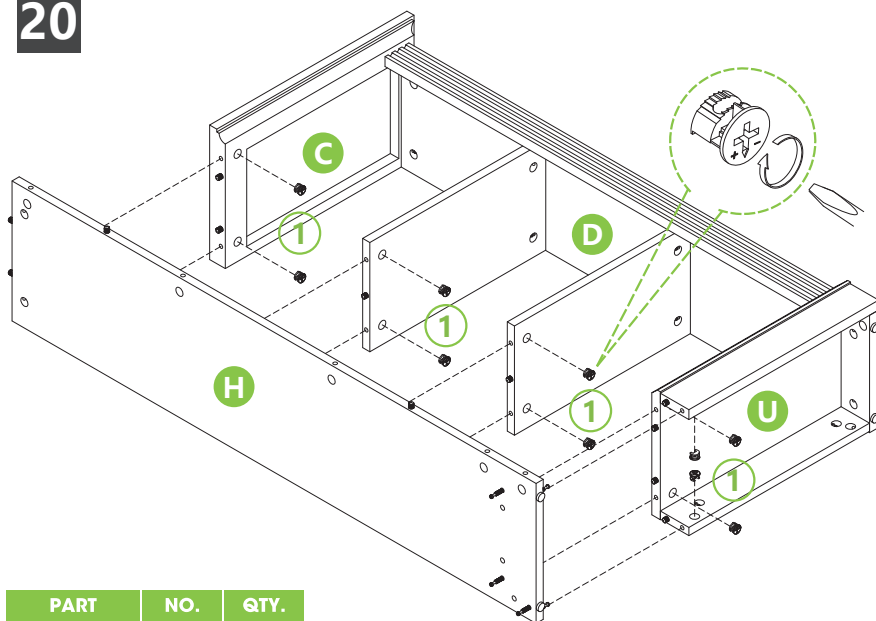

PART	NO.	QTY.
	1	10

PRODUCT ASSEMBLY

 
21

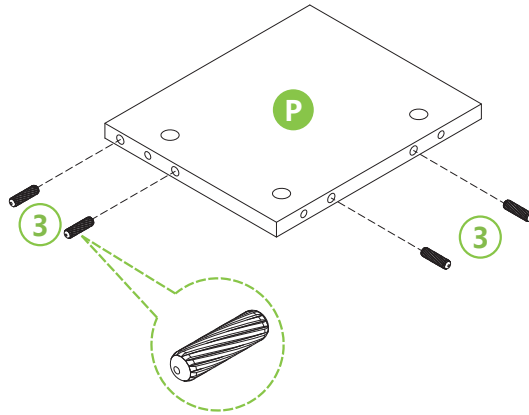

x2

PART	NO.	QTY.
	(3)	8

 
22

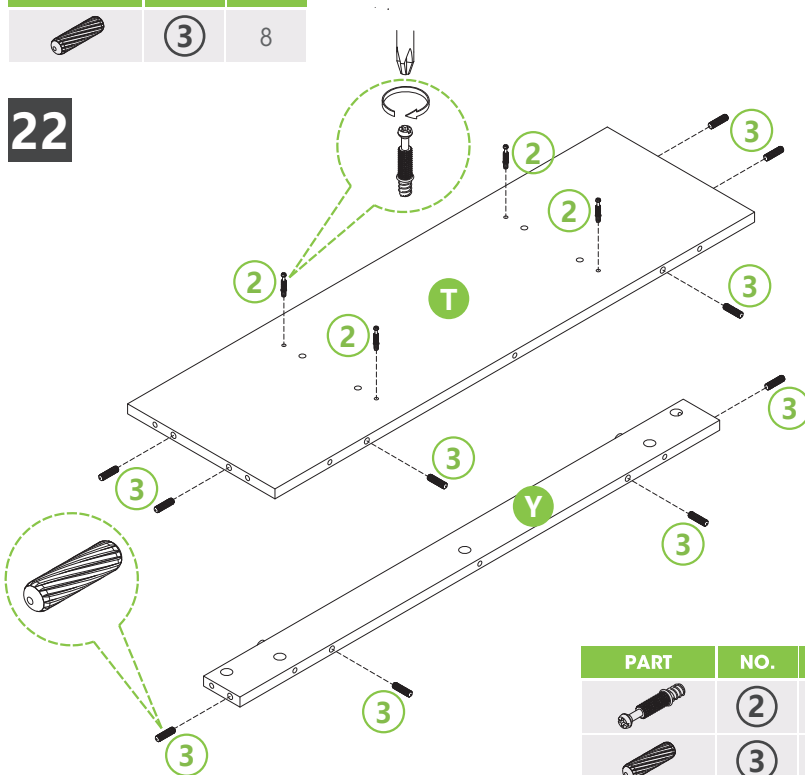

PART	NO.	QTY.
	(2)	4
	(3)	10

PRODUCT ASSEMBLY

 
23

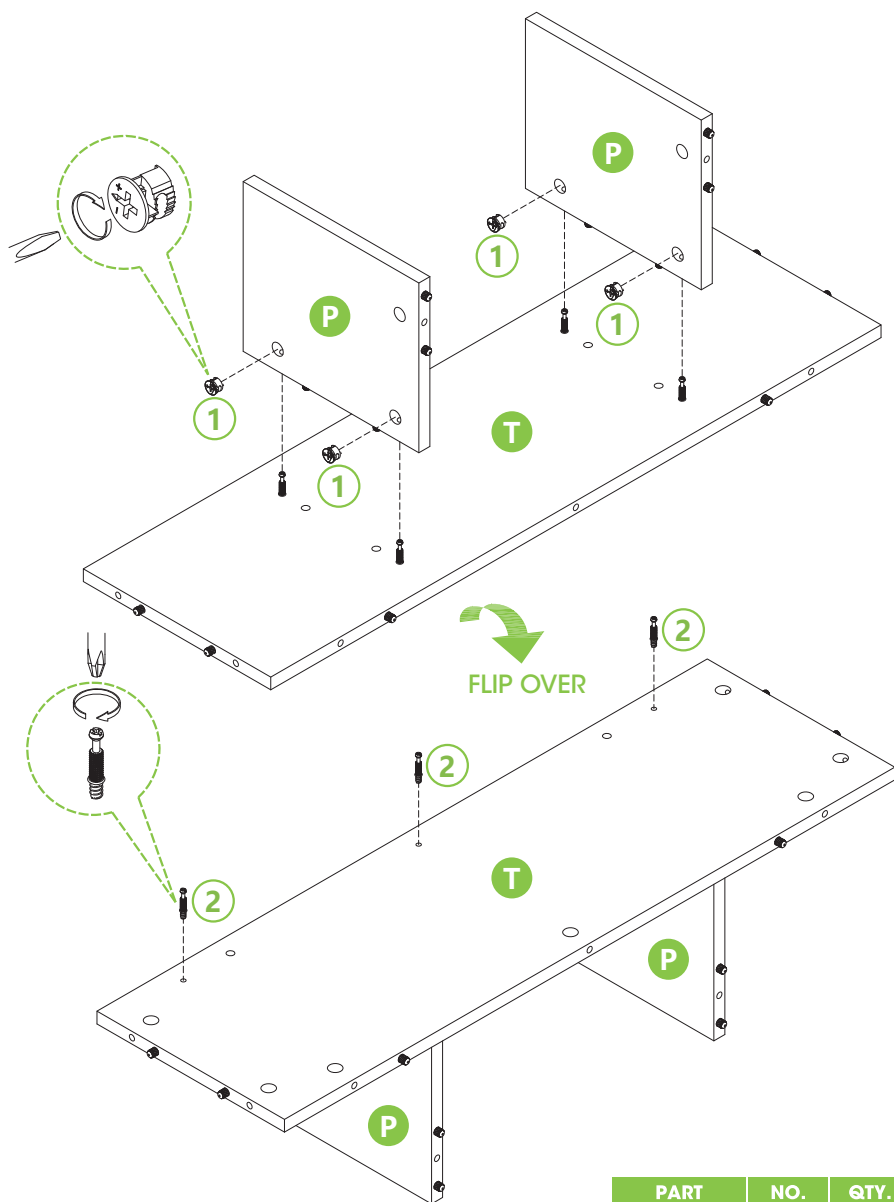

PART	NO.	QTY.
	1	4
	2	3

PRODUCT ASSEMBLY

 
24

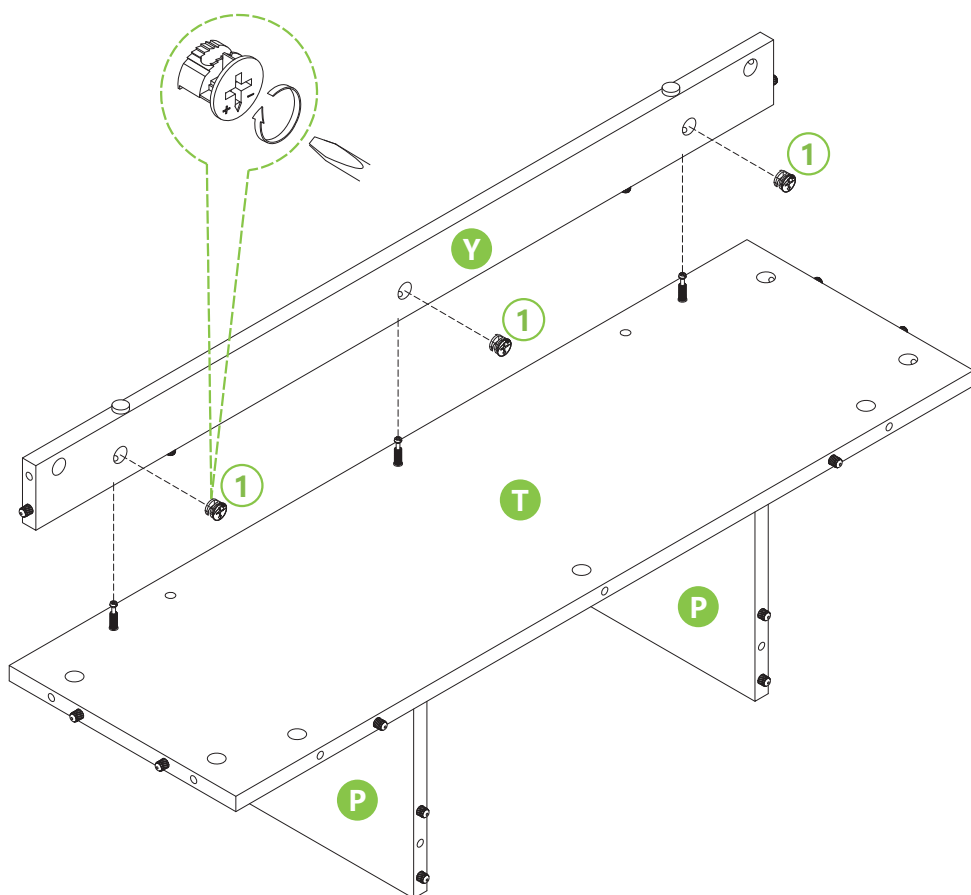

PART	NO.	QTY.
	1	3

PRODUCT ASSEMBLY

 
25

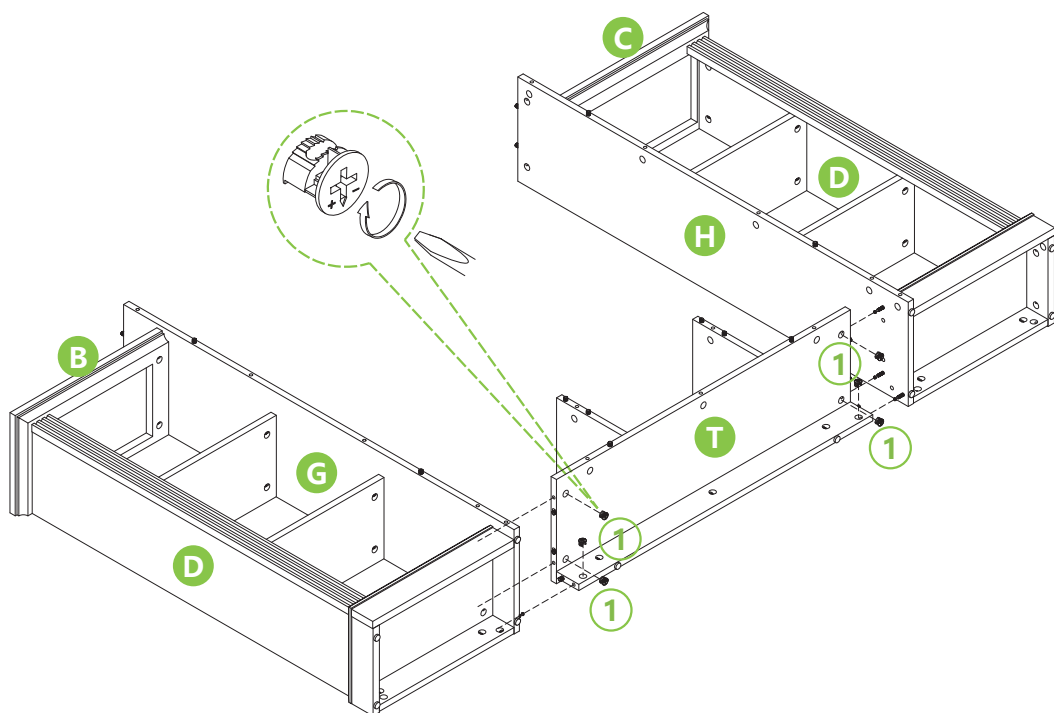

PART	NO.	QTY.
	1	6

PRODUCT ASSEMBLY

 
26

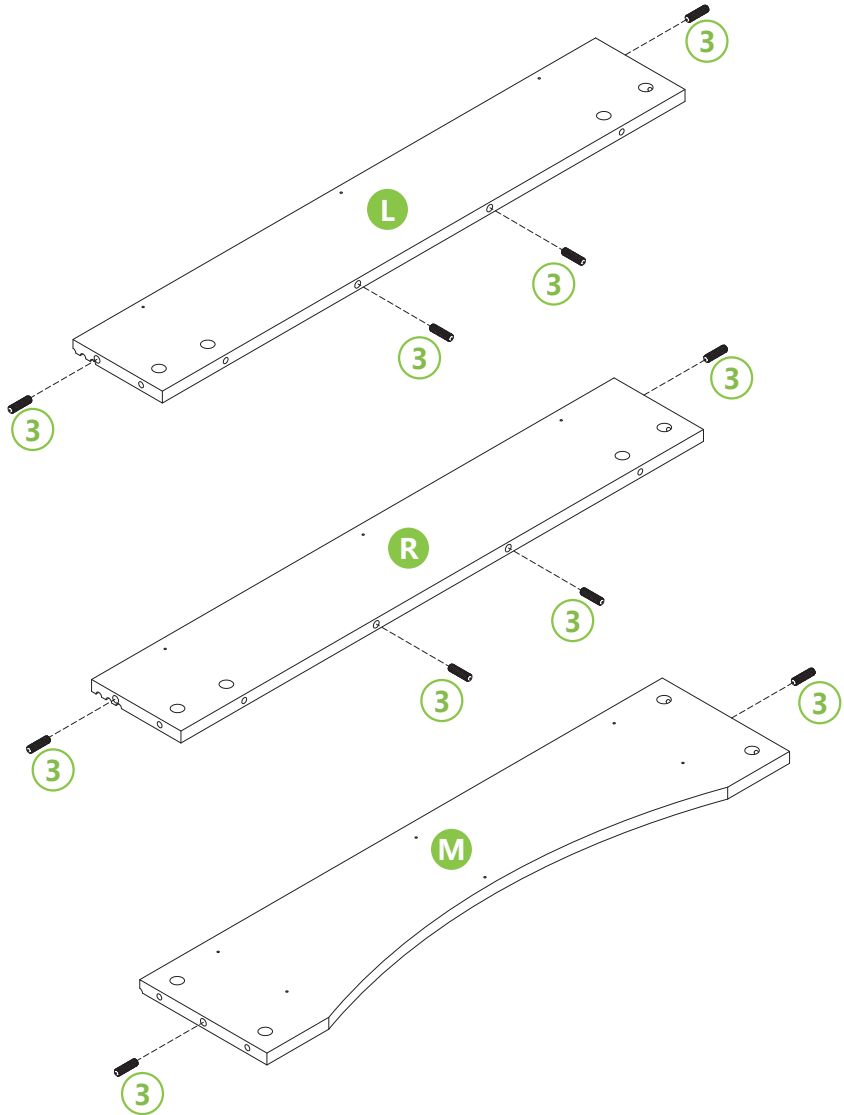

PART	NO.	QTY.
	3	10

PRODUCT ASSEMBLY

 
27

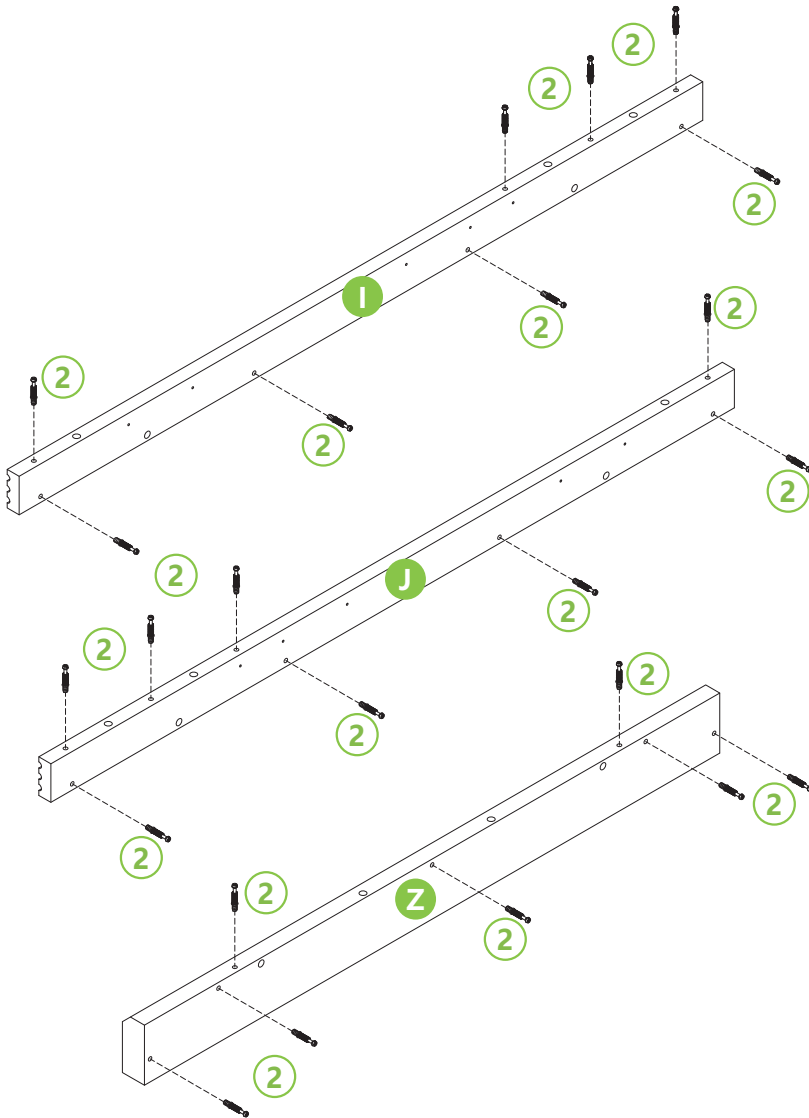

PART	NO.	QTY.
	2	23


PRODUCT ASSEMBLY

 28

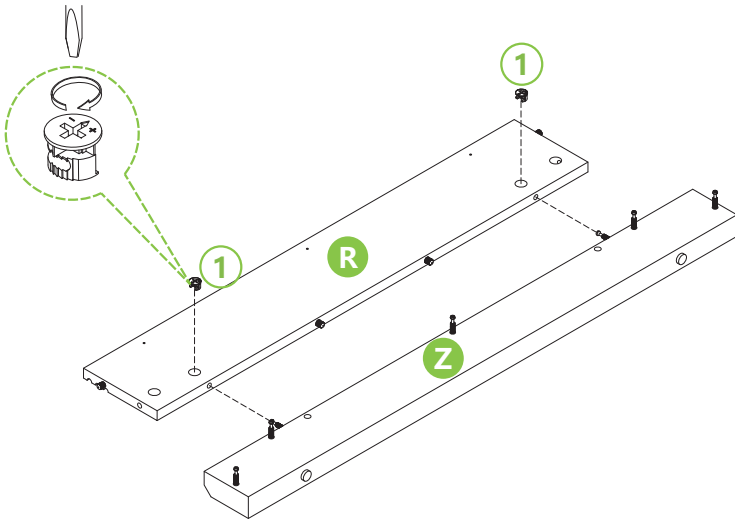

PART	NO.	QTY.
	1	2

 
29

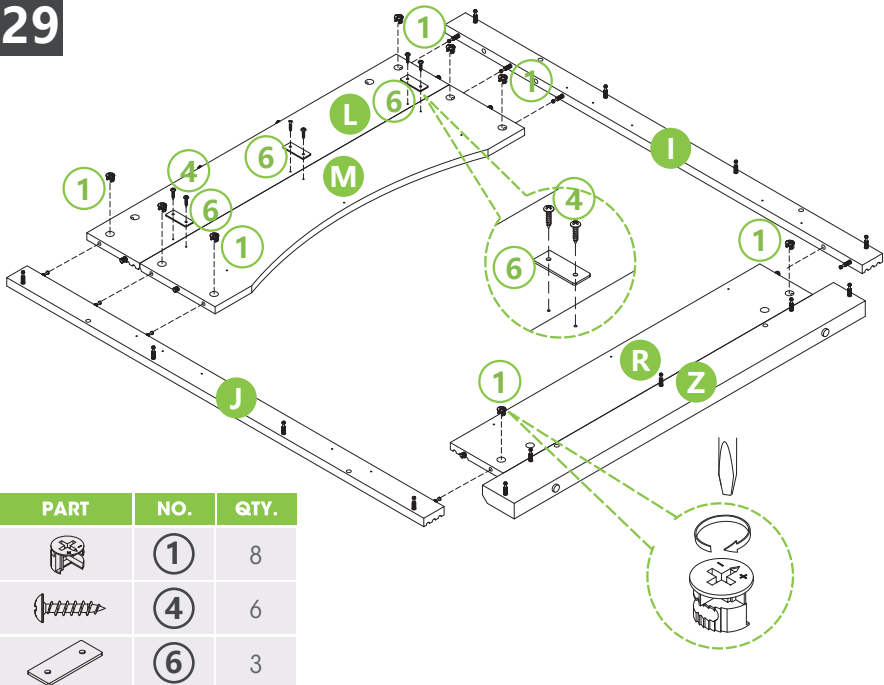

PART	NO.	QTY.
	1	8
	4	6
	6	3


PRODUCT ASSEMBLY

 30

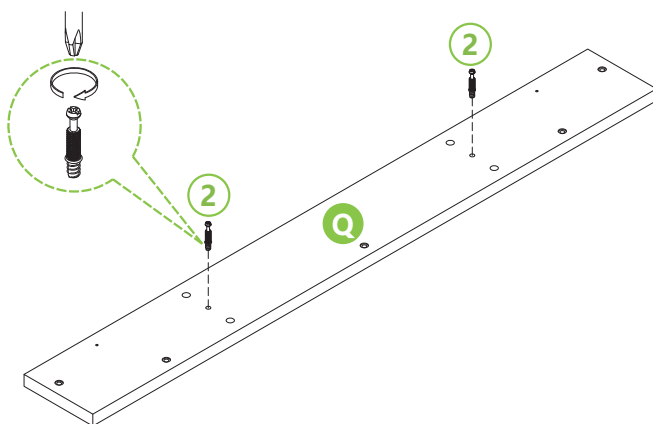

PART	NO.	QTY.
	(2)	2

 
31

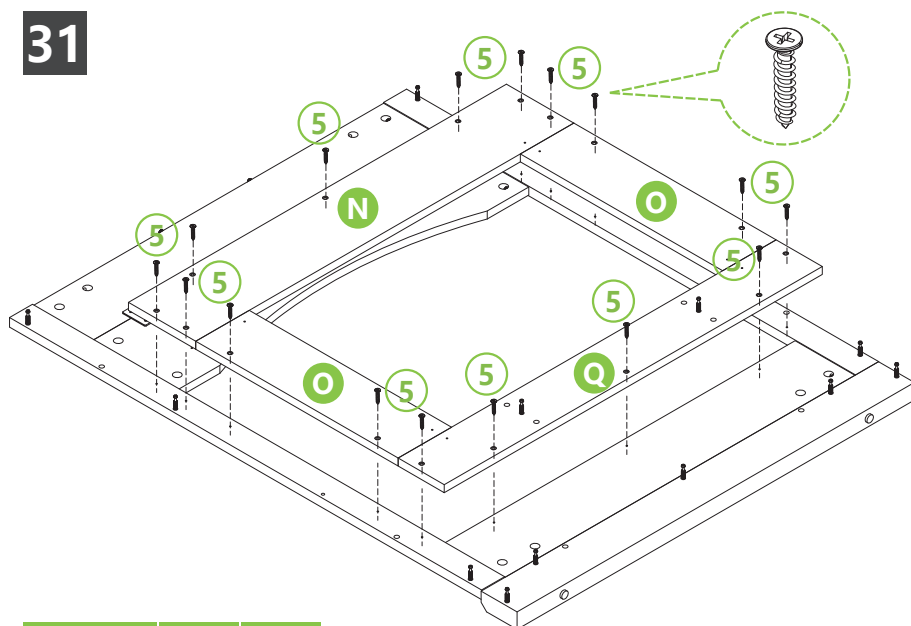

PART	NO.	QTY.
	(5)	16

PRODUCT ASSEMBLY

 
32

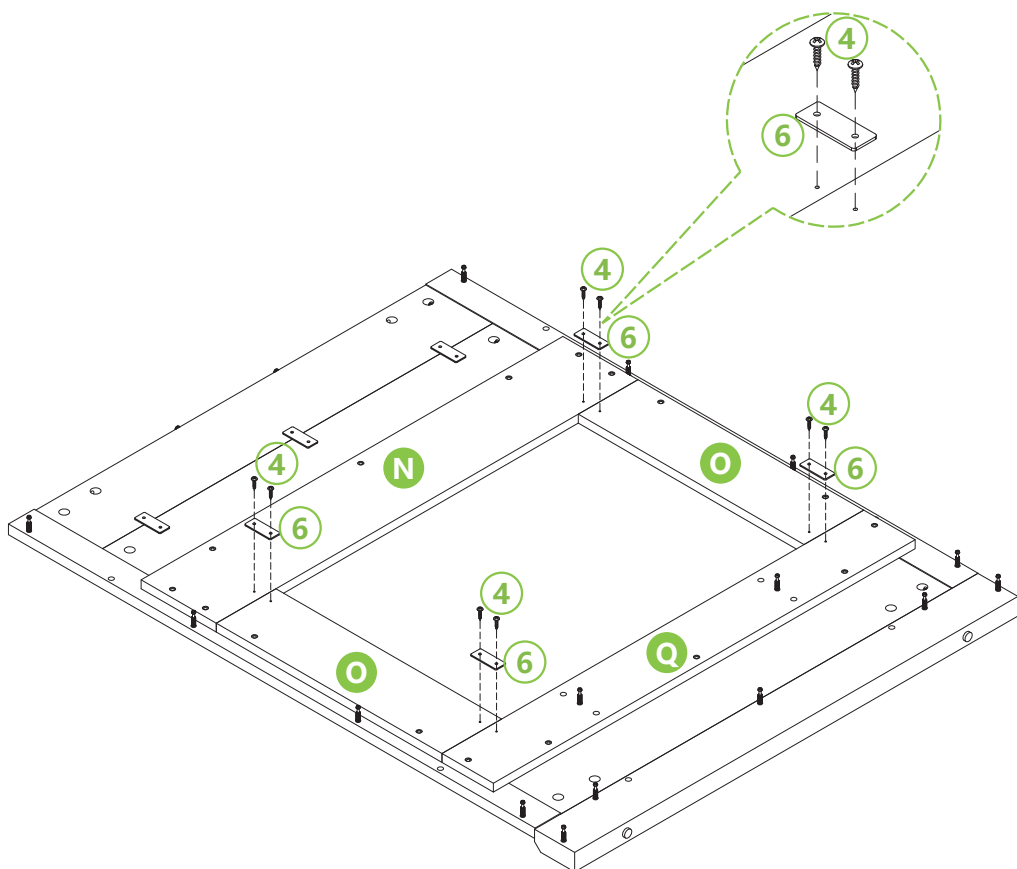


PART	NO.	QTY.
	(4)	8
	(6)	4

PRODUCT ASSEMBLY

 33

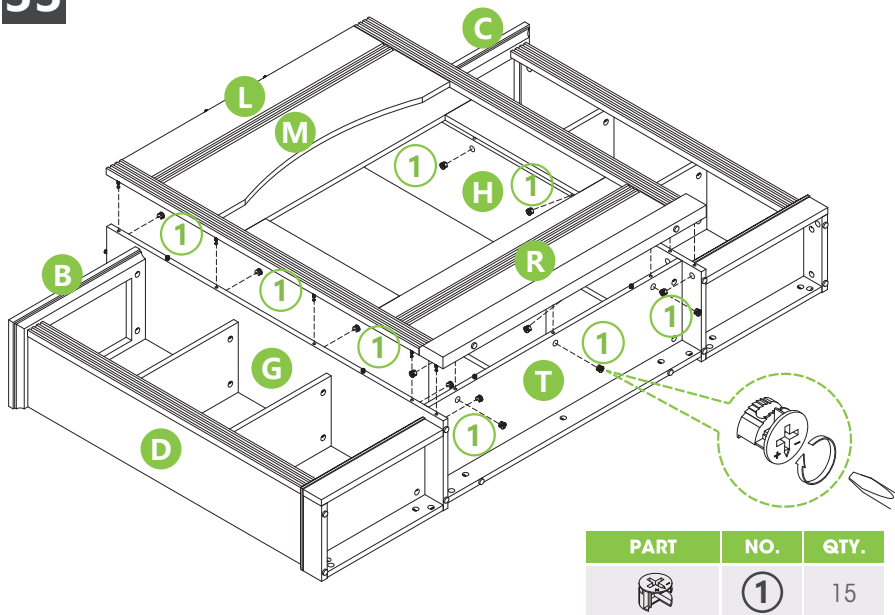


34

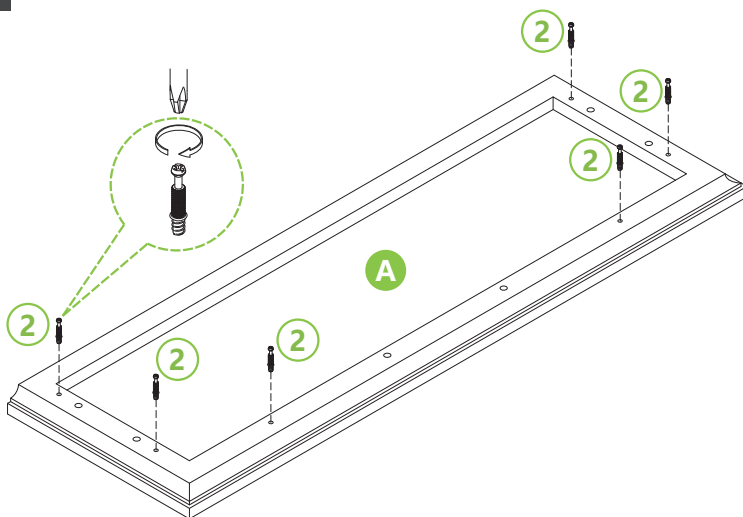 

PART	NO.	QTY.
	②	6

PRODUCT ASSEMBLY

 
35

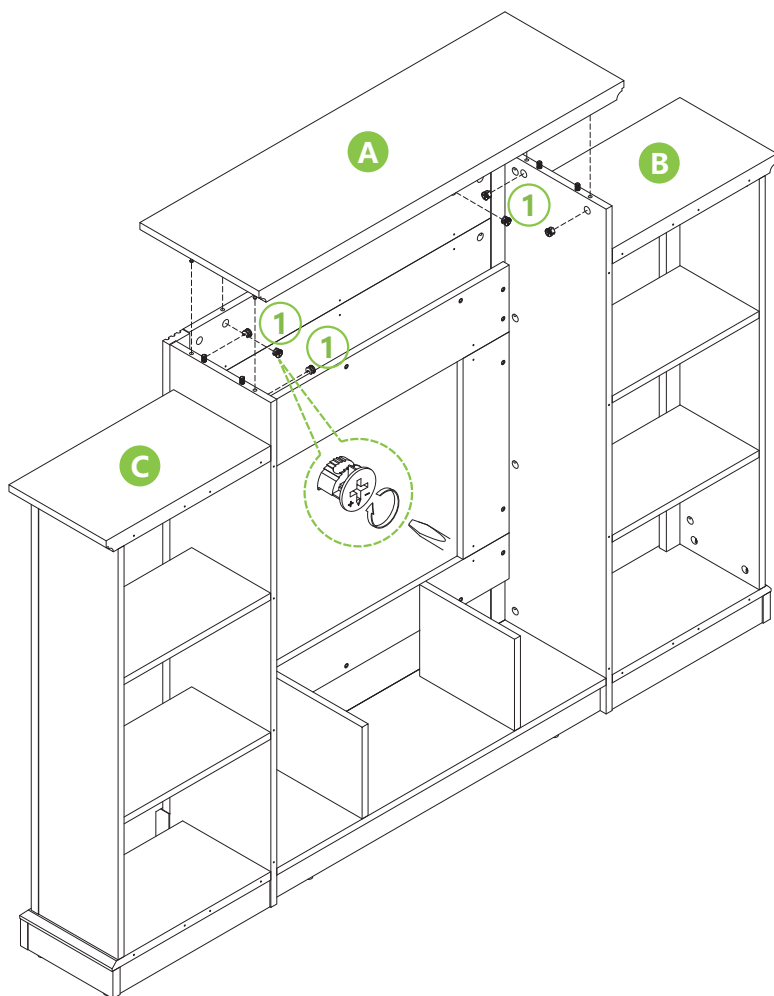

PART	NO.	QTY.
	1	6

PRODUCT ASSEMBLY

 
36

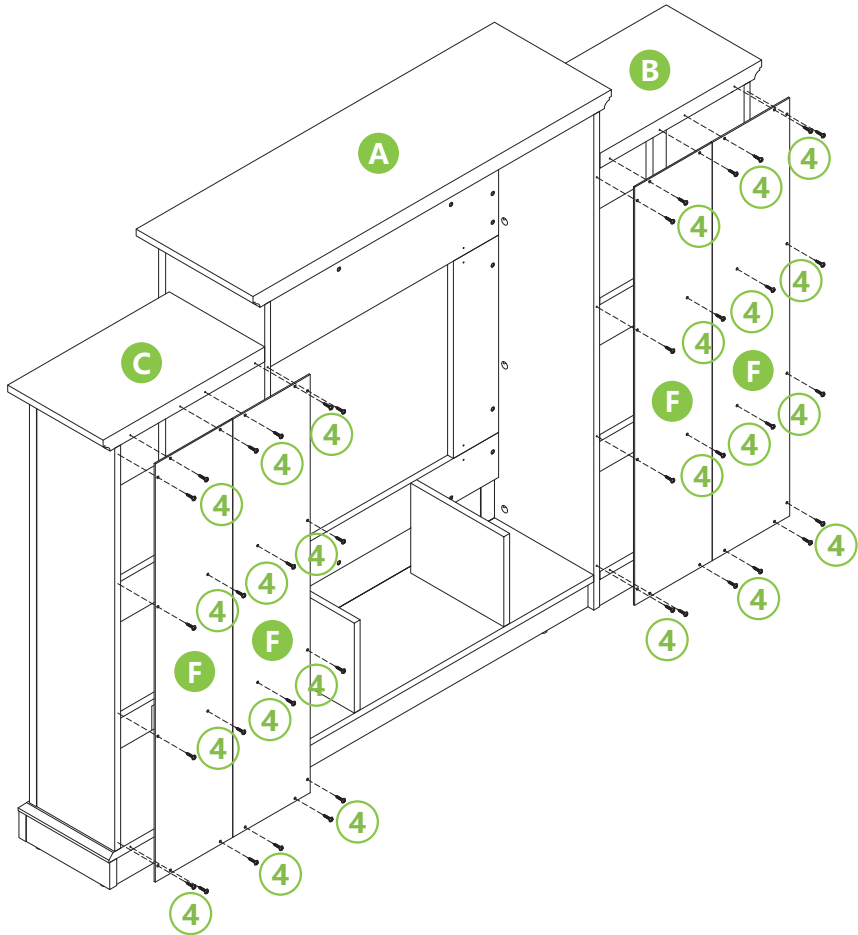

PART	NO.	QTY.
	4	40

HELP CENTER

 
Question about your product? We're here to help. Visit us at:



Chat Support



 Product Inquiry



Orders FAQ



Product Assembly



Returns & Refunds

We Stand Behind the Quality of Their Furniture

If you have any issues with your item please let us know! We will always do our best to come up with a solution that you will be happy with.

Please get in touch with our customer service team before returning the product.

And pls do not throw the original box(es) if you have not finished assembling or confirmed no quality issues.

Length of return period:

Items can be returned within 30 days of purchase.

In the meanwhile, everything you purchased from us comes with a one-year warranty.

Who is responsible for the return shipping fee:

We will cover the return shipping fees if:

1. Your item has a manufacturing defect in its materials or workmanship. For example, torn wicker or misaligned screw holes. We will send you a prepaid shipping label after photos are sent.
2. Your item has been damaged in transit. For example, glass is broken or wicker is damaged. We will send you a prepaid shipping label after photos are sent.
3. You receive the wrong box(es) due to a warehouse error. We will send you a prepaid shipping label after photos are sent of the wrong SKU numbers on the outer box(es).
4. One or more boxes are lost in transit. We will send you a prepaid shipping label if you no longer want the item.

* However, we still hope to work with you for a better solution instead of a return. Please don't hesitate to contact our customer service team.

Customer will cover the return shipping fees if:

1. You don't like the product(s) after receiving the box(es).
2. You no longer need the product(s) but you have received the box(es).
3. You buy the product(s) by mistake but you have received the box(es).
4. Order/Shipment cancellation failed and you have received the box(es).

Return Request

In order to get a full refund as described in this return policy, all items must be: (1) In a brand new/unused condition, please provide photos before and after packaging. (2) When returning, all accessories and parts are firmly packed in all original packaging.

If your return does not meet the requirements, you may not get a full refund.

When will I be refunded?

The refund is released once the goods have been returned to our warehouse.

What if the product is damaged/defective outside of the valid return period?

We want you to be a happy customer. Please reach out to us by email and we will come up with a solution to make sure you are satisfied.