






- 02 -

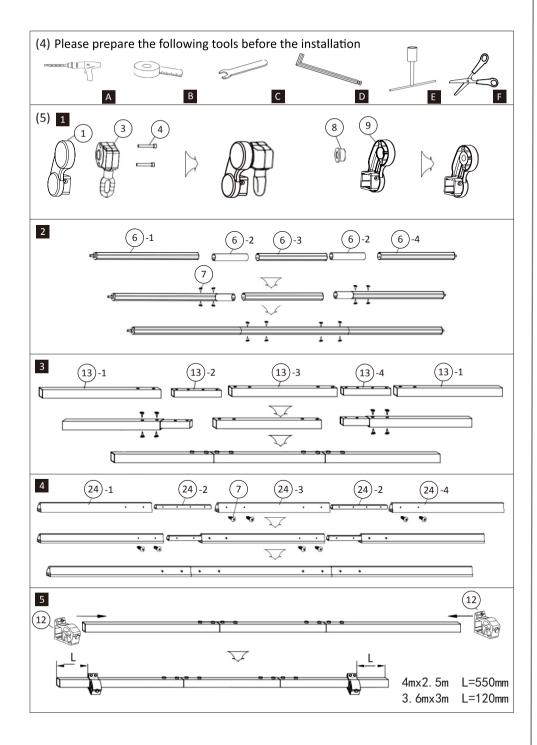

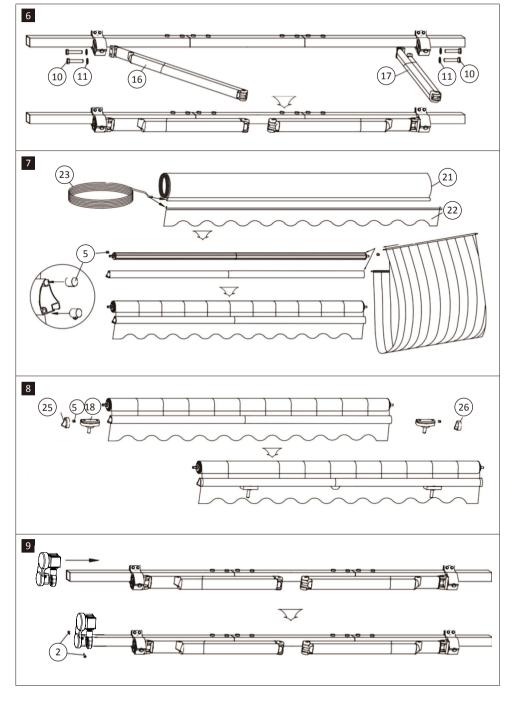

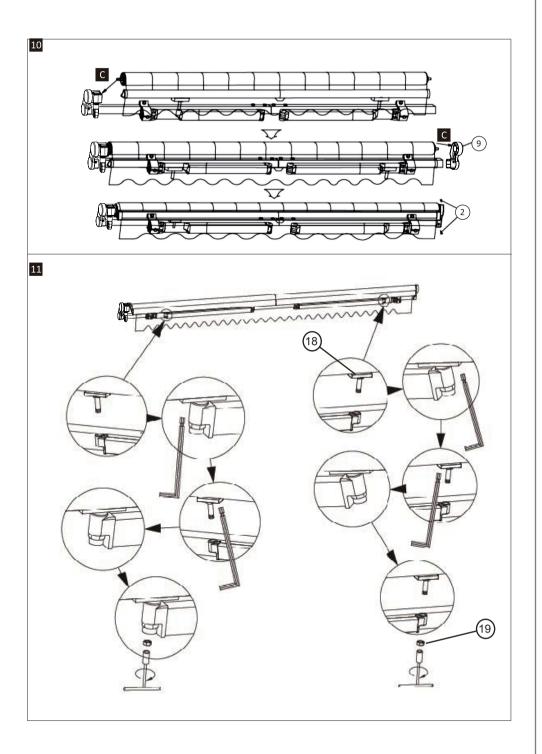

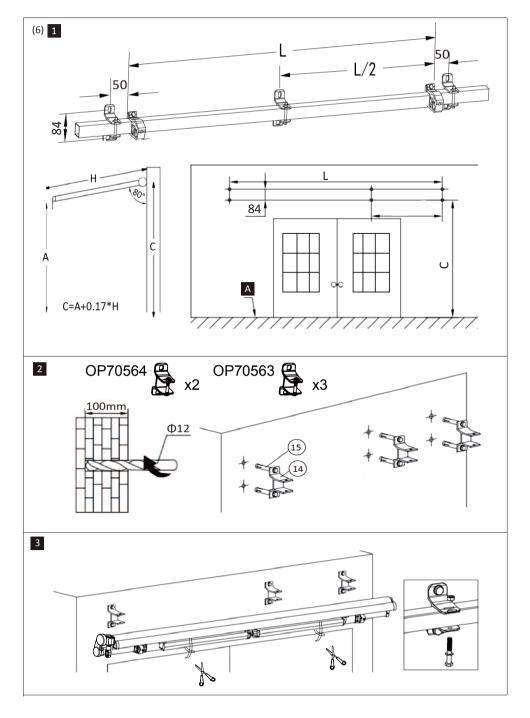

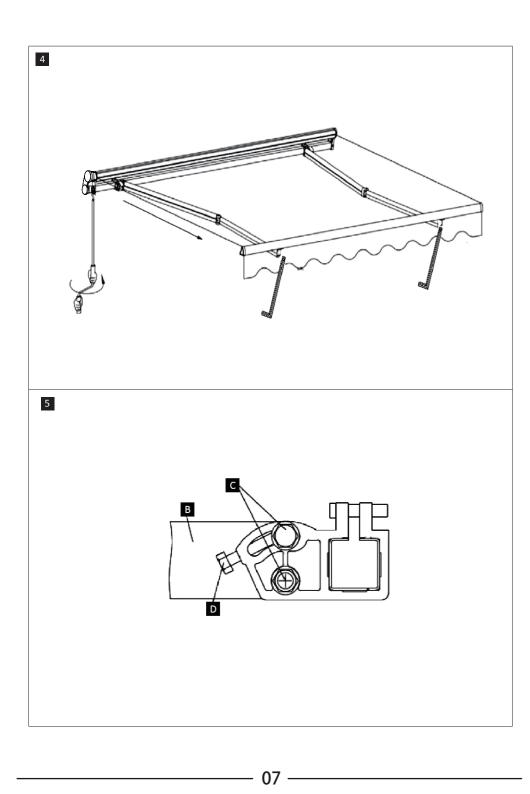

EN User manual

1 General warnings

Read all the instructions and warnings carefully before using this product. Failure to follow warnings and instructions can result in severe injury, death, or property damage. Before installation, check if all accessories are complete and without damage. If not, contact customer service. Keep these instructions in a safe place for future reference. Use this product with its original parts only. Repairs should only be carried out by a specialist or a professional and experienced technician. Never attempt to repair the product yourself.

2 Warnings and personal safety

The operating instructions should be read before using the product.

See image 1

\land Warning

- Before opening awning, be sure all brackets are mounted securely into wall studs and all bolts are properly tightened ALWAYS CLOSE the awning during high or gosling winds, rain and when not in use. Failure to do so may result personal injury and/or property damage, Also, Extension arms are under high tension and can cause serious damage or injury. Never attempt to repair or disassemble.
- DO NOT remove the rope which is used to fasten the arm for transport. This rope can only be removed after all the assembly steps are finished and all bolts are fastened and the item is attached to the wall. Failure to do so may result in personal injury and/or property damage.
- Important safety instructions. It is important for the safety
 of persons to follow these Instructions, since incorrect
 installation can lead to severe injury. Save these
 instructions.
- Warning: The fabric should not be sunken during operation, otherwise, water will accumulate on it.
- This product requires at least 3 adults to assemble.

🕂 Warning

See image 2

A	Locking nuts	В	Arm	
С	Jack bolt	D	Fabric	į.

Check if the awning is level with the spring level (25) on the front bar. Adjust the angle adjuster at either end by loosening the locking nuts of the angle adjuster and turning the jack bolt to adjust the pitch. Adjust the arm until the front profile is level. Tighten the locking nuts again to fix awning at this level. To adjust the inclination of the awning, adjust the angle adjuster on both arm shoulders to achieve the desired incline. Fix the locking nuts when the awning is level.

- Warning: When the front bar touches the end cap as shown in the image, do not try to bring them closer. Otherwise, the product may be damaged.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Frequently examine the installation for imbalance and signs of wear or damage to springs.
- Do not use if repair or adjustment is necessary.
- Do not operate the awning during maintenance, such as window cleaning, is being carried out in the vicinity.
- Install the actuating member of a manual release at a height less than 1.8m.
- Operation in frosty conditions may damage the awning.
- Never install it in high and windy places, as the sunshade may drop and hurt people.
- Don't use it in places that have vibrations or impulsions.
- Don't use it in places of high temperature such as walls near furnaces.
- Don't put heavy stuff on the frame as it may fall down and cause damages.
- Never use it for other purposes.
- Be careful with your fingers during installation.
- Please use all the screws and nuts correctly during installation as it is very dangerous if you leave them loose.
- Please close the sunshade on windy and rainy days.
- Be careful during installation, crushing and shearing risks may exist.
- Do not modify the product to avoid potential dangers.
- Always close the awning when not in use.
- Please do not unpick and wash the fabric. If you need to replace the fabric, please turn to the experts for help.
- Check the overall installation especially at the beginning of a new season. Ensure that the fasteners are tightened and

in good condition.

- Retract the awning in case of rain if the slope is not in the range of the value recommended in the instruction.
- The awning shall be retracted in case the wind speed is higher than 28km/h.
- The maximum load for the non-retractable parts of the awning is 800Pa.
- The instructions for use should be provided to the end user.

3 Part List

See image 3

A	Instruction	
---	-------------	--

Please prepare the following tools before the installation: See image 4

A Power drill with drilling bit of Ø12mm,Ø5mm		В	Tape measure	
с	Wrench M6, M8, M12	D	Screwdriver	
E	Socket wrench (13mm)	F	Scissors	

4 Installation instructions

See image 5

A	through from	в	Through the fabric into roller and front bar	
с	insert into	D	Tighten	
E	Ground	F	Open	

5 Maintenance and cleaning

- Check to make sure that the awning is fixed tightly and securely before cleaning.
- Clean the metal surfaces of the awning with a slightly damp cloth.
- Clean the wall mount base with a slightly damp cloth.
- Wipe off debris from the fabric cover using a dry, soft cloth.
- Do not use any abrasive cleansers like chemicals, benzene, or alcohol.
- Do not roll up the awning when wet.
- Let the fabric cover dry naturally when it is wet.