




Snowfall Creek Pre-Lit Garland-6'
Item # DCGR7201



To set up:

- 1) Place the garland on a flat surface. Straighten and separate all branch tips. To achieve maximum fullness, tips should not touch one another.
- 2) From back of the garland, find the battery box and open it. Insert 3 C batteries into the battery box then close it (see Figure A, B, C, D & E). **When using outdoors, locations with temperatures -10 or colder we recommend using lithium batteries. Suitable for indoor use and outdoor under covered porch.*
- 3) Each battery box is featured with a 3-position switch: On – Off – Timer (see Figure F). The timer enables the LED lights to remain on for 6 hours then off for the next 18 hours. This will repeat daily.

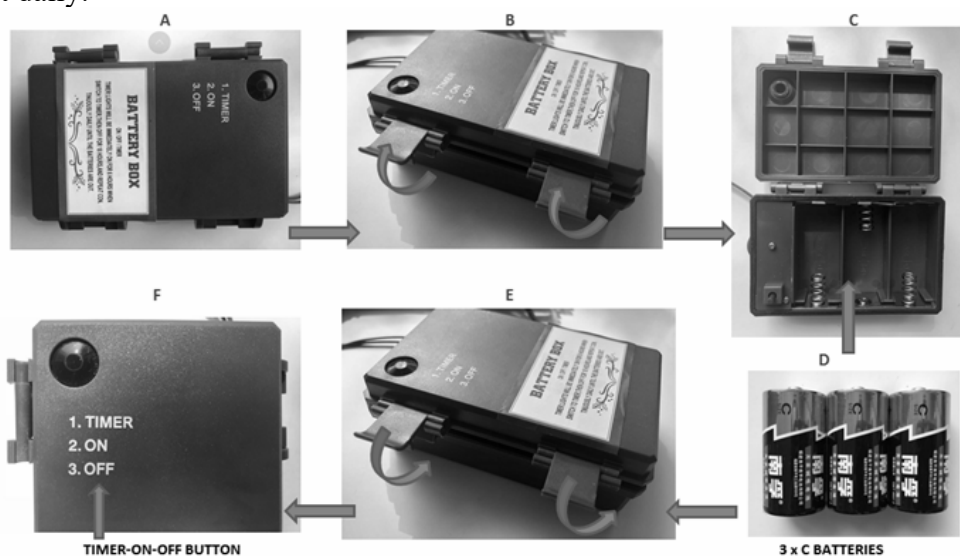

ATTENTION:

1. Adult supervision is necessary when changing and disposing of batteries.
2. Slide switch to "OFF" position when changing batteries.
3. Confirm proper polarity when inserting batteries (See Fig. 1).
4. Do not attempt to charge non-rechargeable batteries. Only recharge rechargeable batteries and do it under adult supervision.
5. Do not mix old and new batteries or batteries of different types.
6. Replace batteries when the light is faint.
7. Replace all batteries at the same time.
8. Remove dead batteries from unit.
9. Do not short-circuit terminals under any circumstances.
10. Do not allow the bottom of the unit to come into contact with heat.
11. Never throw batteries in a fire or attempt to open batteries.
Batteries may explode or leak.
12. Remove all batteries from unit before storage.
13. Batteries are harmful if swallowed. Keep away from young children.

THANK YOU FOR YOUR PURCHASE
Comments or questions?
Call us at 1-877-359-0115 or
Contact us at customerservice@haute-decor.com

Haute Decor
PO Box 1594
Allen, TX 75013

