## 1. Installation Precautions

 $1\,.$  When you open the product packaging, please check the product and accessories at first.

- 2. The hot and cold water supply pipe of the faucet must be properly connected. When facing the front of the faucet, the hot water supply is on the leftand cold water supply is on the right. Incorrect connection will causepermanent damage to the cartridge.
- 3. If the accessories to be changed without affecting the use, we will notmake a prior notice.
- 4. The impurities in the water supply pipe must be cleared before installation to avoid blockage.
- $5.The water pressure of the faucet is 0.05MPa-1.0MPa (including cold water and hot water pressure). Applicable water temperature range: <math display="inline">39^\circ F$   $194^\circ F$



- 1.Please read the installation manual carefully before installation.
- 2 . Installation work must be performed by a professional installer.
- 3.Installation tool:



3, Two function concealed faucet accessories list				
	12 ~ /	(1) ?		s
Number	Description	Quantity		
1	control valve	1		$\sqcup$
2	cover board	1		
3	diverter handle	1		
4	on/off handle	1		
5	Shower hose	1		
6	Elbow with hook	1		
7	Handle shower	1		
8	Shower head	1		
9	Shower arm	1		
10	Cover board	1		
11	Screw set	1		
12	Allen key	1		
13	Adjustable Slide Bar	1		



## 5、 Pipe connection

- 1、Please drill the holes on the wall for the main body embedded part, hot and cold water inlet pipes as well as shower arm connection pipes according to the basic product dimension drawing as below.
- 2、Please make hot and cold water inlet pipe, the mixed water outlet pipe connect with control valve, and tighten with the wrench



## 6、Water testing and sealing testing 1. After the pipe connection is completed, open the protective panel and cover, and then open the cartridge, flush the pipeline; then close the cartridge to check the pressure resistance and sealing performance of the pipeline, make sure there are no leakage. 2. Block each outlet pipe with a stopper then open the cartridge to check if the pipe joint is well-sealed and the pipe condition under pressure to ensure no leakage. Testing Purpose: Flush the impurities and sludge in the pipeline to avoid clogging and affect the effluent functions. $\cap$ 5



## 8、Installation of control valve

- 1. Take off the protective panel and cover
- 2. The decorative panel and the handle are connected to the control valve as shown below sequence.



According to the figure below, please correctly adjust the direction of water separator handle





