

# TROUBLESHOOTING GUIDE

Problem	Possible Causes	Solution
<b>The wine cooler does not cool.</b>	The unit may be plugged in using a different voltage.	Check if using the wrong voltage.
	The circuit breaker may be tripped or there is a blown fuse.	Reset the circuit breaker or check for a broken fuse.
<b>The wine cooler is not cold enough.</b>	The external environment may require a higher setting.	Lower the temperature of the cooler.
	The cooler may be placed too close to a heat source.	Keep the cooler away from direct sunlight or other heat sources.
	There is insufficient ventilation.	Place the beverage cooler in an area with proper ventilation and clearances.
	The door is not completely closed or the door seal is not working properly.	Close the door tightly. Do not open the door frequently and do not keep the door open for extended periods of time. Replace the seal on the door if necessary.
<b>The wine cooler seems to make too much noise.</b>	The unit is not leveled.	Adjust the unit's feet and ensure the product is level.
	There is insufficient ventilation. The unit is too close to a wall or another surface.	Allow sufficient clearance around the unit.
<b>An interior red light is flashing.</b>	The set temperature is too low.	Adjust the set temperature so that it is higher than the wine cooler's interior temperature.
<b>Frost is building up in the unit.</b>	There is excess humidity or the interior temperature is too low.	Turn off the beverage cooler, unplug it, and remove the frost buildup manually. Reconnect the power once the ice has thawed.