

11" (H)

8.5" (W)

PORTFOLIO

Portfolio is a registered trademark of
L.F. LLC. All rights reserved.


ITEM #0126206

LAMP SET

MODEL #XHLV001CB

Manuals p.12

Explanatory p.22

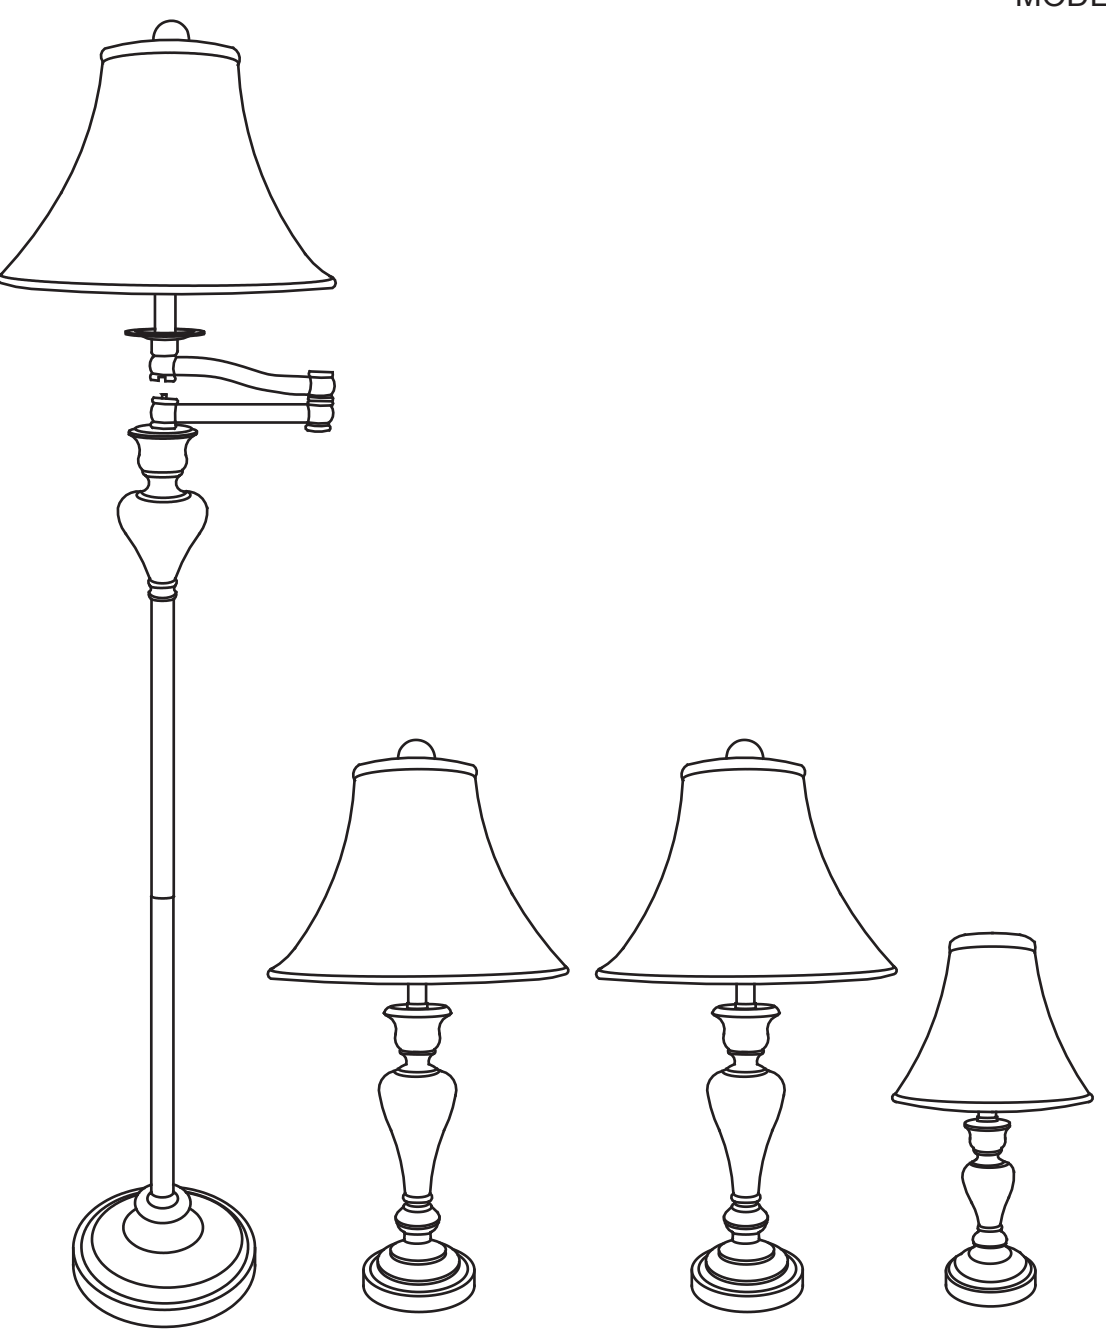

ATTACH YOUR RECEIPT HERE

Serial Number _____ Purchase Date _____

Questions, problems, missing parts? Before returning to your retailer, call our customer service department at 1-800-643-0067, 8 a.m. - 6 p.m., EST, Monday - Thursday, 8 a.m. - 5 p.m., EST, Friday.

EB1521


Intertek

Lowes.com/portfolio

PORTFOLIO

1

PACKAGE CONTENTS

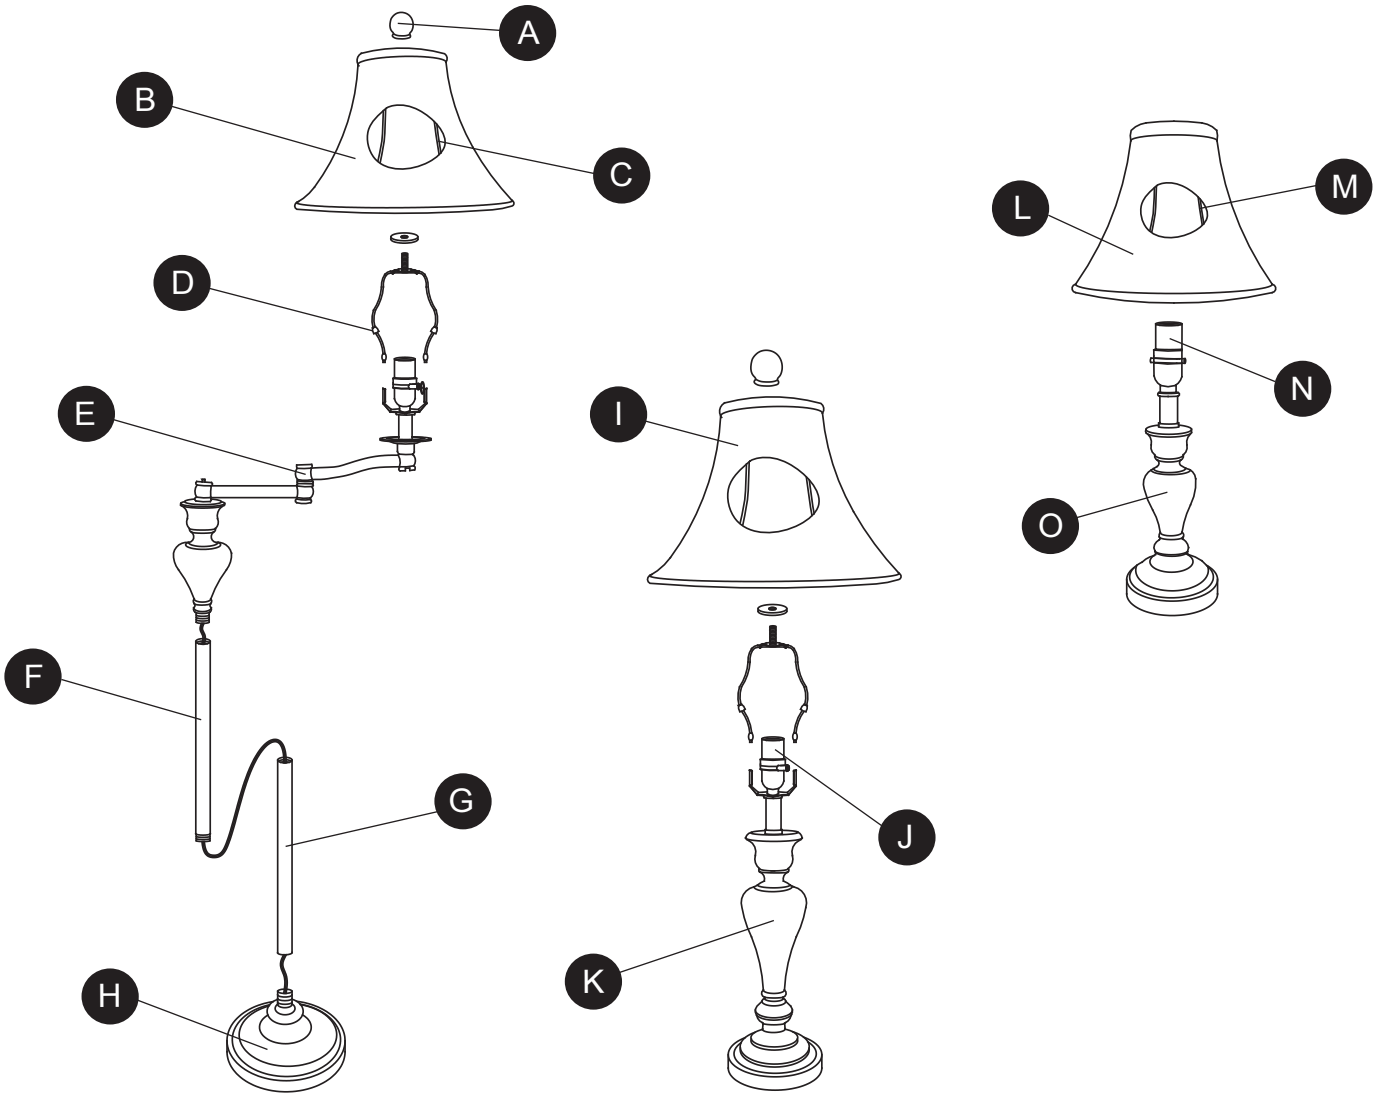


PART	DESCRIPTION	QUANTITY
A	Final	1
B	Floor Lamp Shade	1
C	Frame	9
D	Harp	3
E	Socket Assembly	1
F	Top Tube	1
G	Bottom Tube	1
H	Floor Lamp Base	1
I	Table Lamp Shade	1
J	Table Lamp Socket (preassembled to Table Lamp Base (K))	2
K	Table Lamp Base	2
L	Accent Lamp Shade	1
M	Accent Lamp Frame	3
N	Accent Lamp Socket (preassembled to Accent Lamp Base (O))	1
O	Accent Lamp Base	1

Lowes.com/portfolio

PORTFOLIO

2

HARDWARE CONTENTS (not shown to size)

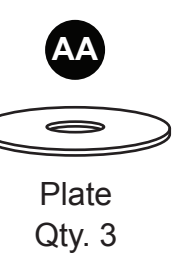

SAFETY INFORMATION

Please read and understand this entire manual before attempting to assemble, operate or install the product.

WARNING

- Do not attempt to replace the bulb while the lamp is plugged into an electrical outlet.
- Do not use outdoors or near water or other liquids.
- During shipment, the socket cover might have loosened. Before inserting bulb, check to see the socket cover is secure.
- This portable lamp has a polarized plug. One blade is wider than the other as a safety feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless the plug can be fully inserted. Do not attempt to defeat this safety feature.

CAUTION

- When unpacking and assembling, do not pull on the wire too hard or damage may occur.
- Only use the bulb and wattage specified in these instructions or on the label located on the socket.
- Unplug from outlet before removing any parts and cleaning.
- Only use a soft cloth for cleaning. Do not use any chemicals or abrasive cleaners.

PREPARATION

Before beginning assembly of product, make sure all parts are present. Carefully remove all parts from box and remove all plastic covering the parts. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.

Floor Lamp

Estimated Assembly Time: 8 minutes

No tools are required for assembly

Table Lamp

Estimated Assembly Time: 7 minutes

No tools are required for assembly

Accent Lamp

Estimated Assembly Time: 4 minutes

No tools are required for assembly



Lowes.com/portfolio

PORTFOLIO

3

FLOOR LAMP ASSEMBLY INSTRUCTIONS

- Place floor lamp shade (B) on a flat surface, placing one frame (C) into the bottom ring of floor lamp shade (B) as shown.
- Place the other end of frame (C) into the top ring of floor lamp shade (B) as shown.
- Repeat steps 1 and 2 to install remaining two frames (C) into floor lamp shade (B).

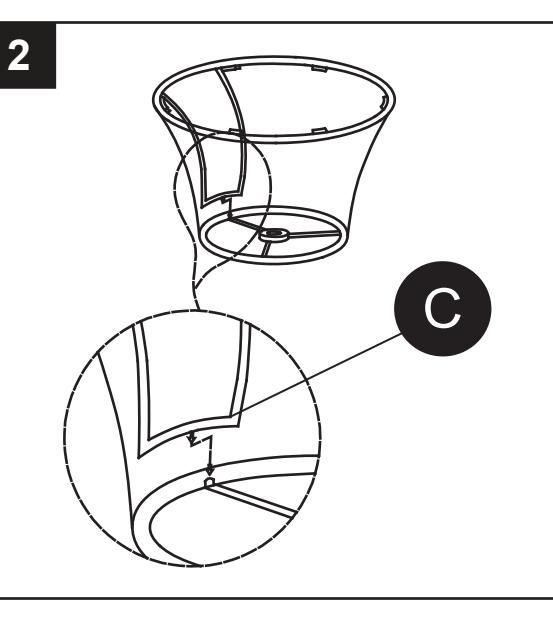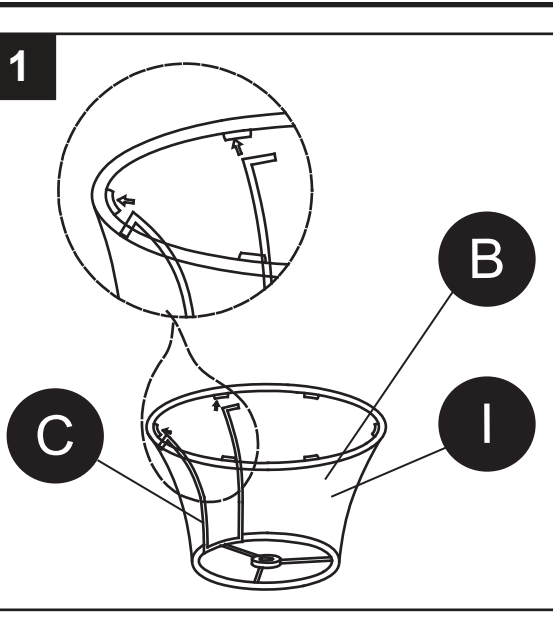




Lowes.com/portfolio

PORTFOLIO

4

FLOOR LAMP ASSEMBLY INSTRUCTIONS

- Place the floor lamp base (H) on a flat, level surface. Screw the bottom tube (G) into the floor lamp base (H), ensuring to pull the cord taut.
- Screw the top tube (F) into the bottom tube (G) while pulling cord through the floor lamp base (H).
- Screw the socket assembly (E) into the top tube (F) while pulling cord through the floor lamp base (H).

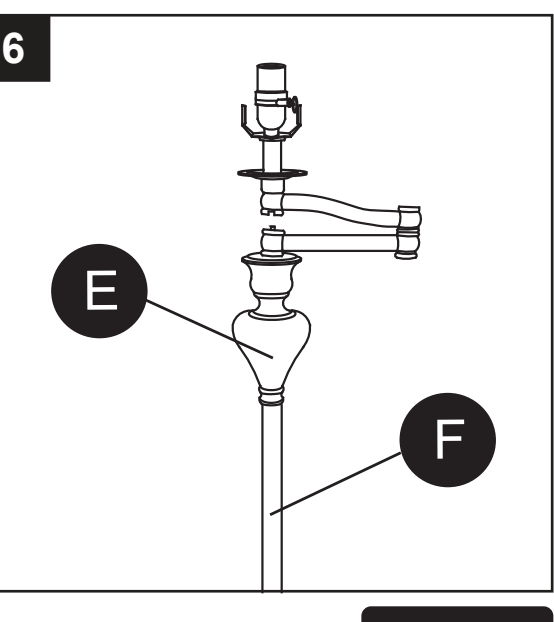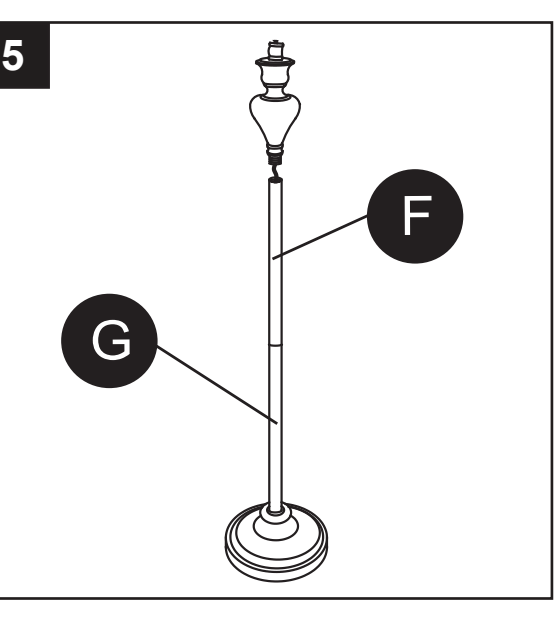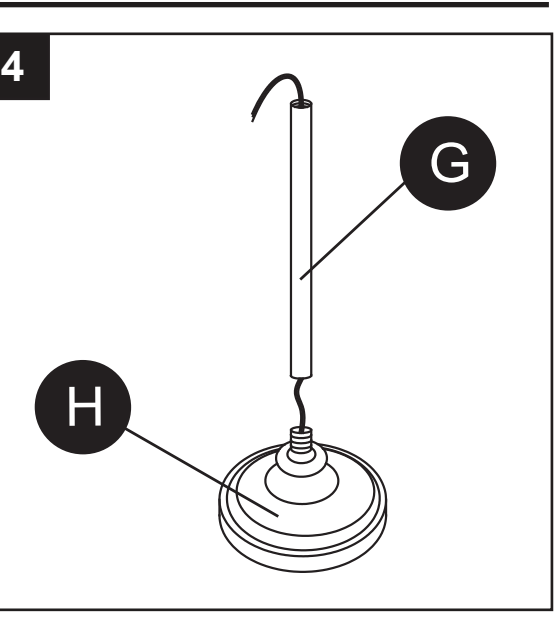

Lowes.com/portfolio

PORTFOLIO




5

FLOOR LAMP ASSEMBLY INSTRUCTIONS

- Attach the harp (D) onto the socket assembly (E).
- Attach plate (AA) to the rod on harp (D). Then, place the floor lamp shade (B) on the plate (AA) and secure with the finial (A).

Hardware Used



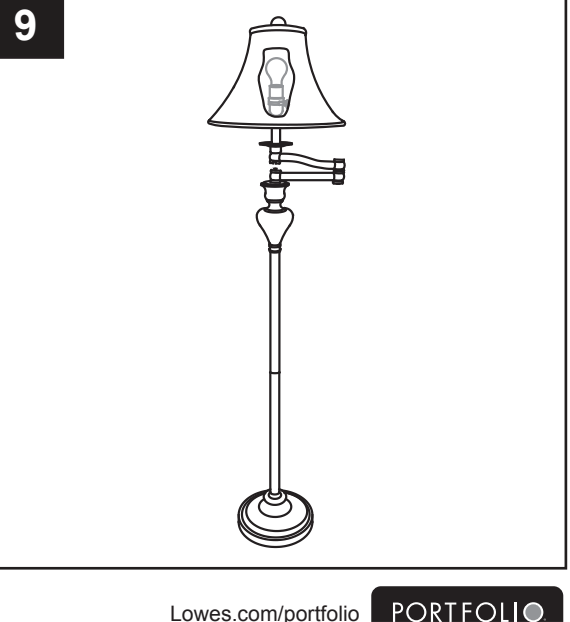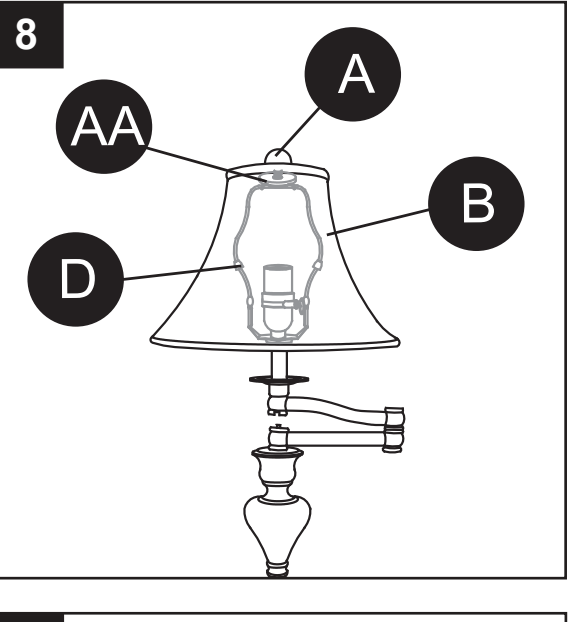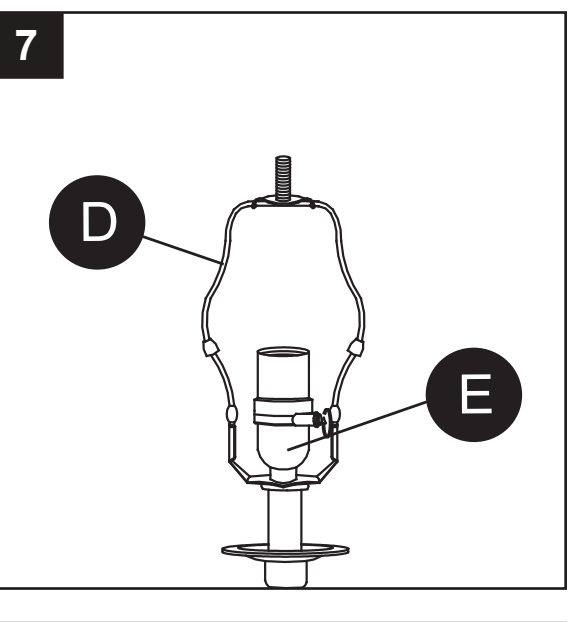

Lowes.com/portfolio

PORTFOLIO




6

TABLE LAMP ASSEMBLY INSTRUCTIONS

- Repeat steps 1-3 of the floor lamp assembly to assemble table lamp shade (I).
- Place the table lamp base (K) on flat, level surface. Attach the harp (D) to the table lamp socket (J) preassembled to table lamp base (K).
- Attach plate (AA) to the rod on harp (D). Then, place the table lamp shade (I) on the plate (AA) and secure with the finial (A).

Hardware Used



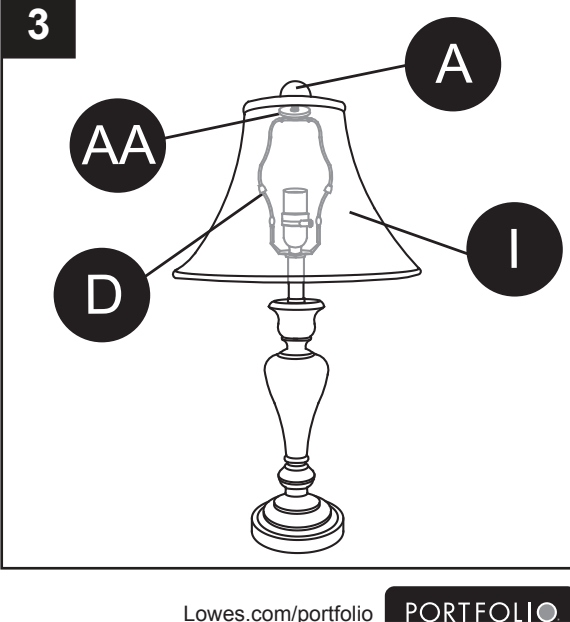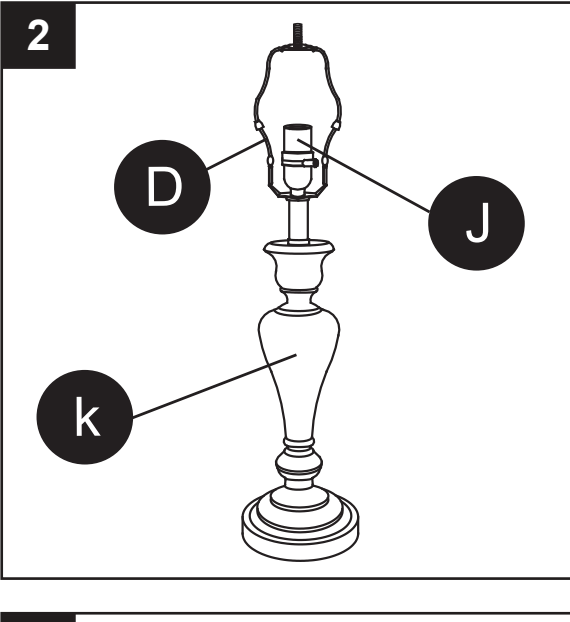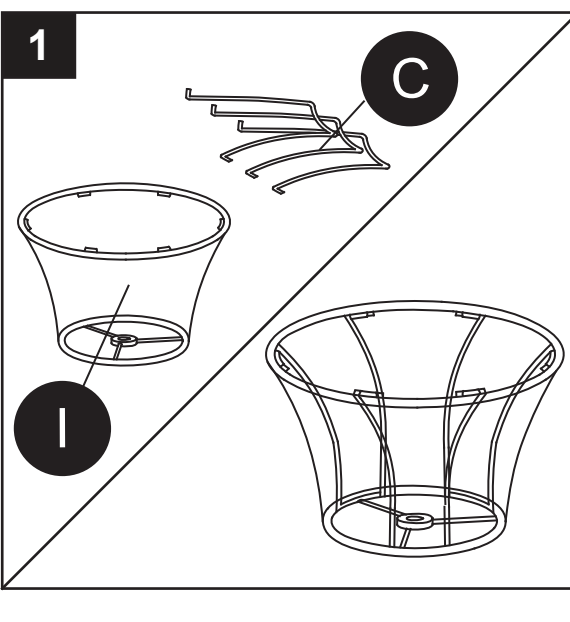


Lowes.com/portfolio

PORTFOLIO

7

TABLE LAMP ASSEMBLY INSTRUCTIONS

- Install bulb (not included). Use 60-watt max. standard-base incandescent bulb or 13-watt max. standard-base CFL. The table lamp assembly is now complete. Repeat steps 1-4 for the second table lamp.

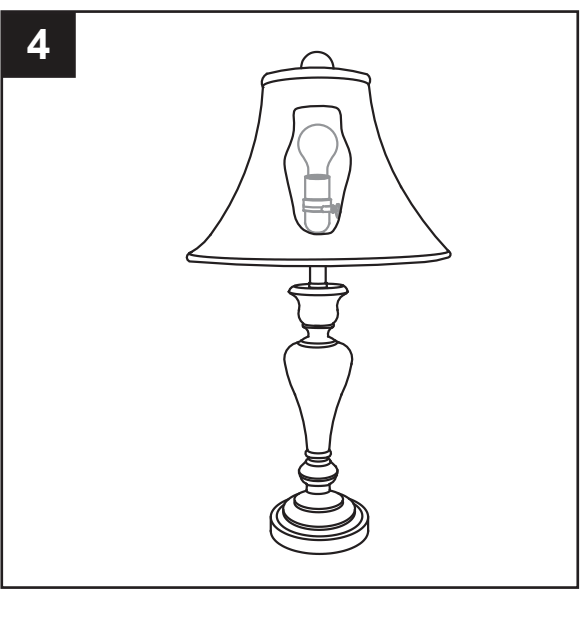



Lowes.com/portfolio

PORTFOLIO

8

ACCENT LAMP ASSEMBLY INSTRUCTIONS

- Place the accent lamp base (O) on a flat, level surface. Then, place accent lamp shade (L) onto the accent lamp socket (N) preassembled to accent lamp base (O).
- Install bulb (not included). Use 40-watt max. type-B standard-base incandescent bulb or 9-watt max. standard-base CFL. The accent lamp assembly is now complete.

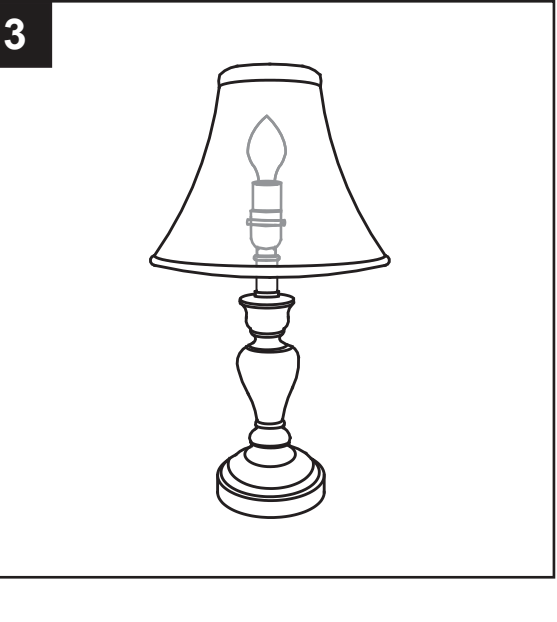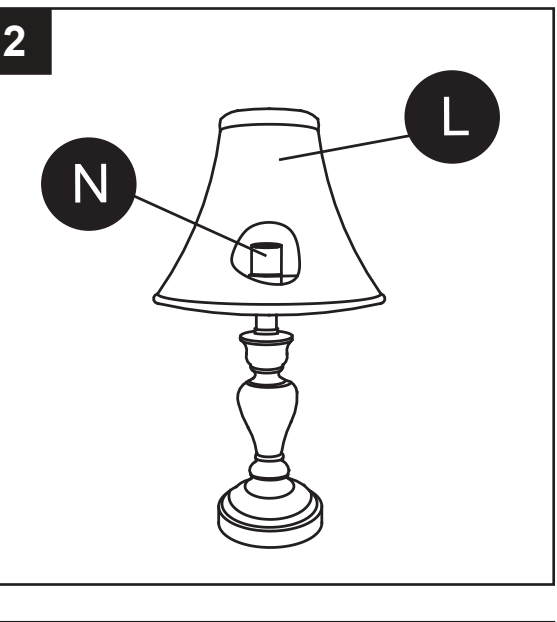

Lowes.com/portfolio

PORTFOLIO

9

CARE AND MAINTENANCE

- Clean base with a damp cloth.
- Do not use any chemicals, polishes, or abrasives.
- Do not immerse fixture in water; doing so will damage the wiring.

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	CORRECTIVE ACTION
Bulbs will not light.	1. Bulb is burned out. 2. Power is off. 3. Faulty wire connection.	1. Replace light bulb. 2. Make sure power supply is on. 3. Check wiring.
Fuse blows or circuit breaker trips when light is turned on.	Crossed wires or power is grounding out.	Check wire connection.

WARRANTY

The manufacturer warrants this product to be free from defects in workmanship and material present at time of shipment from the factory for one year (1) from the date of purchase. This warranty applies only to the original purchaser. The manufacturer agrees to correct such defect at no charge or at our option replace the lamp with a comparable or superior model.

To obtain warranty service, call our customer service department at 1-800-643-0067 for return authorization and shipping instructions. You may be required to present a copy of your sales receipt as proof of purchase. All cost of removal and reinstallation are the express responsibility of the purchaser. Any damage to the lamp by accident, misuse or improper installation, or by affixing accessories not produced by the manufacturer, are the purchaser's responsibility. The manufacturer assumes no responsibility whatsoever for lamp installation during the warranty period.

There is no further expressed warranty. The manufacturer disclaims any and all implied warranties. The manufacturer shall not be liable for incidental, consequential or special damages arising at or in connection with product use or performance except as may otherwise be accorded by law. This warranty gives you specific legal rights and you may also have other rights which vary from state to state. This warranty supersedes all prior warranties.

Lowes.com/portfolio


PORTFOLIO

10

REPLACEMENT PARTS

For replacement parts, call our customer service department at 1-800-643-0067, 8 a.m. - 6 p.m., EST, Monday - Thursday, 8 a.m. - 6 p.m., EST, Friday.

PART	DESCRIPTION	PART#
A	Finial	0126206FL-Finial
B	Floor Lamp Shade	0126206FL-KO Shade
C	Frame	0126206FL-U Frame
D	Harp	0126206FL-Harp
I	Table Lamp Shade	0126206TL-KO Shade
L	Accent Lamp Shade	0126206AL-KO Shade
M	Accent Lamp Frame	0126206AL-U Frame
AA	Plate	0126206FL-Plate

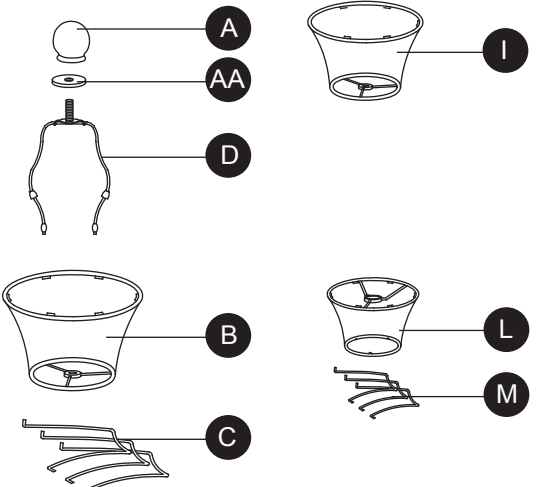

Printed in China

Portfolio® is a registered trademark of
L.F. LLC. All rights reserved.

Lowes.com/portfolio

PORTFOLIO

11