


INSTALLATION & USER MANUAL

72" CEILING FAN WITH LIGHT

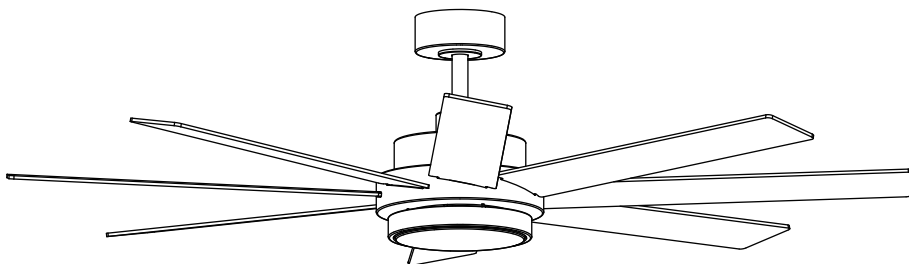

Item#40050

Customer Service: support@ceilingfanhelp.com

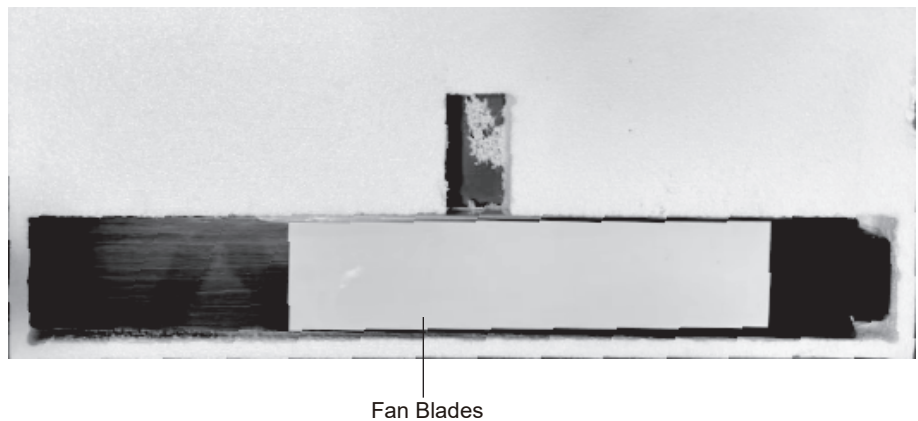
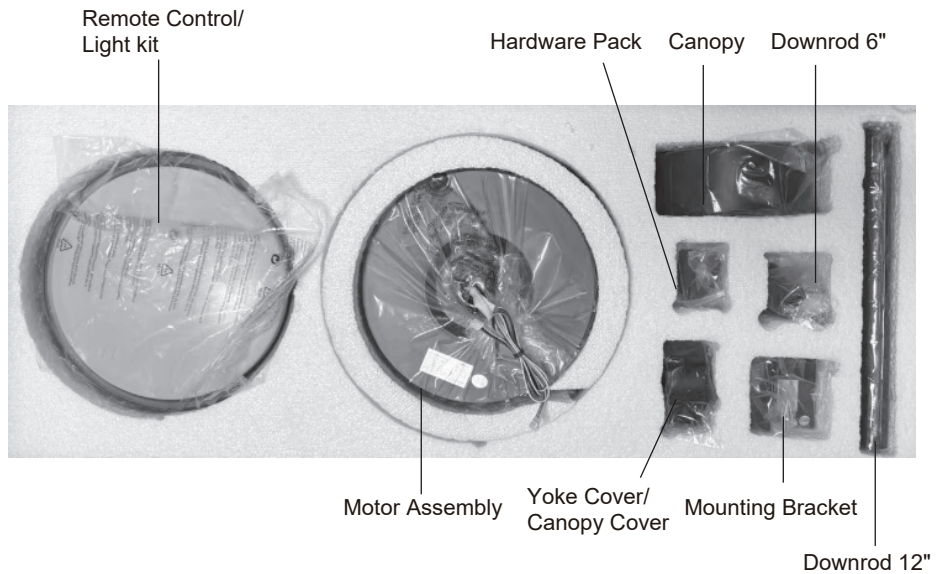


Table of Contents

Table of Contents.....	3	Exploded View.....	5
Safety Information.....	3	Installation Instructions.....	6-9
Dimension Reference.....	4	Operating Instructions.....	10-22
Hardware Included.....	4	Troubleshooting Guide.....	23
Fan Parts Included.....	4	Balancing Kit.....	24

Safety Information

READ AND SAVE THESE INSTRUCTIONS.

1. To reduce the risk of electric shock, ensure the power is turned off at the circuit breaker or fuse box before installation.
2. All wiring must be in accordance with the National Electrical Code “ANSI/NFPA 70” and local electrical codes. Electrical installation should be performed by a qualified licensed electrician.
3. Make sure the outlet box and support structure are securely mounted and rated to safely support a fan weighing up to 35 lbs (15.9 kg); this fan must be installed on a UL-listed outlet box clearly marked “Acceptable for Fan Support of 35 lbs (15.9 kg) or less.” If you are unsure about safety or compatibility, please consult a qualified electrician.
4. Do not place objects in the path of the blades.
5. To clean the fixture, turn off the power, wait for it to cool, and wipe the fixture with a clean, soft cloth.
6. After making electrical connections, spliced conductors should be turned upward and carefully pushed into the outlet box. The wires should be spread apart with the grounded conductor and the equipment-grounding conductor on one side of the outlet box and ungrounded conductor on the other side of the outlet box.
7. All set screws must be checked and retightened where necessary before installation.



WARNING: To reduce the risk of electric shock or fire, do not use this fan with any solid-state fan speed control device. Such use will permanently damage its electronic circuitry.



WARNING: To reduce the risk of personal injury, do not bend the blade brackets during installation, blade balancing, or fan cleaning.



WARNING: To reduce the risk of fire, electric shock or personal injury, mount to outlet box marked “acceptable for fan support of 35 lbs. (15.9 Kg) or less” and use screws provided with the outlet box.



WARNING: To avoid possible electrical shock, turn the electricity off at the main fuse box before wiring.



WARNING: To reduce the risk of electrical shock, this fan should not be installed with an isolating wall control or switch, as it may cause incompatibility issues.



CAUTION: To reduce the risk of personal injury, use only the screws provided with the outlet box.



CAUTION: Please use carefully when working around or cleaning the fan to avoid injury or damage to the fan.




CAUTION: The fan must be mounted with a minimum of 7 ft (2.1 m) clearance from the trailing edge of the blades to the floor.



CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.


Dimension Reference

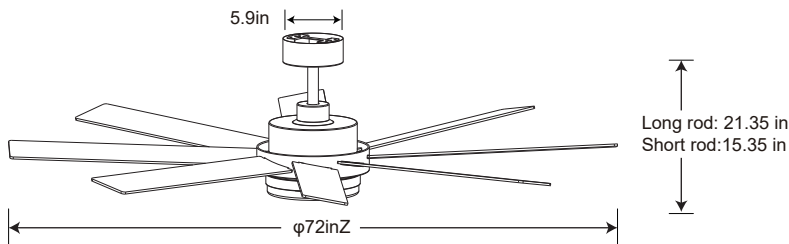


Hardware Included

			Hardware Package	Quantity
	S1		S5	
	S2		S6	
	S3		S7	
	S4		S8	
			S9	
			S10	
			S11	
			S1. J-box Screw	2
			S2. Self-tapping Screw	4
			S3. Washer	4
			S4. Spring Washer	4
			S5. Wire Nut	3
			S6. Expansion Screw	2
			S7. Blade Bracket Screw	1
			S8. Fan Blade Screw	2
			S9. Paper Gasket	25
			S10. Balance Kit	1+2
			S11. Safety Cable Kit	1+2

 Fan Parts Included

	1		5	Item Name	Quantity
	2		6	1.Remote Control	1
	3		7	2.Mounting Bracket	1
	4		8	3.Downrod (6" + 12")	2
			9	4.Canopy	1
				5.Canopy Cover	1
				6.Yoke Cover	1
				7.Motor Assembly	1
				8.Light kit	1
				9.Fan Blades	8

Exploded View

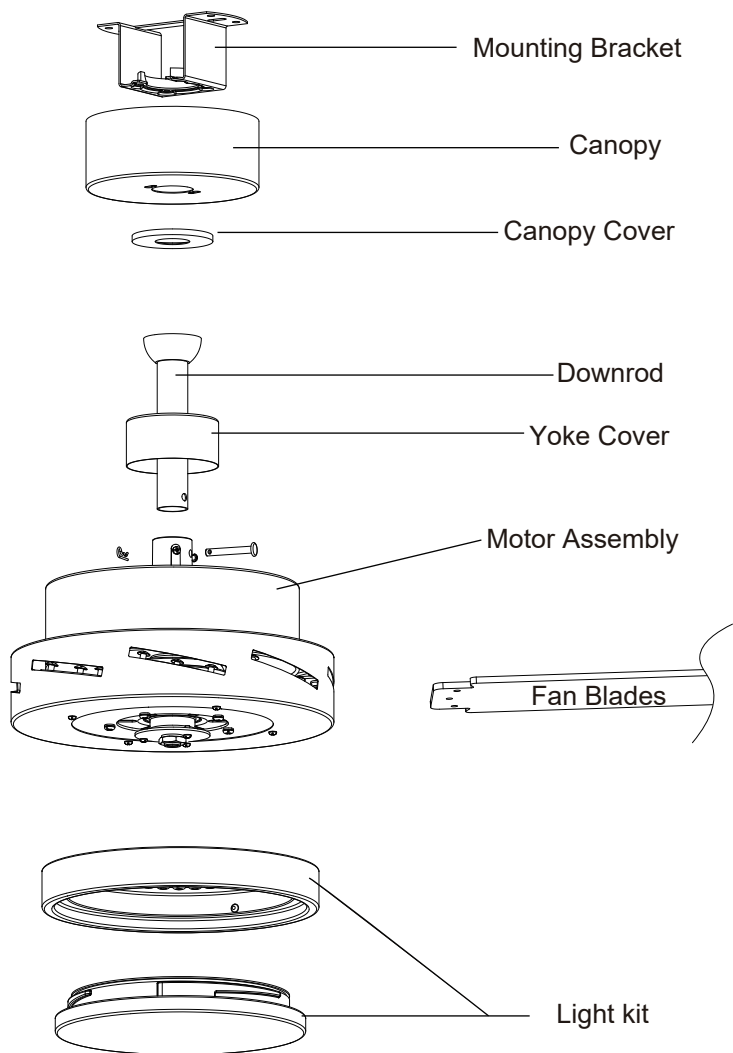


Installation Instructions

Step1 Installing the mounting bracket

WARNING: To Reduce The Risk Of Fire, Electric Shock, Or Personal Injury, Mount To UL/CSA Listed Outlet Box Marked Acceptable for Fan Support And Use Mounting Screws Provided With The Outlet Box.


- Locate ceiling joist where fan is to be mounted, being sure location agrees with the requirements in the minimum clearance section of this guide. Wood joists must be sound and of adequate size to support 70 pounds (See page 2, items 3 and 4).

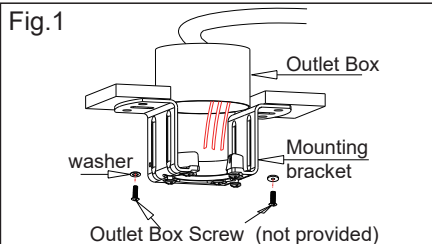

Step2 Hanging the fan

- Take out fan downrod. Remove cotter pin and downrod pin from downrod. (Fig 2-1)
- Place the downrod inside the canopy, canopy cover, and yoke cover. (Fig 2-2)
- Carefully feed the electrical lead wires and safety cable from the fan through the downrod. insert two downrod pins through holes in mounting collar and downrod; clip cotter pin through small hole in end of downrod pin to hold downrod in place. (Fig 2-3)
- Secure downrod in position by tightening jam screws. (Fig 2-4)
- Slide yoke cover down and it will flush with the motor housing.



CAUTION: To ensure wobble-free operation and to avoid damage to the fan, the downrod and the jam screw must be completely tightened.

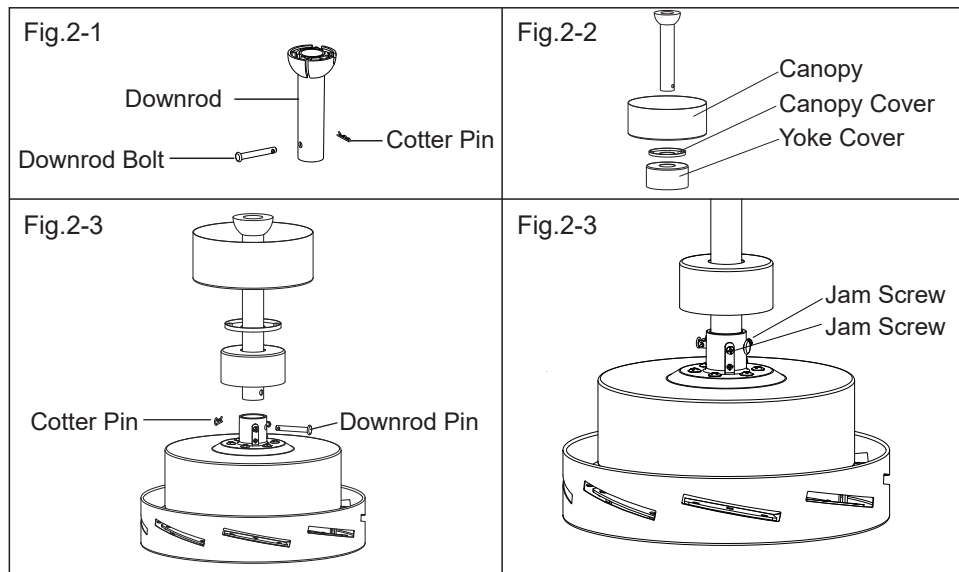


Installation Instructions

Step3 Installing mounting bracket

- If it is installed on the cement top and don't have outlet box, please use two expansion screw.
- Use an impact drill to drill two $\phi 8\text{mm}$ holes, Note that the distance between the two holes is about 100mm.
- Completely insert the pipe part of the screw into the hole and remove the washer and nut.
- Place the hanger into the screw head, place the washer, and then use a wrench to tighten the nut.

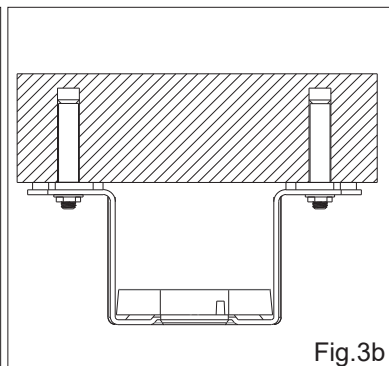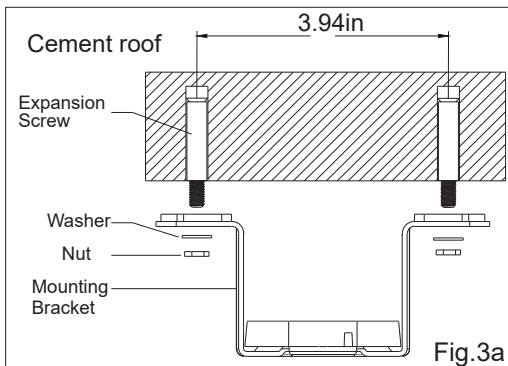


WARNING: To reduce the risk of fire, electric shock, or personal injury, mount to a UL/CSA listed outlet box marked acceptable for fan support and use mounting screws provided with the outlet box.

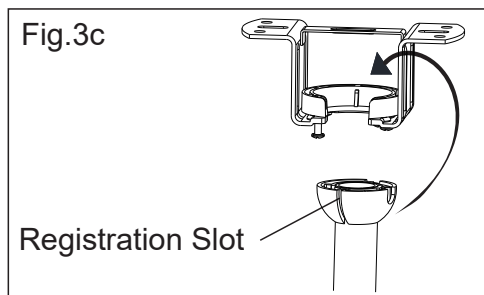


- Lift ball/downrod/fan into hanger bracket opening(Fig.4e)
- NOTE:The tab opposite hanger bracket opening should fit in slot on ball.(Fig.4e)

Installation Instructions

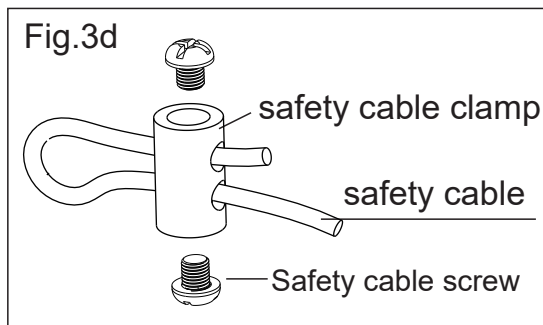

INSTALLATION OF SAFETY CABLE SUPPORT:


- Locate the security cable clamp and security cable screw within the hardware package.

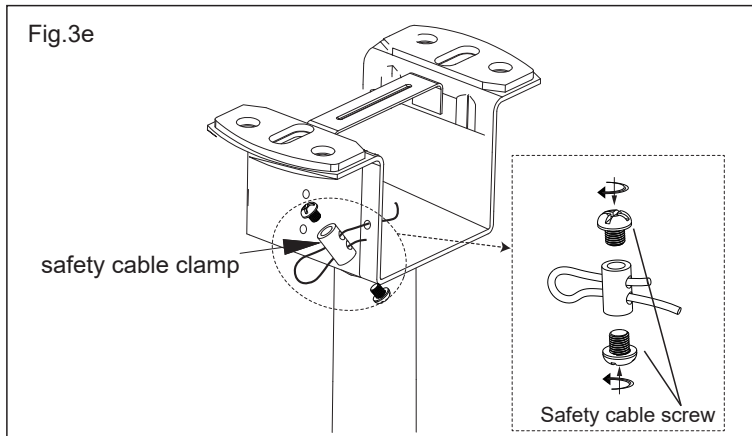

- Wrap the steel wire rope around the hole of the ceiling fan, then tighten the screw as shown in the diagram.(Fig.4g)


Installation Instructions

Step4 Installing the Fan Blades

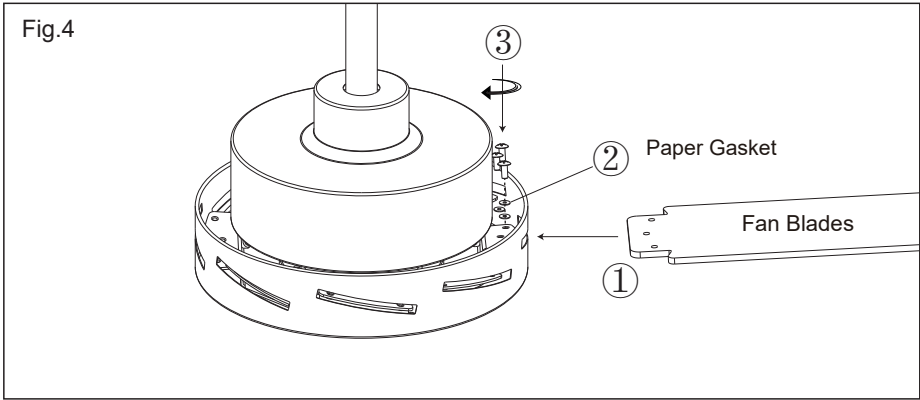

- Remove the fan blades, screws, and paper gaskets from the package, then install all fan blades as shown in.(Fig.3)


Step5 Installing the Light kit

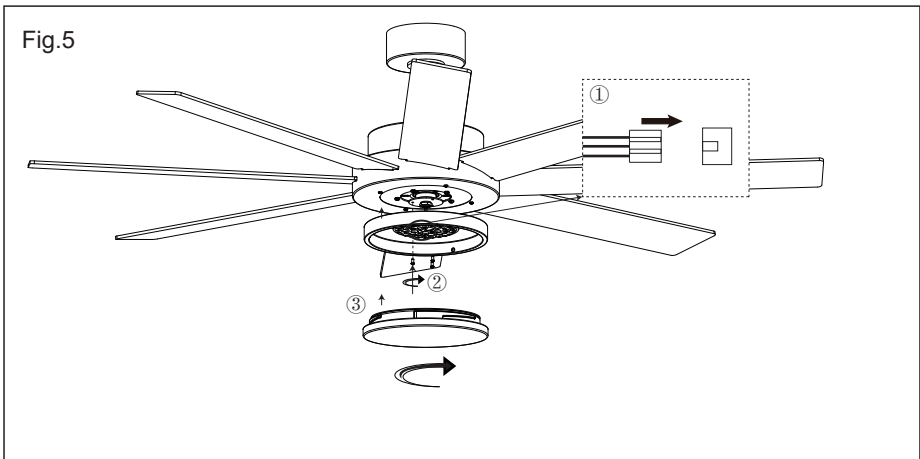

- Connect the motor end plug to the light source end socket.
- Secure the lighting fixture using screws
- Install the lampshade to the lamp housing by turning clockwise to lock it into place.


Installation Instructions

Step 6 Installing the receiver

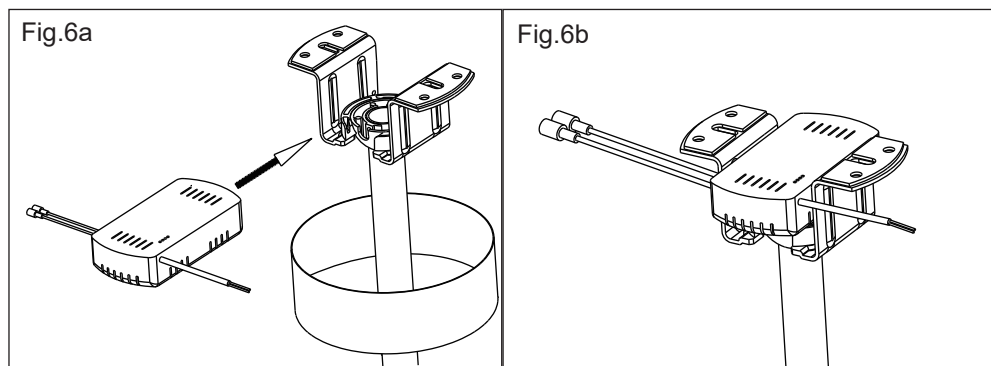


- Put the receiver in the mounting bracket.

Step7 Wiring the Fan

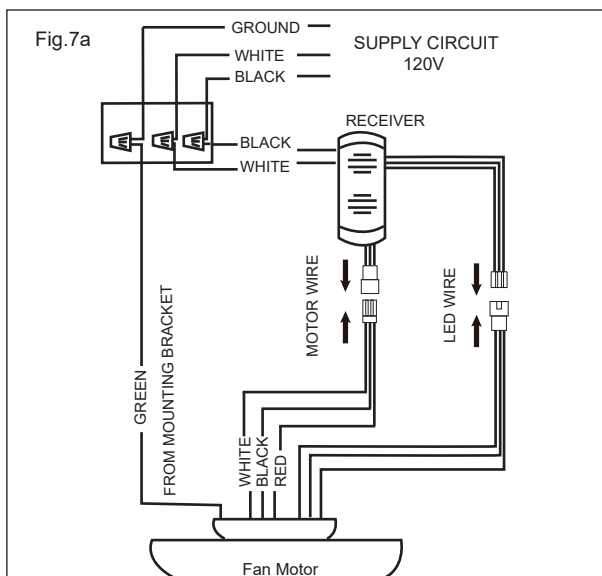


- Connect the wires according to the wiring diagram.

Installation Instructions

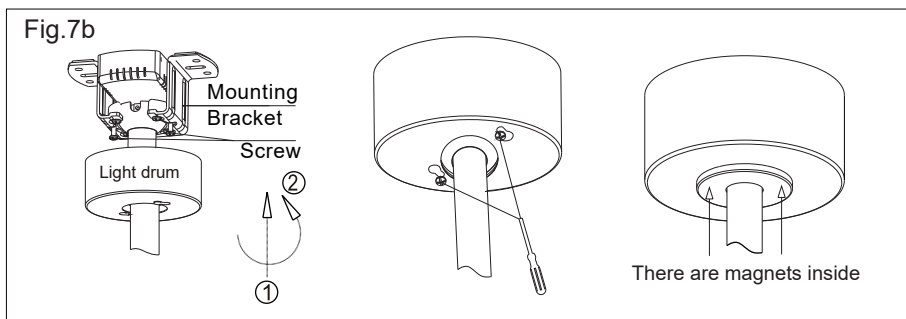

- Slide the Light drum up and secure it to the mounting bracket with the provided screws. Ensure all screws are tightened securely. Push the small lid to the top

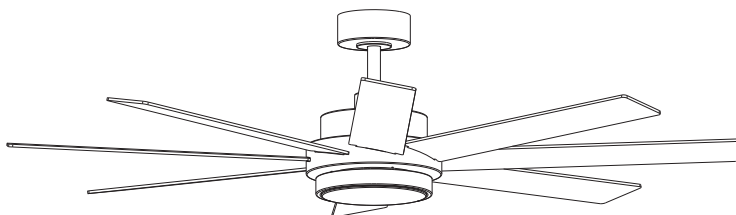




CONGRATULATIONS!
YOU HAVE COMPLETED THE INSTALLATION

1.Tuya WiFi Fan With Light App Instructions

1.1. Download and install App



1.2.Register/Login/Forget password

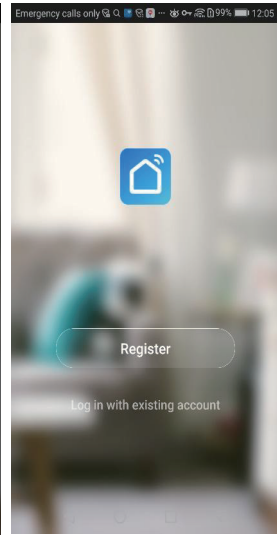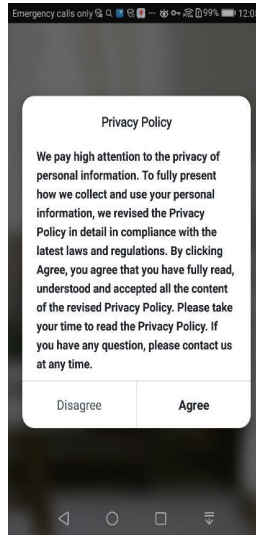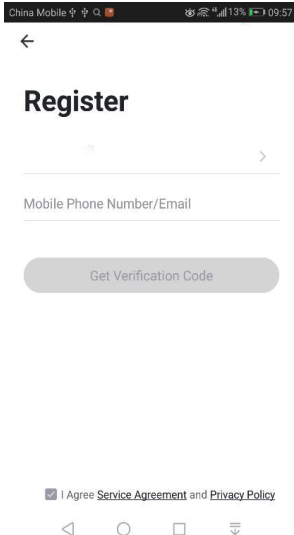

Operating Instructions

1.3. Device configuration and control

Turn on Bluetooth on your phone. Then connect the device to a power source and confirm that it is functioning properly (the light should turn on slowly).


Turn the power ON and OFF three times in the following sequence:

ON → OFF → ON → OFF → ON

(Leave the power ON for 2–3 seconds and OFF for 5–10 seconds each time.)


This will put the device into pairing mode. The main light will begin to flash to indicate it's ready.

Open the Smart Life app, tap the “+” icon in the upper right corner, and select “Add Device.” The app will automatically search for available devices.

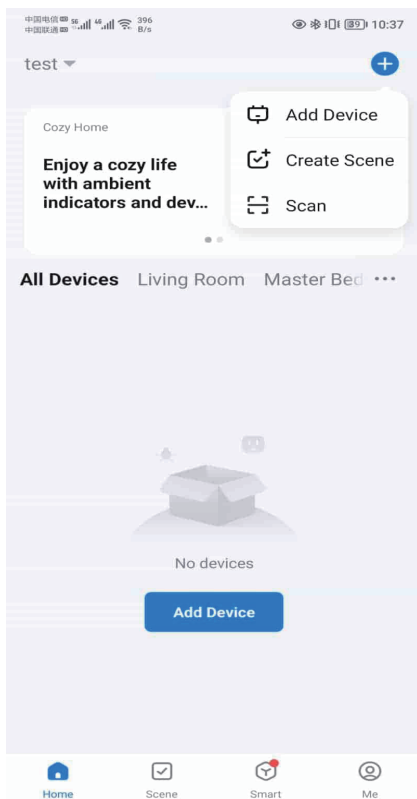

Operating Instructions

1.4. After the App scans the device, click Add to bind the device, then enter your router password: Note: Only support 2.4GHz WiFi network.

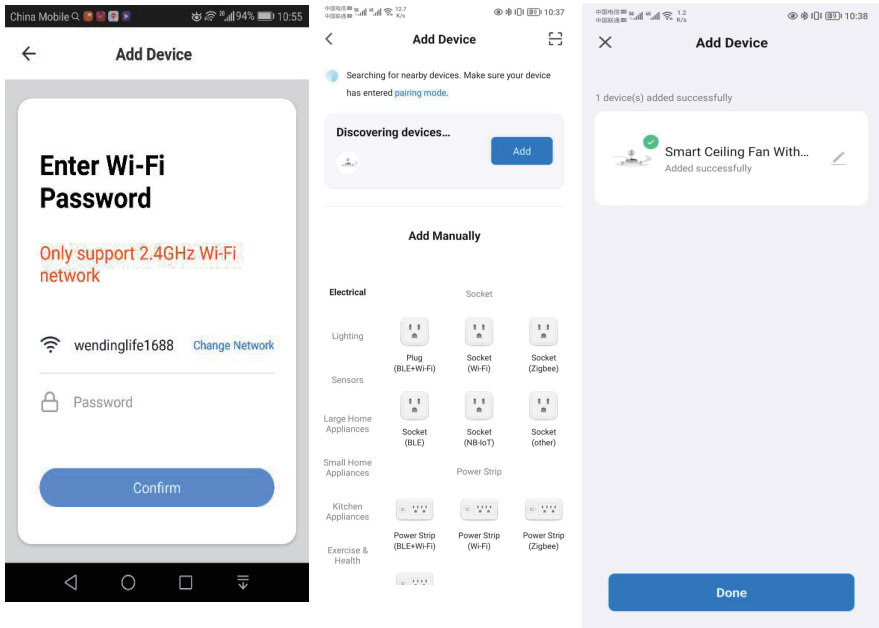

1.5. Click Done to enter the device control page.




Operating Instructions

REMOTE CONTROL FUNCTIONS

Open the battery cover on the remote control and install two AAA 1.5V batteries (not included).

Switch off the fan's main power supply, then switch it back on. Within 3 seconds, press and hold the "1H" button; once you hear two beeps, the unit will enter network mode.

- 1.Light/Fan ALL OFF
- 2.Light ON/OFF
- 3.Forward/Reverse
- 4.Buzzer Mute
- 5.Speeds
- 6.Fan OFF/Pair
- 7.Timer 1H
- 8.Timer 4H
- 9.Timer 8H
- 10.Warm White
- 11.Neutral White
- 12.Cool White
- 13.Brightness -
- 14.Brightness +

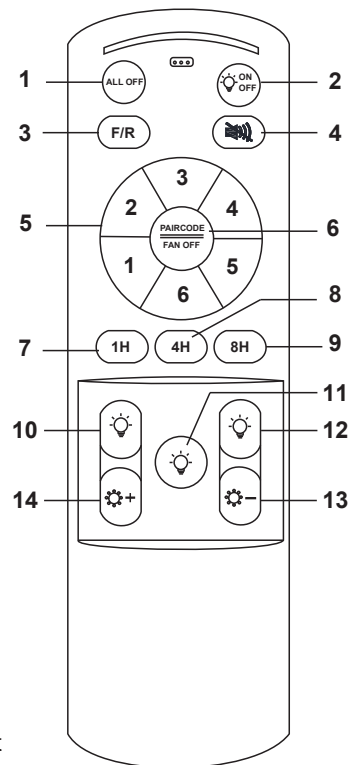

After powering on,press and hold “”on the handle immediately.After hearing the beep,release the“”button to turn off the beeping.(If you need to turn the prompt sound back on,turn off the power first,then turn iton again,and repeat the above actions)

After restoring power, press the “PAIR CODE” button within 3 seconds. The receiver will beep twice to confirm pairing. If pairing fails, turn power off for 1 minute and try again.

When the emitter cannot control the receiver,please check the battery switch touching normally or not,correction of the positive and negative,full or empty of the power.

If the remote cannot control the fan, check battery orientation and power level. Nearby devices using the same frequency may cause interference.

Please take out the battery from the emitter when leaving unused for long time.

3. Works with Amazon Alexa

3.1. Configure Amazon Echo and enable Smart Life skill

Download the Alexa mobile App:

Log in to the App Store with Apple ID registered in the United States, and search and download Amazon Alexa for iOS.

Go to Google Play, and search and download Amazon Alexa for Android.

This section describes how to configure Amazon Echo in the Alexa mobile app. The configuration procedure is similar for the Alexa web application.

3.2. Configure Amazon Echo in Alexa mobile app


Prerequisites:

The Echo is powered on.

The Echo is connected to a Wi-Fi network over which Amazon services are accessible.

Procedure:


1. Open the Amazon Alexa app.
2. Enter the Amazon account and password, and tap SIGN IN.

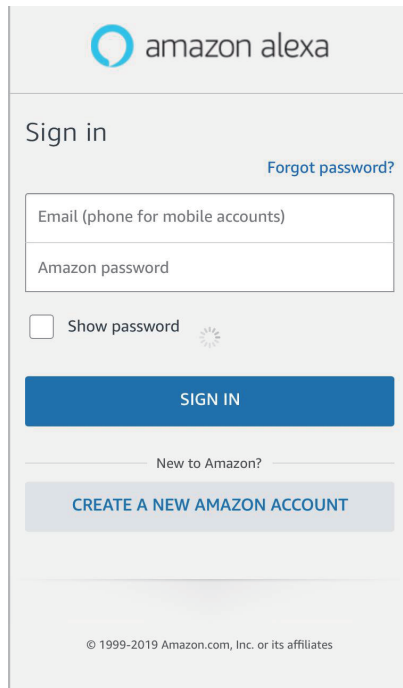


The screenshot shows the Amazon Alexa mobile app's sign-in interface. At the top is the Amazon Alexa logo. Below it, the text "Sign in" is displayed, with a link for "Forgot password?" to the right. There are two input fields: "Email (phone for mobile accounts)" and "Amazon password". Below the password field is a checkbox labeled "Show password" with a loading spinner icon. A large blue "SIGN IN" button is positioned below the inputs. At the bottom, there is a link for "New to Amazon?" and a button labeled "CREATE A NEW AMAZON ACCOUNT". The footer contains the copyright notice "© 1999-2019 Amazon.com, Inc. or its affiliates".

Operating Instructions

3. After successful login, in the bottom right corner of the Home page, tap More > Add a Device, and on the SETUp page that appears, select the Amazon Echo brand.

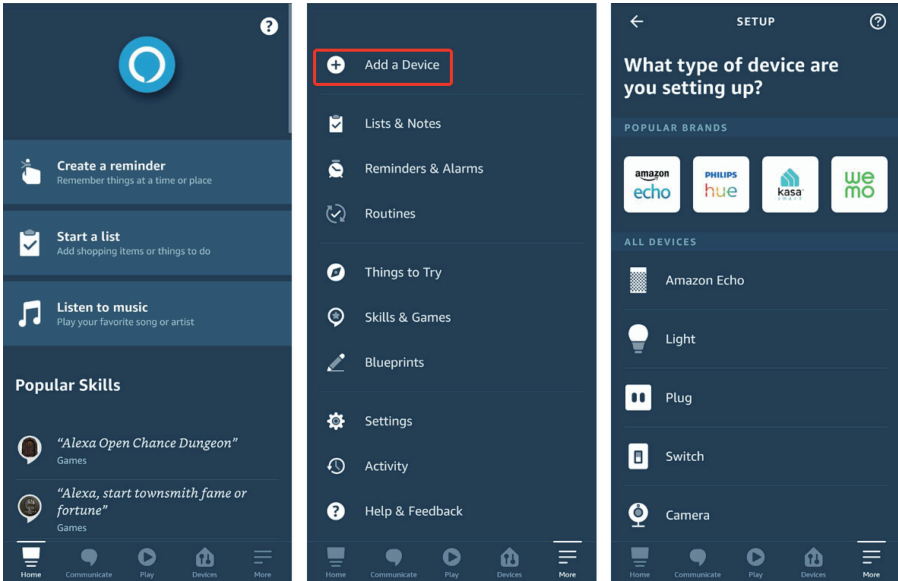


4. Select your Echo device type and tap CONTINUE to configure Echo.

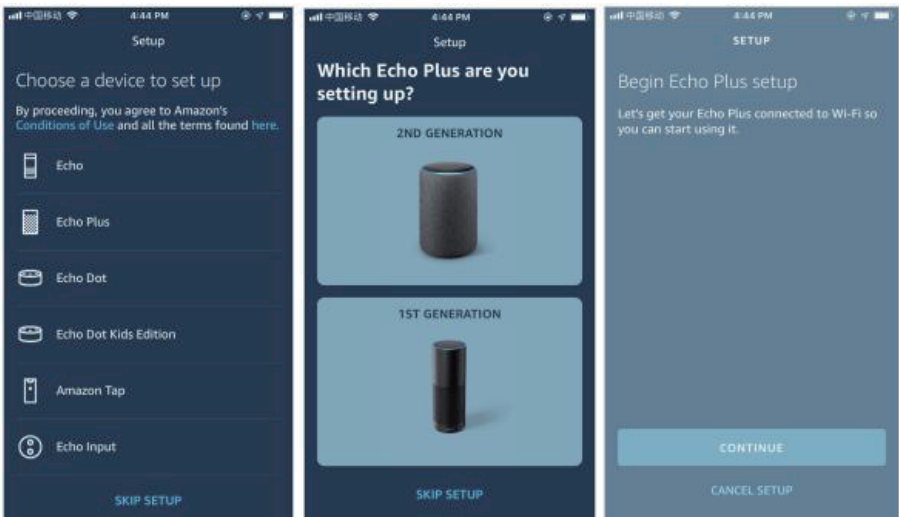


Operating Instructions

5. When the page Wait for the orange light appears, press and hold the action button until the light ring turns orange. Tap CONTINUE to connect the mobile phone to the hotspot of the Echo, and tap CONTINUE.

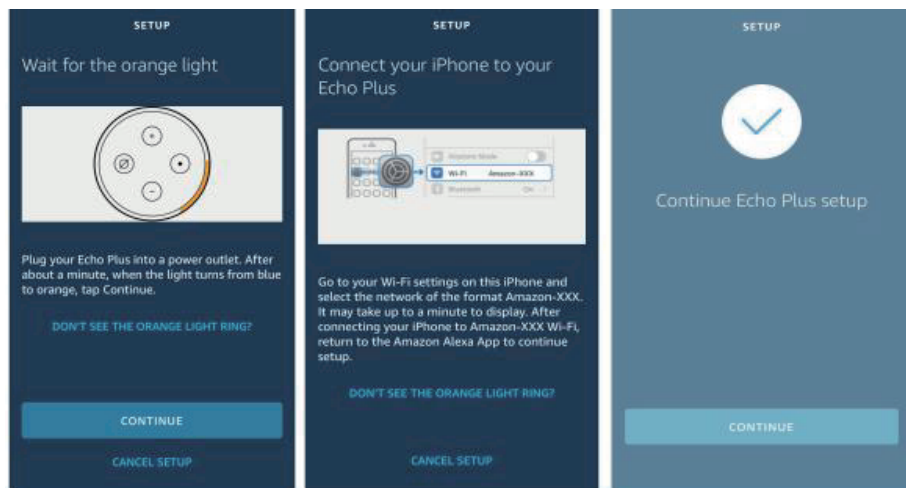


6. Select a Wi-Fi network to which the Echo will be connected, Enter the Wi-Fi password and tap CONNECT. It takes several minutes for the Echo to successfully connect to the Wi-Fi network.

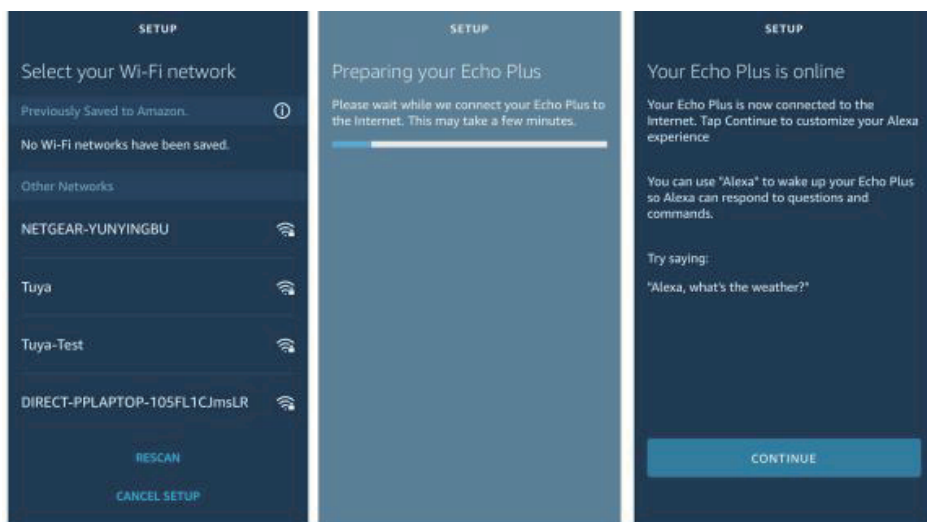





Operating Instructions

7. Then, tap CONTINUE. A video walkthrough appears to help get you started. At the end of the video, tap NEXT to navigate to the Home page of Alexa. Now, the Echo is configured.

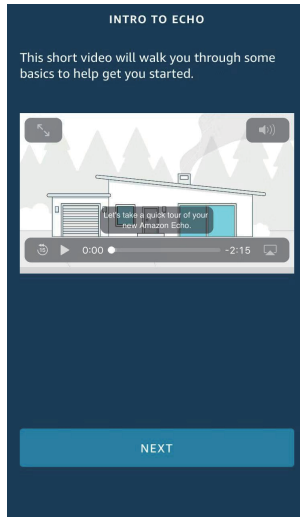


3.3.Bind Smart Life app with Alexa

Method 1: Use Smart Life app to start binding

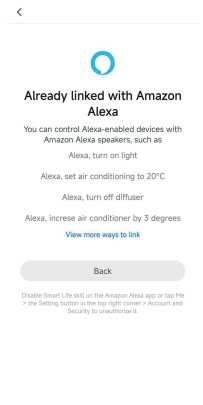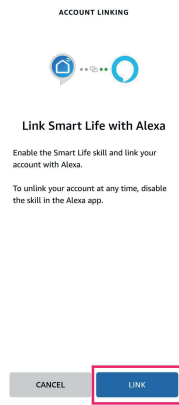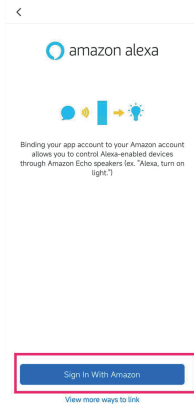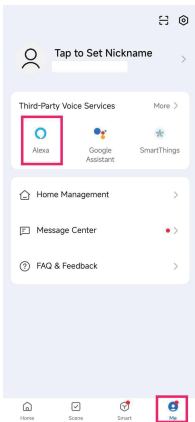

Operating Instructions

Method 2: Use Alexa app to start binding

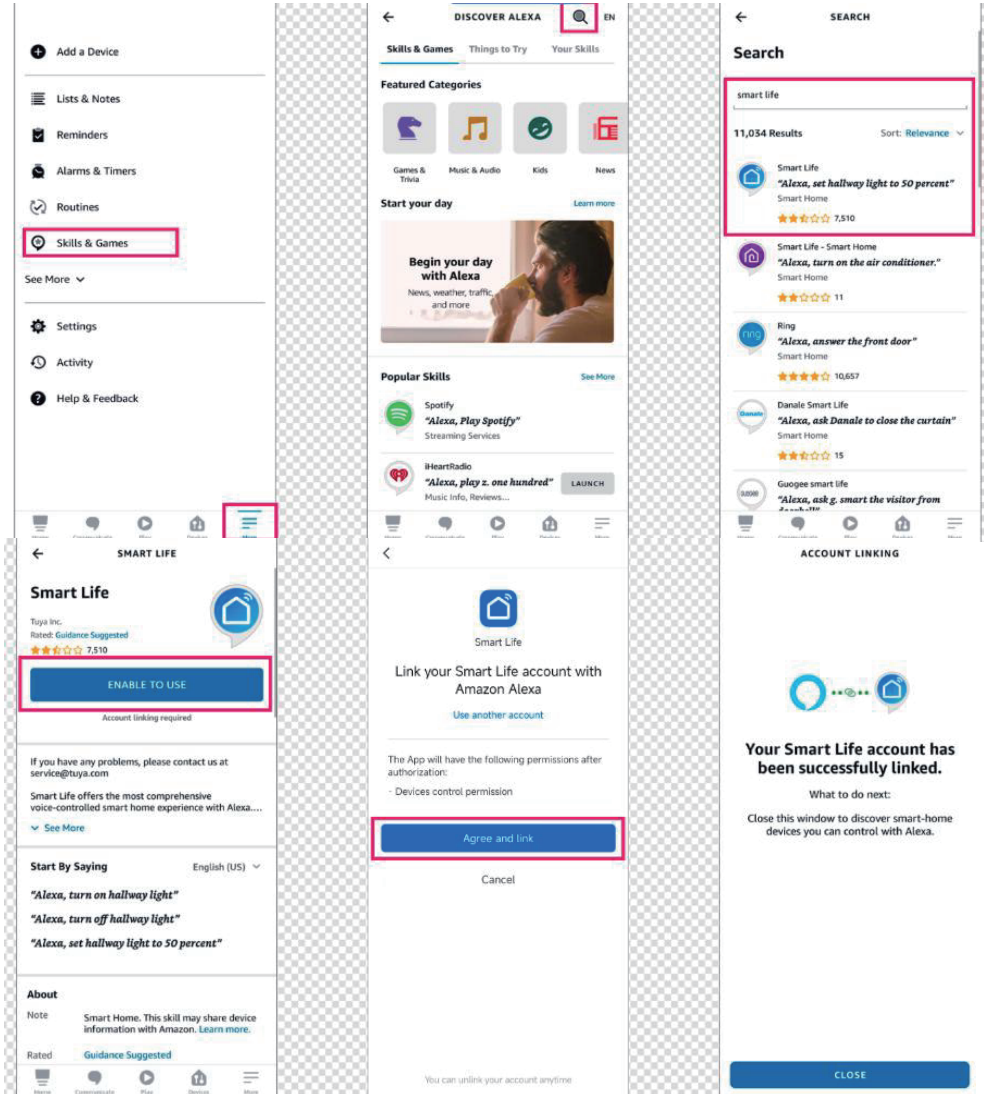


3.4. Use Echo to control smart device

The Echo needs to discover a device before it can control the device. The device discovery page automatically appears after the Smart Life skill is bound. Tap DISCOVER DEVICES to search for devices. You can also say to the Echo: "Alexa, discover devices." Then, the Echo starts searching for smart devices that are paired with the Smart Life app. The Echo reports the search result about 20 seconds later and the Alexa app displays the discovered devices in a list.

NOTE:

You can use the DISCOVER DEVICES feature to discover only the devices that have been added to the Smart Life app. Other unpaired devices cannot be discovered and added to the Echo. If a device is renamed in the Smart Life app, the Echo must discover the device again. Otherwise, it cannot control the device.

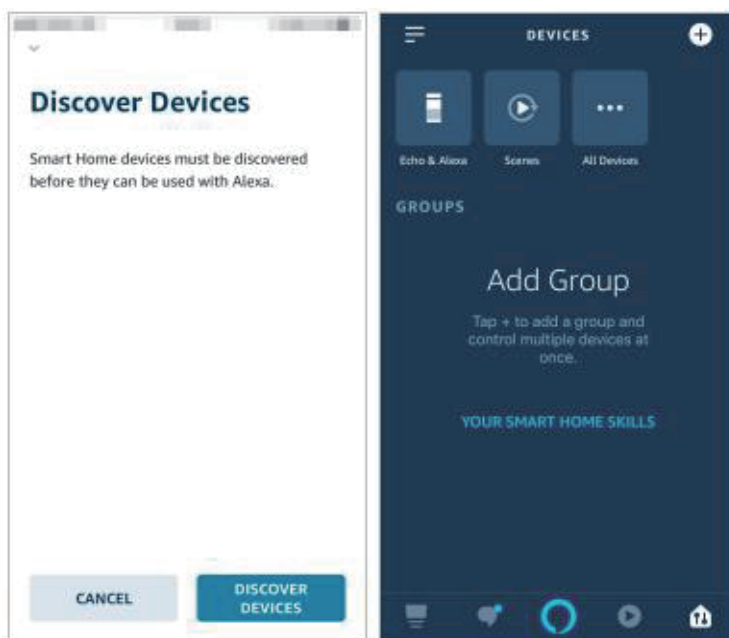

3.5. Use voice commands to control device

Now, you can use the following commands to control a device, such as a bedroom light:

Alexa, turn on/off Fan light. (turn on or off the device) percent. (set the brightness)

Alexa, brighten/dim Fan light. (increase or decrease the brightness)

Alexa, set Fan light to red /green/blue.(set the color)

Alexa, set Fan light to warm white.(set the color temperature)

Alexa, turn on/off Fan.(turn on/off the fan)

4.Works with Amazon Google Home

4.1.Download Google Home app


Log in to the App Store with Apple ID registered in the United States, and search and download Google Home for iOS.

Go to Google Play, and search and download Google Home for Android.

4.2.Link account of Smart Life app

Method 1: Use Google Home app to start linking

- 1.Open the Google Home app and tap + in the top left corner of the homepage.
- 2.Select Set up device > Works with Google.
- 3.Tap the Search icon in the top right corner of the page, and search by Smart Life app name.
- 4.Tap the searched result and then Continue. The Google Home app will wake up the Smart Life app. Tap Agree and link and wait to the end of loading, This way, the Smart Life app is linked with the Google Assistant.

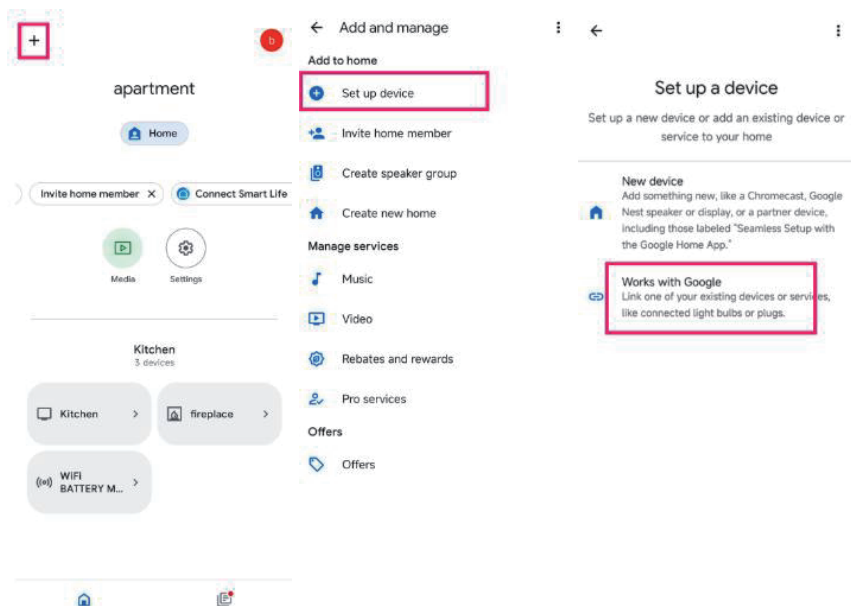

Troubleshooting Guide

If you have difficulty operating your new ceiling fan it may be the result of incorrect assembly, installation, or wiring. In some cases these installation errors may be mistaken for defects. If you experience any faults please check this troubleshooting guide.

	Problem	Suggested Remedy
1	If fan does not start.	☐ Check the main and branch circuit fuses or breakers. ☐ Check the line wire connections to the fan and switch wire connections in the switch housing. ☐ Check the battery in the remote control. ☐ Ensure you are in the normal range of 10-20 feet.
2	If fan sounds noisy.	☐ Ensure all motor housing screws are snug. ☐ Ensure the screws that attach the fan blade bracket to the motor hub are tight. ☐ Ensure the wire nut connections are not rattling against each other or the interior wall of the switch housing. ☐ Allow a 24-hour "breaking in" period. Most noises associated with a new fan disappear during this time. ☐ If you are using the Ceiling Fan light kit, ensure the screws securing the glassware are tight. Check that the light bulbs are also secure. ☐ Ensure the canopy is a short distance from the ceiling. It should not touch the ceiling. ☐ Ensure your outlet box is secure and rubber isolator pads were used between the mounting plate and outlet box.
3	If fan wobbles.	☐ Check that all blades are screwed firmly into blade holders. ☐ Check that all blade holders are tightened securely to motor. ☐ Make sure that canopy and mounting bracket are tightened securely to ceiling junction box and junction box is mounted firmly to ceiling joist. ☐ Most fan wobble problems are caused when blade levels are unequal. Check this level by selecting a point on the ceiling above the tip of one of the blades keeping measure within 1/8 in. Rotate the fan until the next blade is positioned for measurement. Repeat for each blade. If all blade levels are not equal you can adjust blade levels by the following procedure. To adjust a blade tip down insert a washer (not supplied) between the blade and blade holder at the screw closest to the motor. To adjust a blade tip up insert washer (not supplied) between the blade and blade holder at the two screws farthest from the motor. ☐ If blade wobble is still noticeable interchanging two adjacent (side by side) blades can redistribute the weight and possibly result in smoother operation.
4	If light does not work.	☐ Check blue wire from fan to make sure it is connected to hot wire from the house. ☐ Check for loose or disconnected wires in fan switch housing. ☐ Check for loose or disconnected wires in light kit. ☐ Check for faulty light bulbs. CAUTION: Make sure main power is turned off before entering switch housing. ☐ If the fan light shuts off shortly after being switched on it may be due to excessive current demand. Turn off power to the fan and replace the light bulbs with lower wattage bulbs. Turn on power to the fan using the pull chain, wall switch, or remote control (whichever is installed on the particular fan).

Balancing Kit

Use the balancing kit only if excessive fan wobble persists after completing all the steps under “Attaching the Fan Blades” in your Owner’s Manual.

1. Turn on the fan and set it to the speed where the wobble is most noticeable.
2. Turn off the fan and allow it to come to a complete stop. Select one blade and place the balancing clip halfway between the blade holder and the tip, on the trailing edge.
3. Turn the fan back on and observe whether the wobble has increased or decreased. Repeat the test on each blade, noting which one shows the most improvement.
4. Move the clip back to the blade that showed the greatest improvement. Adjust the clip’s position slightly inward and outward along the blade to find the optimal location.
5. Remove the clip and attach a balancing weight to the top of the blade, near the clip position, along the centerline.
6. If the wobble persists, you may further improve the balance by using the clip and additional weights.

