

AUBREY MINI PENDANT ASSEMBLY/INSTALLATION INSTRUCTIONS

Please read carefully and save these instructions, as you may need them at a later date.

CAUTION

Turn off the main power at the circuit breaker before installing the fixture, in order to prevent possible shock.

GENERAL

All electrical connections must be in accordance with local and National Electrical Code (N.E.C.) standards. If you are unfamiliar with proper electrical wiring connections obtain the services of a qualified electrician.

Remove the fixture and the mounting package from the box and make sure that no parts are missing by referencing the illustrations on the installation instructions.

TOOLS REQUIRED

Phillips Screwdriver

ASSEMBLY AND INSTALLATION

Turn off the power at fuse or circuit breaker.

NOTE: This fixture is suitable for mounting on Sloped Ceiling (sloped Angle ≤90°).

- 1. Carefully pull the wires through the STEMS into the FIXTURE CANOPY as shown in Figure 1.
- 2. Thread PIPE NIPPLE(S) into STEM(S) as shown. Attach as many of the STEMs as desired to make the suitable height. This fixture includes (2) 6" STEMS and (2) 12" STEMS which can make 6 adjustable lengths (including fixture): 16", 22", 28", 34", 40", 46".
- 3. Attach the first STEM to SWIVEL located at bottom of FIXTURE CANOPY.
- Attach the last STEM to FIXTURE SOCKET ASSEMBLY and carefully pull excess wires through FIXTURE CANOPY.
- 5. Using (2) JUNCTION BOX SCREWS, securely fasten the CROSSBAR to the JUNCTION box.
- 6. MAKE WIRE CONNECTIONS: Position the FIXTURE under the JUNCTION BOX. Connect the SUPPLY GROUND WIRE to the FIXTURE GROUND WIRE with a wire nut and then secure it to the CROSSBAR with GREEN GROUND SCREW. Using wire Connectors, connect the SUPPLY WHITE WIRE(S) to the FIXTURE WHITE(or RIBBED) LEAD(S); Connect the SUPPLY BLACK (or RED) WIRE to the FIXTURE BLACK (or SMOOTH) LEAD(S). Make sure that there are no exposed wires and wrap all connections with approved electrical tape.
- 7. Fit the heads of the FIXTURE SCREWS through keyhole in FIXTURE CANOPY. Thread (2) LOCKING NUTS onto the ends of FIXTURE SCREWS. Hand tighten to secure fixture to ceiling. Be sure that there are no trapped or pinched wires.
- Locate the GLASS SHADE and pull over the SOCKET. Thread SOCKET RING onto the end of the SOCKET. Hand tighten until snug.
- 9. Install LIGHT BULB (Sold separately).

Turn on the power at fuse or circuit breaker.

IF IN DOUBT ABOUT ELECTRICAL INSTALLATION, CONSULT A LICENSED ELECTRICIAN.

Customer Service: 1-800-558-8700

Figure 1.

