



## CANTERBURY II LED OUTDOOR CEILING LIGHT

Item # 578518

Please read carefully and save these instructions, as you may need them at a later date.

### CAUTION

**WARNING:** For fixtures labeled for outdoor and wet location use, provide a water-tight seal between the fixture and the wall surface by using silicone or similar caulking. Turn off the main power at the circuit breaker before installing or servicing the fixture.

### GENERAL

All electrical connections must be in accordance with local and National Electrical Code (N.E.C) standards. If you are unfamiliar with proper electrical wiring connections obtain the services of a qualified electrician.

Remove the fixture and mounting hardware from the box and make sure that no parts are missing by referencing the illustrations on the installation instructions.

### TOOLS REQUIRED

Phillips screwdriver

### ASSEMBLY AND INSTALLATION

1. Carefully unpack and identify all parts referring to Figure.
2. Attach the MOUNTING STRAP (C) to the OUTLET BOX (E) by using two MOUNTING SCREWS (B).
3. Make wire connections with WIRE NUTS (D)
  - black fixture wire to live supply wire.
  - white fixture wire to neutral supply wire.
  - fixture ground wire to supply ground wire.or attach the fixture ground wires to MOUNTING STRAP (C) with the GREEN SCREW (A) then connect it to the supply ground wire.

4. Carefully tuck the wire and WIRE NUTS (F) into the POST CUP (D).

5. Attach the CEILING FIXTURE (F) to the MOUNTING STRAP (C) by inserting the THREADED PIP (H).

6. Finally, secure the FINIAL (G) into THREADED PIPE (H).

7. Turn on the power at the main fuse or circuit breaker box.

