

of LF, LLC. All Rights Reserved.


ITEM #0423822

# **6-LIGHT CHANDELIER**

MODEL #FD12-048

Français p. 8

Español p. 15

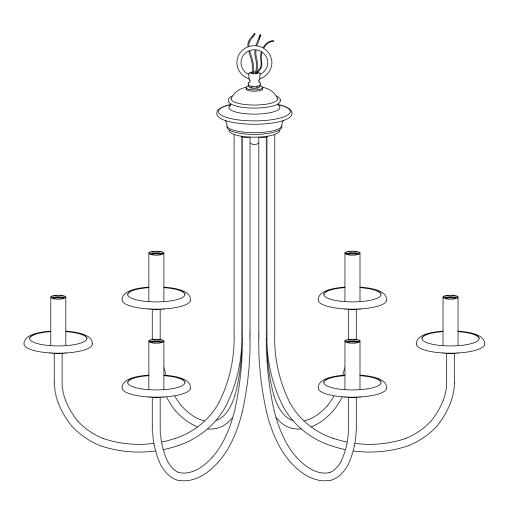

### ATTACH YOUR RECEIPT HERE

Serial Number Purchase Date \_\_\_








Questions, problems, missing parts? Before returning to your retailer, call our customer service department at 1-800-643-0067, 8 a.m. - 6 p.m., EST, Monday - Thursday, 8 a.m. -5 p.m., EST, Friday.

1

EB14538


Lowes.com/portfolio



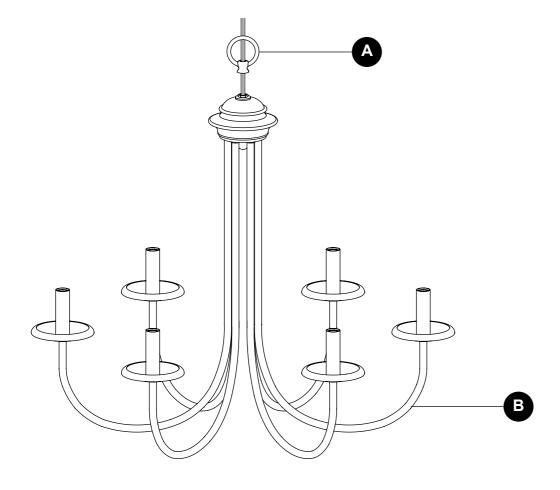

PART	DESCRIPTION	QUANTITY
Α	Flying Ring	1
В	Fixture	1

#### **HARDWARE CONTENTS** (shown actual size)

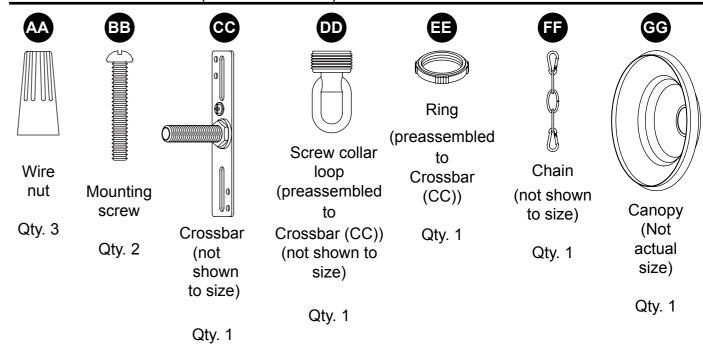



## **SAFETY INFORMATION**

Please read and understand this entire manual before attempting to assemble, operate or install the product.



# **WARNING**

• TURN OFF ELECTRICITY at main fuse box (or circuit breaker box) before beginning installation by removing fuse (or switching off circuit breaker).

#### **CAUTION**

- CONSULT A QUALIFIED ELECTRICIAN TO ENSURE CORRECT BRANCH CIRCUIT CONDUCTOR.
- If in doubt about electrical installation, consult a licensed electrician.

#### **PREPARATION**

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents above. If any part is missing or damaged, do not attempt to assemble the product.

#### **Estimated Assembly Time: 25 minutes**

Tools Required for Assembly (not included): Flathead screwdriver, Phillips screwdriver, Pliers, Electrical tape, Wire cutters, Safety glasses.

Helpful Tools (not included): Wire strippers, Step ladder.

Lowes.com/portfolio




PORTFOLIO.

 
2

#### **ASSEMBLY INSTRUCTIONS**

 Remove ring (EE) from the preassembled screw collar loop (DD). Then, attach crossbar (CC) to outlet box (not included) using mounting screws (BB).
 Note: The threaded nipple should protrude outward.

#### **Hardware Used**

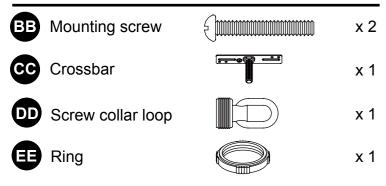




**Note:** The top and bottom section of chain (FF) are required.


Secure the flying ring (A) to the fixture (B). Open the top link of the chain (FF) and attach it to the screw collar loop (DD). Pass the chain (FF) through ring (EE) and canopy (GG). Open the bottom link of the chain (FF) and attach it to the flying ring (A). Then weave the fixture wire and the fixture ground wire through the chain (FF), ring (EE), canopy (GG), screw collar loop (DD) and threaded nipple of crossbar (CC).


Lift canopy (GG) up over crossbar (CC). Adjust the screw collar loop (DD) on the crossbar (CC) as needed until the canopy (GG) is flush against the ceiling once tightened with ring (EE).

Note: Do not install canopy (GG) or ring (EE) yet!

#### **Hardware Used**

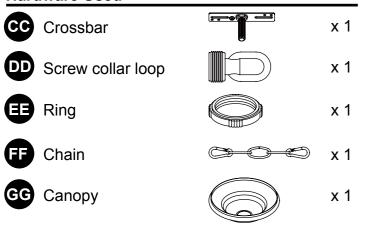

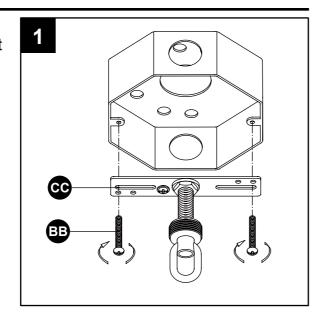

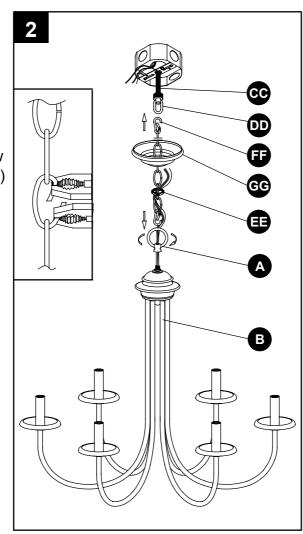

#### ASSEMBLY INSTRUCTIONS

3. Pull out the supply wires and supply ground wire from the outlet box. Strip 3/4 in. of insulation from wire ends.

Make wire connections:

- Connect the smooth wire (marked) from fixture to the black supply wire with a wire nut (AA).
- Connect the ridged wire (unmarked) from fixture to the white supply wire with a wire nut (AA).
- Attach the fixture ground wire to the crossbar (CC) with the preassembled green ground screw. Then connect it to the supply ground wire with a wire nut (AA). Tape wire nuts (AA) and wires together with electrical tape (not included) and carefully tuck wires back into the outlet box.


#### **Hardware Used**




4. Lift canopy (GG) up over crossbar (CC), securing by tightening ring (EE) onto the screw collar loop (DD).


x 3


#### **Hardware Used**

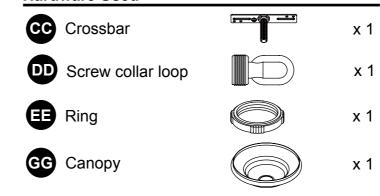

5. Install light bulbs (not included). Use six 40-watt max. candelabra-base bulbs or six 7-watt max. candelabra-base CFLs.

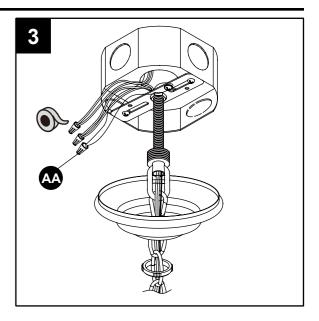

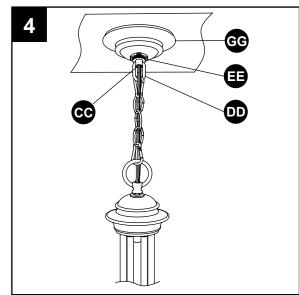

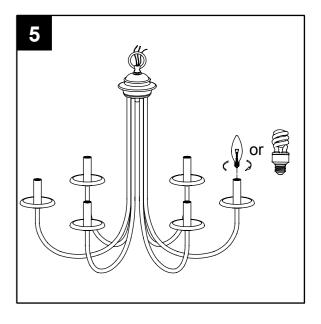

Lowes.com/portfolio



Lowes.com/portfolio



#### **CARE AND MAINTENANCE**

• Shut off main power supply before wiping product with damp cloth or window cleaner. Do not use abrasives.

#### **TROUBLESHOOTING**

PROBLEM	POSSIBLE CAUSE	CORRECTIVE ACTION
Bulb won't light.	<ol> <li>Bulb is burned out.</li> <li>Power is off.</li> <li>Faulty wire connection.</li> <li>Faulty switch.</li> </ol>	<ol> <li>Replace light bulb.</li> <li>Make sure power supply is on.</li> <li>Check wiring.</li> <li>Test or replace switch.</li> </ol>
Fuse blows or circuit breaker trips when light is turned on.	Crossed wires or power wire is grounding out.	Check wire connections.

#### WARRANTY

The manufacturer warrants all of its lighting fixtures against defects in materials and workmanship for one (1) year from the date of purchase. If within this period the product is found to be defective in material or workmanship, the product must be returned, with a copy of the original sales receipt as proof of purchase in the original carton, to the place of purchase. The manufacturer will, at its option, repair, replace or refund the original purchase price to the consumer. This warranty does not cover fixtures becoming defective due to misuse, accidental damage, improper handling and/or installation and specifically excludes liability for direct, incidental or consequential damages. As some states do not allow exclusions or limitations on an implied warranty, the above exclusions and limitations may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state.

#### REPLACEMENT PARTS LIST

For replacement parts, call our customer service department at 1-800-643-0067, 8 a.m. - 6 p.m., EST, Monday - Thursday, 8 a.m. - 5 p.m., EST, Friday.

PART	DESCRIPTION	PART#
AA	Wire nut	375-022000
BB	Mounting screw	109-042600





Printed in China Portfolio® is a registered trademark of LF, LLC. All rights reserved.

PORTFOLIO.

