

MANUAL NUMBER X049076 | REVISION A | ENGLISH (US)

## Storage/Priming Tool

For assisting in priming and proper storage of Magnum® Airless Sprayers.




### Important Safety Instructions

Read all warnings and instructions in this manual and in related manuals before using the equipment. Be familiar with the proper control and usage of the equipment. Save these instructions.



[graco.com/contact](https://graco.com/contact)

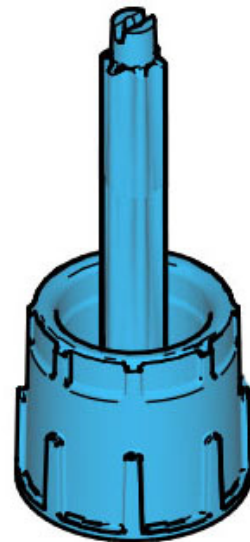

17S980

# C O N T E N T S

---

<b>Related Manuals</b>	<b>3</b>
<b>Translated Manuals</b>	<b>3</b>
<b>Prime</b>	<b>4</b>
<b>Store</b>	<b>6</b>
<b>California Proposition 65</b>	<b>7</b>

## RELATED MANUALS

Additional documents are available to support the operation, repair, and maintenance of the Storage/Priming Tool. Find English manuals and any available translations at [www.graco.com](http://www.graco.com).

Table 1-1: Related Manuals for Storage/Priming Tool Instruction Manual X049076

ENGLISH MANUAL	DESCRIPTION
X017810EN	Magnum® TRUEAIRLESS® Electric Airless Sprayer, Operation
X017686EN	Magnum® TRUEAIRLESS® Electric Airless Sprayer, Operation
X006868EN	Magnum® TRUEAIRLESS® Electric Airless Sprayer, Operation
X046314EN	Magnum® TRUEAIRLESS® Electric Airless Sprayer, Operation
X044107EN	GX™ Electric Airless Sprayers, Operation
X017304EN	GX™ Electric Airless Sprayers, Operation
X052017EN	Electric Airless Sprayers, Operation

## TRANSLATED MANUALS


Additional language documents are available to support all regions where the Storage/Priming Tool is sold. Find any available translations at [www.graco.com](http://www.graco.com).

Table 1-2: Translations for Storage/Priming Tool Instruction Manual

LANGUAGE	MANUAL NUMBER
Dutch	X049076NL
English	X049076EN
French	X049076FR
German	X049076DE
Portuguese	X049076PT
Spanish	X049076ES


# PRIME

1. Unplug the power cord.
2. Turn or lift Prime/Spray valve to the PRIME position to relieve pressure.

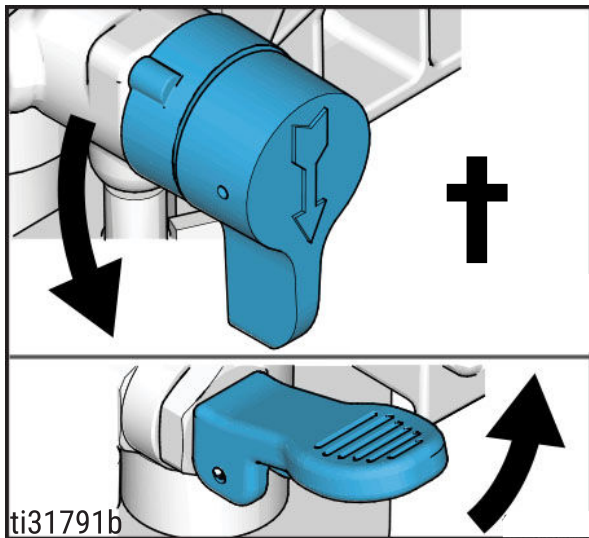

† Prime


3. Remove Pump Armor™ bottle cap. Insert small fluid tube into bottom of Storage/Prime Tool, and thread tool into the bottle.

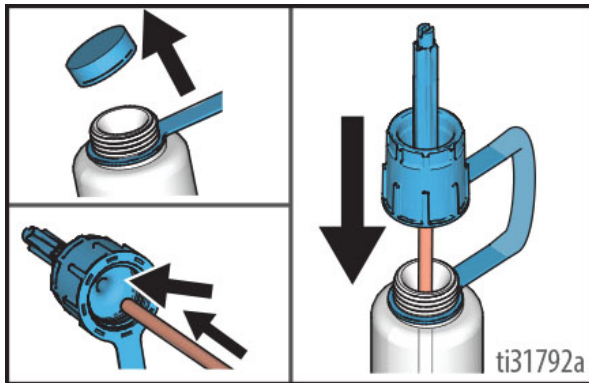


## NOTE:

For best results, make sure the bottle is full of Pump Armor.


4. Remove sprayer suction tube. Insert tool into the inlet and push up firmly until it stops.

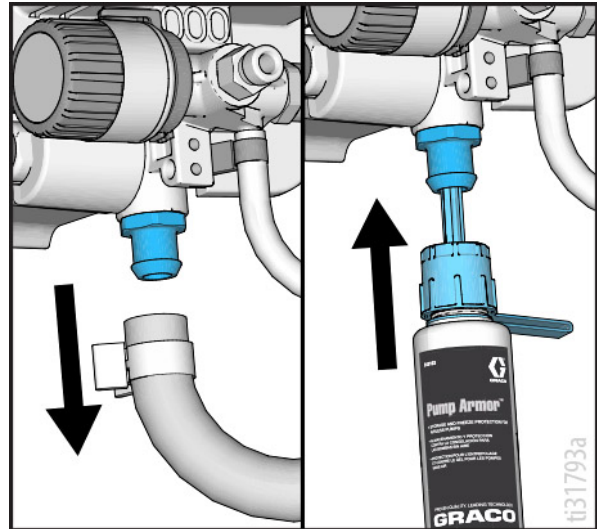


5. Squeeze Pump Armor bottle until Pump Armor flows into the drain tube.

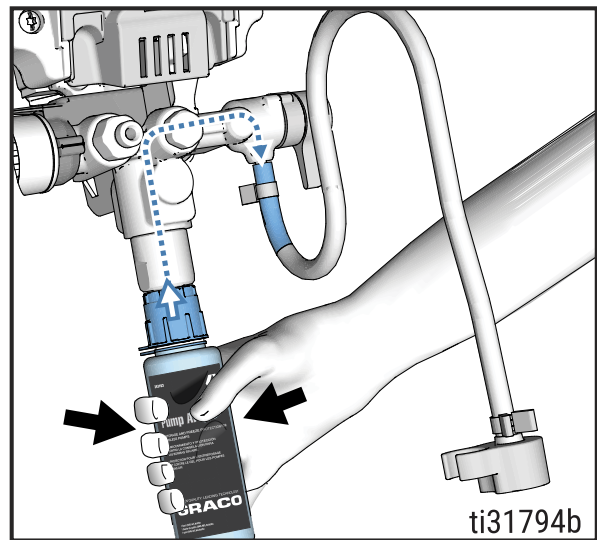

6. Remove tool. Replace and tighten child-proof cap for storage.

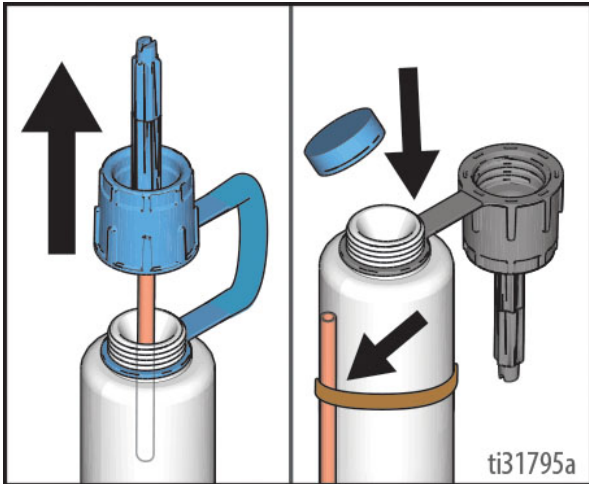


7. Reinstall the sprayer suction tube. Ensure that the tube is snug on the inlet and the clamp is engaged.

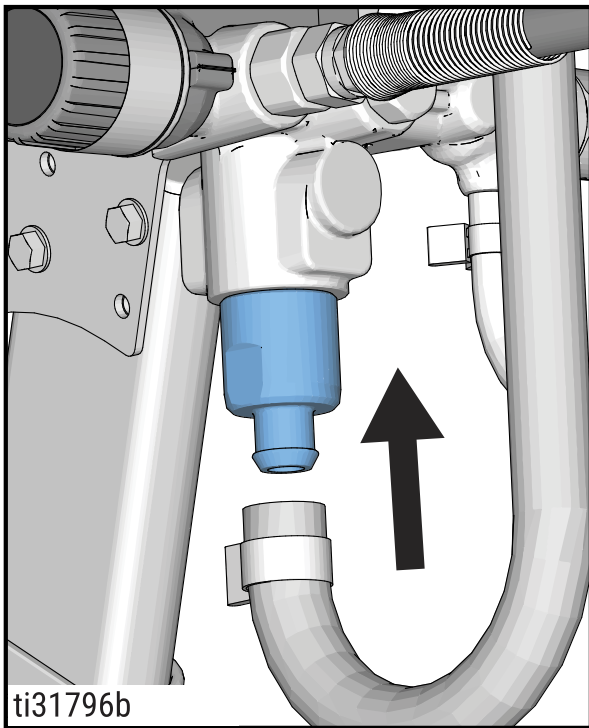


## STORE

1. Perform cleaning procedures found in your Operation Manual. See **Related Manuals**.
2. Remove Pump Armor bottle cap. Unscrew Inlet Screen from suction tube.

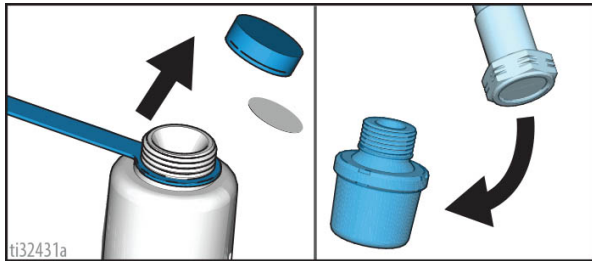


3. Turn or lift Prime/Spray Valve to relieve pressure and place drain tube in a waste pail.

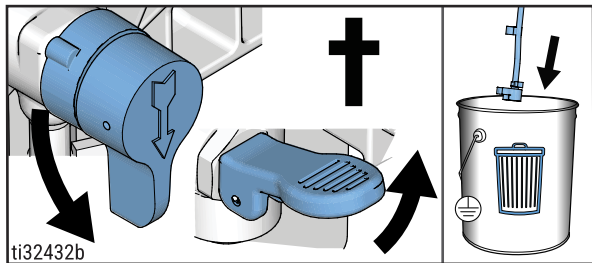


† Prime


4. While holding the suction tube above the sprayer, pour a small amount of Pump Armor into the Suction Tube. Turn Power Switch **ON**.

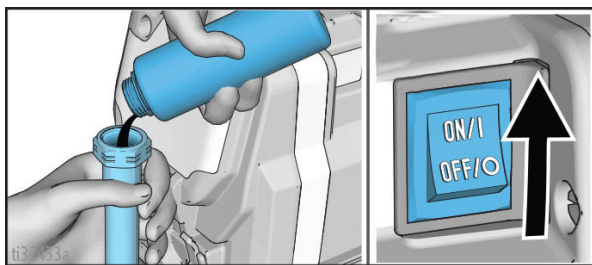


5. When Pump Armor is flushed through the sprayer, turn Power Switch **OFF**. Replace and tighten child proof cap for storage.

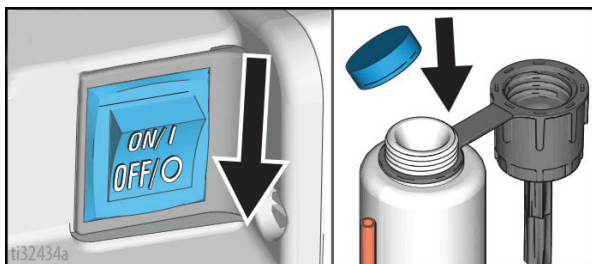

6. Screw Inlet Screen back to suction tube. Ensure that spray gun and hose stay attached to sprayer.

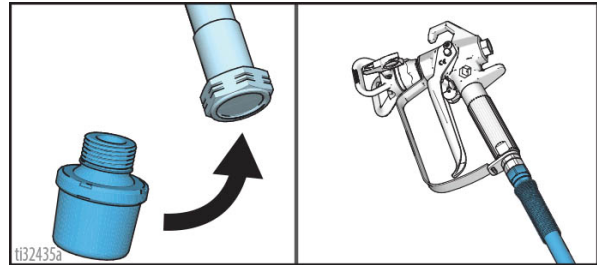

7. Turn or lower Prime/Spray valve to **SPRAY** position for storage.

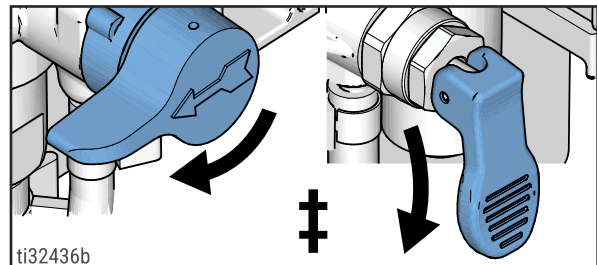


‡ Spray

8. Unplug the power cord.

# CALIFORNIA PROPOSITION 65

---

## CALIFORNIA RESIDENTS

 **WARNING** Cancer and reproductive harm – [www.P65warnings.ca.gov](http://www.P65warnings.ca.gov).



**GRACO INC. AND SUBSIDIARIES | P.O. BOX 1441 | MINNEAPOLIS MN 55440-1441 | USA**

Graco Headquarters: Minneapolis, MN USA | International Offices: Australia, Belgium, China, Japan, Korea |  
Toll Free Phone Number: 1-800-690-2894 (Contractor Division) and 1-800-328-0211 (Industrial Division) | For  
patent information, see [graco.com/patents](http://graco.com/patents)

©2026 Graco Inc. All written and visual data in this document are based on the latest product information available at the time of publication. Graco reserves the right to make changes at any time without notice. All Graco manufacturing locations maintain ISO 9001:2015 certifications, each certified by accredited certification bodies. Original Instructions. This manual contains English.  
Revision A, March 2026