

BR001-145 BEVERAGE REFRIGERATOR

User Manual

SKU

BR001-145BL-USZX

Model Number

BR001-145



support@homyd.com




1-833-632-0897

Contents

Important Safety Instructions	01
Key Components and Structure	04
Installation Guide	05
Door Reversal Instructions	07
Getting To Know Your Beverage Refrigerator	10
Cleaning And Maintenance	12
FAQs	14
Troubleshooting	16
Specs	18
Warranty Policy	19

IMPORTANT SAFETY INSTRUCTIONS

 To reduce the risk of fire, electrical shock, or injury when using your appliance, follow these basic precautions:

1. Read all instructions before using the appliance.
2. **DANGER** or **WARNING**: An empty beverage refrigerator can be hazardous for children or small pets. If disposing of the beverage refrigerator, remove all gasket seals, latches, lids, or the entire door from your unused appliance, and leave the shelves in place so that children may not easily climb inside.
3. Never allow children to operate, play with, or crawl inside the appliance.
4. Never clean appliance parts with flammable fluids or harsh chemicals. The fumes can create a fire or explosion.
5. **DO NOT** store or use gasoline or any other flammable vapors and liquids in the vicinity of this or any other appliance. The fumes can create a fire or explosion.
6. **DO NOT** cover or close ventilation and exhaust holes.

SAVE THESE INSTRUCTIONS

7. **DO NOT** use mechanical devices or other means to accelerate the defrosting process other than those recommended by the manufacturer.
8. **DO NOT** store explosive substances in this appliance, such as aerosol cans with a flammable propellant.
9. This appliance is intended to be used in households and similar applications such as staff kitchen areas in shops, offices, and other working environments; hotels, motels, and other residential-type environments; bed and breakfast environments; catering and similar non-retail applications.
10. **DO NOT** pull on the power cord when disconnecting the power plug of the beverage cooler. Firmly grasp the plug and pull it out from the socket directly.

INSTALLATION OF THE APPLIANCE

11. The appliance is designed for freestanding installation.
12. **WARNING: DO NOT** store or install the appliance outdoors.
13. **CAUTION:** This appliance is designed for storing and cooling beverages or wines. **DO NOT** store perishable food, medicine, or other medical products.
14. Place the appliance on a hard, level floor that is strong enough to support it when fully loaded.
15. To level your appliance, adjust the leveling legs at the bottom of the appliance, if necessary.
16. Allow at least **5cm (2inches)** of space between the back and sides of the appliance, which allows the proper air circulation to cool the compressor and condenser. We **DO NOT** recommend installing the appliance on a rug or carpet.
17. **DO NOT** install the appliance near an oven or other heating source. Direct sunlight may affect the acrylic coating, and heat sources may increase electrical consumption. For best performance, **DO NOT** install the appliance behind a cabinet door or block the base grille. Extreme cold ambient temperatures may also prevent the appliance from performing properly.
18. **DO NOT** use an extension cord with this appliance. If required, use only an UL-Listed, 3-wire grounding type extension cord with grounding plug and outlet, rated at 115V, 15A minimum.

WARNING

We **DO NOT** recommend using beverage cabinets outdoors, as this accelerates aging and malfunctions. Avoid direct sunlight exposure if necessary when using outdoors.

WARNINGS RELATED TO ELECTRICITY

Use a Properly Grounded Dedicated Outlet: This appliance requires a standard **115V/120V AC ~/60Hz** electrical outlet with a reliable three-prong grounding connection (rated 15A or more). Have a qualified electrician check the wall outlet and circuit to ensure they are properly grounded.

Dedicated Circuit Required: Always plug the appliance into its own electrical outlet with a matching voltage rating (per the appliance label). **DO NOT** share the outlet with other electrical appliances. This ensures the best performance and prevents overloading house wiring circuits, which could create a fire hazard from overheating.

Handle the Power Cord & Plug Safely

19. **DO NOT** damage the power cord under any circumstances. Be careful not to damage it when moving the appliance.
20. **DO NOT** plug or unplug power plugs with wet hands.
21. Never unplug the appliance by pulling the power cord. Always grip the plug firmly and pull straight out from the receptacle.
22. Immediately repair or replace all power cords that have become frayed, cracked, abraded, or otherwise damaged. **DO NOT** use a damaged cord.
23. To prevent accidental injury, the cord should be secured behind the appliance and not left exposed or dangling.
24. Voltage Requirements: The beverage cooler uses an AC power supply of **115V/60Hz**. If the voltage fluctuation exceeds the range of **115V ±10%**, it can cause accidents or damage the cooler.
25. Gas Leak Procedure: In case of leaking gas, turn off the leaking valve and open all doors and windows. **DO NOT** unplug the beverage refrigerator yourself, as it may cause a fire. Contact customer support immediately.
26. Grounded Plug Warning: Improper use of the grounded plug may result in the risk of electrical shock.


WARNINGS RELATED TO USE

27. Keep fingers and dangling accessories clear of the beverage refrigerator door to prevent entrapment.
28. This cooler and its packaging are not intended to be played with or used by children. If a child uses the cooler, it must be supervised by an adult to avoid injury.
29. Keep the cooler away from moist, damp, or humid environments and situations so as not to damage the electrical insulation.
30. **DO NOT** use the base, cooler door, etc., as pedal or support.
31. **DO NOT** place heavy objects on top of the cooler to prevent accidental damage or injury.

KEY COMPONENTS AND STRUCTURE

- ① Fan and LED light
- ② Shelves
- ③ Adjustable Front Leveling Legs
- ④ Reversible Double Pane Glass Door
- ⑤ Hinged Cover
- ⑥ Protective Film
- ⑦ Control Panel

(The machine is covered with a protective film that does not affect its functionality.
You may remove it if desired.)

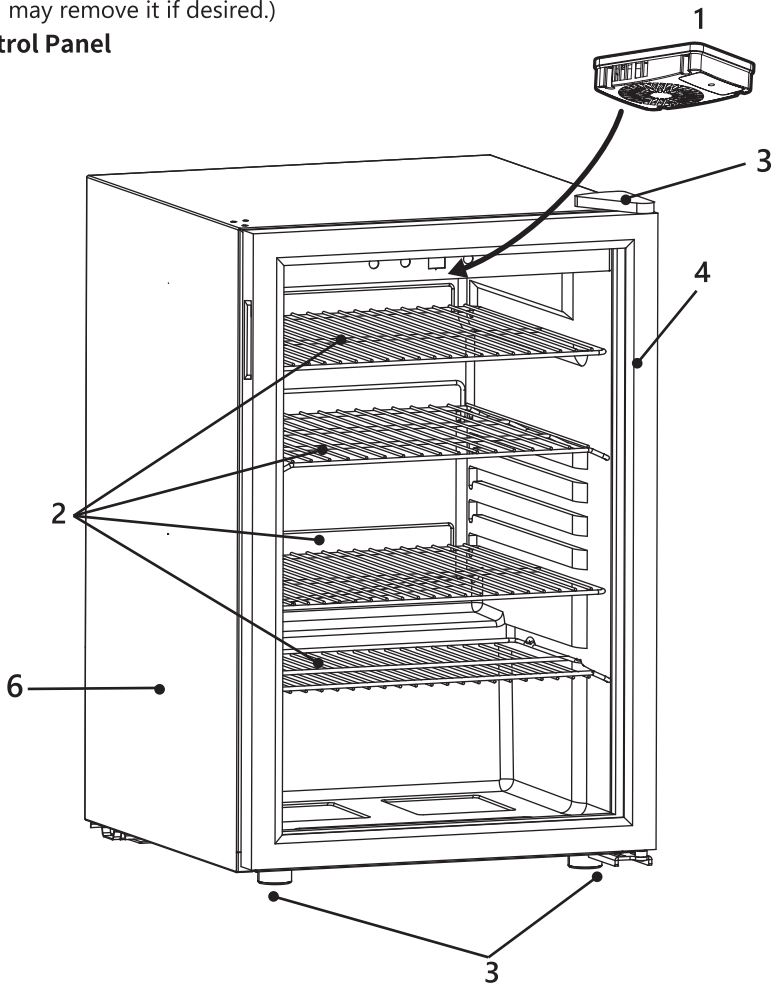

INSTALLATION GUIDE

TRANSPORT

Use two or more people to move the beverage refrigerator. **DO NOT** use the stainless steel handle to move or lift the unit.

BEFORE USING THE APPLIANCE

2. Remove the exterior and interior packaging.
3. Before connecting the appliance to the power source, let it stand upright for approximately **24 hours**. This will reduce the possibility of a malfunction in the cooling system from handling during transportation.
4. To remove any manufacturing dust and residual odors, wipe the beverage refrigerator inside and out with a damp cloth and a solution of baking soda and warm water (2 tbsp. baking soda to 1 qt. water). Wipe away any residual baking soda with a clean, moist cloth. Allow to dry before operating.

When powered on for the first time, run it at no load for 2 hours before adding beverages to ensure the temperature is stable.

INSTALLATION LOCATION

The beverage refrigerator should be placed in a dry, well-ventilated area with convenient access for daily use on a flat, stable surface, with its front leveling legs adjusted to ensure quiet operation and prevent rattling when the compressor activates.

FREESTANDING INSTALLATION

Freestanding installation permits flexible placement of the beverage refrigerator, provided the required clearance space around the appliance is maintained. All installations must ensure adequate ventilation and service access.

Never install or operate the unit in an enclosed area, such as a closed cabinet. Allowance of at least **5cm (2 inches)** of space between the back and sides of the appliance is suggested, which allows the proper air circulation to cool the compressor and condenser.

Suggested open and ventilated space

Sides: **5cm (2 inches)**

Top: **5cm (2 inches)**

Back: **5cm (2 inches)**


IMPORTANT: Never place the unit on soft materials such as foam, plastic, or thick textured carpeting. Make sure the unit and door are aligned. Use the adjustable legs to align the unit or the screws under the triangular bracket cover to align the door.

DOOR REVERSAL INSTRUCTIONS

TOOLS REQUIRED




#2 Phillips
screwdriver

 

0.8cm(5/16-inch)
Socket tool



 Flat head
screwdriver



Hex wrench



TOOLS NEEDED: Phillips screwdriver **#2 or 0.8cm(5/16 inch)** socket tool, thin flat head screwdriver, and hex wrench.


The beverage refrigerator is shipped with the door hinge brackets attached on the right side. The door may be reversed to allow opening from the right side.

When reversing the door hinges, the beverage refrigerator must remain unplugged from the power outlet.


REMOVE METAL SHELVES BEFORE REVERSING THE DOOR.

IMPORTANT: DO NOT place the beverage refrigerator upside down during installation, as this may cause damage to the appliance. Tipping the cabinet backward at an angle of no more than 45° is recommended, or placing the cabinet on a platform to expose the bottom hinges for easy replacement.

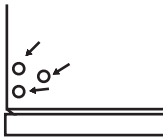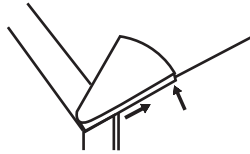
 <p>①</p>	 <p>②</p>
<p>Gently remove the plastic hole insert plugs from the left side of the beverage refrigerator with a thin, flat head screwdriver. Save the plugs for Step 11.</p>	<p>Loosen the triangular bracket cover by pushing it towards the back of the beverage refrigerator and simultaneously pulling it up.</p>

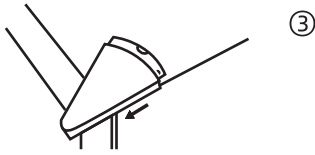


Slide the cover towards the front of the beverage refrigerator and lift off.

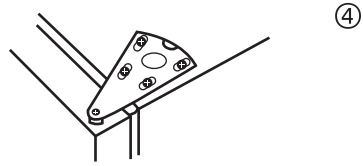


Remove the metal bracket by unscrewing the three screws.

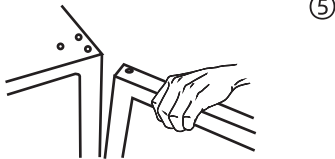


Lift and remove the door.

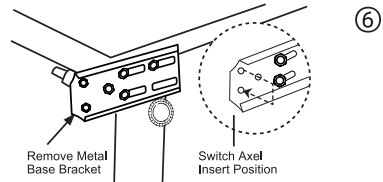



Tilt the unit and remove the bottom metal base bracket with nylon washer. Unscrew the axle insert with a hex wrench. Screw into the opposite hole of the metal base bracket.

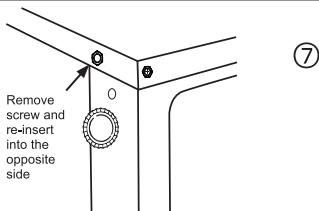

Gently place the beverage refrigerator on the opposite side to complete the door reversal. Remove the screw and re-insert it to the opposite side. Reattach the metal base bracket with the nylon washer new hinge side. Lift the unit to an upright position.

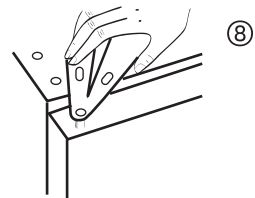

To reattach the door, place the door onto the bottom axle insert. Place the top bracket into the door and align the metal bracket holes over the holes in the top of the unit cabinet. Tighten the three screws to hold in place.

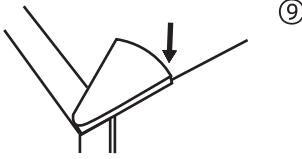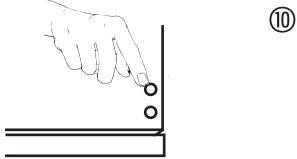	
<p>The rubber gasket should be compressed on all sides of the door. If the gasket is more compressed on one side, the metal bracket position should be adjusted. Make sure the door is level. Once the door position is finalized, securely tighten the screws.</p>	<p>Reinstall the triangular bracket cover by carefully threading the bracket cover onto the metal bracket and pressing it down. Reinstall all plastic hole insert plugs. The re-installation of the plastic hole insert plugs is important to maintain the seal and integrity of the insulation. Extra inserts are included in case the plugs are damaged during removal.</p>

IMPORTANT

After completing the door reversal process, **DO NOT** plug in the beverage refrigerator for **at least 24 hours**. During the reversal procedure, the refrigerant and compressor oil may become mixed.

It is essential to allow sufficient time for these fluids to separate and settle, ensuring the compressor functions properly.

Failure to follow this instruction may result in serious mechanical damage—including potential failure of the compressor or motor—and will void the product warranty.

GETTING TO KNOW YOUR BEVERAGE REFRIGERATOR



Startup

Connect the power cord to a standard wall outlet. **DO NOT** use a GFCI outlet to connect the unit.(Fig.A.) After the connection, you will immediately hear a short beep.

Control Panel

The default temperature is 6°C (43°F). Use the ⊕ and ⊖ buttons to set the desired temperature between the range of 0°C-16°C (32°F-61°F).

The display will flash while the temperature is being set. The numbers displayed on the screen will indicate the current internal temperature value. The digital display reading will adjust as the unit cools.

While the unit adjusts to the new setting, press the ⊕ or ⊖ buttons to view the selected temperature setting.

If there is a power outage, the unit will revert to the last temperature setting once power is restored.

Led Light

Press the  button to turn the LED light on and off.

To extend the lifespan of the LED light and conserve energy, it is recommended to turn on the light only when selecting or placing beverages. At other times, please keep the light turned off.

Loading Beverages

When first filling the beverage cooler to full capacity, we recommend the following steps to effectively cool a large number of beverages.

1. Use the Adjustable Thermostat Control to set the temperature to 6°C (43°F) (also the default temperature).
2. Allow the beverage Refrigerator to cool for a minimum of two hours.
3. Load the beverages.
4. After initially filling with beverages, the internal temperature will rise as indicated on the display.
5. Once the beverage refrigerator has cooled the beverages to 6°C (43°F), use the Adjustable Thermostat Control to select a desired cooler internal temperature, please note that the lowest temperature setting is 4°C (40°F).
6. Allow several hours for the beverage cooler to cool to the desired lower temperature.

Note:

Temperature variations inside the unit are normal. Areas near the door may be slightly warmer than the interior.

Shutdown

If the beverage refrigerator will not be used for an extended period, disconnect it from the power outlet, clean the inside thoroughly, and leave the door open to prevent mildew.

Safety Warning

The appliance is not intended for use by young children or infirm persons without supervision. Young children should be supervised to ensure they **DO NOT** play with the appliance. This beverage refrigerator should not be positioned within a recessed or enclosed cabinet. It is designed for freestanding installation only. This unit is not designed to be installed in an RV, garage, or any outside installation. The surface of the compressor may become hot during normal operation. **DO NOT** touch as this may cause injury.

Other Dangers

Keep the beverage refrigerator away from any combustible or volatile liquids or gases, including gasoline, oil, alcohol, paint, paint thinners and solvents. Such chemicals should never be stored in the unit.

CLEANING AND MAINTENANCE

DISCONNECTING THE BEVERAGE COOLER

Unplug the power plug from the socket to disconnect the cooler.

CLEANING THE BEVERAGE REFRIGERATOR

Dusting under, behind, and around the cooler will improve the cooling effect and save energy. The interior of the cooler should be cleaned to avoid any odors. Follow the cleaning procedure below.

1. Unplug the cooler and empty the beverages from the beverage cabinet.
2. Wipe the door seal and the condenser (rear of the unit) clean with warm water.
3. Use soap and warm water to clean the cooler.
4. Reconnect the cooler when the cooler is clean and dry.

Note: **DO NOT** use hard brushes, wire brushes, abrasives, organic solvents, boiling water, acid or alkaline items, as this may damage the surface and interior of the cooler.

TO DEFROST

1. Remove the drinks. Set the temperature to the highest setting until the compressor turns off. Unplug the unit to melt the frost. (**DO NOT** use mechanical devices or non-manufacturer-recommended methods to speed up defrosting.)
2. Ensure the internal drain (located at the middle back of the lower shelf) is unclogged.
3. Melted frost will flow through the drain into a drip pan atop the compressor, where heat evaporates. If excess water accumulates, manually empty the drip pan.
4. Clean the interior with lukewarm water and a soft cloth, dry thoroughly, then reset the temperature to 6°C (43°F) and cool for 2 hours.
5. Reload beverages and adjust to your desired temperature.

Note:

DO NOT use hot water, harsh detergents, gasoline, kerosene, solvents, acids, or anything flammable to clean the beverage refrigerator. These can damage the paint and degrade the plastic components.

If any replacement components are required, they must be obtained from the customer service department. This ensures the correct replacement components are provided and minimizes the risk of possible ignition due to incorrect parts or improper service.

PROTECT FROM MOISTURE

Heavy moisture in the environment can cause degradation of the insulation, as well as rust in the cabinet, compressor, and/or power supply.

DO NOT spray the beverage refrigerator with water.

PROTECT FROM HEAT

Place the beverage refrigerator away from heat sources or direct sun. **DO NOT** operate the beverage refrigerator outdoors or in an environment with high temperatures or humidity, such as garages, attics, or outdoor patios. The temperature variances will create condensation on the glass door.

DO NOT cover the beverage refrigerator with tarps or other items while operating, as this may cause overheating.

NORMAL SOUNDS

The compressor and refrigerant flow will generate operational noises, including:

Gurgling sound: Refrigerant circulating through coils.

Humming noise: Compressor operation (louder briefly during startup).

Cracking/popping: Maternal expansion/contraction due to temperature changes.

Fan noise: Air circulation even for cooling.

Note: Noise perception varies by environment. These sounds comply with international standards and are unavoidable.

1. Is this rated for outdoor use? I see pictures in an outdoor island.

This beverage cabinet is primarily designed for indoor use. You can place it on a balcony or near a door, but please avoid using it in open outdoor environments to ensure its proper operation and longevity.

2. Has anyone installed this under the counter? And does that void the warranty?

This model is not designed for under-counter installation. Placing it under the counter may affect its performance.

3. Will the beverage refrigerator go to 34 degrees?

The temperature of the beverage refrigerator can be set between **0°C (32°F) and 16°C (61°F)**. However, due to the influence of the internal and external environment, there may be slight variations in the actual displayed temperature.

4. Is this unit quiet enough to keep in a bedroom?

This beverage refrigerator features a low-noise design, so it's quiet enough to put in your bedroom or any other quiet environment without disturbing your sleep.

5. Is it possible to change the direction of the door?

The orientation of the beverage cabinet door can be changed. Our manual contains detailed tutorials.

6. Is it normal for the sides to be hot?

It is normal for the sides of the unit to feel warm. This is a standard heat dissipation phenomenon. The steel plates on both sides serve as pathways for the condenser pipes, which can cause them to heat up.

7. What are the warranty specifications?

We provide a **12-month** warranty and lifetime technical support for this refrigerator. If you would like to learn more, please contact our customer service team.

8. Can the shelves inside the refrigerator be moved?

The shelves inside the refrigerator are adjustable and can be moved.

9. Does it keep food securely cold?

Hi there, our beverage refrigerator is primarily designed for storing drinks, especially for chilling wine, beer, and other beverages. It features different temperature settings to keep drinks at their ideal temperatures.

It can also be used to store some food items that **DO NOT** require specific temperature settings.

However, for food items that need to be frozen, we recommend the safest practice is to use a freezer that is specifically designed for food storage.

TROUBLESHOOTING

Problem	Possible cause(s)	Solution
The appliance does not operate	There is a power failure, or the appliance is not plugged in	Ensure the appliance is plugged in and the power outlet has power
	A house fuse has blown, or the circuit breaker is tripped	Replace the broken fuse or reset the breaker
The appliance is not cold enough	The appliance is placed too close to a heat source	Adjust the temperature. Keep the appliance away from sunshine or other heat sources
	The door is opened too often, or the door is not closed completely	Close the door tightly, and DO NOT open the door too frequently or for a long period of time
	The door gasket does not seal properly	Ensure the door gasket is not loose
	The refrigerant hasn't completely settled.	Let the unit stand upright for 24 hours before plugging it in (to stabilize after transportation).
	The temperature wasn't set correctly for the first use.	After powering on, set the temperature to 6°C (43°F) (default) using the adjustable thermostat. Before fully loading beverages, pre-cool the unit for 2 hours at the default temperature. If it does not resolve the issue, please check if the display still works and contact the after-sales team for assistance.
The appliance frequently turns on and off	The ambient (room) temperature is too low or too high	Decrease or increase the ambient (room) temperature
	A large amount of content has been added to the appliance	To minimize internal temperature fluctuation, DO NOT overstock the appliance
	The door is opened too often, or the door is not closed completely	Close the door tightly, and DO NOT open the door too frequently or for a long period of time
	The door gasket does not seal properly	Ensure the door gasket is not loose. It is normal for the fan to come on and turn off to circulate the air inside of the unit for even temperature distribution and to save energy

Problem	Possible cause(s)	Solution
The door does not close properly	The appliance is not level	Make sure the appliance is on a hard and level surface. Avoid placing the appliance on a carpeted or soft surface
	The door was reversed and not properly installed	Reinstall door
	The shelves are out of position	Correctly install the shelves
Condensation builds up on the glass door	Ambient temperature or humidity is high	Lower the room humidity by a dehumidifier or air conditioner
The machine is not cooling at all	The refrigerant hasn't completely settled	Let the unit stand upright for 24 hours before plugging it in (to stabilize after transportation)
	The temperature wasn't set correctly for the first use	After powering on, set the temperature to 6°C (43°F) (default) using the adjustable thermostat. Before fully loading beverages, pre-cool the unit for 2 hours at the default temperature
	The door is not closed properly	Check the door seal for any damage. If not, close the door tightly and wait for more than 2 hours. If it does not resolve the issue, please check if the display still works and contact the after-sales team for assistance

SPECS

SKU	BR001-145BL-USZX
MODEL	BR001-145
VOLTAGE	115V~60HZ
RATED CURRENT	1.3A
REFRIGERANT	R600a,0.81Oz/23g
FOAMING	CYCLOPENTANE
DIMENSIONS(L×W×H)	20.2*20.9*31.5 in
NET WEIGHT	56.8 LBS
GROSS WEIGHT	67.9 LBS

WARRANTY POLICY

1-Year Limited Warranty

Toll-Free Call: 1-833-632-0897 Mon to Fri, 9AM - 6PM (ET)

Email: support@homyd.com

Thank you for choosing our products. We provide a 1-Year Limited Warranty for items purchased through our official channels. Please kindly note that this warranty is for the original purchaser and is non-transferable. If you purchase from an unauthorized seller, please get in touch with them directly.

We are committed to ensuring that our products are free from defects in materials and workmanship for one year from the date of purchase, as long as they are used under normal household conditions and maintained according to the User Manual. **Please note that certain conditions and exclusions apply:**

Should you find any defects in the original product or its non-wearable parts, we will be happy to repair or replace the item within one year of purchase. If a replacement is necessary, the warranty period will continue from the original purchase date. Please be aware that normal wear and tear or damage due to mishandling, accidents, or failure to follow instructions are not covered. However, replacement parts are available for purchase. Feel free to contact us for more information.

Please also note that this warranty does not cover damage caused by exposure to liquids or foreign materials, unauthorized repairs or modifications, or use in commercial or non-household environments (unless specified for commercial use).

If you encounter any issues with your product, we are here to help. You can reach us by phone at **1-833-632-0897** or email us at **support@homyd.com**. For certain product categories, we also offer the option to upgrade your warranty to our VIP service.

Our friendly phone support team is available from **Monday to Friday, 9 AM - 6 PM (ET)**. To assist you more efficiently, please have your product with you when you call. We aim to respond to emails within 24 business hours. If you don't receive a reply after sending us an email within this time frame, kindly check your spam folder to ensure you don't miss our response.

In addition to the one-year warranty, we also offer lifetime technical support. After the warranty period, service is still available at an additional cost. Please don't hesitate to contact us with any questions or concerns.

SKU: BR001-145BL-USZX

