
 


Installation instructions

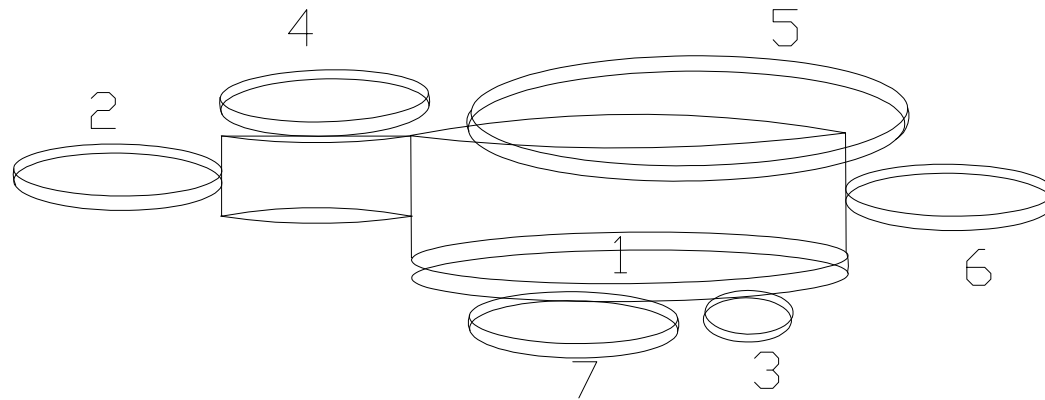

AC110-240v
Input Voltage



Please note: if plugged in reverse,

the light will not Work!!!

Remember: Please power on and test then installation.

If plugged in reverse, the light will not work!!!

remote control does not contain batteries,

it can be used directly by installing batteries