

COASTER[®]
FINE FURNITURE

103391

**EXTENSION LEAF VENEER
DINING TABLE**

**ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE**



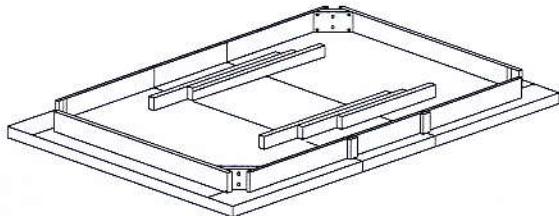
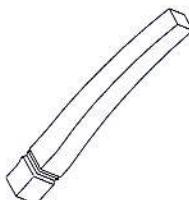
 
www.coastercompany.com

ASSEMBLY TIPS :

1. Remove hardware from box and sort by size
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instruction in the same sequence as numbered to assure fast & easy assembly

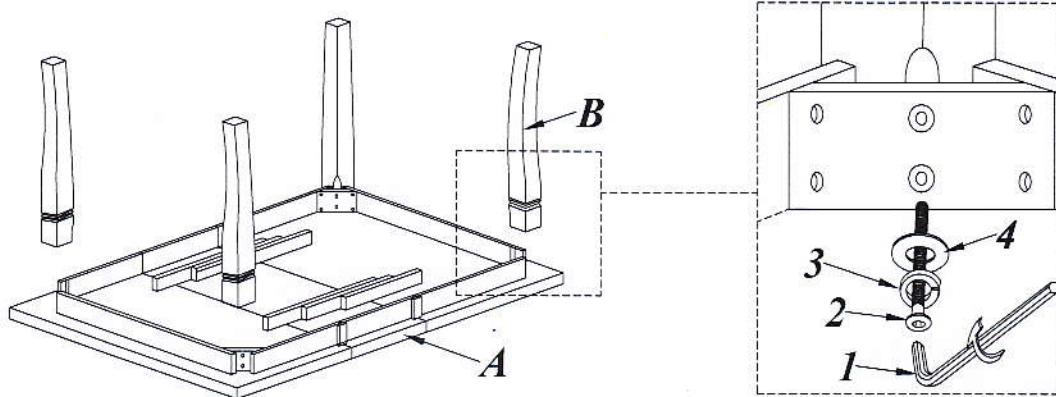
WARNING!

1. Don't attempt to repair or modify parts that are broken or defective.
Please contact the store immediately.
2. This Product is for home use only and not intended for commercial establishment.

PARTS IDENTIFICATION**A TABLE TOP****1 PC****TABLE LEG****4 PCS****HARDWARE IDENTIFICATION****1 ALLEN WRENCH 1 PC****3 LOCK WASHER 8 PCS****2 BOLT 8 PCS****4 FLAT WASHER 8 PCS**

STEP 1

Place table top up side down on soft surface. Align and fasten all legs to table top using bolt, lock washer and flat washer and tighten with Allen wrench.

**STEP 2**

- 2.1 Flip table over using two people to lift and flip this table.
- 2.2 To remove the extension leaf. Unlock all locks on the underside of the table and pull apart. Remove the extension leaf, push table together making sure pins line up and table closes tightly, then lock all locks on the underside of table.

