


Setting up the Camera's Home/Default Point(s)

CAMERA INSTALLATION


 \bigcirc

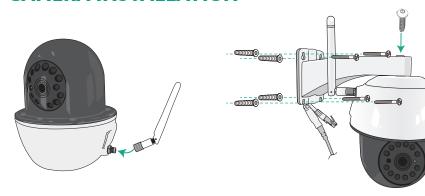

Screw the Antenna clockwise into the rear of the camera.

Secure the multi-position Camera Bracket to a stable surface or wall using the four screws. If needed, four

NOTE: Avoid pointing a camera directly at any bushes or tree branches or objects that may naturally move due to winds.

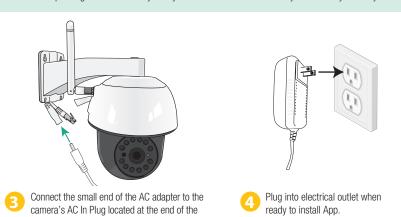

Recommendations for best system performance:

- **iOS 9.0** or above.
- Android: Android™ smartphone or tablet (version 4.4x or above).
- **Storage:** Class 10 MicroSD memory card (up to 128 GB).
- **Bandwidth:** 512Kbps or above upload/download speed suggested.



Outdoor Camera

1080p Outdoor Pan/Tilt Security Wi-Fi Camera with Siren

IN THE BOX



Model AWF53

QUICK START GUIDE

BACK cover



Front cover

REMOTE VIEWING

DEVICE SETUP

2 Plug camera into an electrical outlet (allow the camera up to 90 seconds to boot up).

From your smart device, DOWNLOAD and INSTALL the free **ALC SightHD App**.

On your device, open the Settings App. Tap Wi-Fi and under Choose A Network, select the HD-XXXXXX Network (X

represents the numbers located on the DID barcode sticker

- on the bottom of your camera). If asked for a password, enter, "12345678". Tap Join/Connect.
- Now Launch the ALC SightHD App and the Setup Wizard will appear.
- 6 Tap + to start the Wizard and select WiFi Cameras.
- iOS Only: Once the screen indicates the camera is connected, tap Live View.
- iOS Only: Once the camera is found, the screen will show a Live View briefly before moving to a setup screen.

NOTE: Screen shots and icons may vary due to continuous updates to App and software development.

FREE APP DOWNLOAD At the next screen enter a new password/security code and remember it or write it down. Tap Wi-Fi Setting or OK. Select your home network from the menu, and then enter your home network's Wireless Password. Tap OK. 11 Android Only: Tap Live View. Tap the Play icon for live video.

LIVE VIEWING

LIVE VIEW

Android: Tap the Play icon. **Apple:** Tap on the preview picture.

> PINCH AND ZOOM: To zoom in or out, use the simple pinch and zoom gesture with this app.

PAN AND TILT: To move the camera, simply slide your finger across the Android or Apple Device's screen up and down or from side to side.



FEATURES

Tap to Snapshot screen images in Live View. Images automatically save to smartphone's camera roll or gallery.

On or Off in the Live View mode.

Tap to RECORD. Recordings save to MicroSD card (pre-installed) and the Cloud if it

Tap to RETURN to the main page.

Tap to turn volume

Tap to Set the Record Point or to Go to the

LIVE VIEW RECORDING on MicroSD CARD*

- Insert a MicroSD Card into the MicroSD 1 Card Slot. You can also record/upload files automatically onto the Cloud, if set
- Manually RECORD video from Live View by tapping Record icon. The App will record for one minute.



NOTE: Do not submerge camera in water. STRANGULATION HAZARD: Infants have STRANGLED in power cords. Keep power cords

more than 3 feet away from cribs. When using your equipment, always follow basic safety precautions to reduce the risk of fire,

electric shock and injury to persons. Illustrations are for reference only. Actual product specifications may vary.

For additional precautions and product information, please see owner's manual at www.ALCWireless.com/support

Motion Recording

If set to Software Sensitivity when motion is detected on the video camera, the camera will automatically record for one minute and then stop recording. To change the DETECT MODE, go to **Edit Setting**, tap **Setting** and then tap Advanced.

The Advanced Settings will ask for the admin password; default password is 123456. Select Sensitivity Setting to change.




- 1 Tap Edit Setting, tap Setting 🚳 and then EVENT 📋 icon.
- Select the Start and Stop date and time on the Select Event Filter and tap **OK**.
- 3 Tap the FILE that you want to playback from the list.




ADVANCED SETTINGS

On the Home Page (not Live View) Tap **EDIT SETTING** at the bottom of the screen, then tap SETTINGS icon and then tap **ADVANCED** (the default password is 123456) to see the Advanced Feature options:

- Sensitivity SettingVideo Setting
- Cloud Setting
 And much more
- SDCard Setting

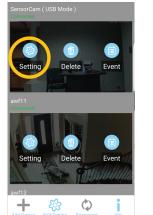



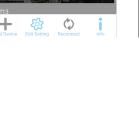

For detailed installation and setup, please refer to the Model AWF53 complete User's Guide available on our website: www.ALCWireless.com/support



