


Double-seat Sofa

Assembly Instructions

A163-001 (P2)

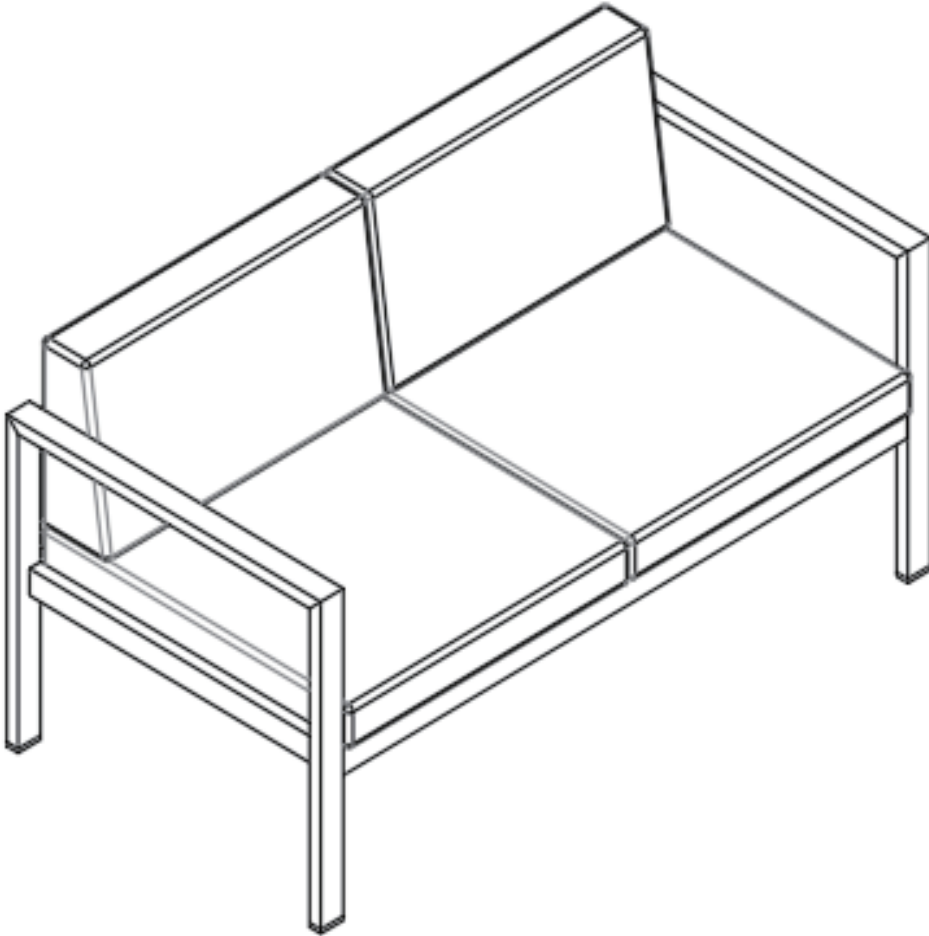

KINDLY NOTICE - Please read these instructions carefully before starting assembly

HASSEL-FREE WARRANTY

We proudly provide 1-YEAR warranty, if there is any questions with the products, please feel free to contact with us.

✉ Email: support@patio-outdoor.com



The assembly will be easier with 2 people while 1 person could also do the job.




Around 15 MIN ASSEMBLY

Parts List







If you have any issue with our products, such as missing parts, please email: support@patio-outdoor.com

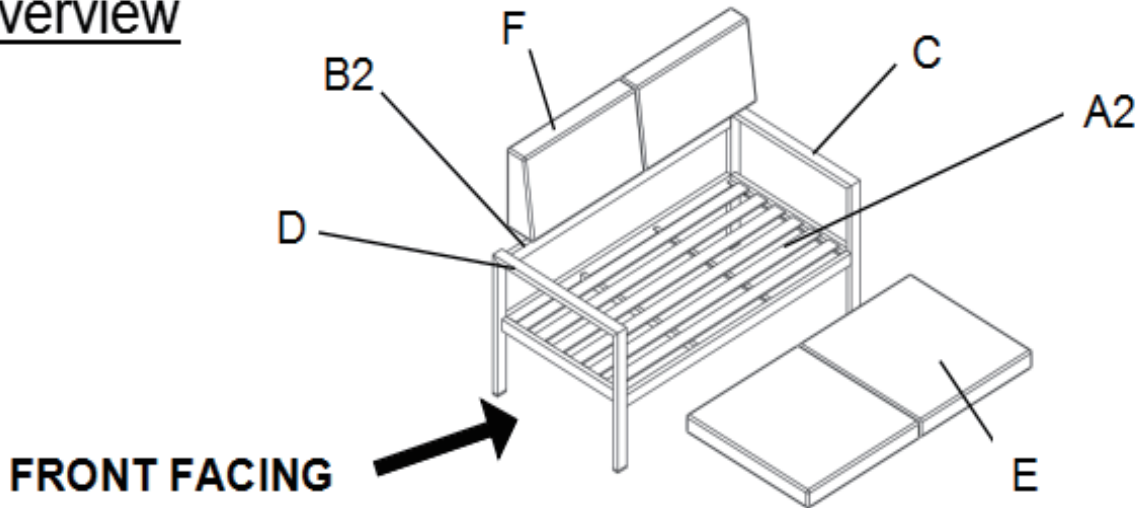Parts required





  
Overview



Components

Label	Picture	Description	QTY
A2		Seat	1
B2		Back Strip	1
C		Left Leg	1
D		Right Leg	1
E		Seat Cushion	2
F		Back Cushion	2

Hardware & Tools

Label	Picture	Description	QTY
①		Bolt (M6*20MM)	10
②		Bolt (M6*20MM)	12
③		Allen Key(4MM)	1
④		Allen Key(5MM)	1
⑤		Chair Connector	6


Note: The quantities above are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

Assembly

If you have any issue with our products, such as missing parts, please email: support@patio-outdoor.com


Step1

Use Allen Wrench(④) to screw bolt(②) and connector(⑤) on to the Left leg(C). Do not fully tighten the Bolts.

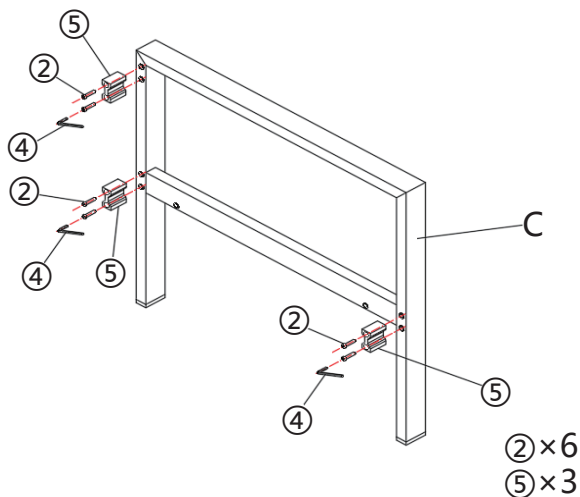


Step3

Use the Allen wrench(③) to pry out the plug inside the edge pipe of the Seat(A2) (The rubber plug is useless) .

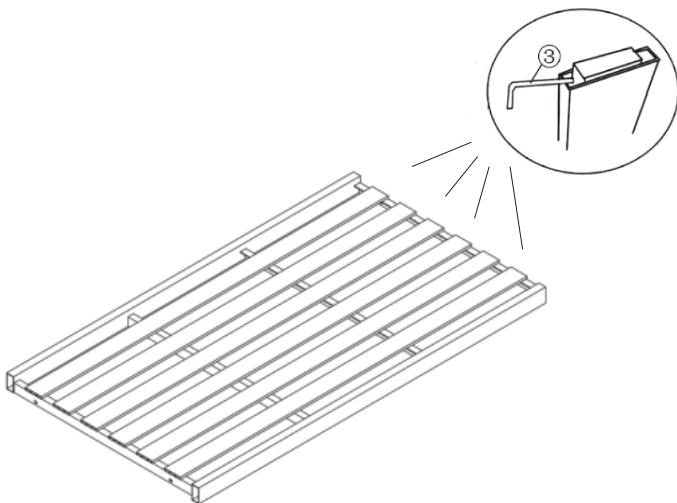

Step2


Again, use Allen Wrench(④) to screw bolt(②) and connector(⑤) on to the Right leg(D). Do not fully tighten the Bolts.

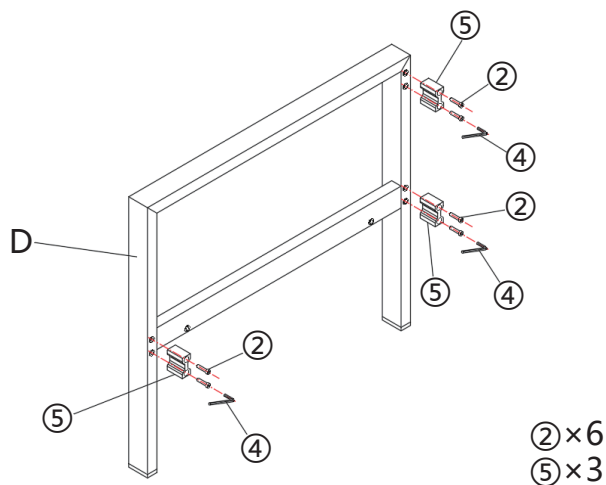

Step4

Step4.1: Use Allen wrench(③) to screw Bolt(①) in order to connect Seat(A2) and Left Leg(C) together.

Step4.2: Use Allen wrench(③) to screw Bolt(①) in order to connect Back Strip(B2) and Left Leg(C) together. Do not fully tighten the Bolts.

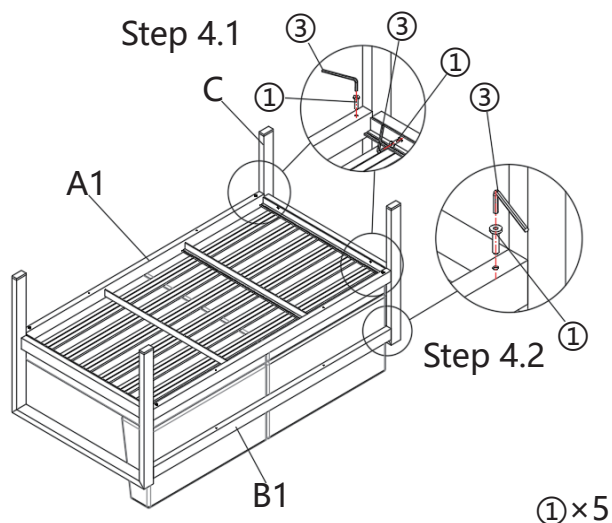


Assembly

If you have any issue with our products, such as missing parts, please email: support@patio-outdoor.com

Step5


Step5.1: Use Allen wrench(③) to screw Bolt(①) in order to connect Seat(A2) and Right Leg(D) together.

Step5.2: Use Allen wrench(③) to screw Bolt(①) in order to connect Back Strip(B2) and Right Leg(C) together.
Do not fully tighten the Bolts.
Do not fully tighten the Bolts.

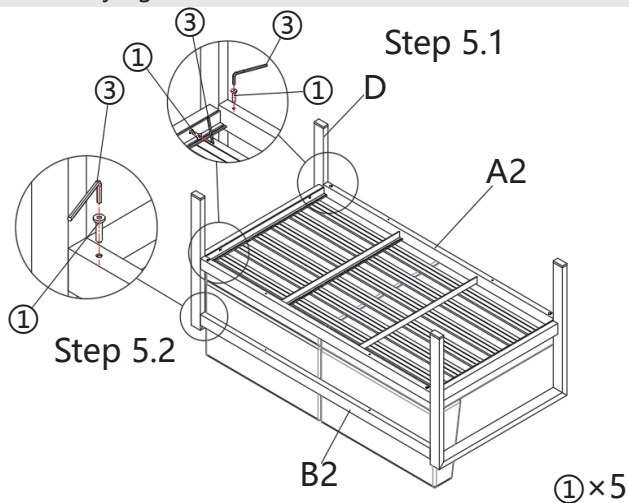

Step6

Please cushions in your preferred position.

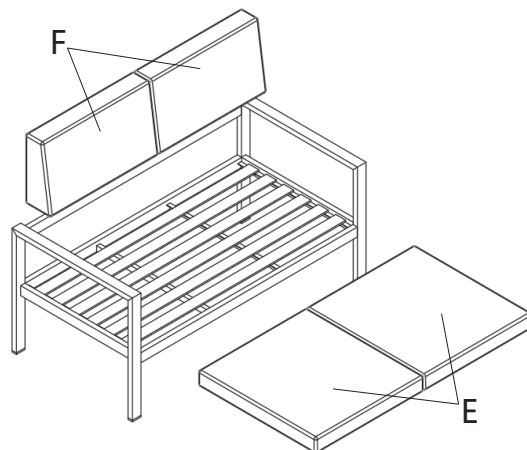

Step7

Stand the Chair.

Place the Chair on a LEVEL SURFACE.

Inspect it and make sure all parts are adequately connected.

Gently and carefully sit onto the Chair.

This will help to align all parts at all joints. Then

get off the Chair, and in a sequential manner,

proceed to tighten all Bolts. When tightening the Bolts, tighten sequentially.

DO NOT tighten any Bolt fully and then move on to the next one.

This may cause the frame to warp.


If there are still wobbles, loosen the Bolts and execute this same process.

Note: This step is done best with the assistance of a second adult.

Your Chair is ready for use.

This Chair can only be used on a flat, level surface.

This Chair can only be used on a flat, level surface.

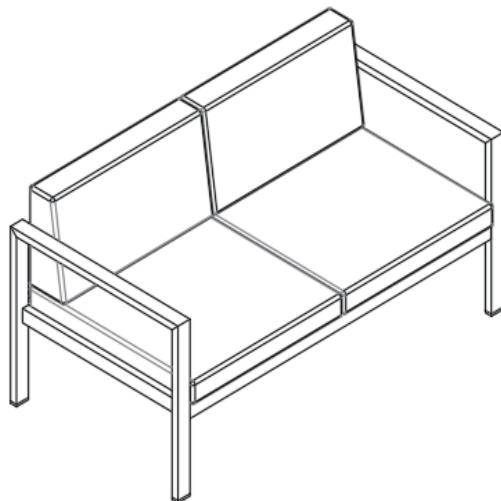



WARRANTY

**Outdoor furniture
1-year Warranty Program**

For a period of one (1) years after date of purchase, the Manufacturer will either repair or replace defective components in accordance with this Limited Warranty. This warranty is between the Manufacturer and the original purchaser and is valid only when accompanied by the original purchaser's sales receipt showing original date of purchase

The manufacturer or its authorized dealer can accept or reject warranty claims based on its findings. This warranty applies in normal residential use only and is not intended for commercial use. The Manufacturer can make substitutions as required of materials, components, and sub-components of comparable value and utility. This warranty is limited to product repair or replacement (to be determined solely by the Manufacturer). Warranty return is limited to only the single affected component.

This limited warranty covers only manufacturing defects and does not cover normal wear and tear, damage due to acts of nature (such as, but not limited to freezing or high winds), abuse or misuse, including chemical damage from suntan oil or other chemicals, exposure to extreme heat or cold, abrasion or excessive weight. This product is intended to be used in standard installations only. This warranty is void if the product is not used for its intended purpose. The Manufacturer disclaims liability for any aspect of installation and any inconvenience caused by a defective part of a component

Certain items are not covered by this warranty. These include, but are not limited to the following:

1. Components subjected to abuse, including abuse intended to simulate failure
2. Damages caused by retailer, shipper or installation error (such as scratches, dents, tears, chips, etc.)
3. Any part that only shows normal wear and tear on the surface, including debris, scratches, or material stretching and stitching.
4. Tears, punctures, scratches or any damage caused by improper installation or use.
5. Damage to frames/welds resulting from improper assembly or exposure to water and/or sub-freezing temperatures is not covered.

**** If you need after-sales service, please provide the original purchase record and a brief description of the problem. Please also provide your email address or mobile number***