 
### TOOLS REQUIRED



Wrench

(Included)



2 - People Recommended

#### **ASSEMBLY RATING**



EASY DIFFICULT

The Assembly Rating is a 5-point system showing the level of effort needed to assemble a specific product.

VERSION # 20-09-25



Are you missing anything?  Double-check all parts, hardware and accessories listed on Page 6 are accounted for.	Check out our Quick Tips!  We recommend reviewing the pre-assembly handouts. Even experts need a refresher now and then!
Should we send any replacements?  Are there any irregularities or flaws in the parts? We can send replacements!	Prep Time!  Please review the assembly instructions and all diagrams prior to assembling. Arrange parts as recommended on Page 7 and group identical hardware together to make assembling easier.

## PRE ASSEMBLY INTRODUCTION

We understand building ready-to-assemble furniture can be a challenging experience for some. To help avoid confusion, we have provided some helpful tips that may speed up the process.





#### **Teamwork**

ALWAYS have at least two people to help with transporting and assembling the product to avoid potential injury and/or damage.





#### **Suitable Location**

Assembling near the area of the intended location is highly recommended.





#### **Sufficient Space**

Make sure you have enough space to move around during the assembly.





#### **Avoid Scratches**

Use cardboard, blankets or a carpeted area while assembling furniture to prevent scratches.





#### **Flat Surface**

Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

## ASSEMBLY AND CARE ADVICE




FAILURE TO FOLLOW THE GUIDELINES BELOW MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.



Position each part correctly and insert screws or bolts into their respective holes.



Use the appropriate hand tools or power tools for assembly. Select steps, such as tightening screws and/or bolts, may require hand tools to avoid causing damage during assembly.

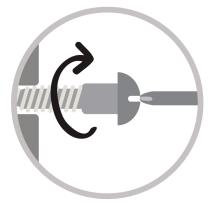

Turn clockwise to tighten and only tighten when step is completed or when instructed to do so.



Save the instructions and store any supplied tools for later maintenance.




After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.

## **SERVING CART**



- · Please keep instructions for future reference.
- · Check the quantity and irregularity of parts and hardware before you start.

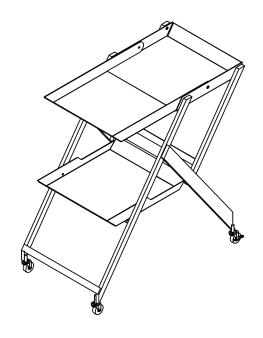

#### PARTS







Serving Cart





Caster

 




Caster with lock

#### HARDWARE






Wrench 14mm








Spring washer Ø13mm

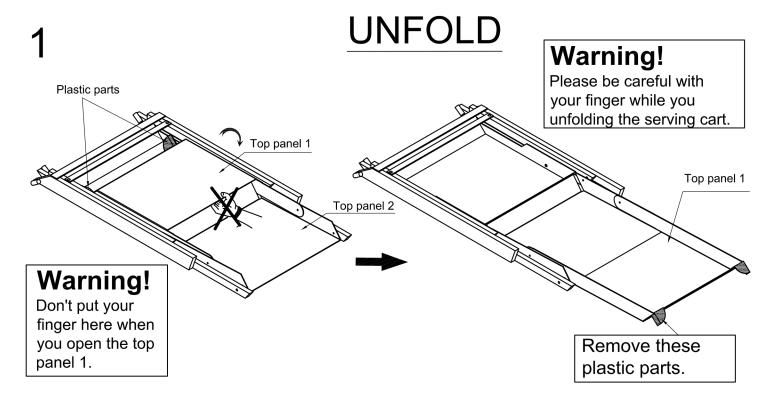

Take these two plastic parts and lift the top panel 1 up, then rotate up the top panel 1 until the top panel 1 and top panel 2 are parallel.

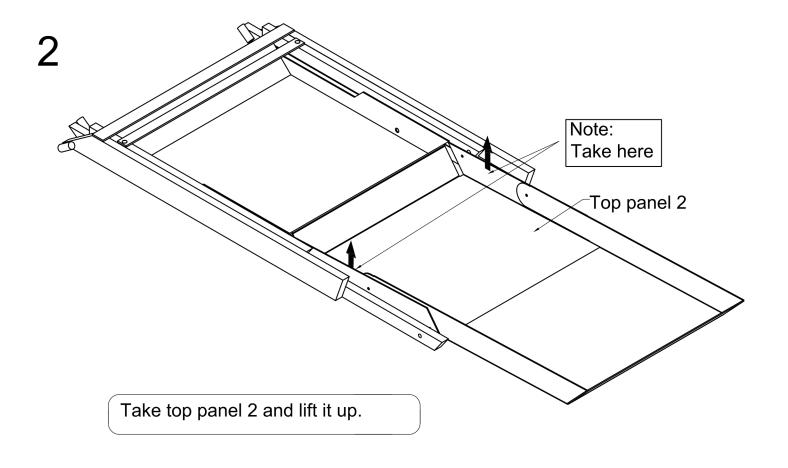

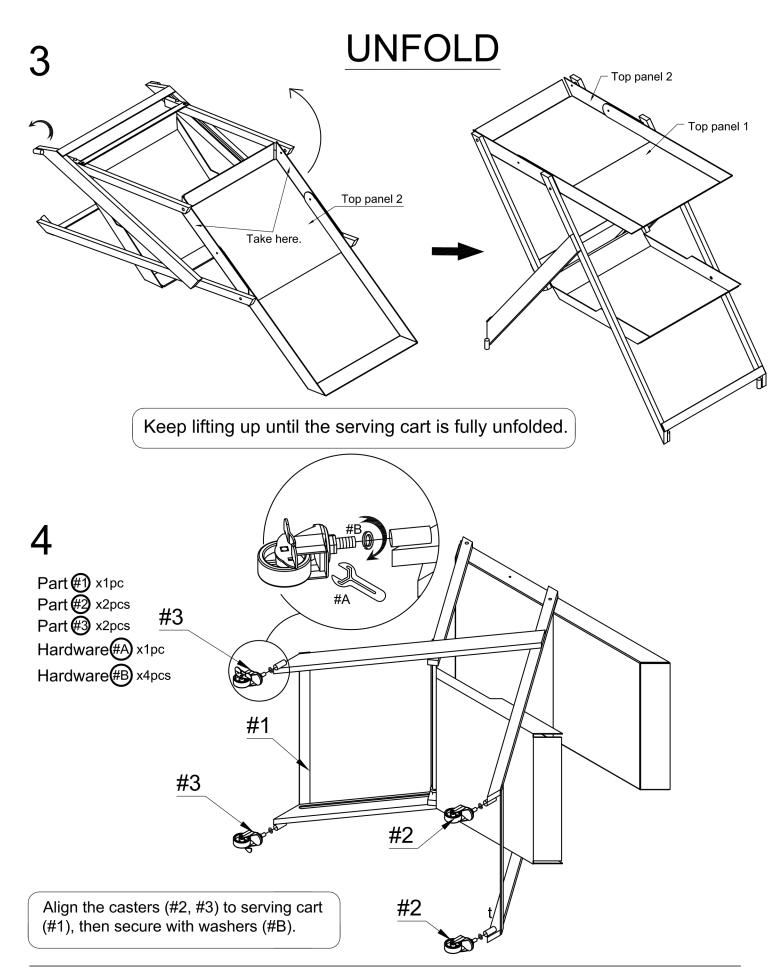

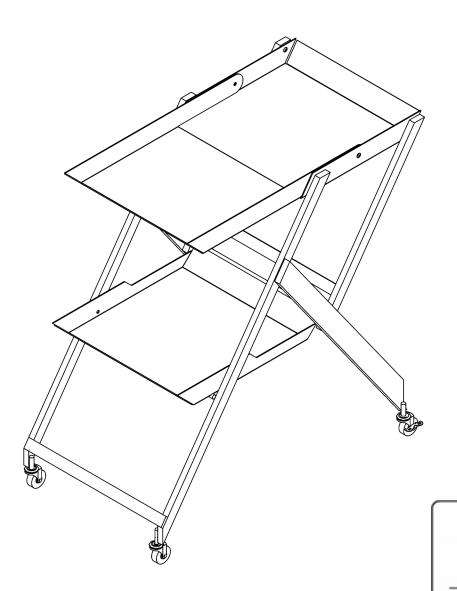

## ASSEMBLY COMPLETED




Please ensure the furniture rests on an even and flat surface. If the product wobbles or feels loose, double-check all bolts and/or screws are properly tightened and secured.

#### ✓ Keep this handy!


Please retain this instruction manual and any order-related information for future reference.

#### ✓ Lift, don't drag!


To avoid damage to product please always LIFT the product when transporting of adjusting the placement.

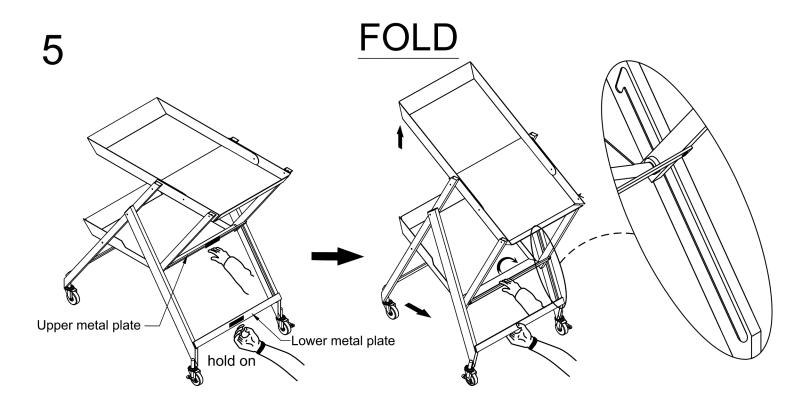

Hold on the lower metal plate. Pull the upper metal plate up, then sliding down to the long chute as shown.

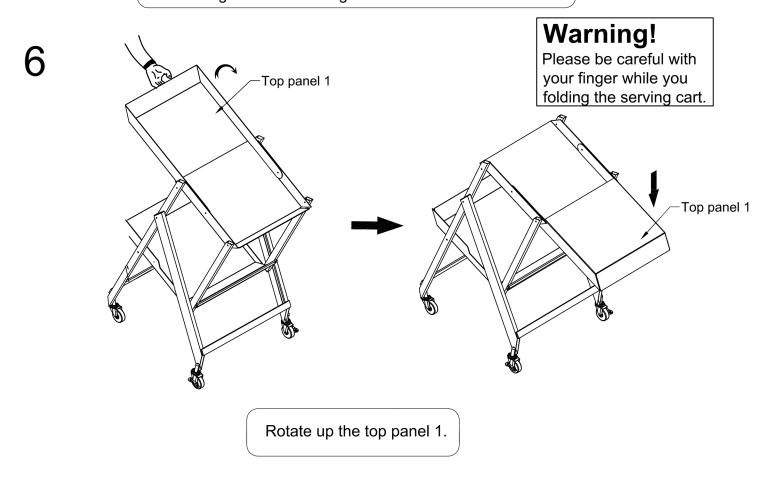


7 FOLD

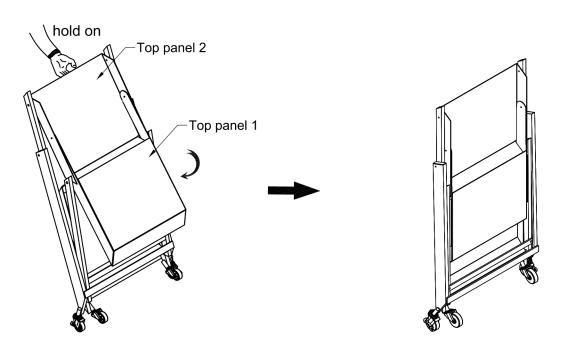

Hold on the top panel 2. Press down top panel 1.

8

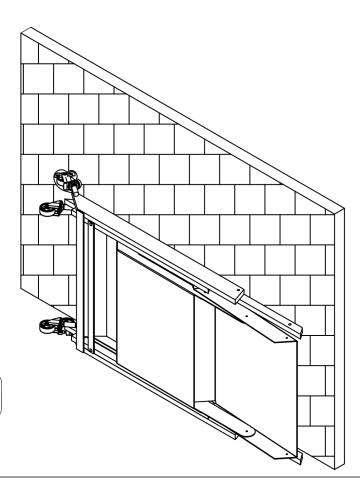

After fully folded, you need to stand it up against the wall when not in use.