


welcoming • sophisticated • inspiring

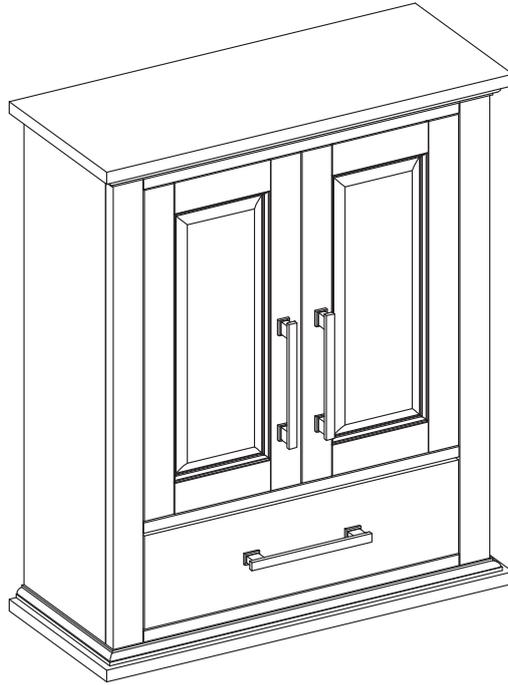

MODEL NUMBER	DESCRIPTION
1789WC-24-201	AR 24-IN BROOKVIEW WHITE WALL CABINET
1789WC-24-310	AR 24-IN BROOKVIEW SLATE BLUE WALL CABINET
1789WC-24-322	AR 24-IN BROOKVIEW PINE WALL CABINET
1789WC-24-323	AR 24-IN BROOKVIEW ROYAL NAVY WALL CABINET
1789WC-24-325	AR 24-IN BROOKVIEW TRUE GRAY WALL CABINET

24-IN WALL CABINET

ITEM #4136360; 5055520; 4136359; 4136362; 4136361

MODEL #1789WC-24-201; 1789WC-24-310; 1789WC-24-322; 1789WC-24-323; 1789WC-24-325

ATTACH YOUR RECEIPT HERE


Serial Number _____ Purchase Date _____

Questions, problems, missing parts? Before returning to your retailer, call our customer service department at 866-439-9800, 8 a.m. - 8 p.m., EST, Monday - Sunday.

TABLE OF CONTENTS

Package Contents.....	3
Hardware Contents.....	3
Safety Instructions.....	3
Preparation.....	4
Assembly or Installation Instructions.....	4
Care and Maintenance.....	6
Warranty.....	6
Replacement Parts List.....	7

PACKAGE CONTENTS

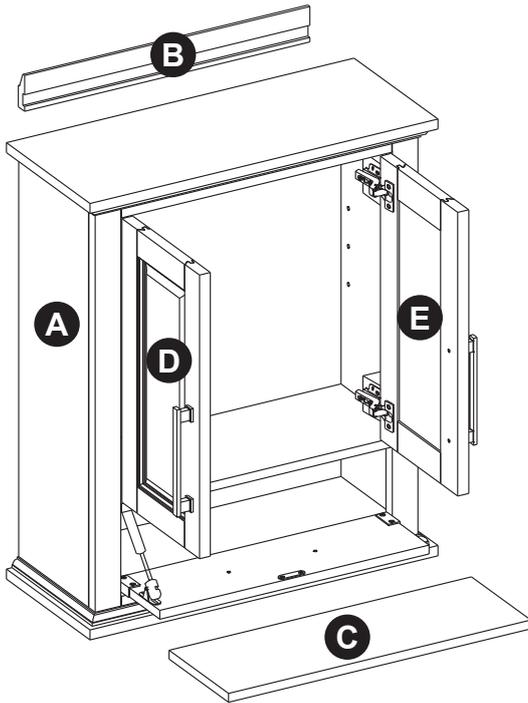

PART	DESCRIPTION	QUANTITY
A	Cabinet	1
B	Wall Bracket	1
C	Shelf	1
D	Left Door (preassembled to cabinet (A))	1
E	Right Door (preassembled to cabinet (A))	1

 
HARDWARE CONTENTS (NOT SHOWN ACTUAL SIZE)

AA



Touch Up Pen
Qty. 1

BB



Shelf Pin
Qty. 4

⚠ SAFETY INSTRUCTIONS

Please read and understand this entire manual before attempting to assemble, operate or install the product.

⚠ WARNING

- There are several assembly steps, including unpacking, that require two adults.

CAUTION

- Before installation, carefully use scissors or utility knife to cut and unwrap all parts. Make sure you DO NOT discard the hardware.
- Follow these instructions closely, take your time, and use care while assembling this wall cabinet.

KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE.

PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.


Estimated Installation Time: 20 minutes.

Tools Required for Installation (not included): Phillips screwdriver, utility knife or scissors, power drill with drill bit.


Helpful Tools (not included): Measuring tape, level

INSTALLATION INSTRUCTIONS

1. Locate wall bracket (B) and set aside.
Locate and mark wall stud locations where cabinet (A) will be placed. Center wall bracket (B) in desired level location off the floor and mark locations where wall bracket (B) meets the location of the wall studs.
Using hardware appropriate for your wall type (not included), secure the wall bracket (B) to the wall into preferably 2 wall studs. Use hardware such as a cabinet screw or toggle bolt depending on your wall type. Make sure the wall bracket (B) is level and centered well to the desired location of the cabinet (A). Be careful not to disturb any plumbing or electrical lines that may be concealed in the wall.
!!IMPORTANT SAFTEY STEP!
It is critical to have a strong secure connection to the wall before continuing to the next step.

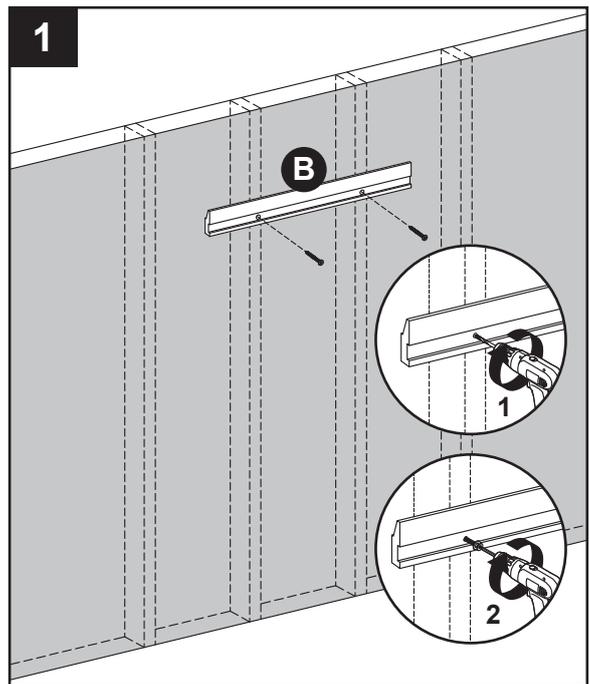

2. With the help of another adult, carefully lower the cabinet (A) down onto the wall bracket (B). Be sure the cabinet (A) is secure to the wall before letting go.


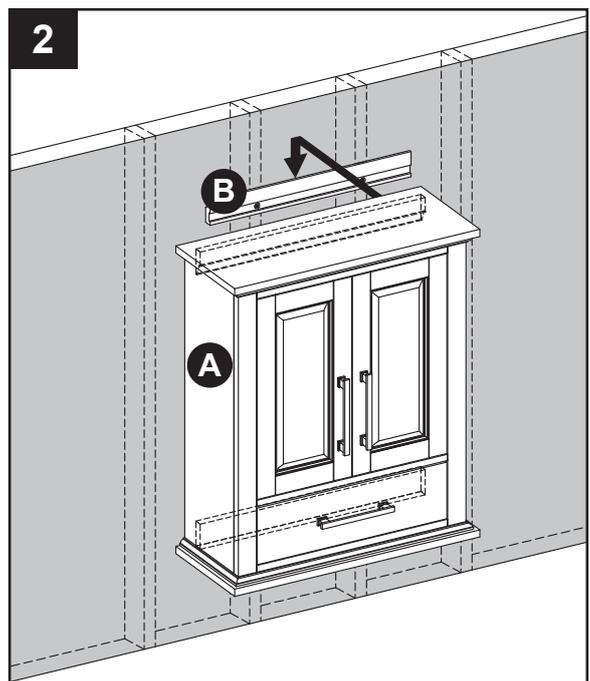


INSTALLATION INSTRUCTIONS


3. Insert shelf pins (BB) at desired height, ensuring they are level. Place shelf (C) on top of shelf pins (BB).

Hardware Used

 BB Shelf Pin x 4

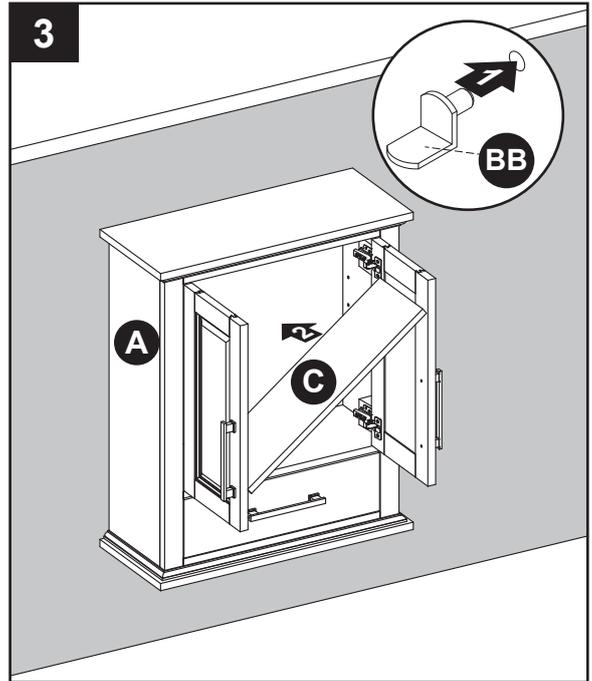

4. If you need to adjust the doors, do so in the following manner.
To adjust door up or down, loosen screws (a) on both hinges, adjust door, and retighten screws.
To adjust door left or right, turn screws (b) on both hinges, in and out.
To adjust door in or out, loosen screws (c) on both hinges, adjust door, and retighten screws.

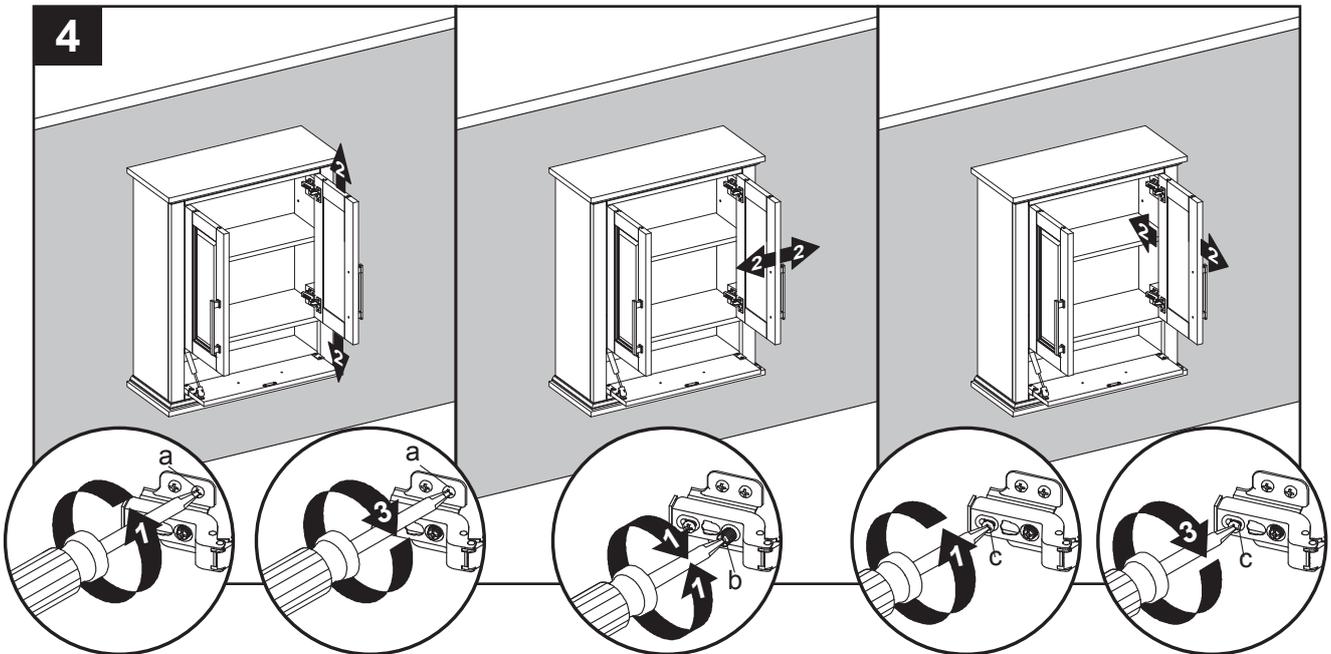

CARE AND MAINTENANCE



- Dust the wall cabinet regularly with a soft, non-lint producing cloth or household dusting product.
- You can clean the wall cabinet with a gentle, non-abrasive household cleaner.
- Make sure to dry the wood immediately with a soft cloth or towel.
- Tips for using touch-up pen (AA): For scratches, stroke in direction of scratch. Rub off excess colorant promptly with a soft cloth.

WARRANTY

The manufacturer warrants this item against defects in materials and workmanship for a period of one (1) year from the date of original retail purchase. This warranty applies only to the original purchaser. This warranty does not apply to any damage on the product by accident, misuse, or modified, improper installation or by affixing accessories not produced by the manufacturer. The manufacturer is not accountable whatsoever for product installation during the warranty period. There is no further expressed warranty. The manufacturer shall not be legally responsible for incidental, consequential or special damages arising at or in connection with product use or performance except as may otherwise be accorded by law. The manufacturer disclaims any and all implied warranties.

REPLACEMENT PARTS LIST FOR 1789WC-24-201



For replacement parts, call our customer service department at 866-439-9800, 8 a.m. - 8 p.m., EST, Monday - Sunday.

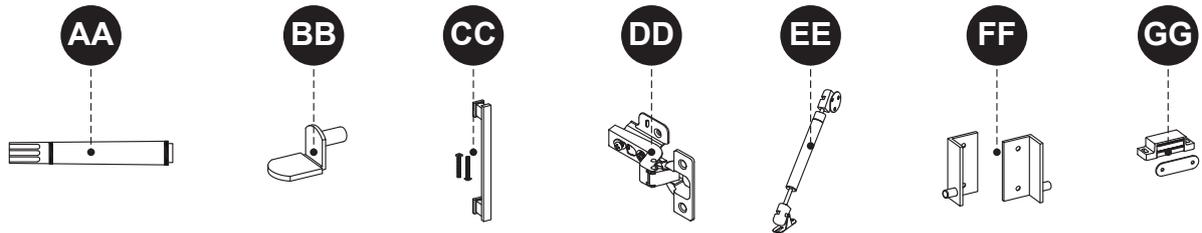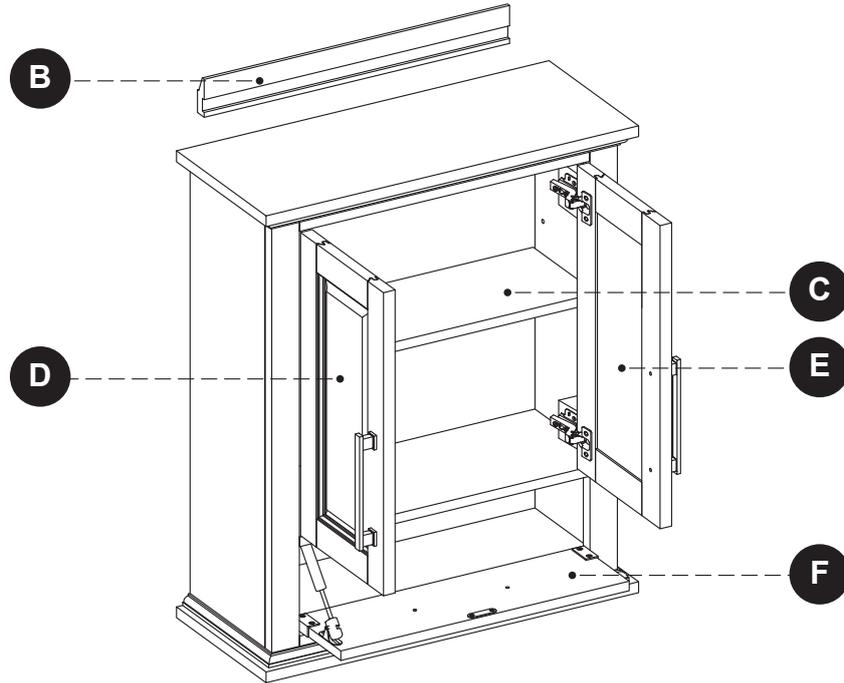

PART	DESCRIPTION	PART #
B	Wall Bracket	WC-WALL BRACKET-201
C	Shelf	1789WC-24-201-SHELF
D	Left Door	1789WC-24-201 DOOR SET
E	Right Door	
F	Flip Down Door	1789WC-24-201 FLIP DOWN DOOR
AA	Touch-up Pen	OF-0010
BB	Shelf Pin	B1044
CC	Pull (with screw)	1789VA-BN HANDLE
DD	Hinge	C-90-107
EE	Piston With Screw	PU17-1480WC-DD/EE/FF
FF	Flip Door Hinge	
GG	Door Catch	

REPLACEMENT PARTS LIST FOR 1789WC-24-310



For replacement parts, call our customer service department at 866-439-9800, 8 a.m. - 8 p.m., EST, Monday - Sunday.

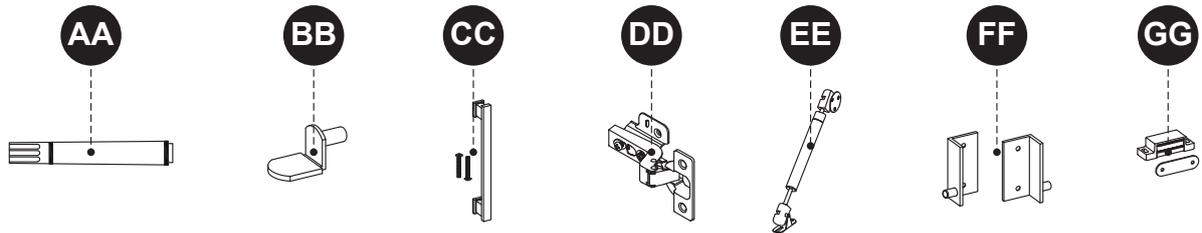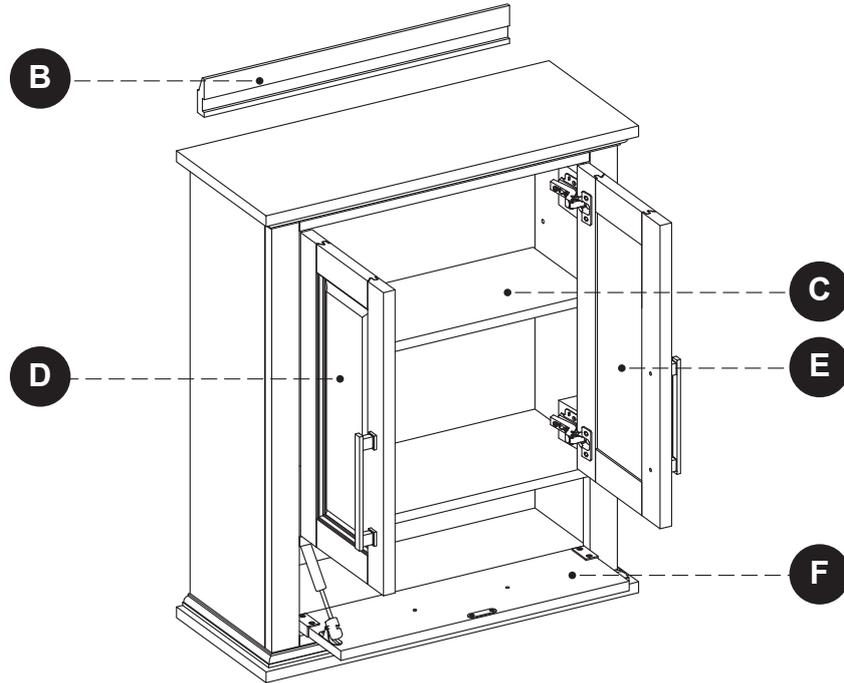

PART	DESCRIPTION	PART #
B	Wall Bracket	WC-WALL BRACKET-310
C	Shelf	1789WC-24-310-SHELF
D	Left Door	1789WC-24-310 DOOR SET
E	Right Door	
F	Flip Down Door	1789WC-24-310 FLIP DOWN DOOR
AA	Touch-up Pen	M-1128
BB	Shelf Pin	B1044
CC	Pull (with screw)	1789VA-BN HANDLE
DD	Hinge	C-90-107
EE	Piston With Screw	PU17-1480WC-DD/EE/FF
FF	Flip Door Hinge	
GG	Door Catch	

REPLACEMENT PARTS LIST FOR 1789WC-24-322



For replacement parts, call our customer service department at 866-439-9800, 8 a.m. - 8 p.m., EST, Monday - Sunday.

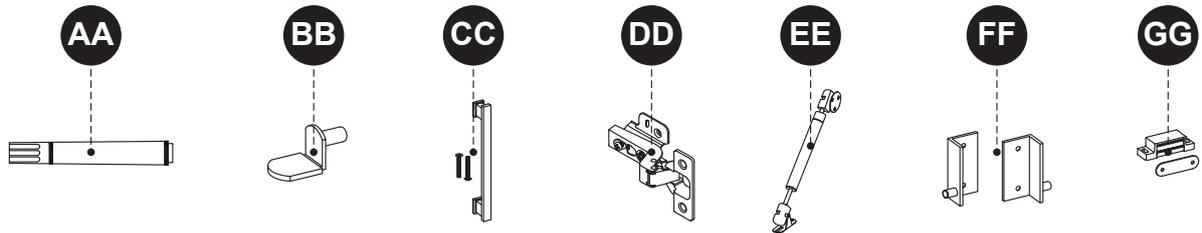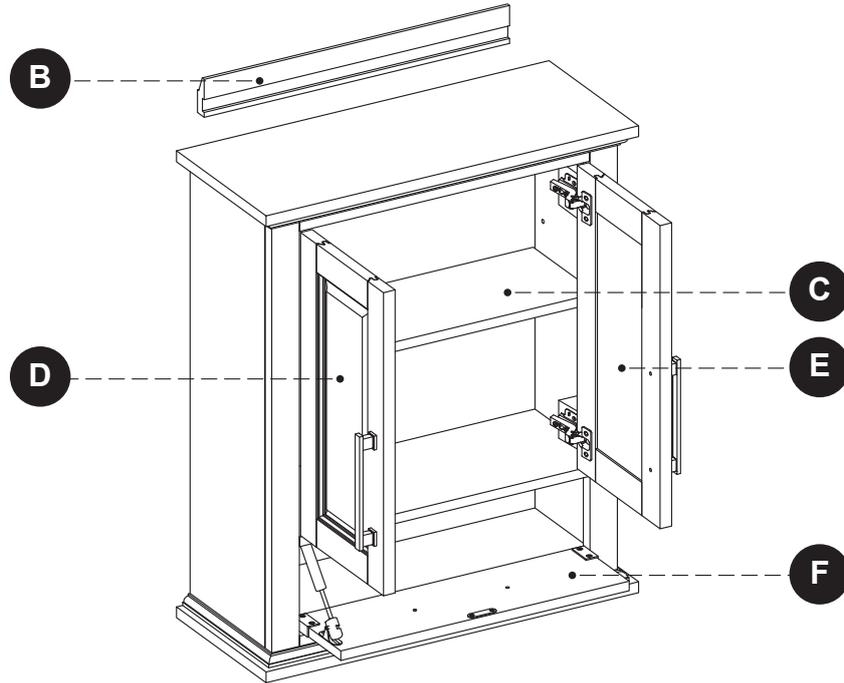

PART	DESCRIPTION	PART #
B	Wall Bracket	WC-WALL BRACKET-322
C	Shelf	1789WC-24-322-SHELF
D	Left Door	1789WC-24-322 DOOR SET
E	Right Door	
F	Flip Down Door	1789WC-24-322 FLIP DOWN DOOR
AA	Touch-up Pen	M-0066
BB	Shelf Pin	B1044
CC	Pull (with screw)	1789VA-BN HANDLE
DD	Hinge	C-90-107
EE	Piston With Screw	PU17-1480WC-DD/EE/FF
FF	Flip Door Hinge	
GG	Door Catch	

REPLACEMENT PARTS LIST FOR 1789WC-24-323



For replacement parts, call our customer service department at 866-439-9800, 8 a.m. - 8 p.m., EST, Monday - Sunday.

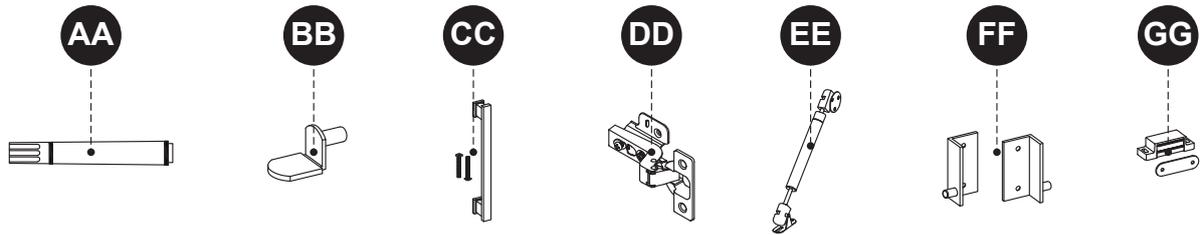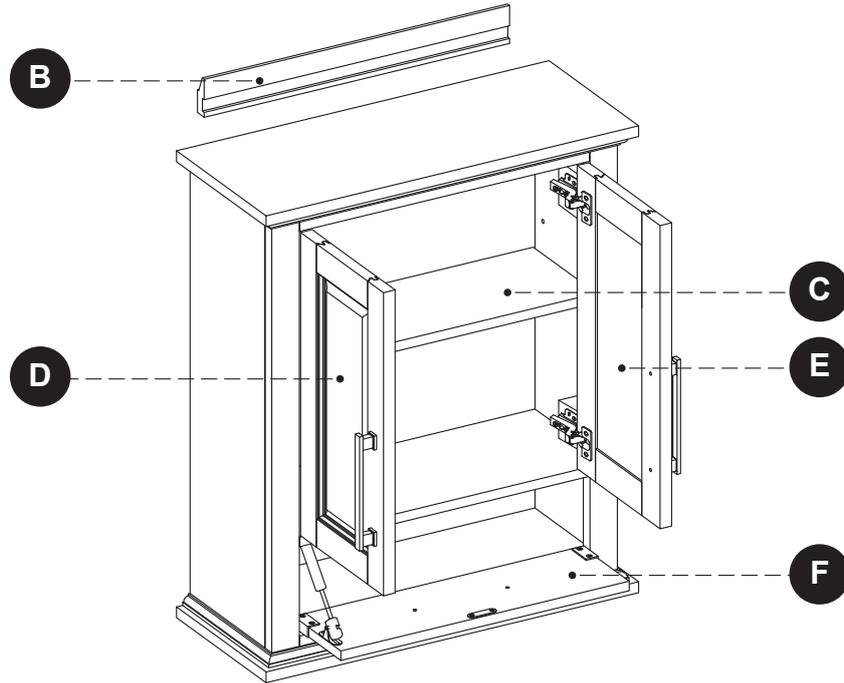

PART	DESCRIPTION	PART #
B	Wall Bracket	WC-WALL BRACKET-323
C	Shelf	1789WC-24-323-SHELF
D	Left Door	1789WC-24-323 DOOR SET
E	Right Door	
F	Flip Down Door	1789WC-24-323 FLIP DOWN DOOR
AA	Touch-up Pen	OX-0180Y
BB	Shelf Pin	B1044
CC	Pull (with screw)	1789VA-BN HANDLE
DD	Hinge	C-90-107
EE	Piston With Screw	PU17-1480WC-DD/EE/FF
FF	Flip Door Hinge	
GG	Door Catch	

REPLACEMENT PARTS LIST FOR 1789WC-24-325

For replacement parts, call our customer service department at 866-439-9800, 8 a.m. - 8 p.m., EST, Monday - Sunday.

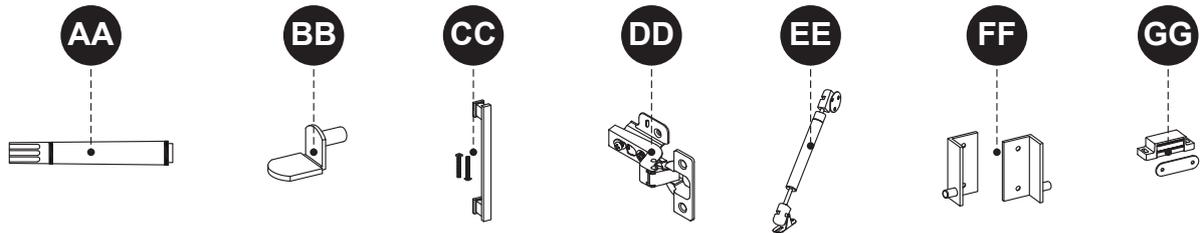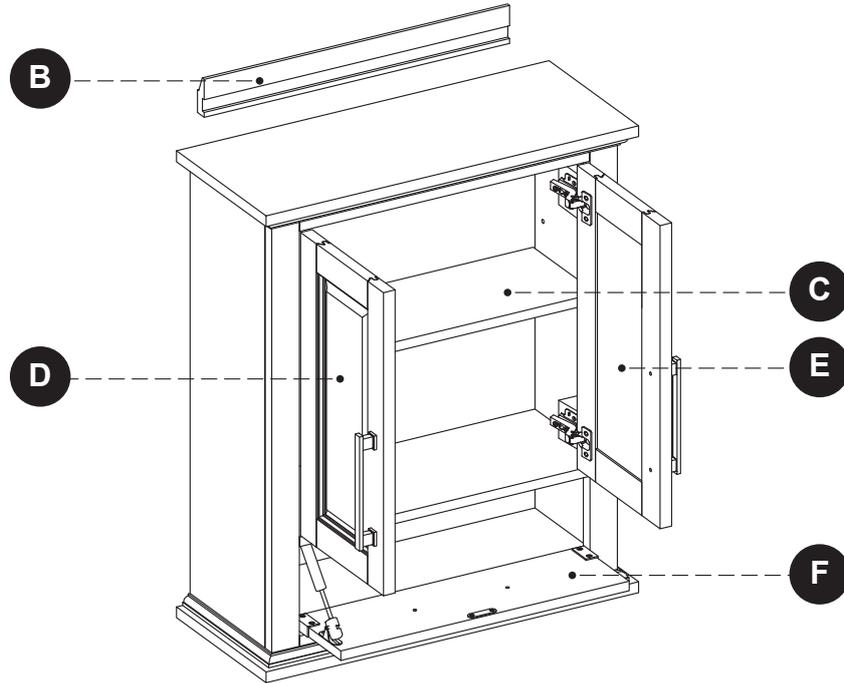

PART	DESCRIPTION	PART #
B	Wall Bracket	WC-WALL BRACKET-325
C	Shelf	1789WC-24-325-SHELF
D	Left Door	1789WC-24-325 DOOR SET
E	Right Door	
F	Flip Down Door	1789WC-24-325 FLIP DOWN DOOR
AA	Touch-up Pen	OF-0120R
BB	Shelf Pin	B1044
CC	Pull (with screw)	1789VA-BN HANDLE
DD	Hinge	C-90-107
EE	Piston With Screw	PU17-1480WC-DD/EE/FF
FF	Flip Door Hinge	
GG	Door Catch	