

INSTALLATION

Product Manual

Version: 460035-01-24A-YP



IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.



AVOID SCRATCHES!

In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.



IMPROVE EFFICIENCY !

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.



ANTI-TOPPLE WARNING !

Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !

 
It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.




Please prepare the following tools



When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

 A x 85



M6 x 40 mm

B x 85



 
Ø12 x 9.5 mm

C x 48



M3 x 12 mm

D x 2

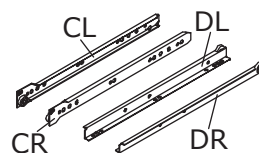


300 x 40 mm

E x 6




M4 x 18 mm

 F x 2

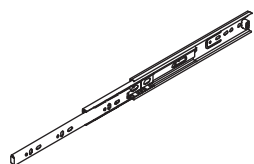


300 x 40 mm

 G x 4

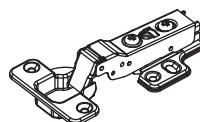

ZWJL

 H x 3

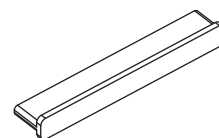


I x 8



M5 x 30 mm

 
J x 4



13 mm

 Power plug x 1



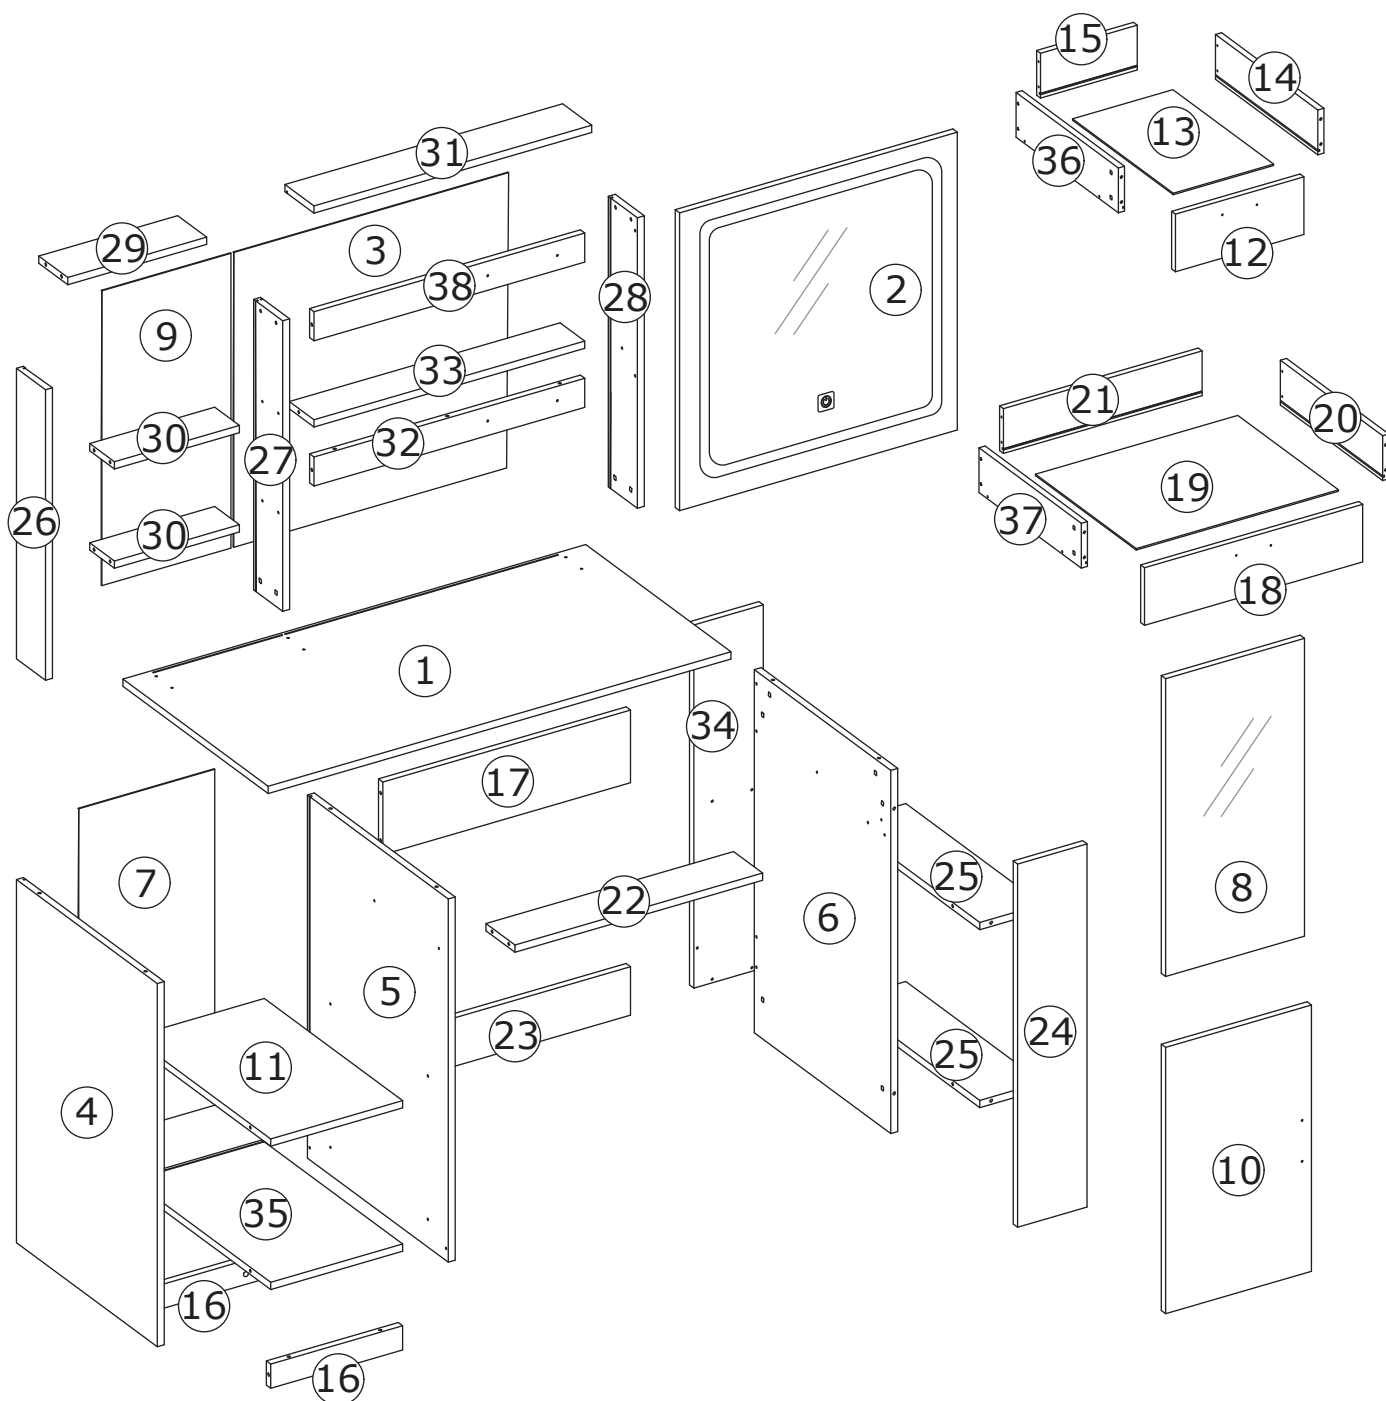


⚠ WARNING



Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

*This is a permanent label.
Do not remove!*

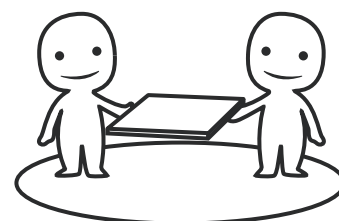


ASSEMBLED BY 2 ADULTS


Slides Must Be Separated Before Assembly.
After Separated, Set Aside Until Needed for Assembly.

Las diapositivas deben separarse antes del montaje.
Después de la separación, déjelo a un lado hasta que sea necesario.

 
Les glissières doivent être séparées avant l'assemblage.
Après la séparation, mettez de côté jusqu'au moment de l'assemblage.

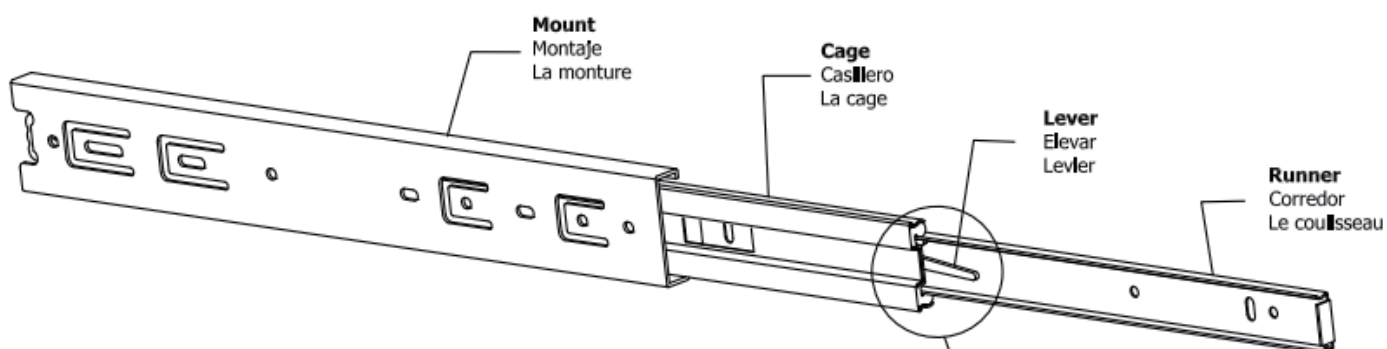

   
STEP 1: Extend Slide
Extender la diapositiva
Extendre la diapositive

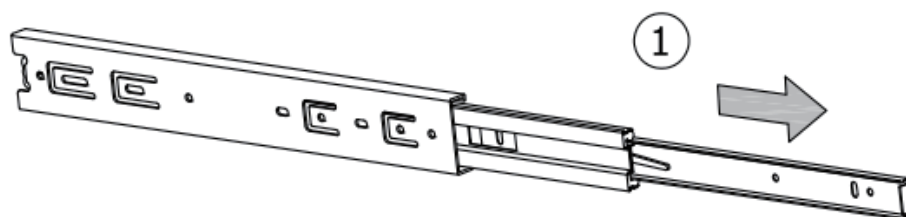

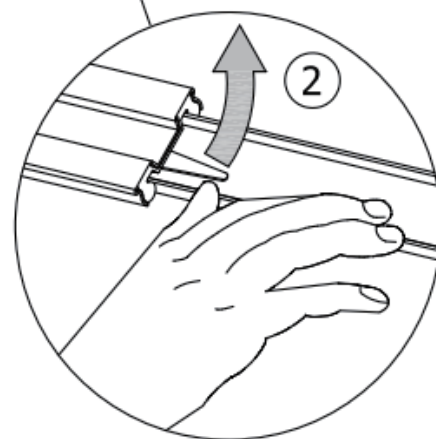

 

 
STEP 2: Push Lever UP
Empujar hacia arriba
Lever le levier

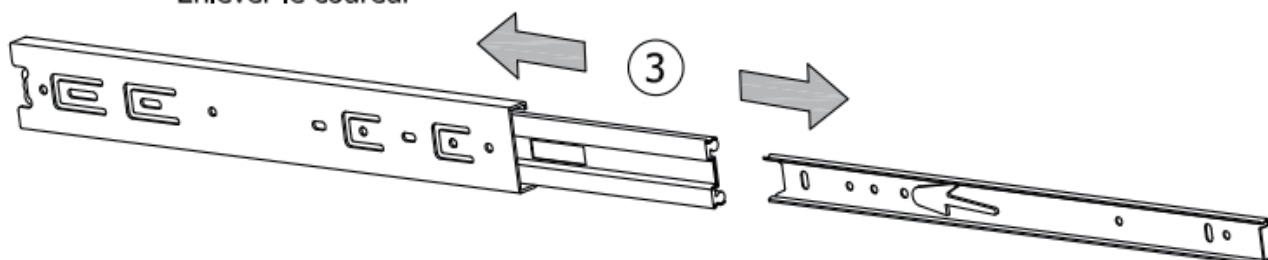

STEP 3: Remove Runner
Quitar el corredor
Enlever le coureur





1

<p>A x 6</p>  <p>M6 x 40 mm</p>	<p>C x 6</p>  <p>M3 x 12 mm</p>	<p>D x 1</p>  <p>CR</p> <p>300 x 40 mm</p>	<p>F x 2</p>  <p>F-2</p> <p>300 x 40 mm</p>	
--	--	---	---	---




Screw eccentric rod(A) into panel 6 and fix rail(CR) with screw(C).

Separate slide(F) into two parts at first(Page 5).

  Fix rail(F-2) to panel 2 with screw(C) as shown.



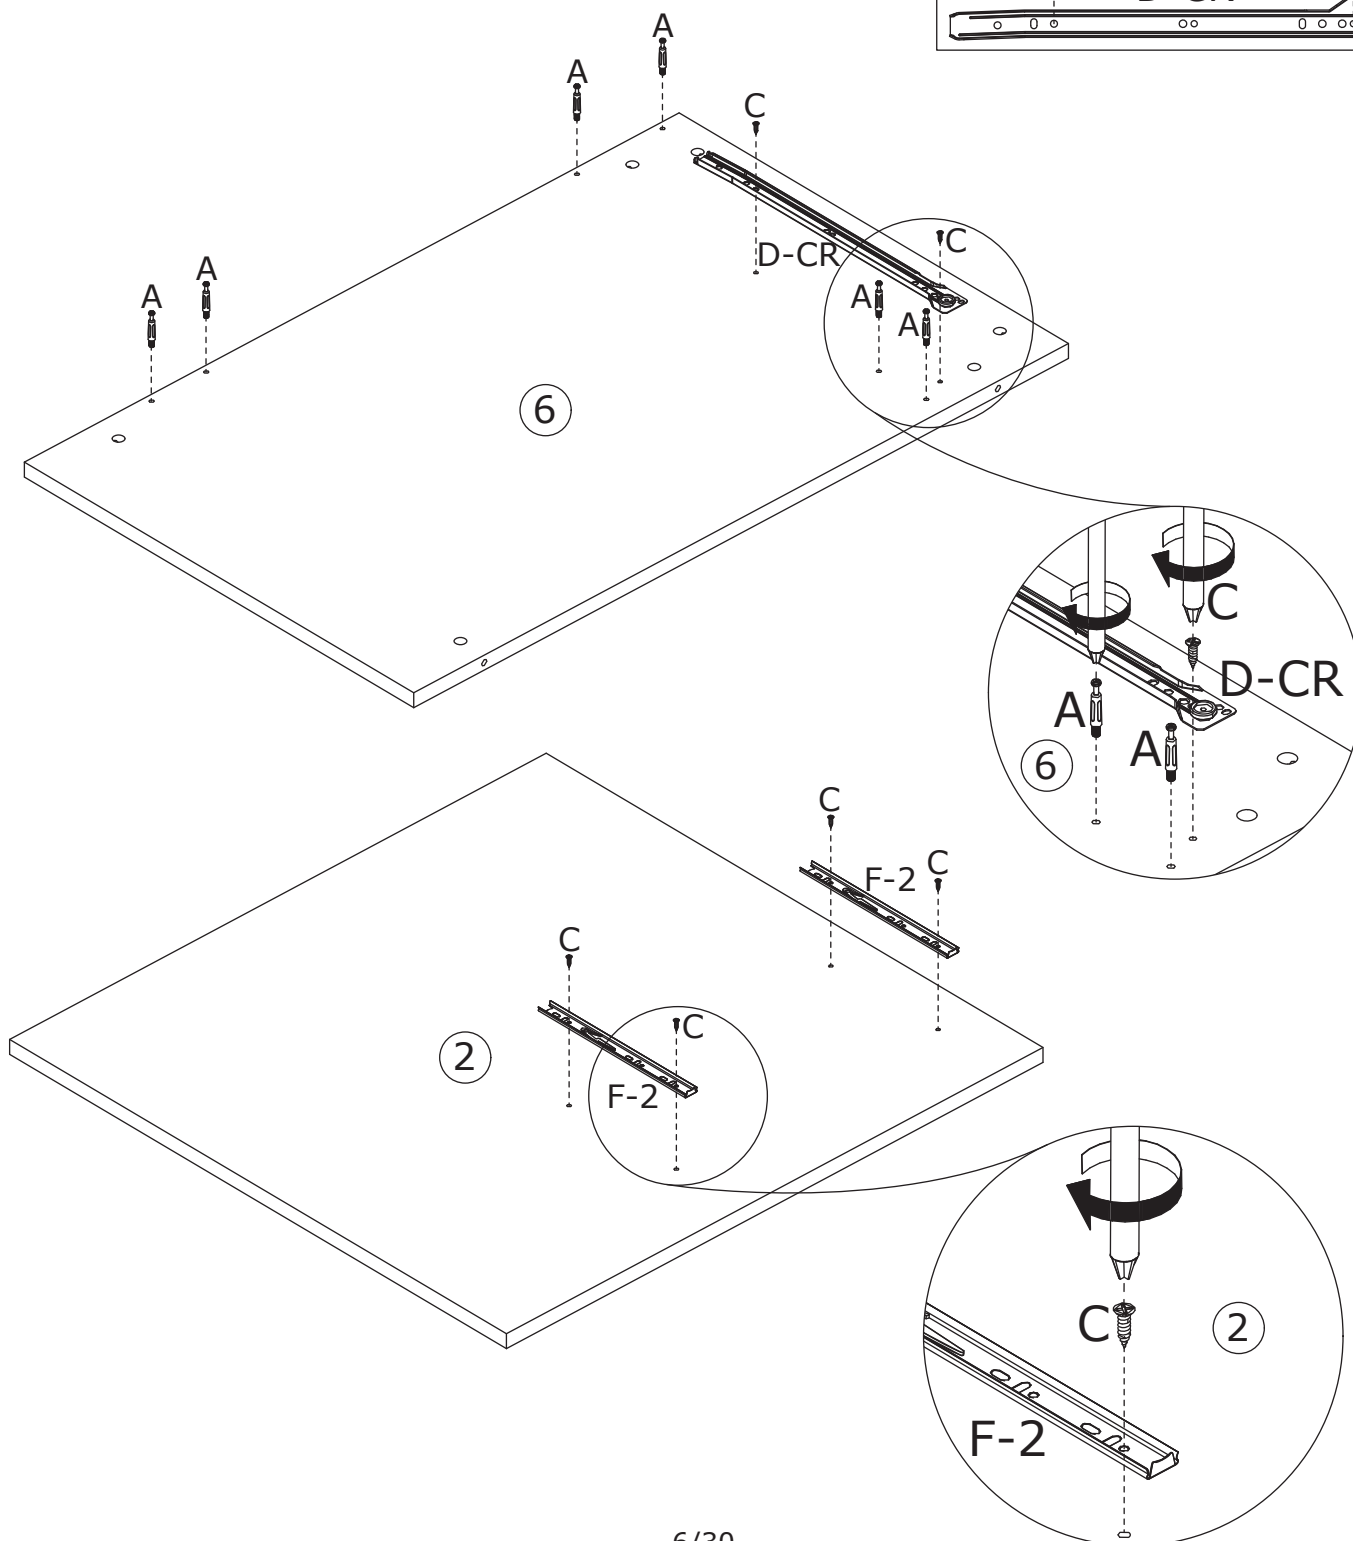
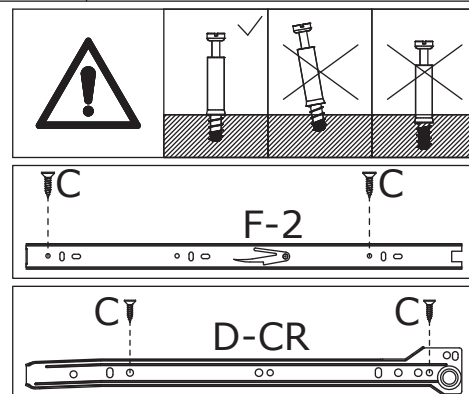


2

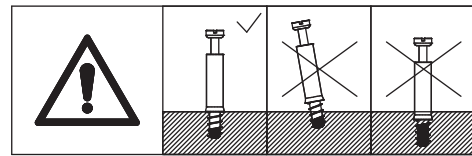  
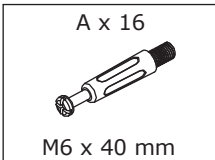 


Flip panel 6 to back.

   
 
Screw eccentric rod(A) into panel 6, 34 and 24 at first.

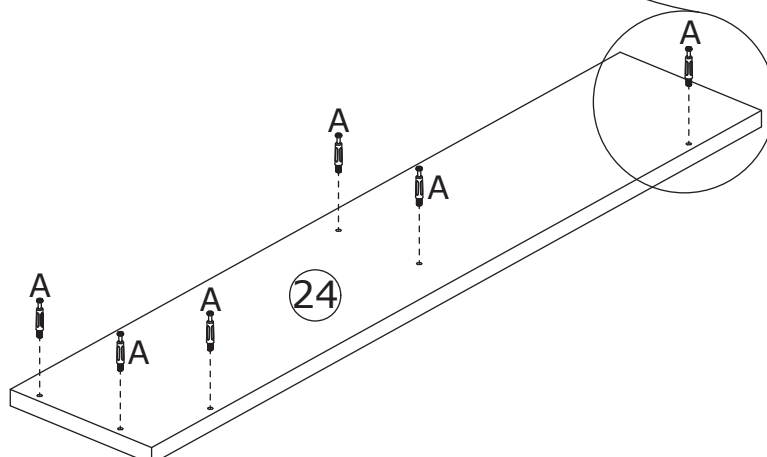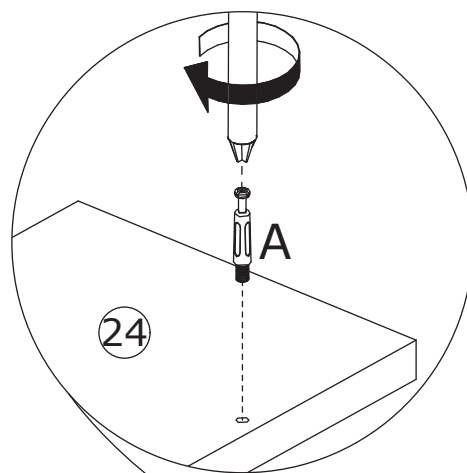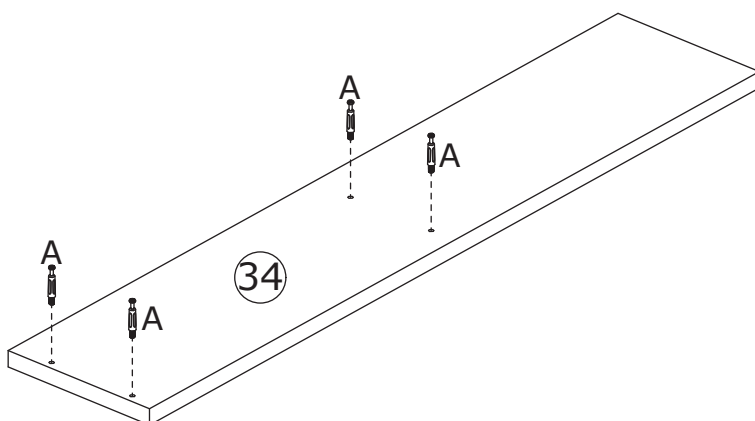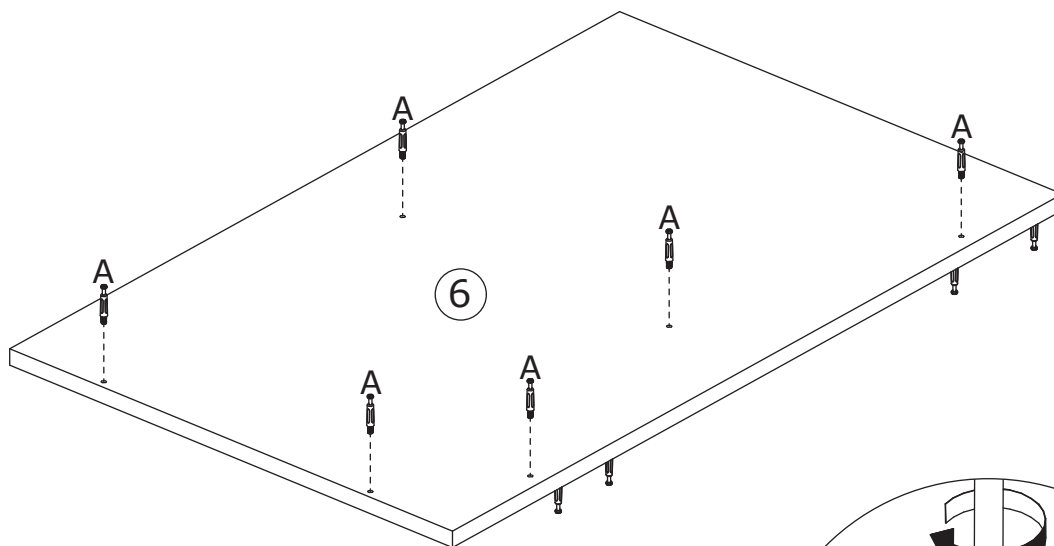

3

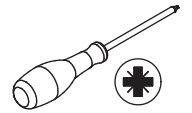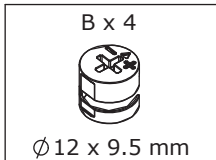 

 Attach panel 25 to panel 34, add cam lock(B) into panel 25 and turn clockwise to tighten.

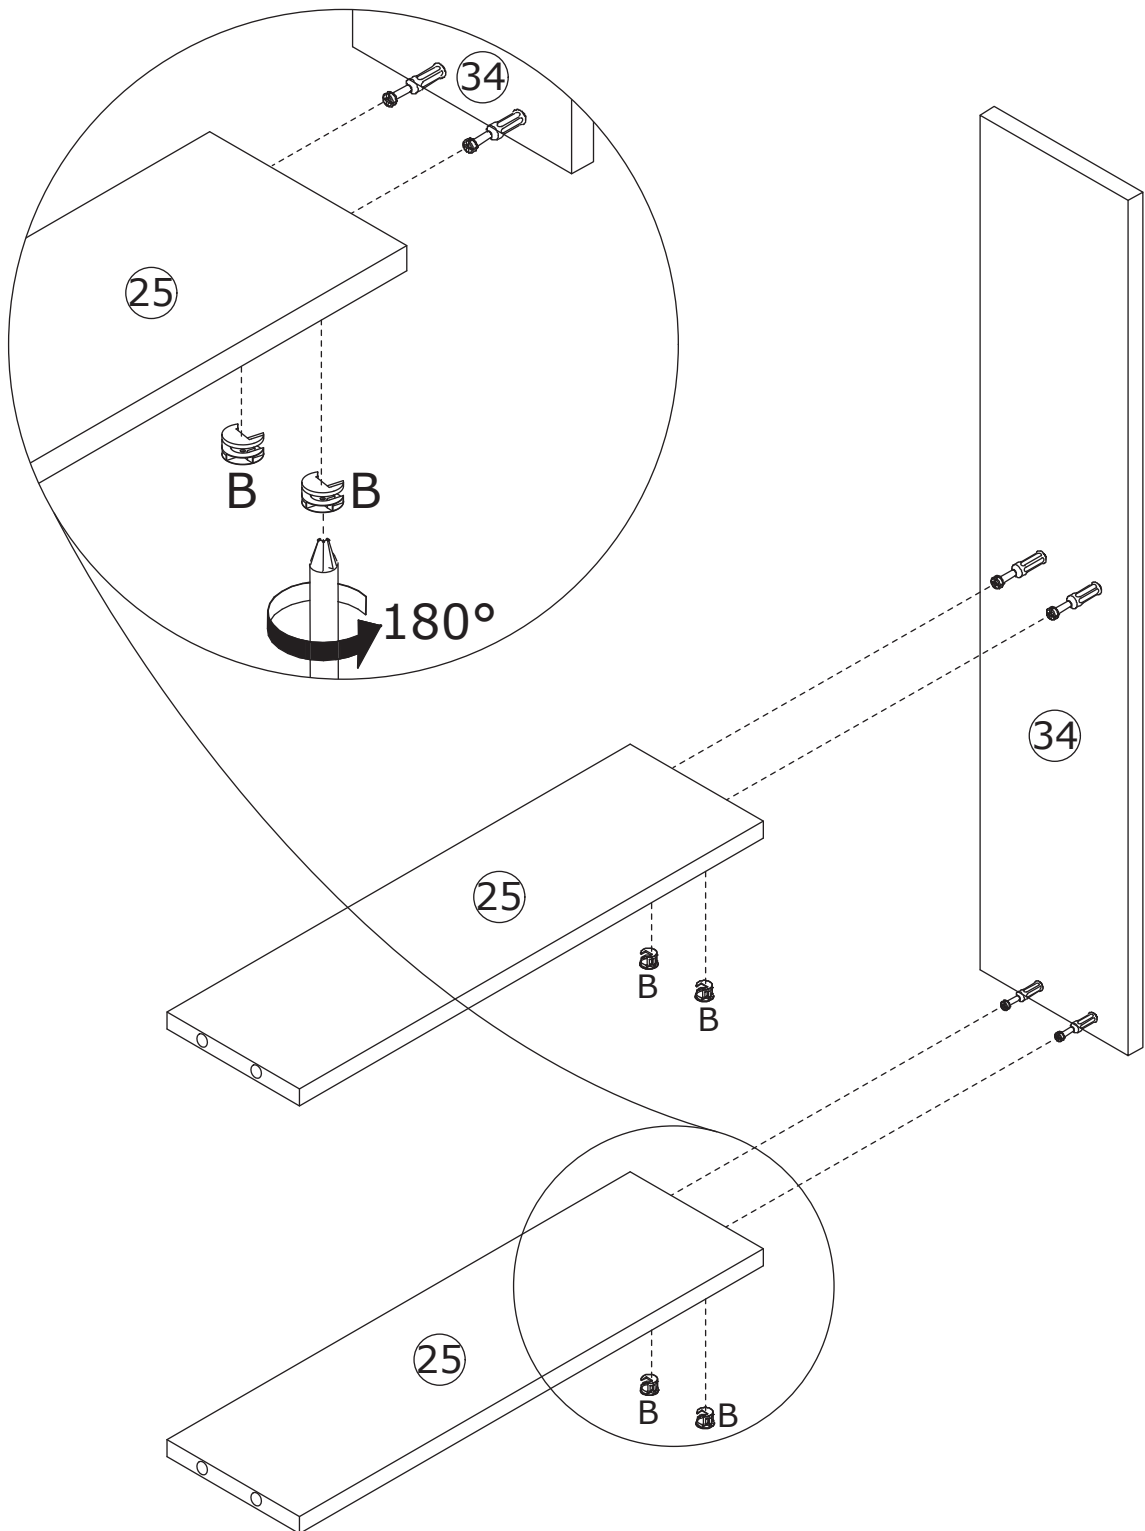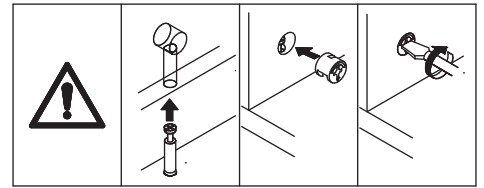


4



B x 12






Ø12 x 9.5 mm

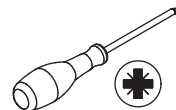

  
Connect panel 25 and 34 to panel 6 ,
add cam lock(B) into panel 25,34 and turn
clockwise to tighten.

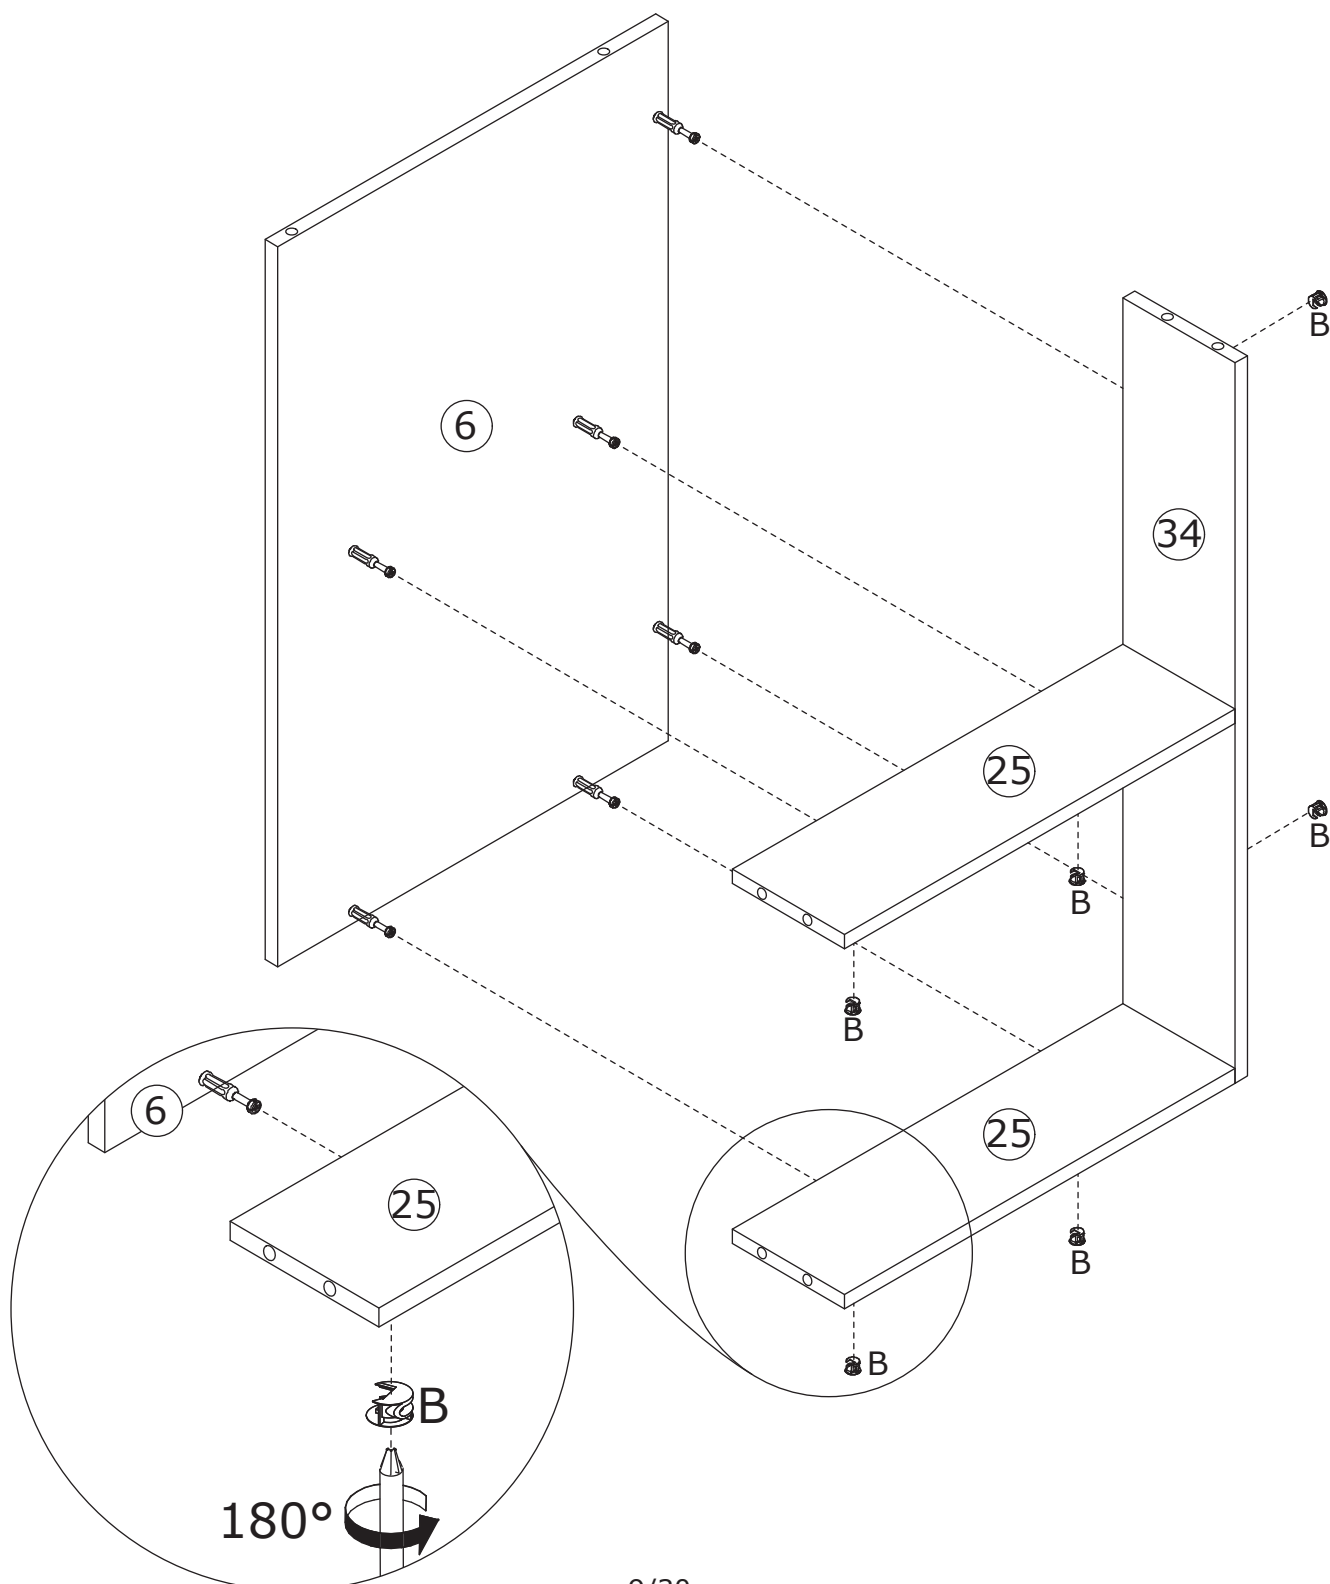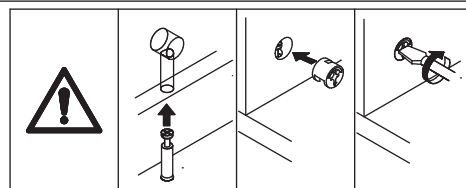

5

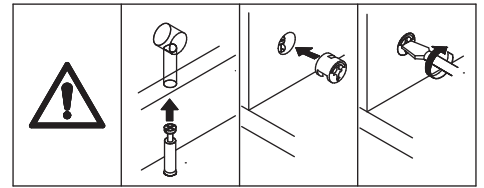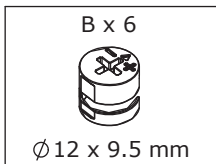   

 Connect panel 6 and 25 to panel 24 ,
add cam lock(B) into panel 6,25 and turn
clockwise to tighten.




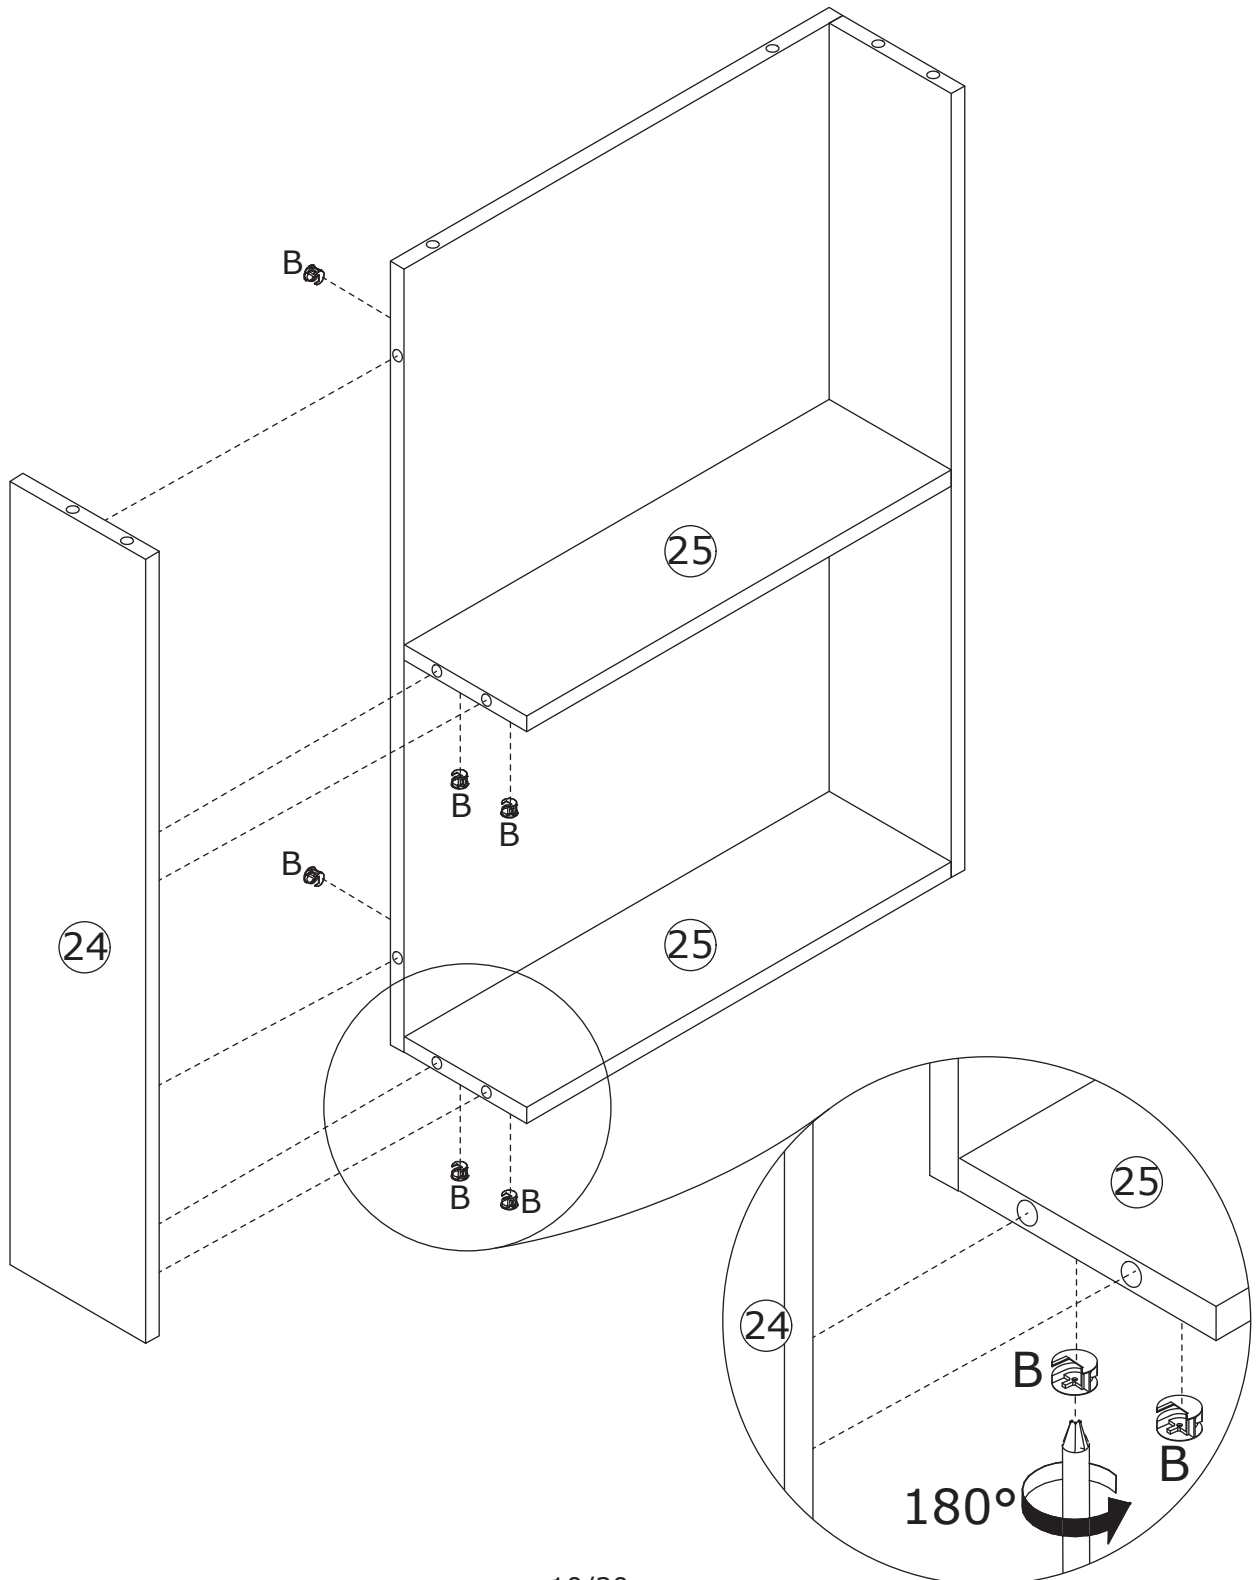


6



A x 8
M6 x 40 mm

C x 2
M3 x 12 mm

  
 
 
D x 1
CL
300 x 40 mm

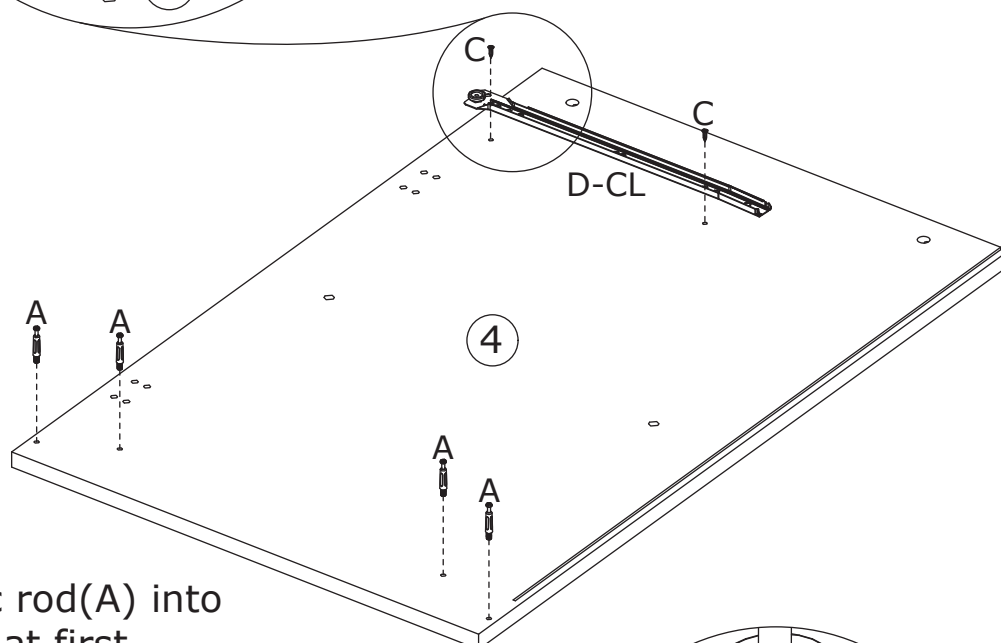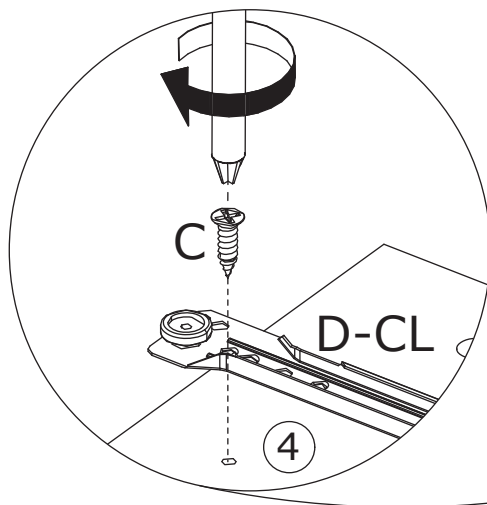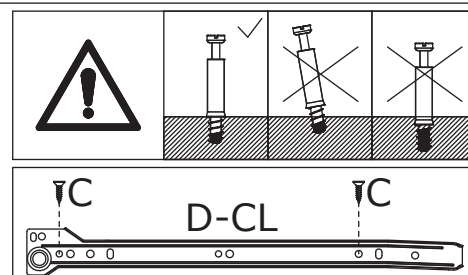

  
Screw eccentric rod(A) into panel 4 and 35 at first.
Fix rail(CL) to panel 4 with screw(C) as shown.

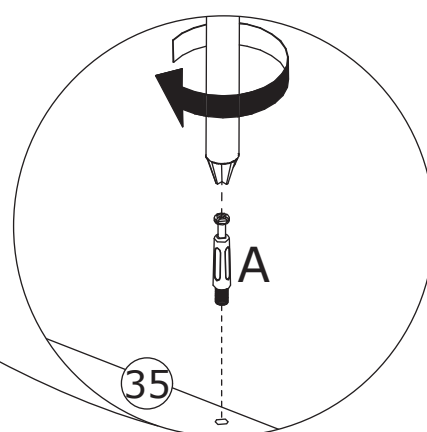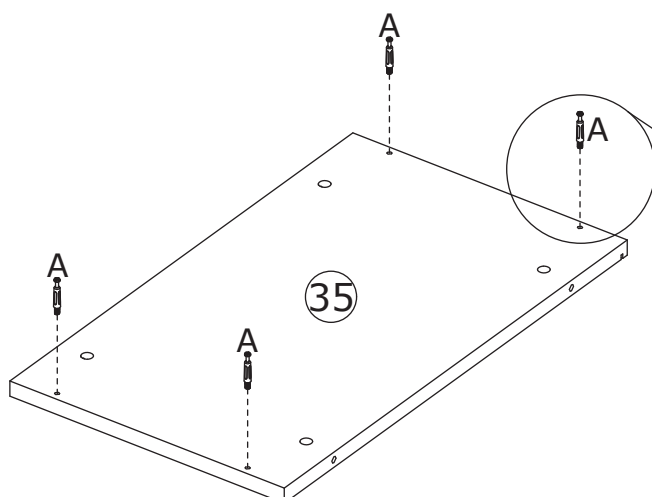

7

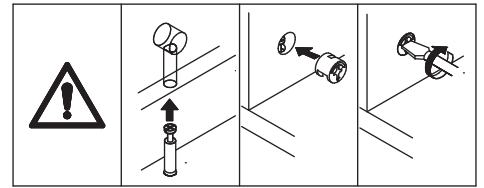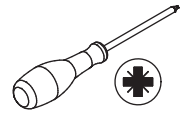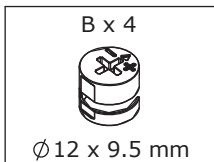 

 Attach panel 16 to panel 35,
add cam lock(B) into panel 16
and turn clockwise to tighten
as shown.

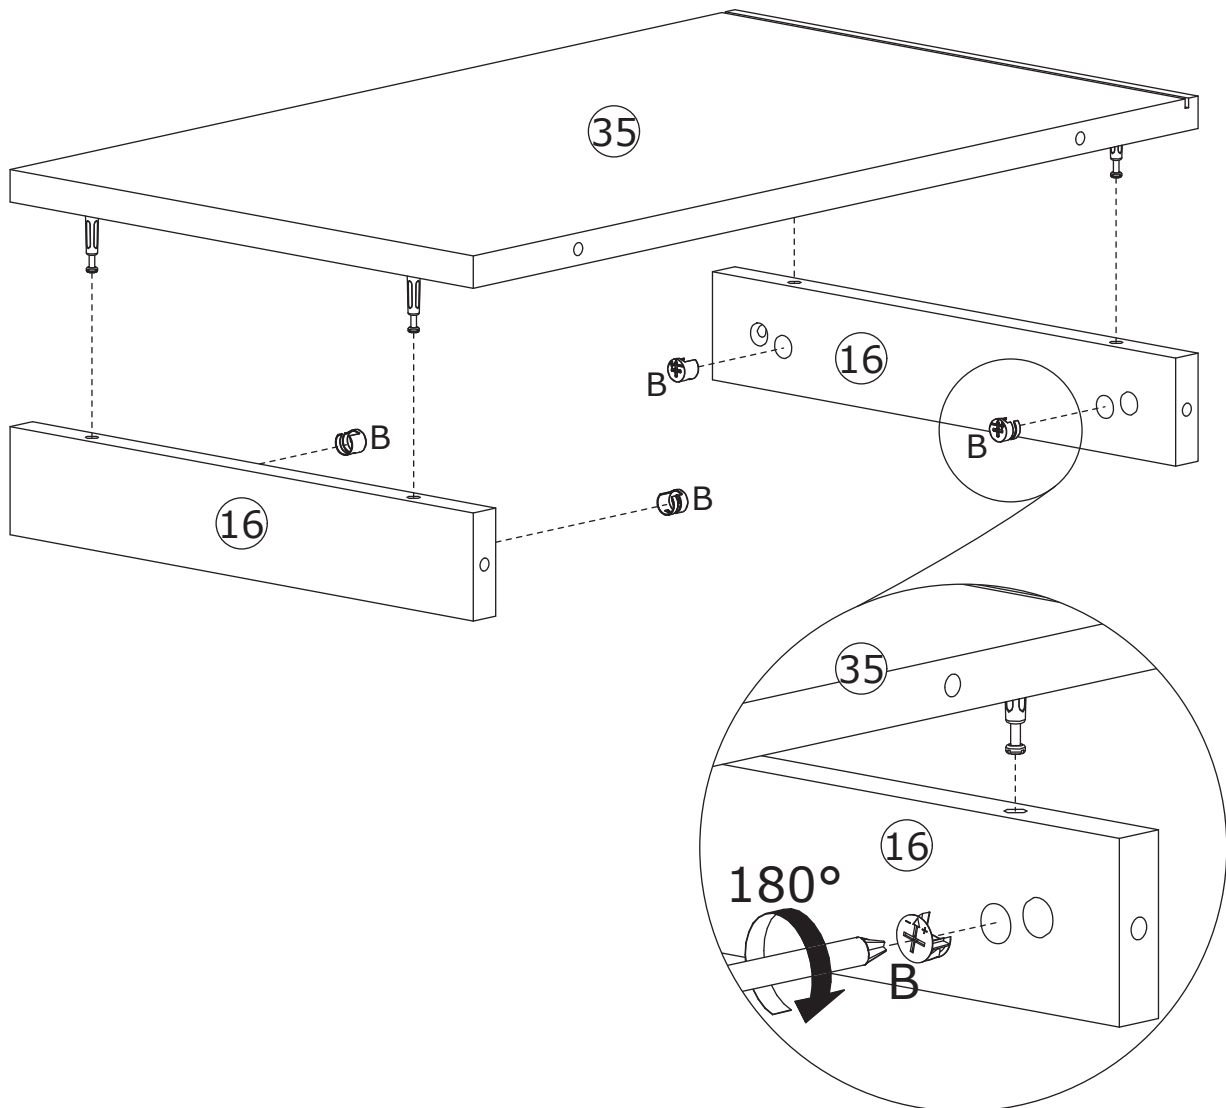

8

 
 
A x 10
M6 x 40 mm





C x 4
M3 x 12 mm






D x 1
CL
CR
300 x 40 mm

     Screw eccentric rod(A) into panel 5 and fix rail(CR) with screw(C) at first.
Flip to back, screw eccentric rod(A) and fix rail(CL).



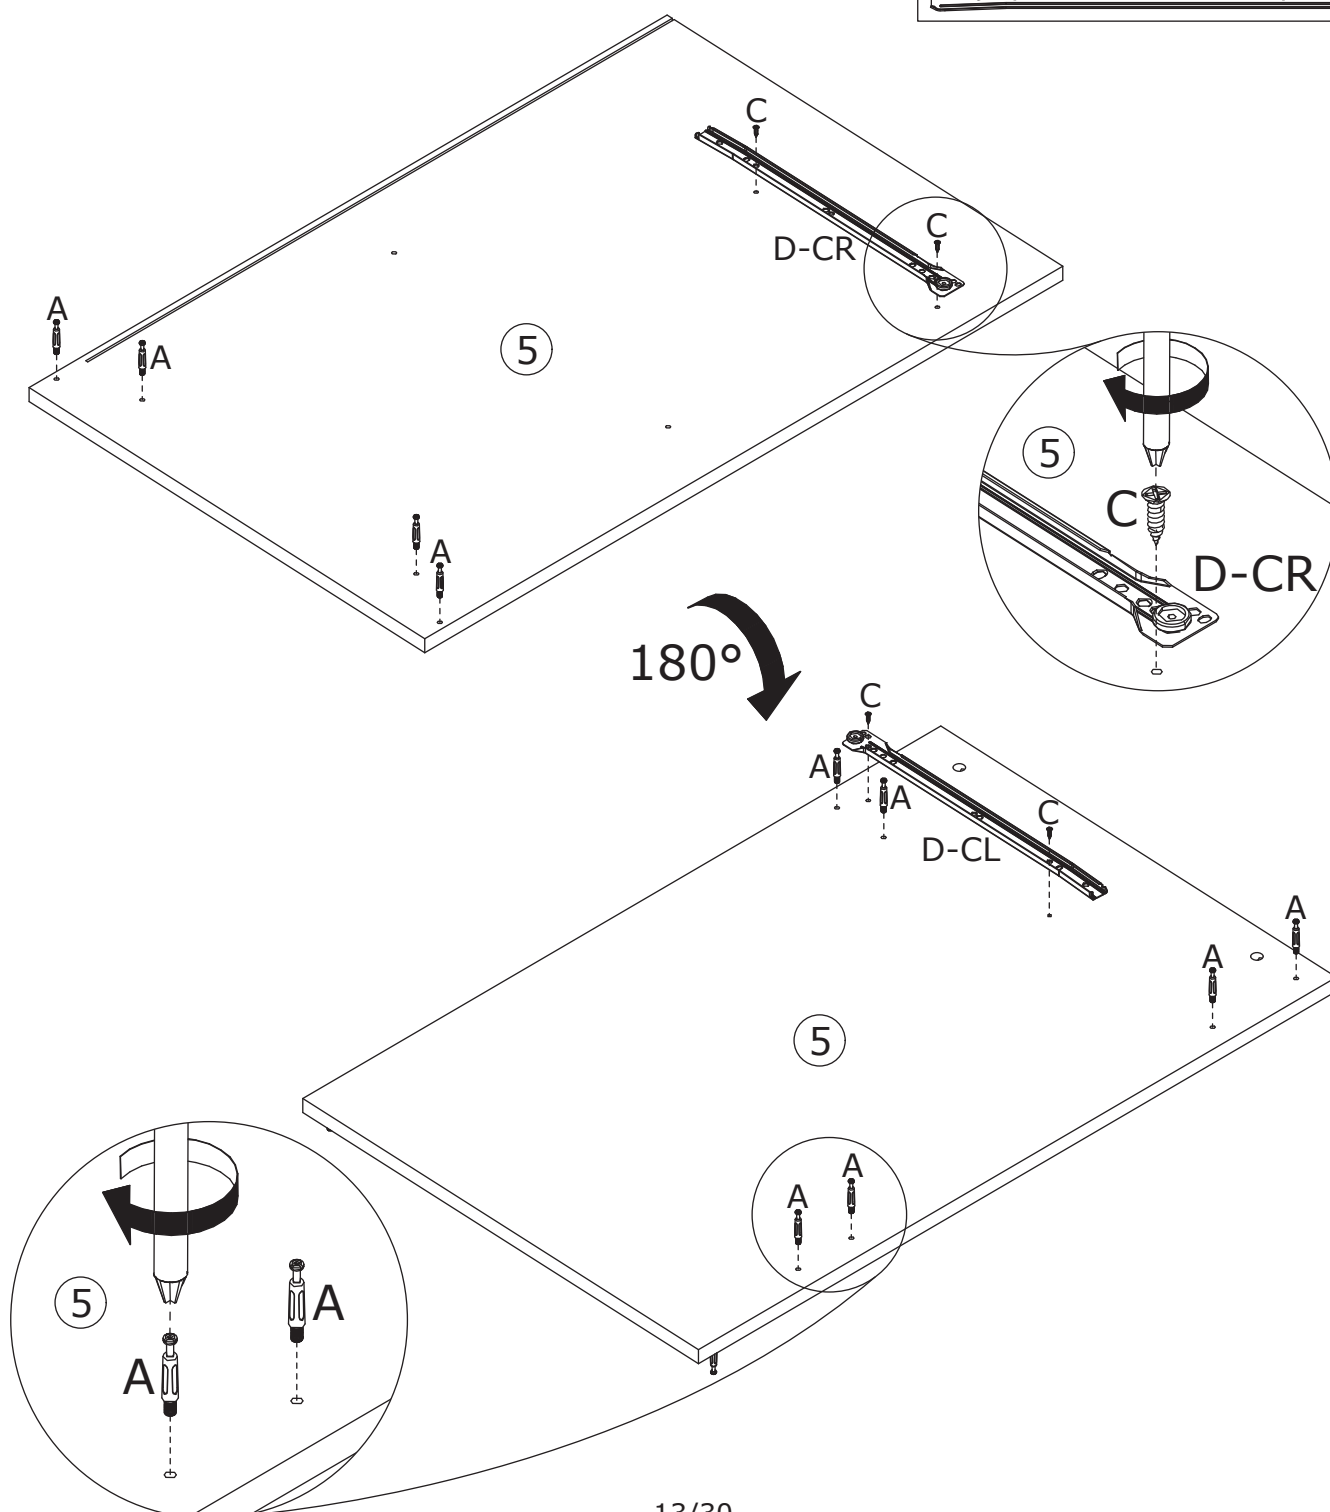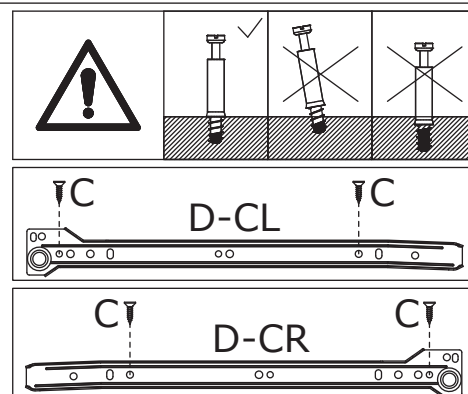


 


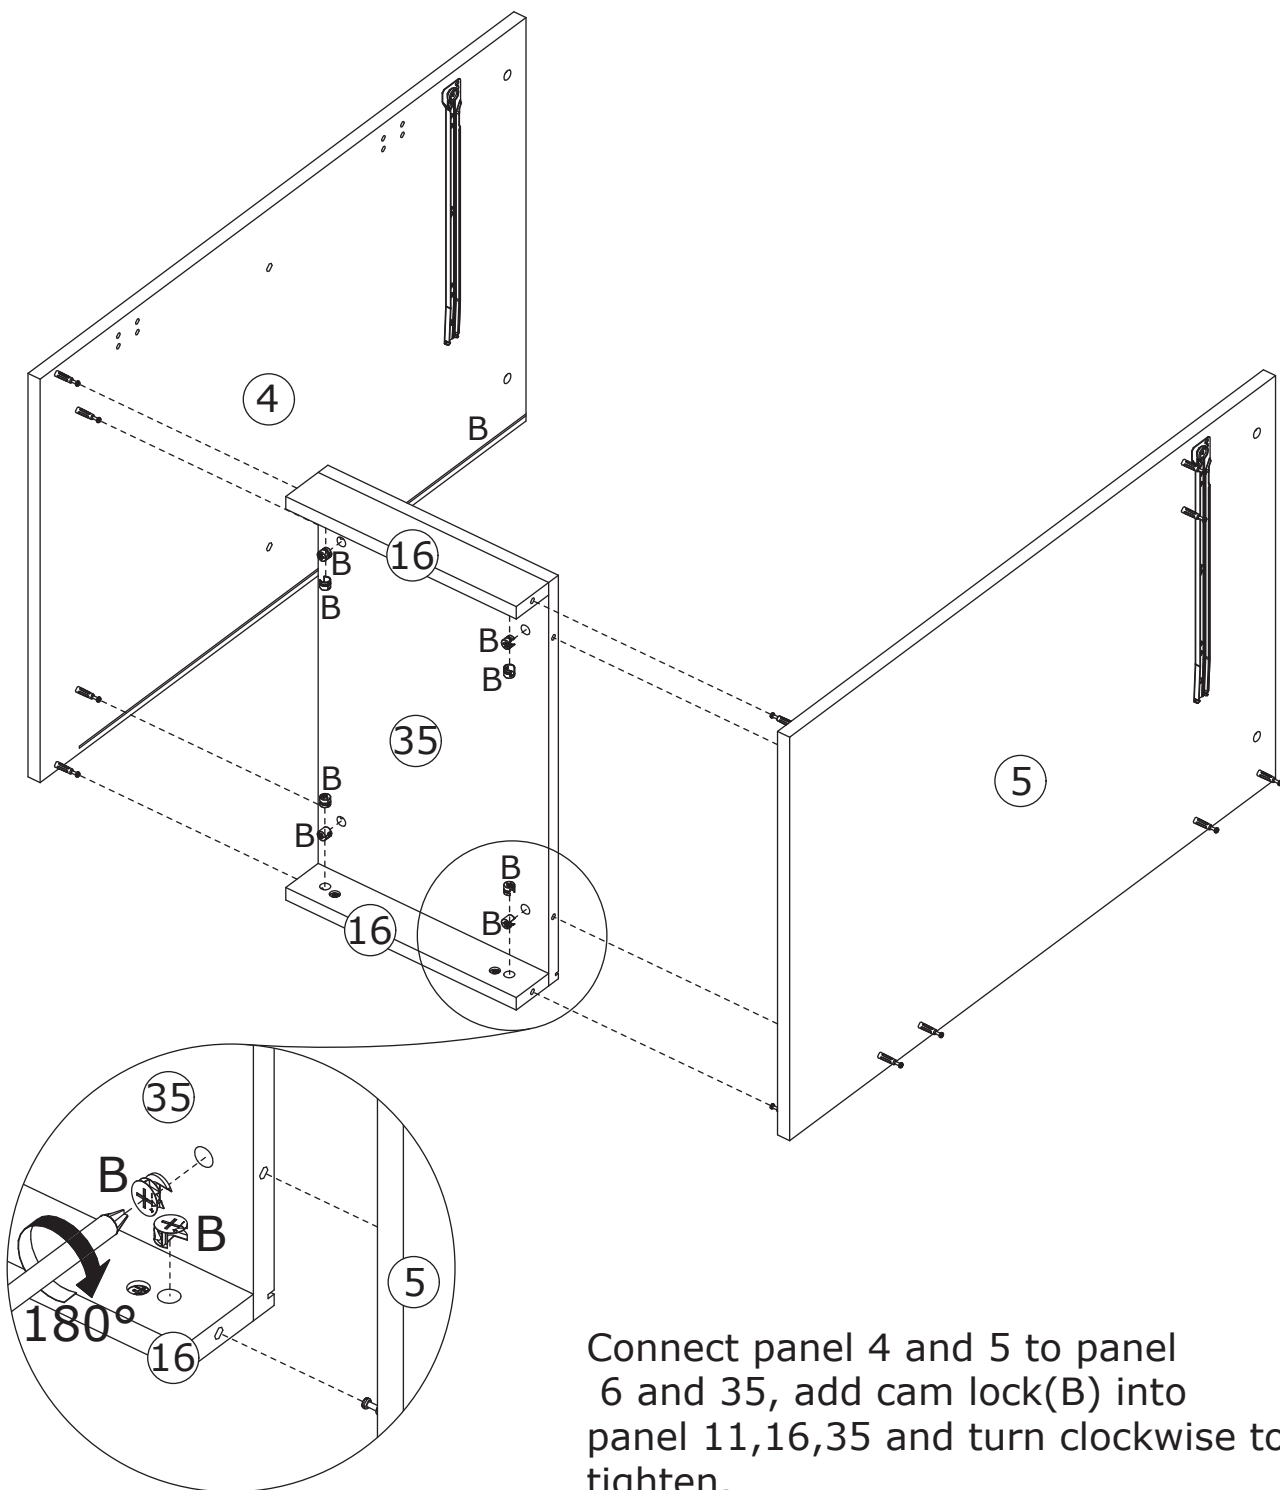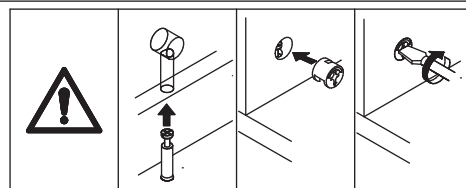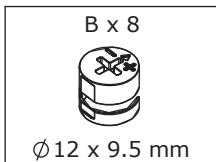9





Connect panel 4 and 5 to panel 6 and 35, add cam lock(B) into panel 11,16,35 and turn clockwise to tighten.

10

<p>A x 12</p>  <p>M6 x 40 mm</p>	<p>C x 4</p>  <p>M3 x 12 mm</p>	<p>E x 2</p>  <p>M4 x 18 mm</p>	<p>G x 2</p>  <p>ZWJL</p>	<p>H x 1</p> 	
---	--	--	---	--	---

  Fix hinge(G) to panel 10 with screw(C) and fix handle(H) with screw(E) as shown.
Screw eccentric rod(A) into panel 1 at first.
Flip to back, screw eccentric rod(A).

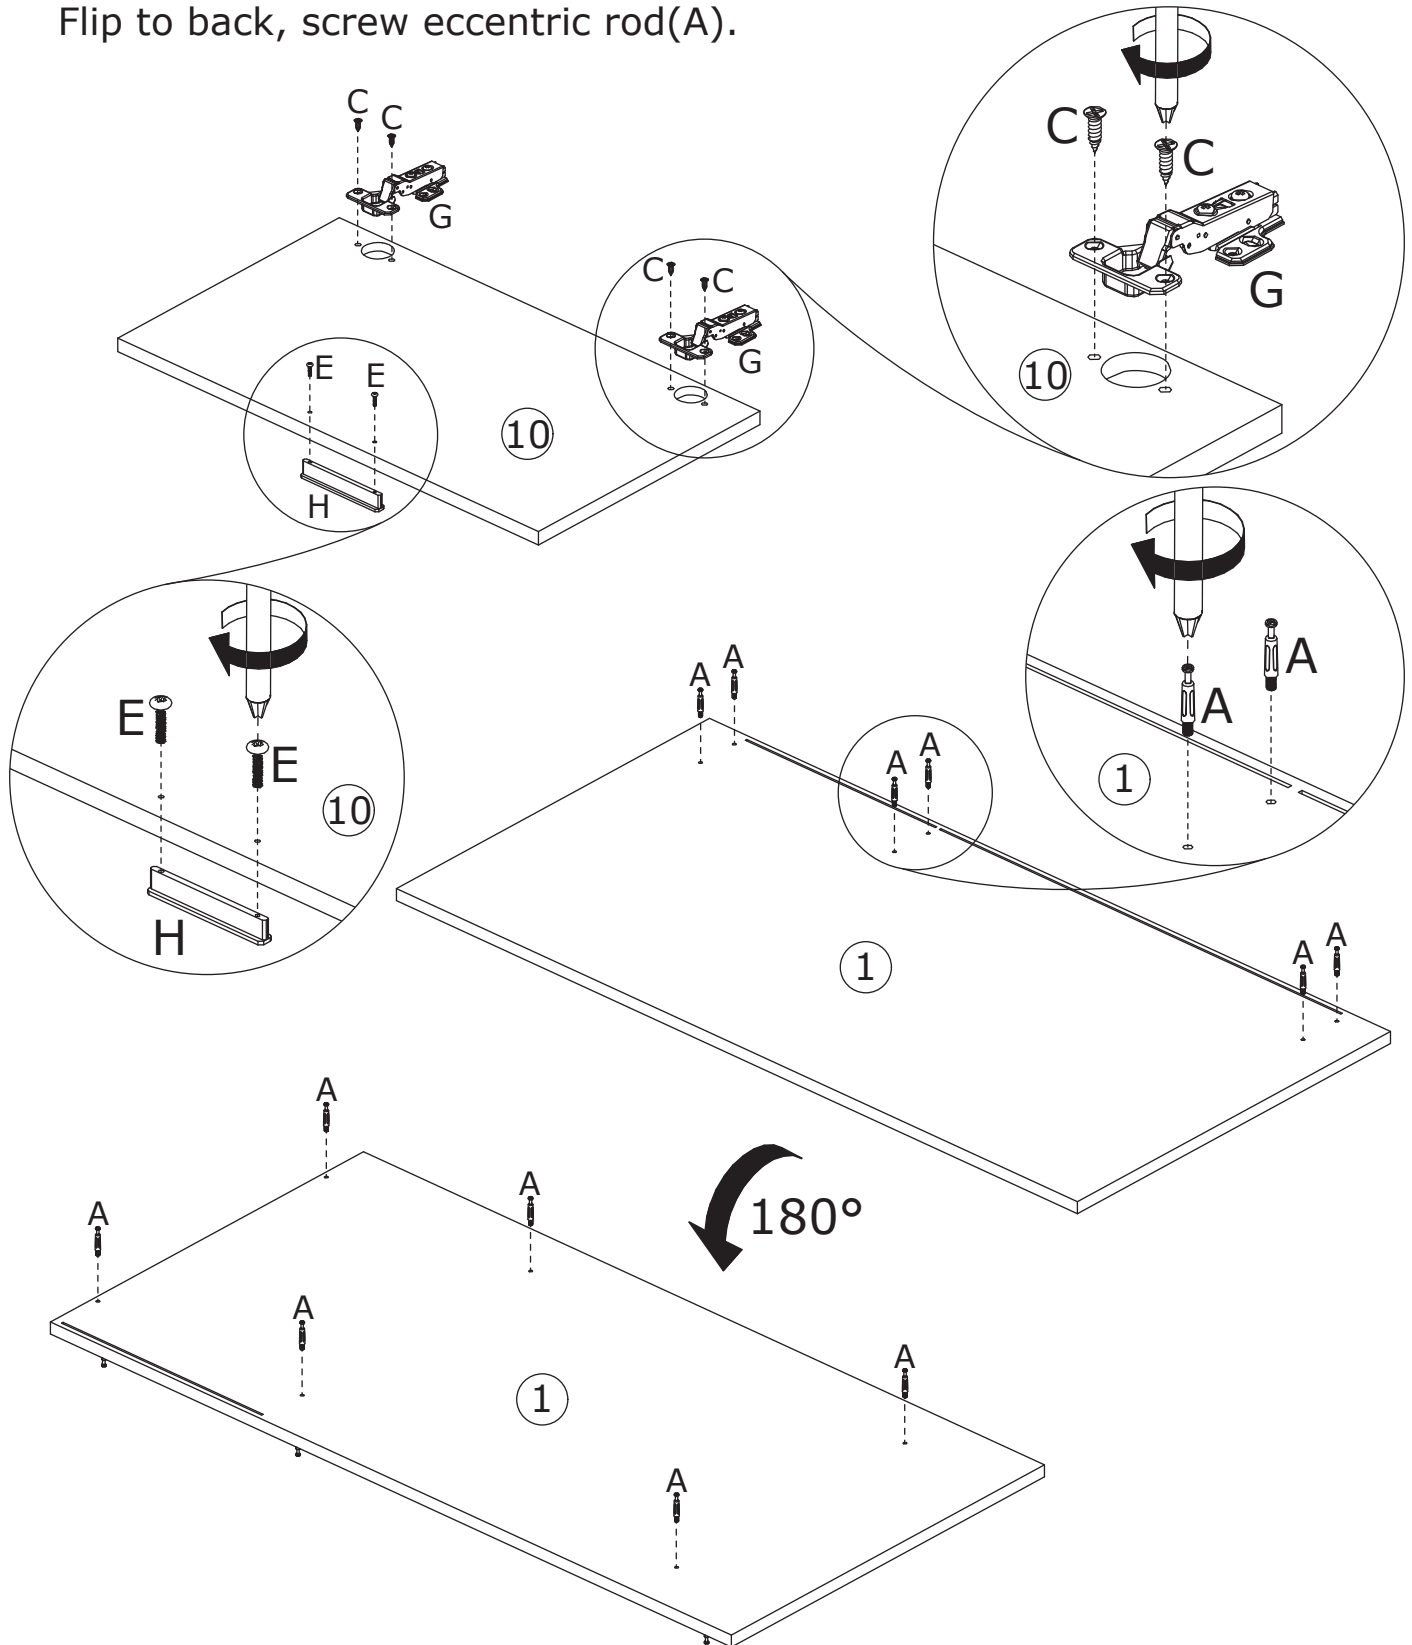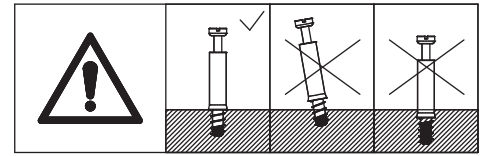

11

C x 8

 


M3 x 12 mm


J x 4




13 mm



 Assemble door panel 10 to panel 4 by fixing hinge with screw(C) as shown. Insert panel 7 along available grooves as shown.

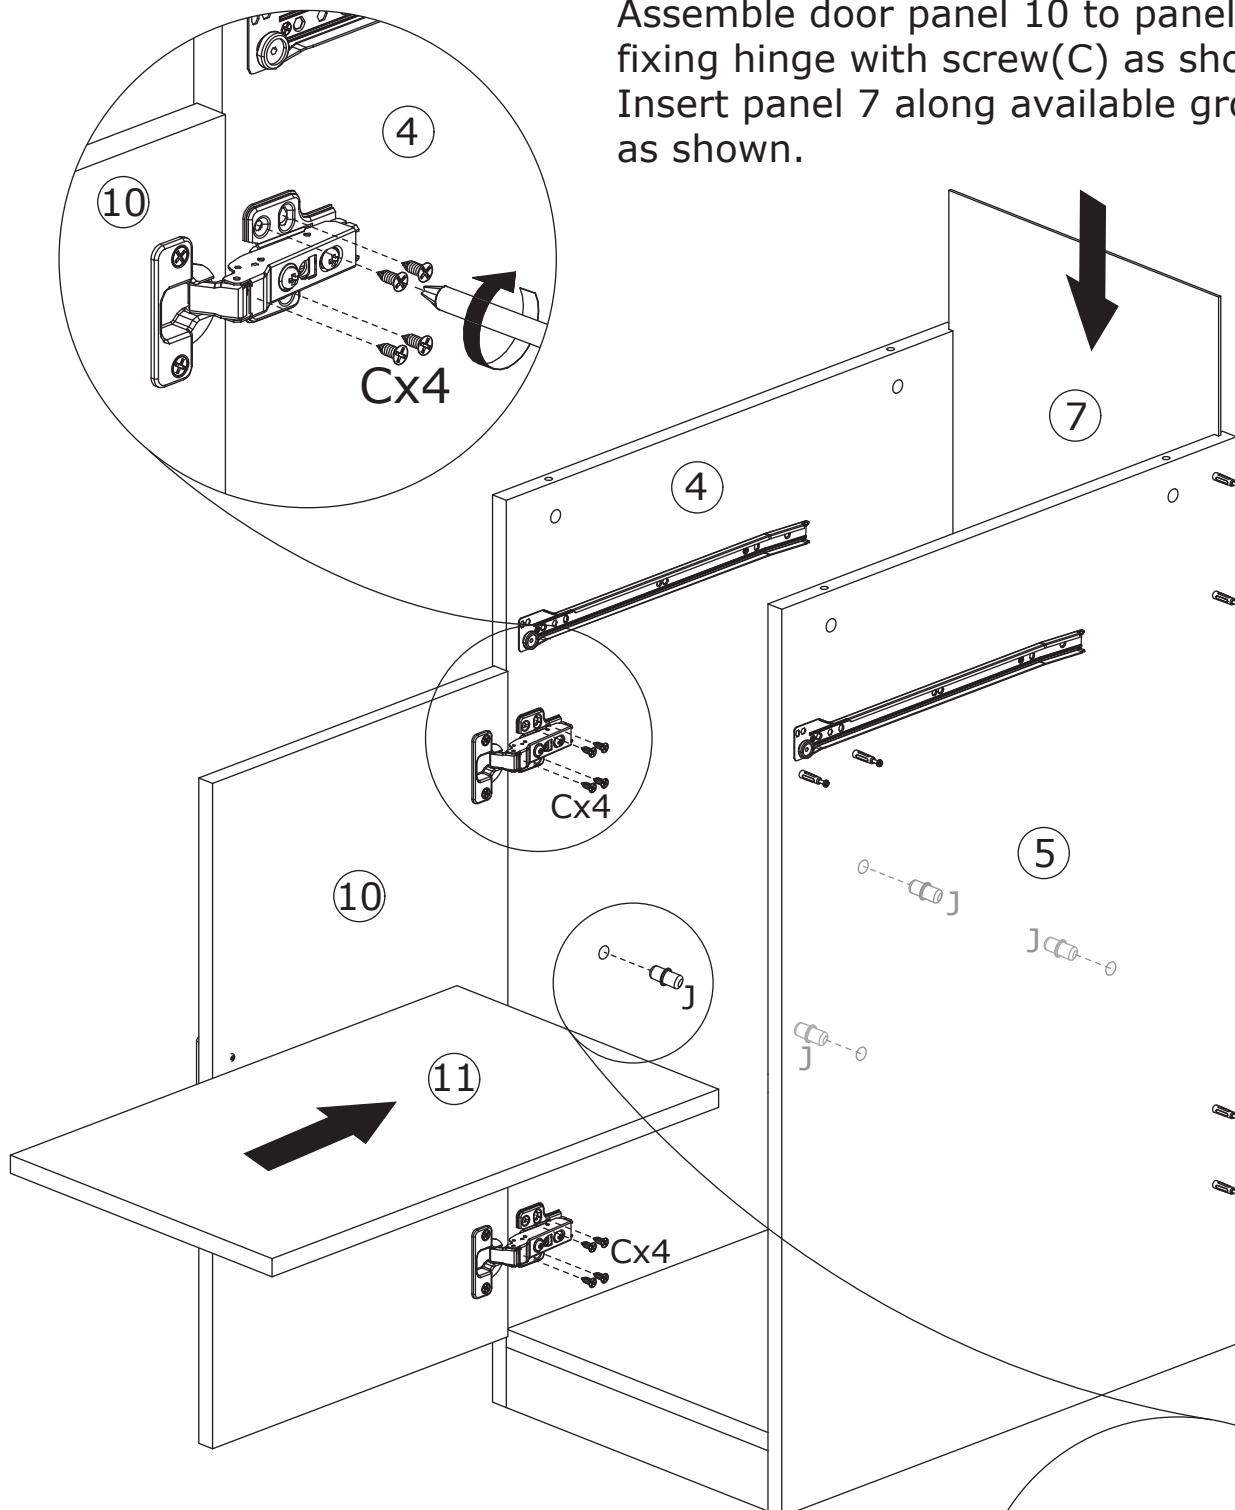

 Insert layer pin(J) into panel 4 and 5, then place shelf panel 11 on.


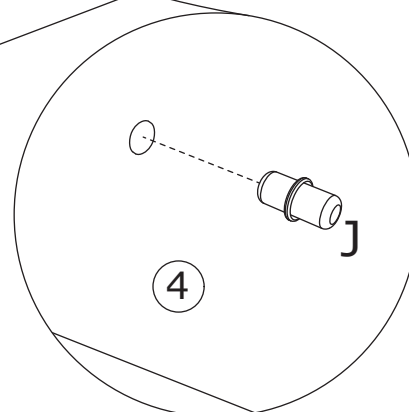


12


B x 12



 
Ø 12 x 9.5 mm


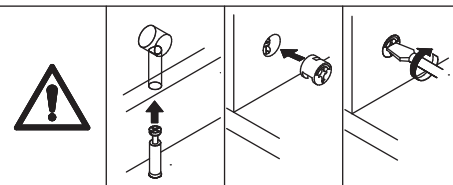
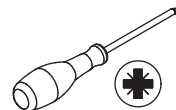


 Connect panel 6 and 5 to panel 17 and 22 and 23, add cam lock(B) into panel 17,22,23 and turn clockwise to tighten as shown.

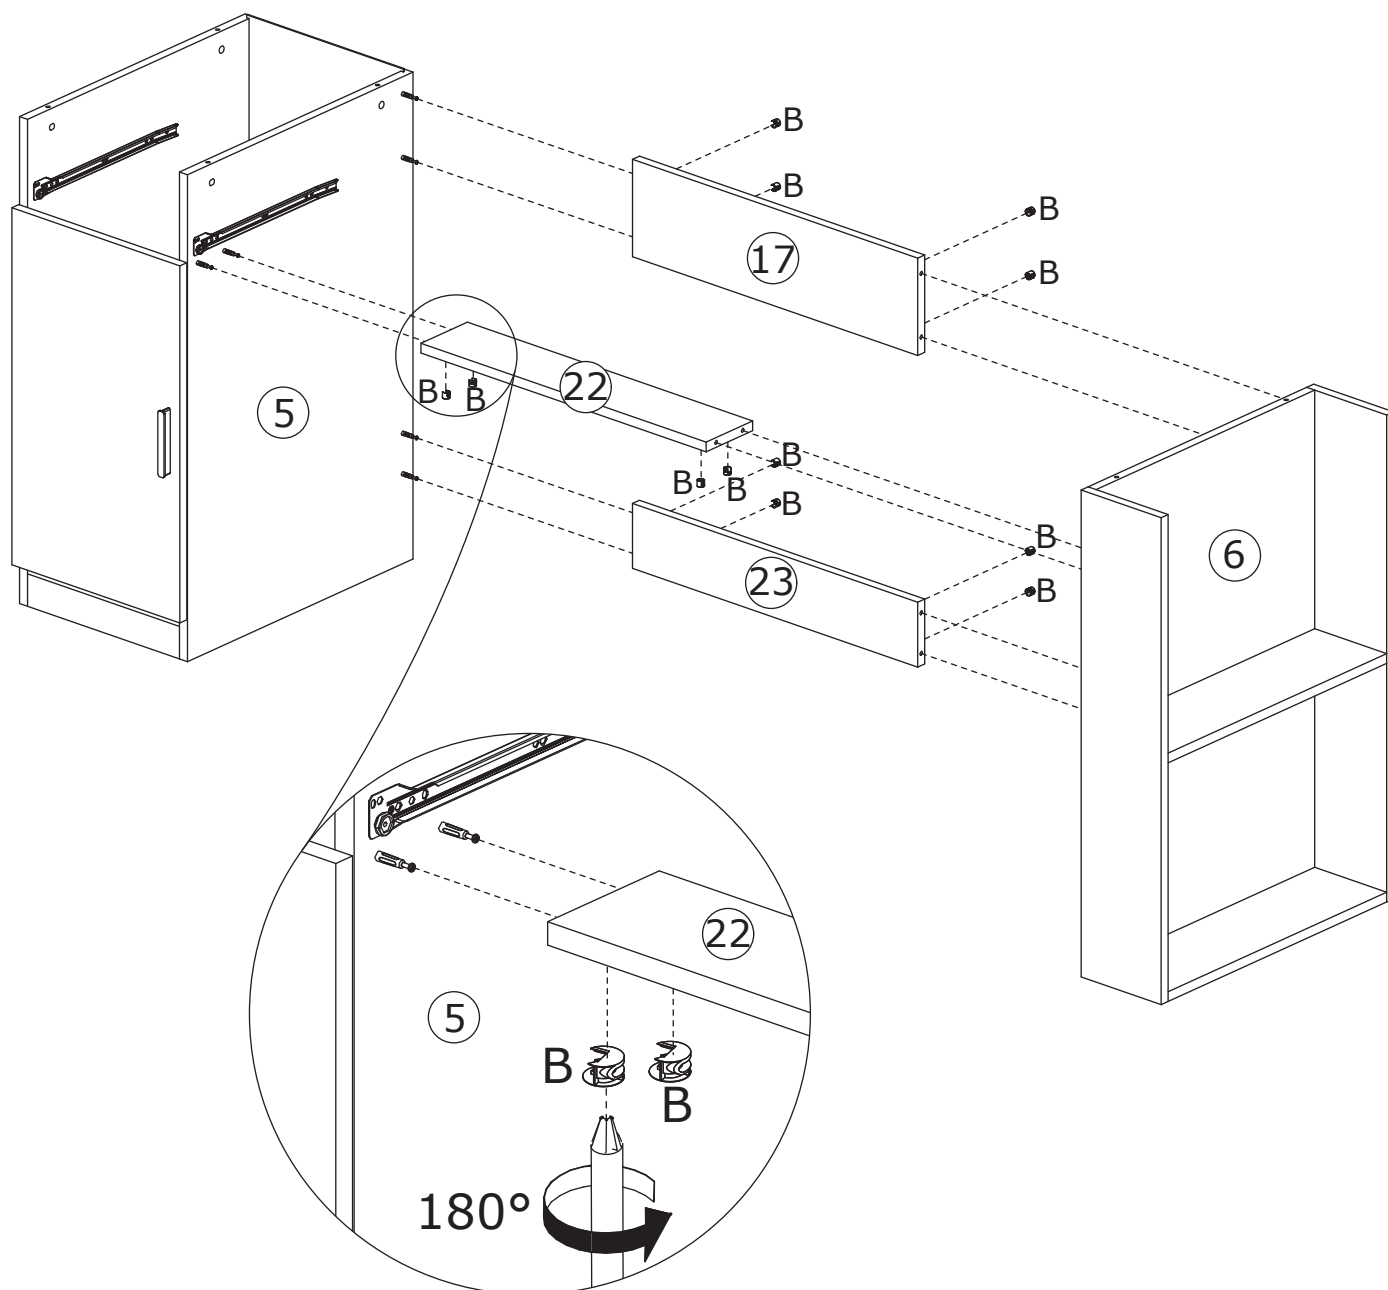


13

   B x 6

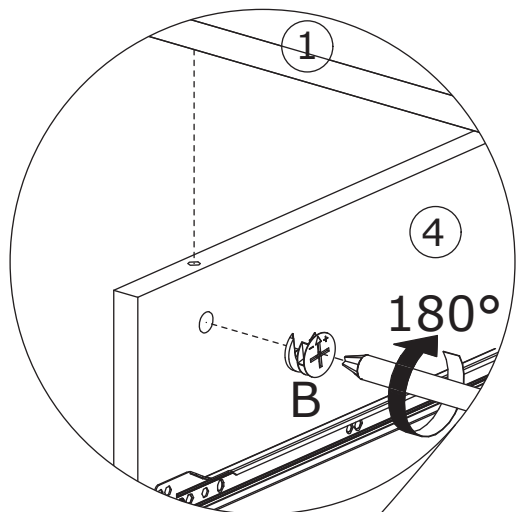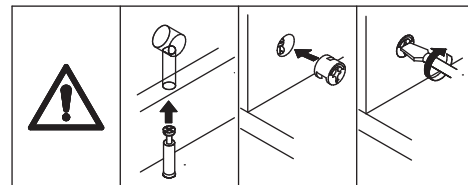 Ø 12 x 9.5 mm

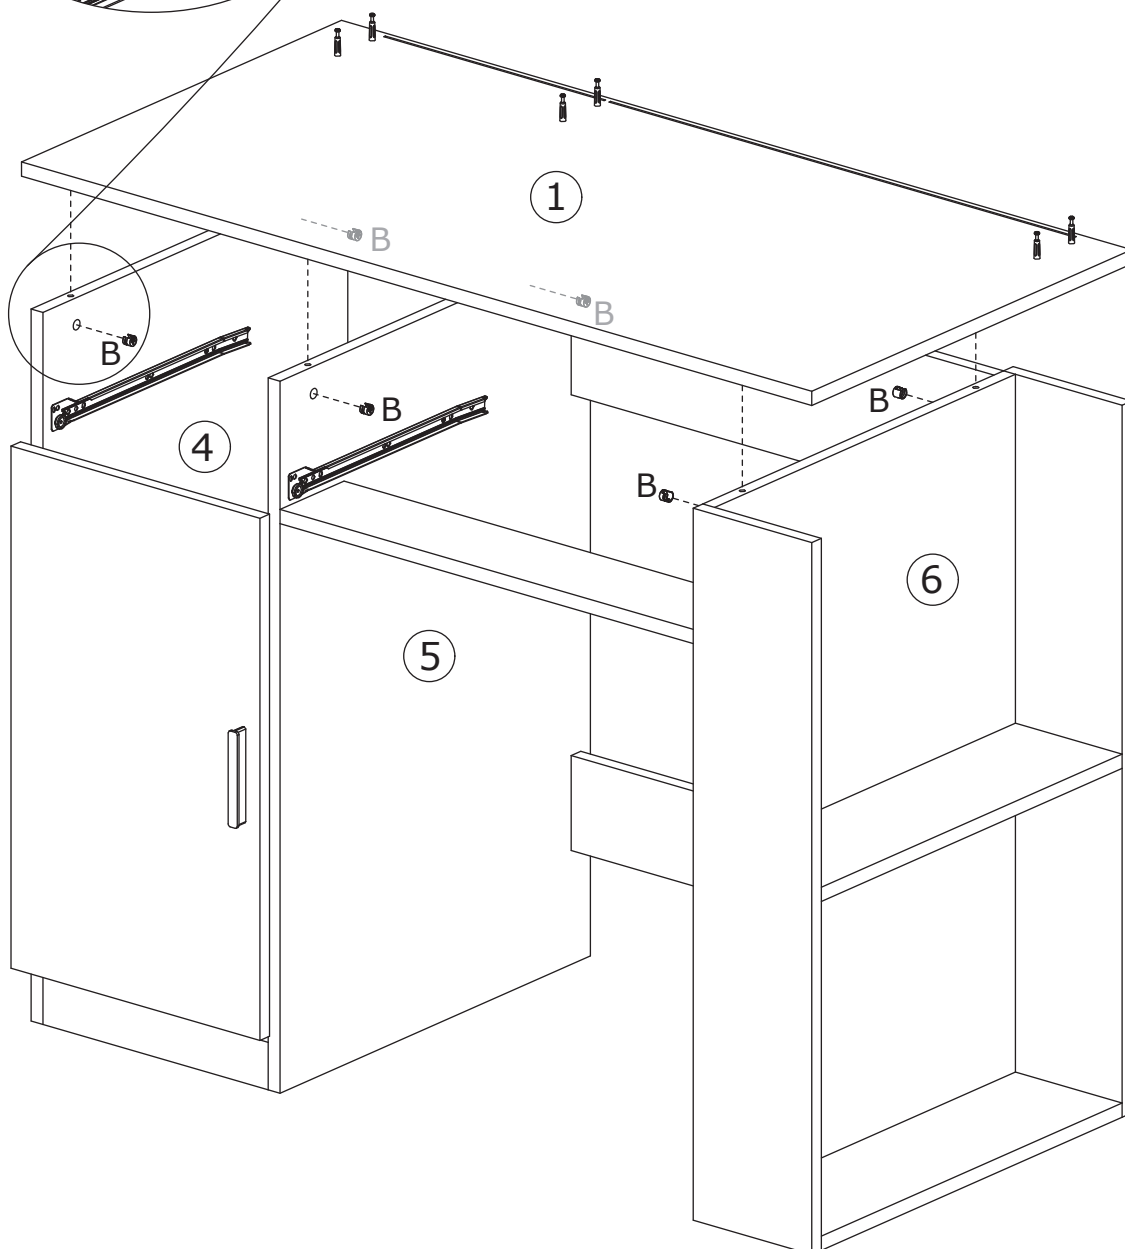 

Attach panel 1 to top, add cam lock(B) into panel 4,5,6 and turn clockwise to tighten as shown.

 
 
 


14



A x 17
M6 x 40 mm

C x 4
M3 x 12 mm




F x 2
F-1
300 x 400 mm

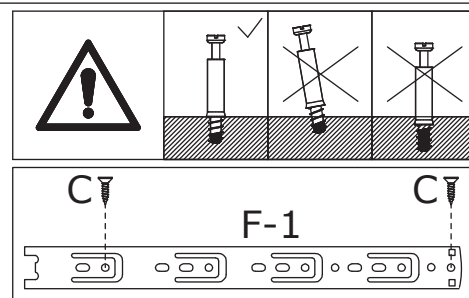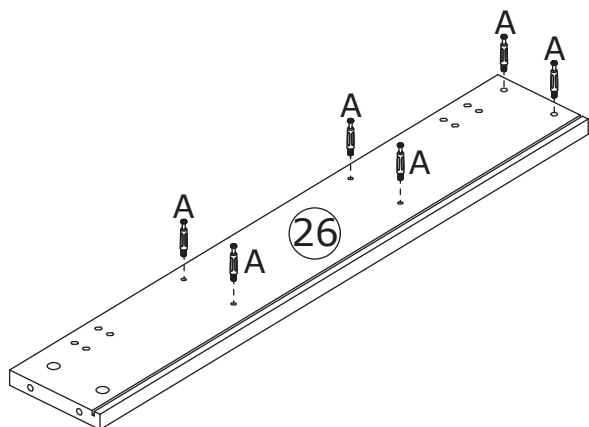

 
 
Screw eccentric rod(A) into panel 26 and 27 at first.
Fix rail(F-1) to panel 32 and 38 with screw(C) as shown.

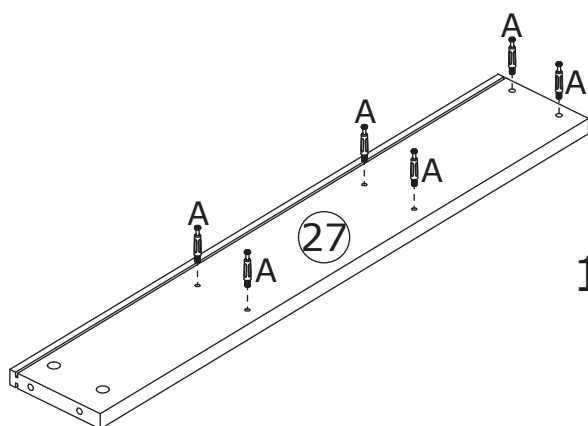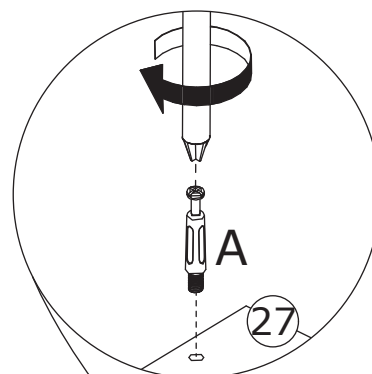



180°

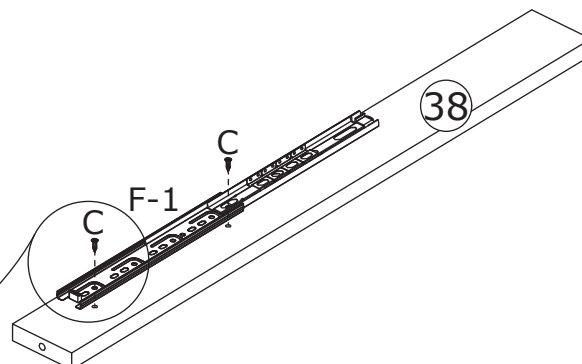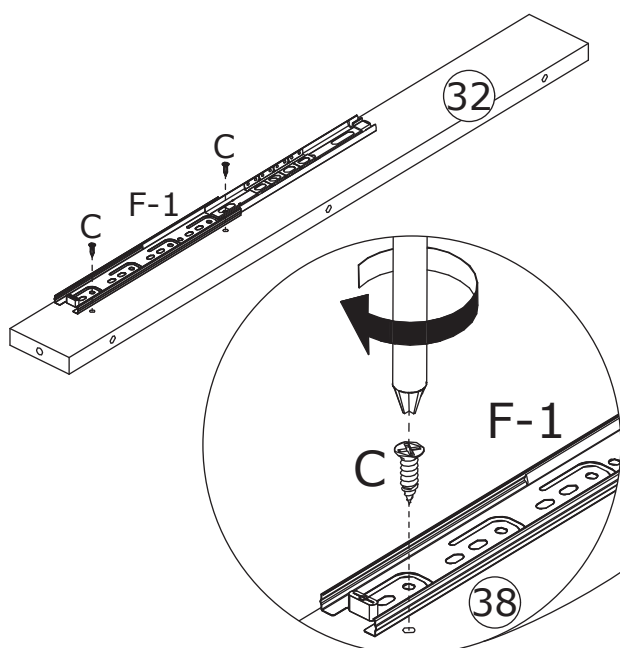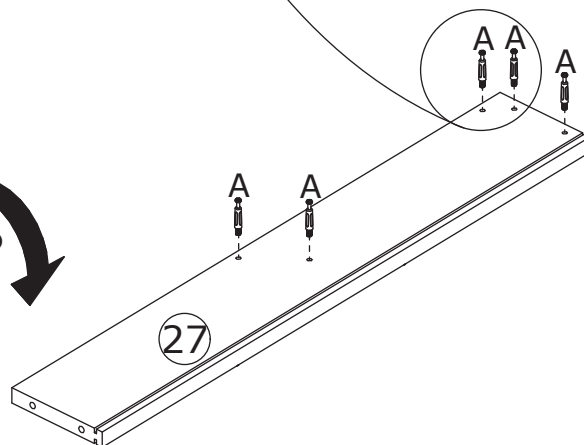   

15

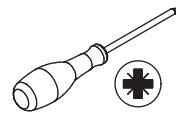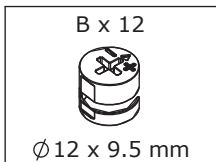 


 
 
Connect panel 26 and 27 to panel 29 and 30, add cam lock(B) into panel 30 and turn clockwise to tighten as shown.

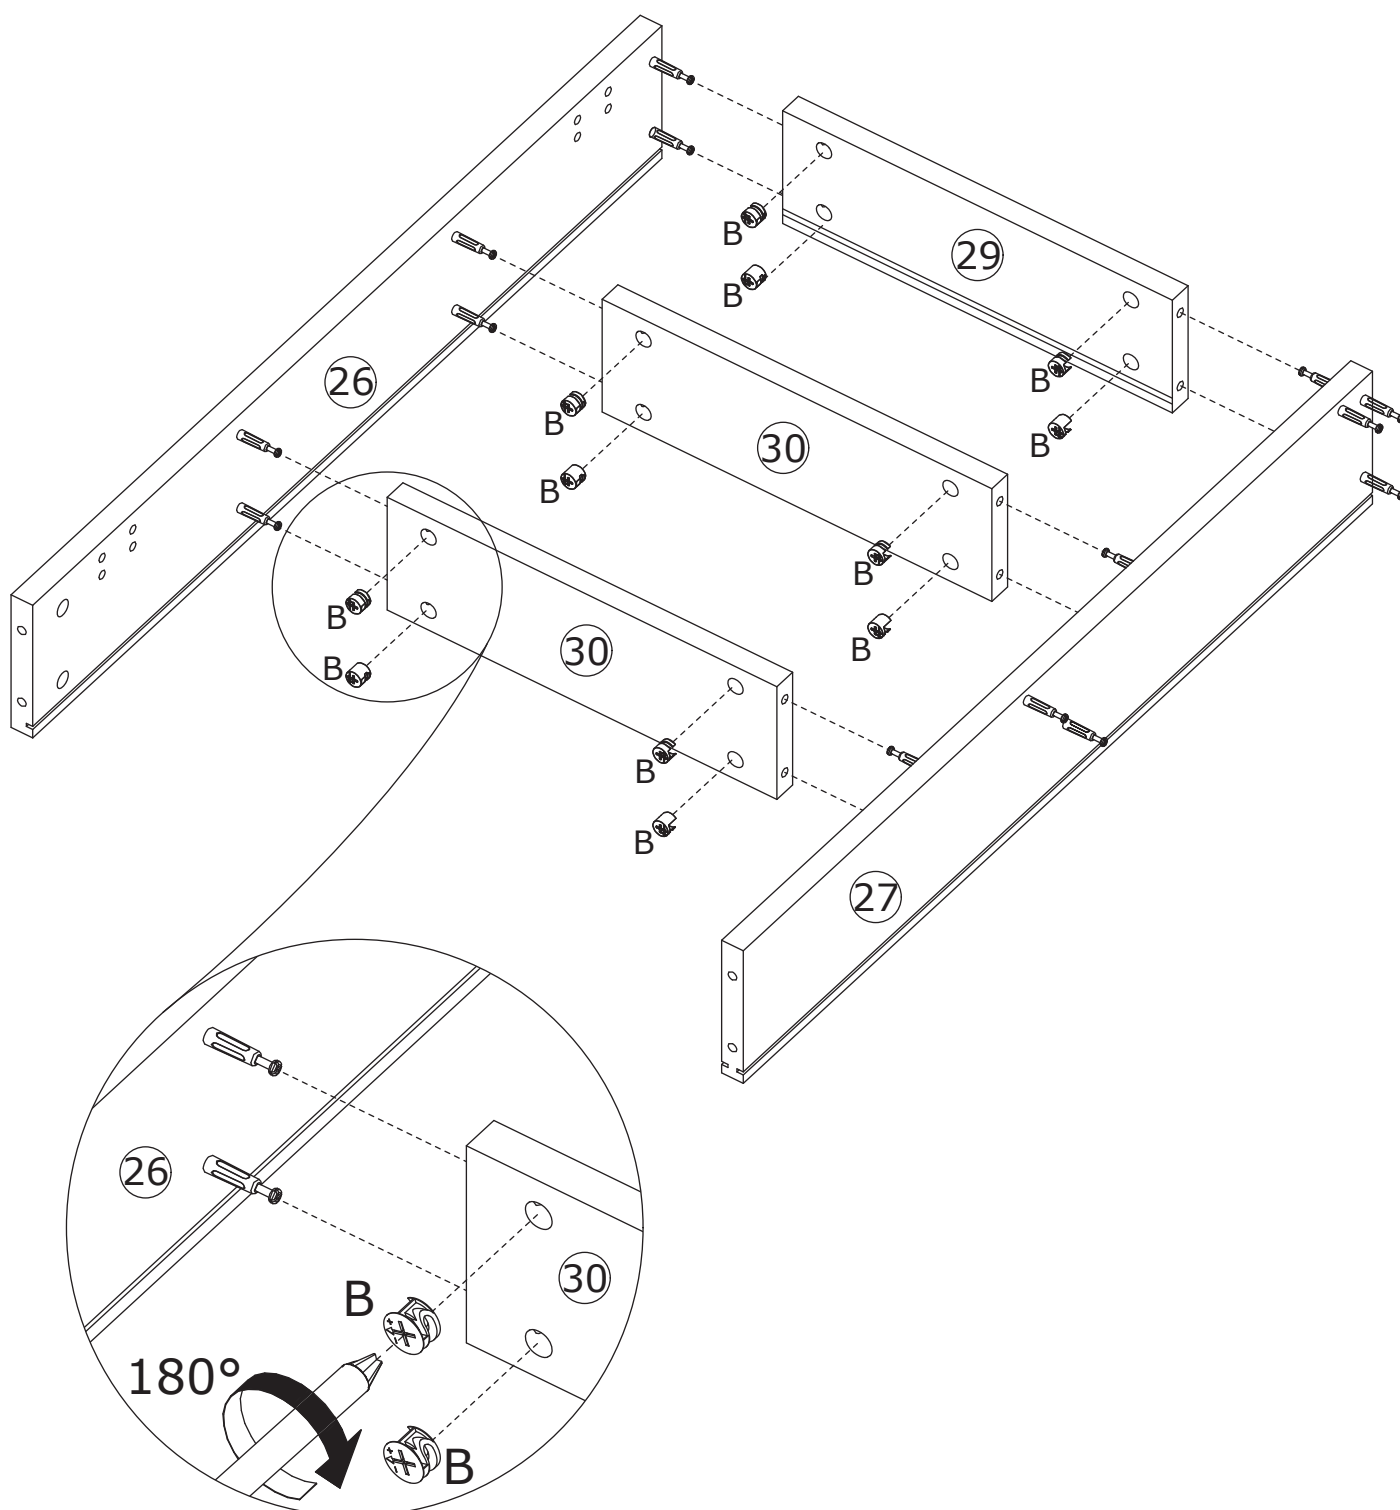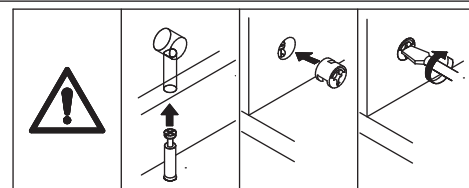





16

A x 8
M6 x 40 mm

   B x 8
Ø12 x 9.5 mm

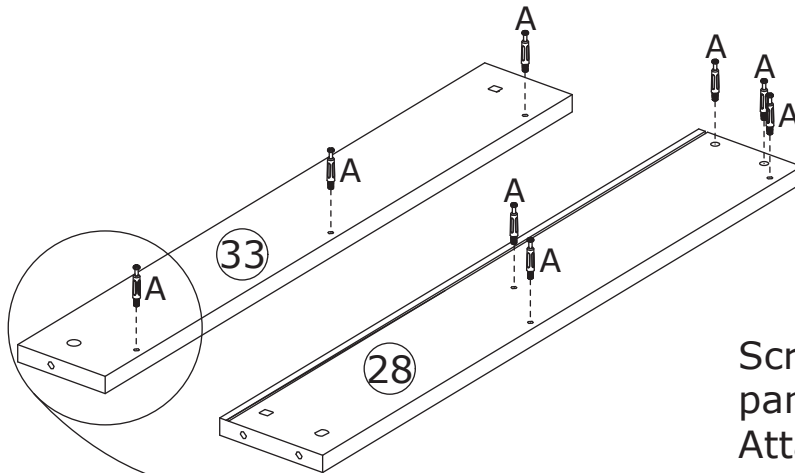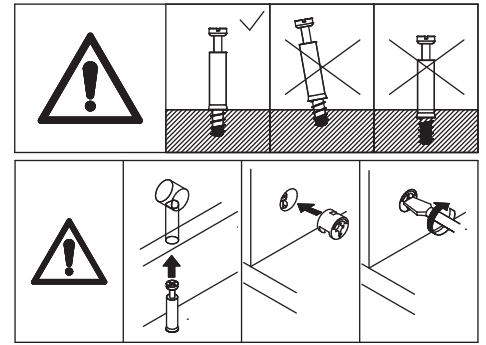



    Screw eccentric rod(A) into panel 28 and 33 at first.
Attach panel 32 to panel 33, add cam lock(B) into panel 32 and turn clockwise to tighten as shown.

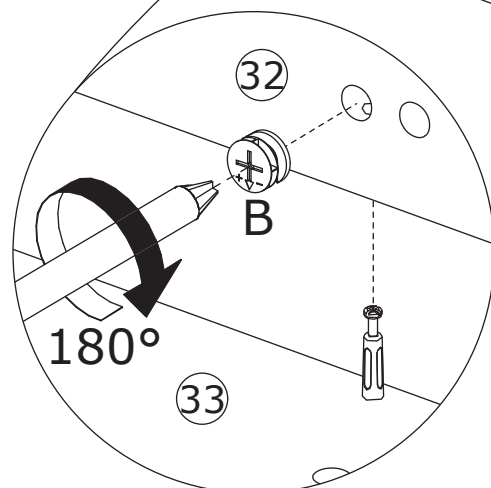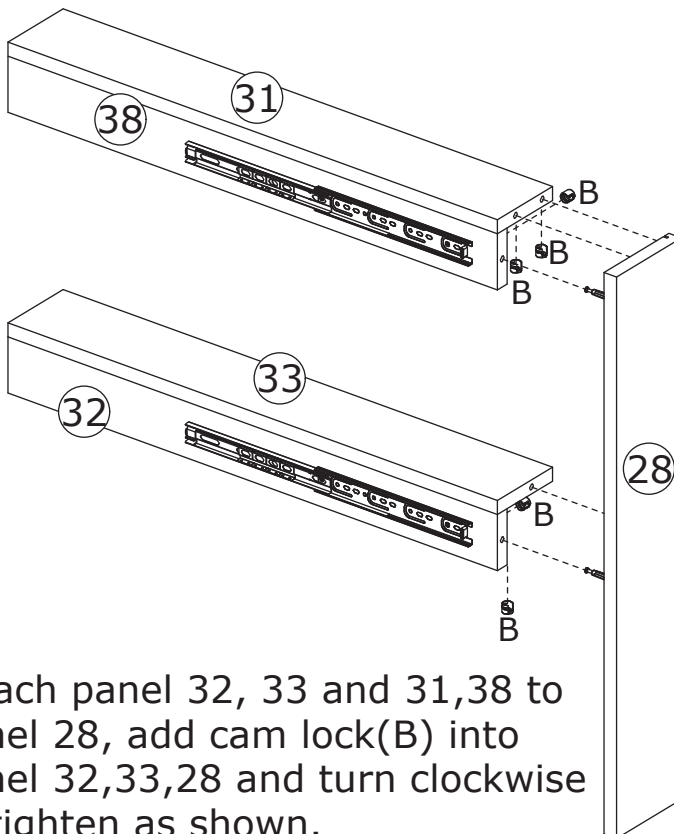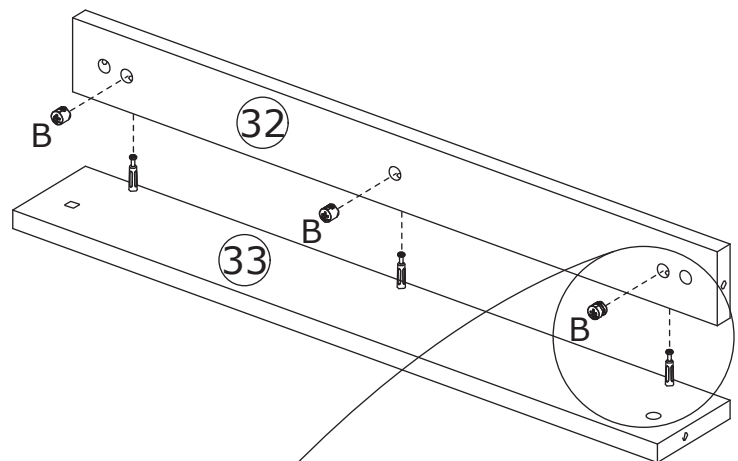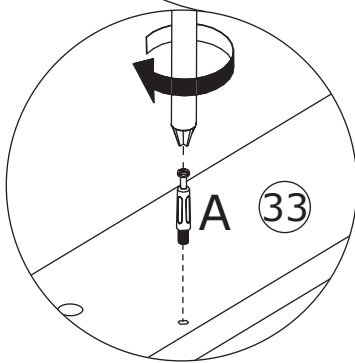


Attach panel 32, 33 and 31,38 to panel 28, add cam lock(B) into panel 32,33,28 and turn clockwise to tighten as shown.

 17

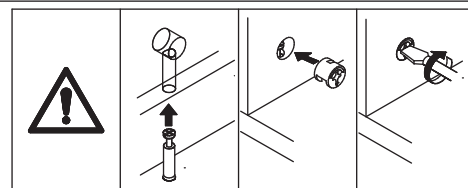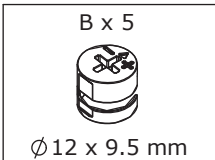


 Connect panel 31,32, 33 and 31,38 to panel 27,
add cam lock(B) into panel 32,33,28 and
turn clockwise to tighten as shown.

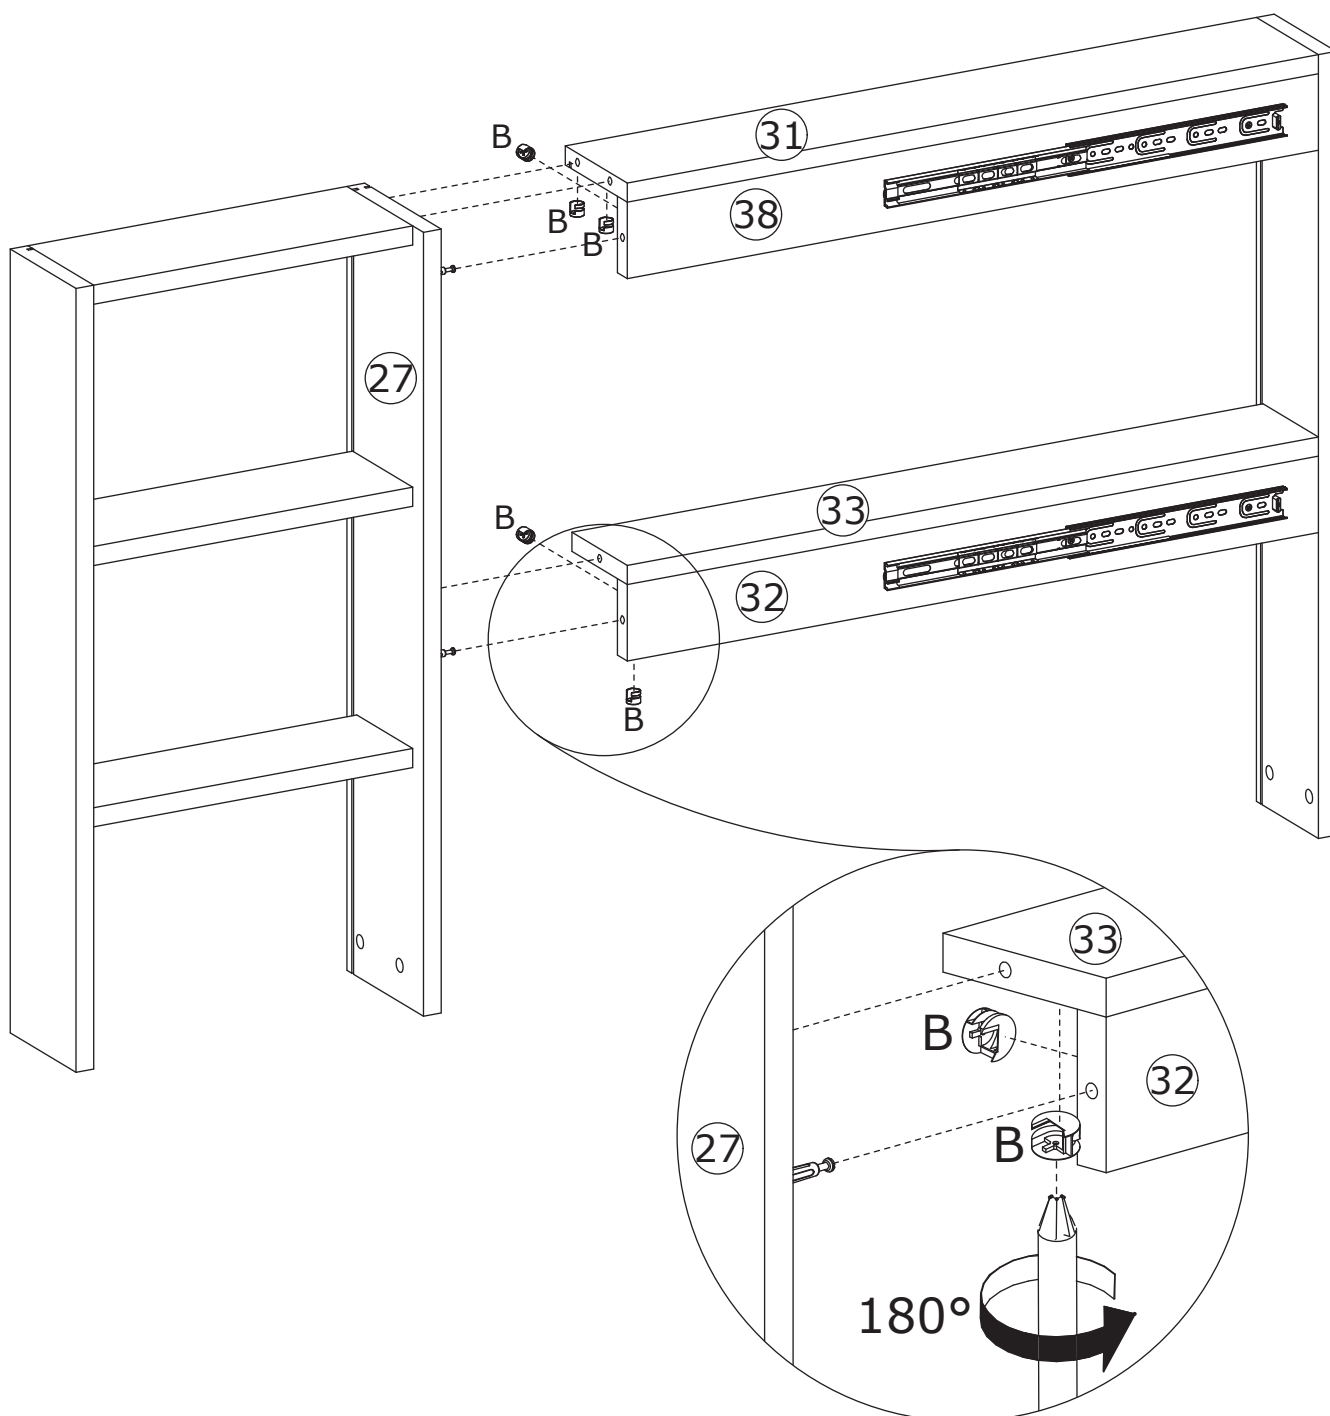

18

 Insert panel 3 and 9 along available grooves as shown.




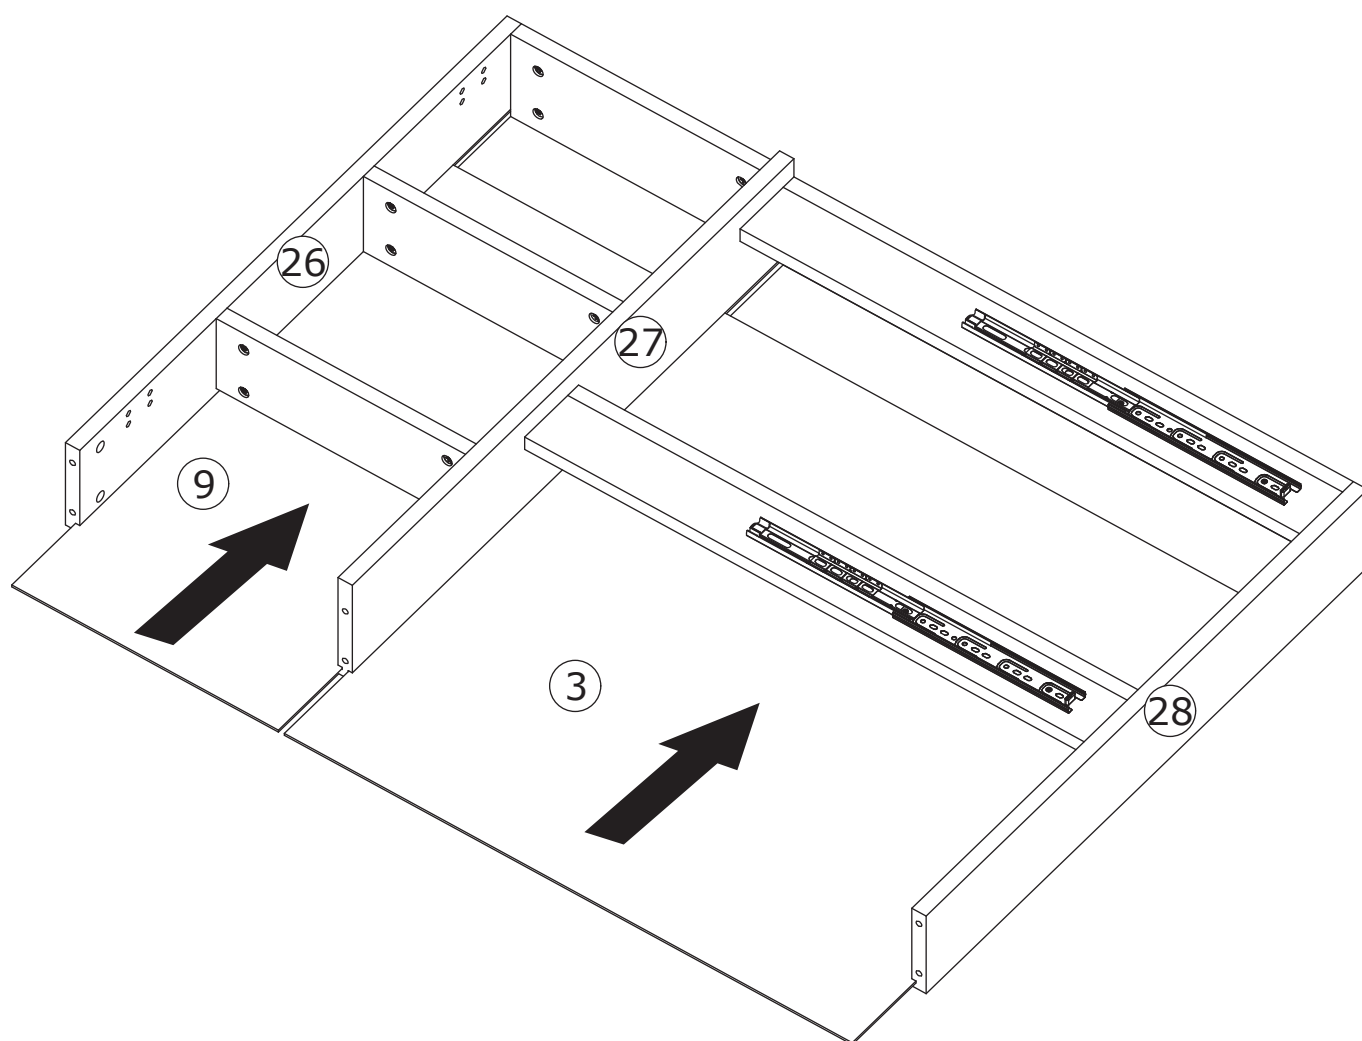


19

B x 6



    Ø 12 x 9.5 mm

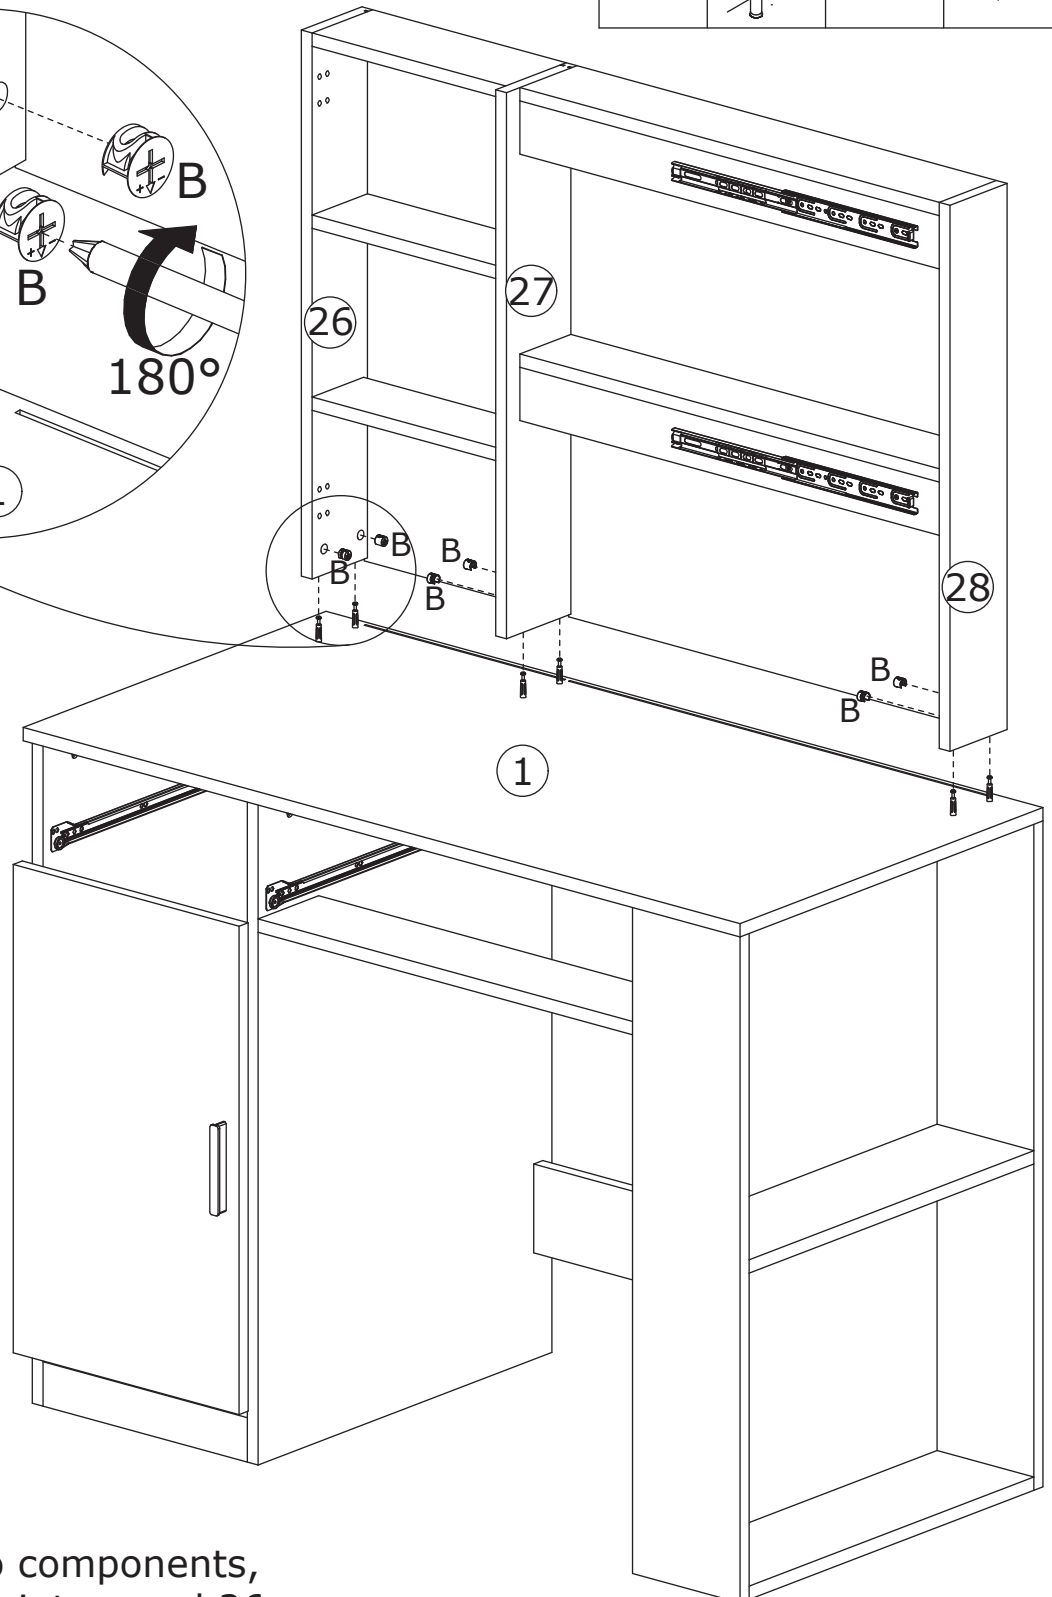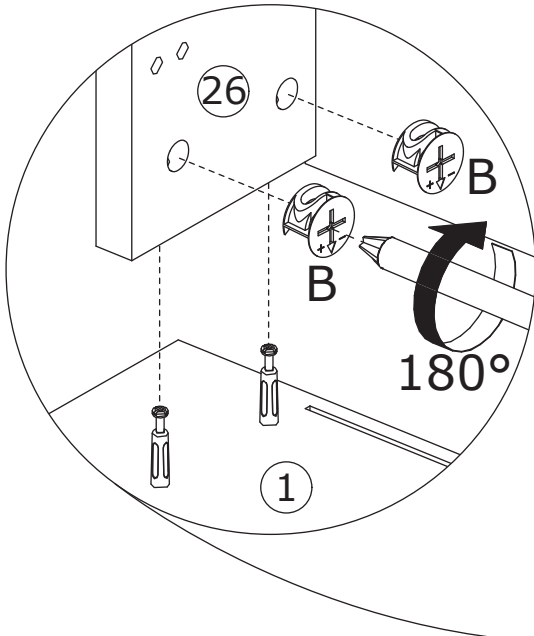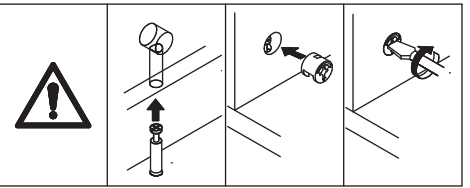


Connect the two components,
add cam lock(B) into panel 26,
27,28 and turn clockwise to
tighten.

20

<p>C x 4</p>  <p>M3 x 12 mm</p>	<p>G x 2</p>  <p>ZWJL</p>	
--	--	---

 Fix hinge(G) to panel 8 with screw(C) as shown.

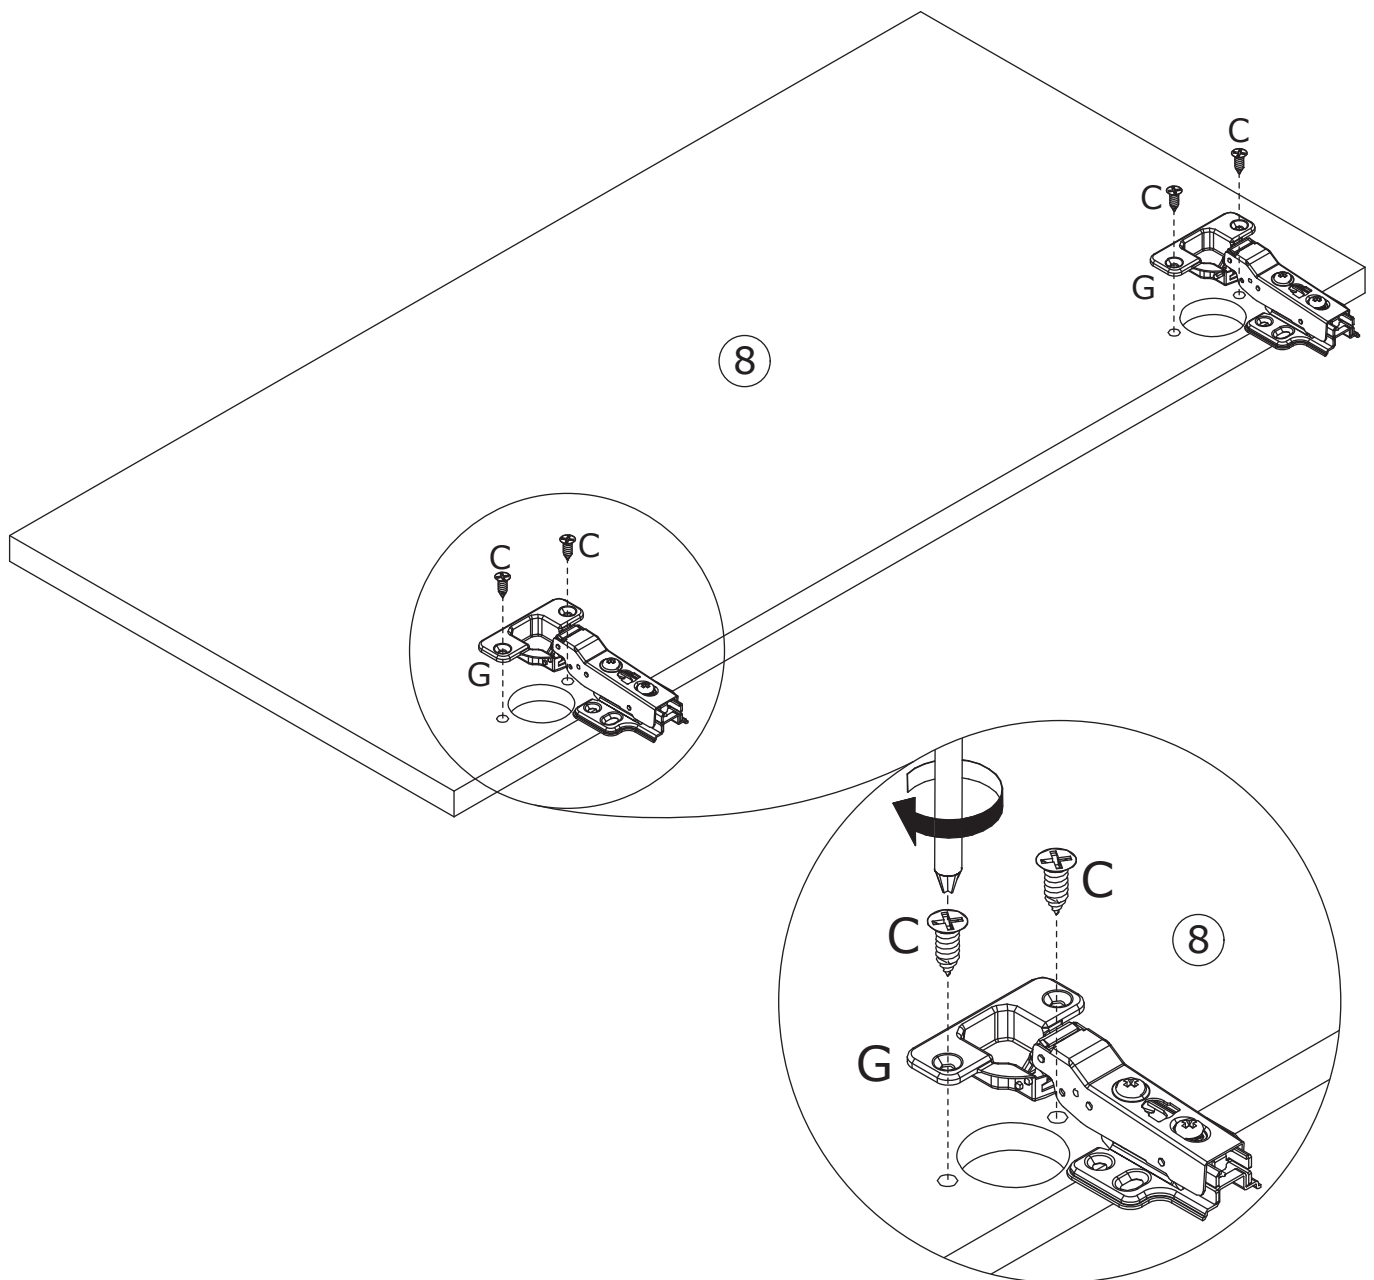


21




C x 8



 M3 x 12 mm

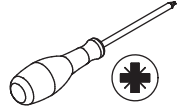

   Assemble door panel 8 to panel 26 by fixing hinge with screw (C) as shown. Align rails, assemble the mirror panel.




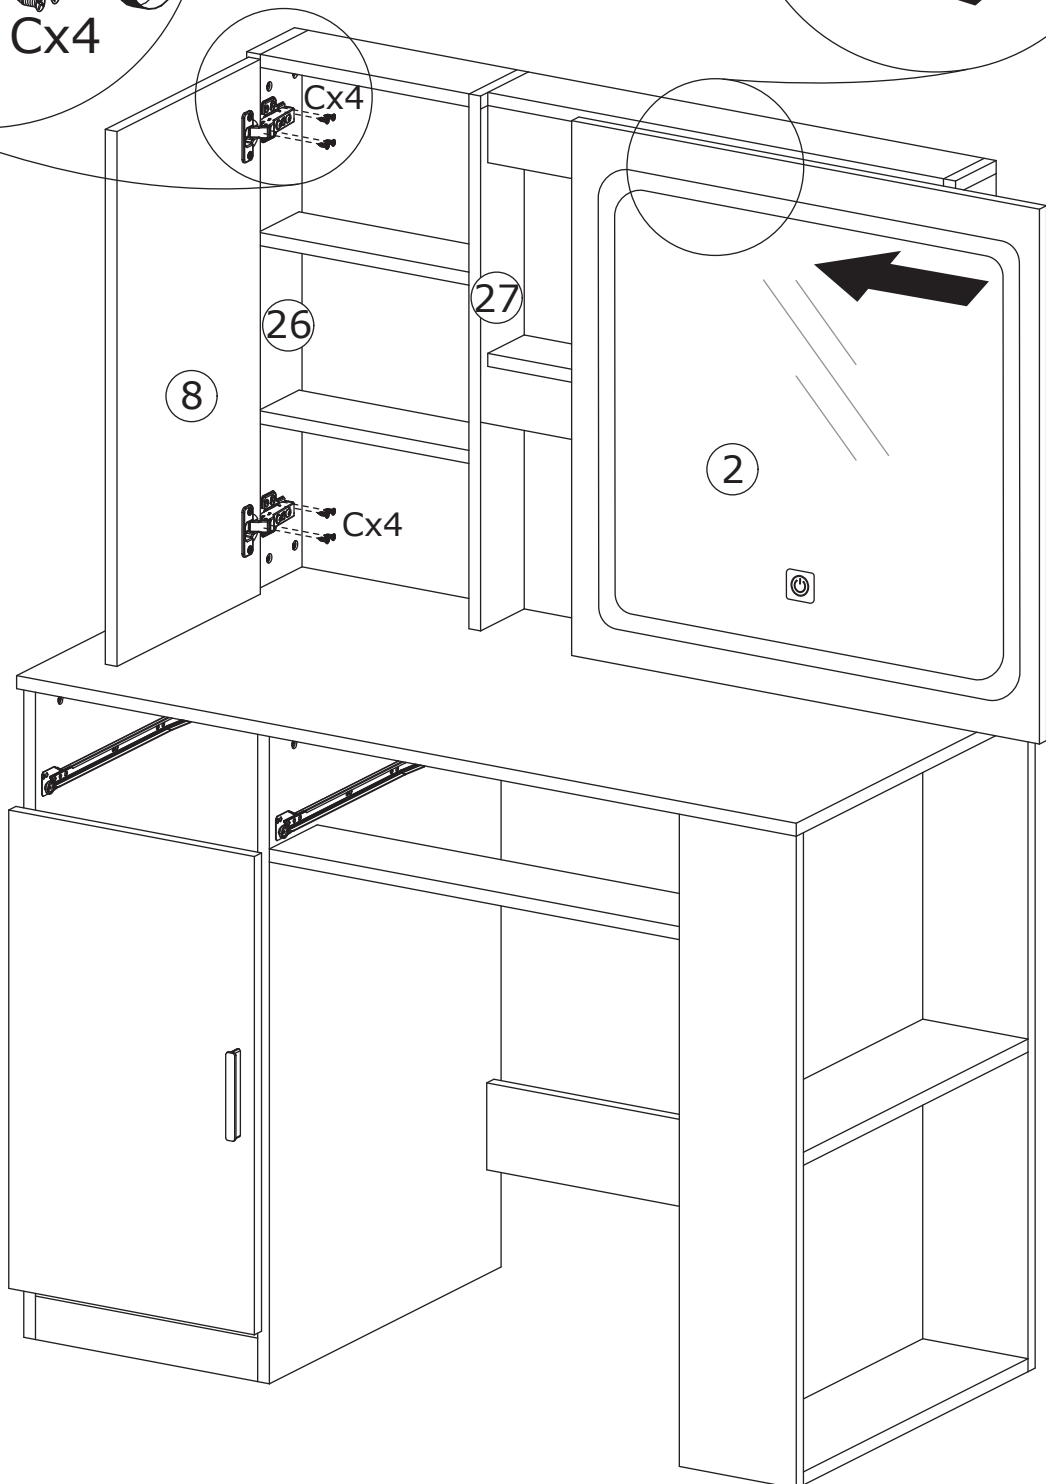
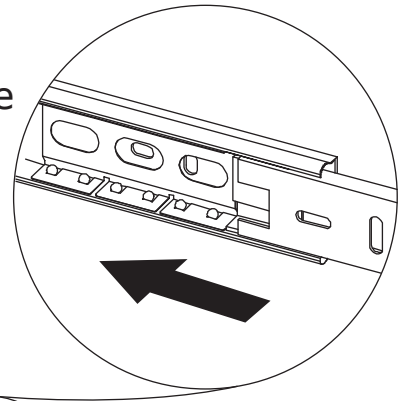
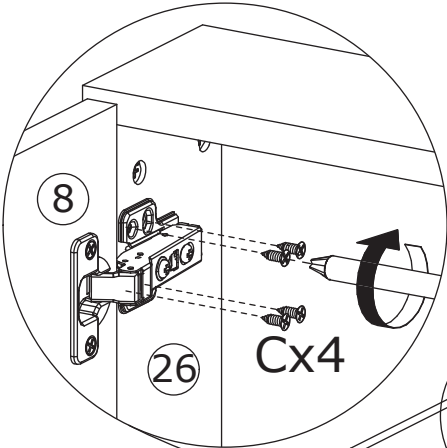


22





A x 8
M6 x 40 mm

C x 8
M3 x 12 mm

      D x 2
CL
CR
300 x 40 mm

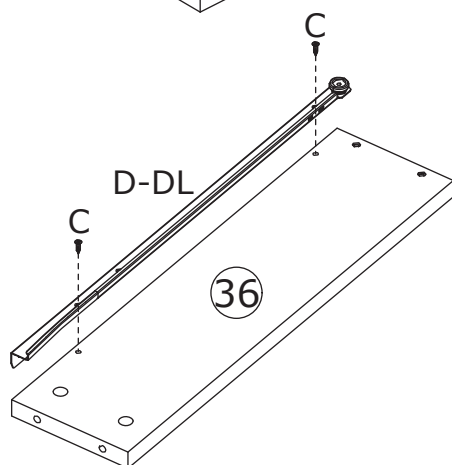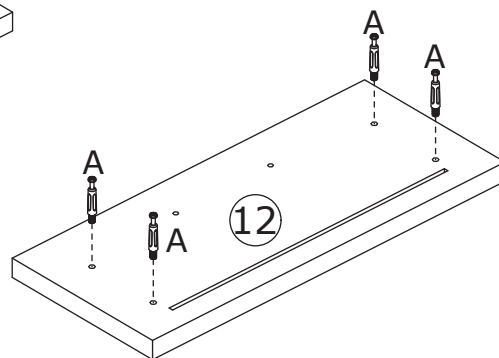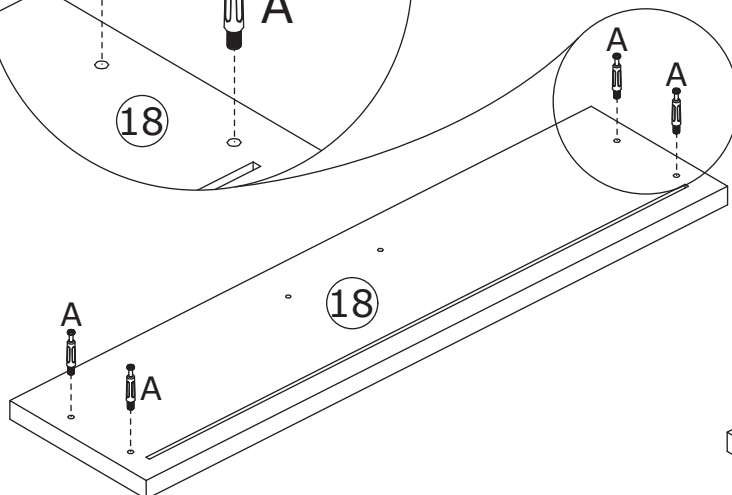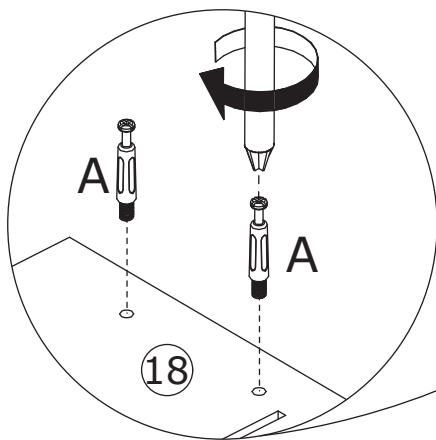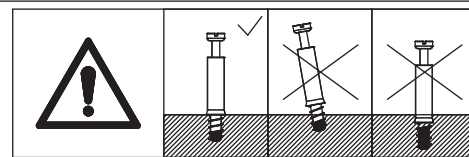

    Screw eccentric rod(A)
into panel 12 and 18 at first.
Fix rail(DL) and (DR)
to panel 36, 37 and 14, 20
with screw(C) as shown.

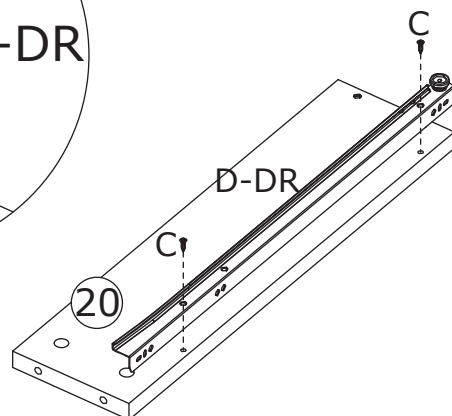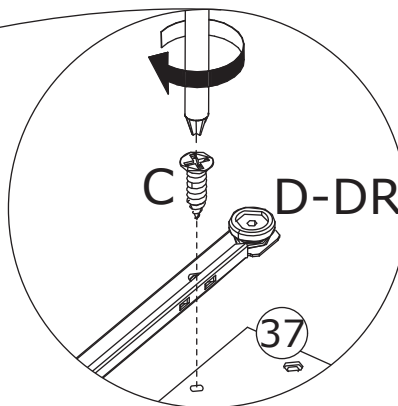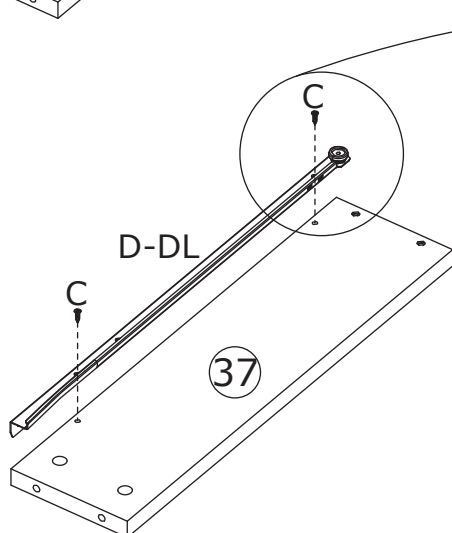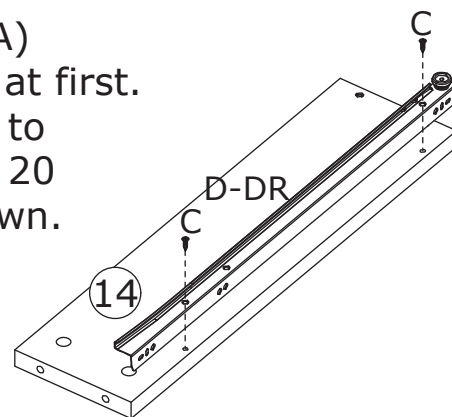

23

B x 4



Ø12 x 9.5 mm

E x 2



M4 x 18 mm

 
 
 
 
 
H x 1



I x 4




M5 x 30 mm

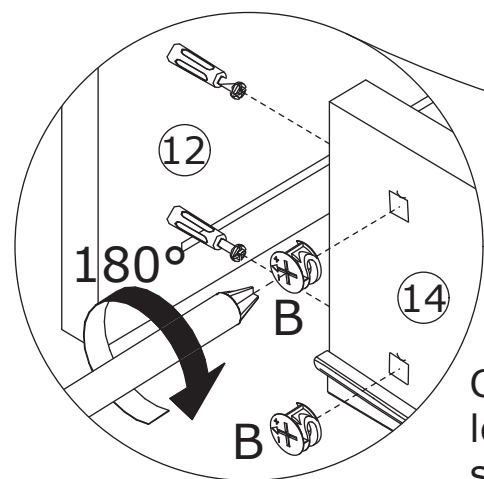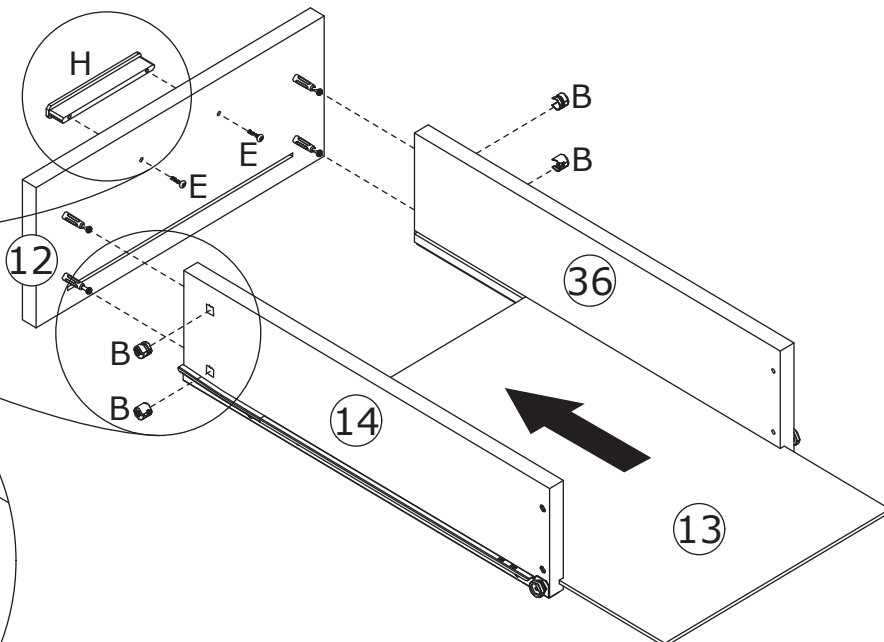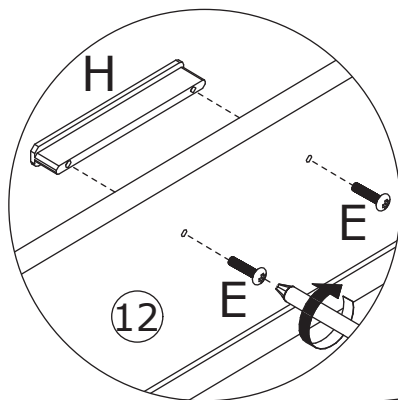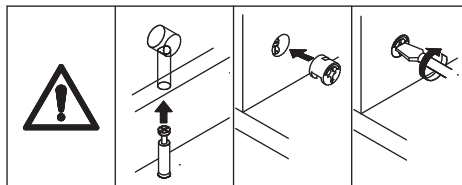


Connect panel 14 and 36 to panel 12, add cam lock(B) into and turn clockwise to tighten as shown.

 Insert bottom panel 13 along available grooves, and fix handle(H) to panel 12 with screw(E) as shown.

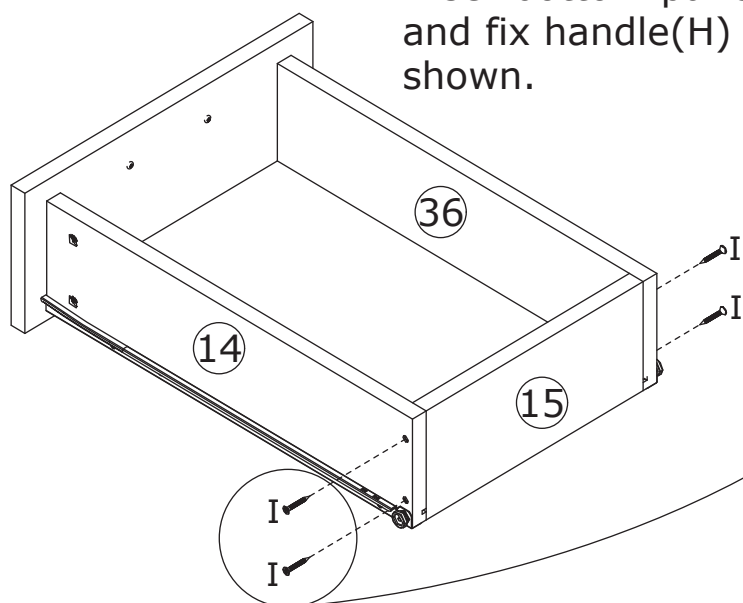

 Fix panel 15 to panel 14 and 36 with screw(I) as shown.

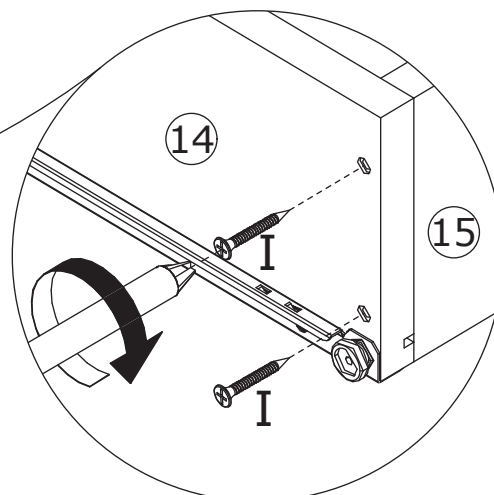

24

B x 4



Ø 12 x 9.5 mm

E x 2

 


M4 x 18 mm








H x 1



I x 4




M5 x 30 mm

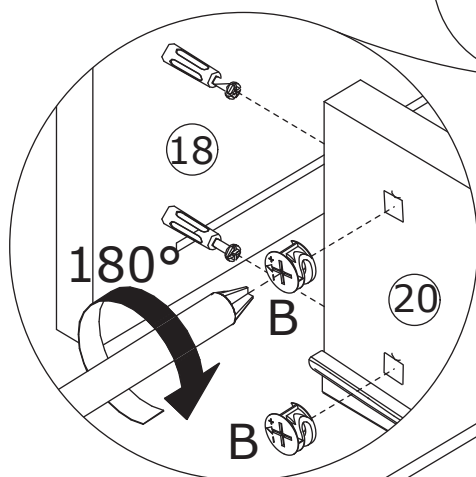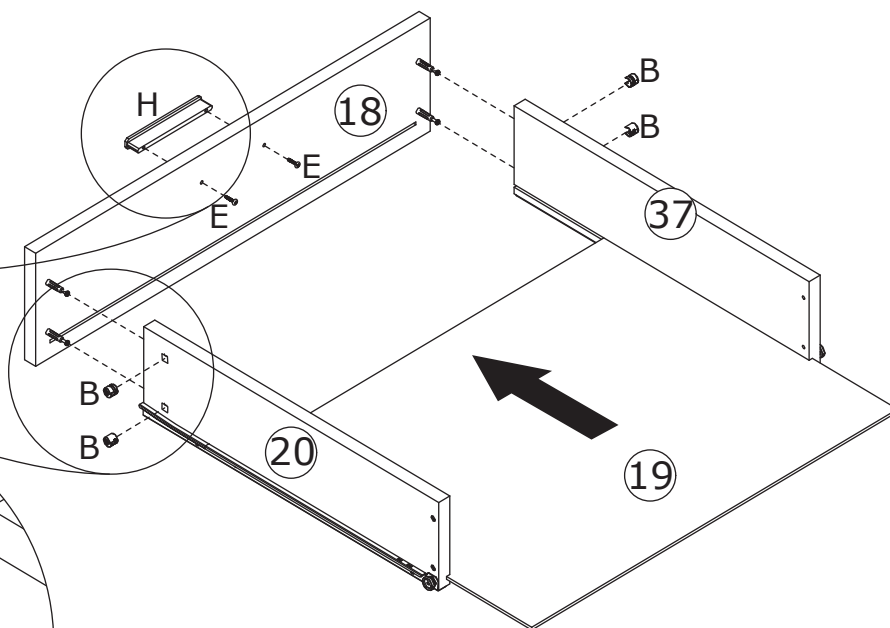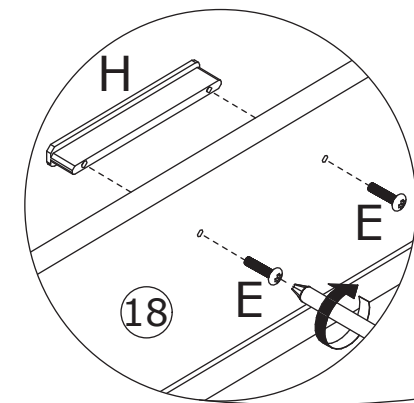       


Connect panel 20 and 37 to panel 18, add cam lock(B) into and turn clockwise to tighten as shown.

 Insert bottom panel 19 along available grooves, and fix handle(H) to panel 18 with screw(E) as shown.

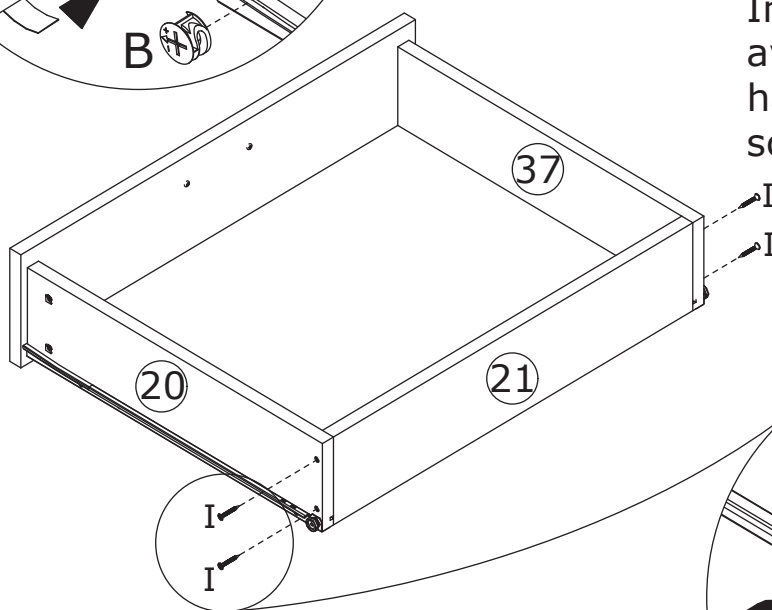

 Fix panel 21 to panel 20 and 37 with screw(I) as shown.




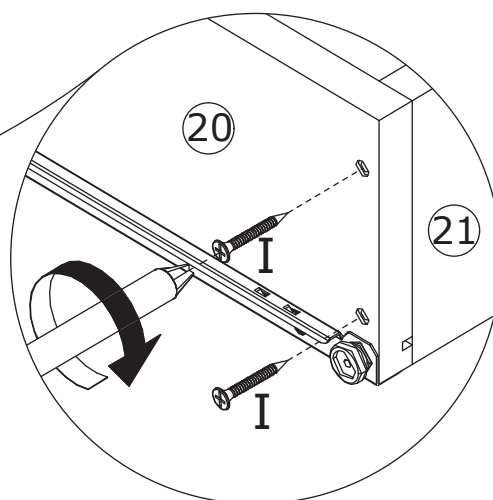


25

Power plug x 1



    Align rails, slide drawers in.

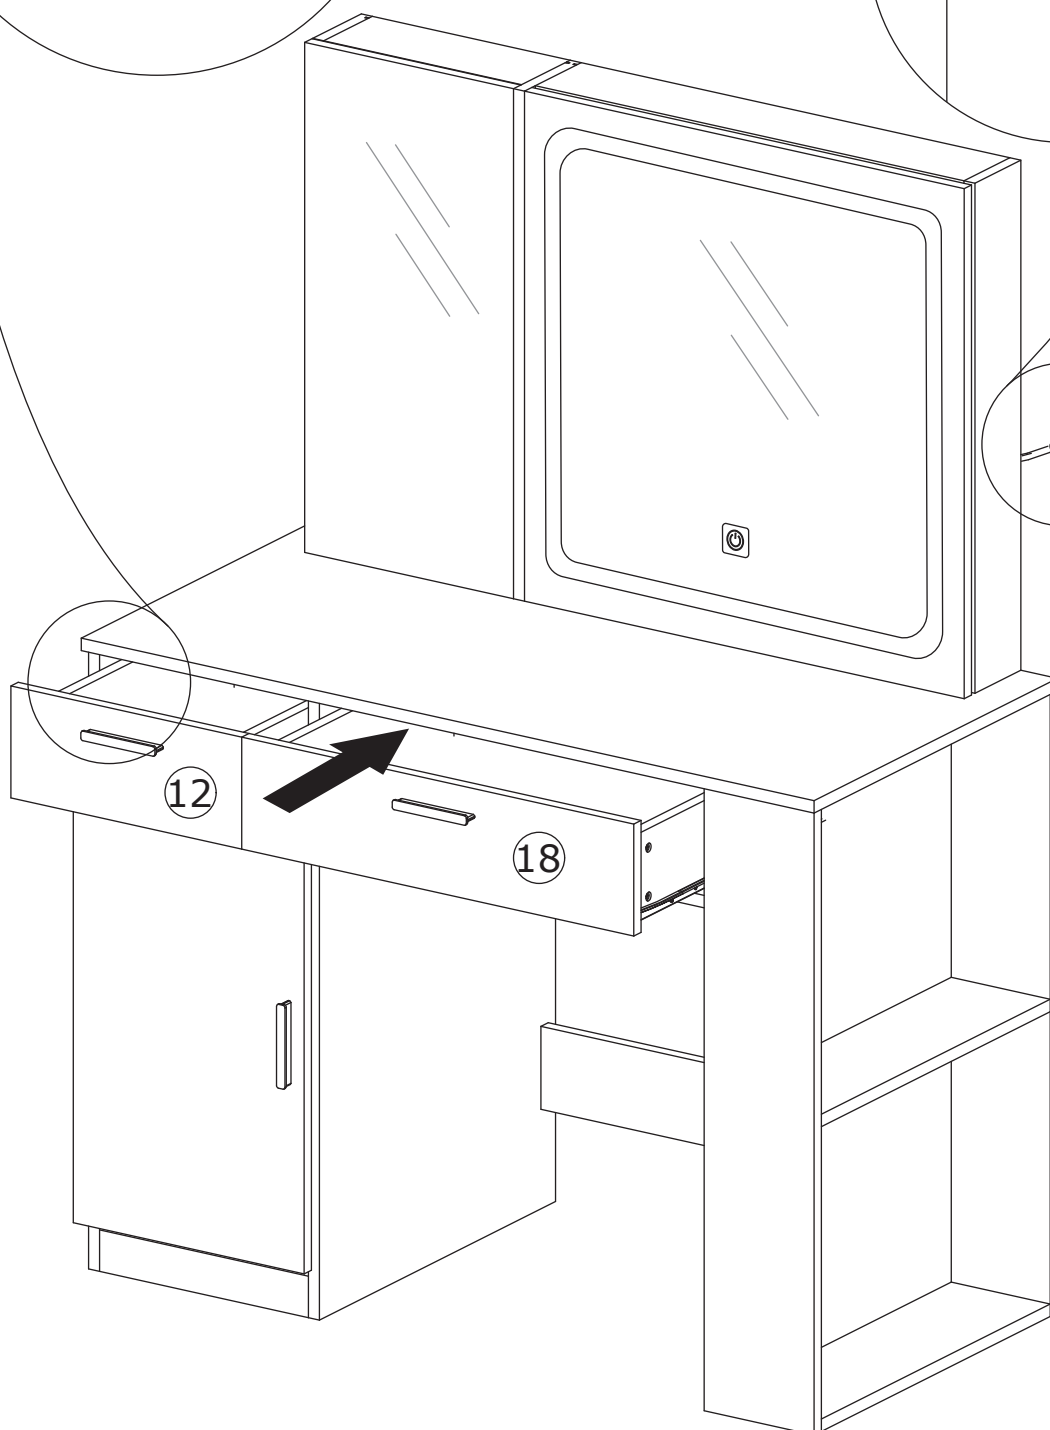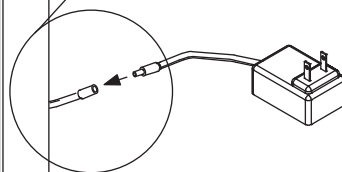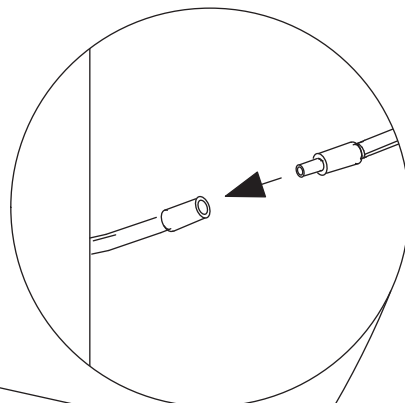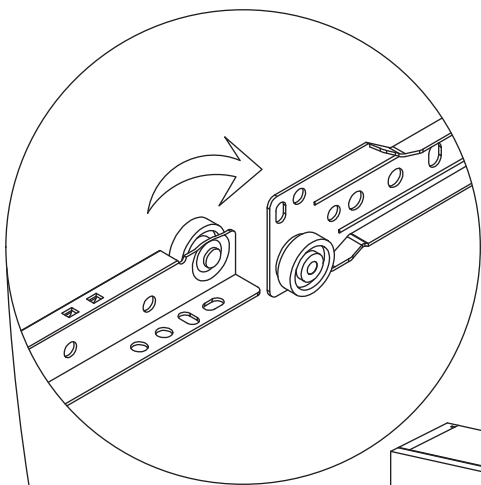

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOUR ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.

AFTER-SALES CONTACT



feedbackstation@163.com



(303)800-6387