 
 
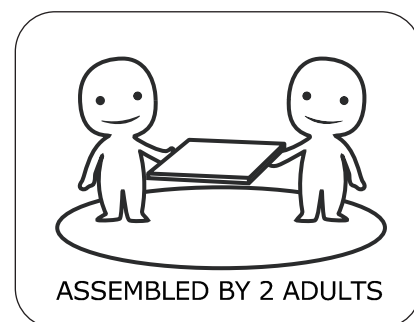 


Cupboard



KF020341-01

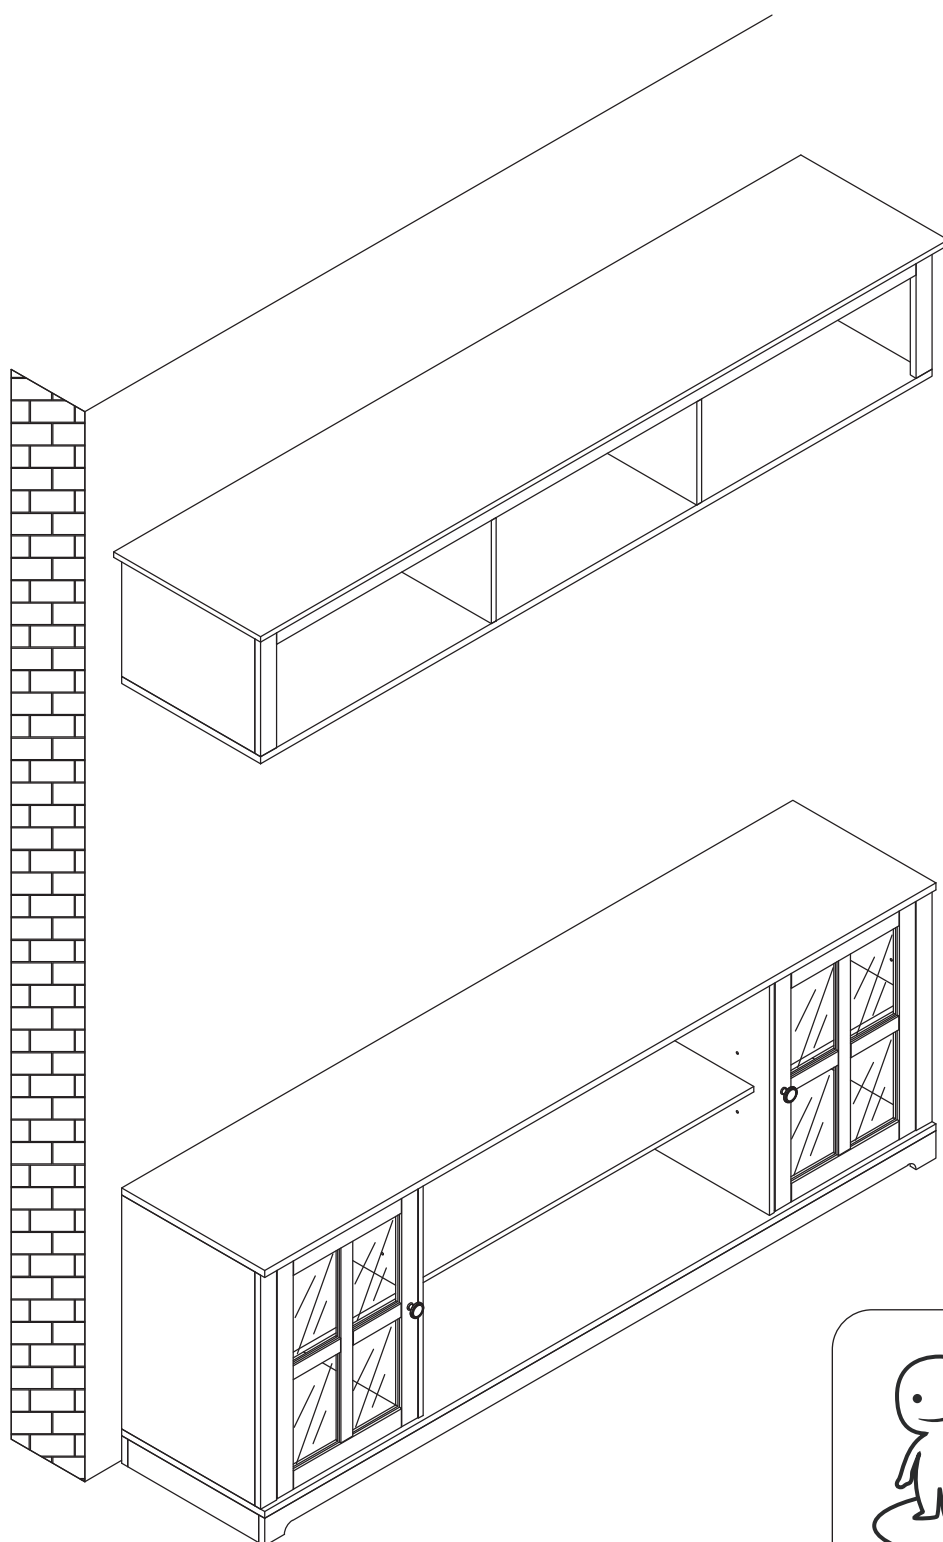

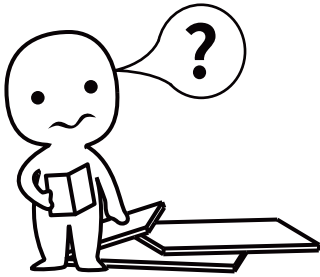


IMPORTANT INFORMATION!

  please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

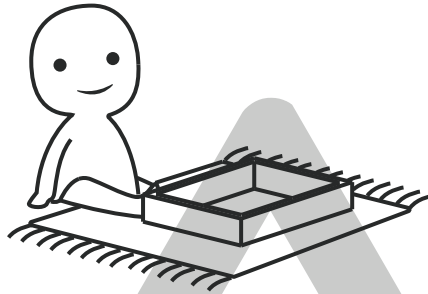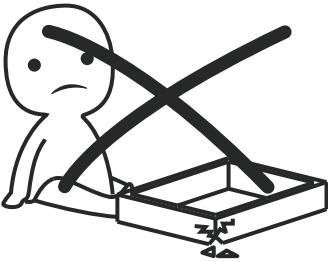



AVOID SCRATCHES!

 In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.

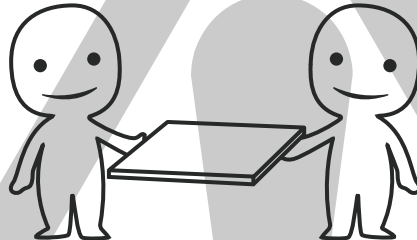

IMPROVE EFFICIENCY !

  Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

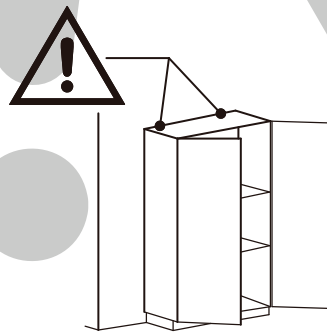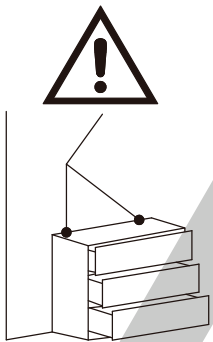

ANTI-TOPPLE WARNING !

 
Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !



It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

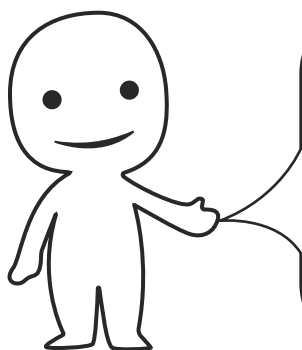


Please prepare the following tools

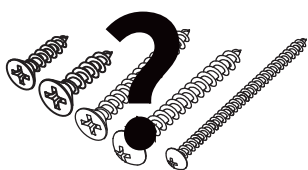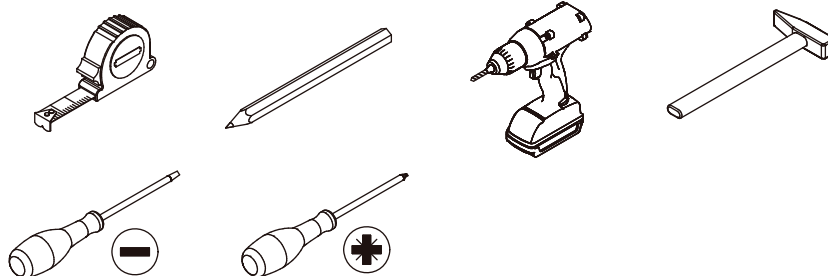  


When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

 Ax36(+2)



Ø6x35mm

 Bx36(+2)




Ø15x10mm

Cx57(+4)



Ø6x30mm

 Dx24(+2)



Ø4x35mm


Ex4



Fx2



 Gx2

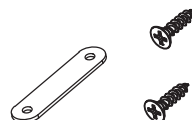

Hx36(+2)

 


Ø20mm

Jx12(+1)




Kx18(+1)

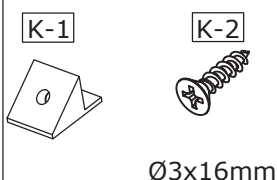


Ø3x16mm

 Lx2

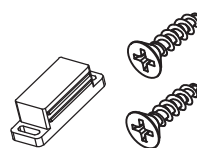


Mx6

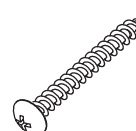 

Ø4x35mm

 Nx2



Px8

 


Qx32(+3)








Ø3.5x12mm

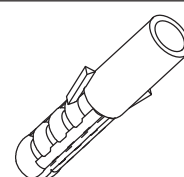Rx3

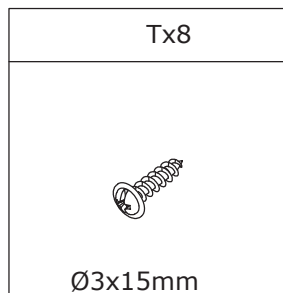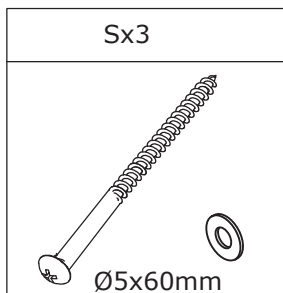  


Ø8x40mm




<div>  WARNING </div>	
	<p>Children have died from furniture tipover. To reduce the risk of furniture tipover:</p> <ul style="list-style-type: none"> • ALWAYS install tipover restraint provided. • NEVER put a TV on this product. • NEVER allow children to stand, climb or hang on drawers, doors, or shelves. • NEVER open more than one drawer at a time. • Place heaviest items in the lowest drawers.
	<p><i>This is a permanent label. Do not remove!</i></p>

 Hanging cabinet

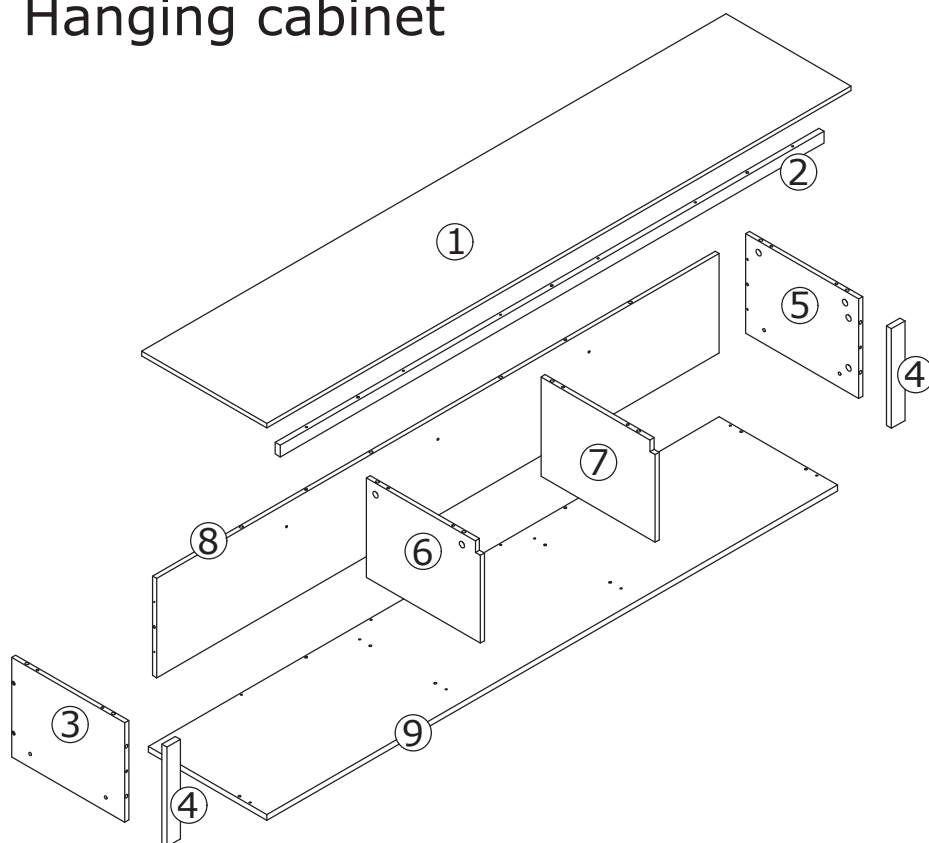


TV cabinet

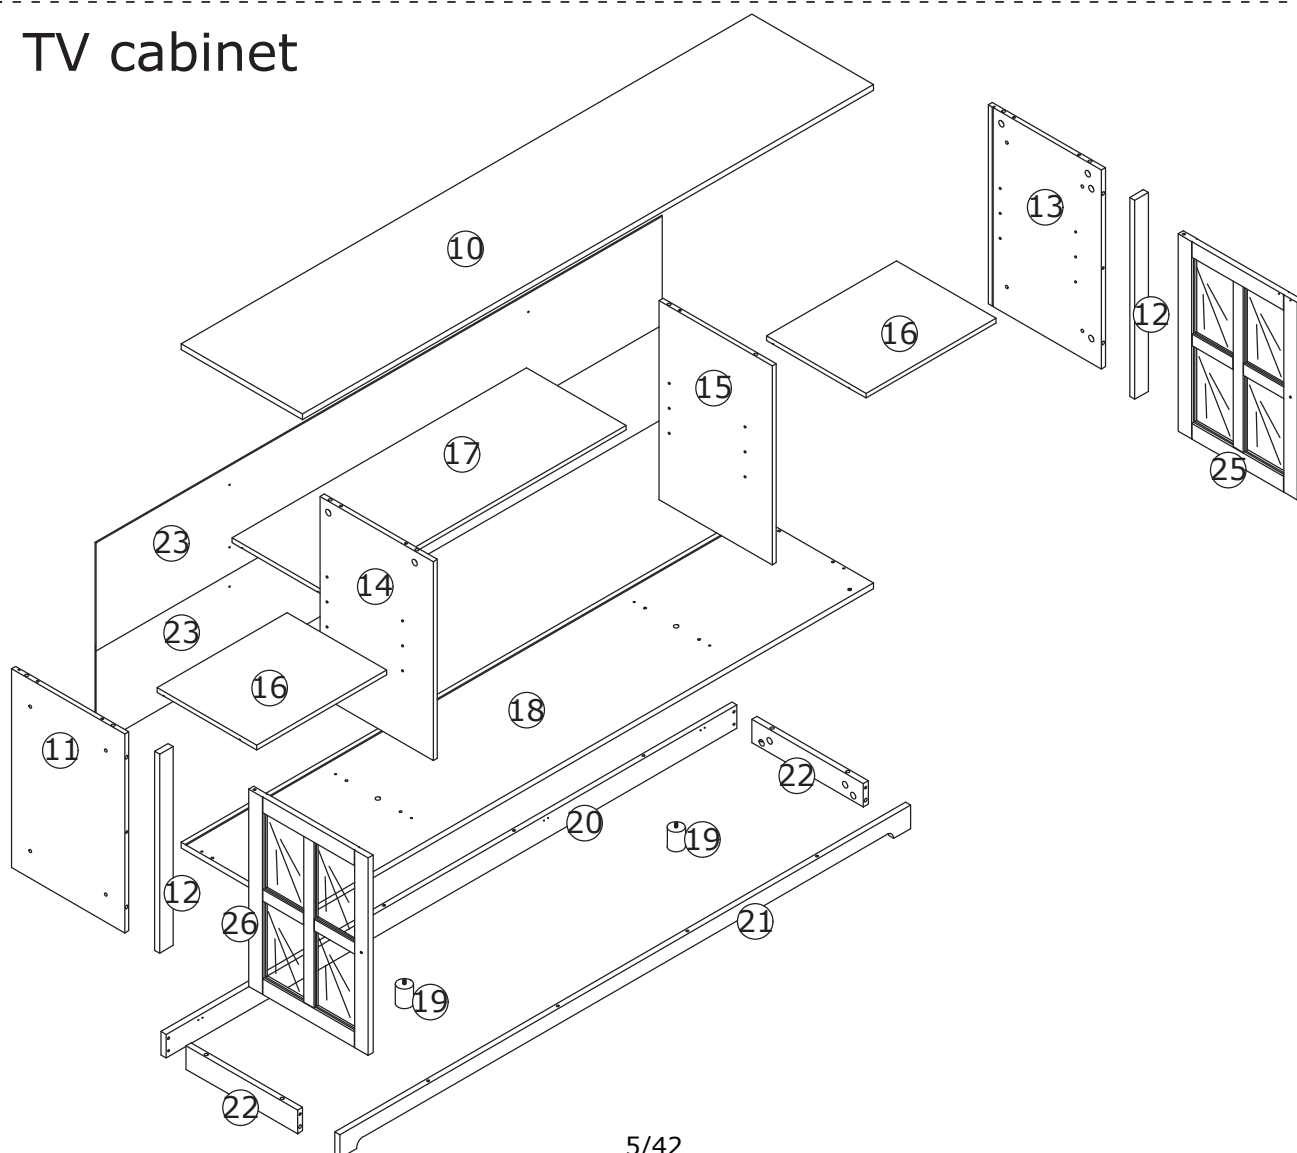 


1



 
TV cabinet

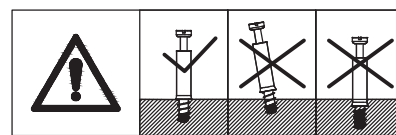


 
Insert quickfit screw(A) into corresponding holes in two plate 12 with screwdriver as shown.

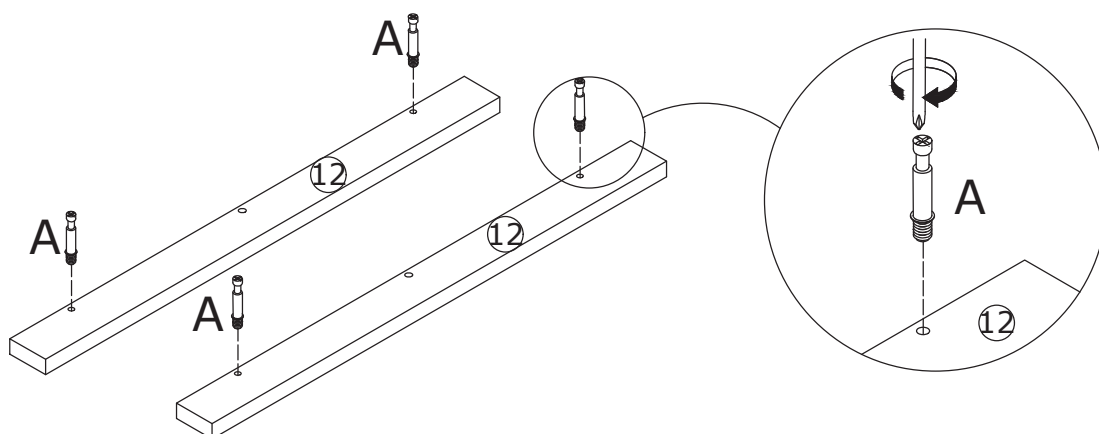

2

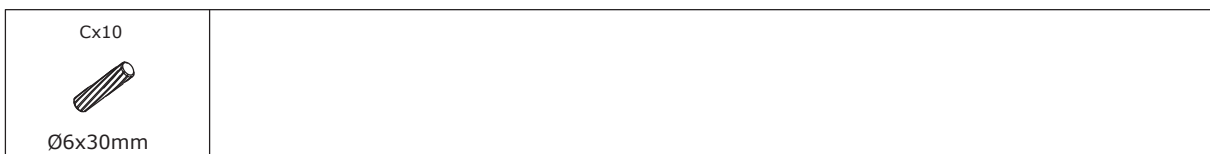 

 
 
Insert wooden dowel(C) into plate 11 and 13 as shown.

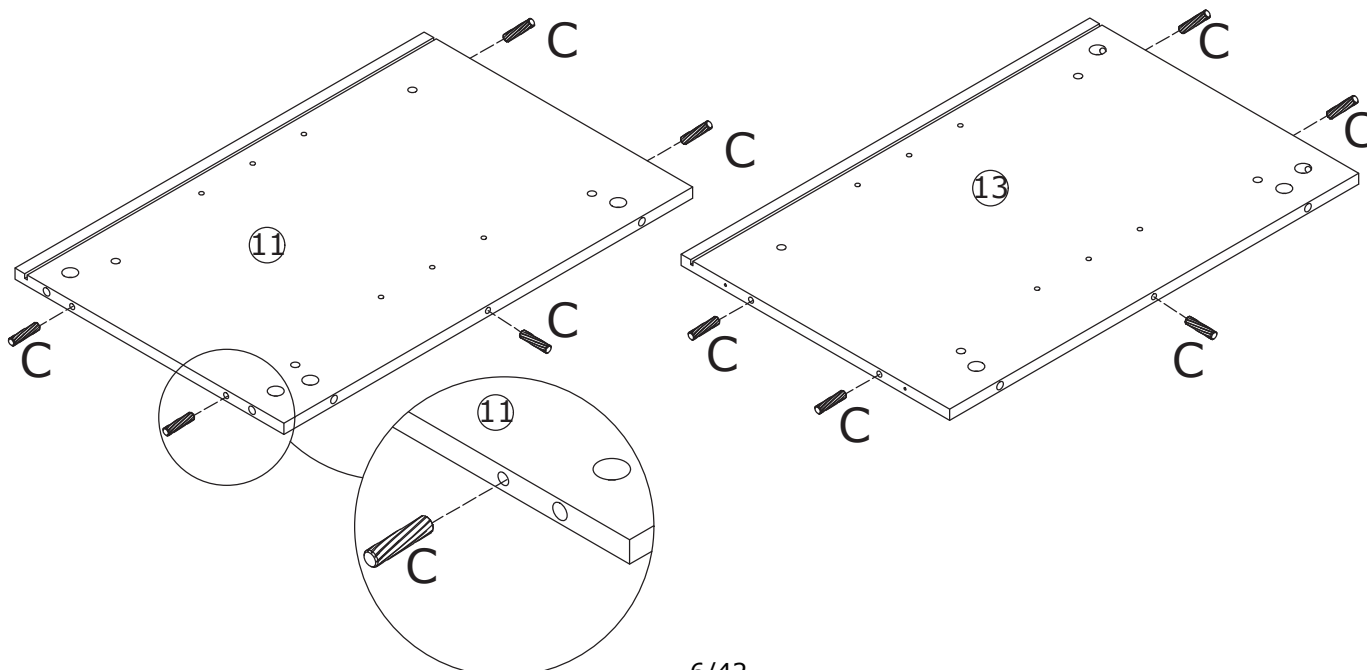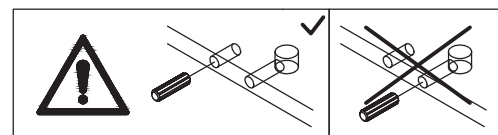

3




  Attach plate 12 to plate 13, put cam lock(B) into holes in plate 13 and turn clockwise to tighten as shown.

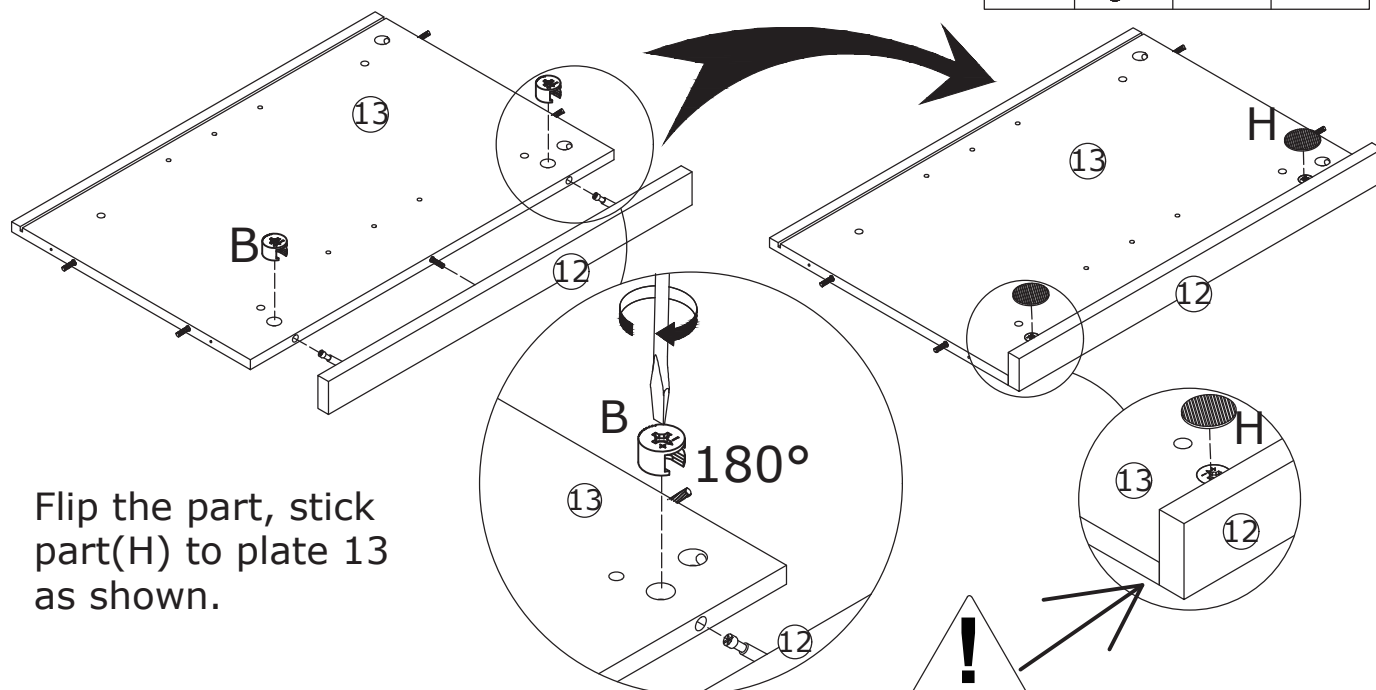
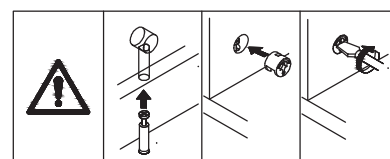


Flip the part, stick part(H) to plate 13 as shown.

 4

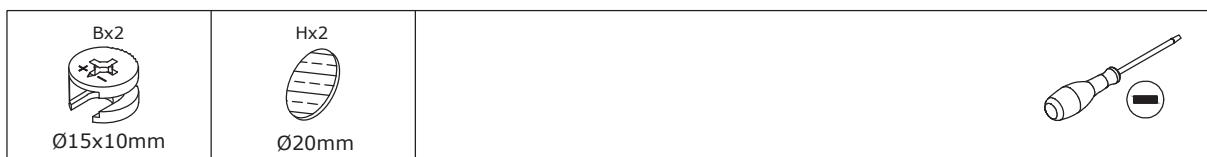

  Attach another plate 12 to plate 11, put cam lock(B) into holes in plate 11 and turn clockwise to tighten as shown.

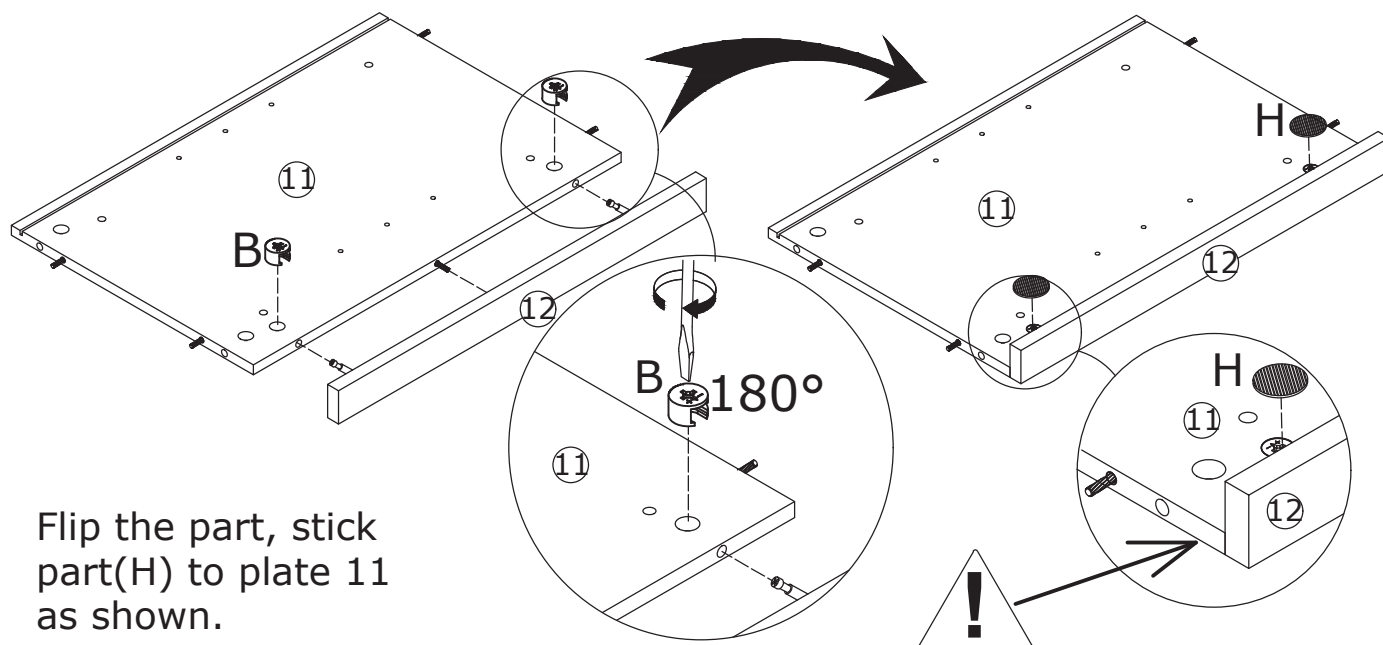
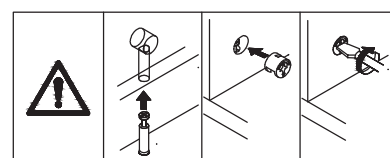


Flip the part, stick part(H) to plate 11 as shown.

5



  
Insert quickfit screw(A) into corresponding holes in plate 10 as shown.

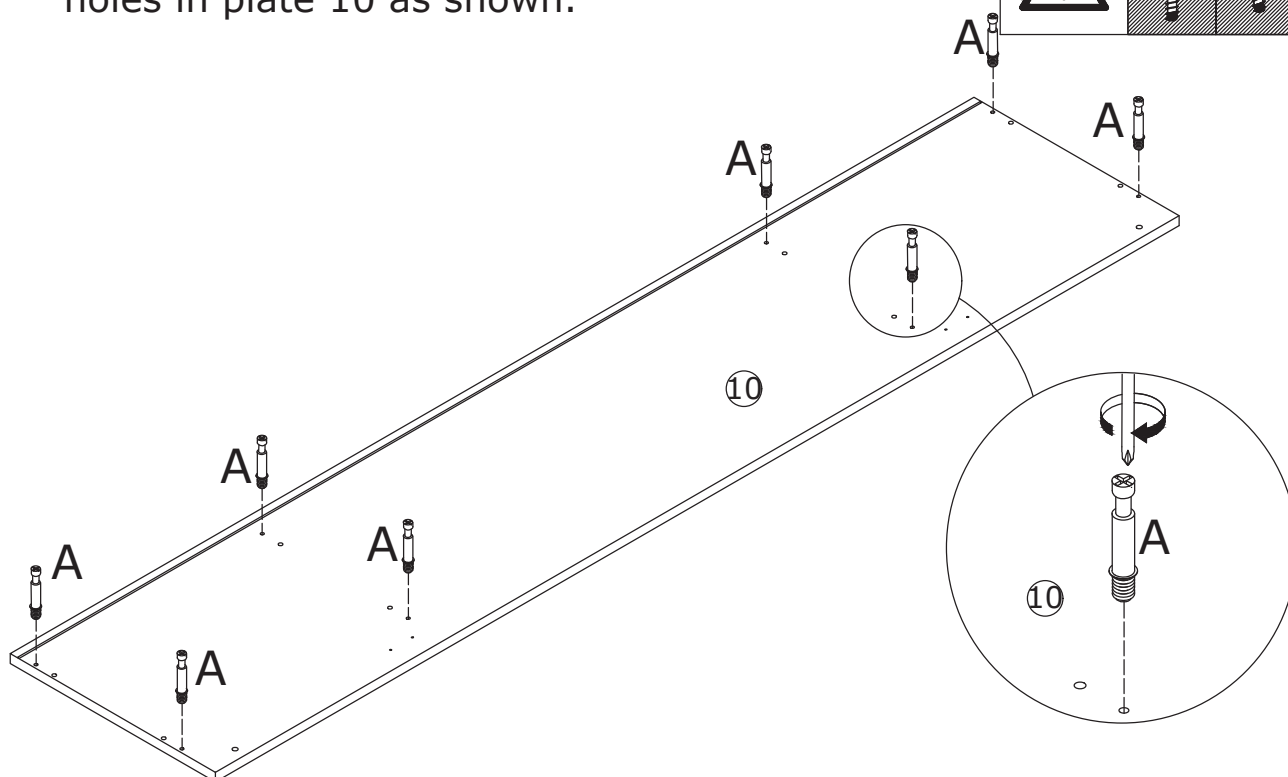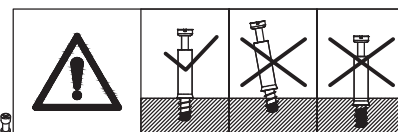



6



 
Fix part(L) to plate 10 as shown.

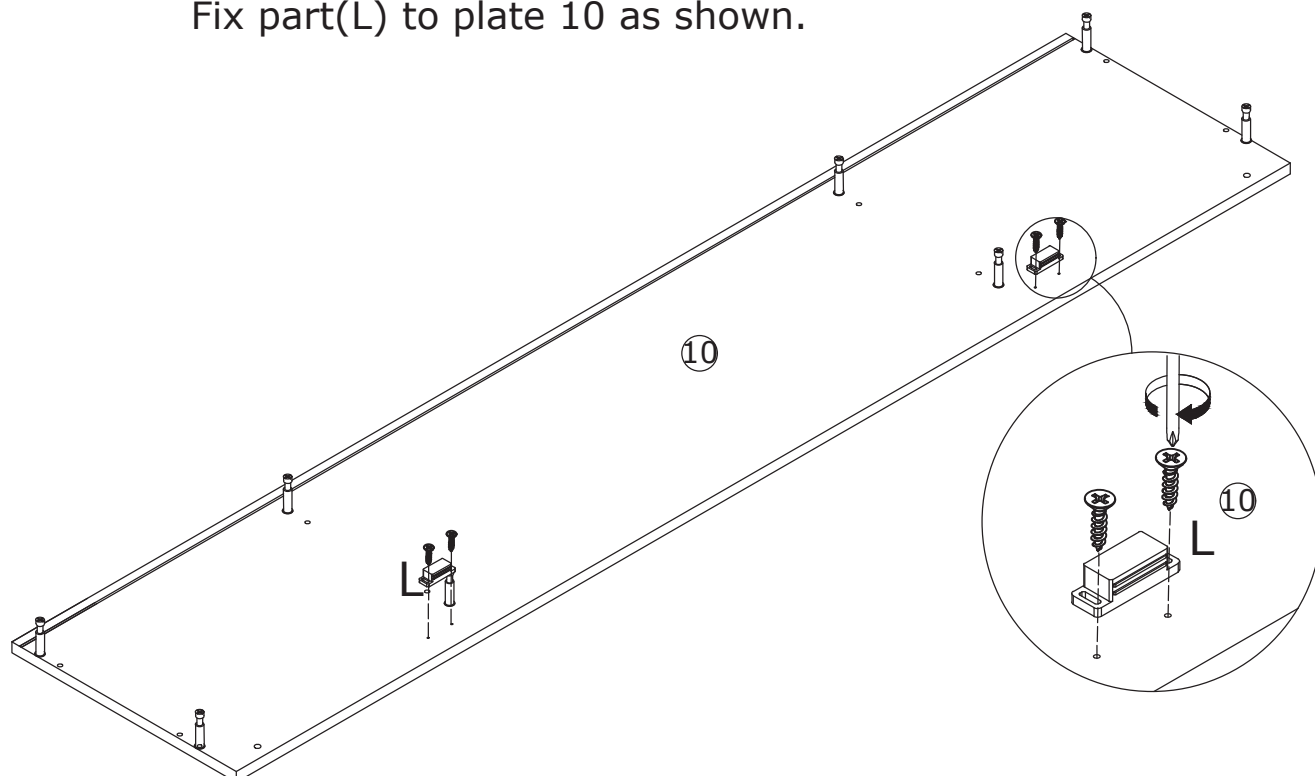

7

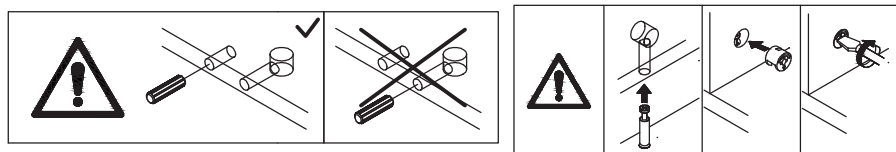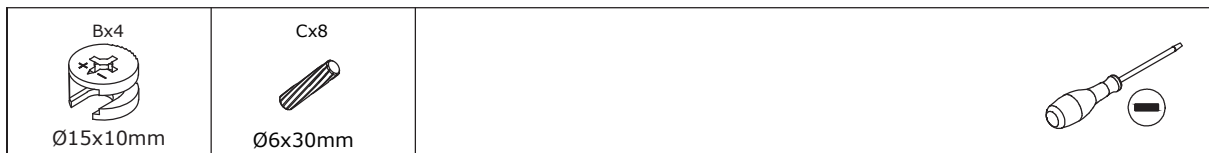  

 Attach the two components to plate 10 with wooden dowel(C), put cam lock(B) into holes in plate 11,13 and turn clockwise to tighten as shown. Insert wooden dowel(C) into plate 14 and 15 as shown.


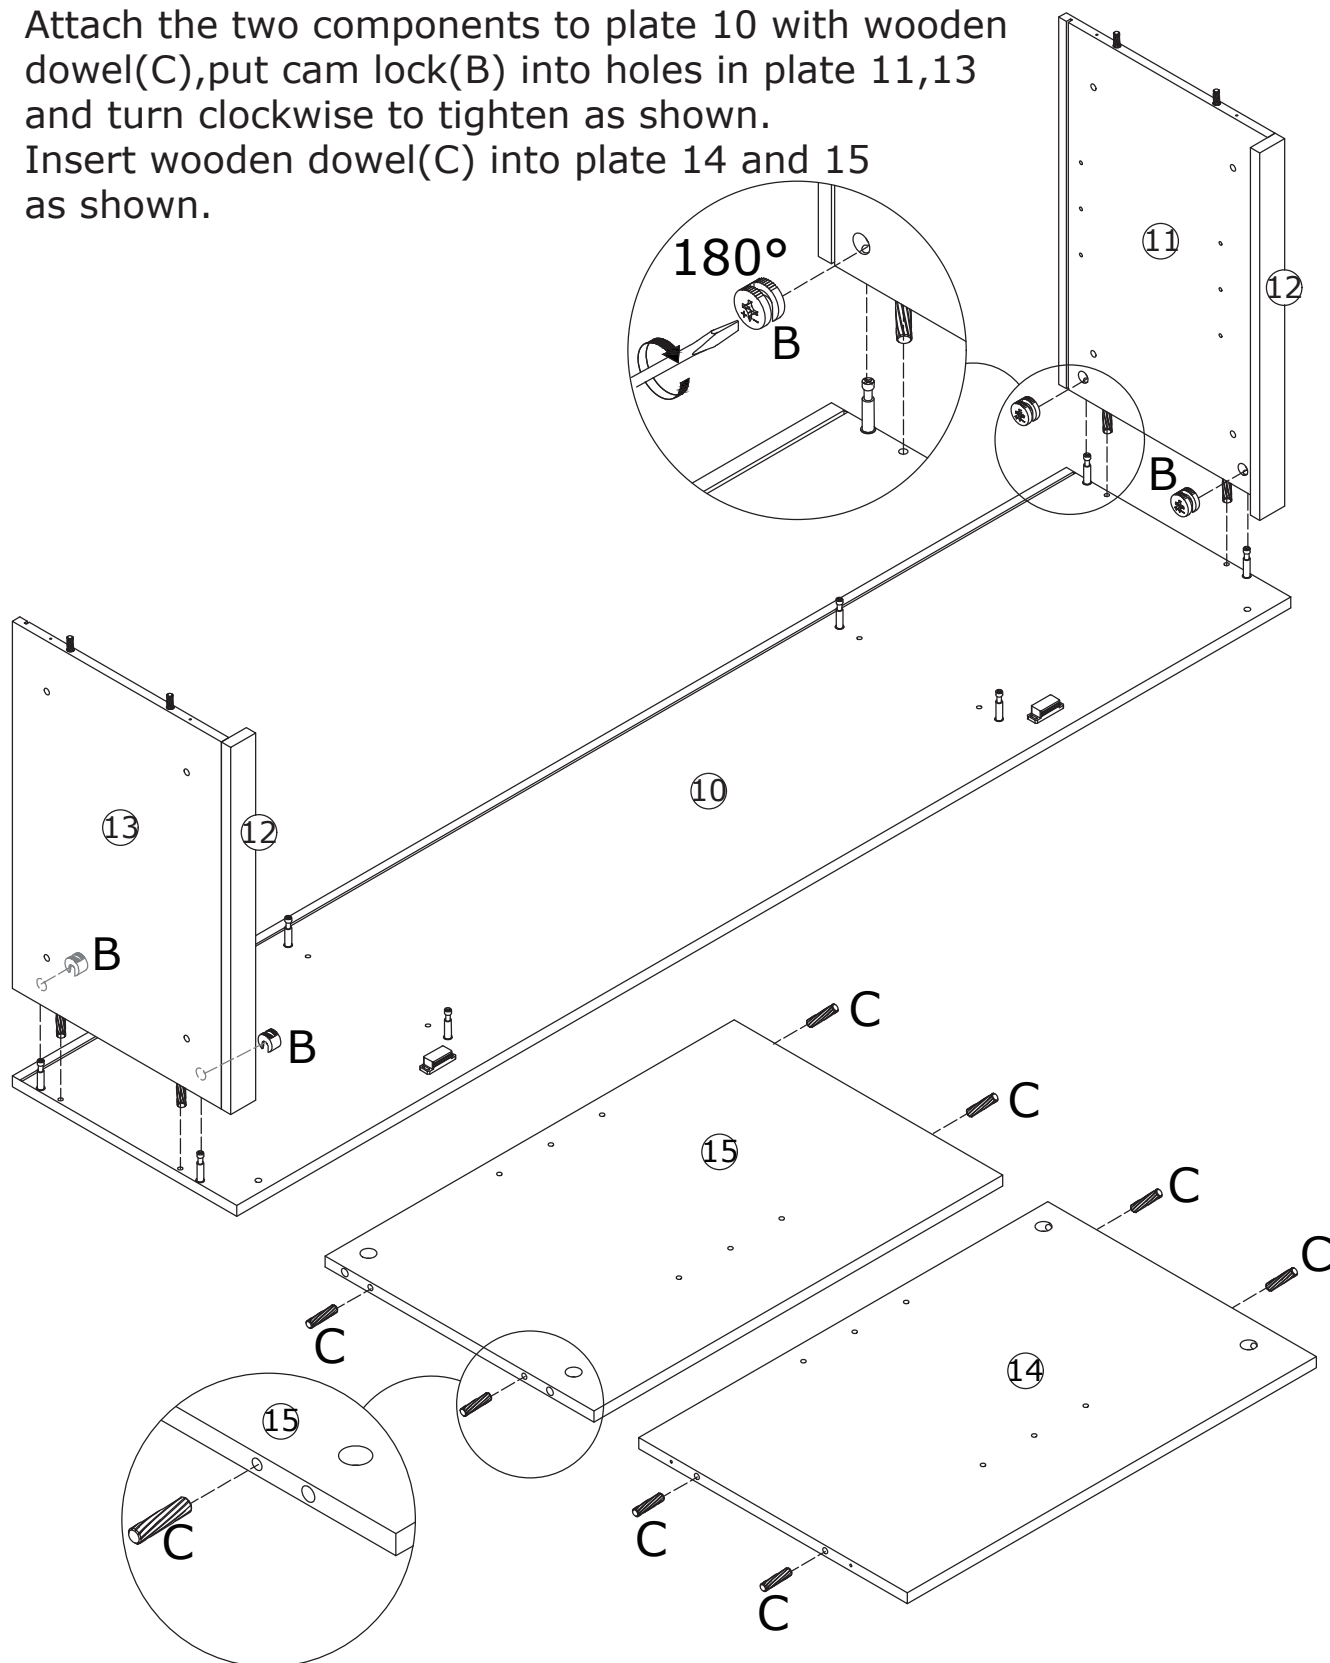


8




Attach plate 14 and 15 to plate 10 with wooden dowel(C), put cam lock(B) into holes in plate 14,15 and turn clockwise to tighten as shown.

  
Stick part(H) to plate 11 and 13 as shown.

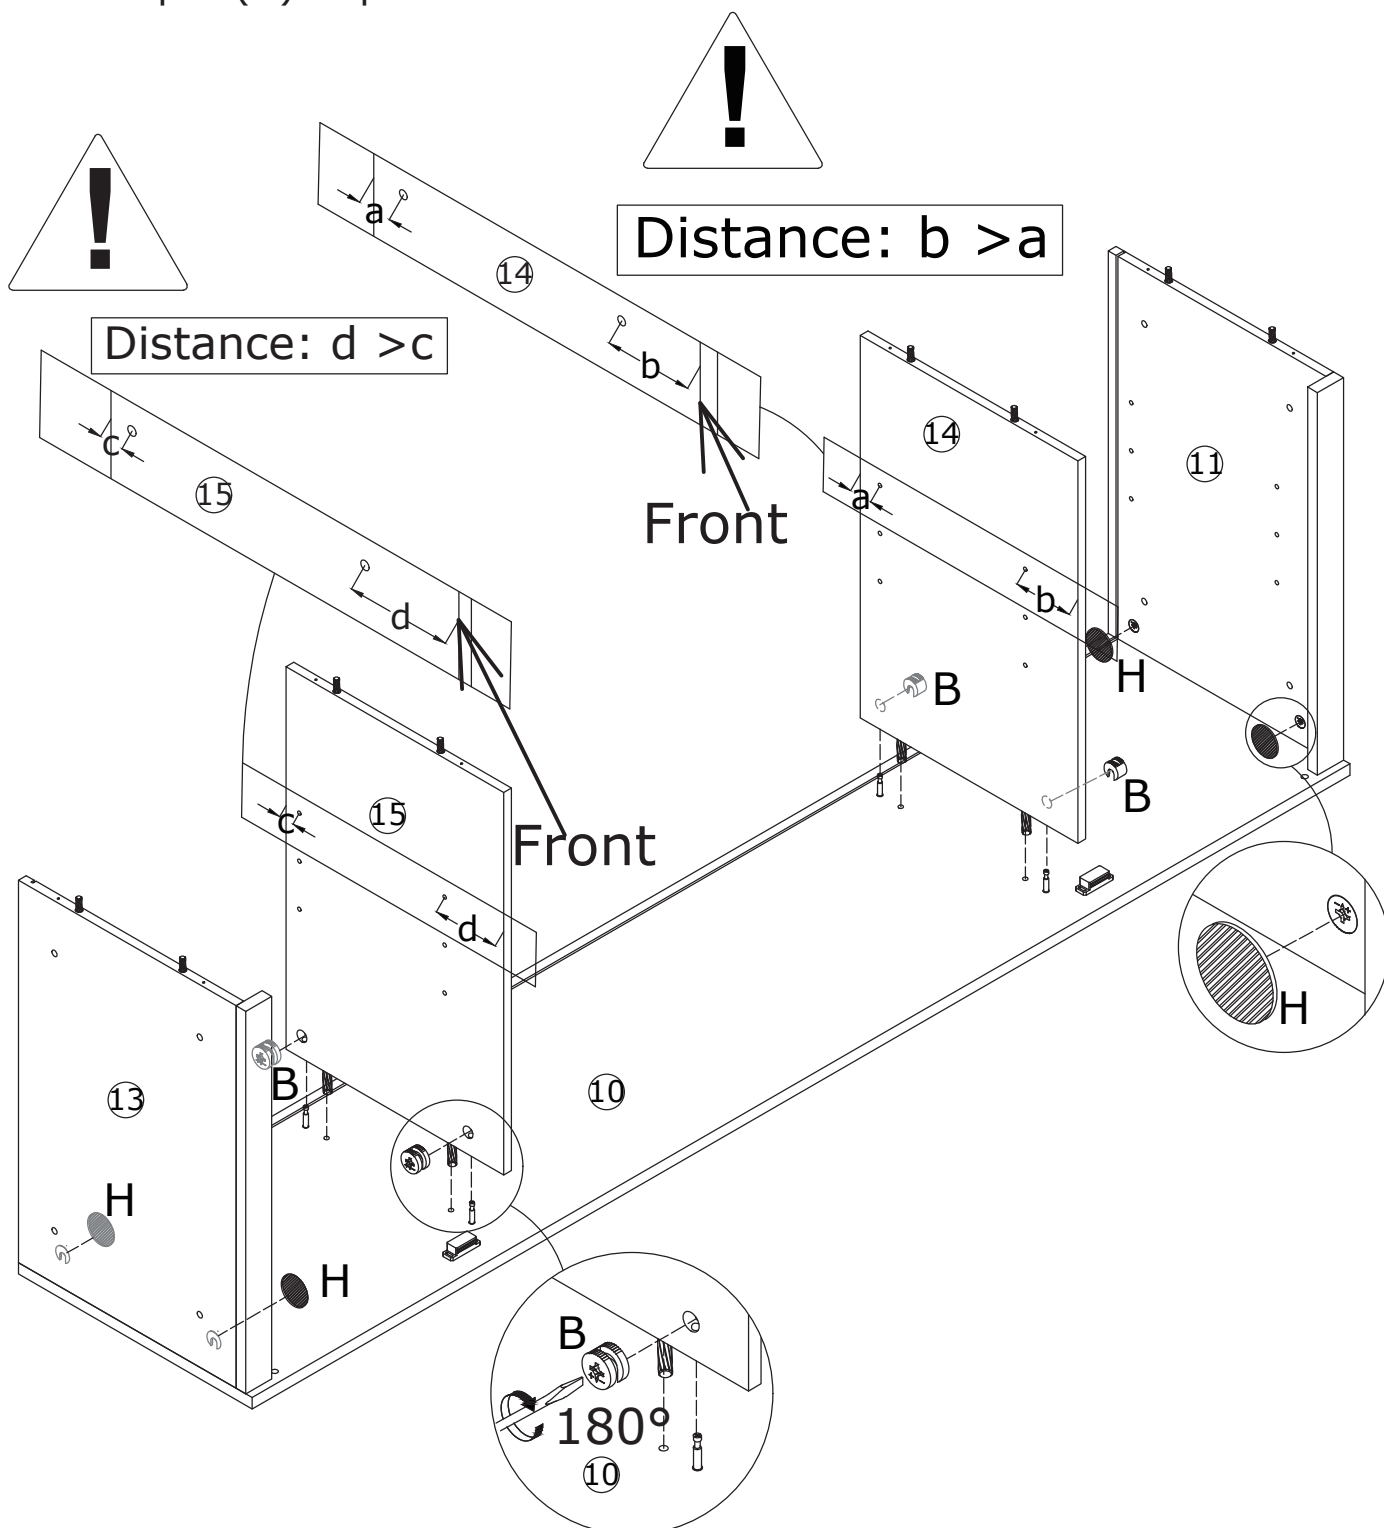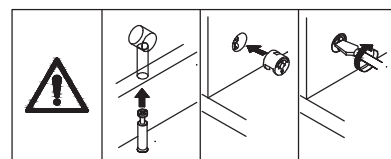

9

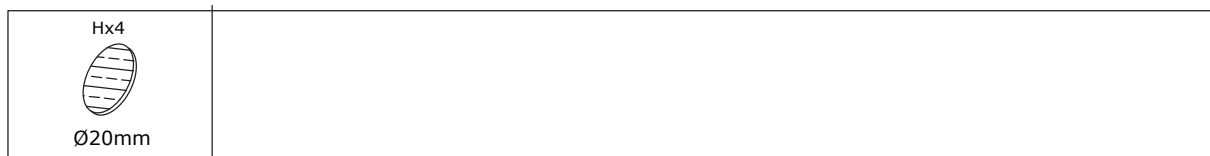 


 Slide back plate 23 along grooves as shown.
Stick part(H) to plate 14 and 15 as shown.

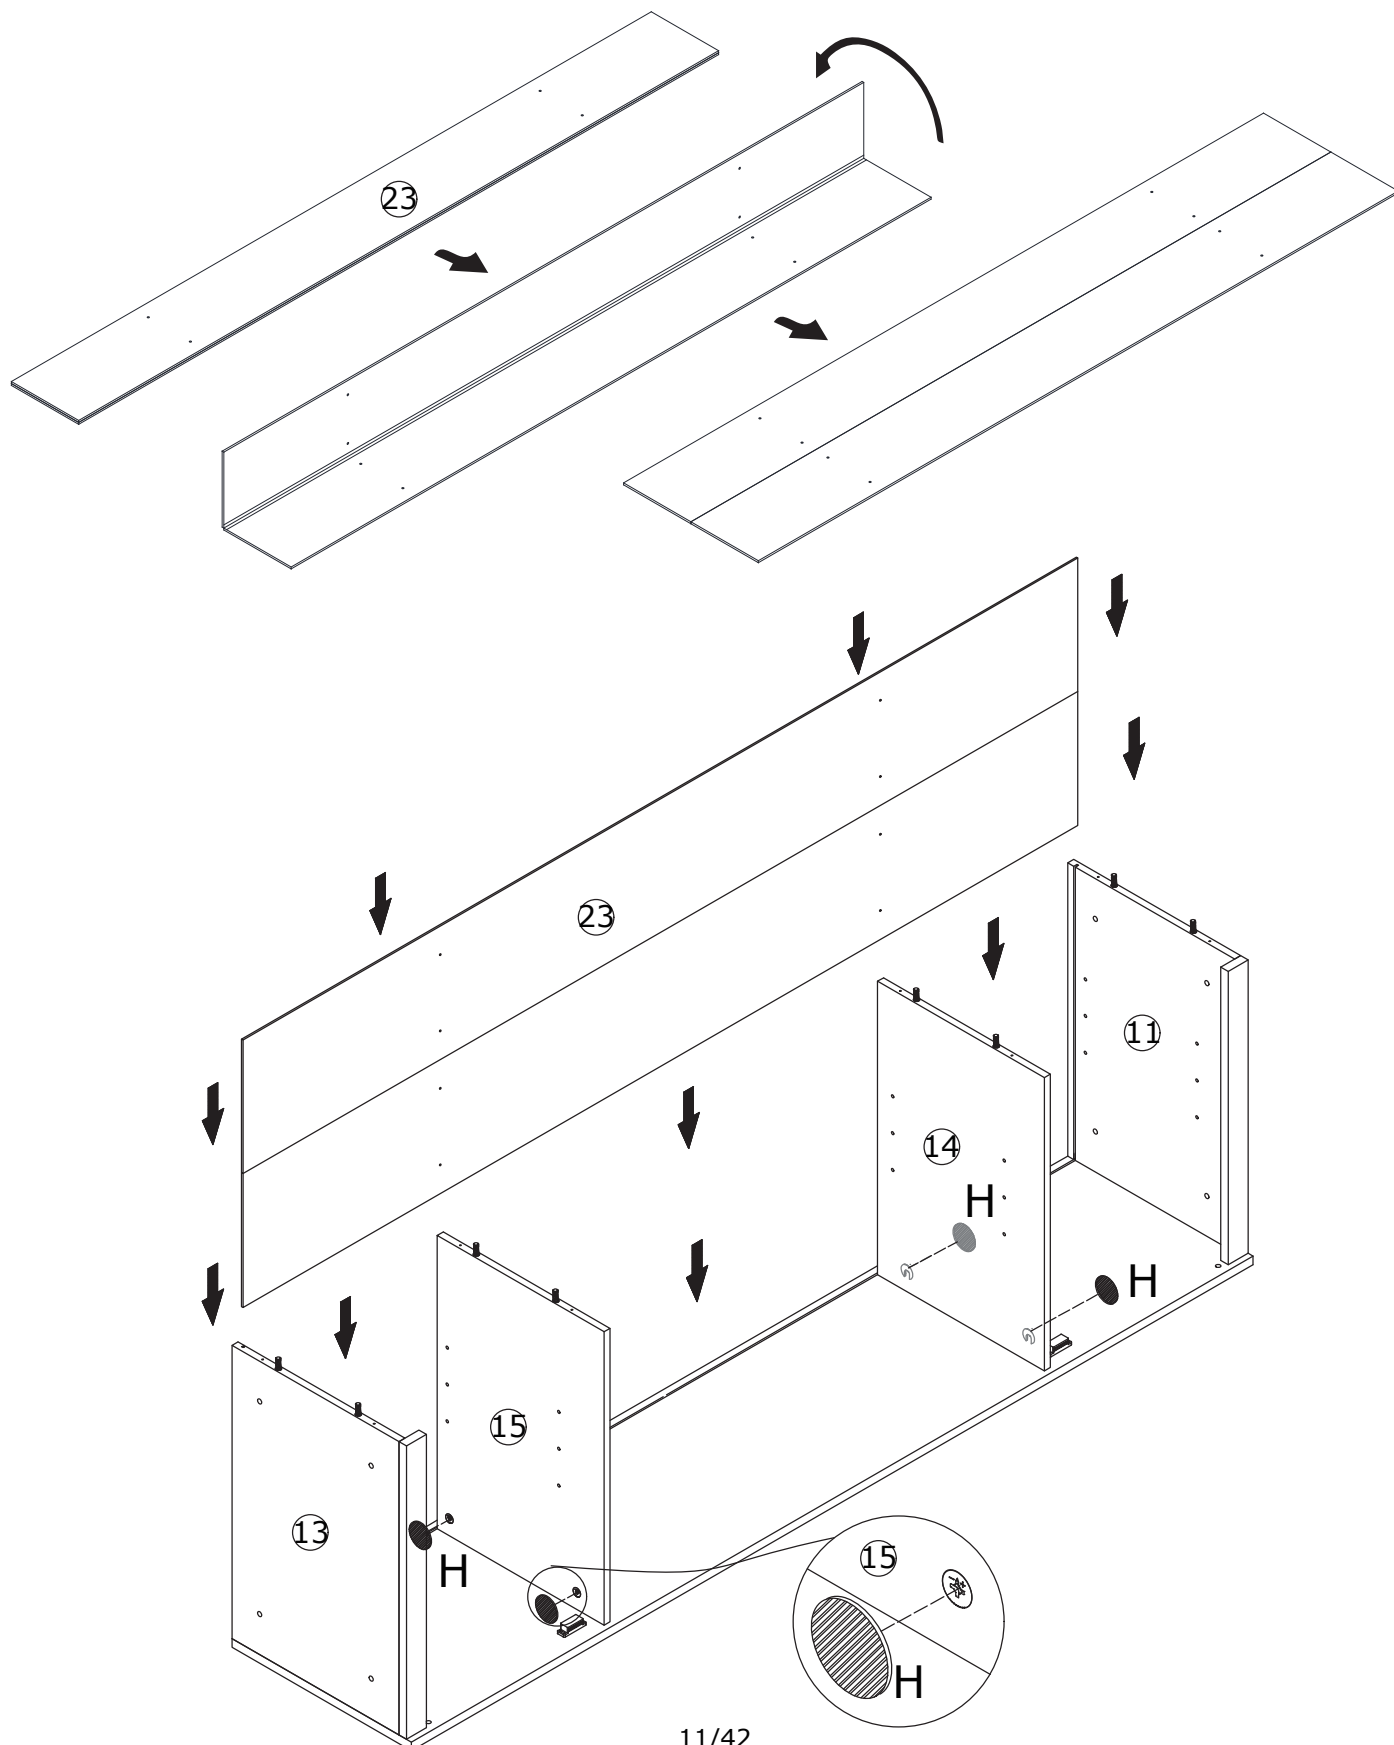


10

 
Dx8
Ø4x35mm

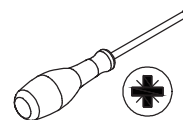


 
Cover plate 18 to the top and fix using screw(D) as shown.

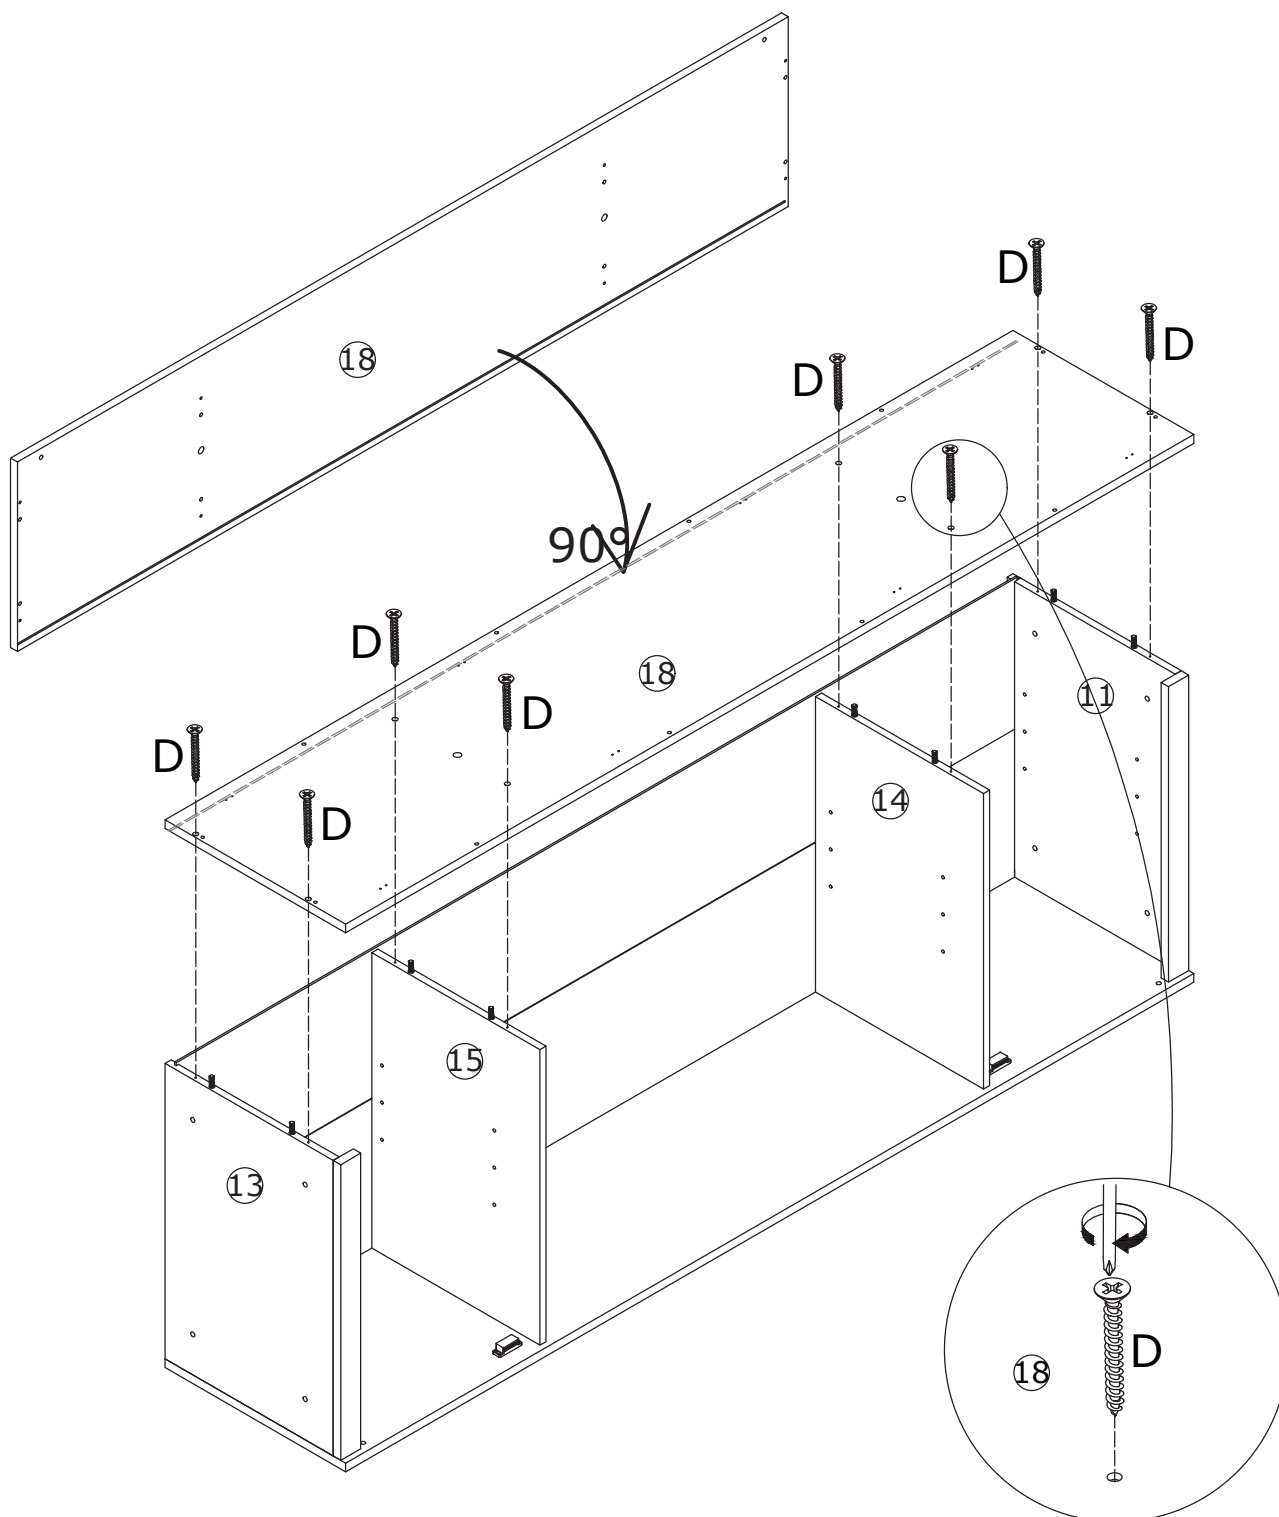






11

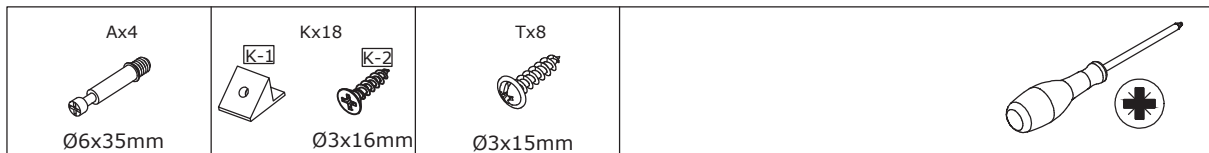 

  
Fix back plate 23 using screw(T) as shown.
 Reinforce back plate using part(K) as shown.
 Insert quickfit screw(A) into corresponding
 holes in plate 18 as shown.

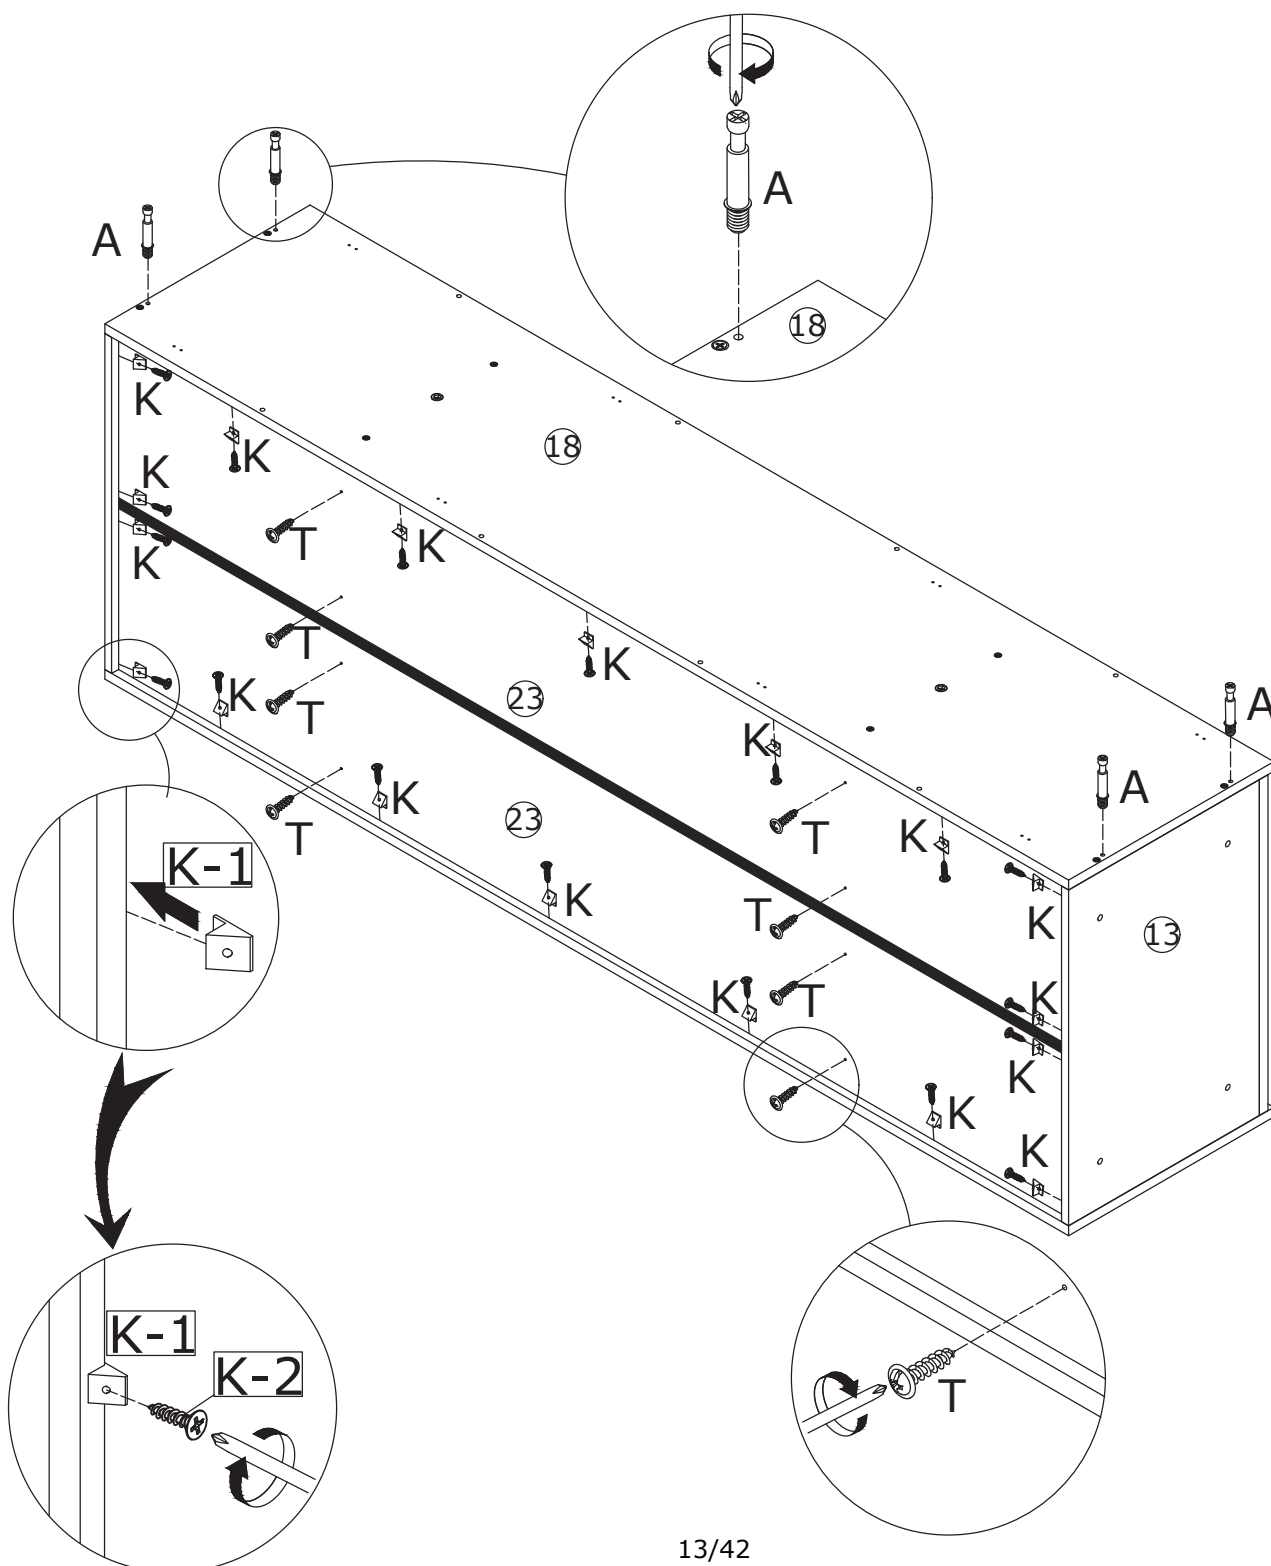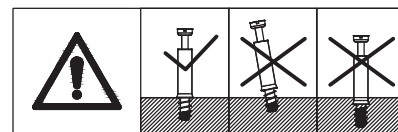


12

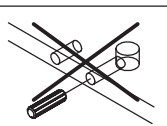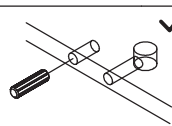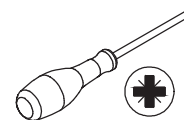     



 
Insert quickfit screw(A) into corresponding holes in plate 20 and 21 as shown.
Insert wooden dowel(C) into two plate 22 as shown.

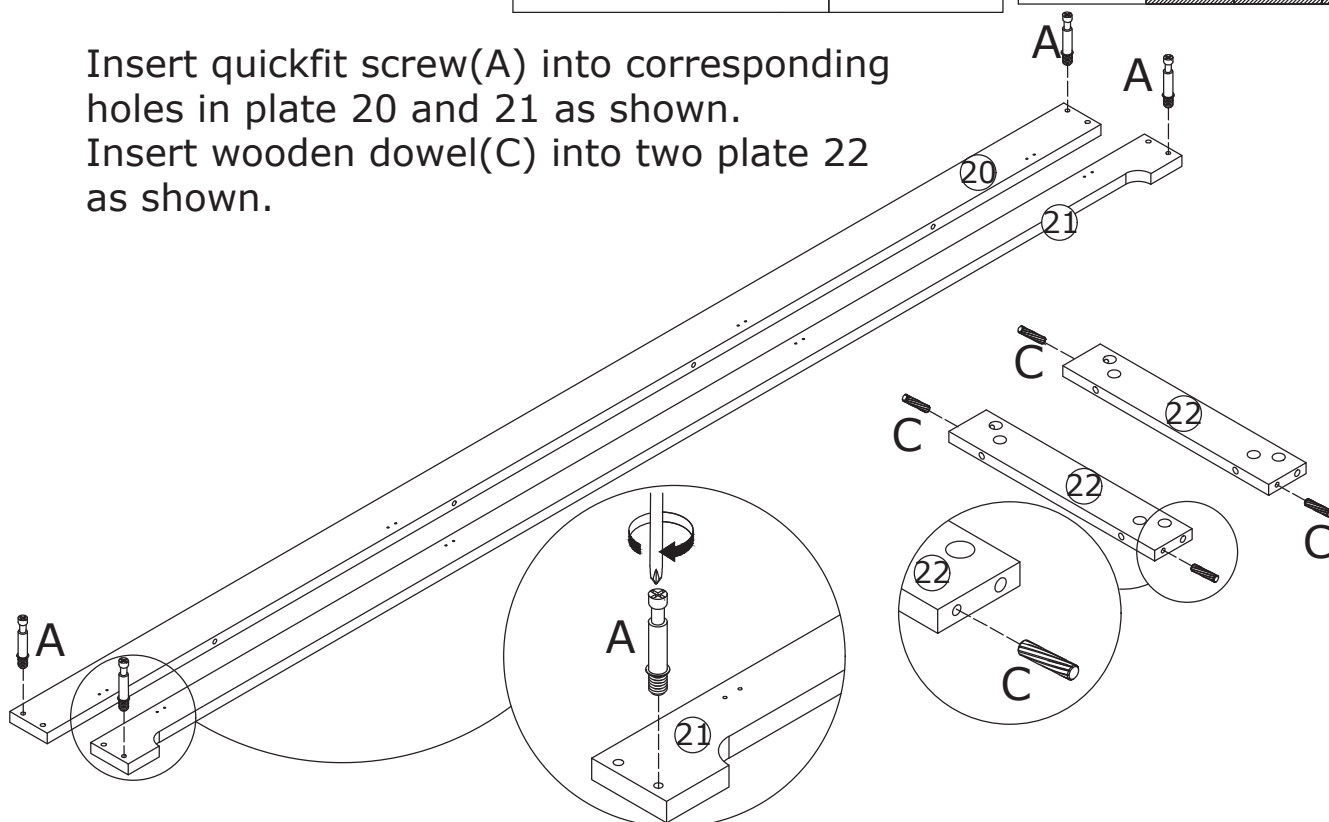


13

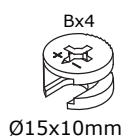 

   
Connect plate 20 and 21 with plate 22, put cam lock(B) into holes in plate 22 and turn clockwise to tighten as shown.

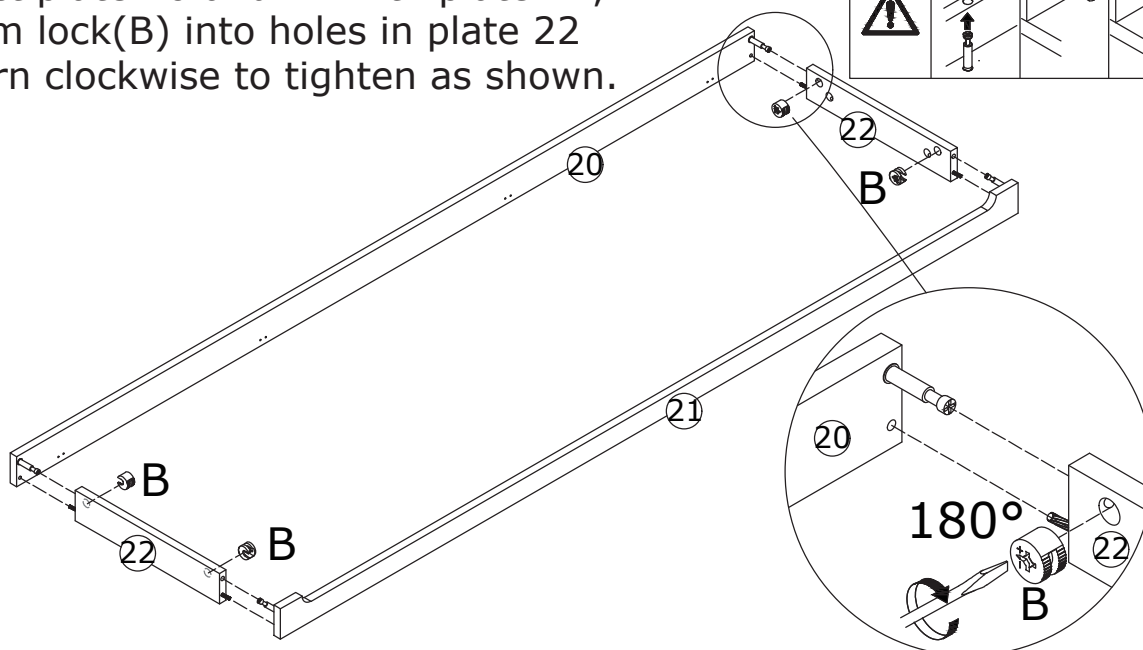

14

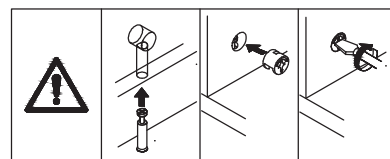 

 Attach the component to plate 18 with wooden dowel(C), put cam lock(B) into holes in plate 22 and turn clockwise to tighten as shown.

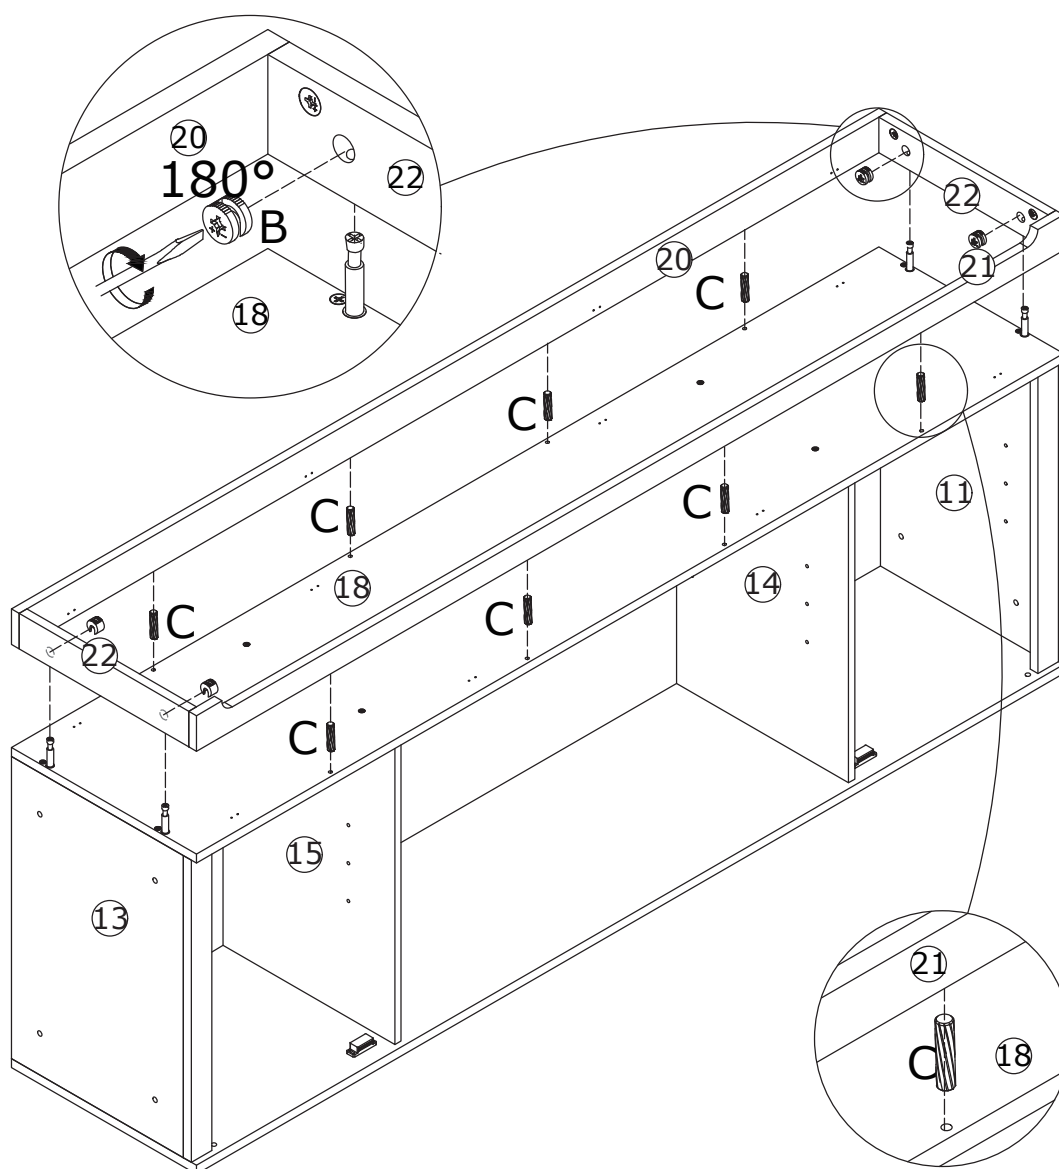


15



Nx2



 
Rotate leg support 19 into plate 18 as shown.
Rotate part(N) into leg support 19 as shown.

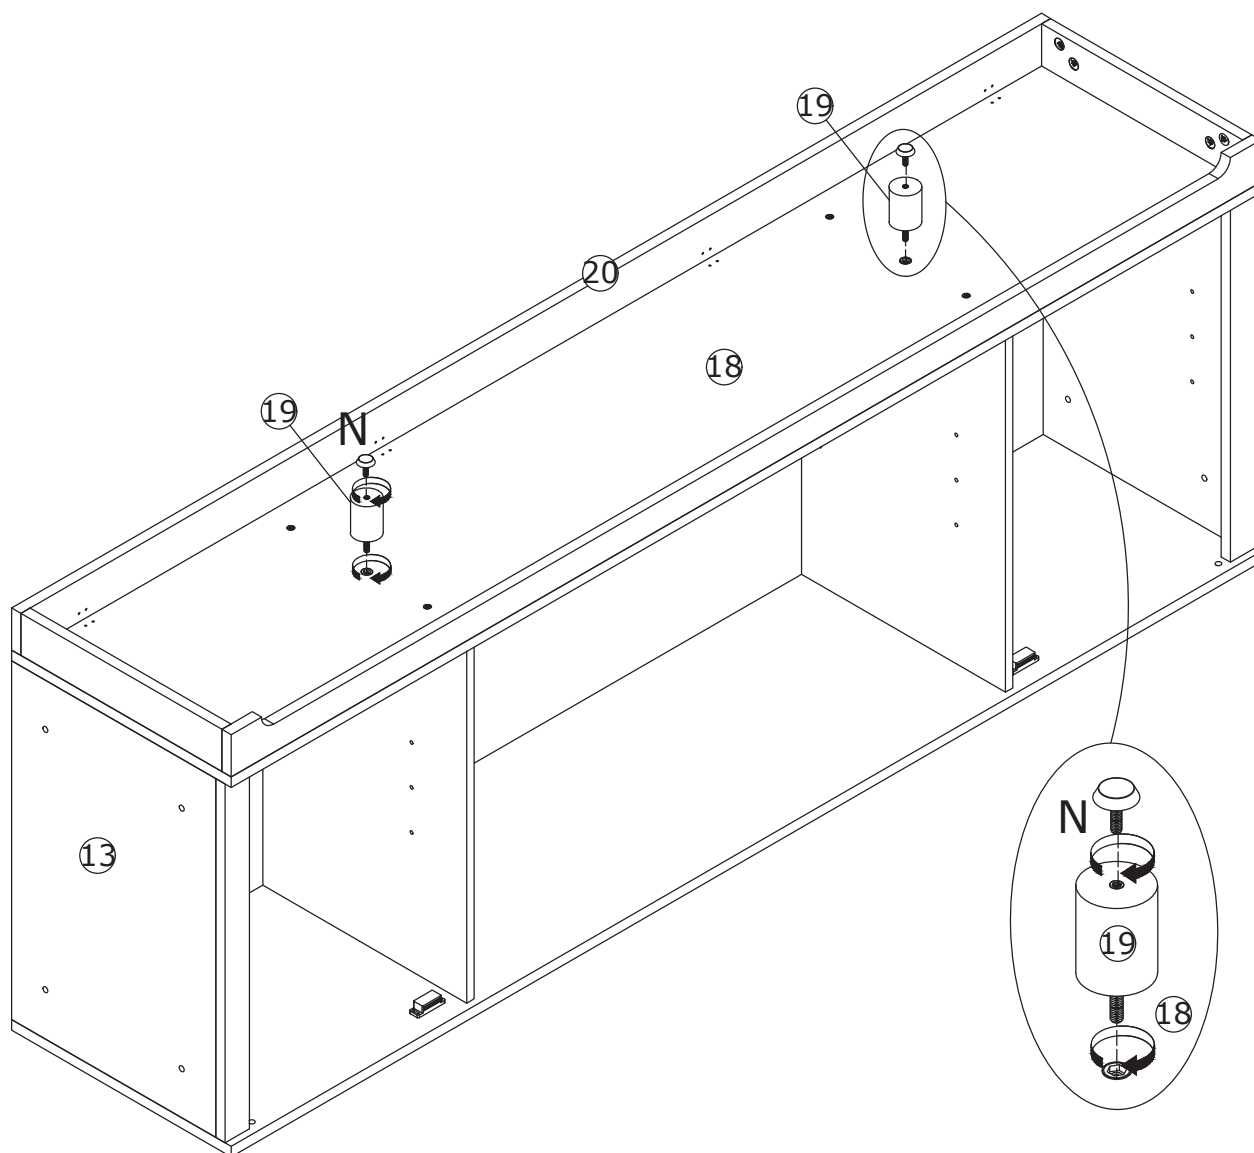

16

  

 Fix part(P) to plate 18, 20 and 21 using screw(Q) as shown.

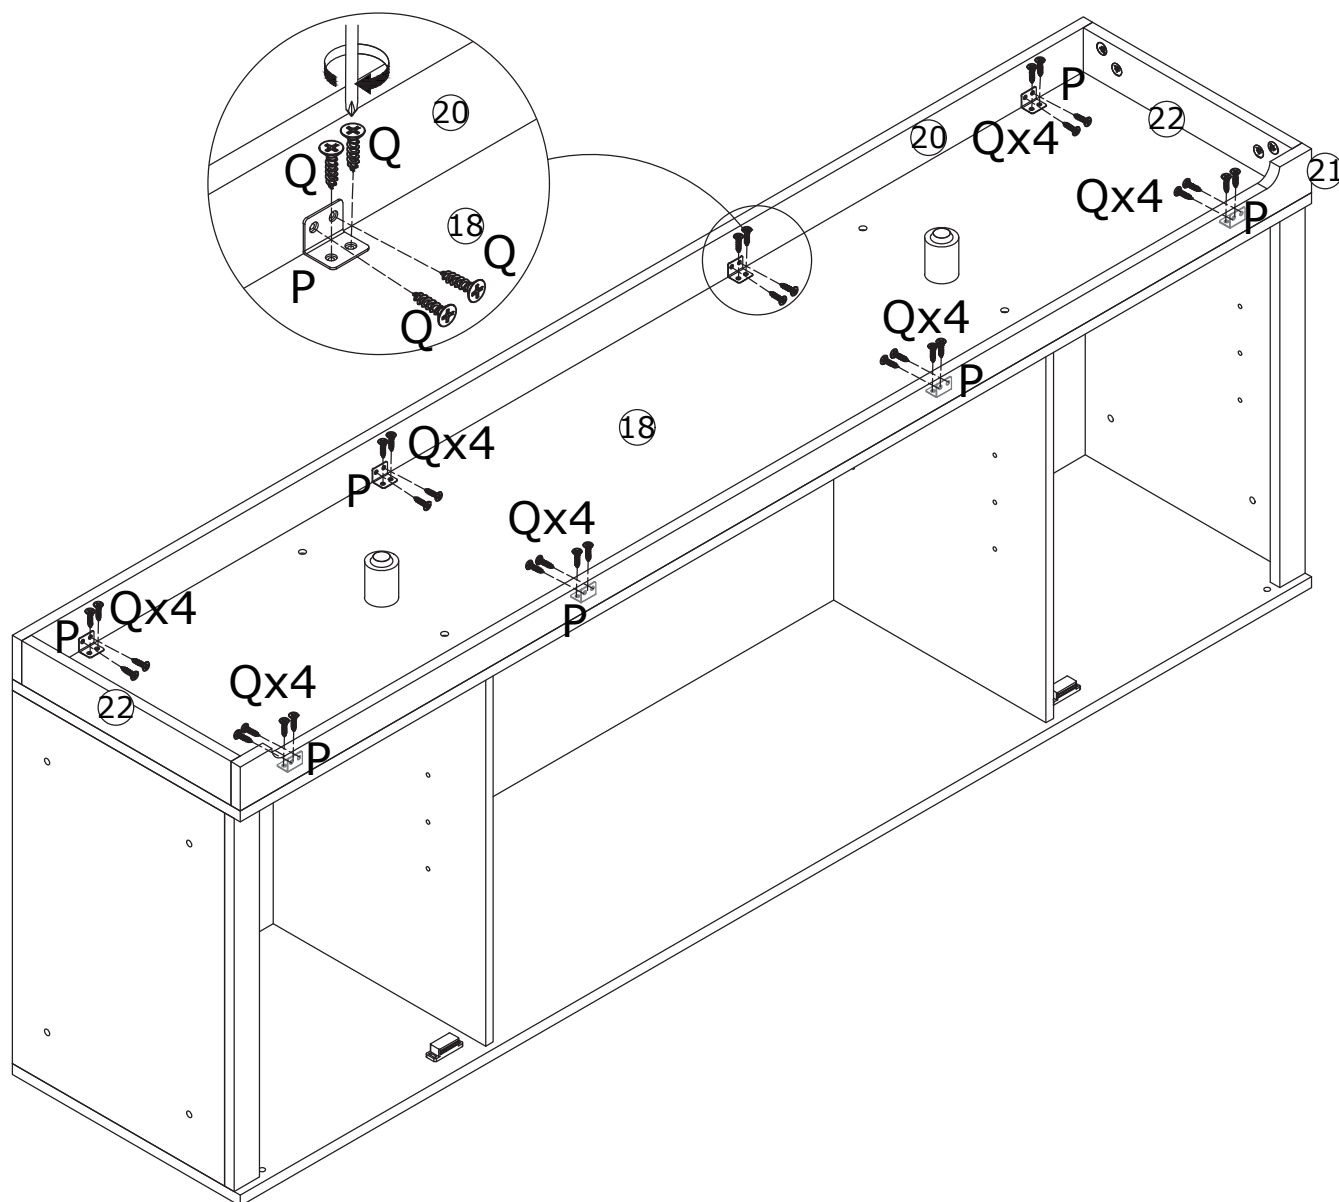


17

Jx8



 Insert part(J) into corresponding holes in plate 11,14,15 and 13, place shelf 16 in as shown.

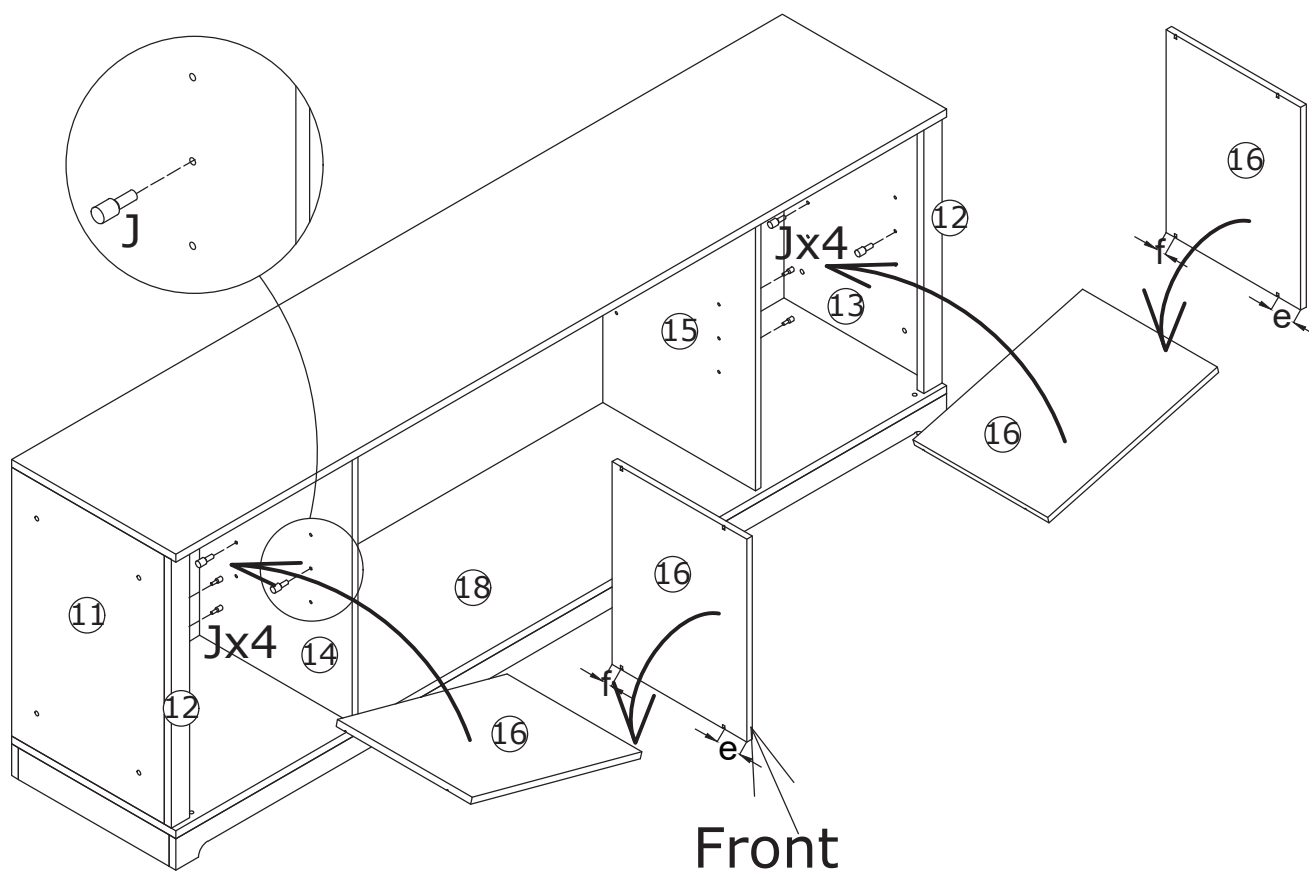


Distance: $e > f$

18

Jx4



 Insert part(J) into corresponding holes in plate 14 and 15, place shelf 17 in as shown.

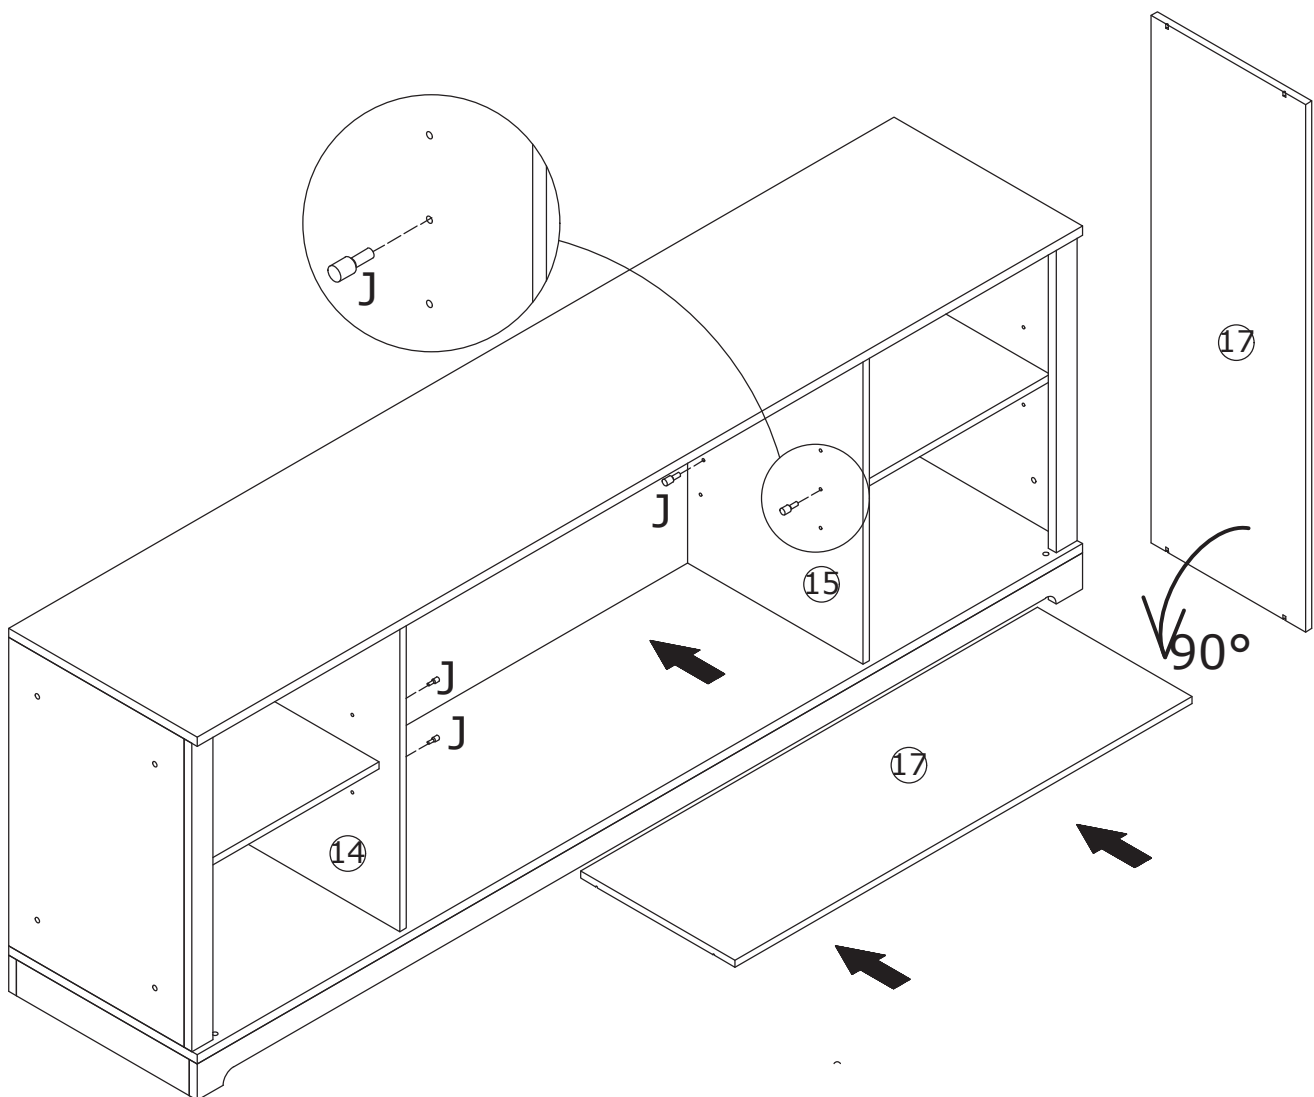

19



Ex4



Fx2




  Gx2

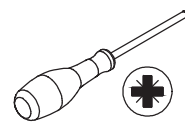


Insert part(E) into plate 25 and 26 as shown.

 Fix part(G) and knob(F) to plate 25 and 26 respectively as shown.

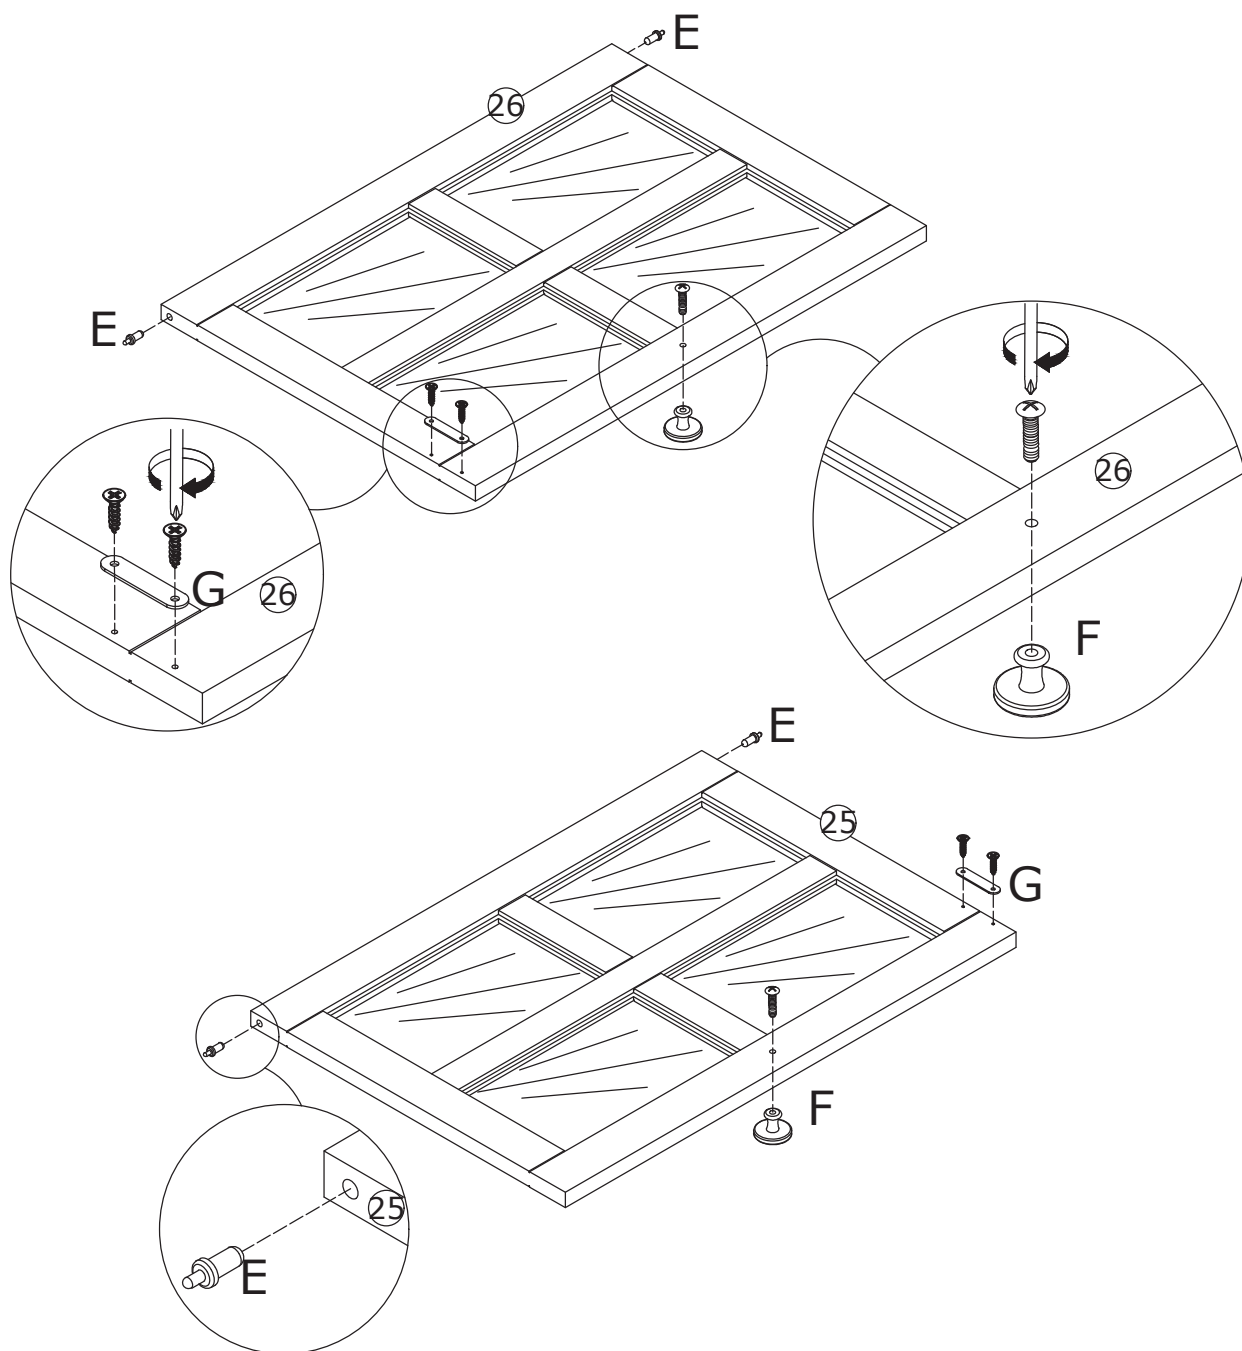


20

 Assembled the two door plate as shown.

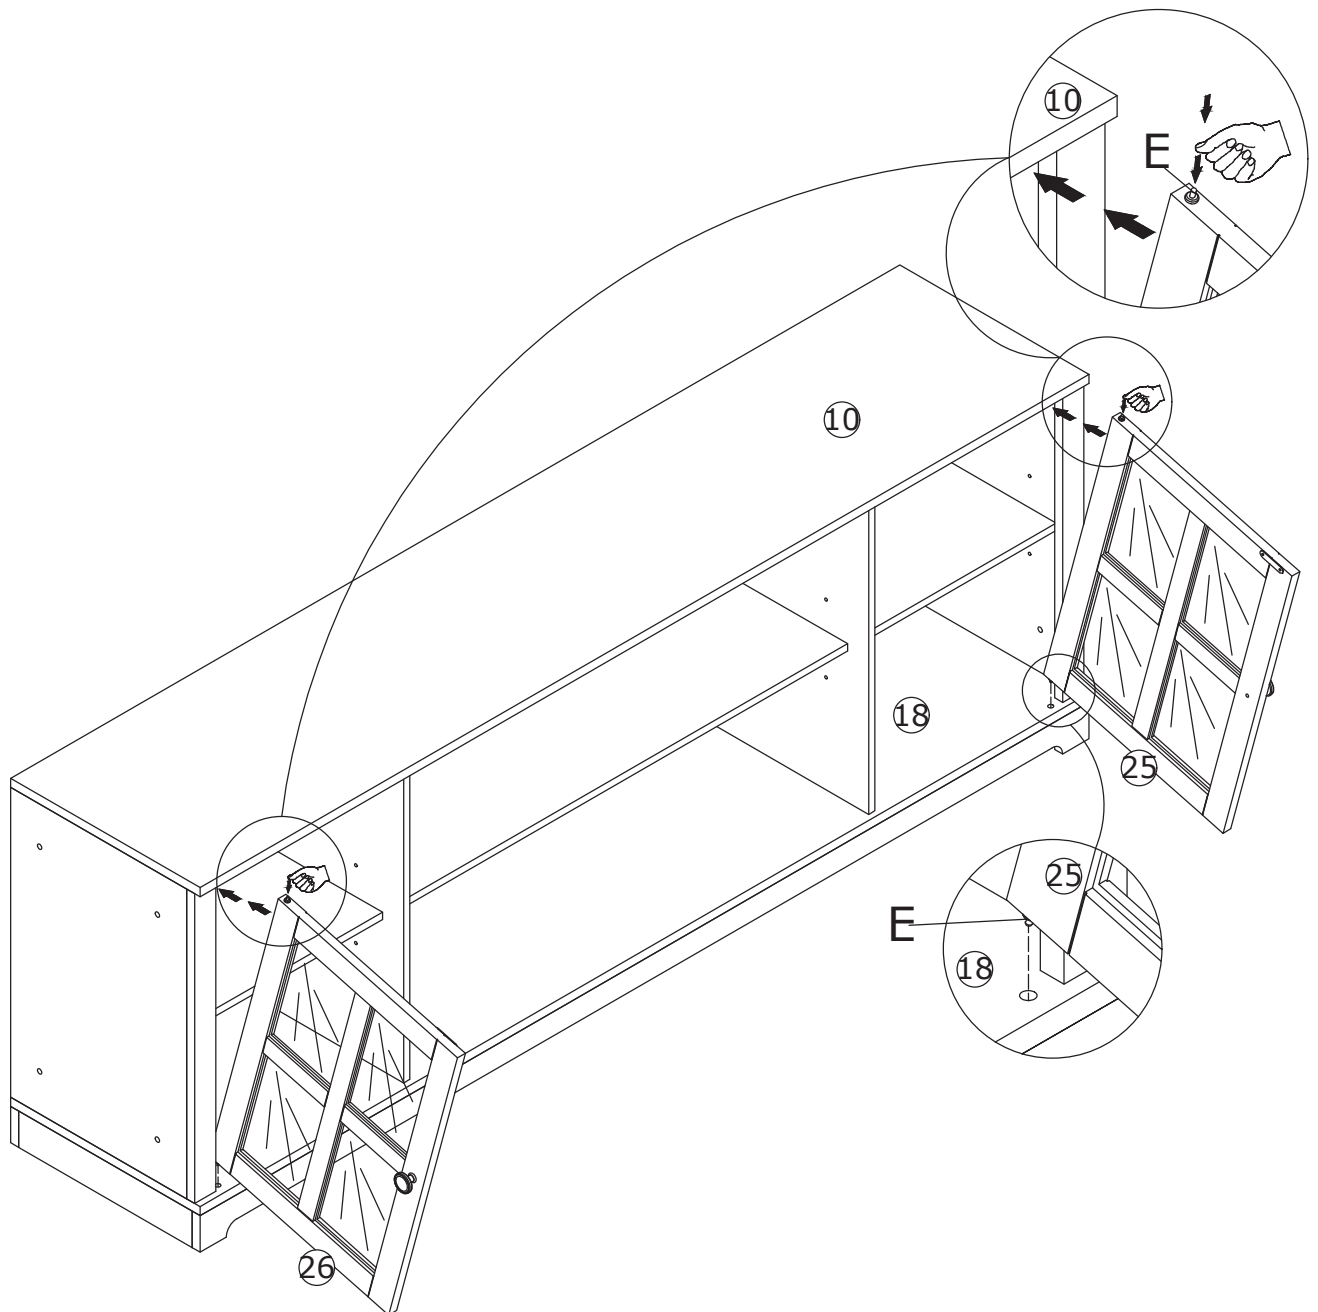


21

 Adjust leg support as shown.

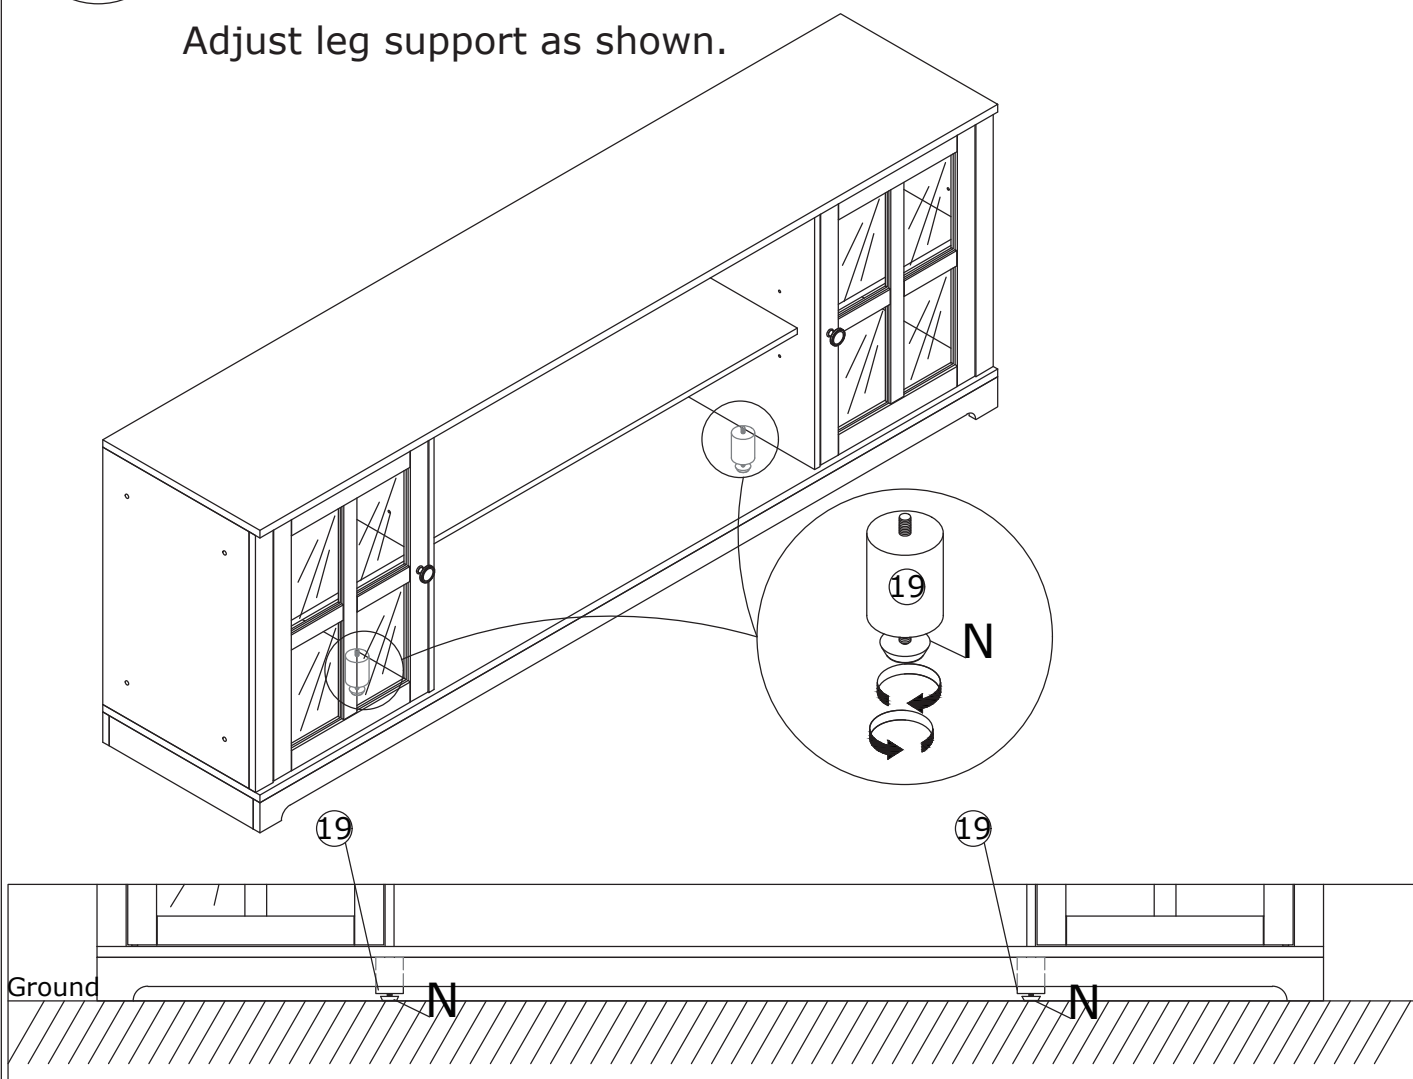

 If the cabinet is unstable with the ground, please rotate the 19 # foot fitting (N)

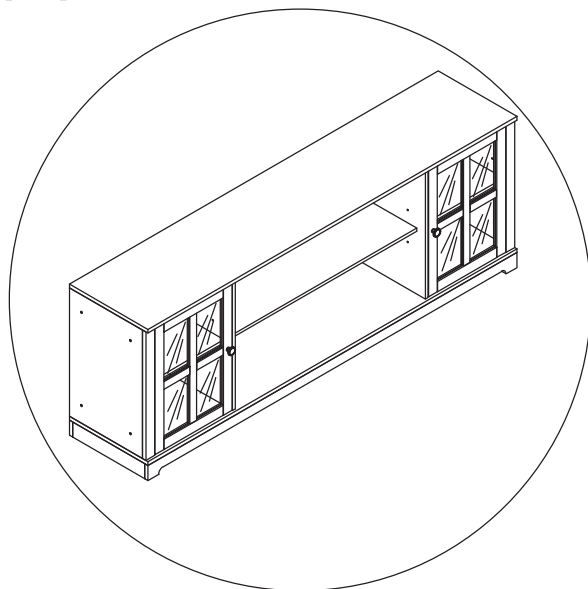


22



Ø6x35mm







 
Ø6x30mm




Hanging cabinet

Insert quickfit screw(A) into corresponding holes in two plate 4 as shown.

     Insert wooden dowel(C) into plate 3 and 5 as shown.

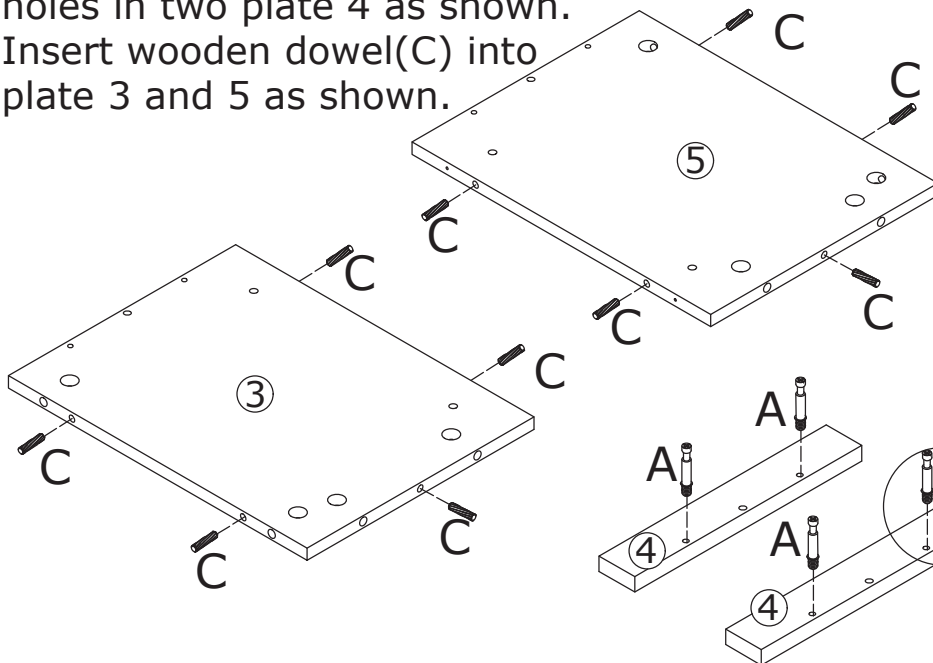


23

 





Ø15x10mm



 
Ø20mm



    Attach plate 4 to plate 3, put cam lock(B) into holes in plate 3 and turn clockwise to tighten as shown. Flip the part, stick part(H) to plate 3 as shown.

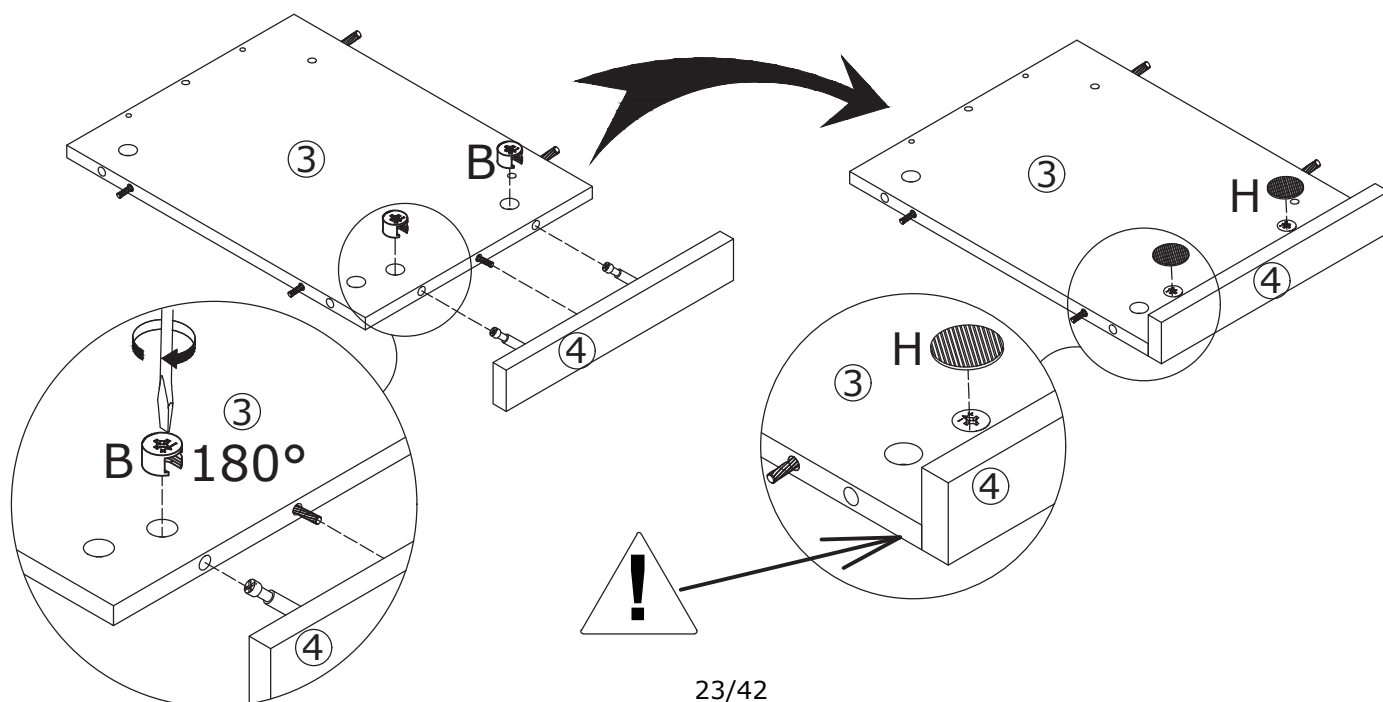


24



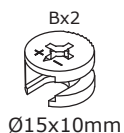 


Attach plate 4 to plate 5, put cam lock(B) into holes in plate 5 and turn clockwise to tighten as shown.

 Flip the part, stick part(H) to plate 5 as shown.

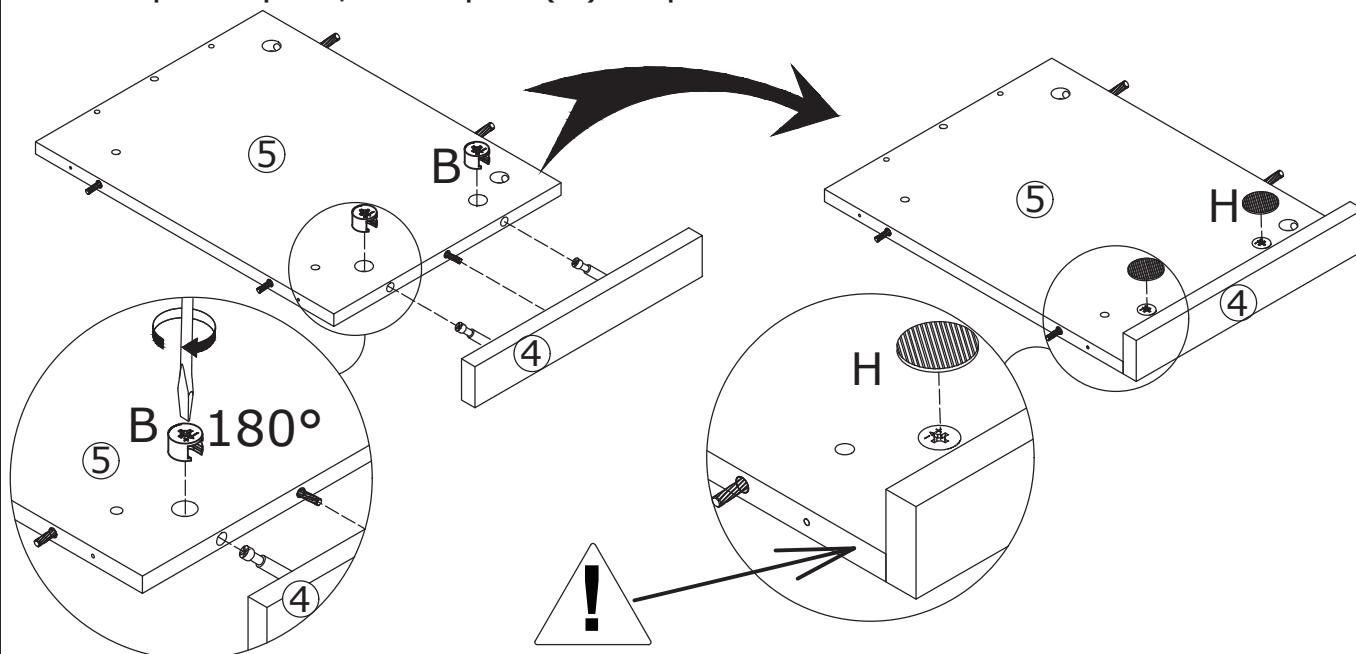

25

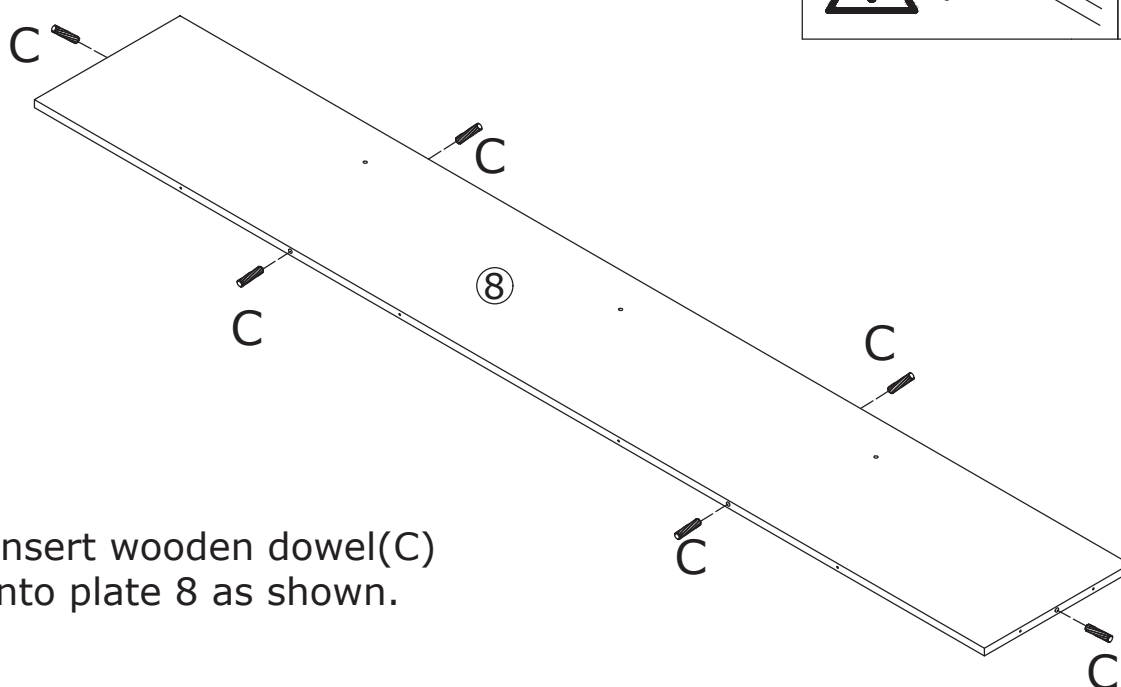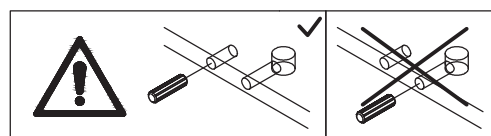   

Insert wooden dowel(C) into plate 8 as shown.

26

Ax12





Ø6x35mm


Dx4



  
Ø4x35mm

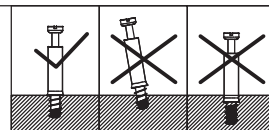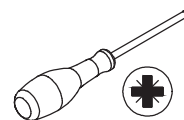


 
Attach the two components to plate 8, then fix using screw(D) as shown.
Insert quickfit screw(A) into corresponding holes in two plate 1 as shown.

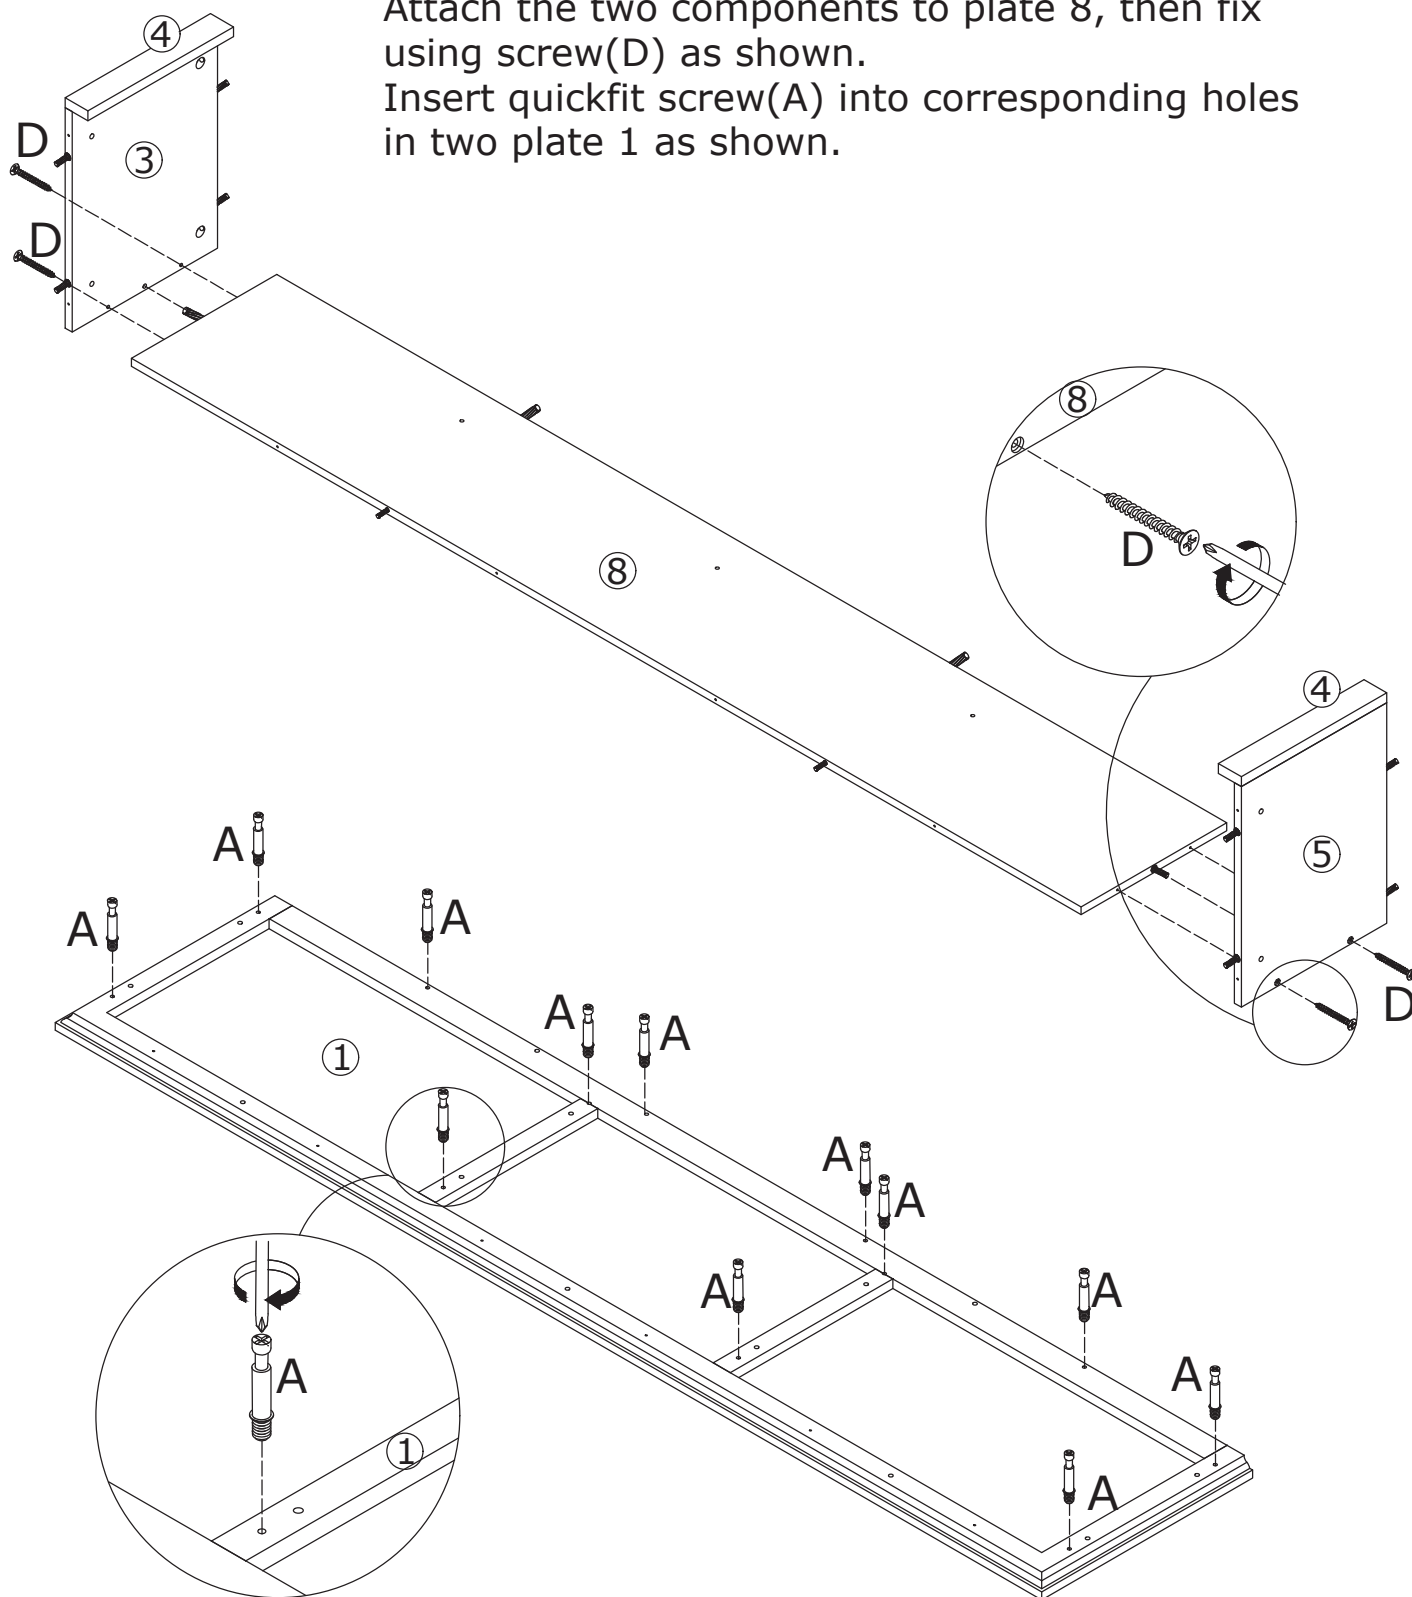

27

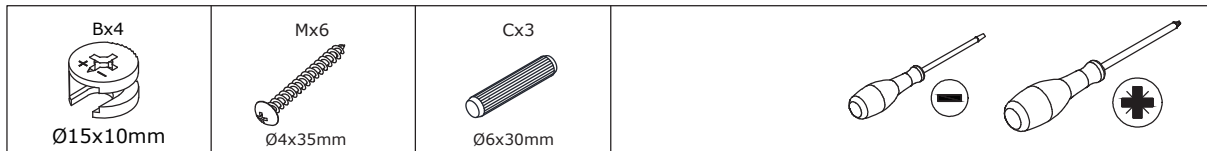 

 
 
Attach plate 2 to plate 1 using wooden dowel(C) and fix with screw(M) as shown.
Cover plate 1 to plate 3,5 and 8, put cam lock(B) into holes in plate 3,5 and turn clockwise to tighten as shown.

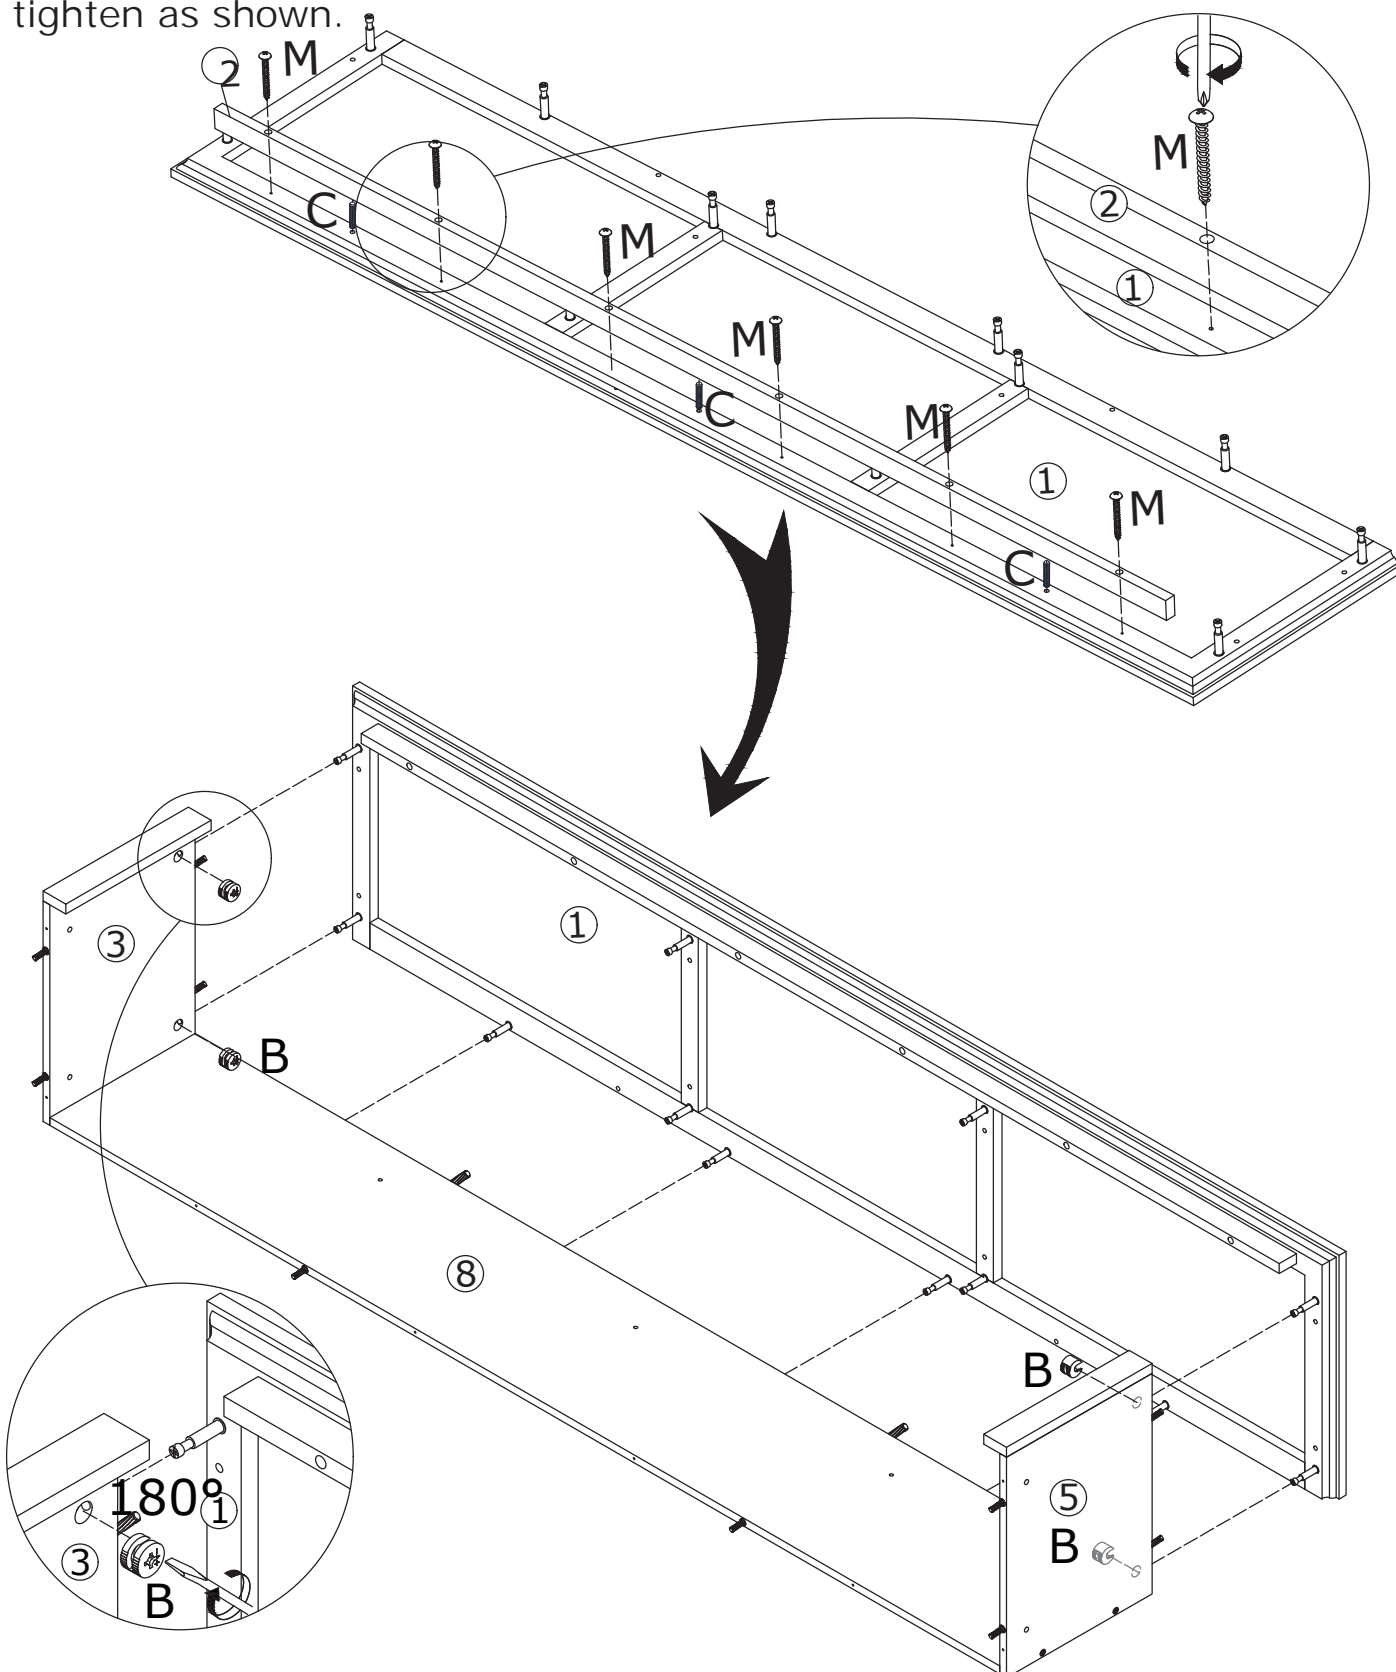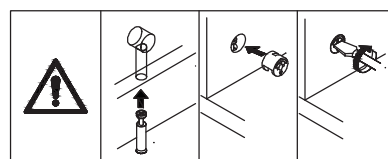



28



 
 
Stick part(H) to plate 3,8 and 5 as shown.
Put cam lock(B) into holes in plate 8 and turn clockwise to tighten as shown.

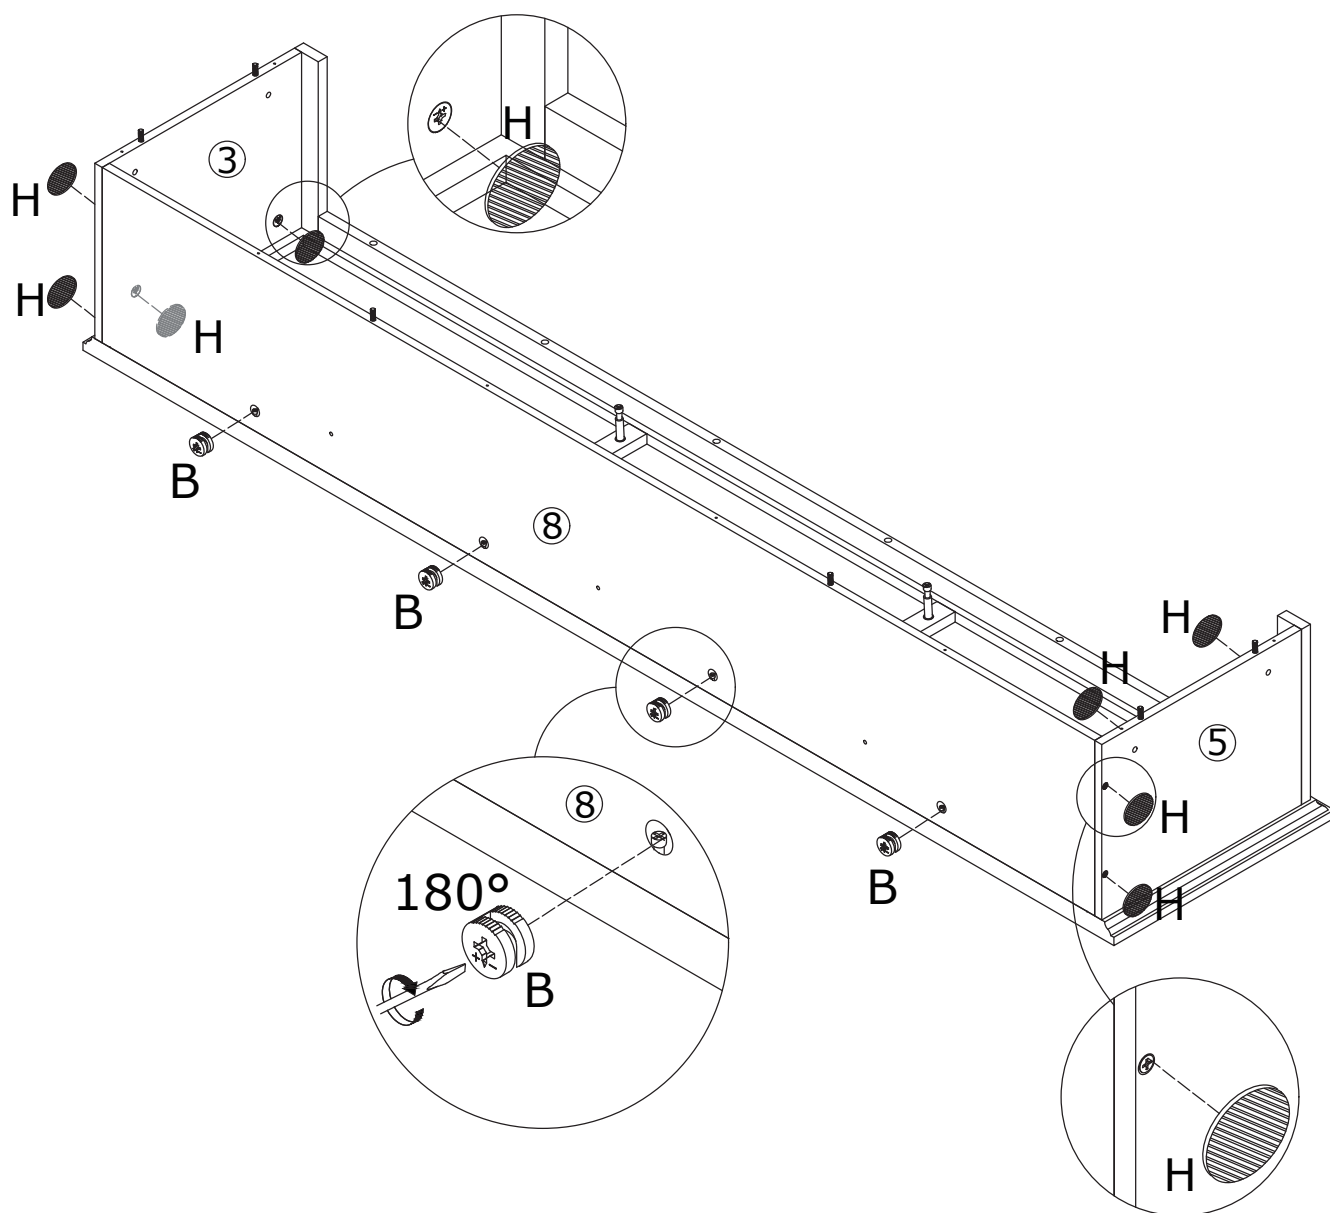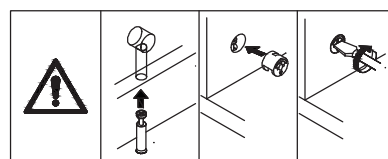

29

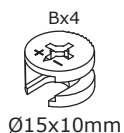  

  
Attach plate 6 and 7 to plate 1 with wooden dowel(C), put cam lock(B) into holes in plate 6,7 and turn clockwise to tighten as shown.
Insert wooden dowel(C) into plate 6 and 7 as shown.

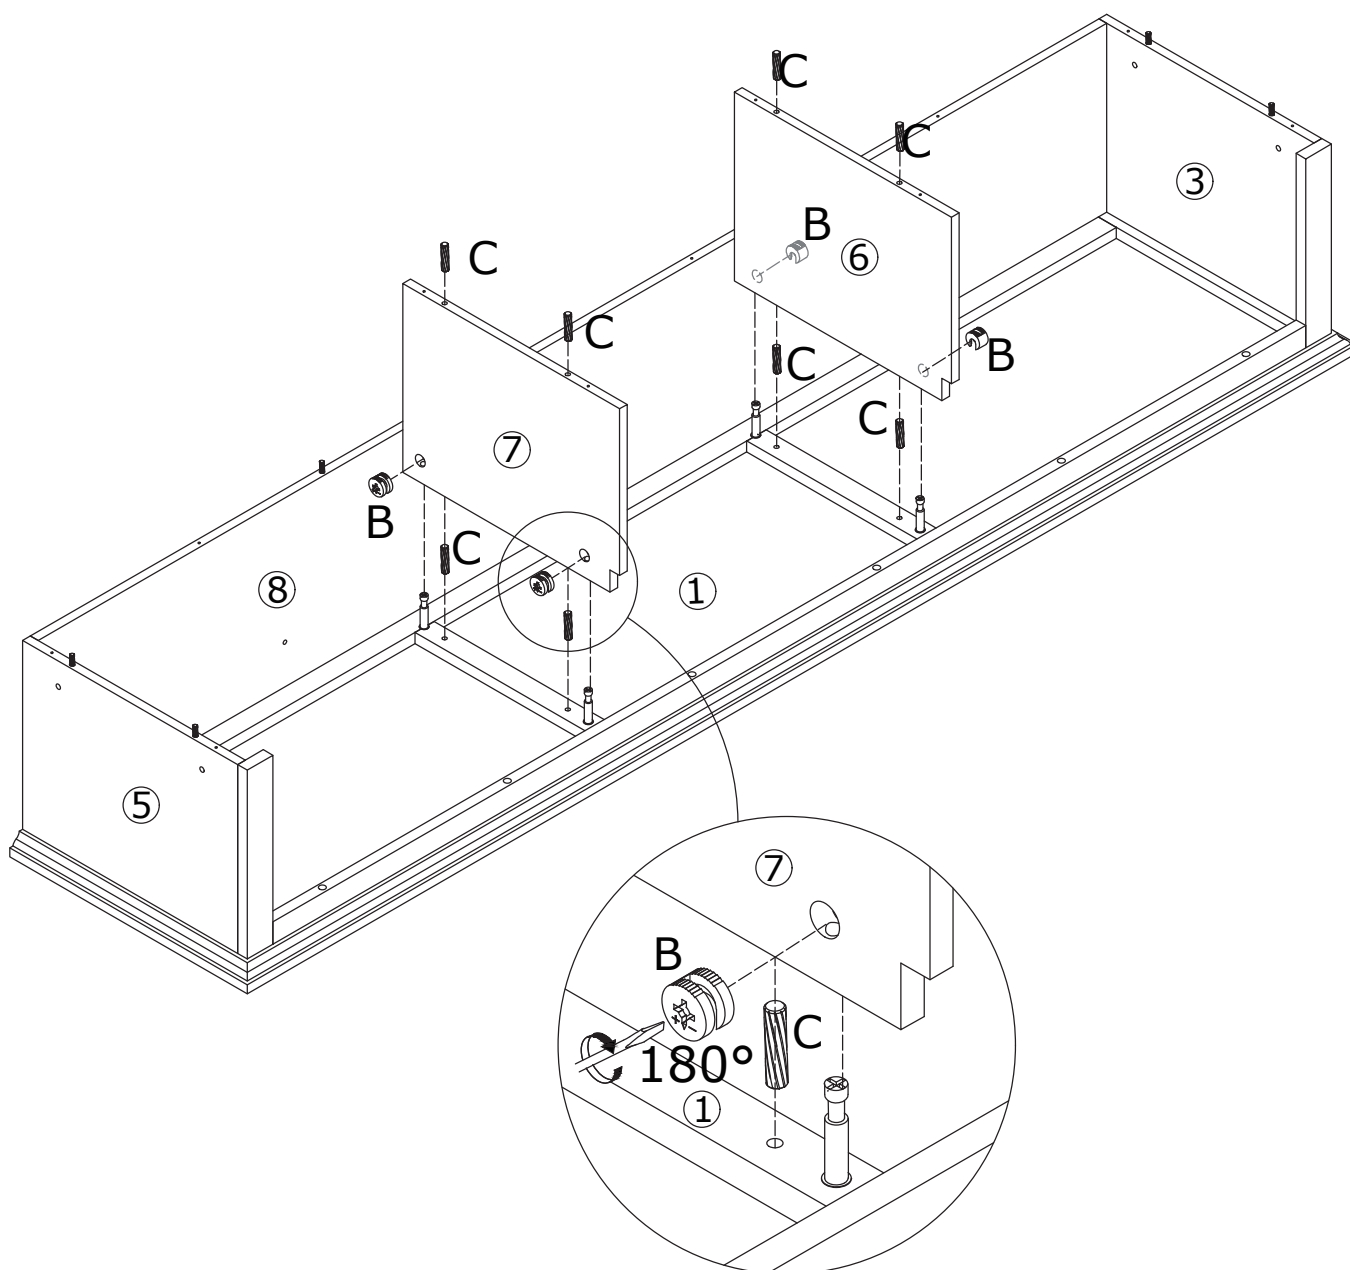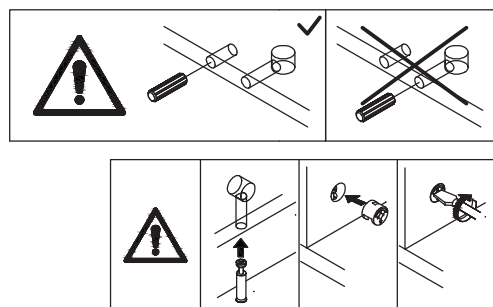

30




 Cover plate 9 to the unit, then fix using screw(D) as shown.
Stick part(H) to plate 6 and 7 as shown.


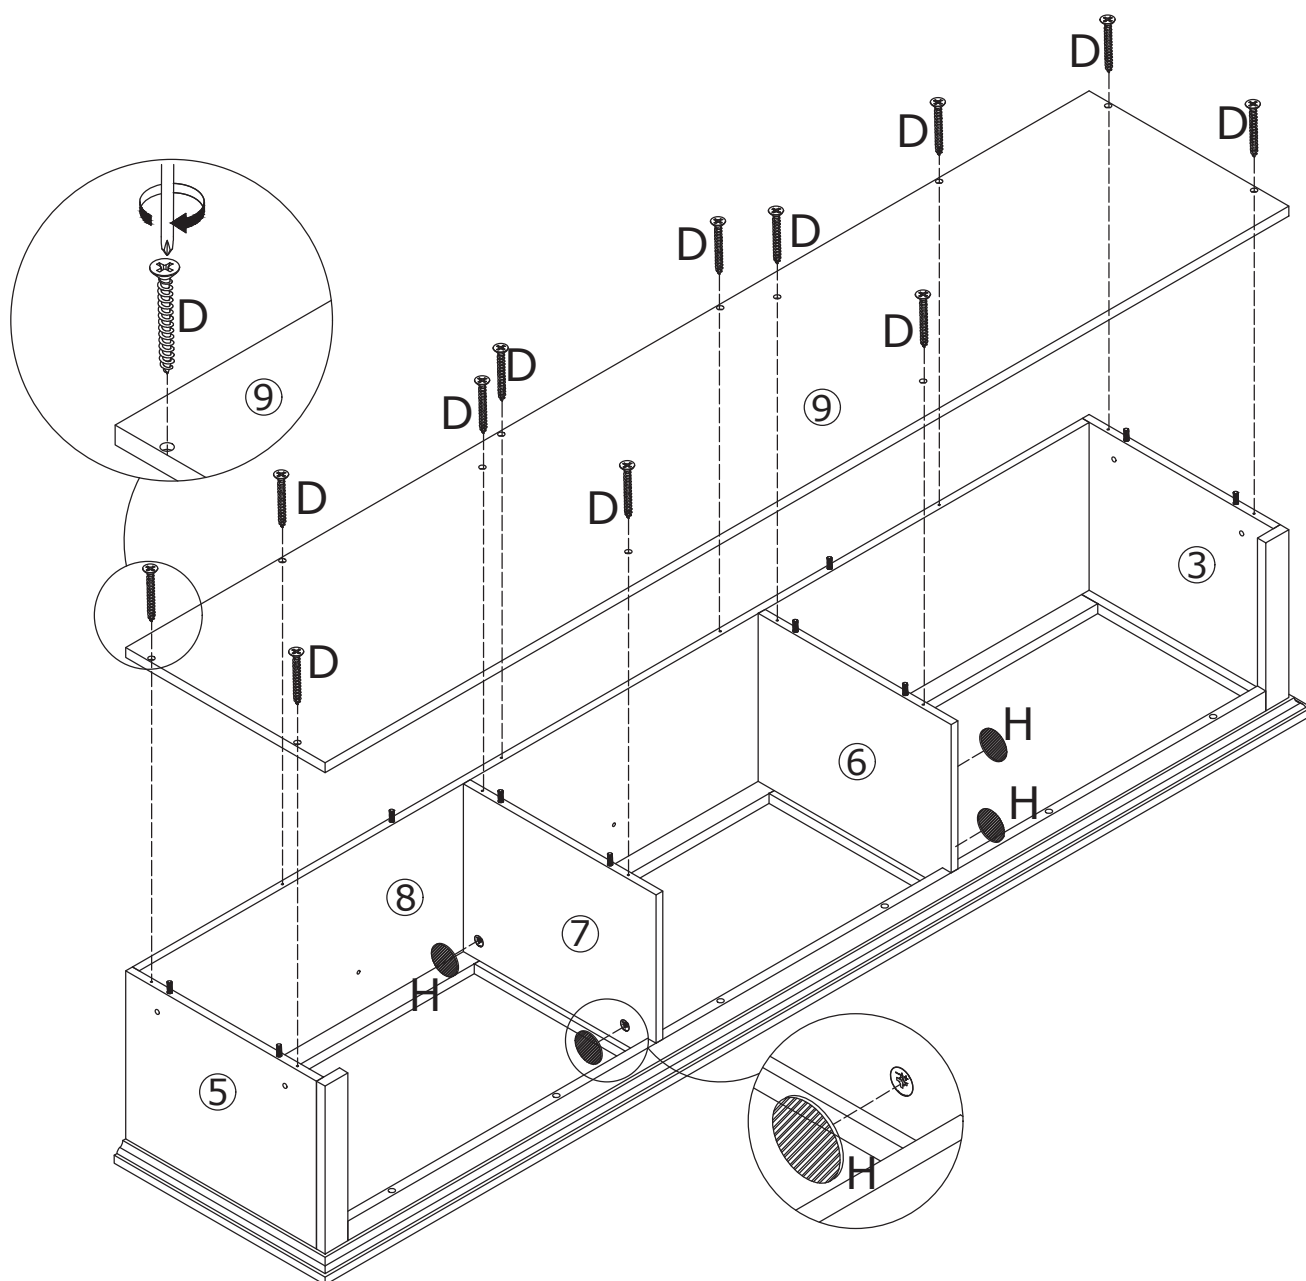





 
Please use a tape measure to measure the distance between the three wall hanging holes on plate 8 and the distance from the hole center to the bottom of plate 9.

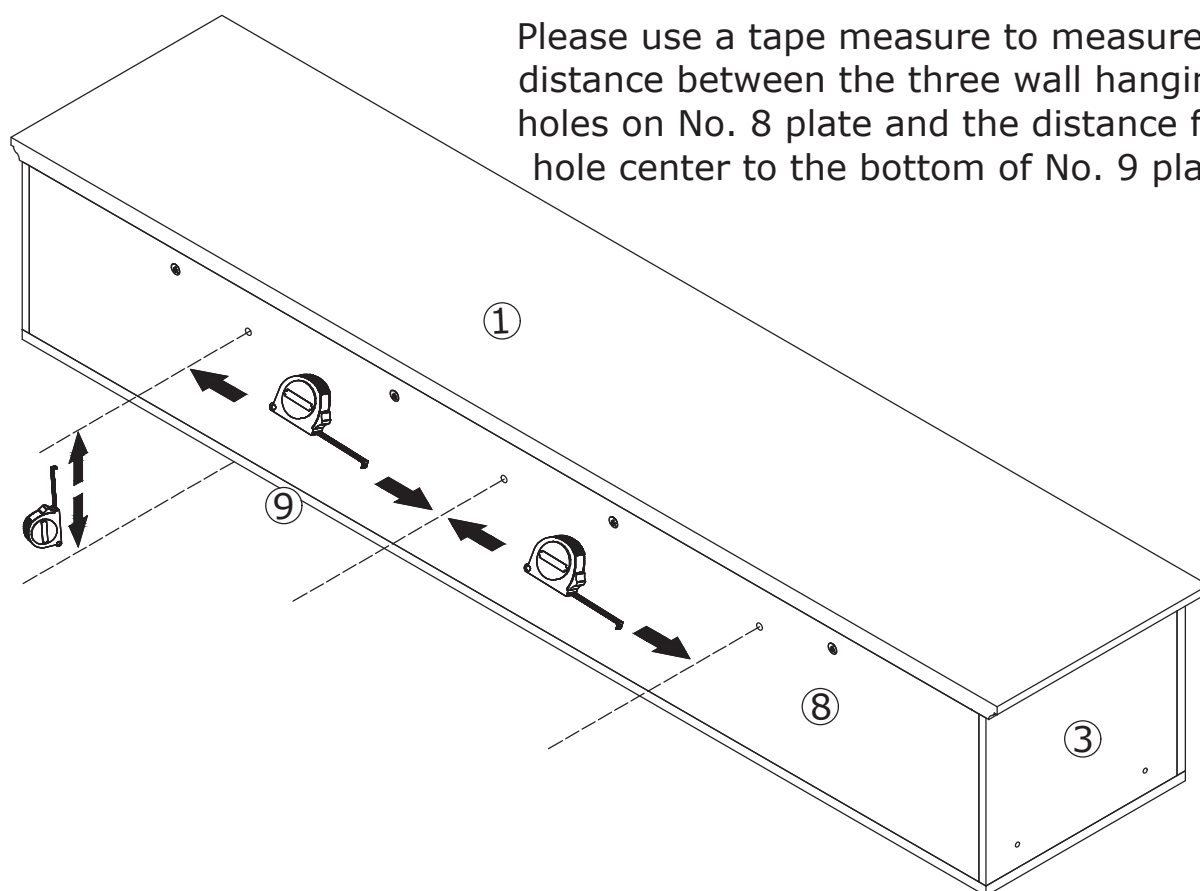



32

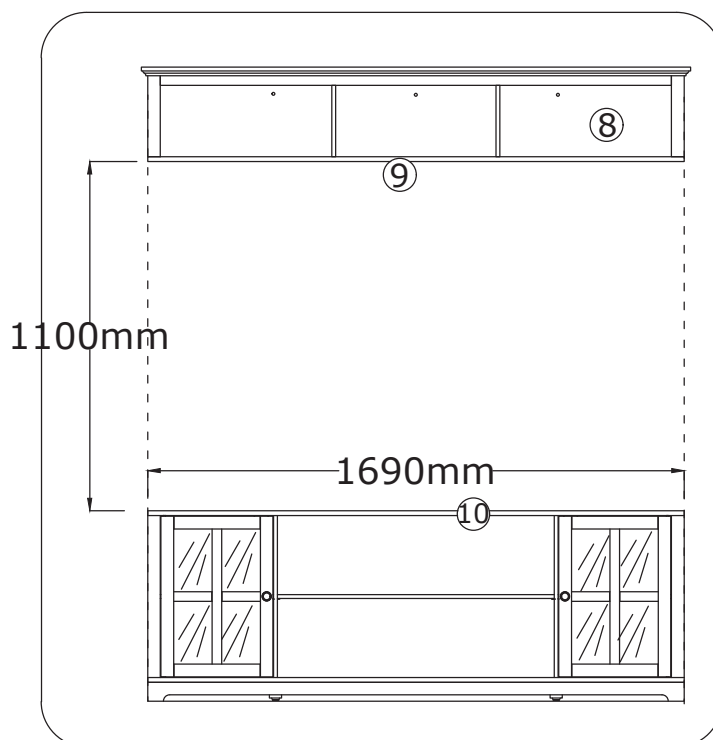  

  
Please use the electric drill to lead three holes in the wall according to the value measured in the previous step^① and the relevant data in this step,

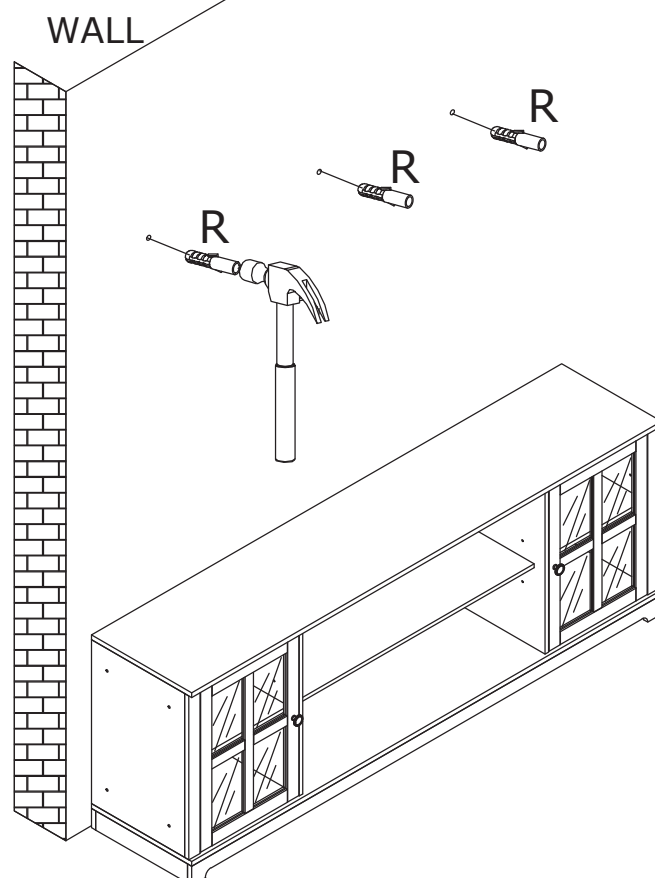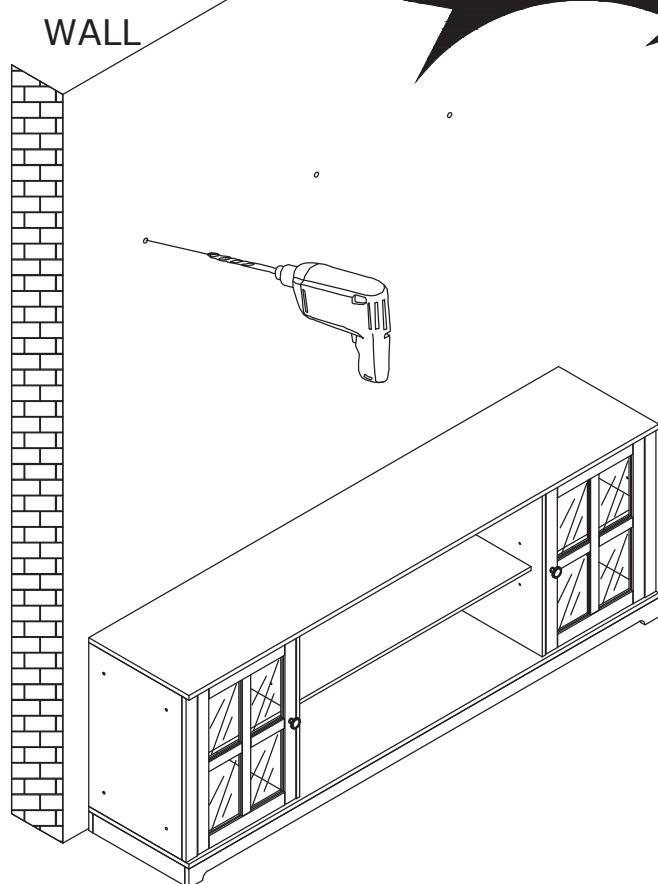

33

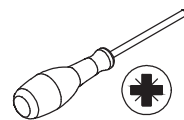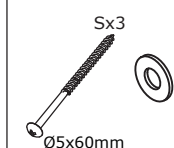  

 
Fix the upper cabinet to part(R) on wall through hardware pack(S) as shown.

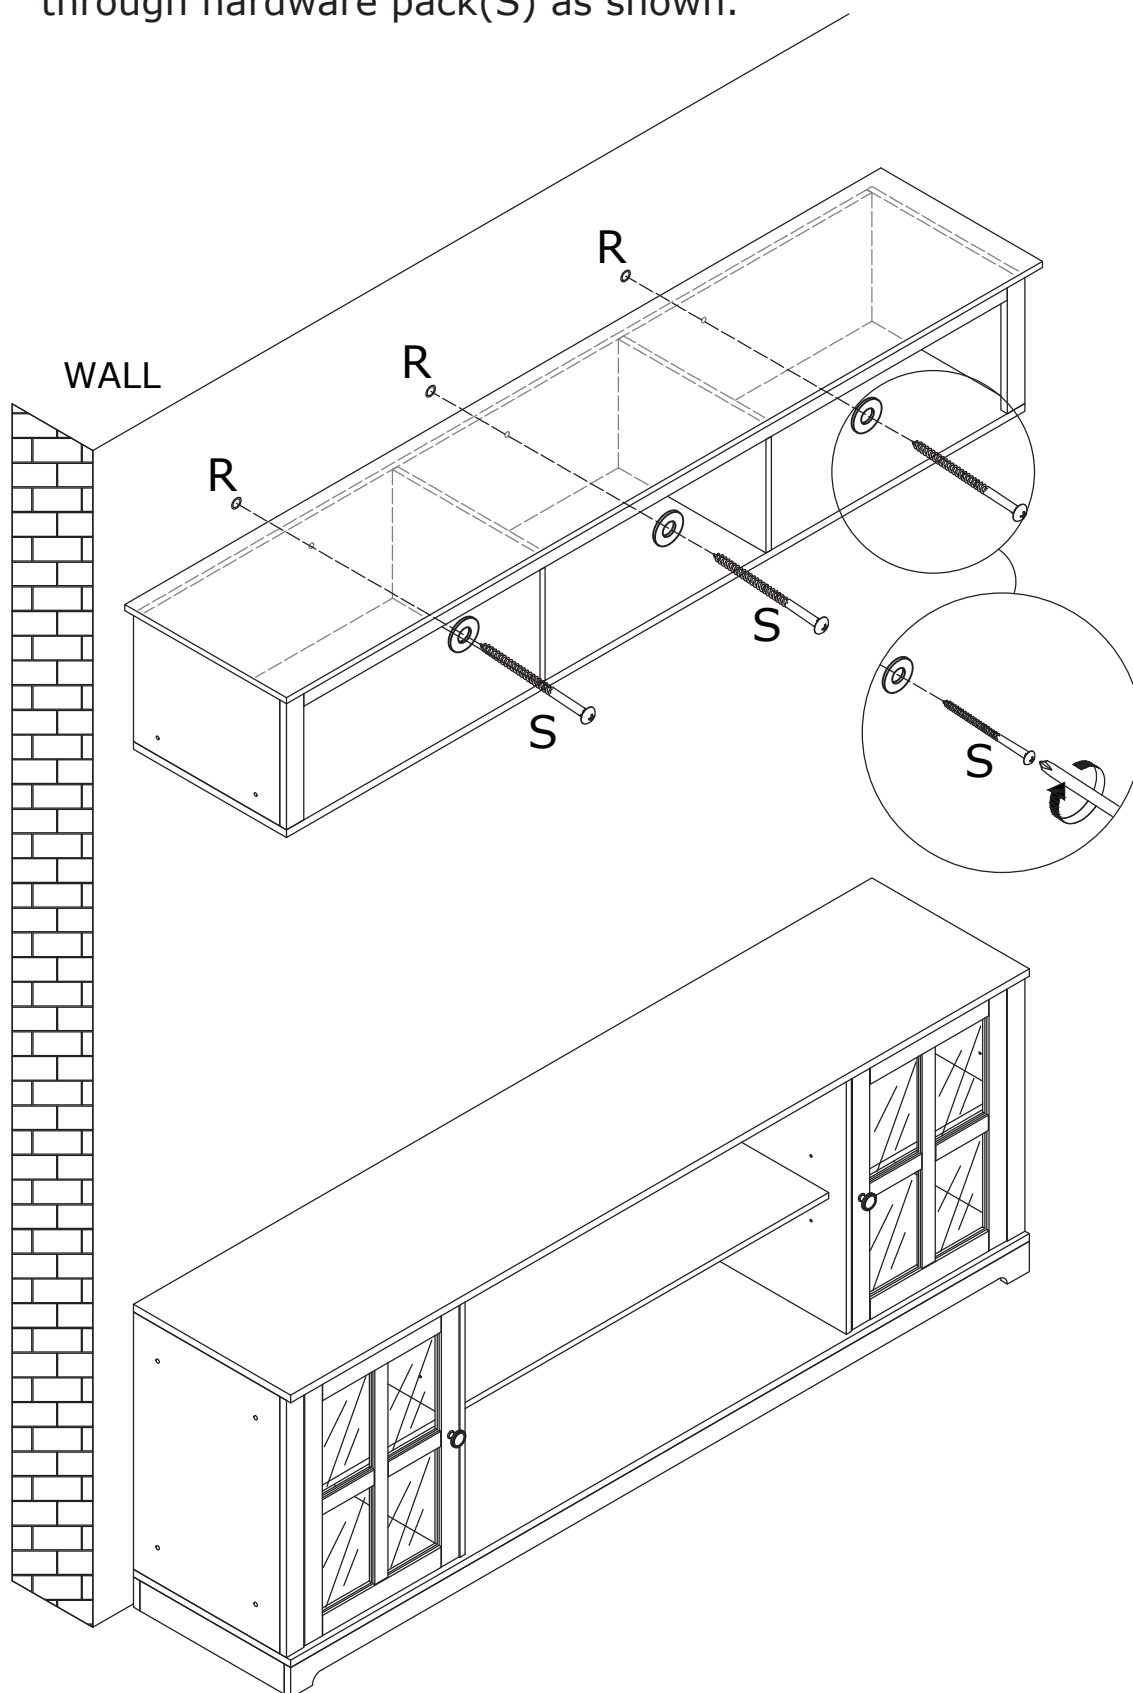

34




 If there is no high cabinet, please use hole sticker (H) to cover the holes on the appearance of the hanging cabinet and TV cabinet respectively.
If there is a high cabinet, please skip step 34 and directly install step 35.

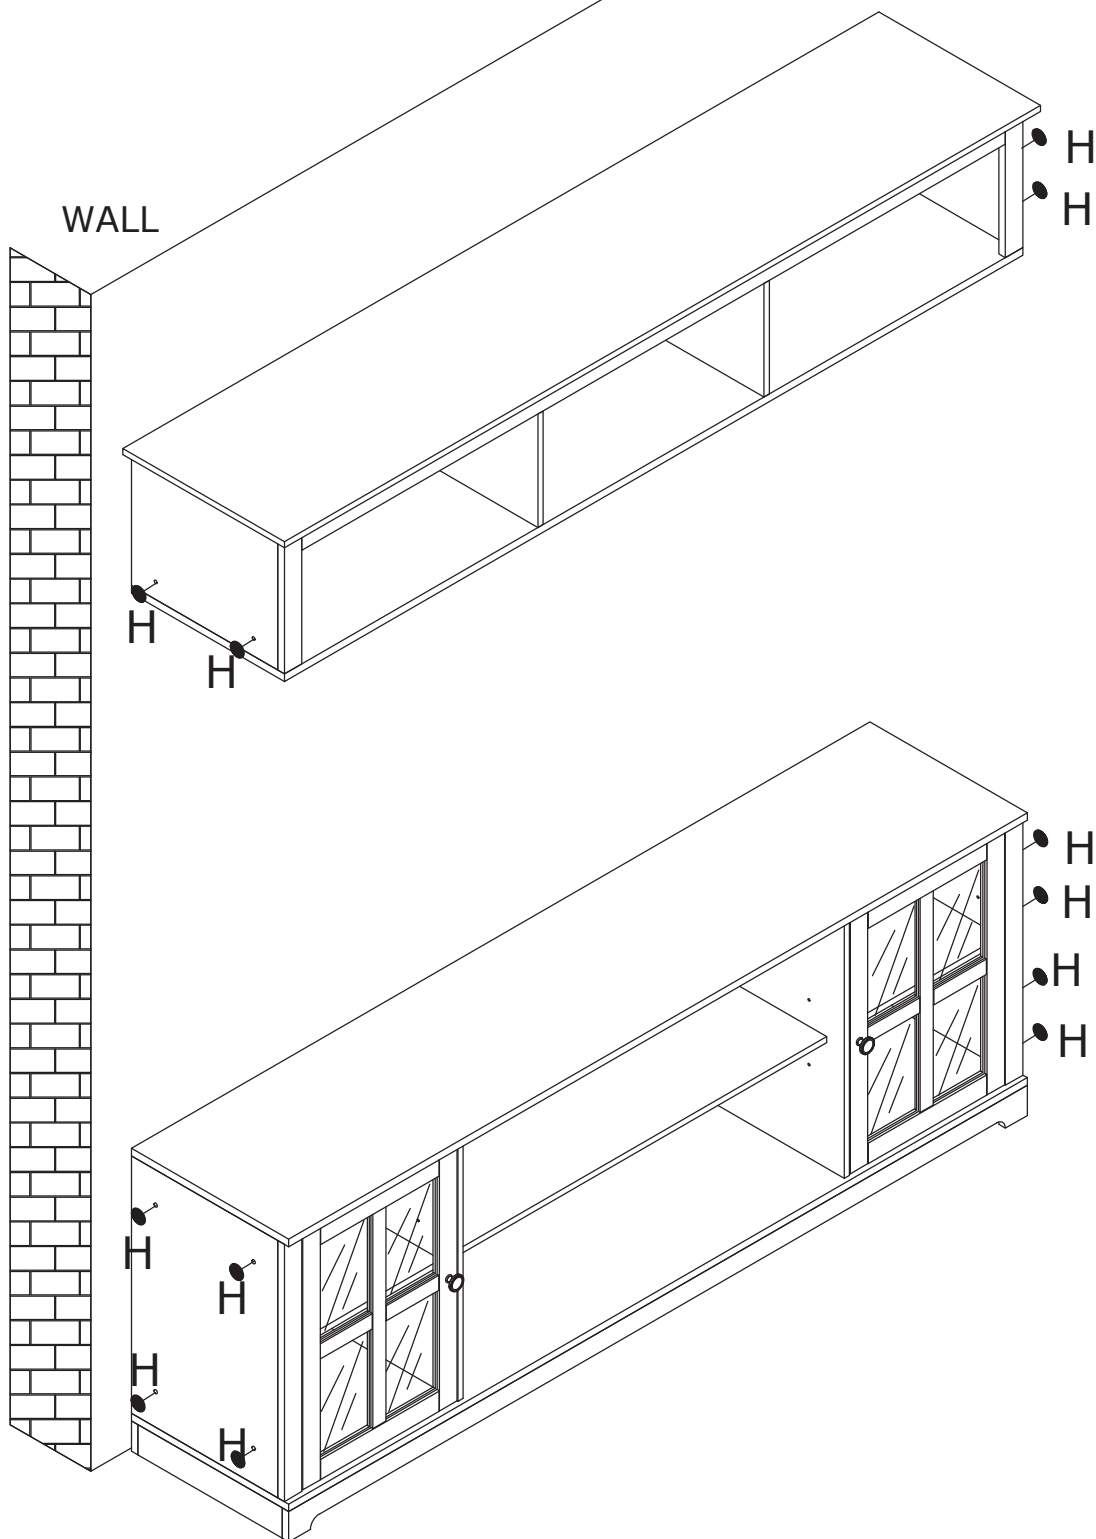

35

 
If there are left and right high cabinets, hanging cabinets and TV cabinets, please install them as shown in the figure below.

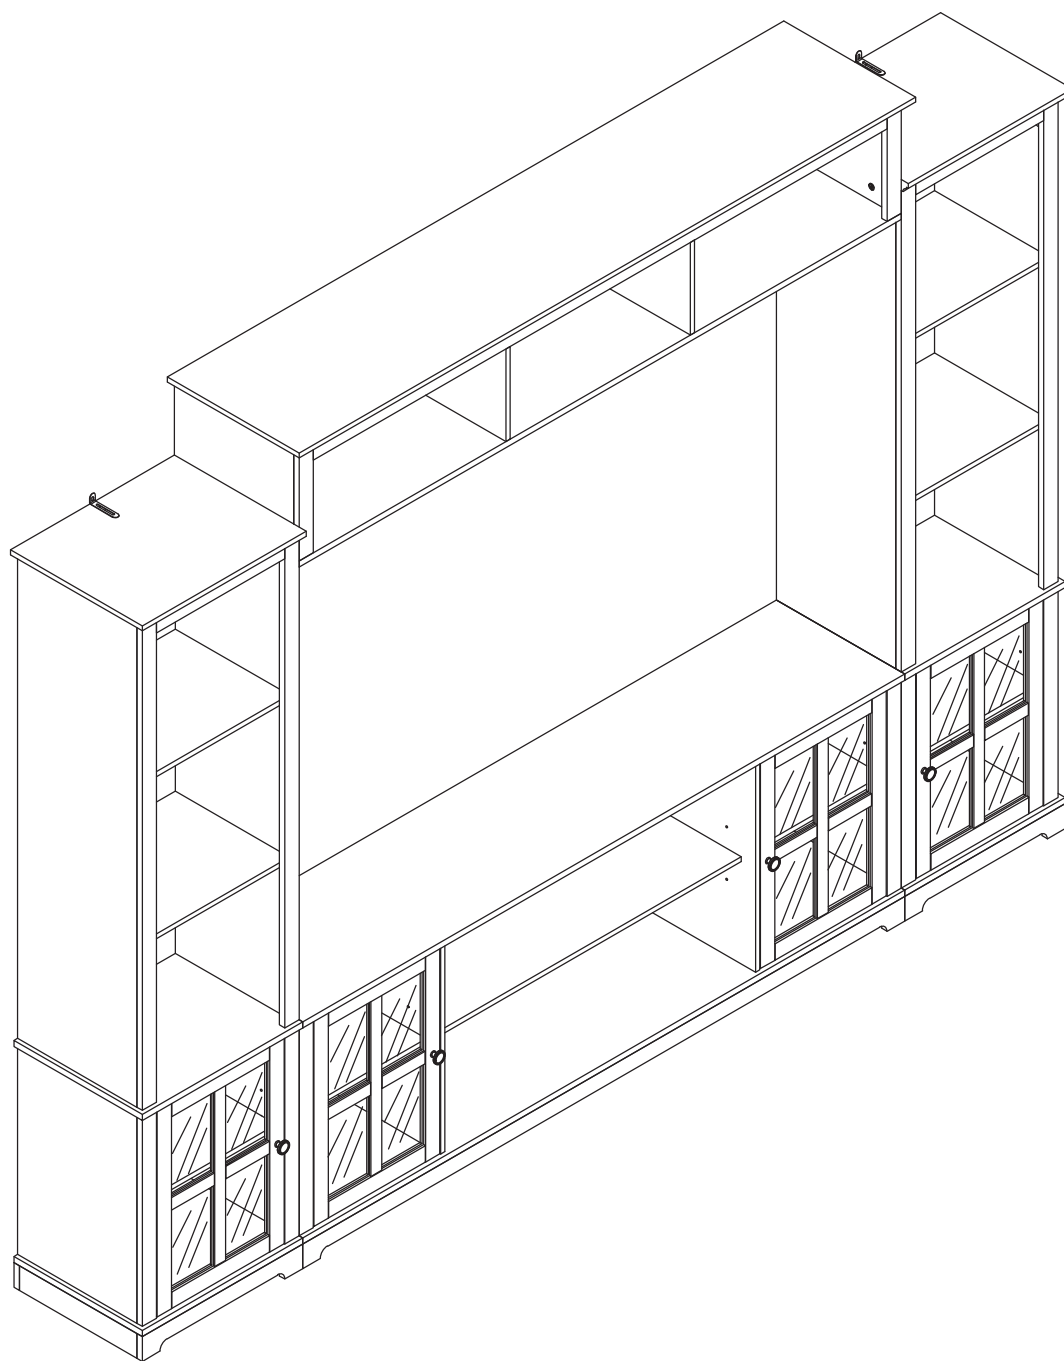

Left high cabinet


Right high cabinet

 Take out shelf 16 and 17、48 from cabinets.

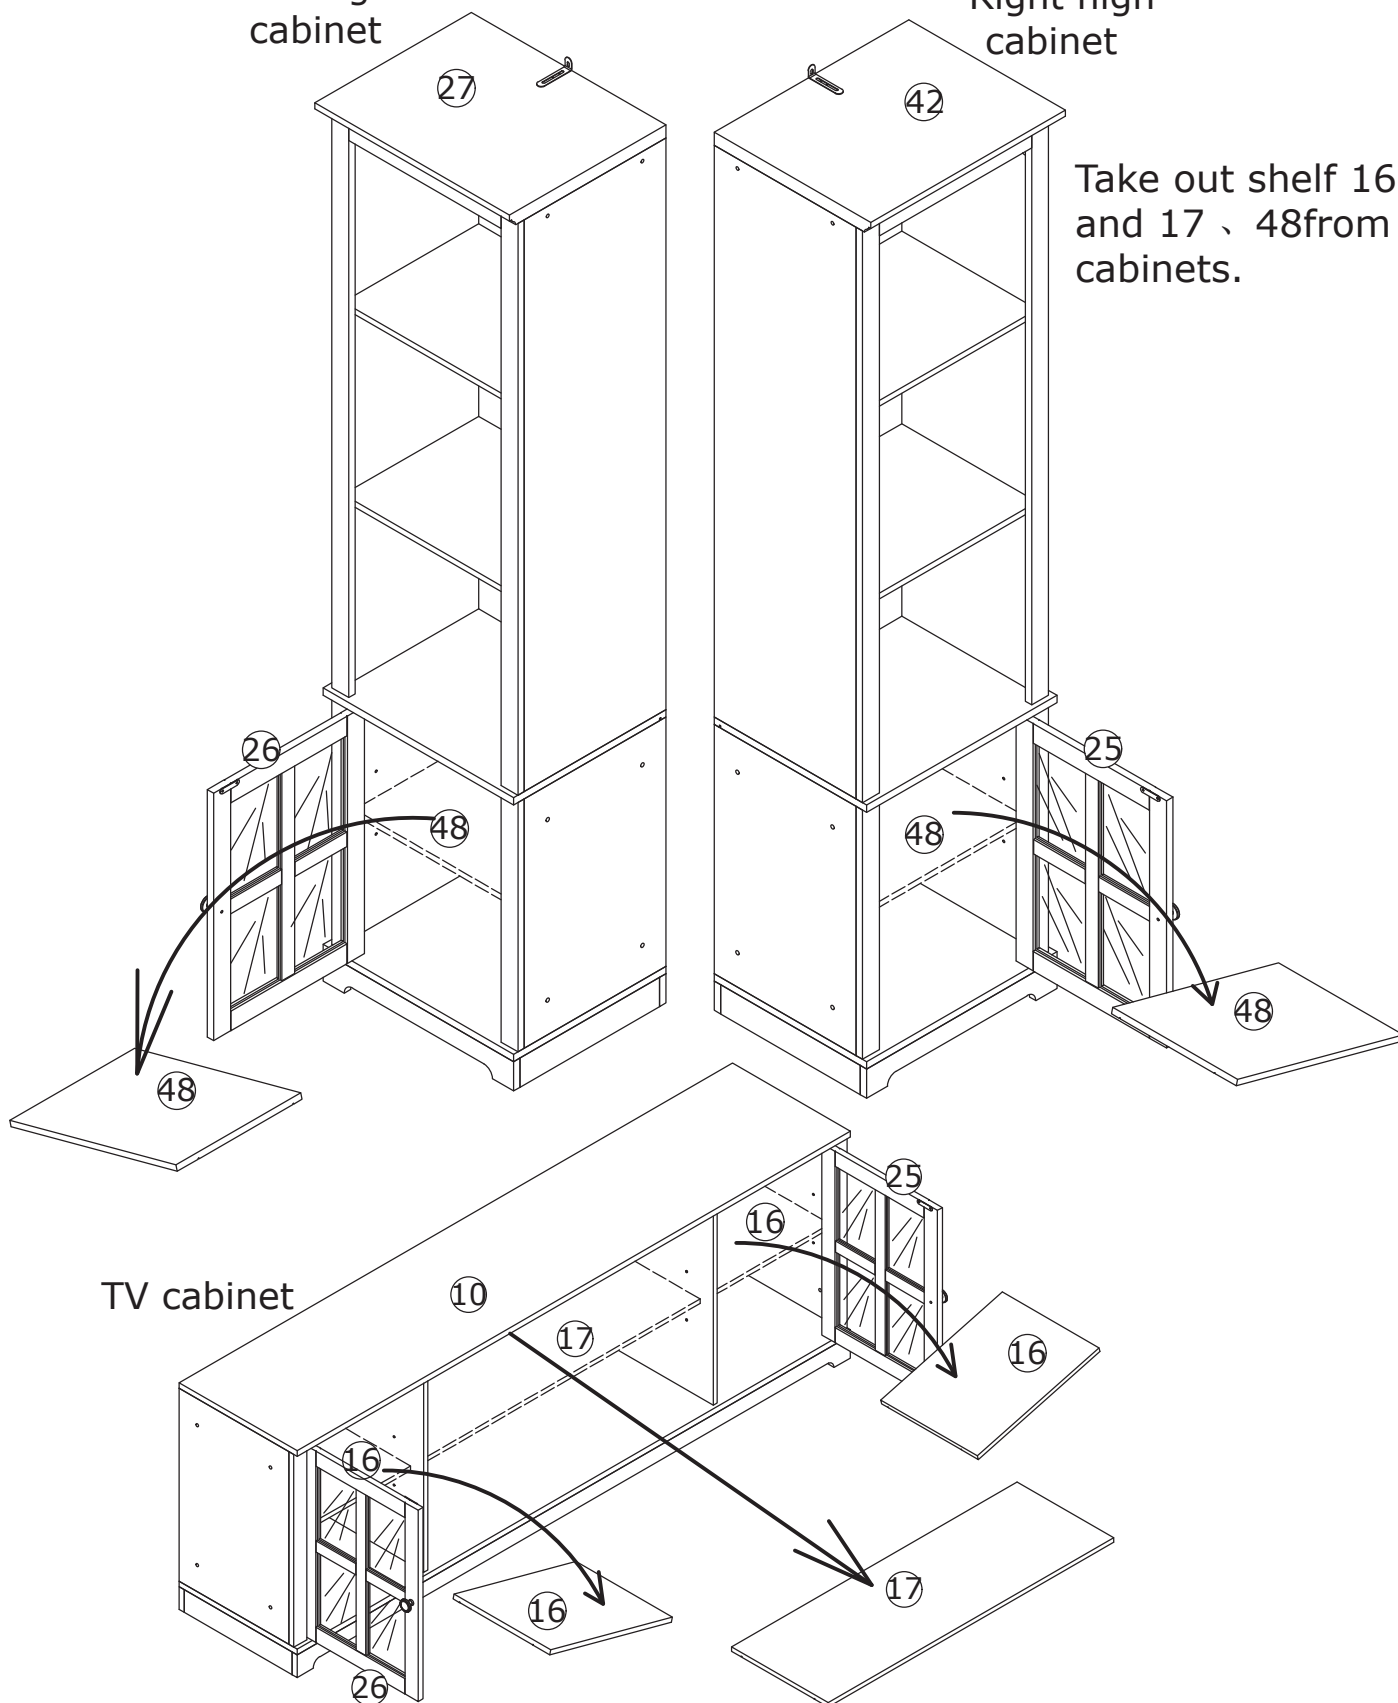




37

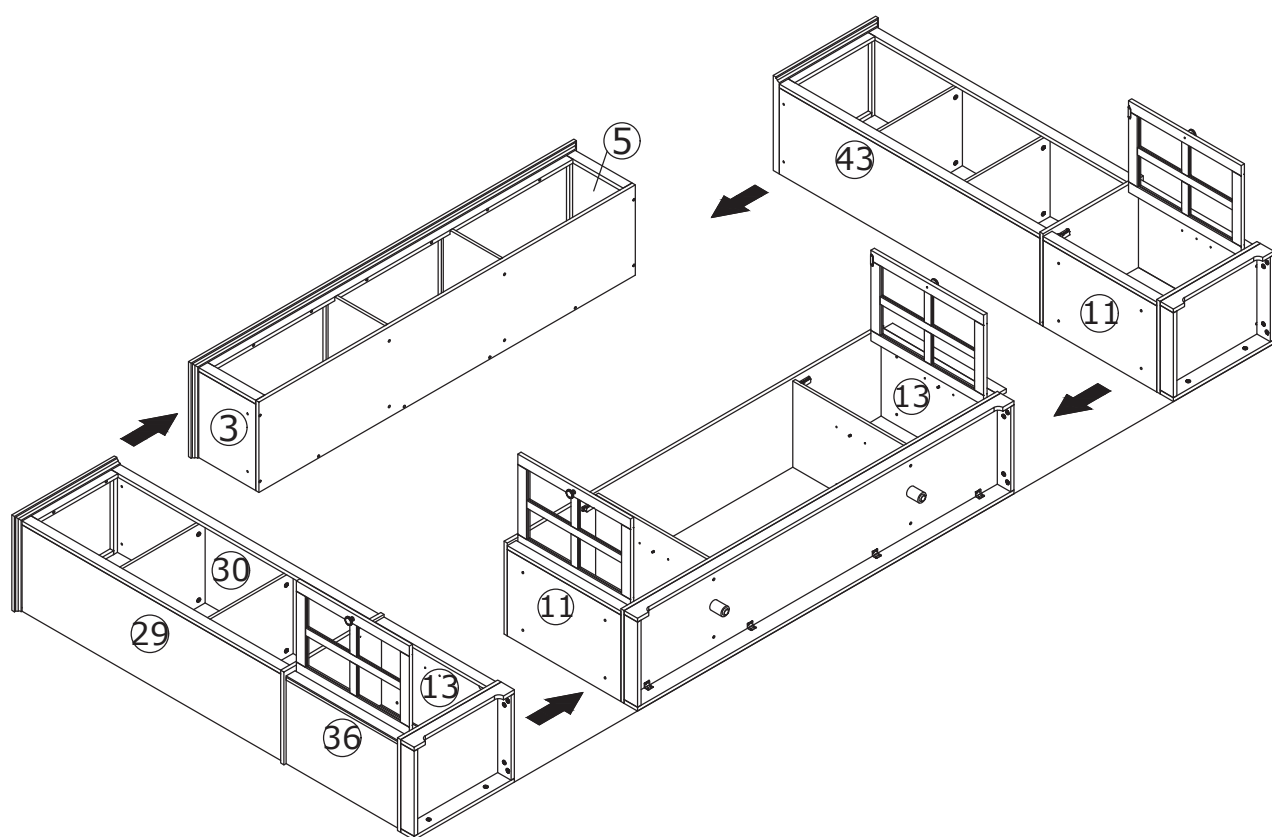 
Assemble four units together as shown.



38

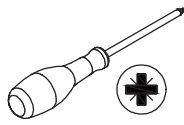
<p>Wx12</p>  <p>Ø6x18mm</p>	<p>Xx12</p>  <p>Ø6x18mm</p>	
--	--	---

 Fix them together using hardware pack(W,X) as shown.

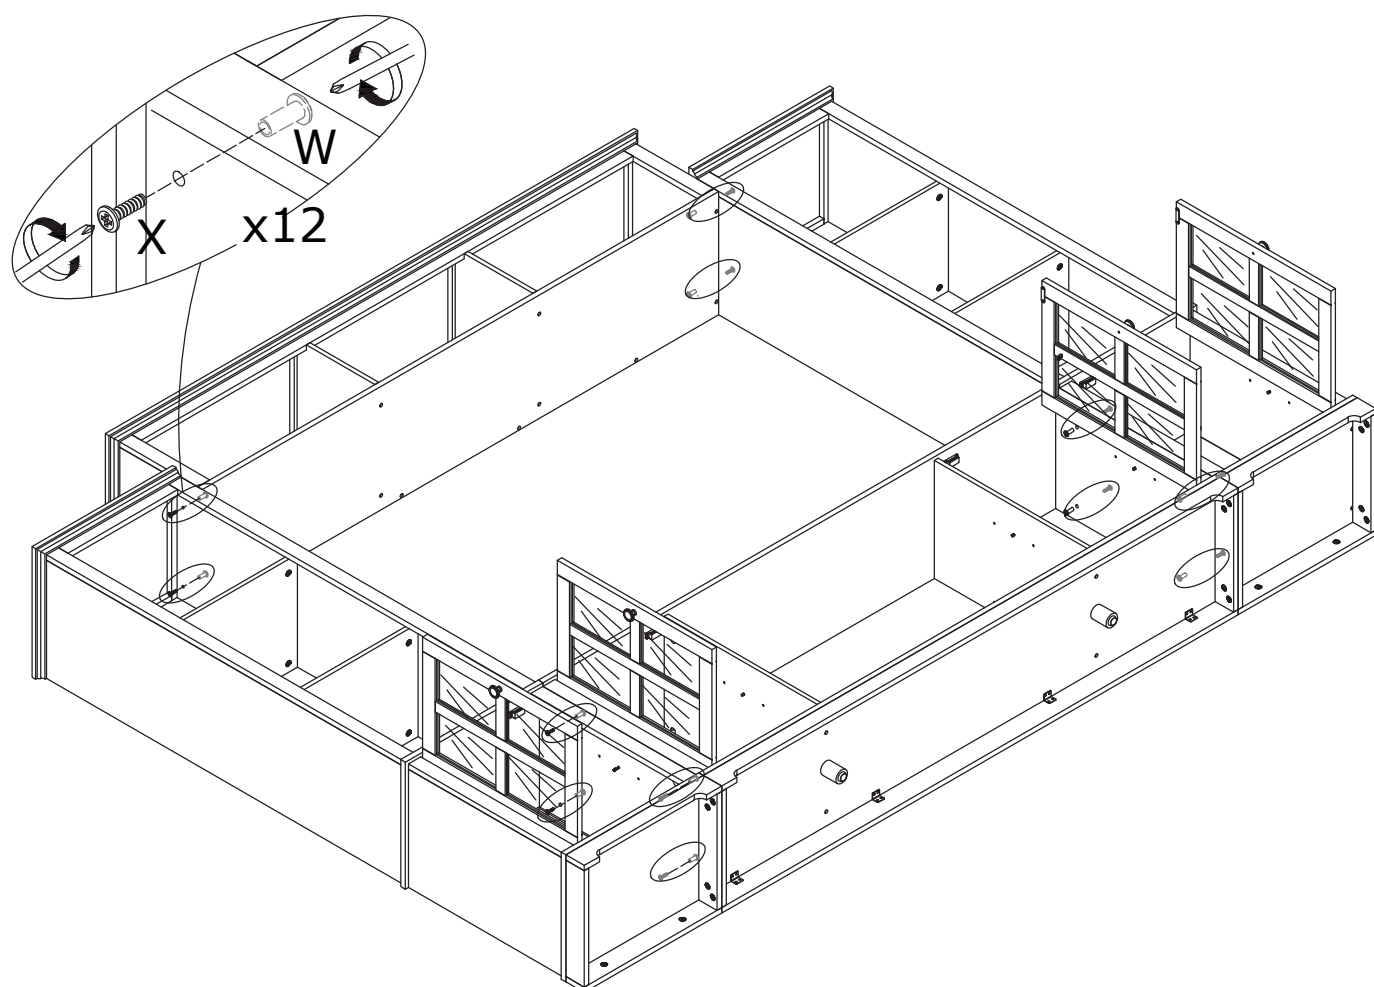

39

 
Place shelf 16 and 17, 48 in.

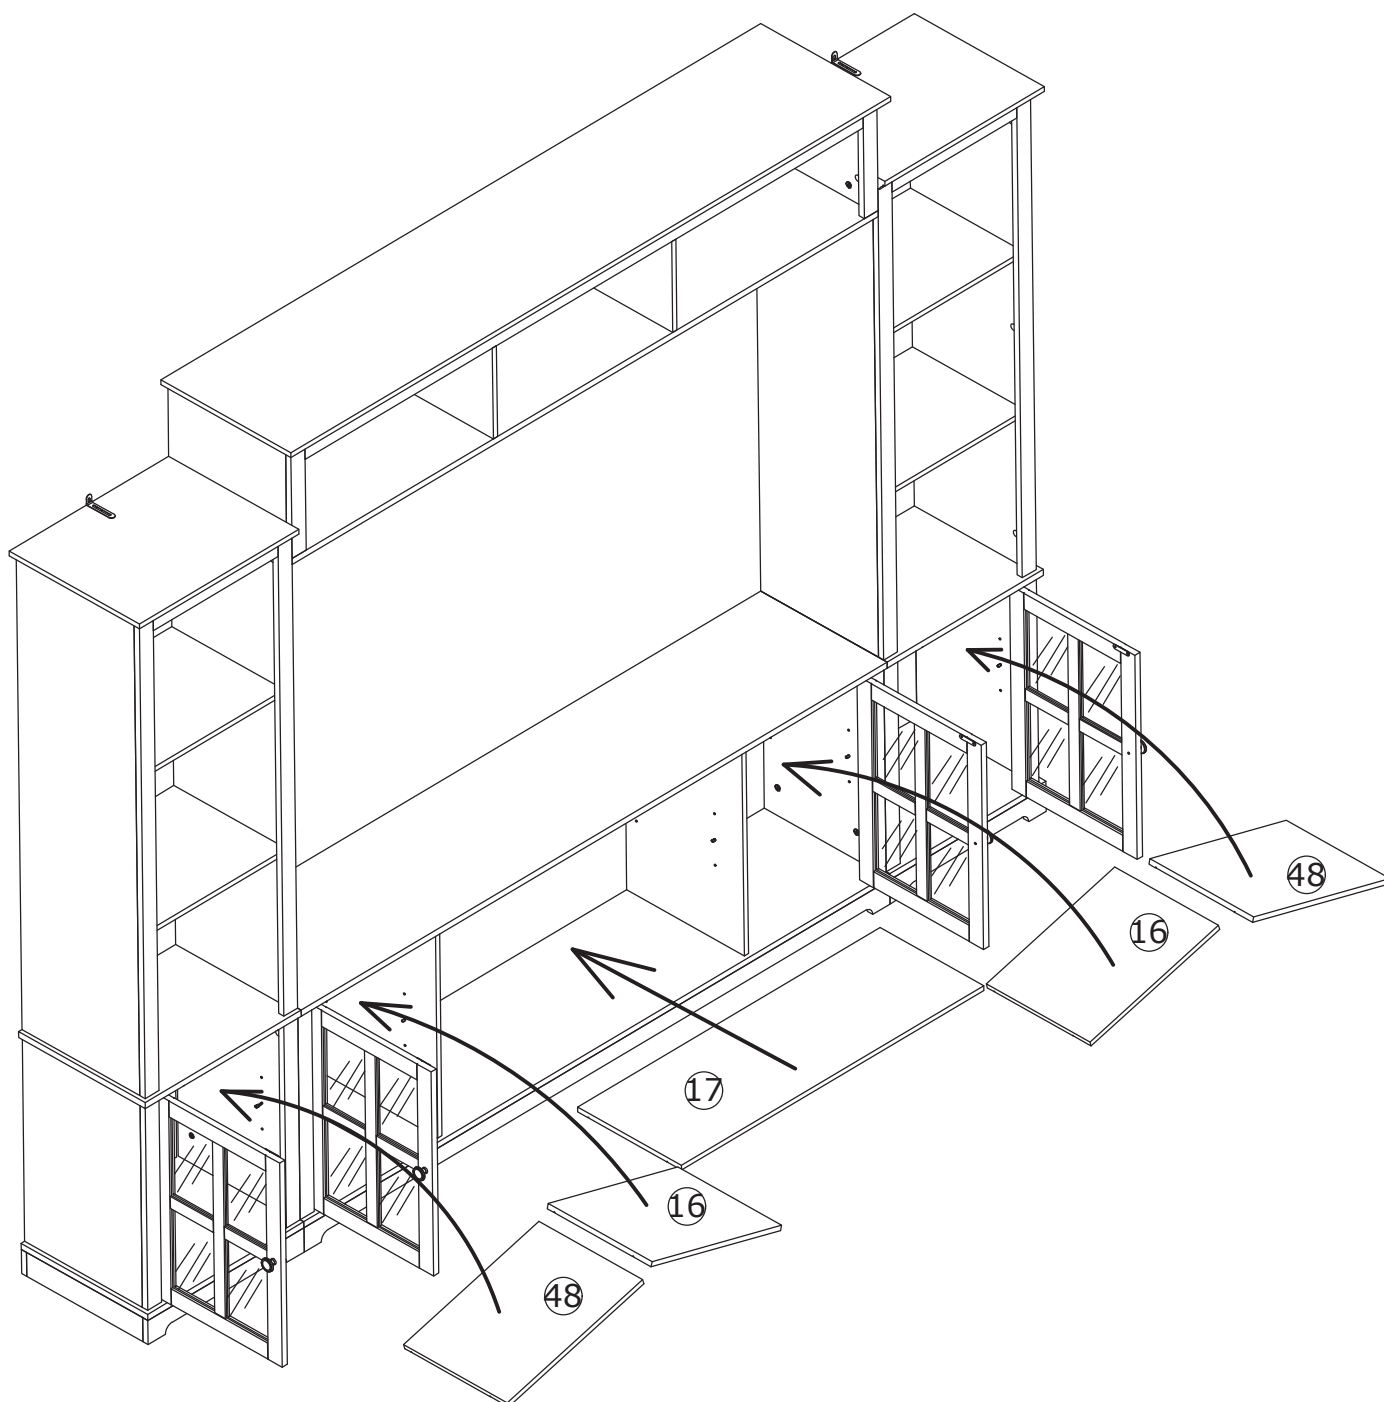


40



 
Please measure the distance between these holes and the distance from the hole center to the bottom.

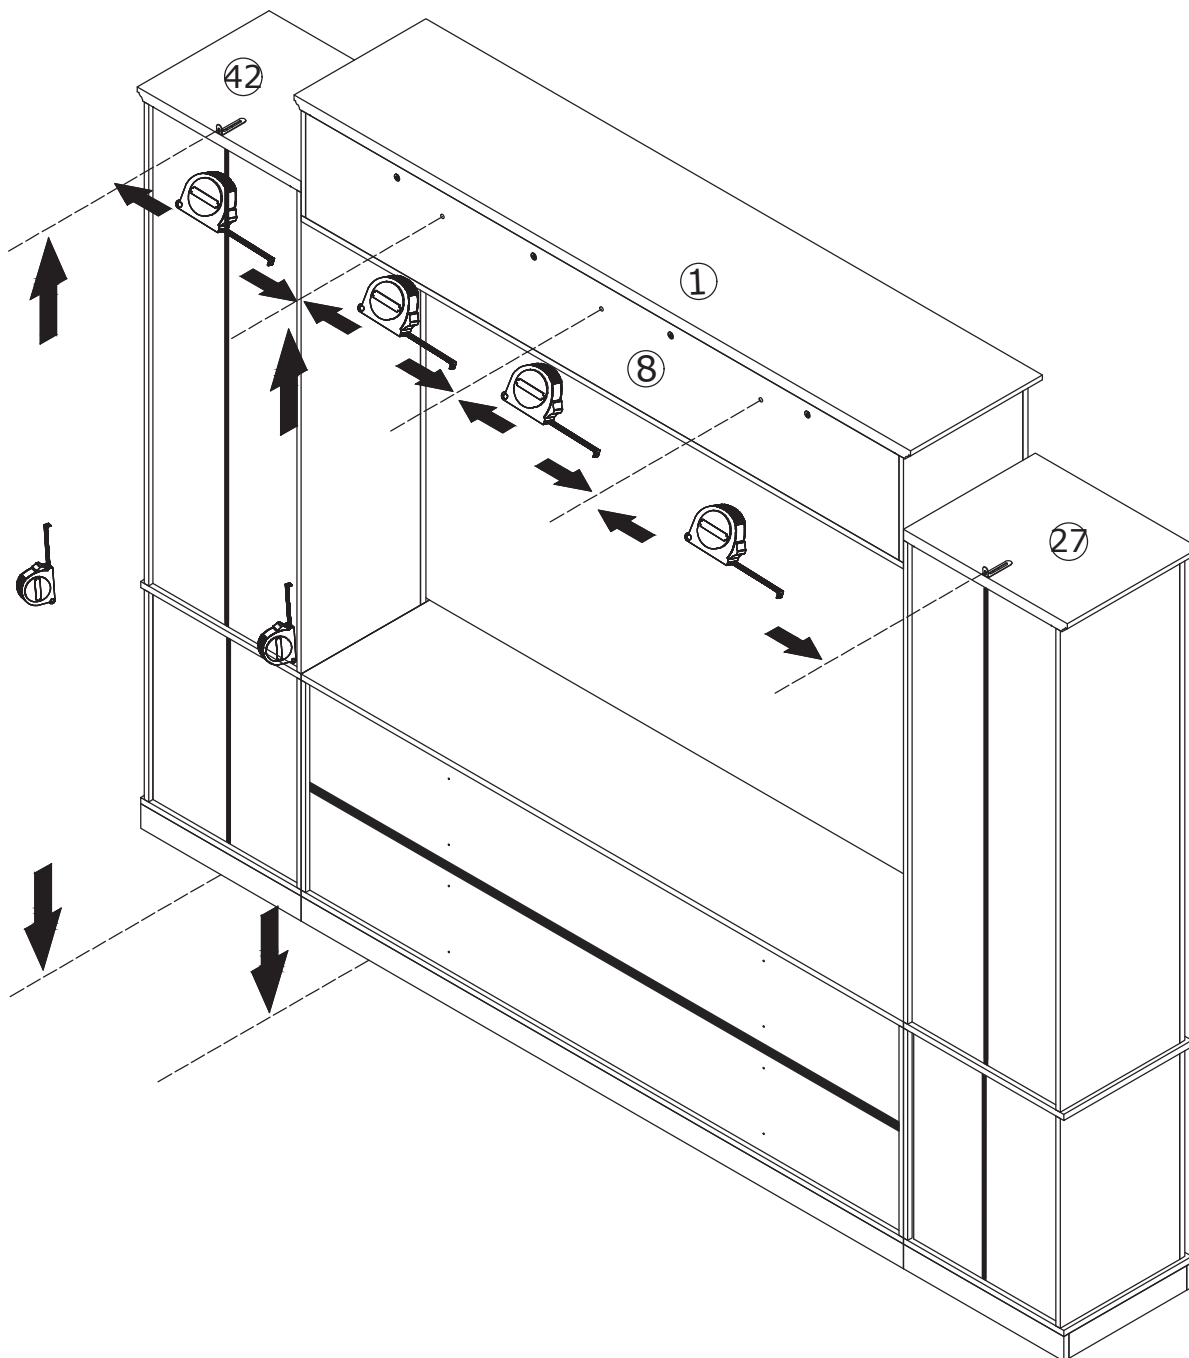

41

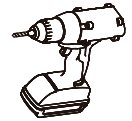 


Drill holes on wall.

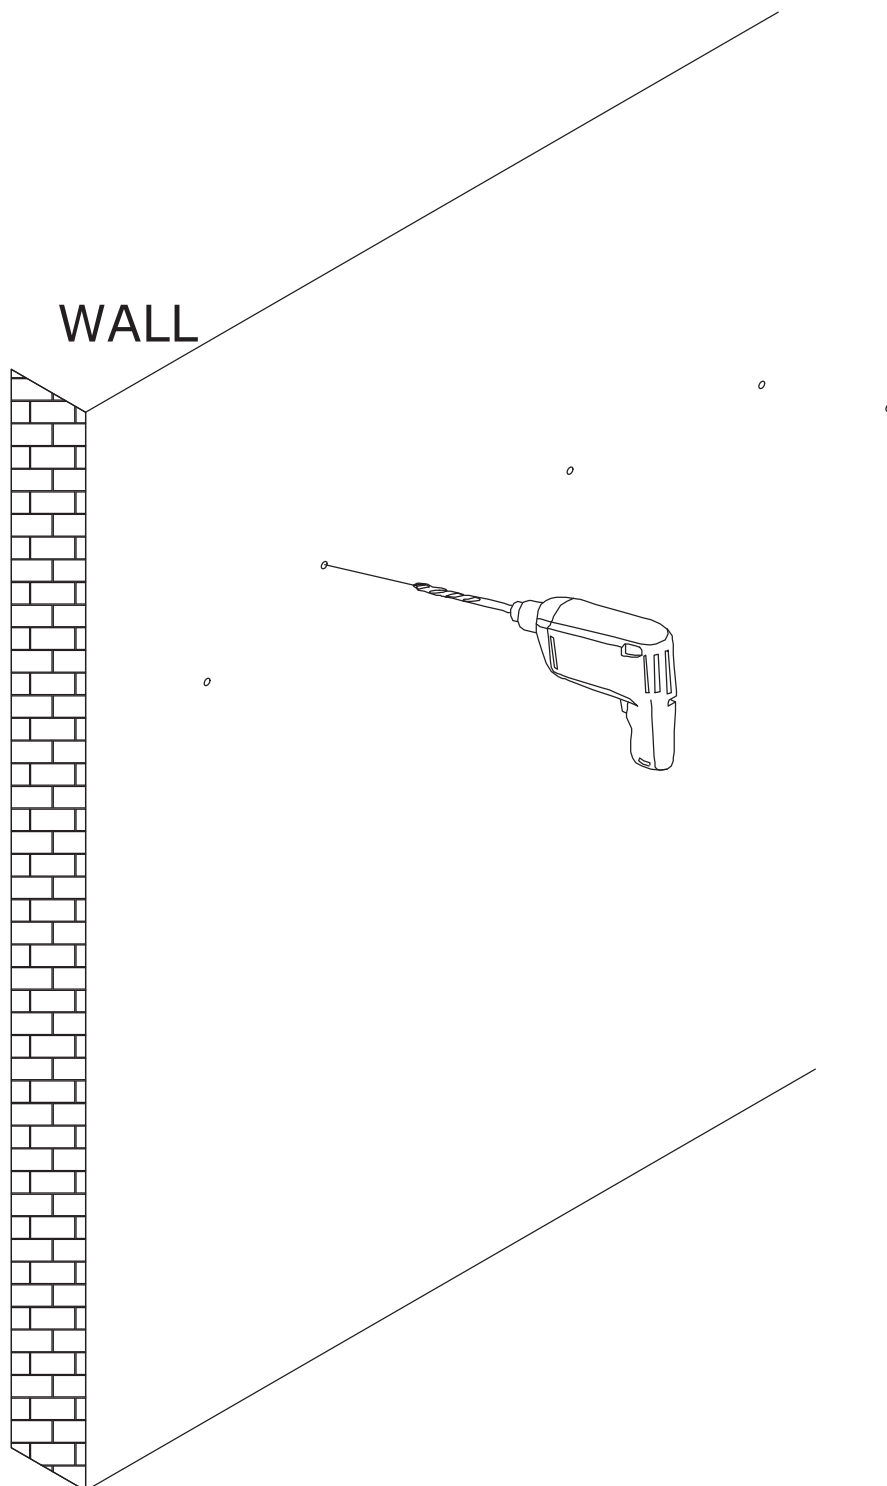 

42



 
Knock part(R) and (V) into holes.

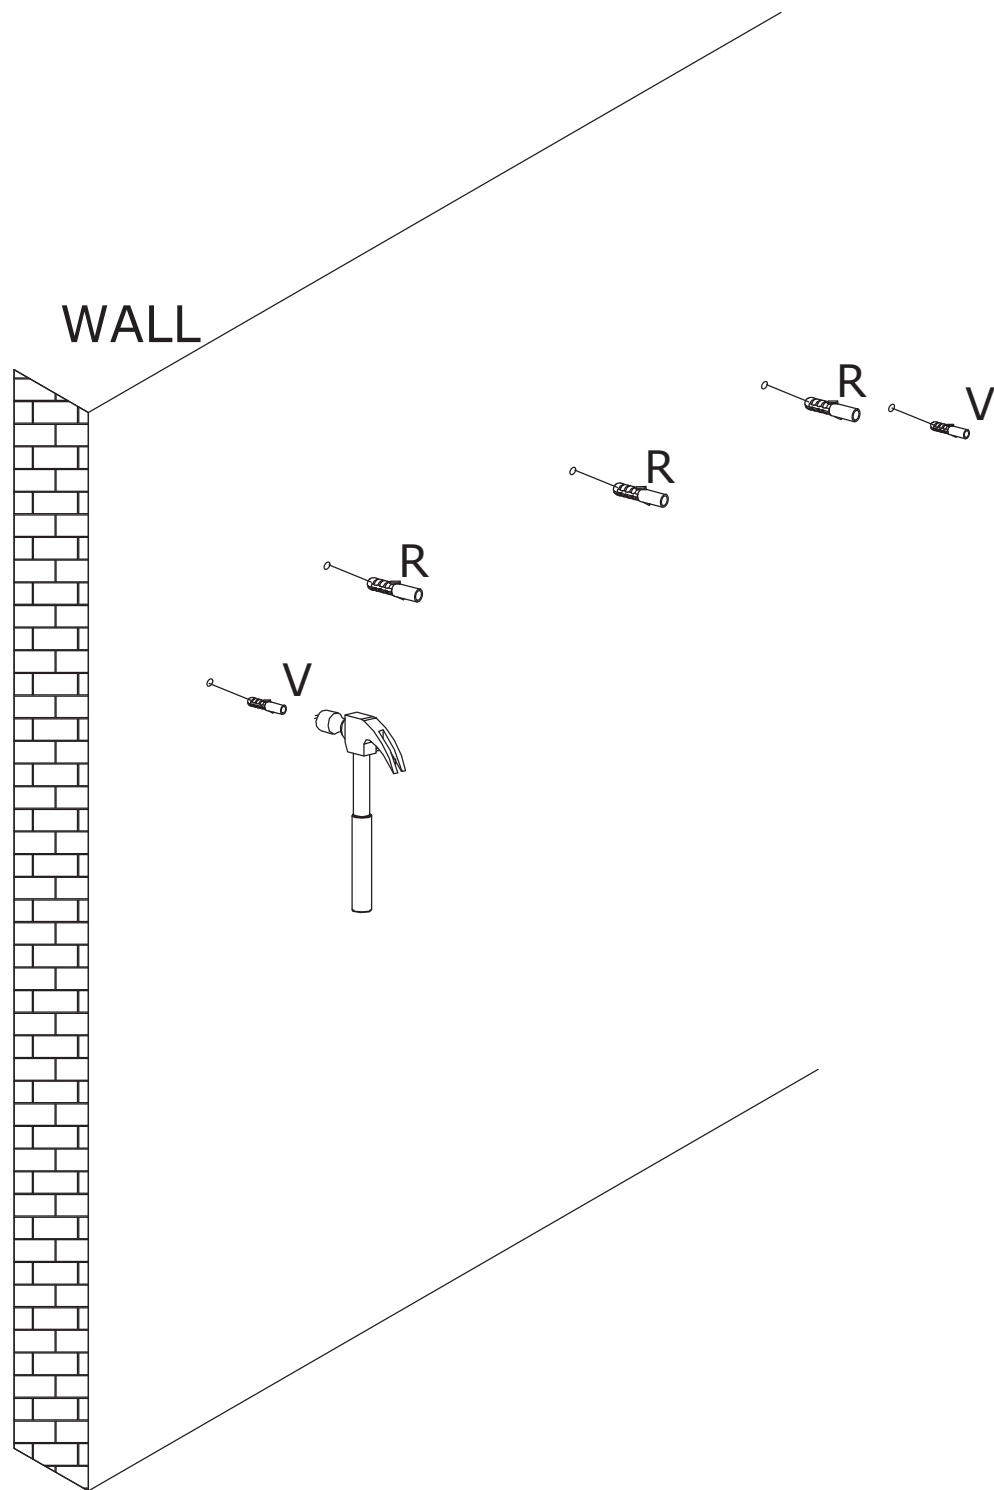

43



 Fix the cabinet to part(R,V) on wall through hardware pack(S,D) as shown.

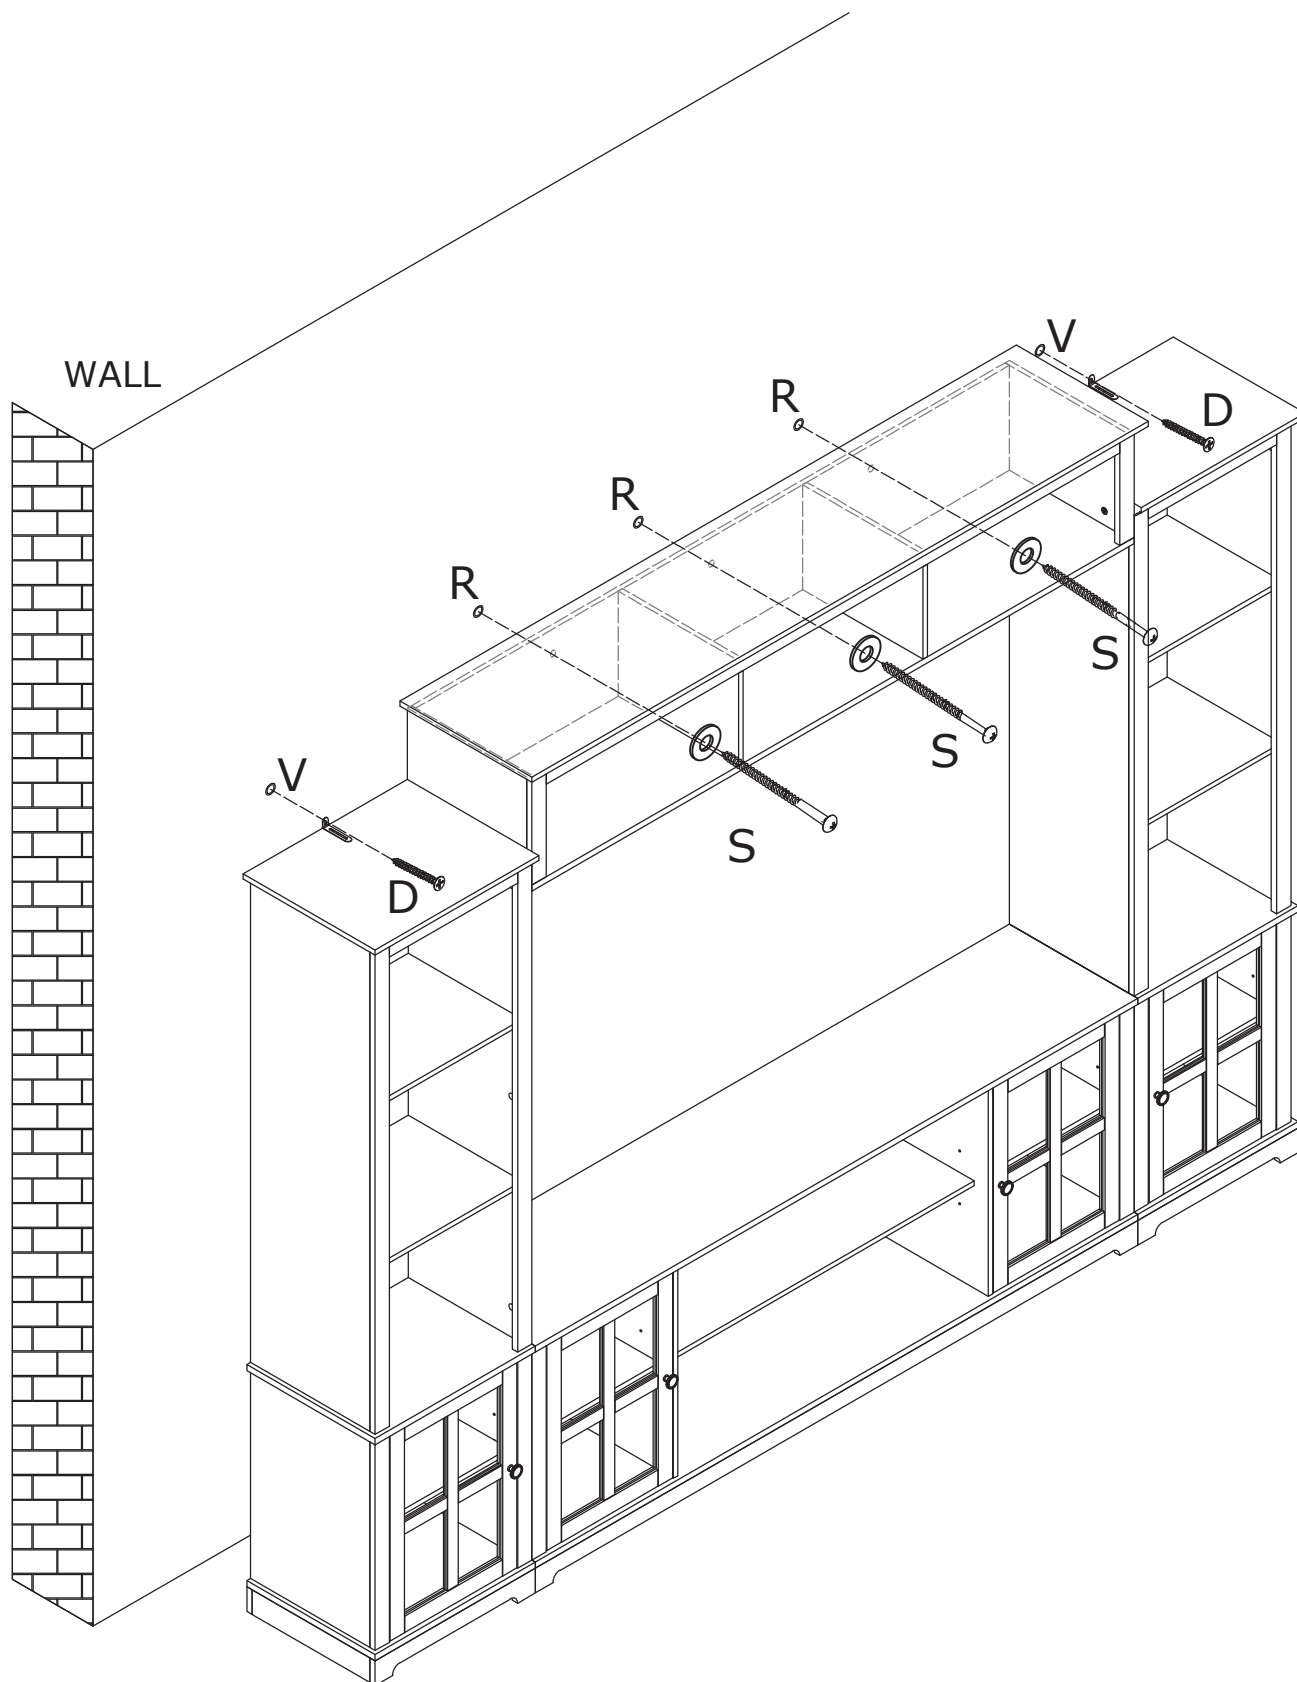

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOUR ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.

AFTER-SALES CONTACT





feedbackstation@163.com




(303)800-6387

Display Cabinet

  
 
KF020341-02

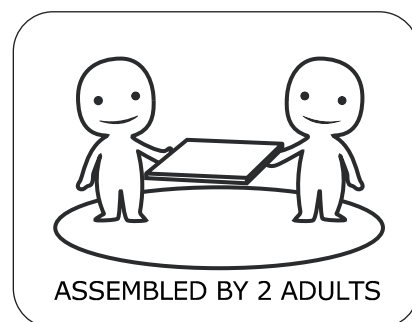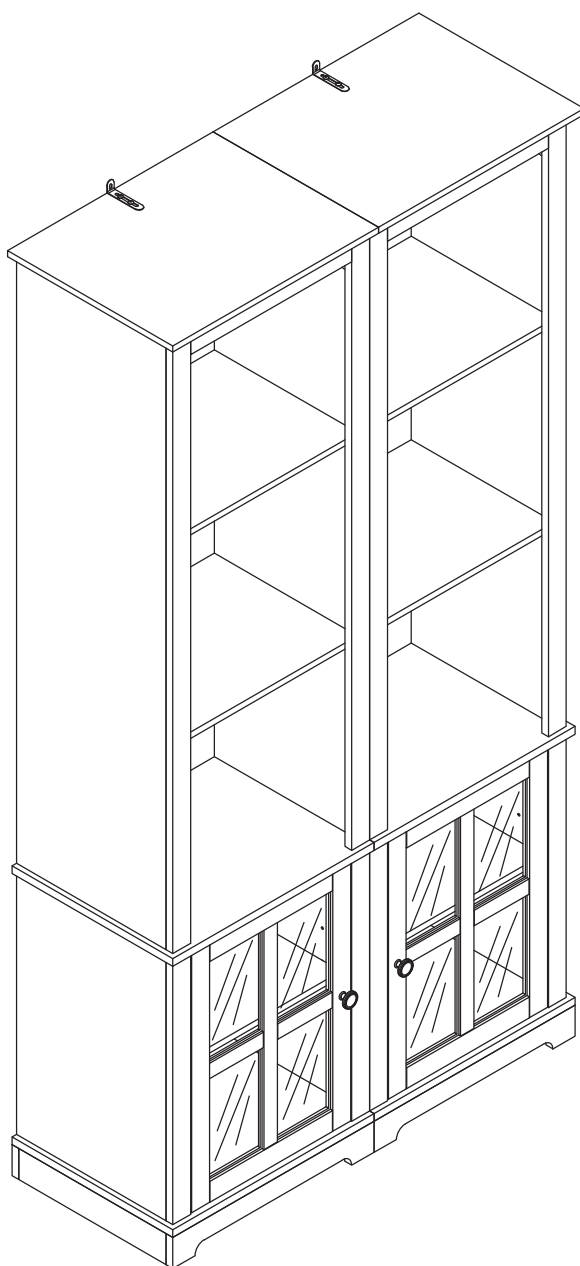

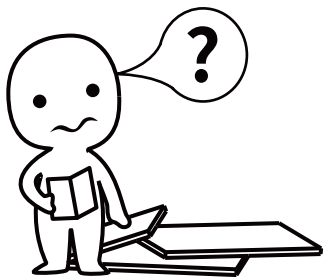


IMPORTANT INFORMATION!

  please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

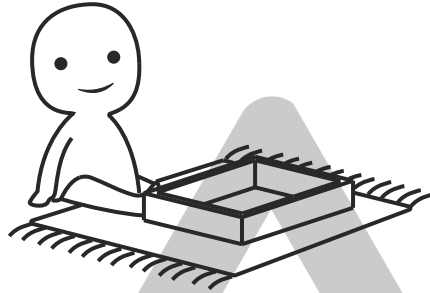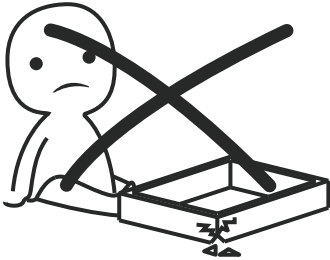



AVOID SCRATCHES!

 In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.

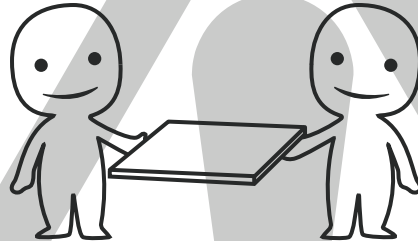

IMPROVE EFFICIENCY !

  Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

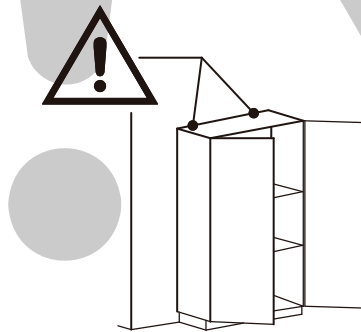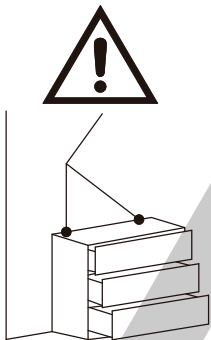

ANTI-TOPPLE WARNING !

 
Overtured furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !


It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

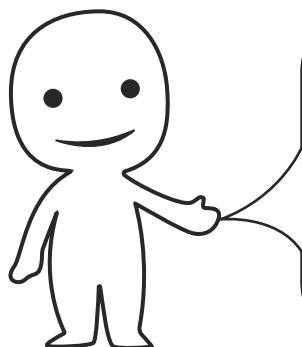


Please prepare the following tools

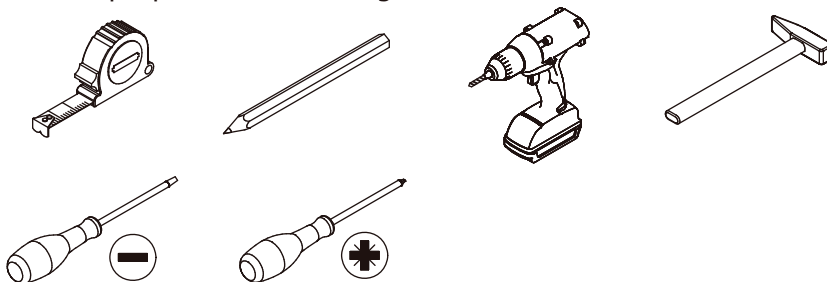 


When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

 Ax76(+3)



Ø6x35mm

 Bx76(+3)




Ø15x10mm

Cx74(+3)



Ø6x30mm

 Dx18(+2)



Ø4x35mm


Ex4



Fx2



 Gx2

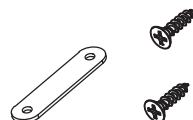

Hx36(+2)

 


Ø20mm

Jx8(+1)




Kx44(+3)

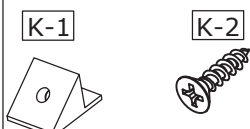


Ø3x16mm

 Lx2

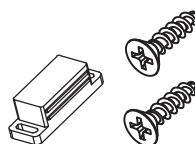


Mx4

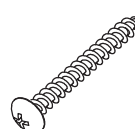 


Ø4x35mm

 Ux2

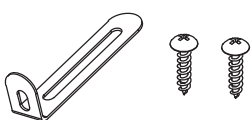

Ø4x12mm

 Vx2

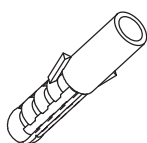

Ø6x30mm

Wx12



Ø6x18mm

Xx12




Ø6x18mm

Yx8




Ø2.5x10mm

 Left high cabinet

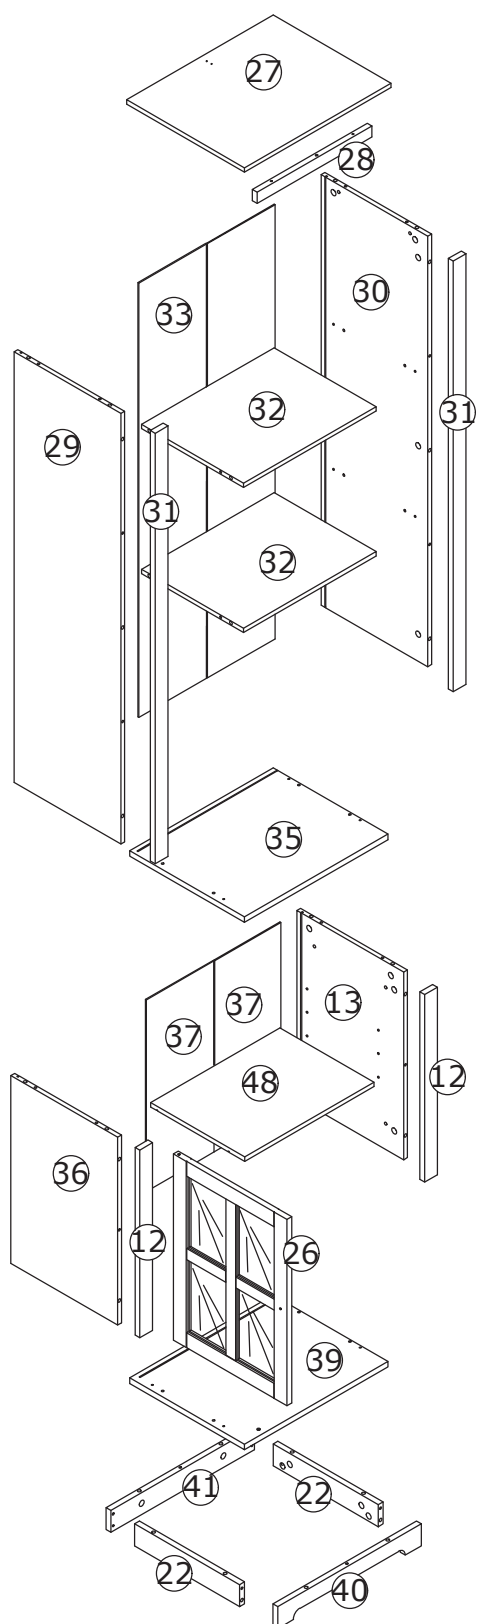

Right high cabinet

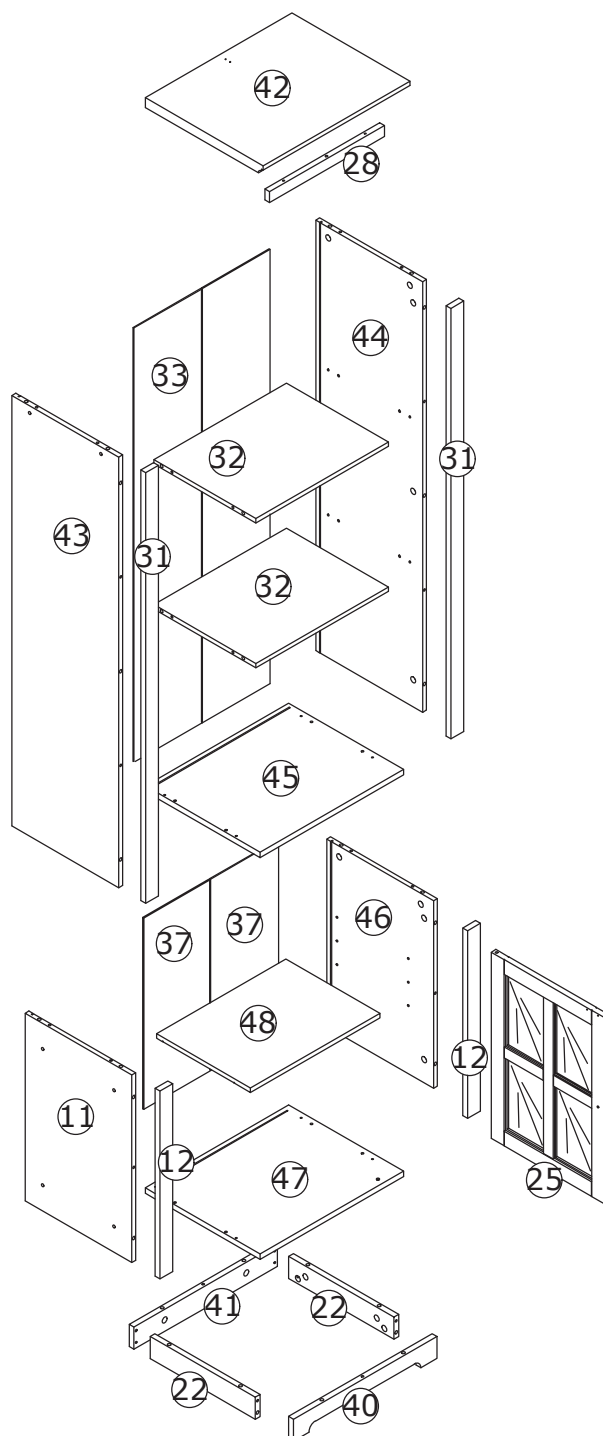 


⚠ WARNING

Children have died from furniture tipover. To reduce the risk of furniture tipover:



- ALWAYS install tipover restraint provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

*This is a permanent label.
Do not remove!*

 1

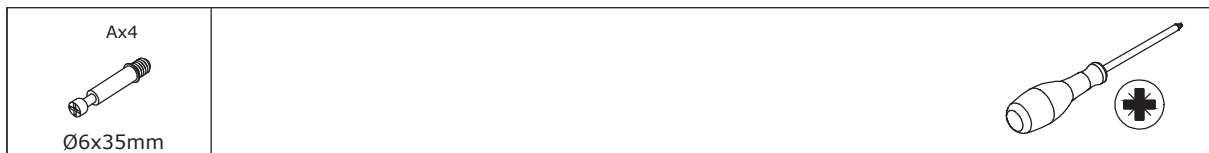

Left high cabinet

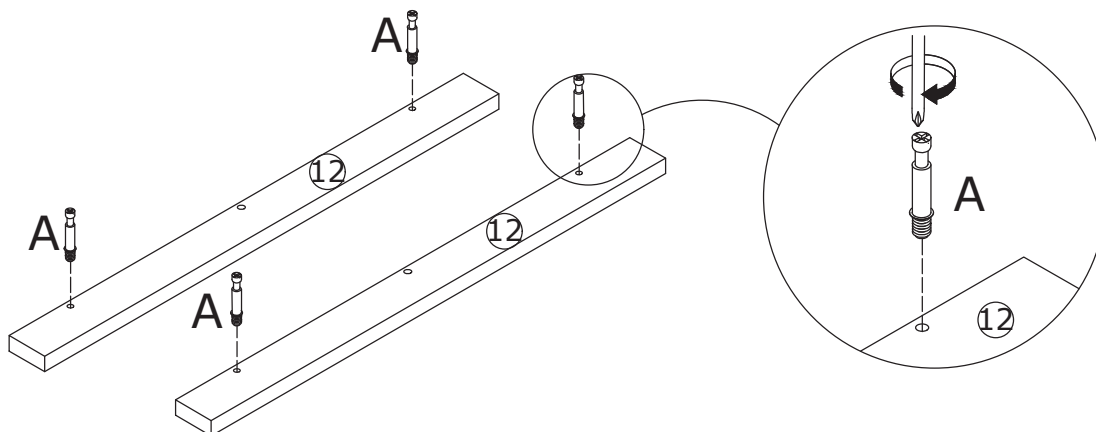 
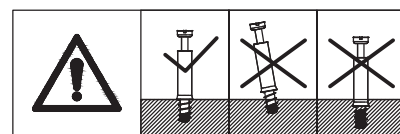 


Insert quickfit screw(A) into corresponding holes in two plate 12 with screwdriver as shown.

2



  Insert wooden dowel(C) into plate 36 and 13 as shown.

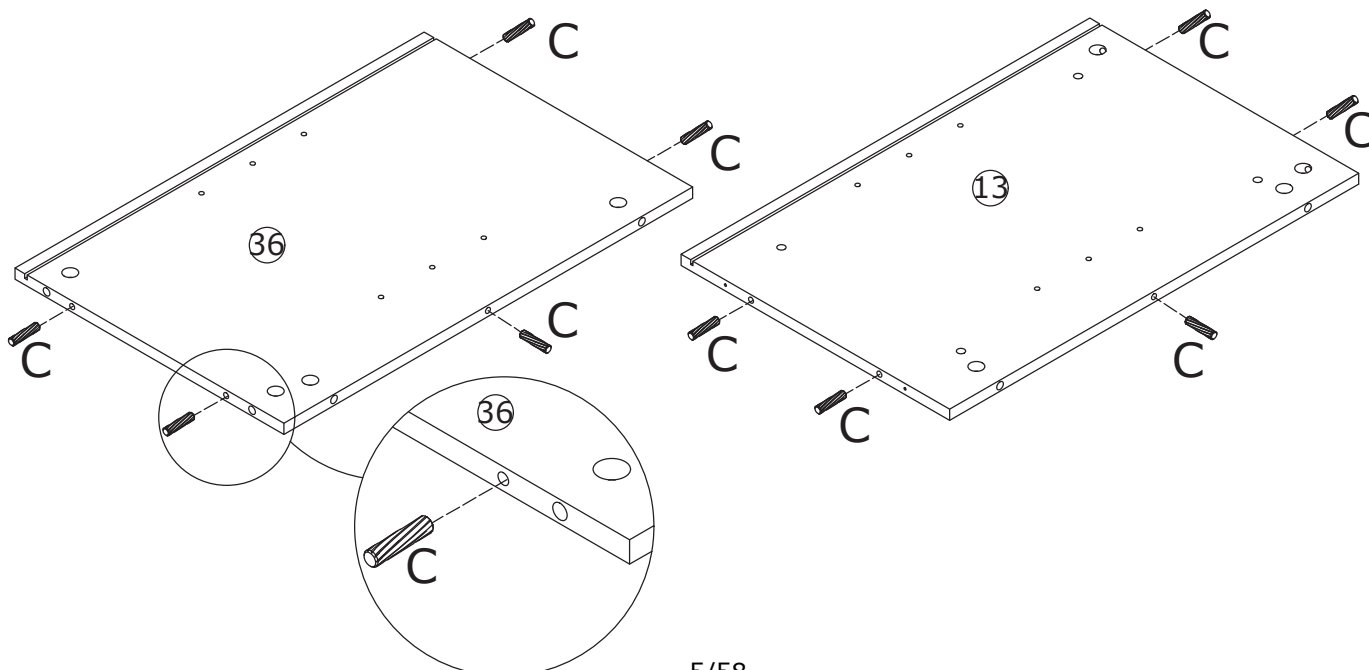
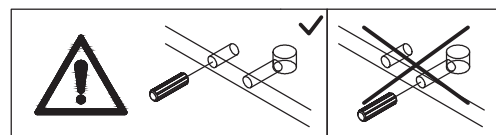


3




Attach plate 12 to plate 13, put cam lock(B) into holes in plate 13 and turn clockwise to tighten as shown.

  Flip the part, stick part(H) to plate 13 as shown.

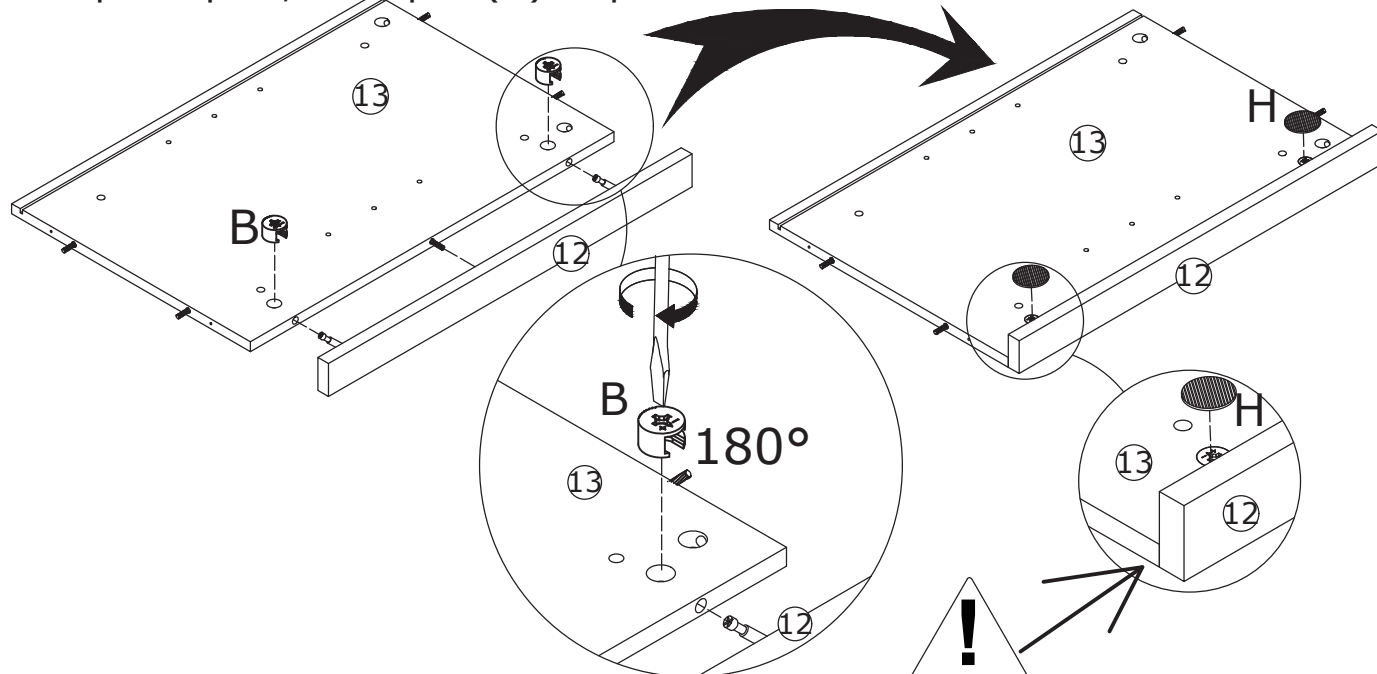
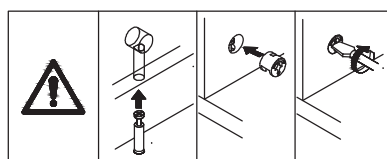


4

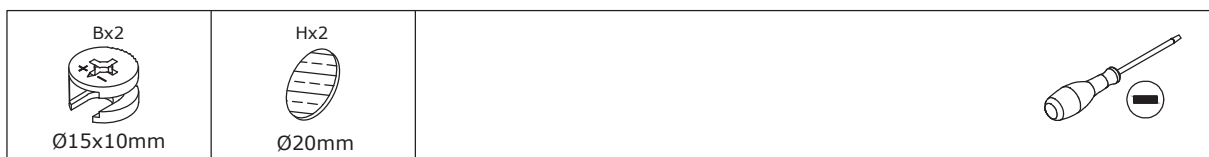 

Attach another plate 12 to plate 36, put cam lock(B) into holes in plate 36 and turn clockwise to tighten as shown.


 
 
Flip the part, stick part(H) to plate 36 as shown.

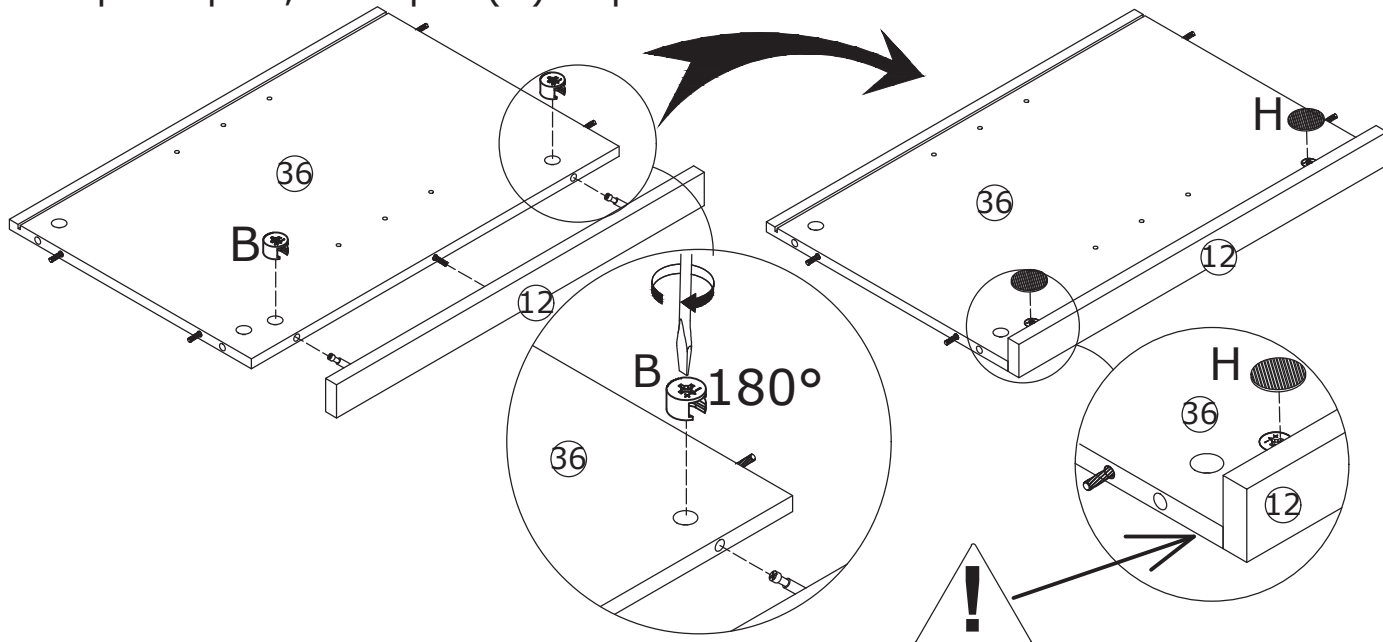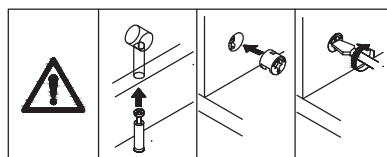

5



   
Insert quickfit screw(A)
into corresponding holes
in plate 39 as shown.

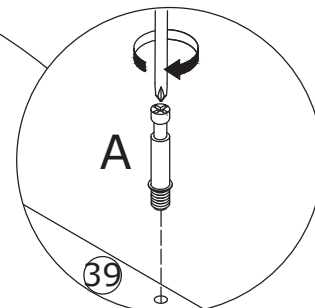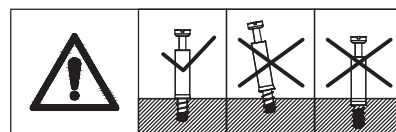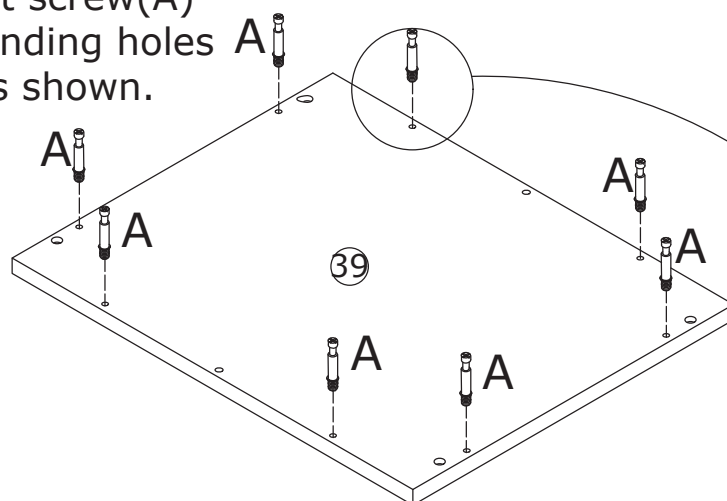


6




 
Attach the two components to plate 39, then fix using
screw(D) as shown.

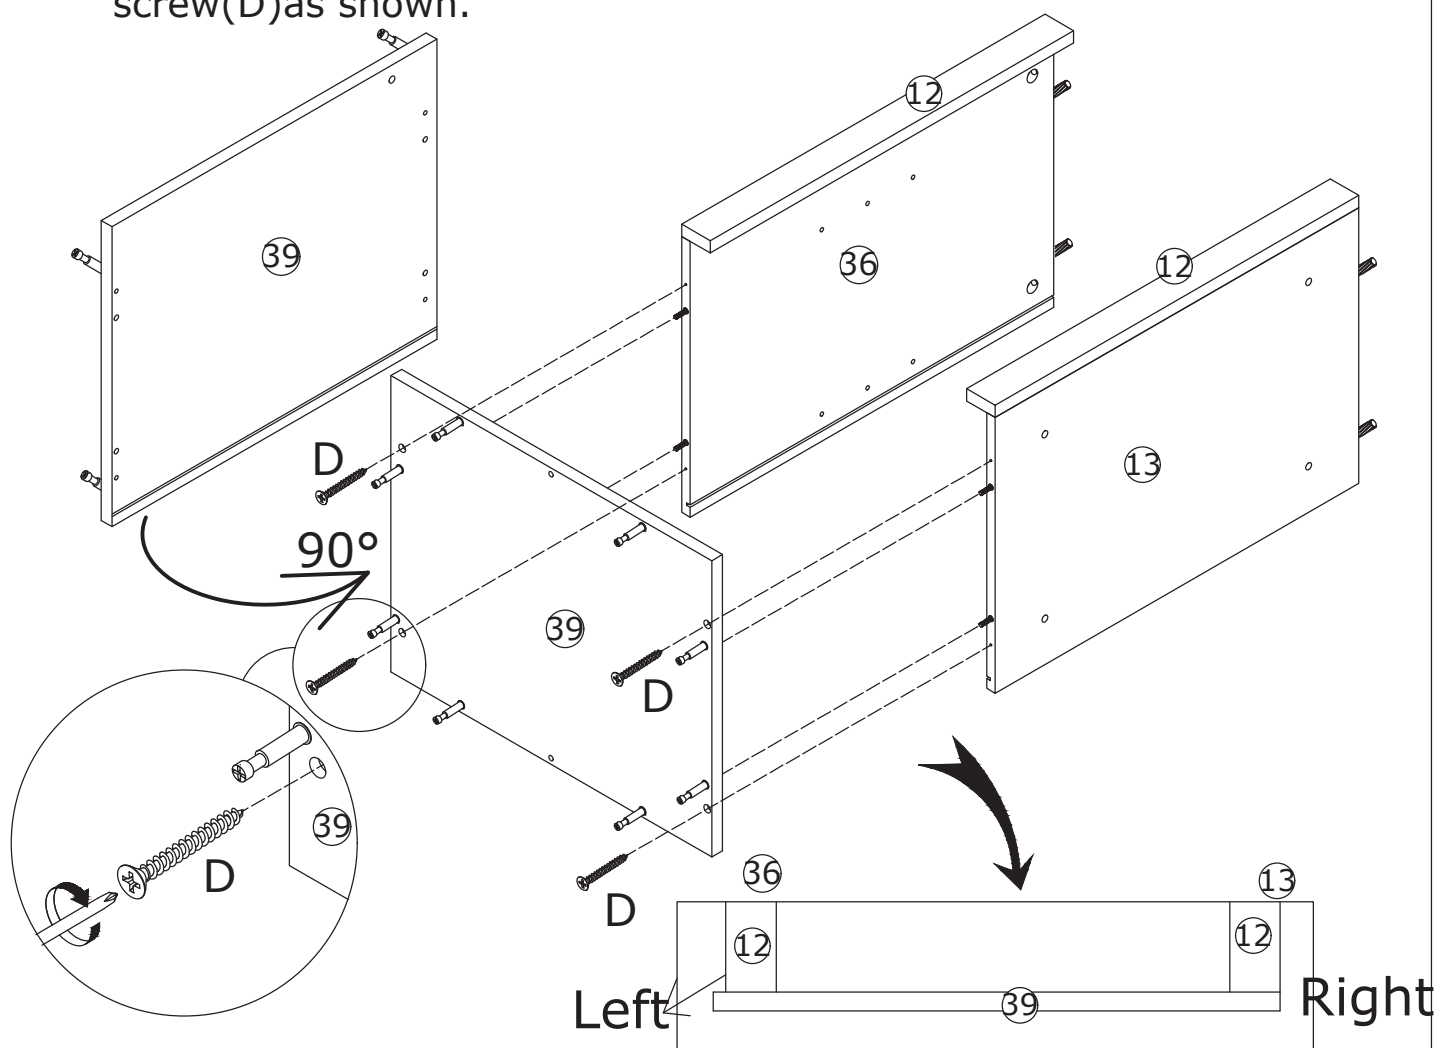

7

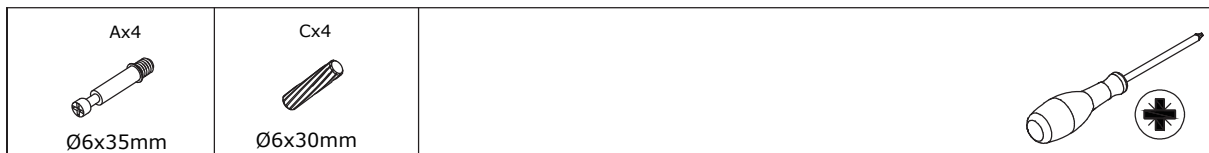 

 
 
Insert quickfit screw(A) into corresponding holes in plate 40 and 41 as shown.
Insert wooden dowel(C) into two plate 22 as shown.

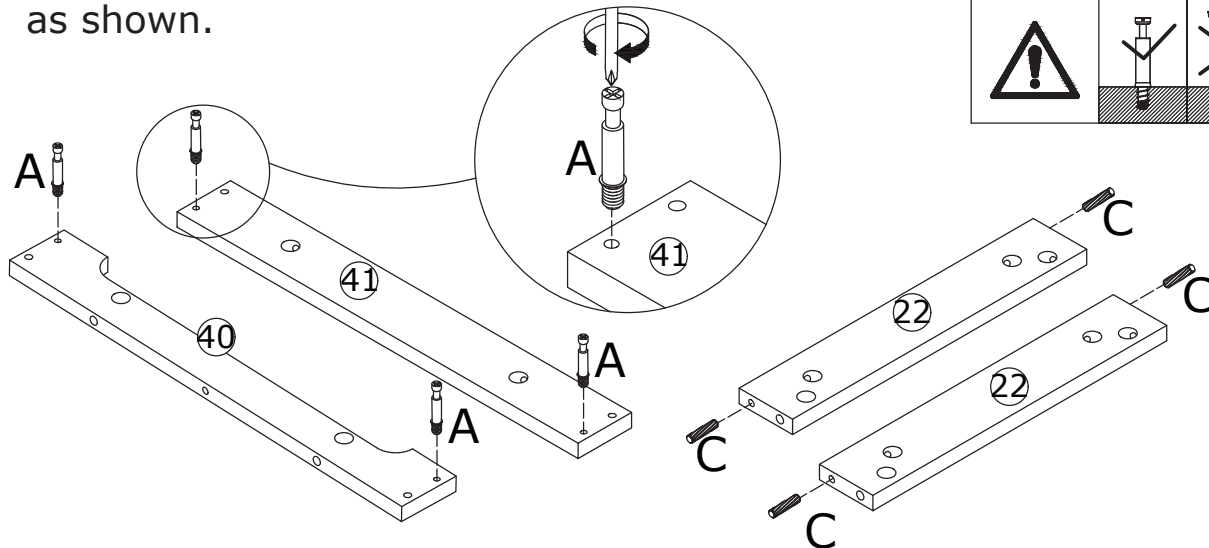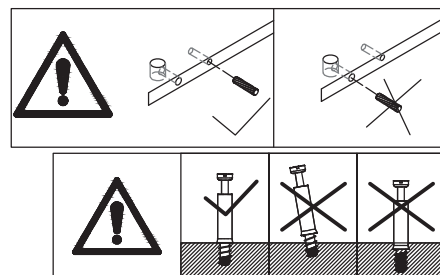



8



 
 
Connect plate 40 and 41 with plate 22, put cam lock(B) into holes in plate 22 and turn clockwise to tighten as shown.
Insert wooden dowel(C) into plate 40 and 41 as shown.

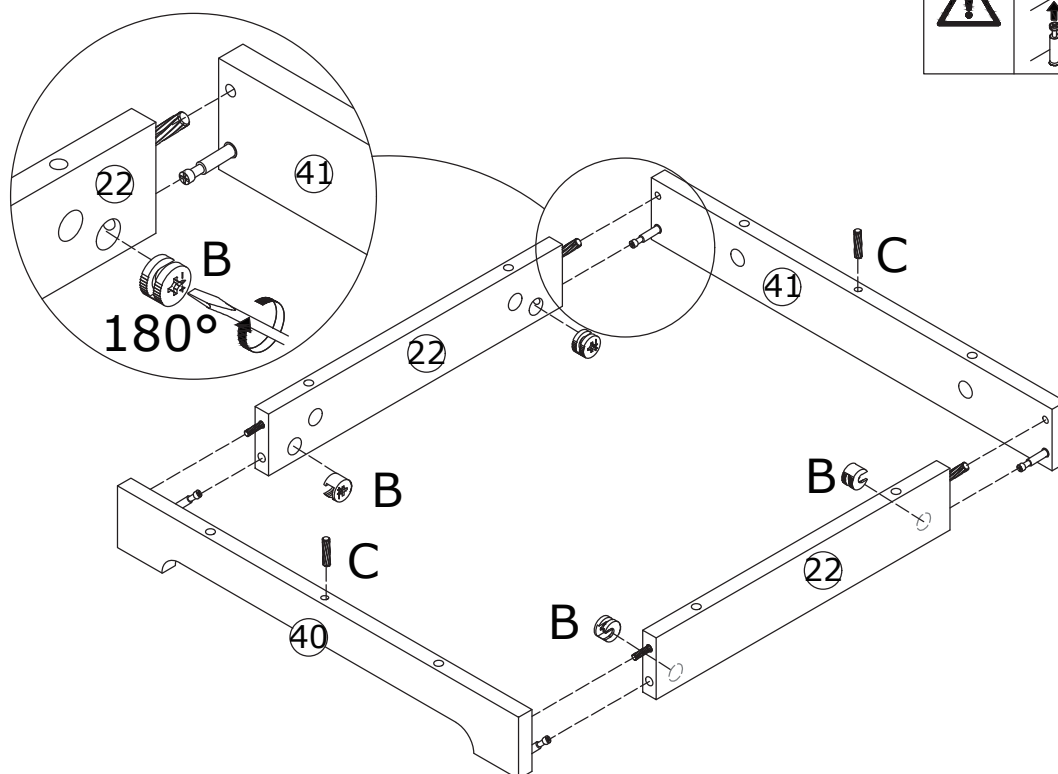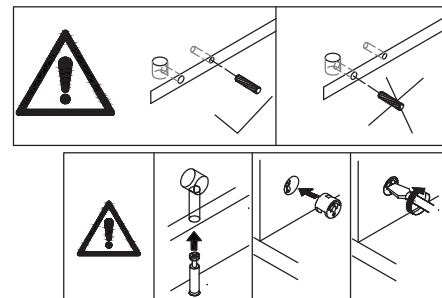

9

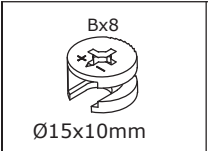  


  Attach the component to plate 39, put cam lock(B) into holes in plate 40,41,22 and turn clockwise to tighten as shown.

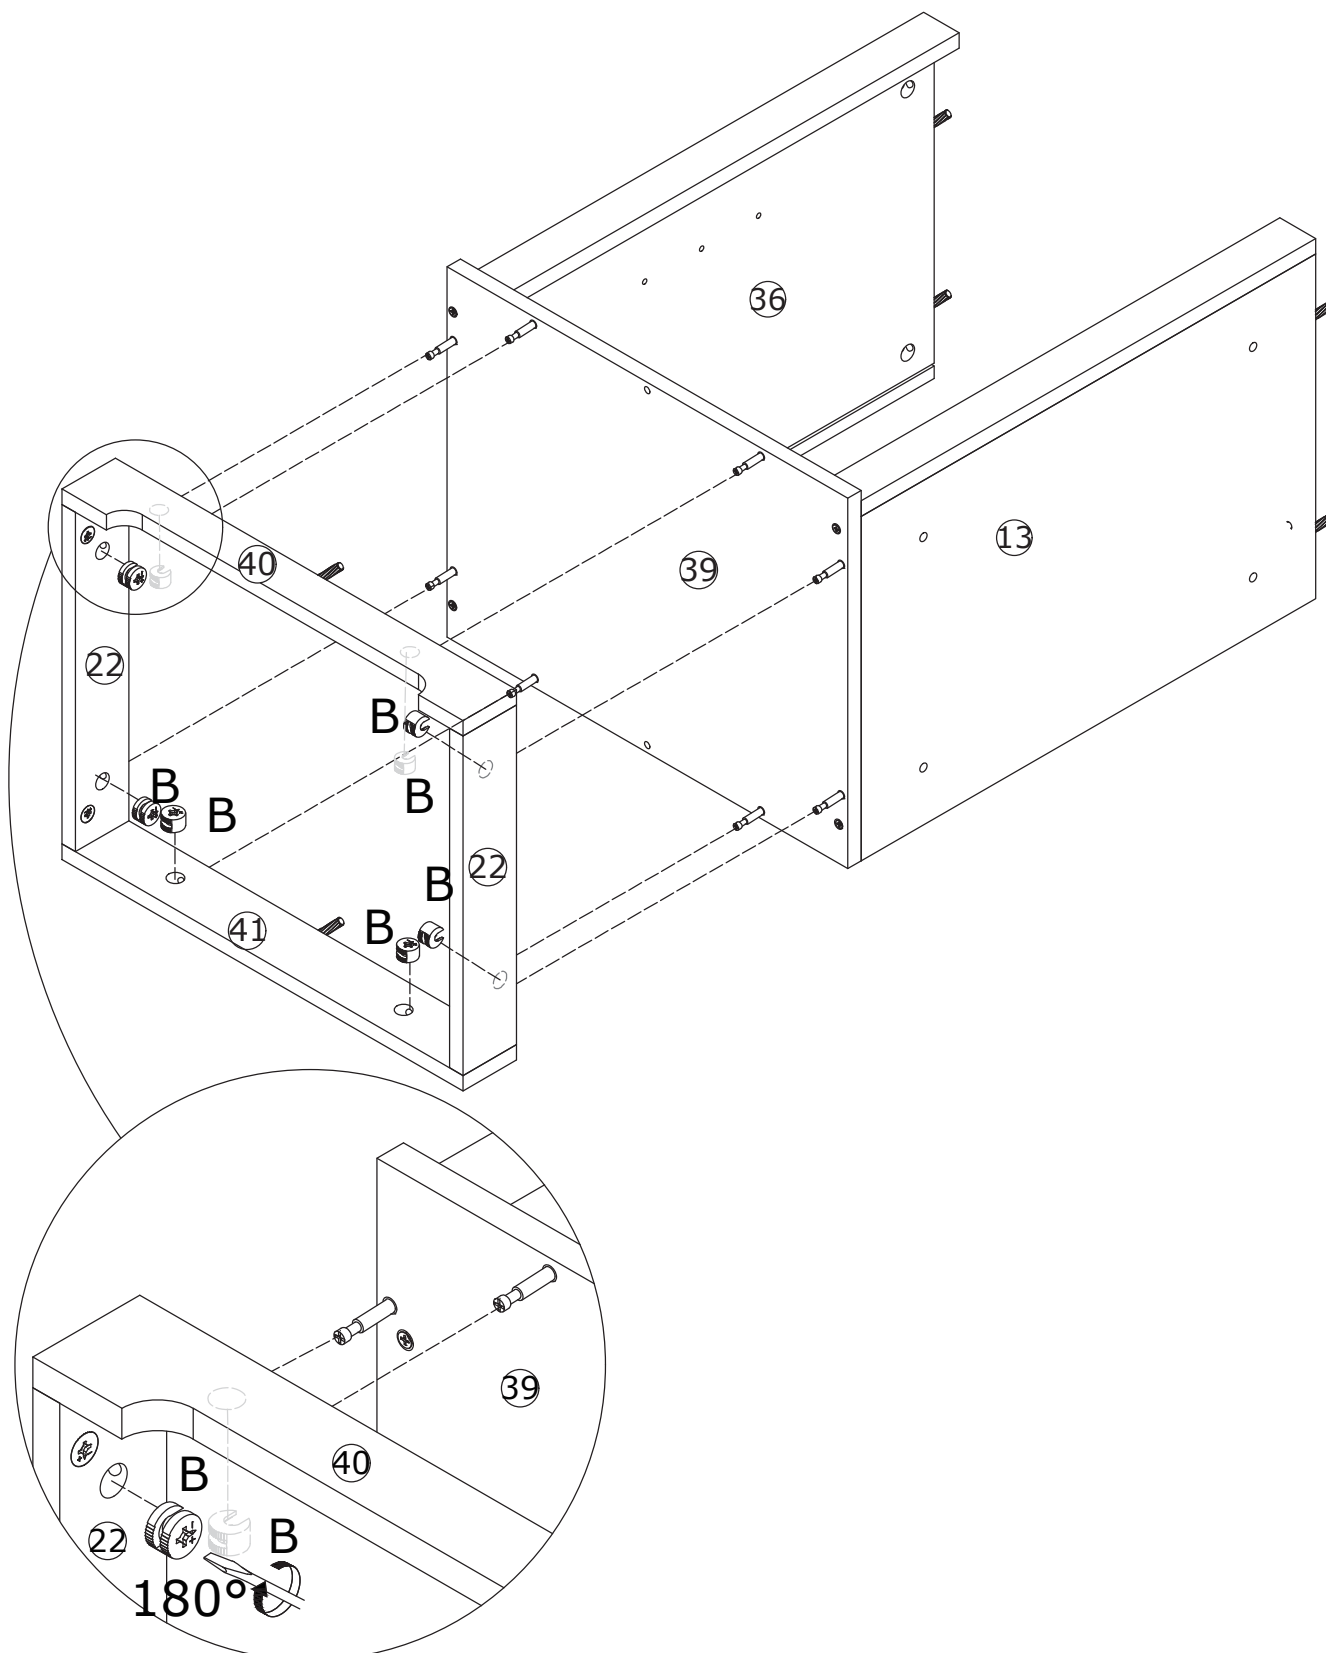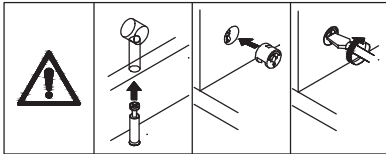

10

 Slide back plate 37 along grooves as shown

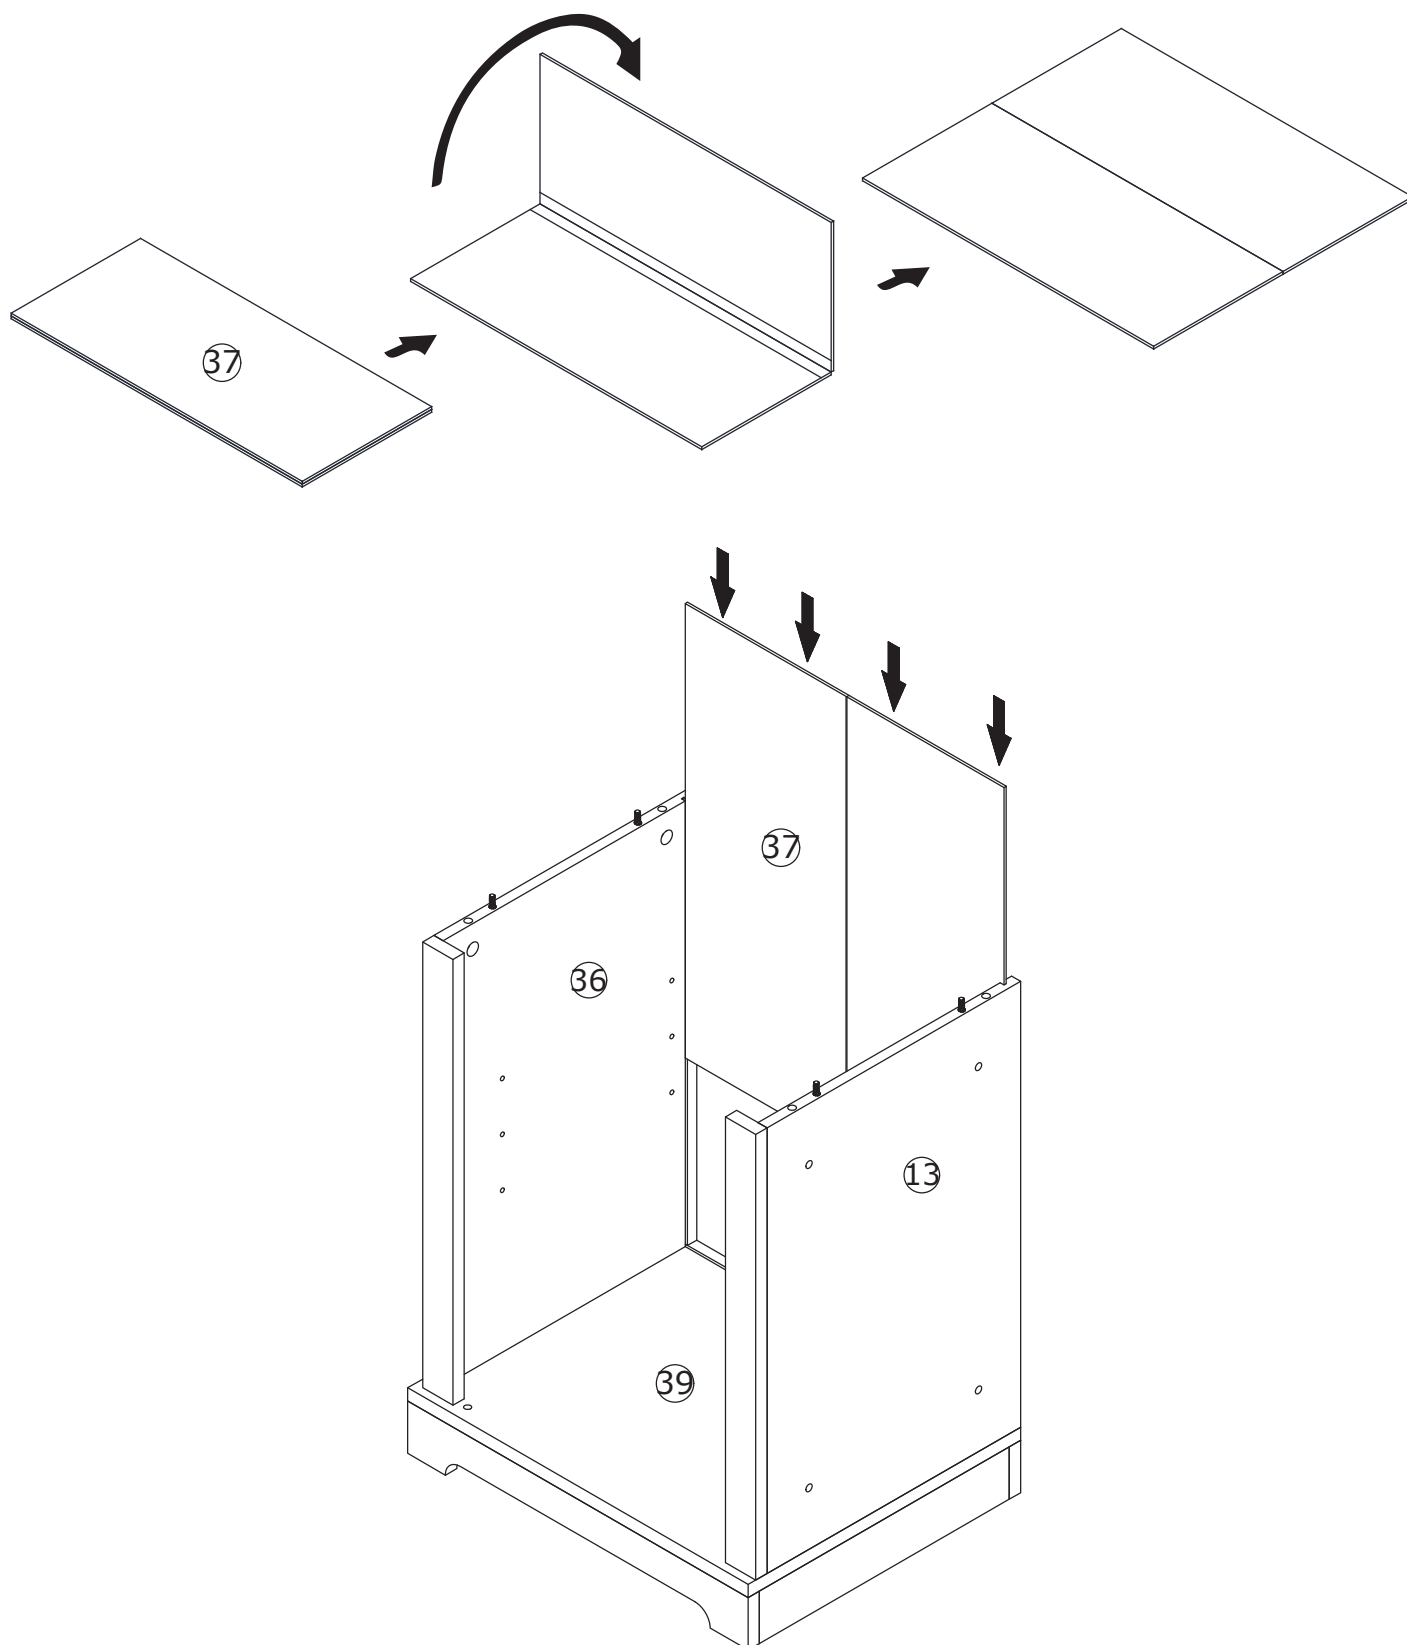

11

Ax14







Ø6x35mm


Cx4



    
Ø6x30mm

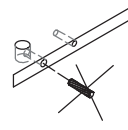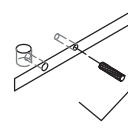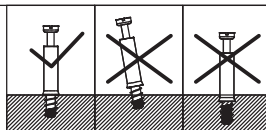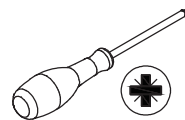

 Insert quickfit screw(A) into corresponding holes in plate 29,30 and two plate 31 as shown.
Insert wooden dowel(C) into plate 29 and 30 as shown.


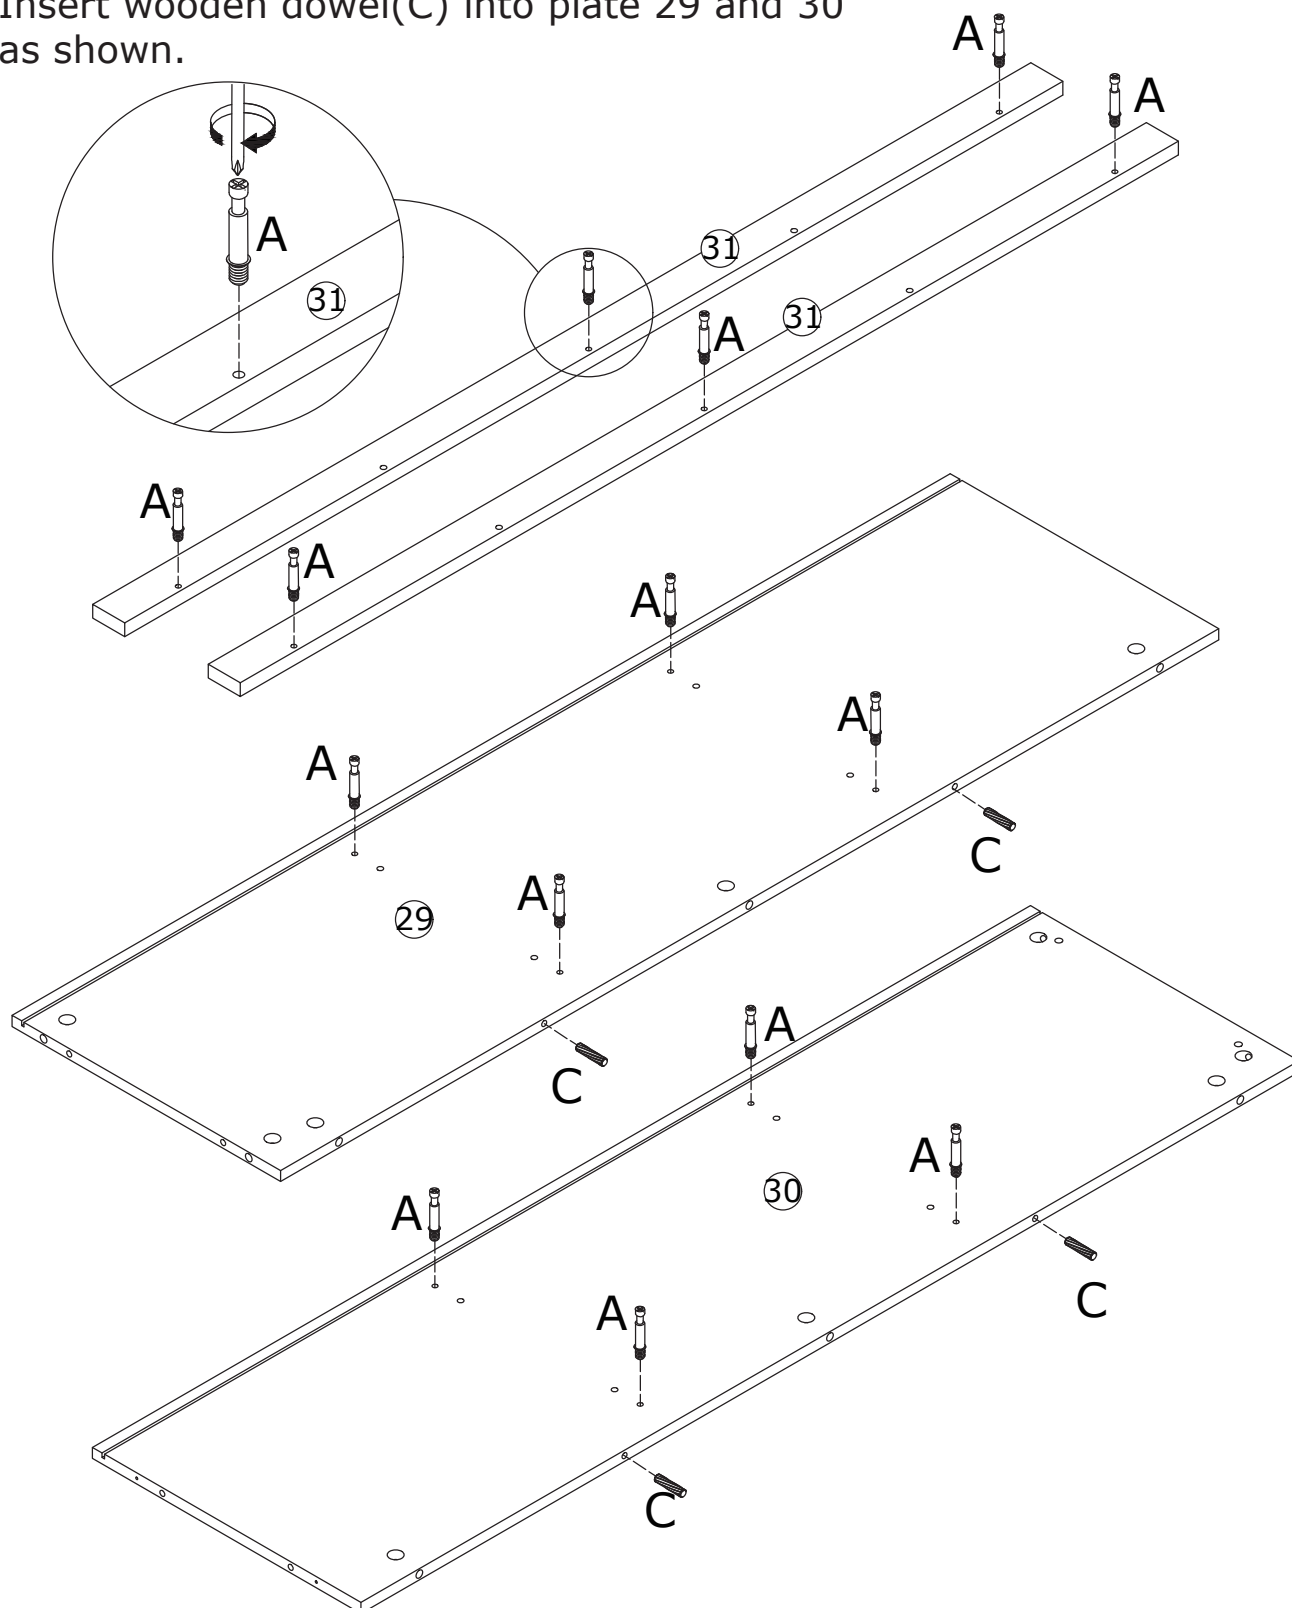


12

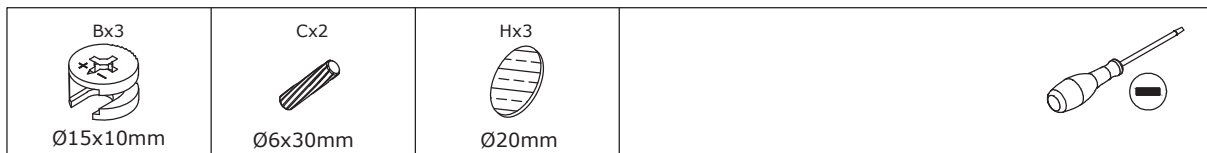 


Attach plate 31 to plate 29, put cam lock(B) into holes in plate 29 and turn clockwise to tighten as shown.


 
 
Flip the part, stick part(H) to plate 29 as shown.

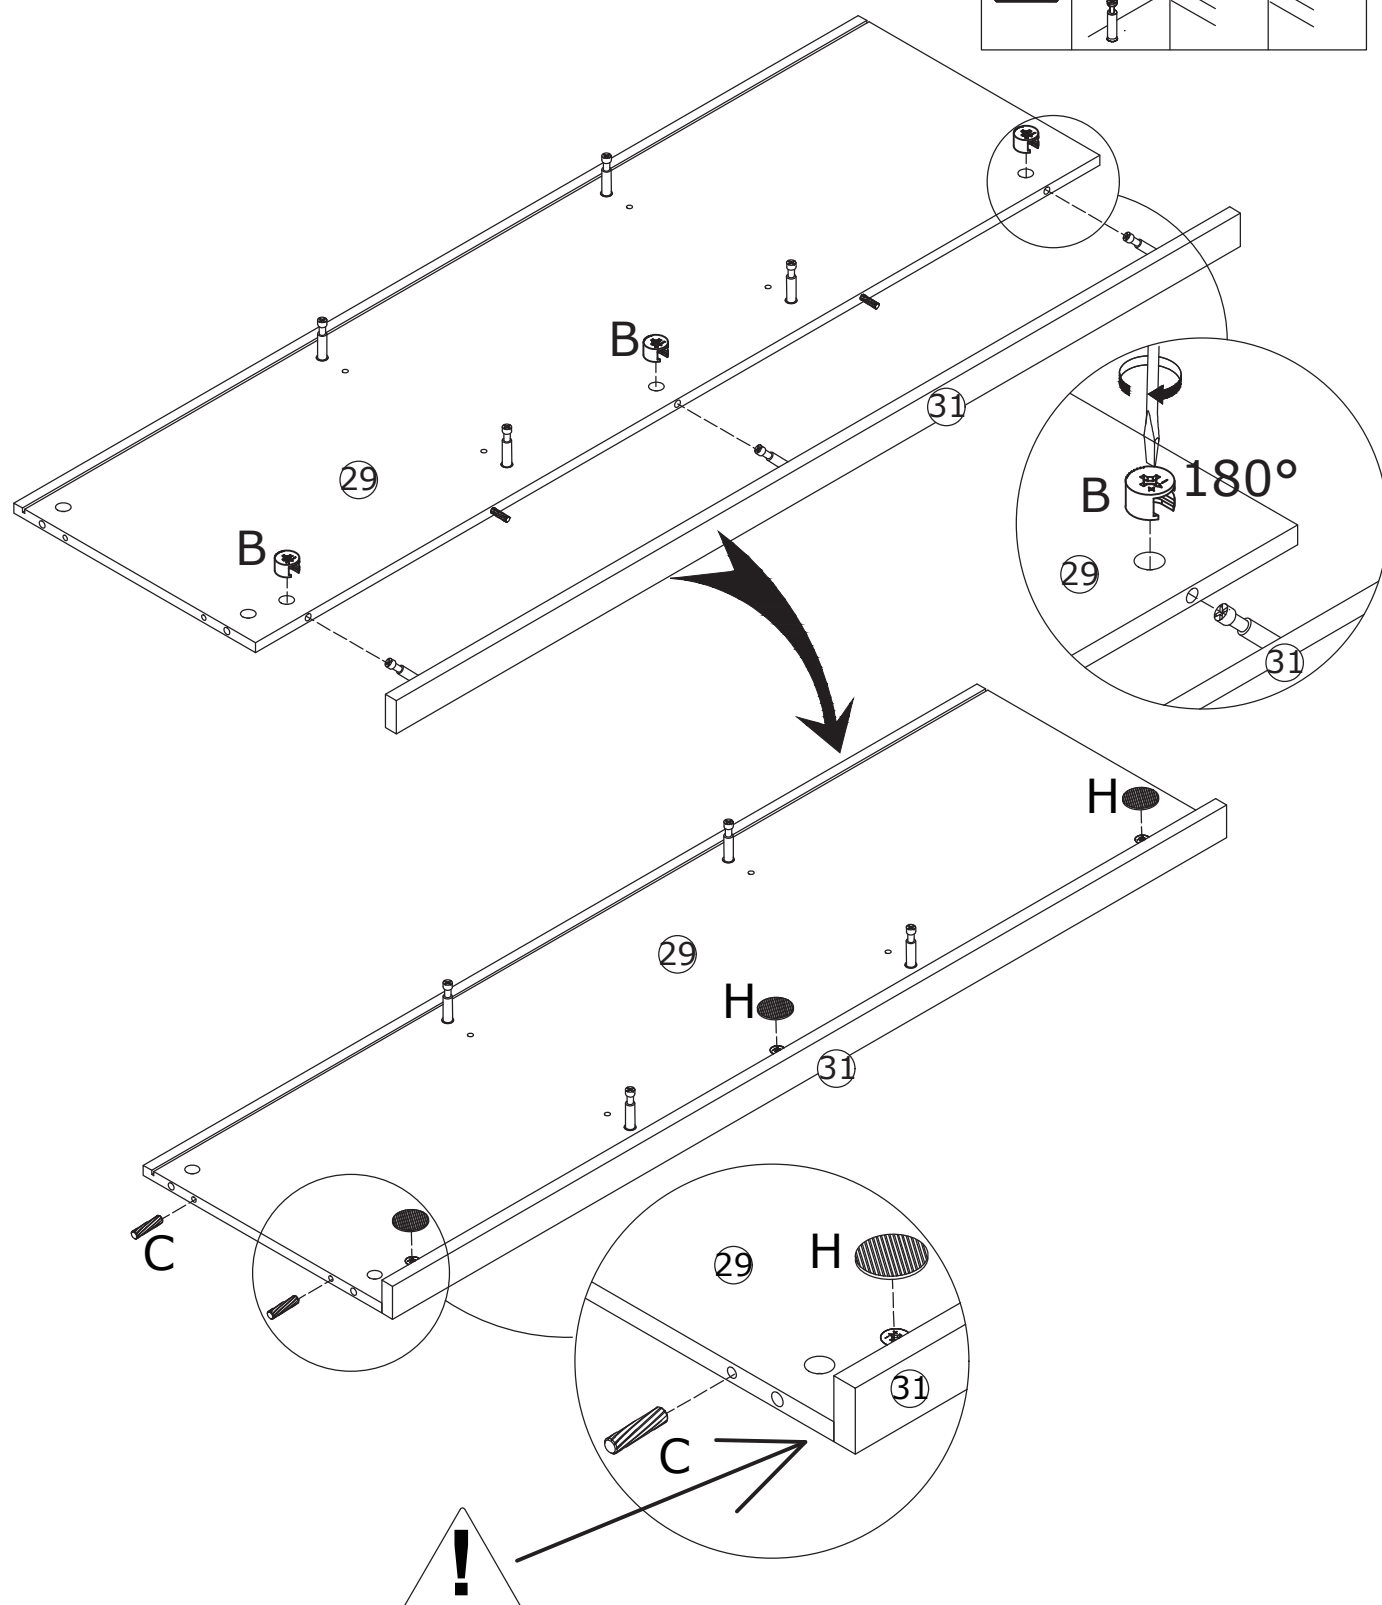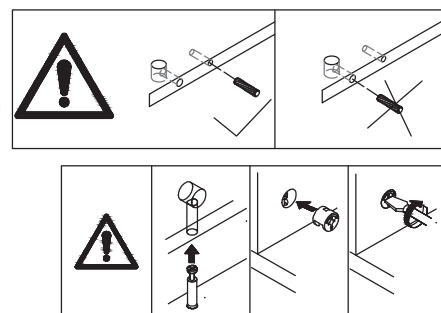

13

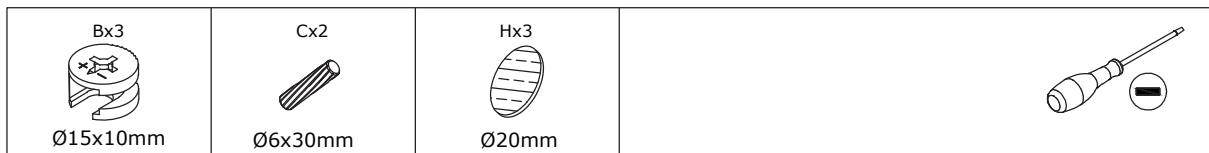 

   Attach another plate 31 to plate 30, put cam lock(B) into holes in plate 30 and turn clockwise to tighten as shown.
 Flip the part, stick part(H) to plate 30 as shown.

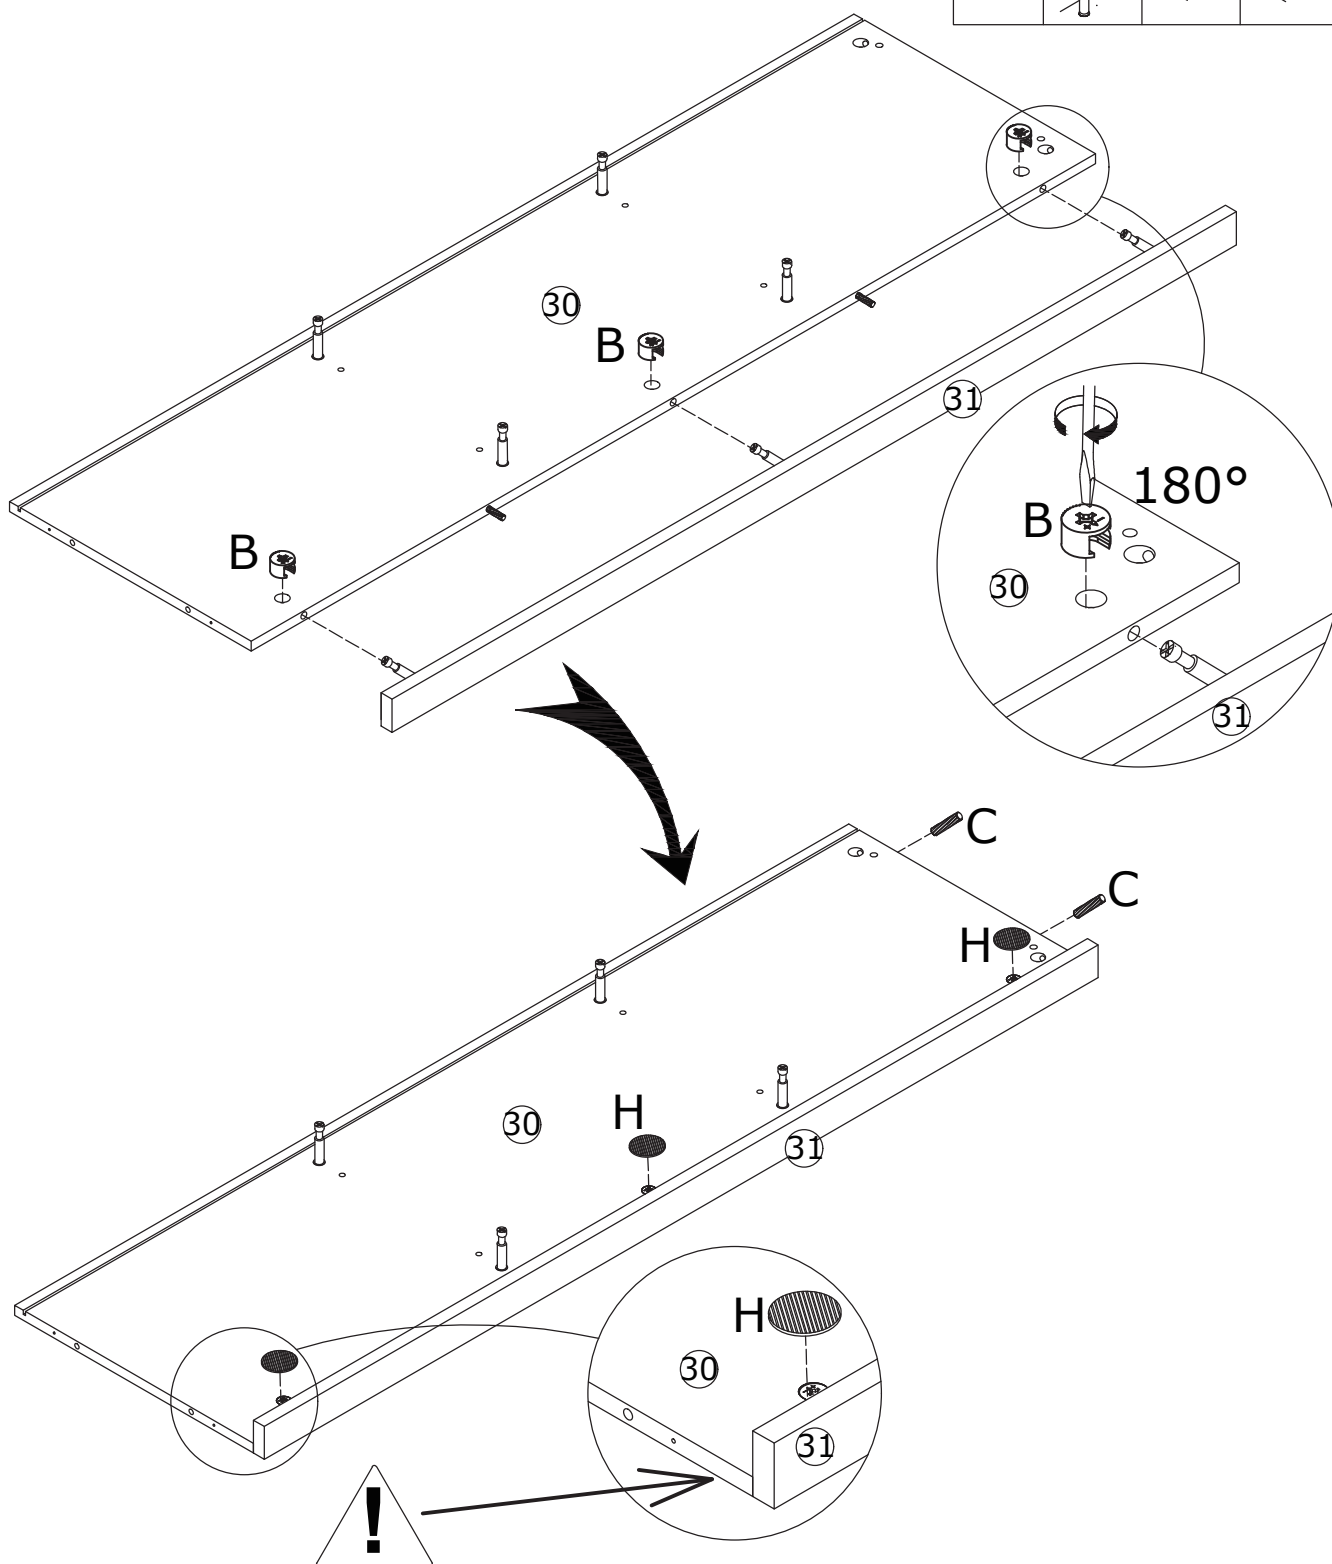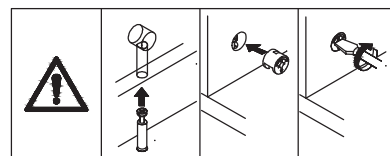
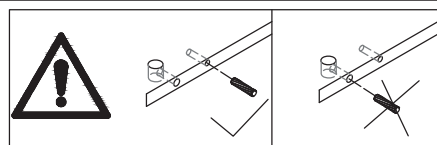


14





Insert wooden dowel(C) into two plate 32 as shown.


 
 
Attach plate 32 to plate 30, put cam lock(B) into holes in plate 32 and turn clockwise to tighten as shown.

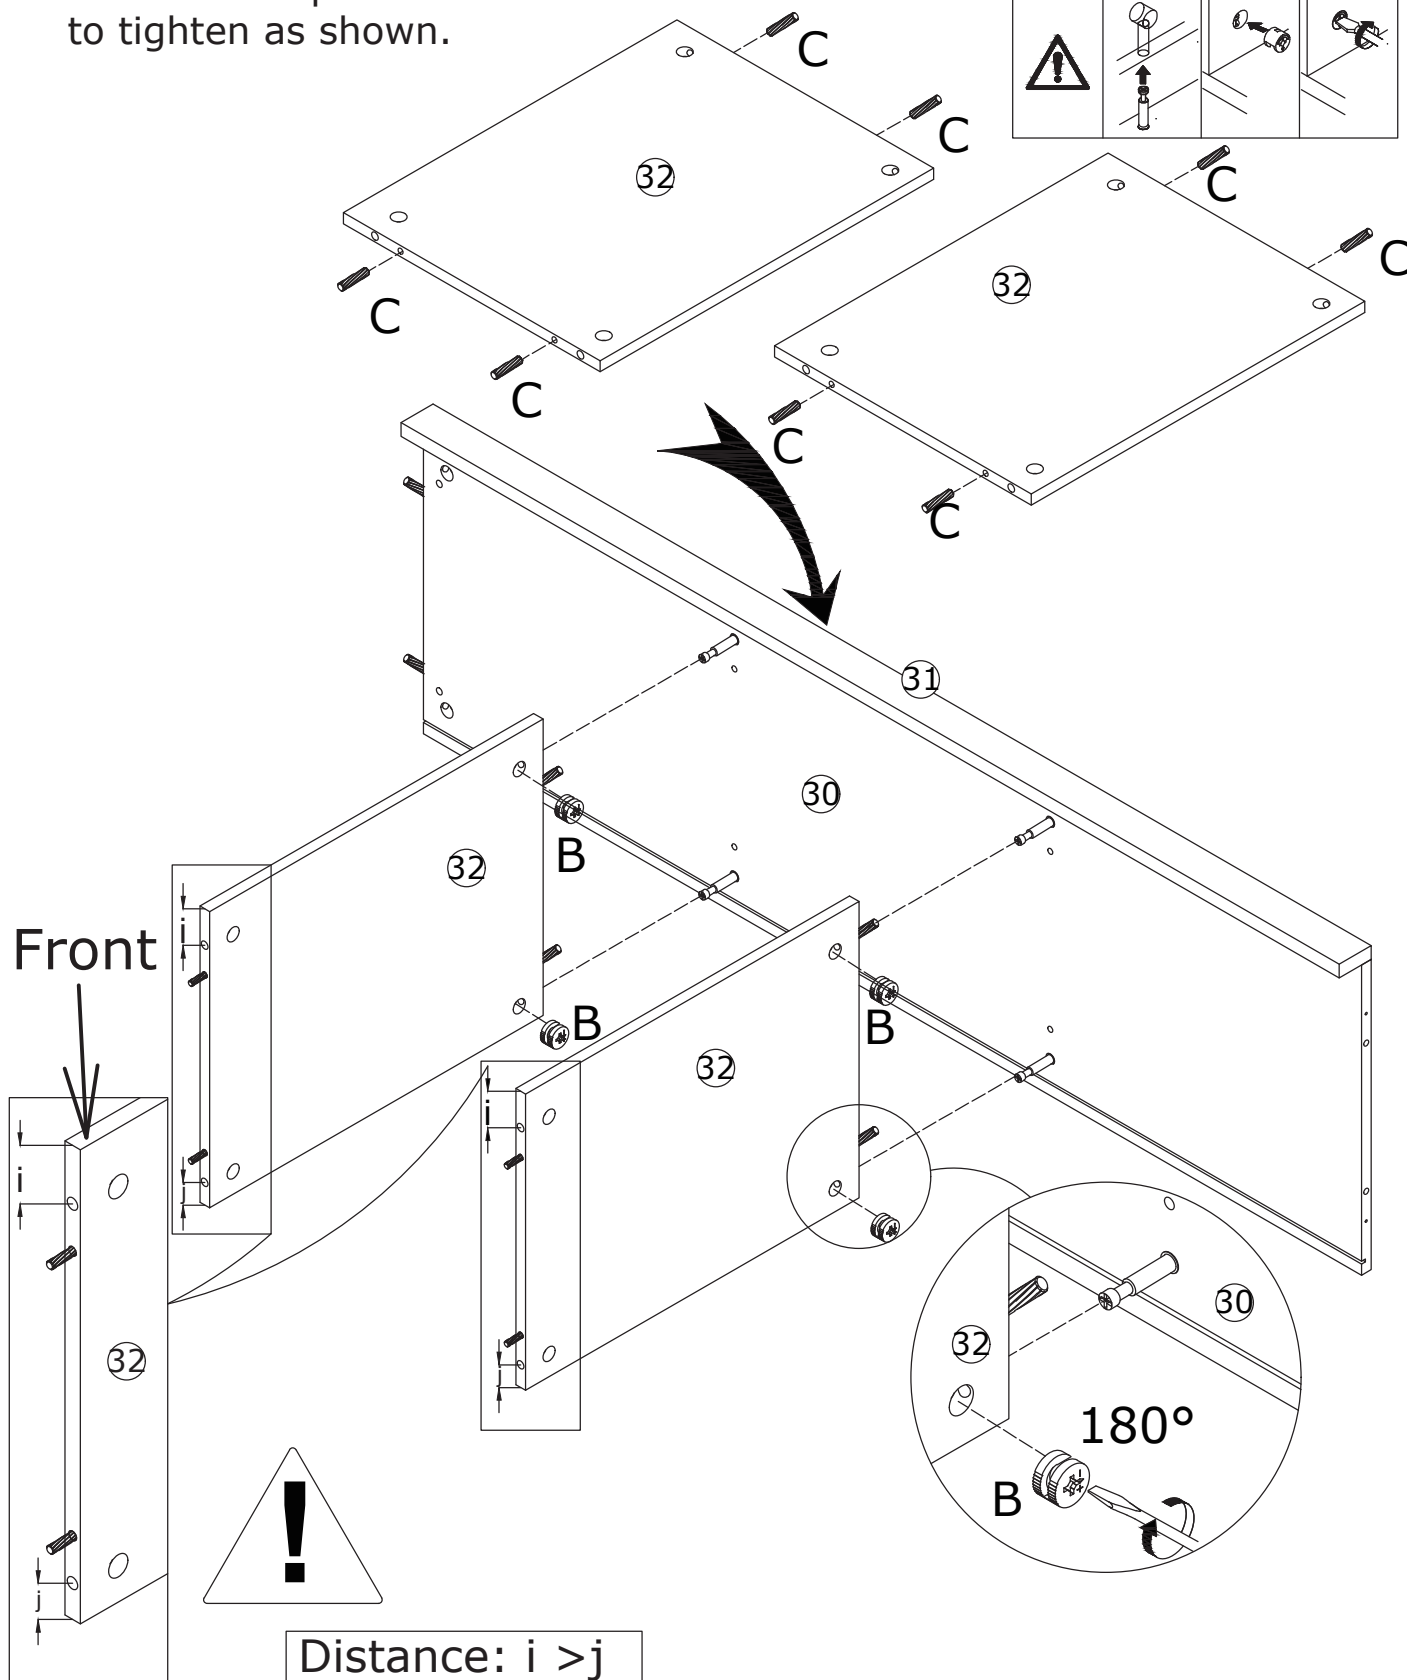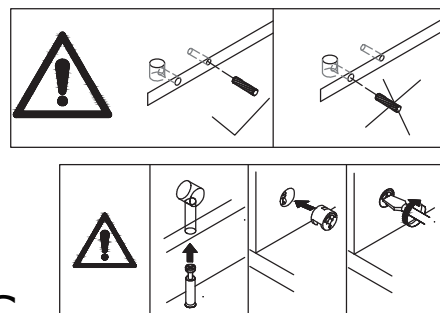

15

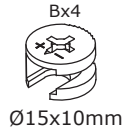  

  
 
Attach plate 29 to plate 32, put cam lock (B) into holes in plate 32 and turn clockwise to tighten as shown. Attach plate 28 to plate 27 using wooden dowel (C) and fix with screw (M) as shown.

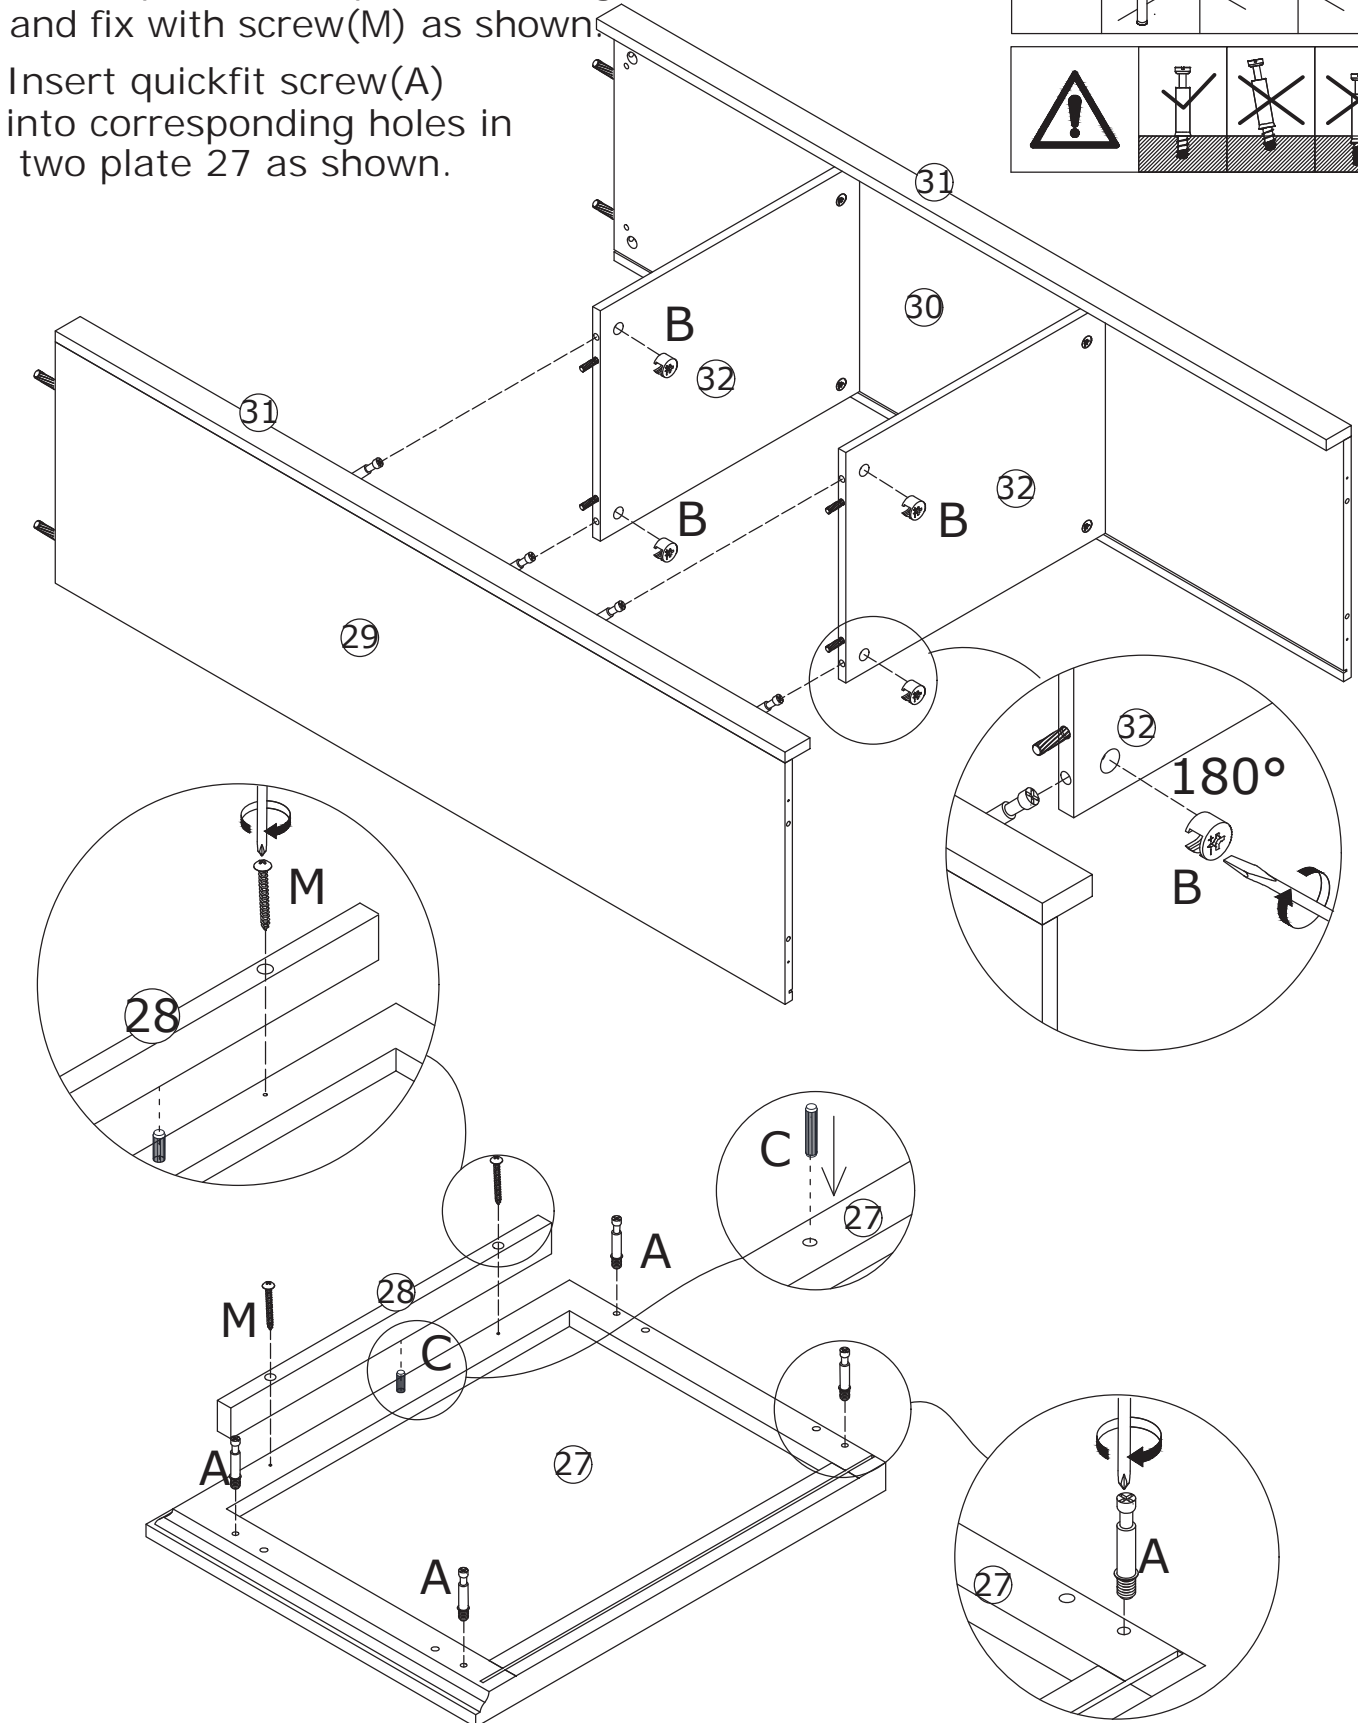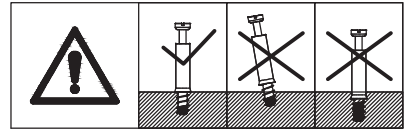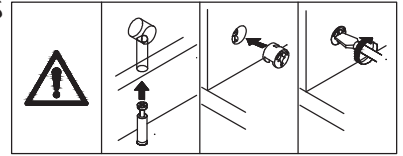



16



  
Cover plate 27 to plate 29 and 30, put cam lock(B) into holes in plate 29,30 and turn clockwise to tighten as shown.
Stick part(H) to plate 29 and 30 as shown.

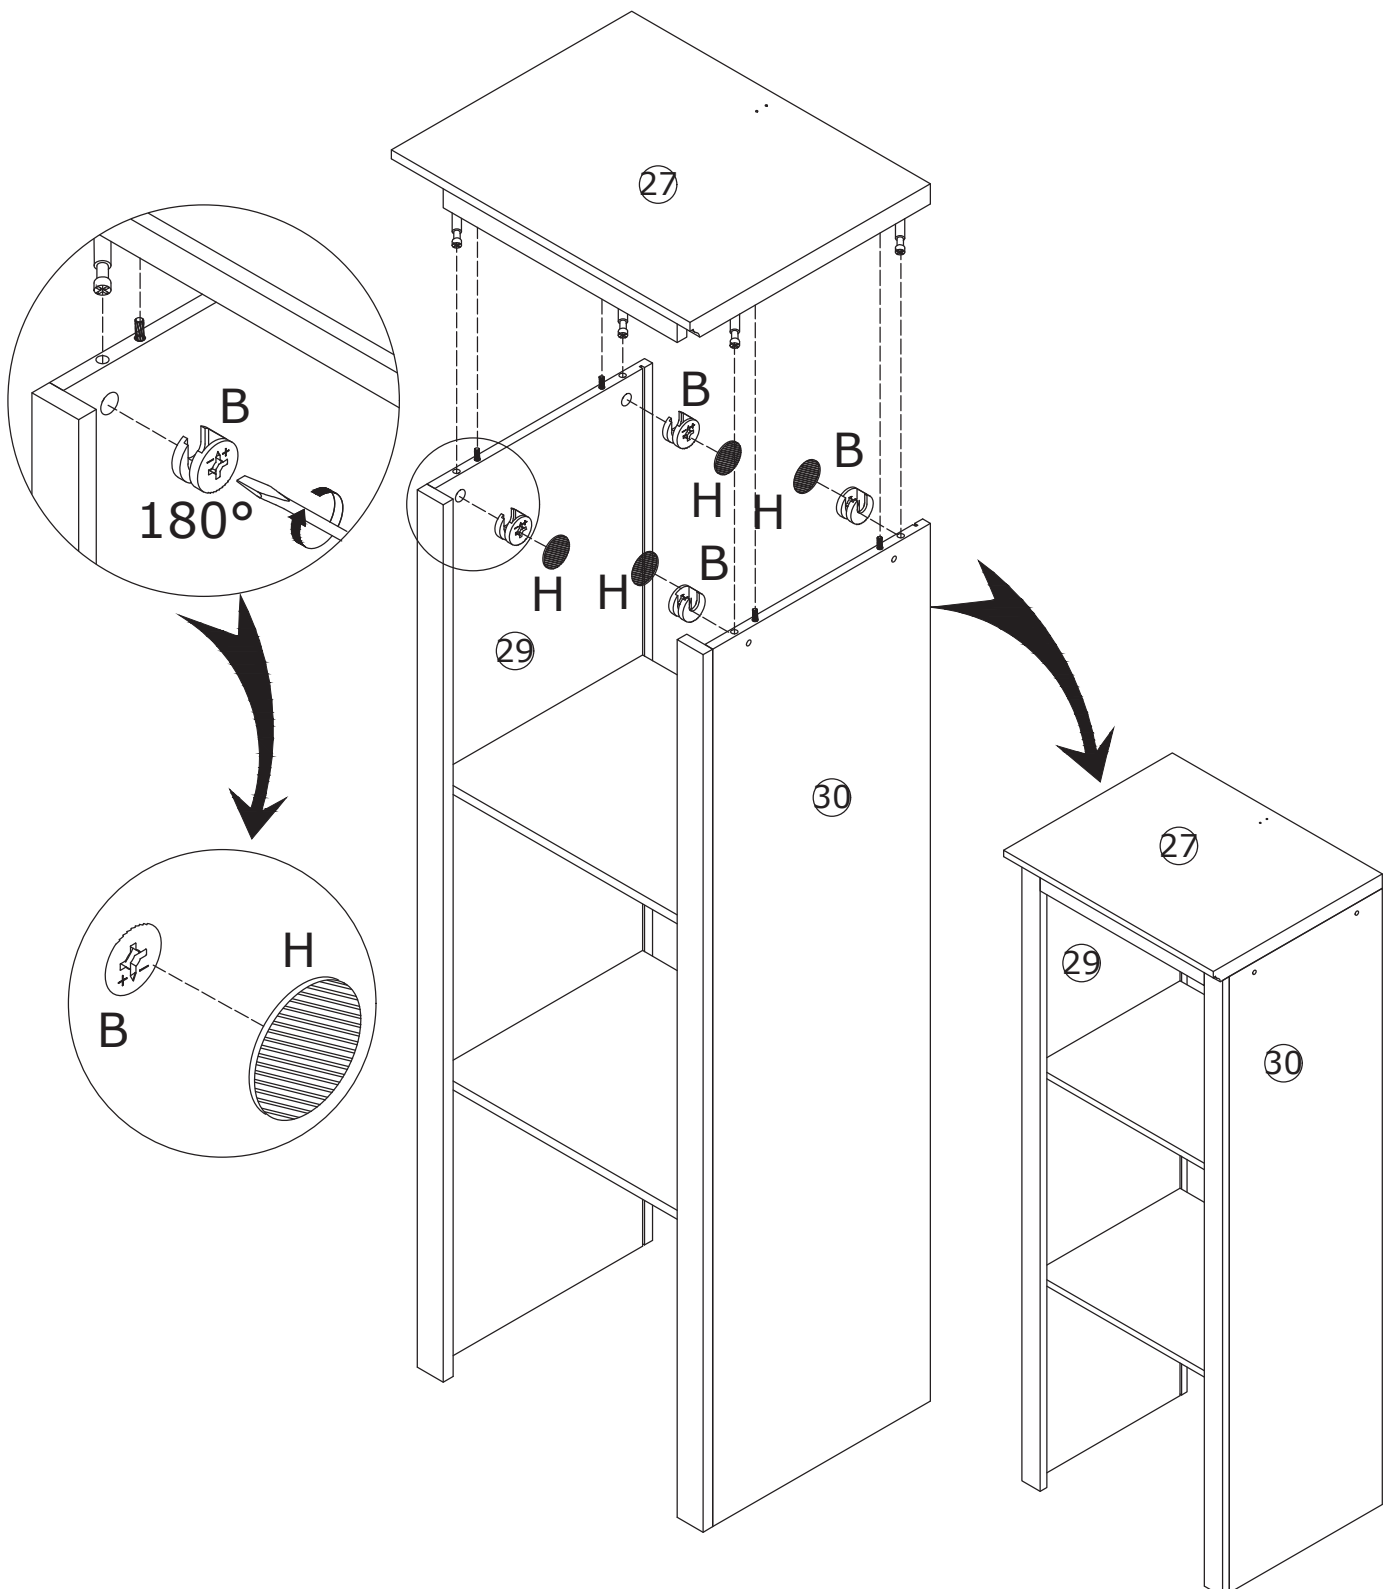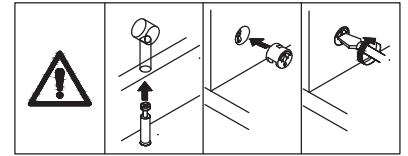




17

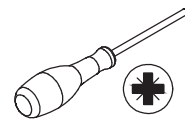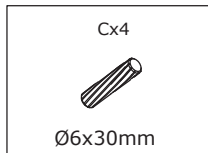  

 
Slide back plate 33 along grooves as shown.
Insert wooden dowel(C) into plate 29 and 30
as shown.

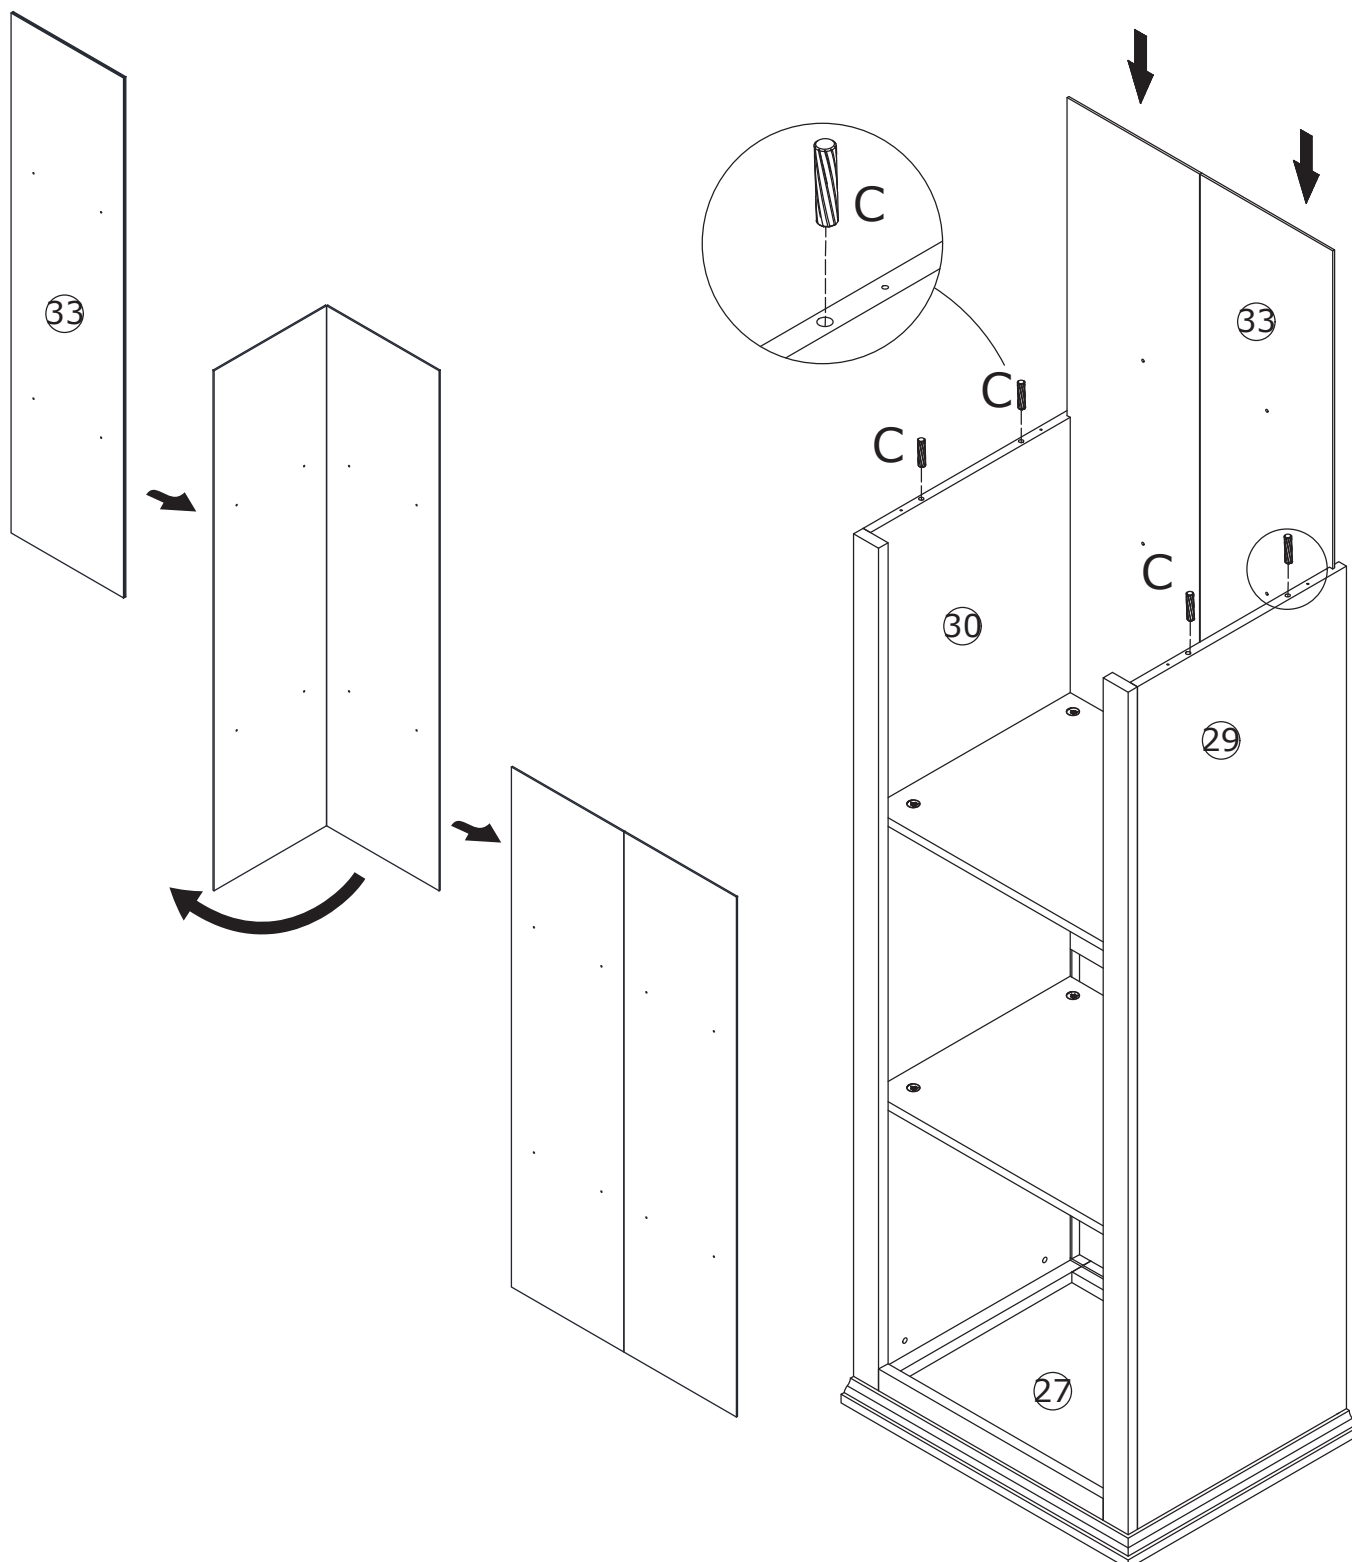

18

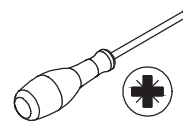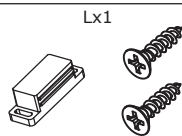   

 
Insert quickfit screw(A) into corresponding holes in plate 35 as shown.
Fix part(L) to plate 35 as shown.
Fix plate 35 to plate 29 and 30 using screw(D) as shown.

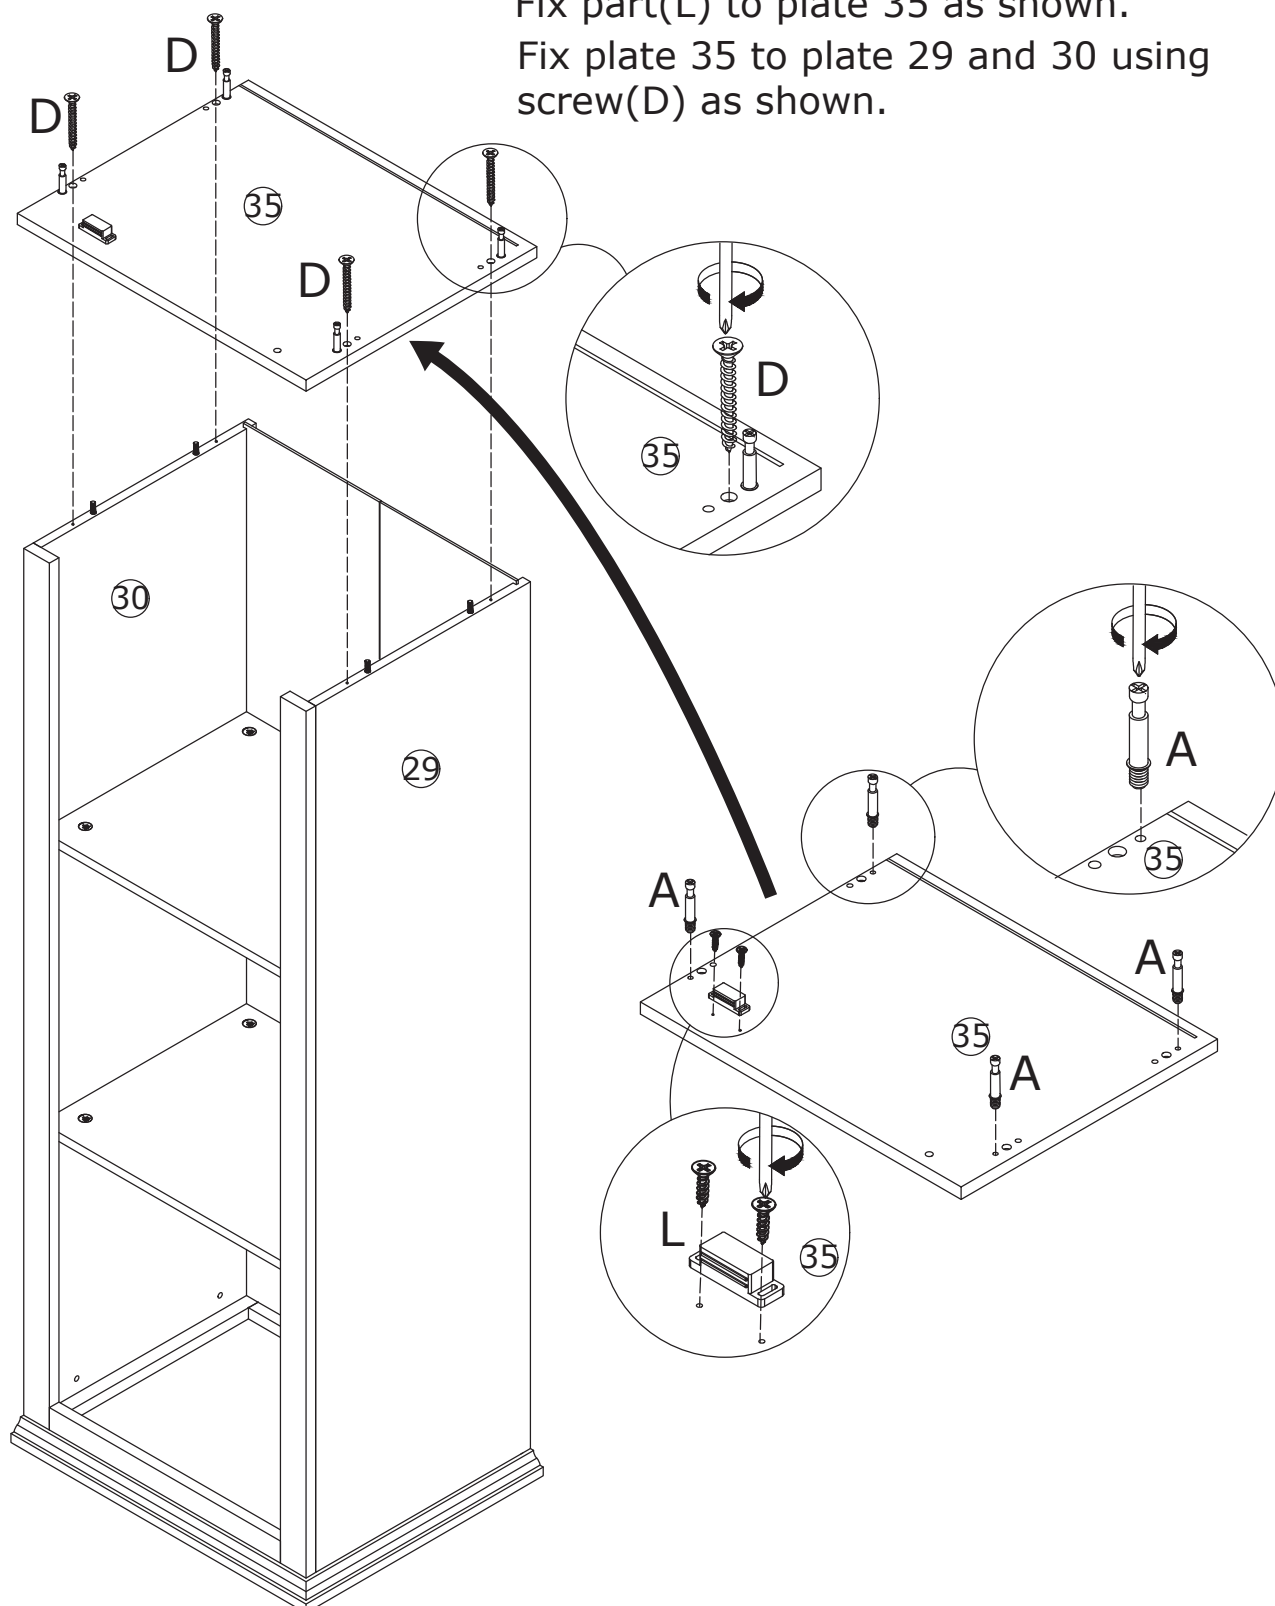





19





 
Fix part(U) to plate 27 as shown.

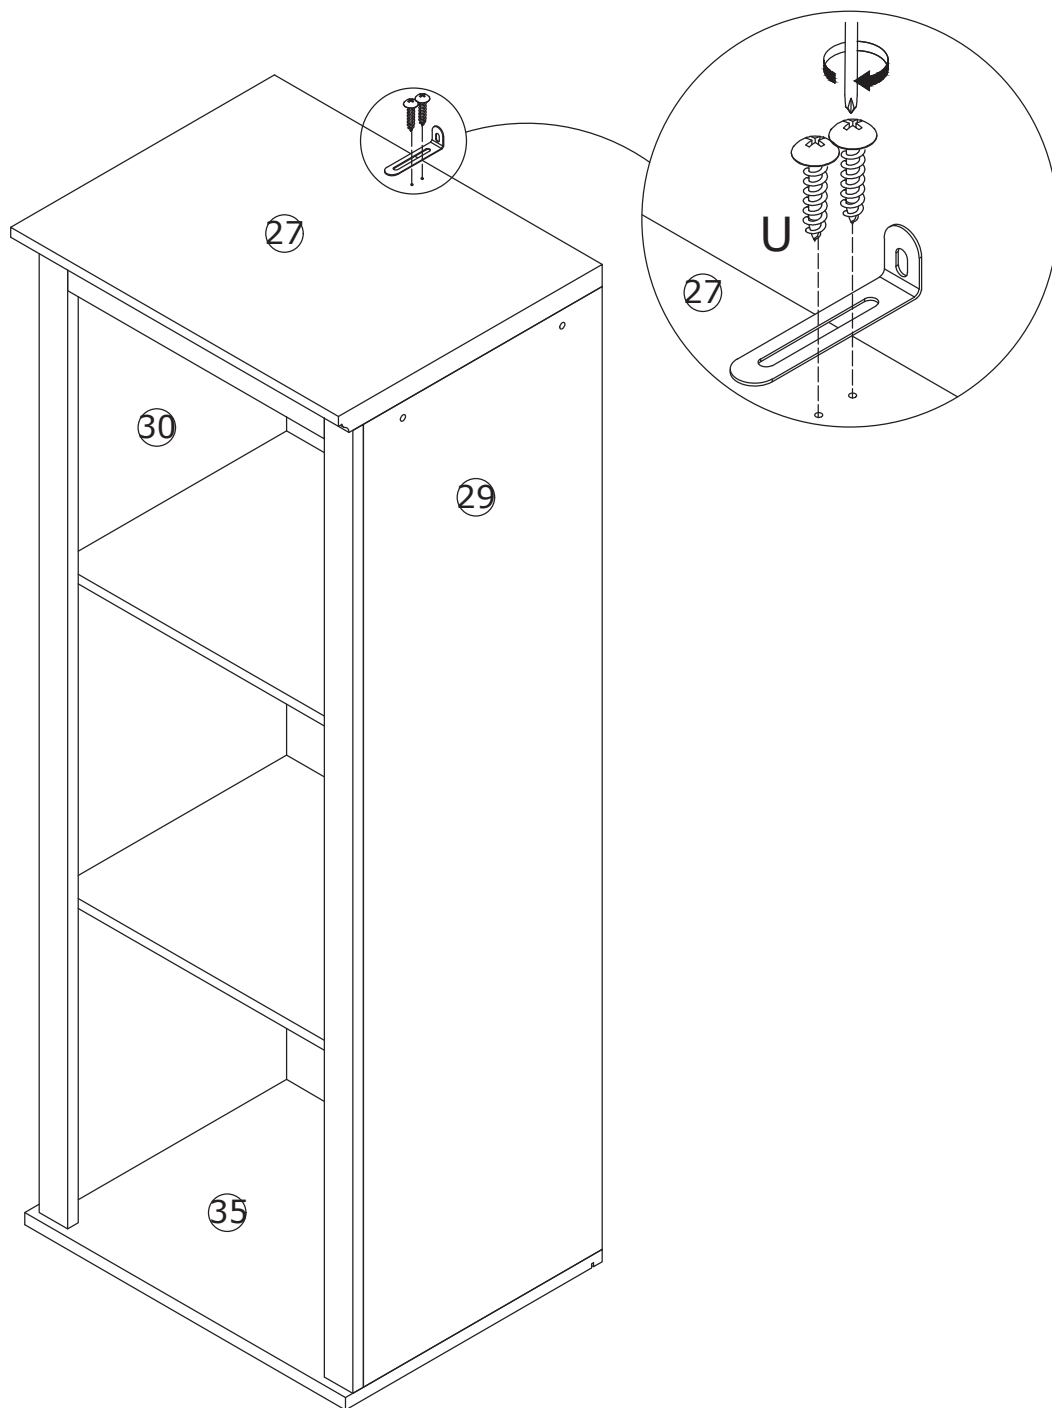



20

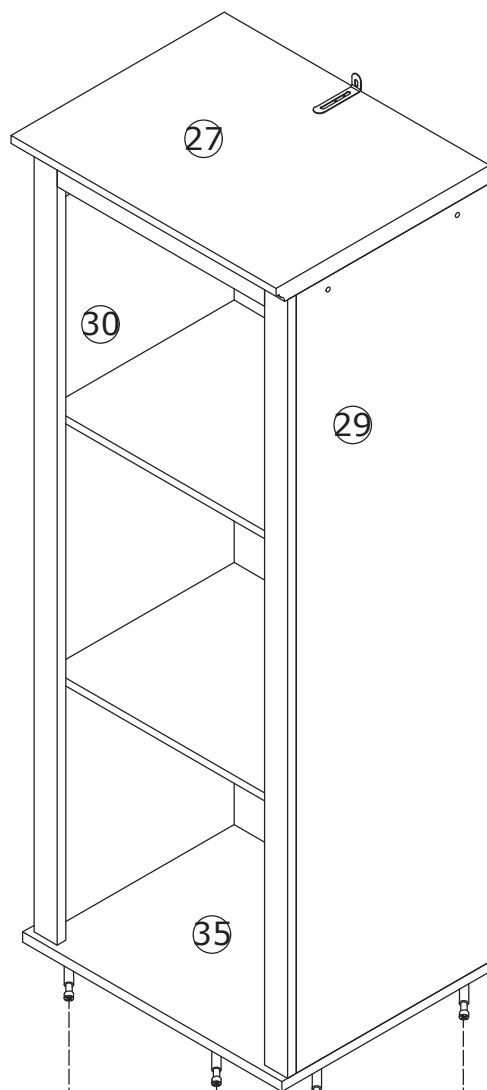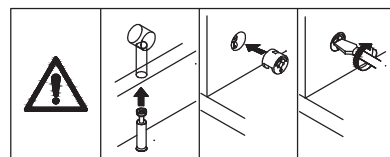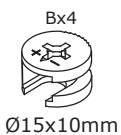    

   Connect the two components together, put cam lock(B) into holes in plate 36,13 and turn clockwise to tighten as shown. Stick part(H) to plate 36 and 13 as shown.

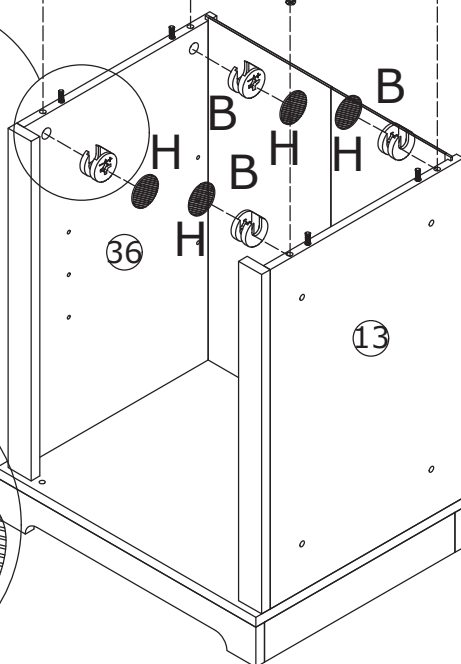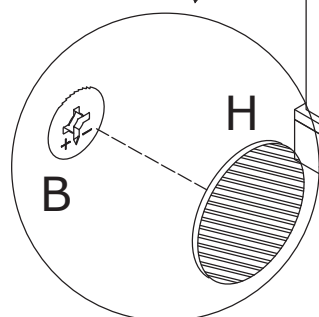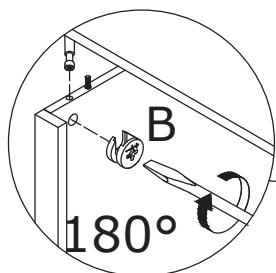





21

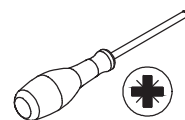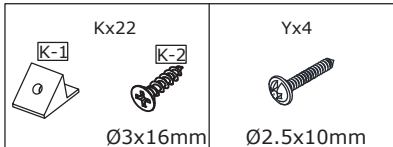  

Insert buckle(K-1) into back slots and fix with screw(K-2) as shown.

Fix back plate to the unit with screw(Y) as shown.

    35. Slide back plate 37 along grooves as shown.

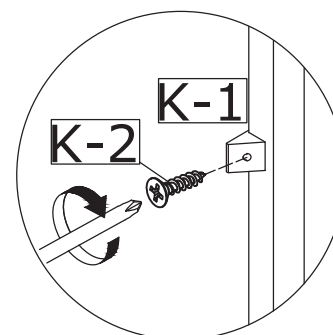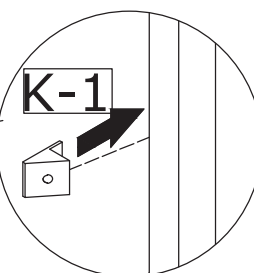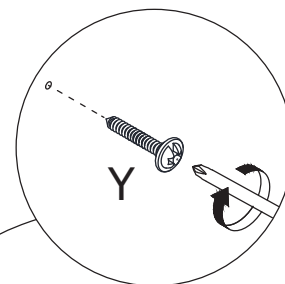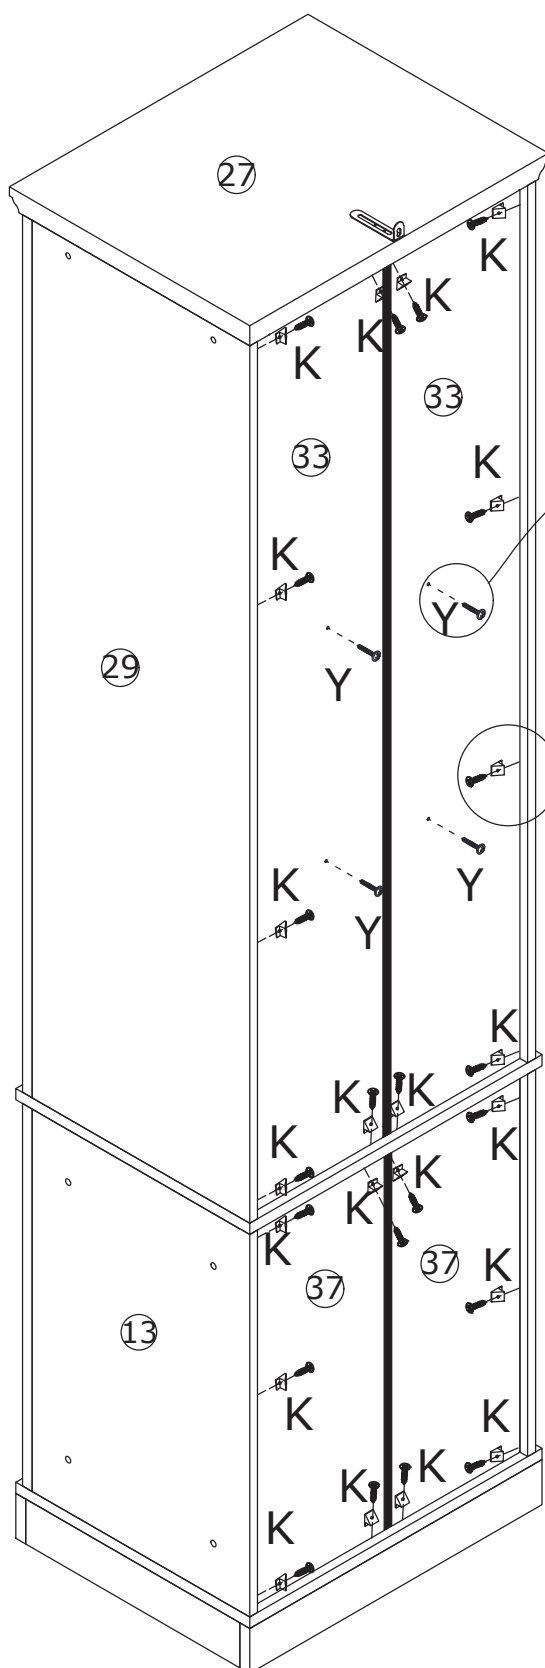


22

Jx4




 Insert part(J) into corresponding holes in plate 36 and 13, place shelf 48 in as shown.

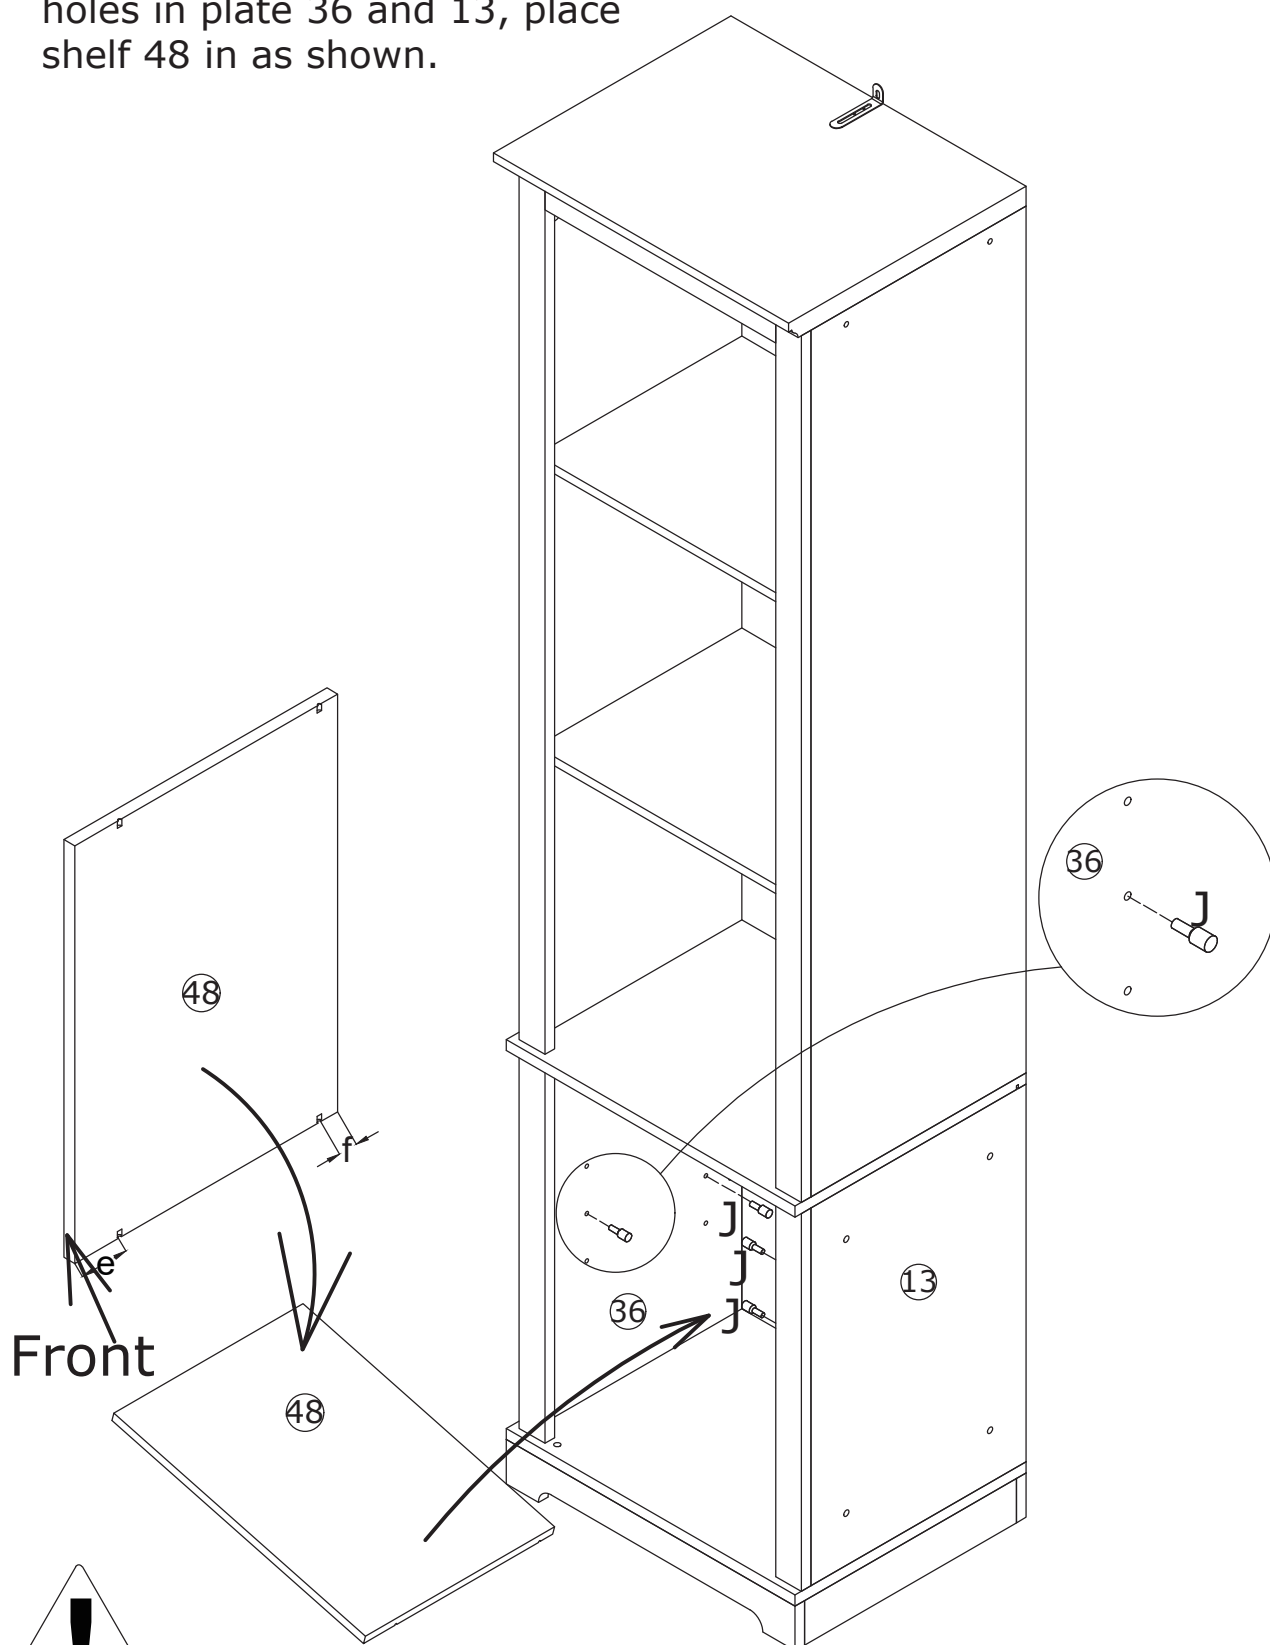


Distance: $e > f$

 23

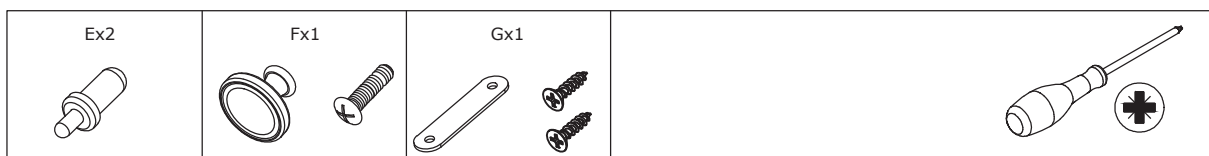


 
Insert part(E) into plate 26 as shown.
Fix part(G) and knob(F) to plate 26 as shown.

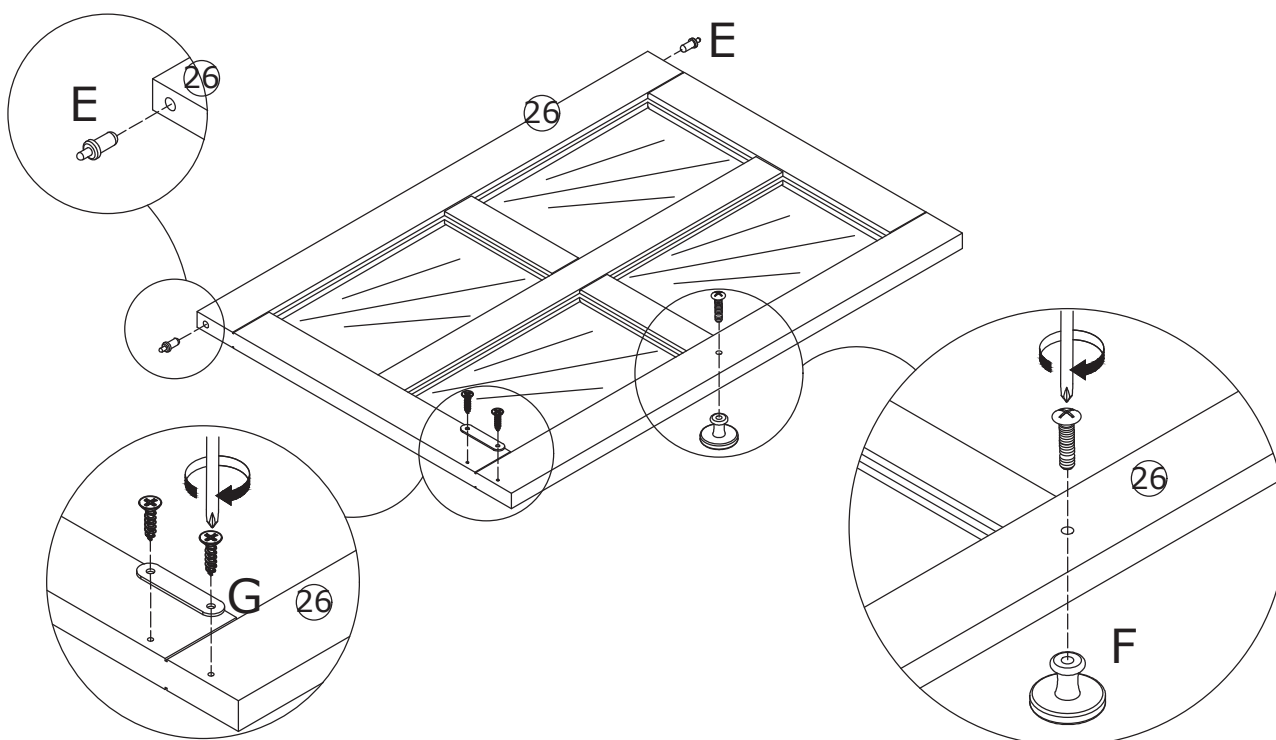

24

  
Assembled the door plate as shown.

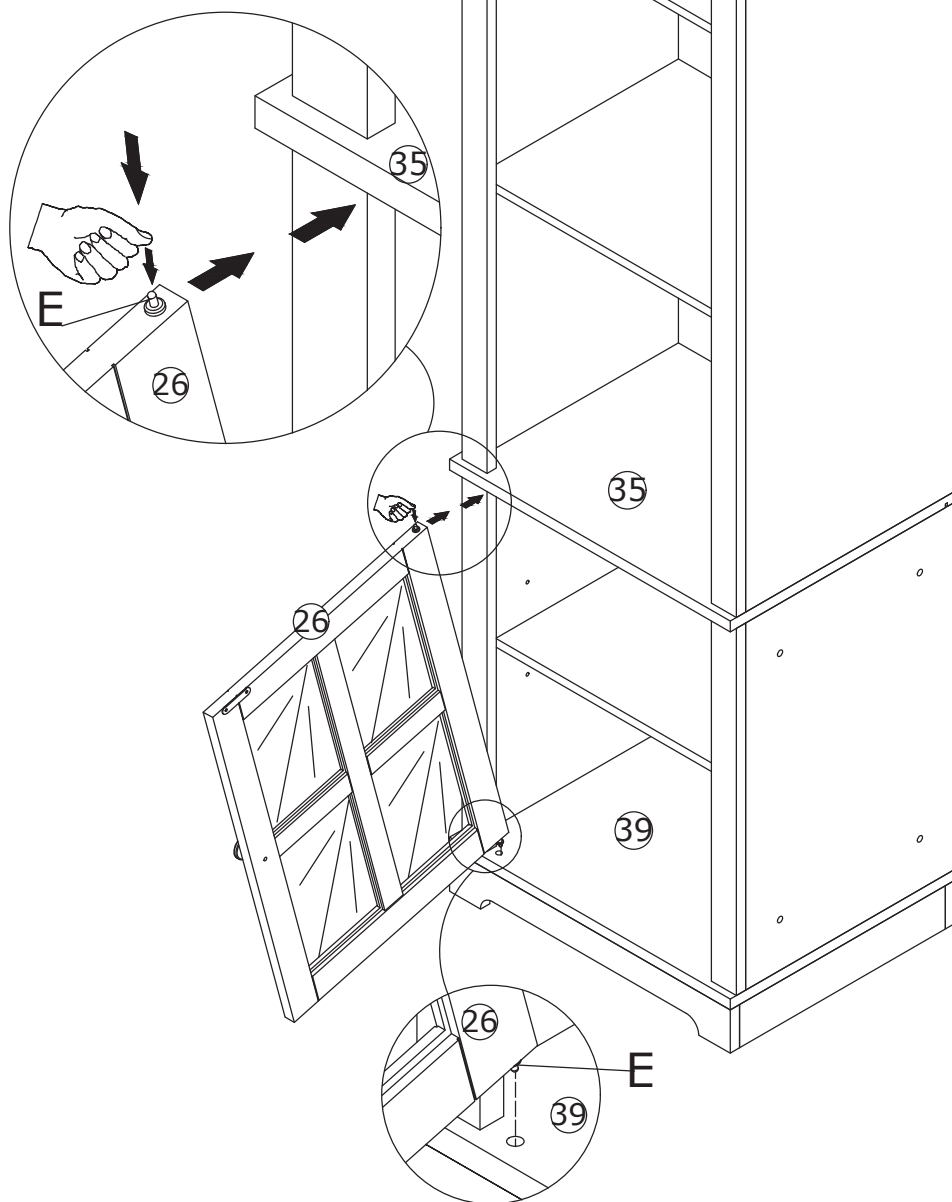


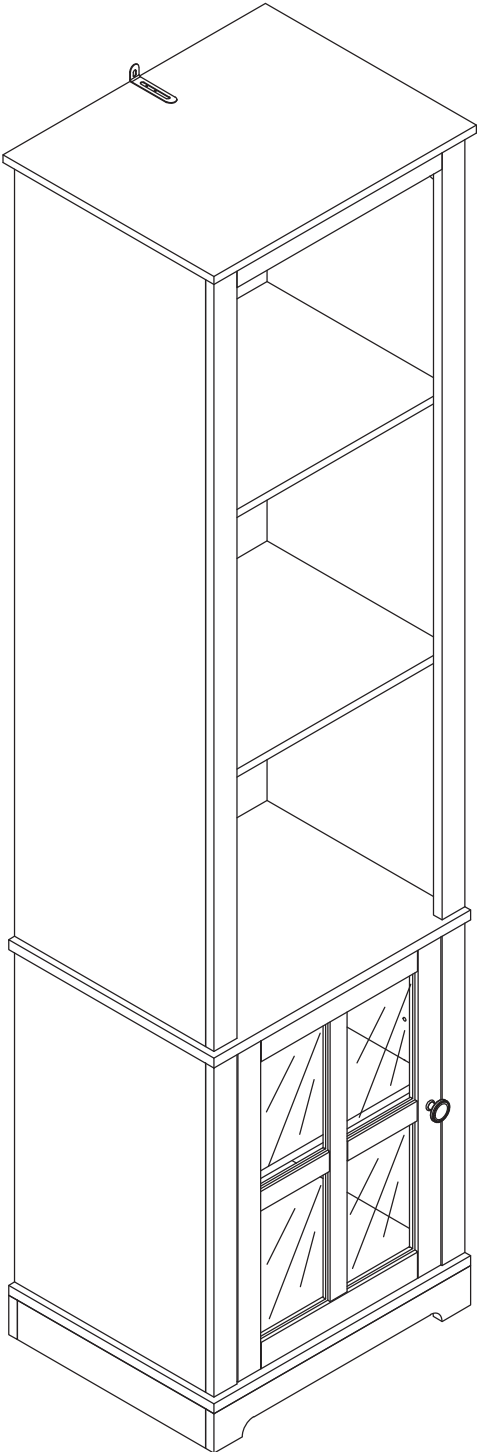


26

 Ax4
Ø6x35mm



Right high cabinet

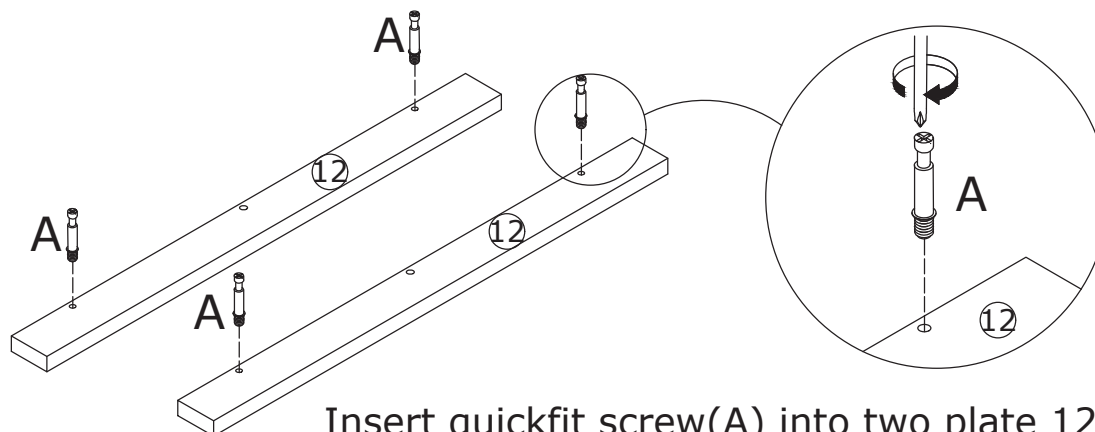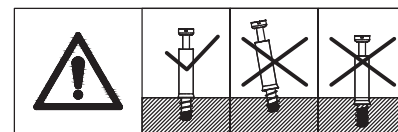  



Insert quickfit screw(A) into two plate 12 as shown.

27


Cx10
Ø6x30mm



  Insert wooden dowel(C) into plate 11 and 46 as shown.

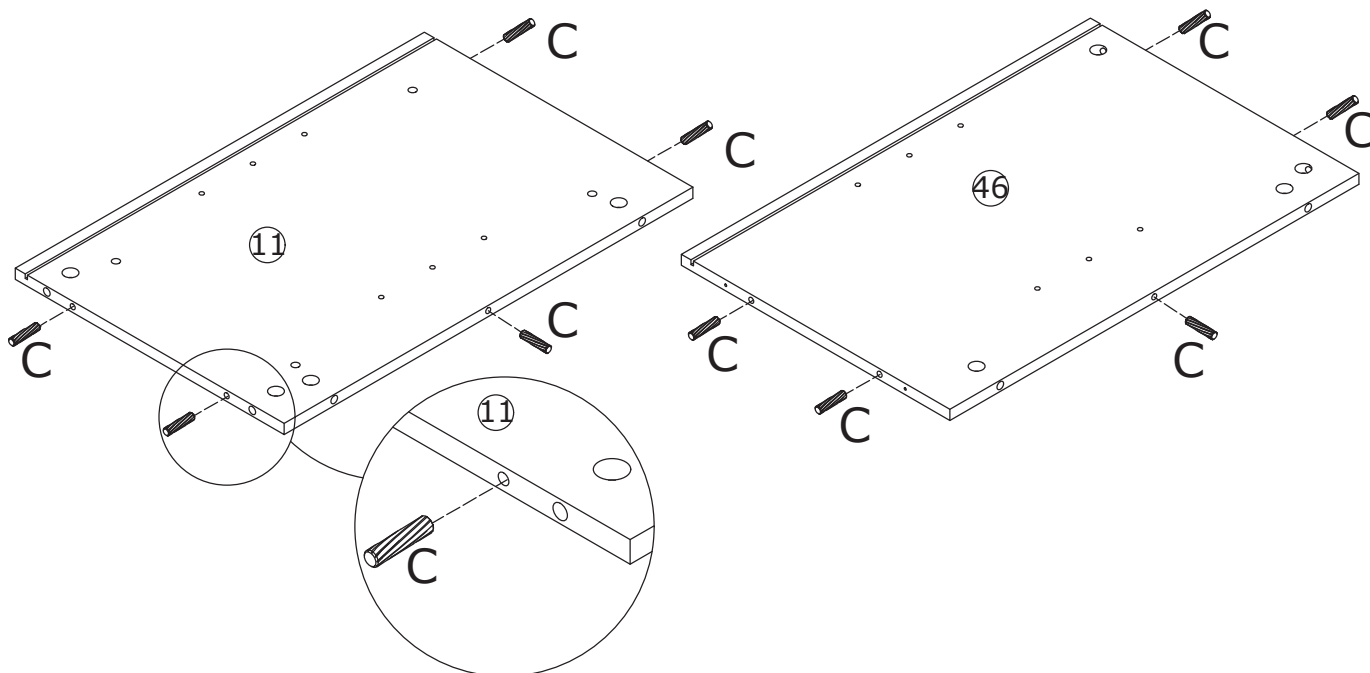
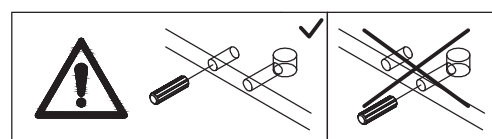


28

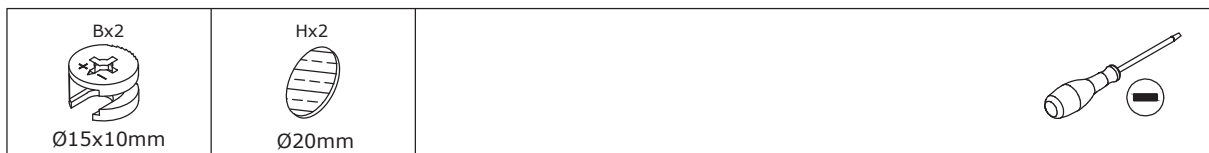 


Attach plate 12 to plate 46, put cam lock(B) into holes in plate 46 and turn clockwise to tighten as shown.

  Flip the part, stick part(H) to plate 46 as shown.

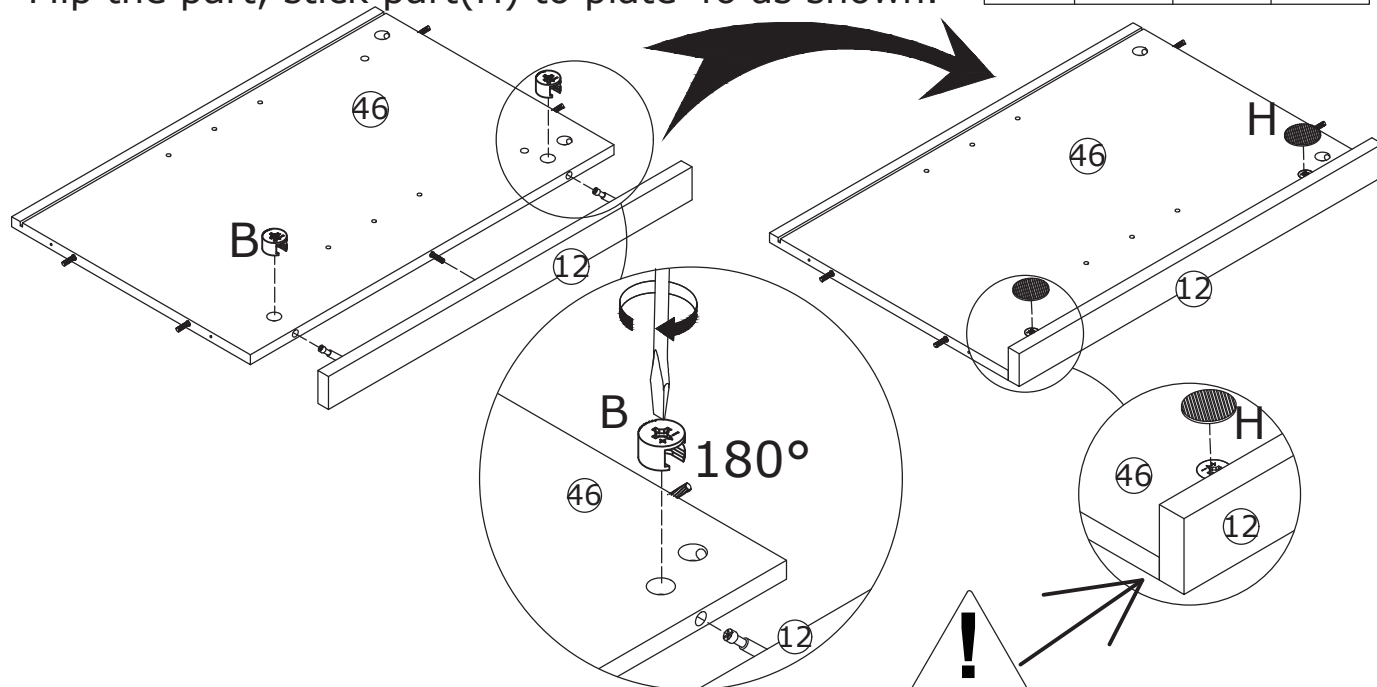
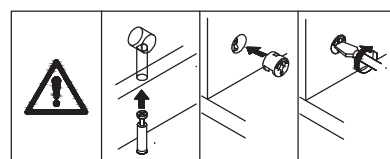


29

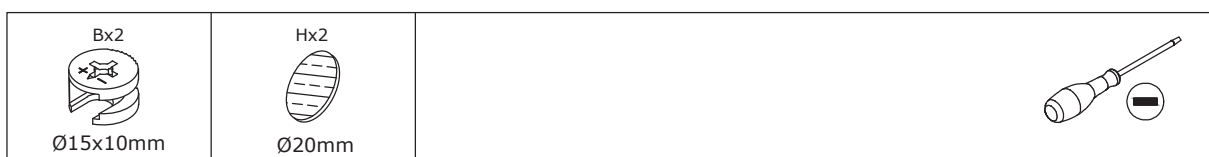 


Attach another plate 12 to plate 11, put cam lock(B) into holes in plate 11 and turn clockwise to tighten as shown.

  
Flip the part, stick part(H) to plate 11 as shown.

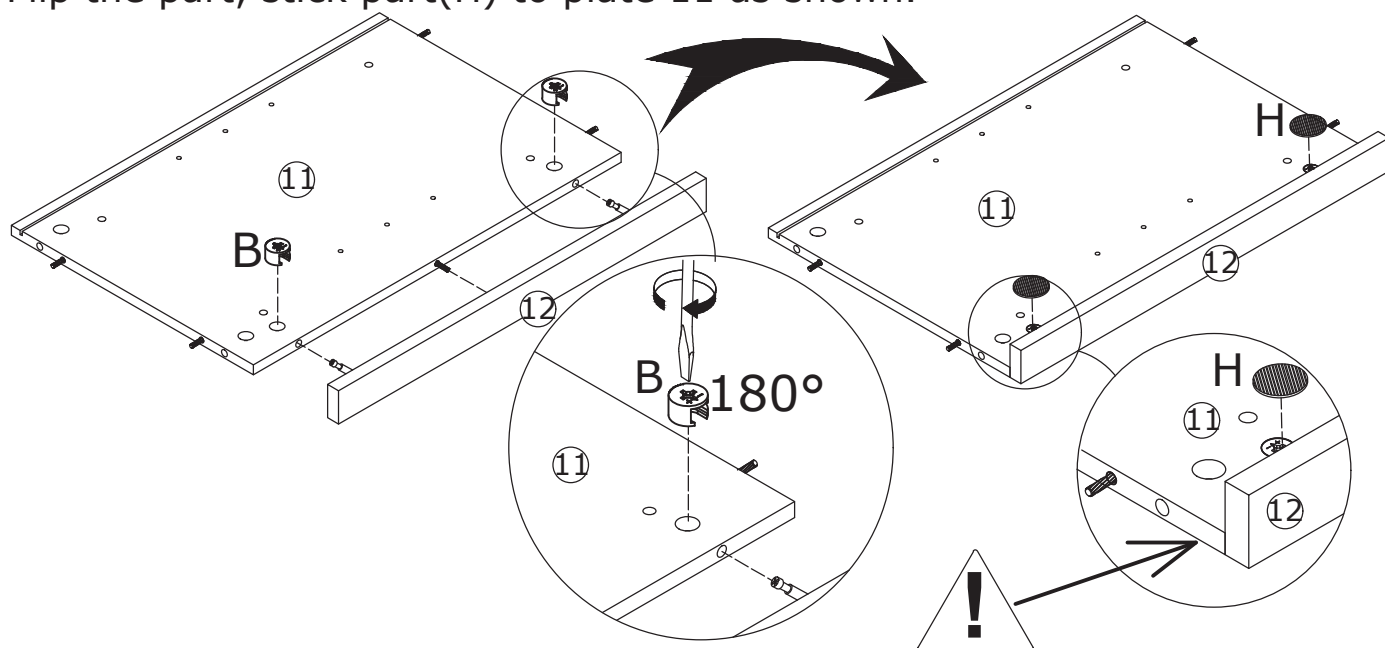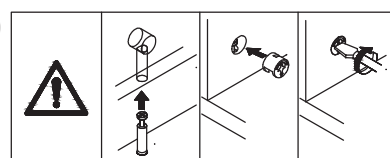

30

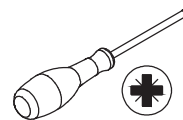 

 
Insert quickfit screw(A) into corresponding holes in plate 47 as shown.

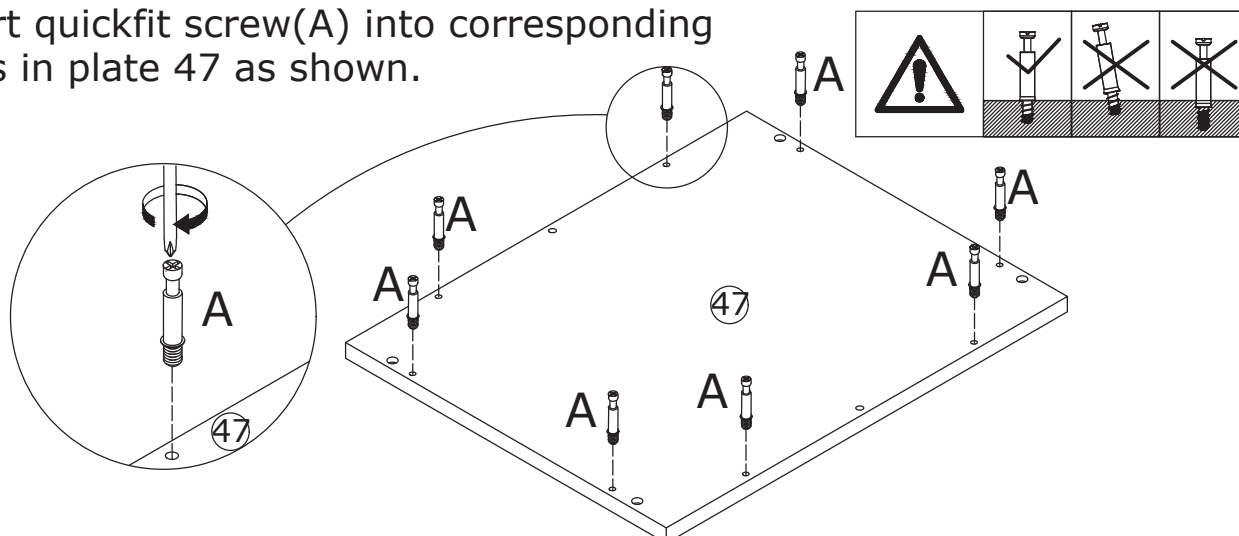

31



 Attach the two components to plate 47 , then fix using screw(D) as shown.

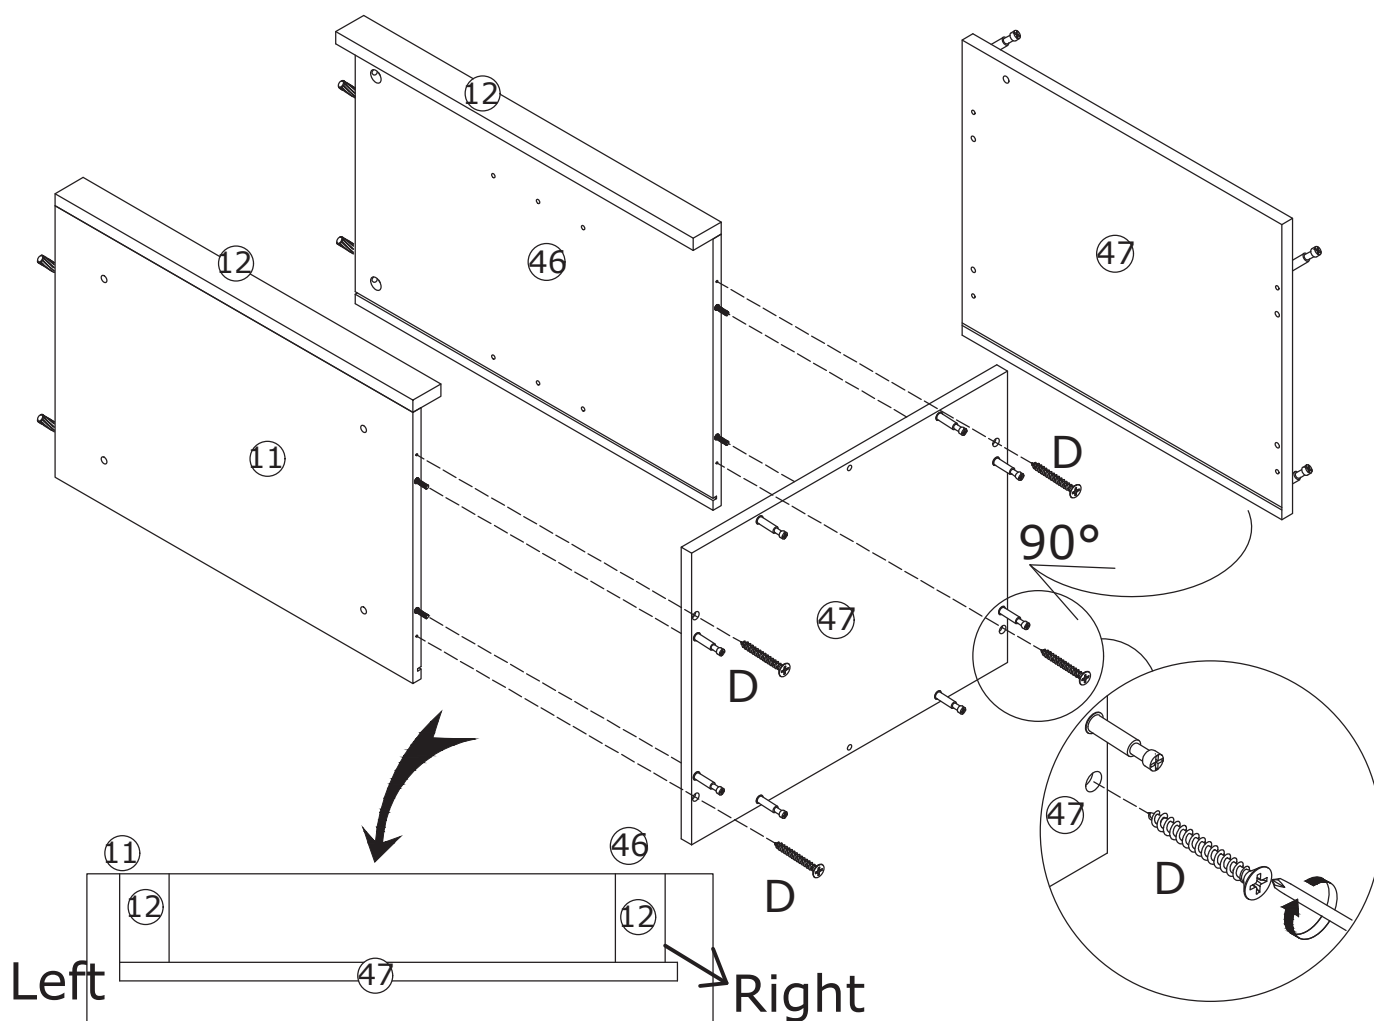

32

Ax4




Ø6x35mm




Cx4



 Ø6x30mm

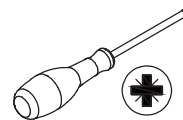

   Insert quickfit screw(A) into corresponding holes in plate 40 and 41 as shown.
Insert wooden dowel(C) into two plate 22 as shown.

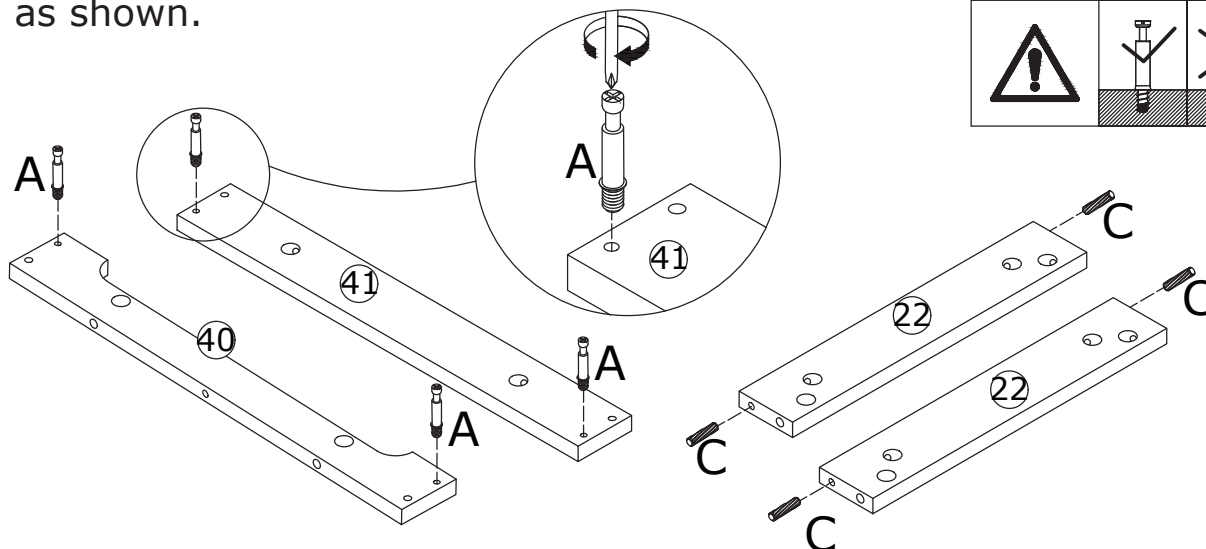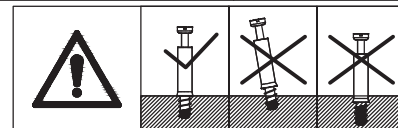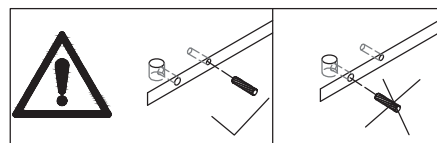

33

Bx4




Ø15x10mm




Cx2




 
Ø6x30mm



  
 
Connect plate 40 and 41 with plate 22, put cam lock(B) into holes in plate 22 and turn clockwise to tighten as shown.
Insert wooden dowel(C) into plate 40 and 41 as shown.

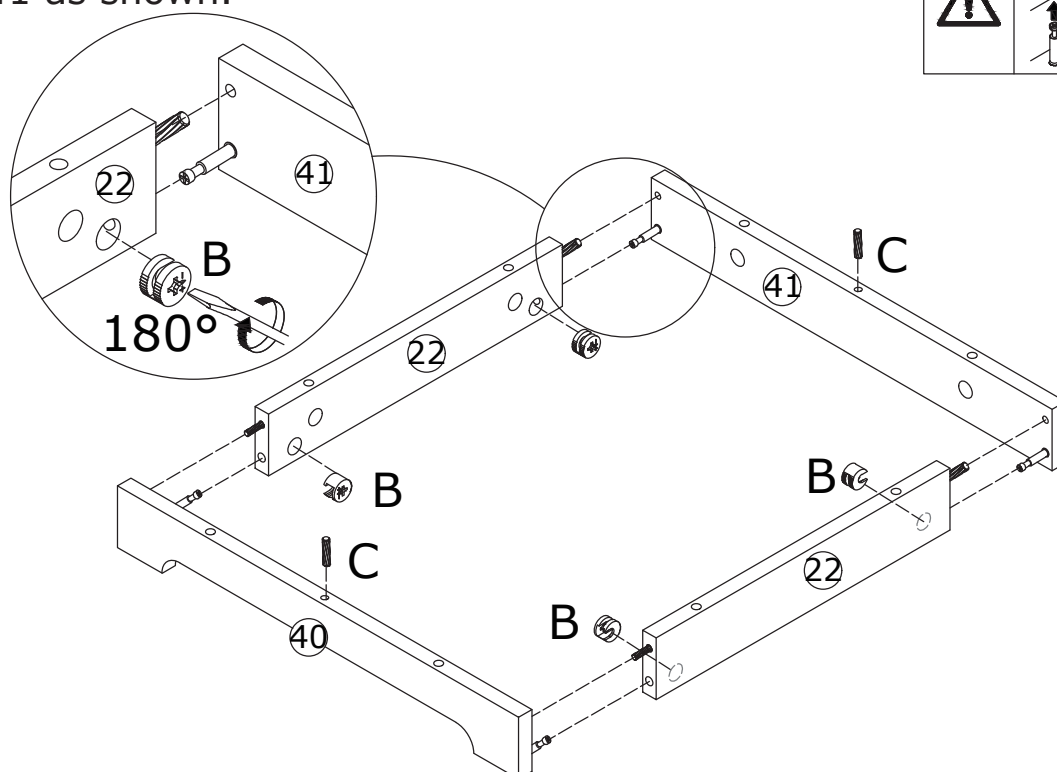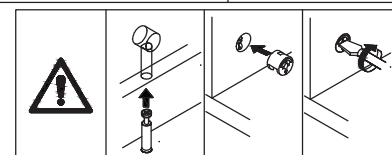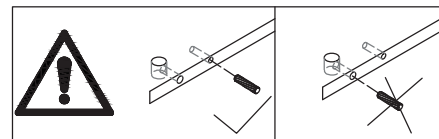

34

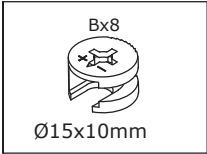  


  Attach the component to plate 47, put cam lock(B) into holes in plate 40,41,22 and turn clockwise to tighten as shown.

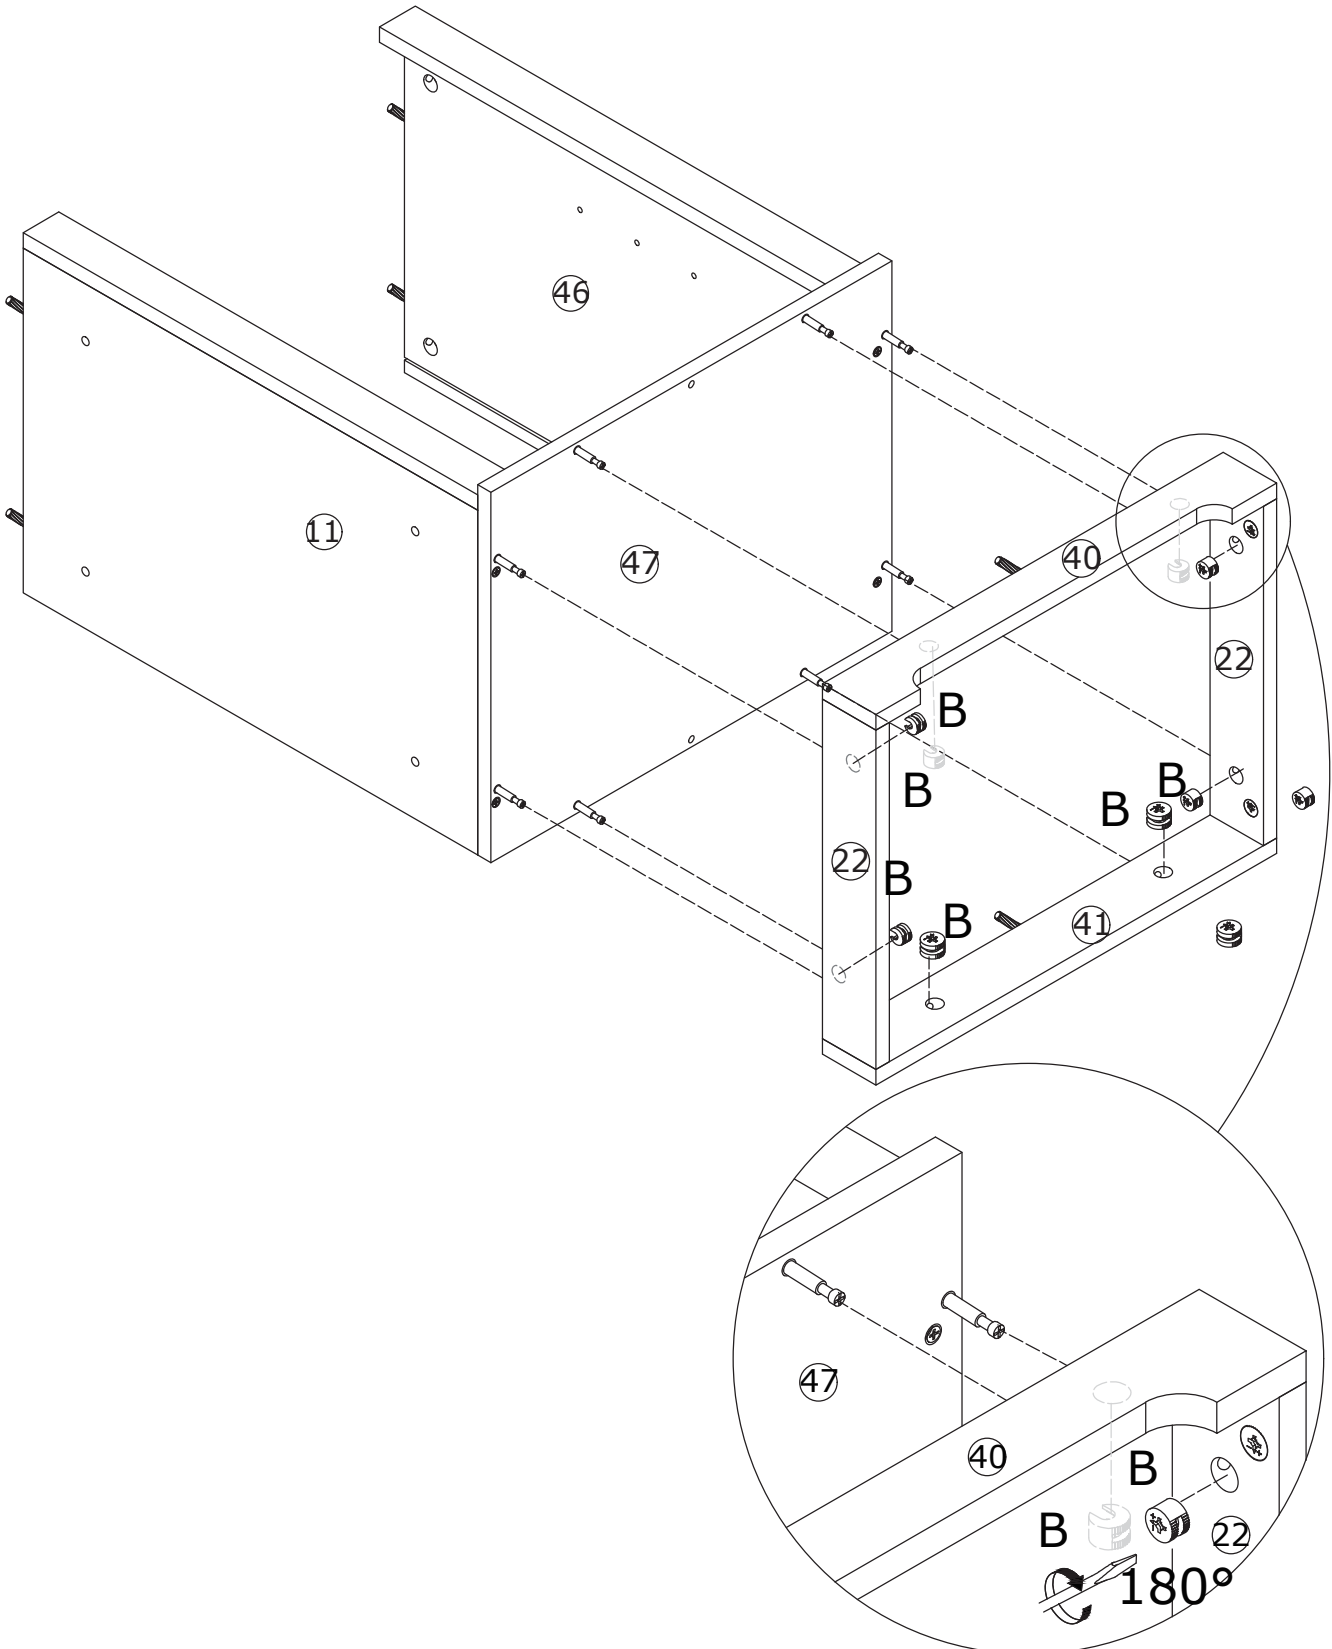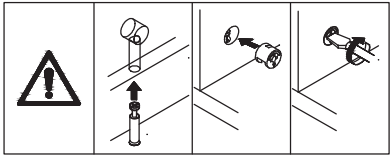

35

 Slide back plate 37 along grooves as shown.

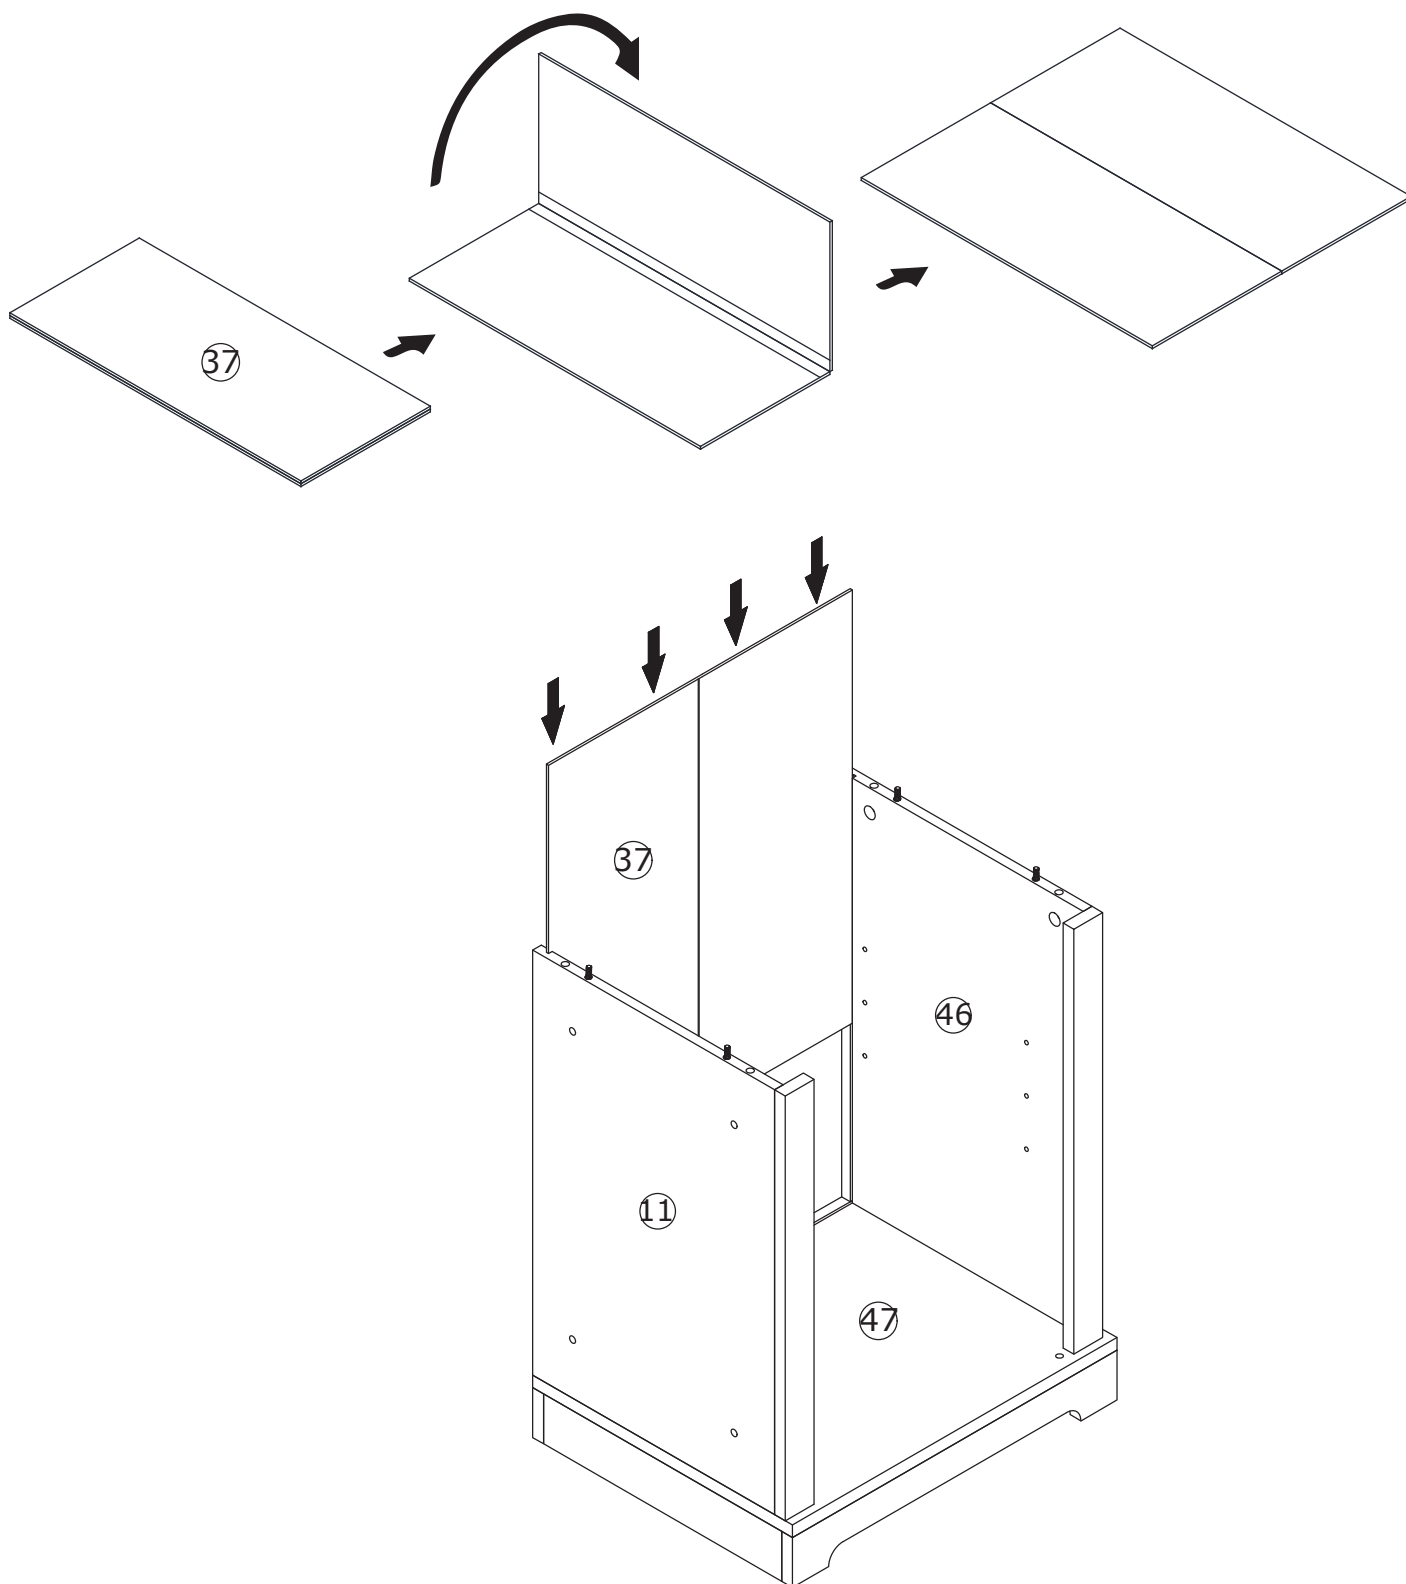

36

Ax14







Ø6x35mm

     
Cx4



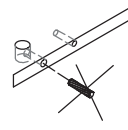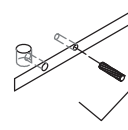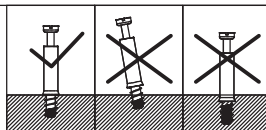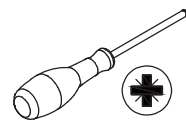


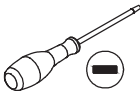
Ø6x30mm

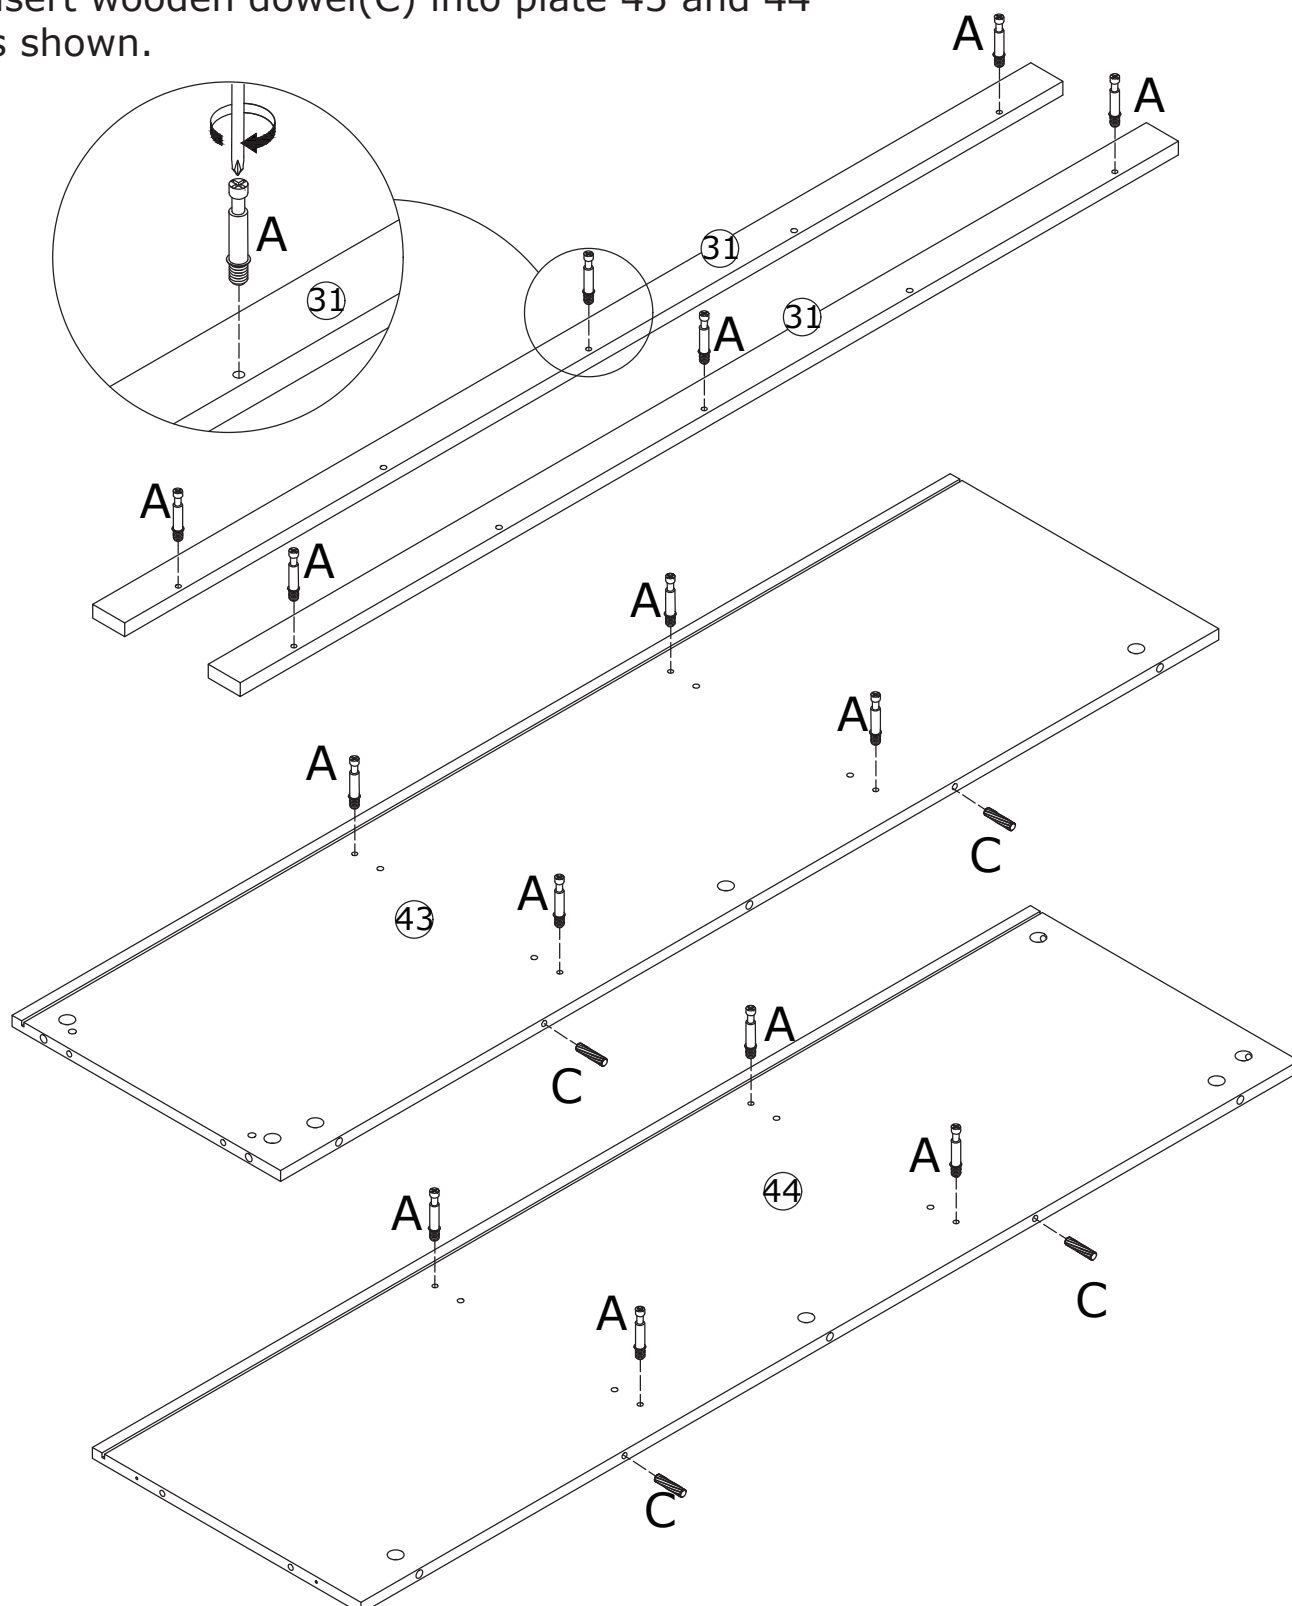

Insert quickfit screw(A) into corresponding holes in plate 43,44 and two plate 31 as shown.
Insert wooden dowel(C) into plate 43 and 44 as shown.

 
 


37




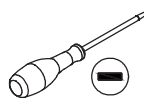
 <p>Bx3 Ø15x10mm</p>	 <p>Cx2 Ø6x30mm</p>	 <p>Hx3 Ø20mm</p>	
---	--	--	---

Attach plate 31 to plate 43, put cam lock(B) into holes in plate 43 and turn clockwise to tighten as shown.

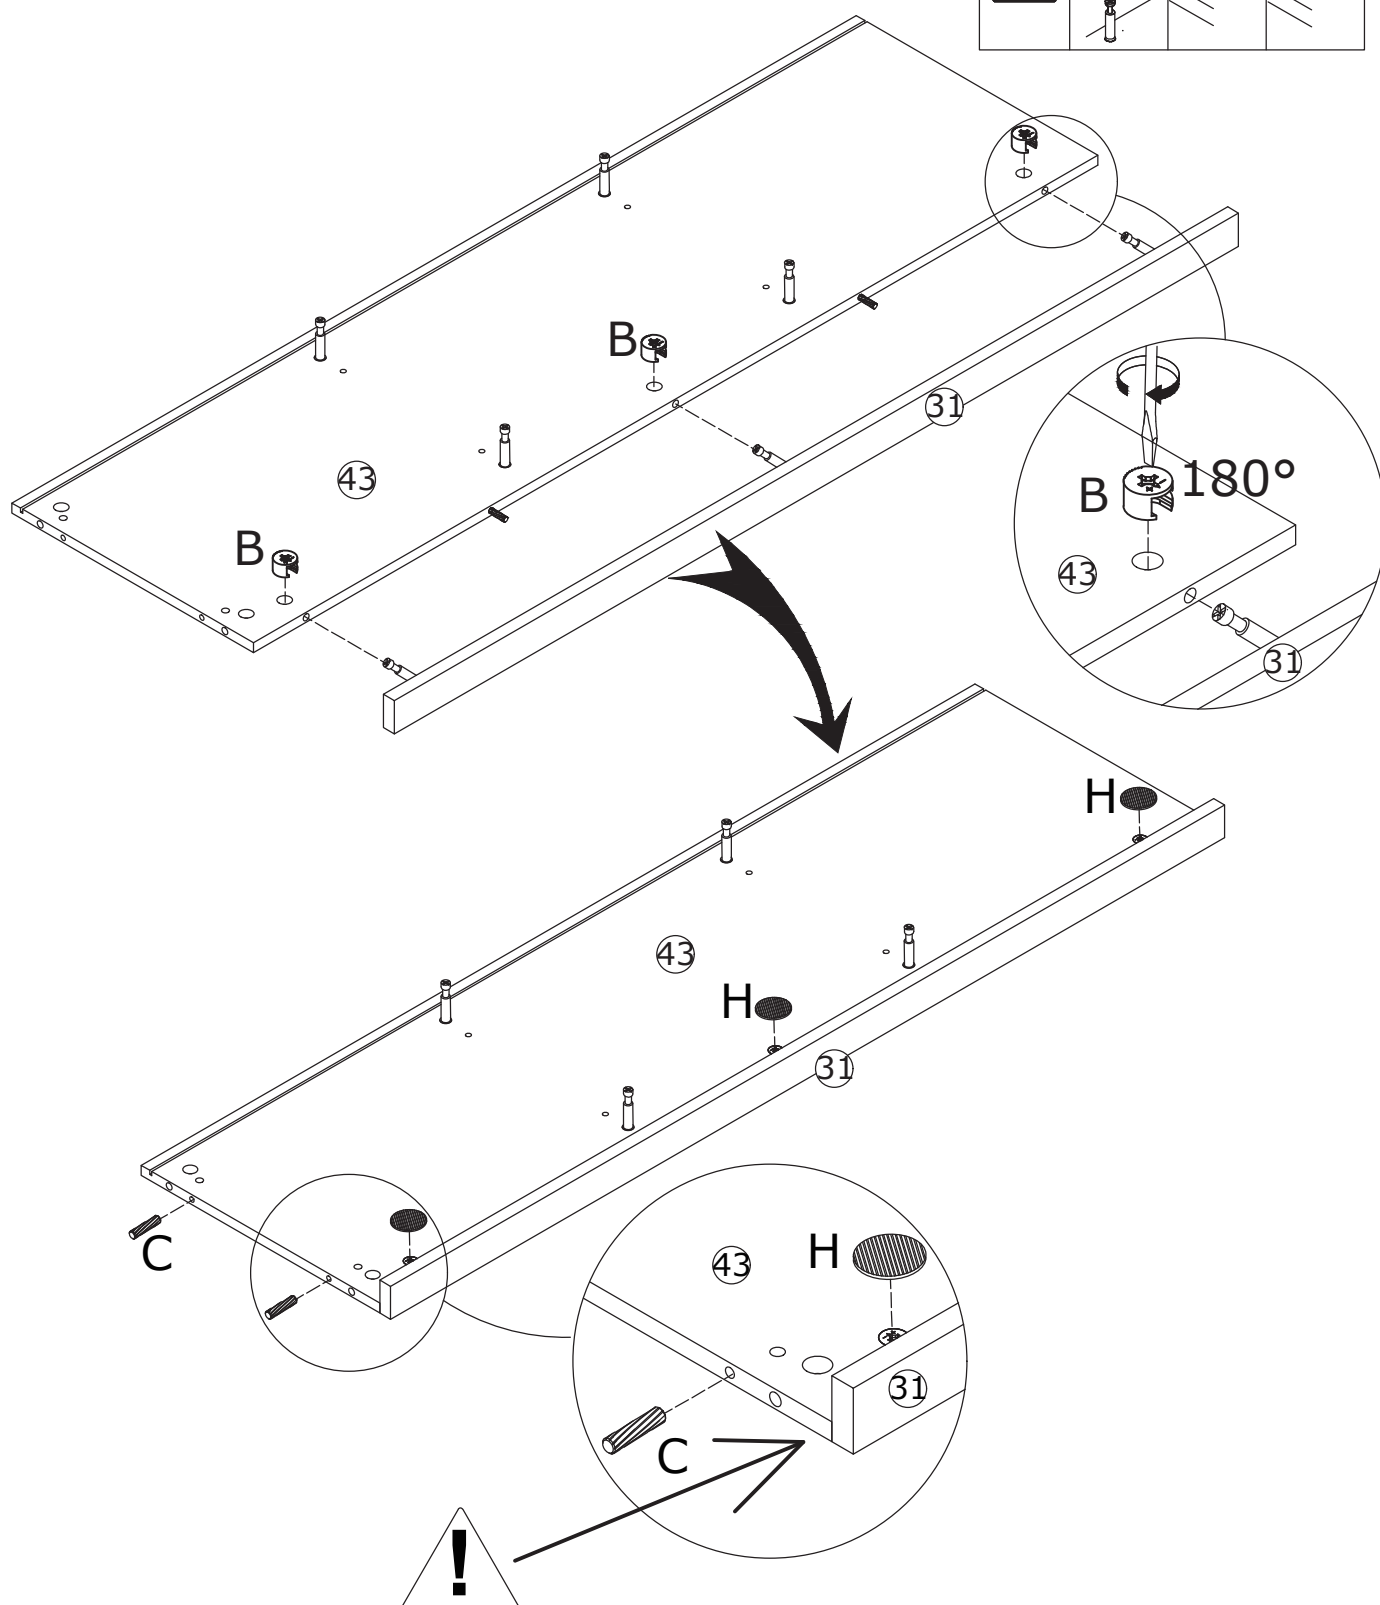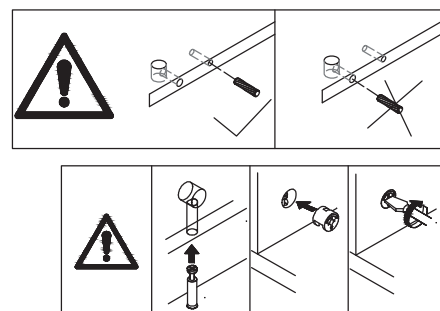Flip the part, stick part(H) to plate 43 as shown.






38



 <p>Bx3 Ø15x10mm</p>	 <p>Cx2 Ø6x30mm</p>	 <p>Hx3 Ø20mm</p>	
---	--	--	---

Attach another plate 31 to plate 44, put cam lock(B) into holes in plate 44 and turn clockwise to tighten as shown.

   Flip the part, stick part(H) to plate 44 as shown.

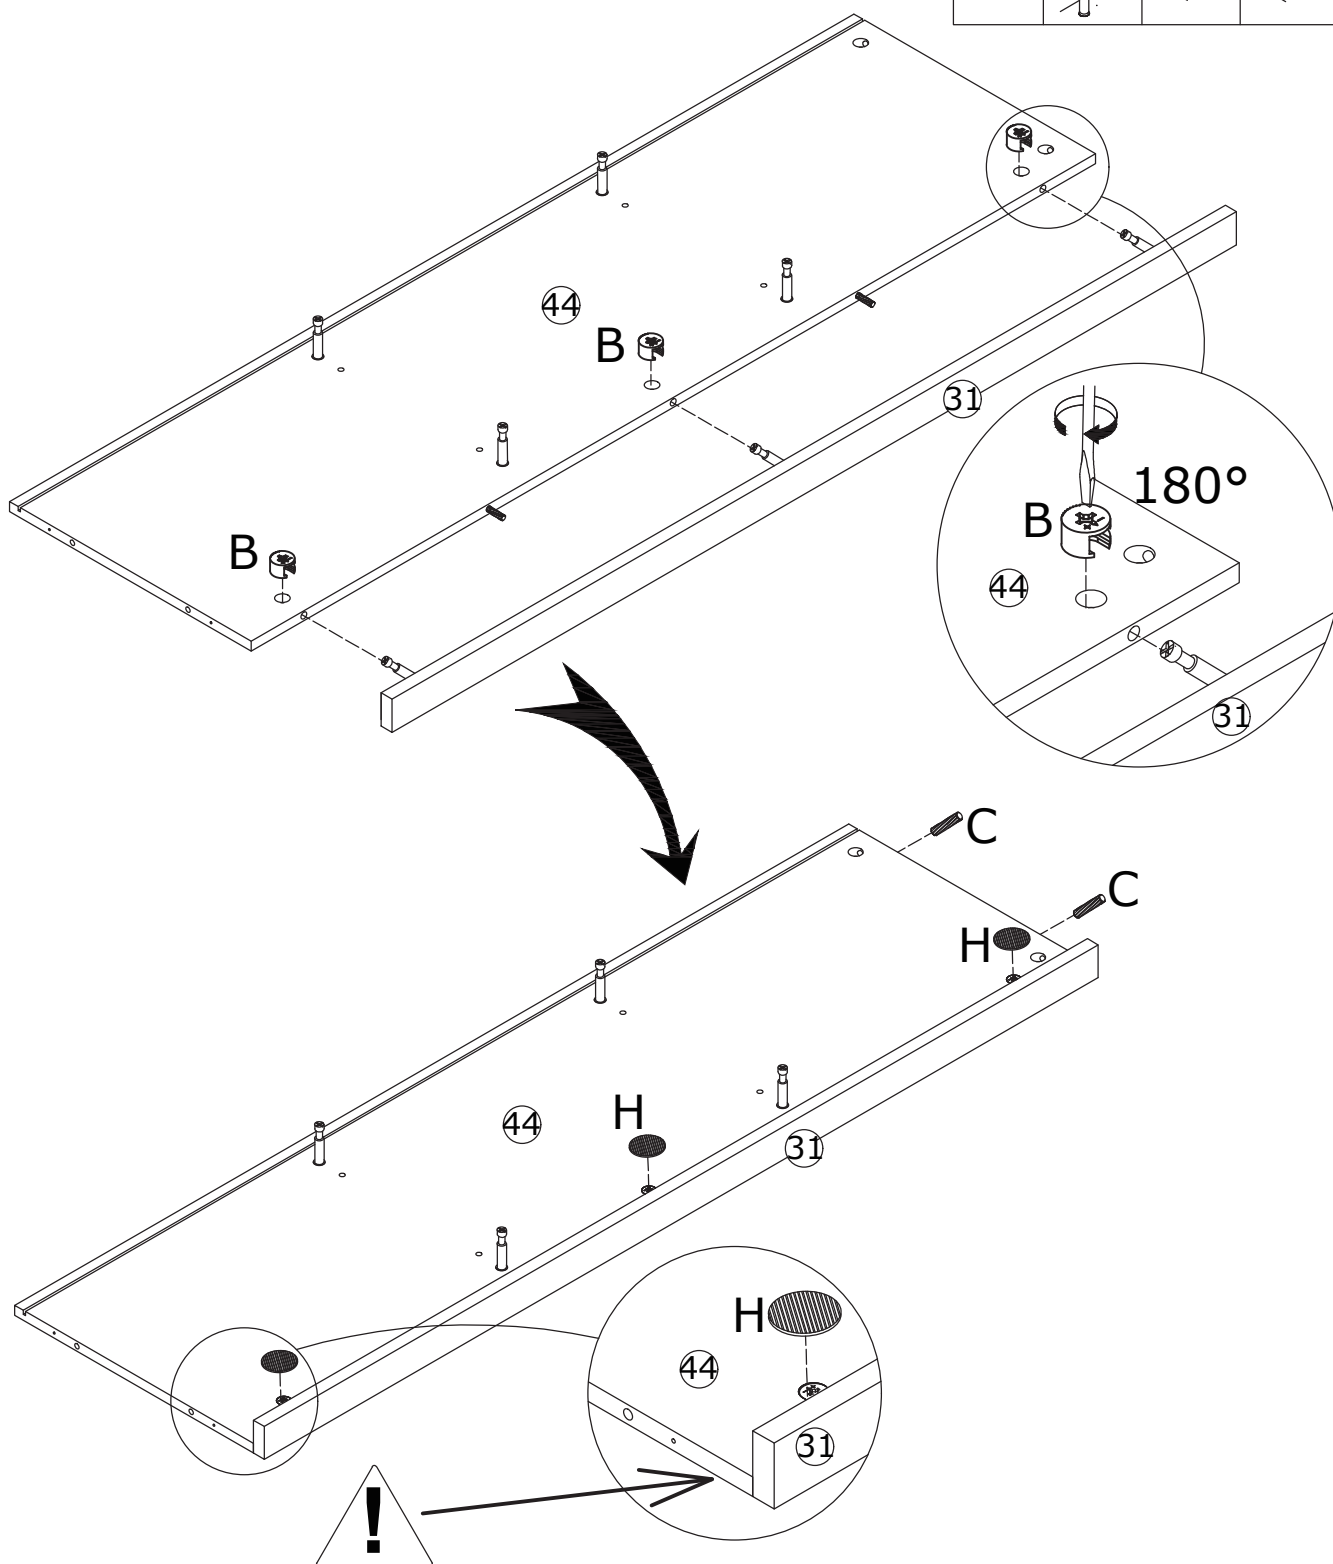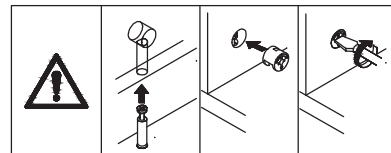
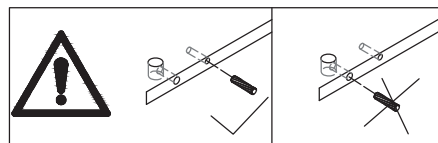


39

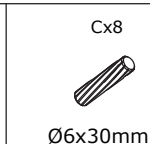 
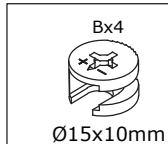 


Insert wooden dowel(C) into two plate 32 as shown.

  Attach plate 32 to plate 44, put cam lock(B) into holes in plate 32 and turn clockwise to tighten as shown.

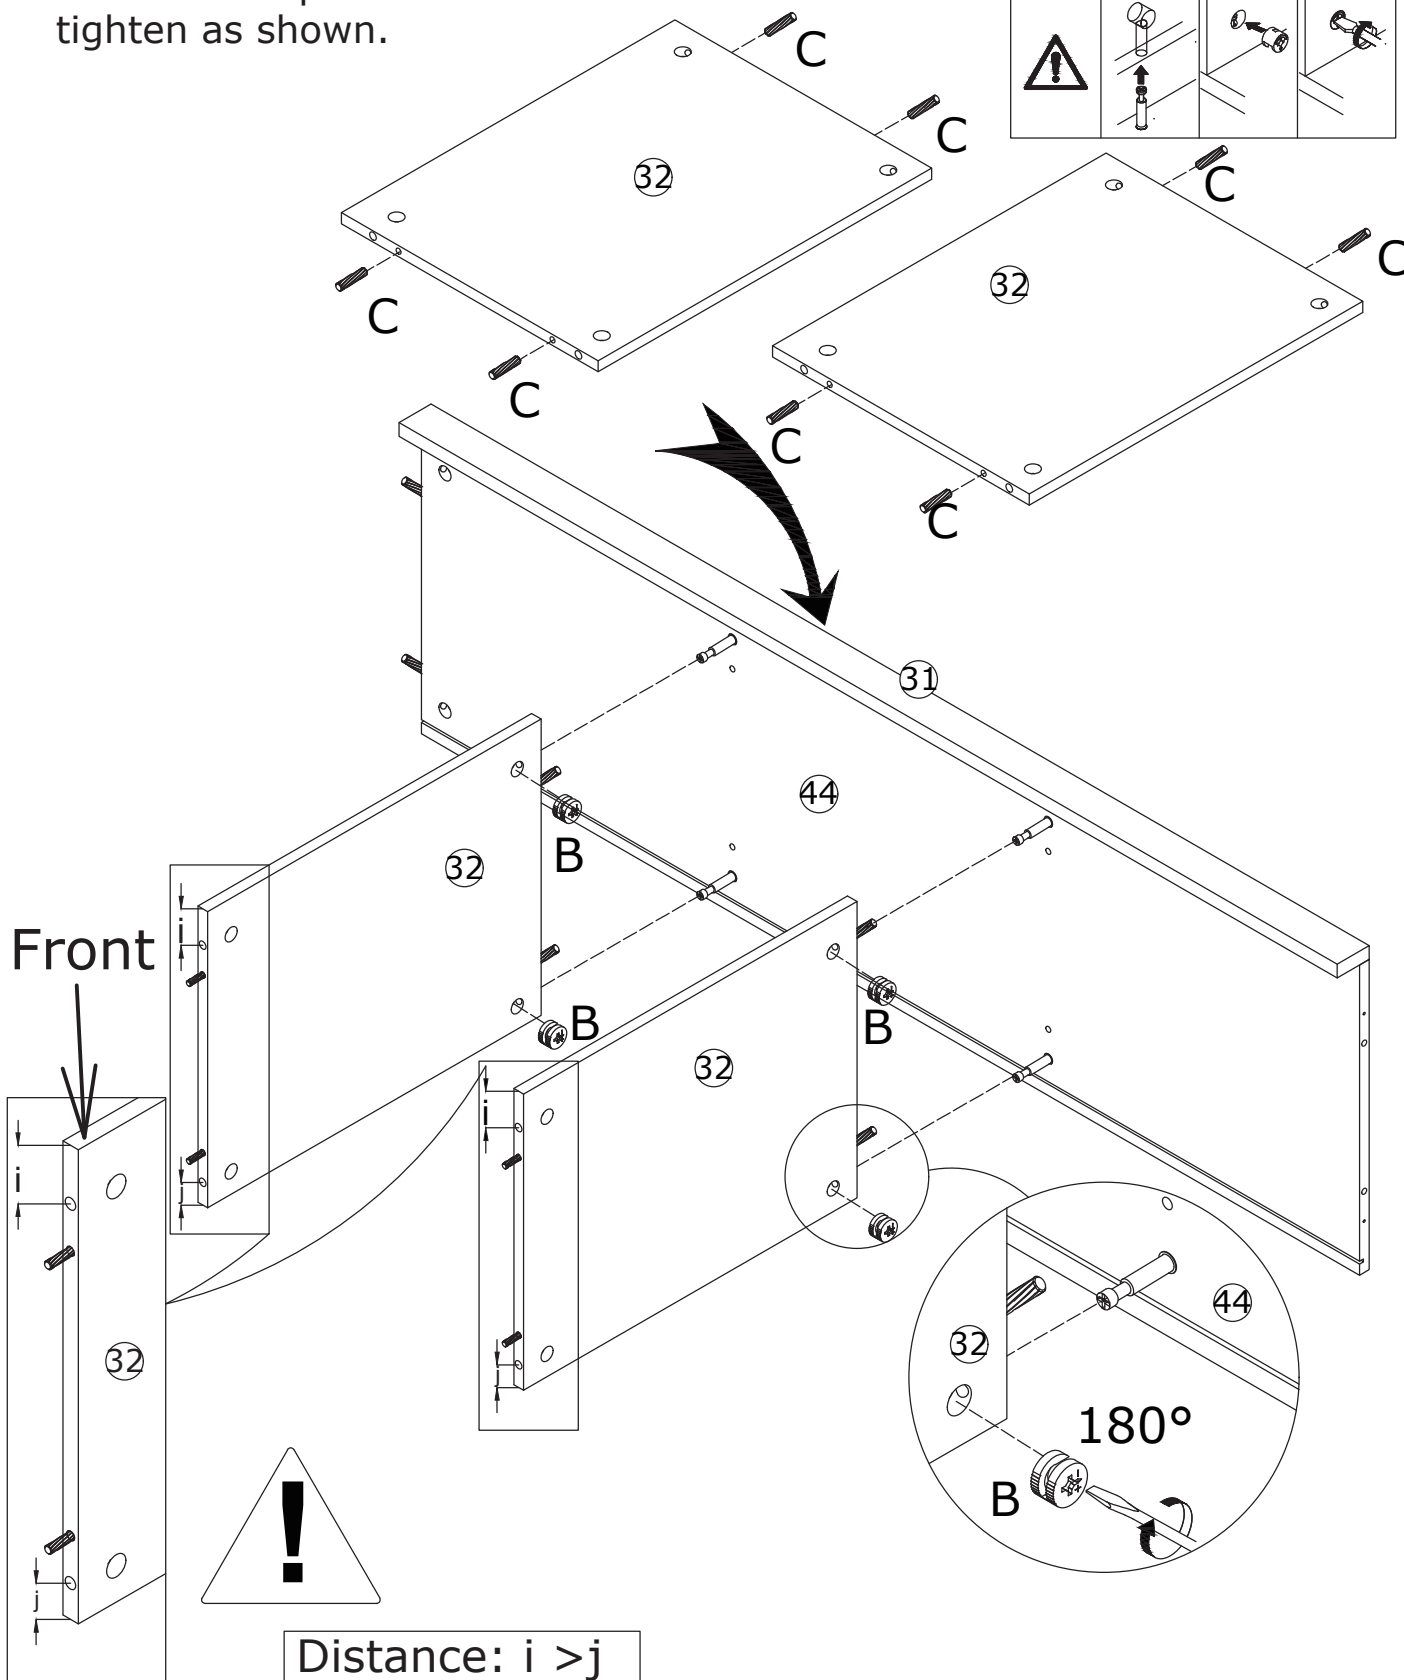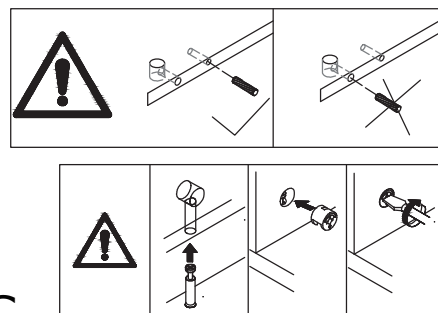



40

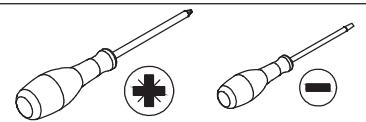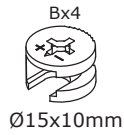  

Attach plate 43 to plate 32, put cam lock(B) into holes in plate 32 and turn clockwise to tighten as shown.

Attach plate 28 to plate 42 using wooden dowel(C) and fix with screw(M) as shown.

 
 
Insert quickfit screw(A) into corresponding holes in two plate 42 as shown.

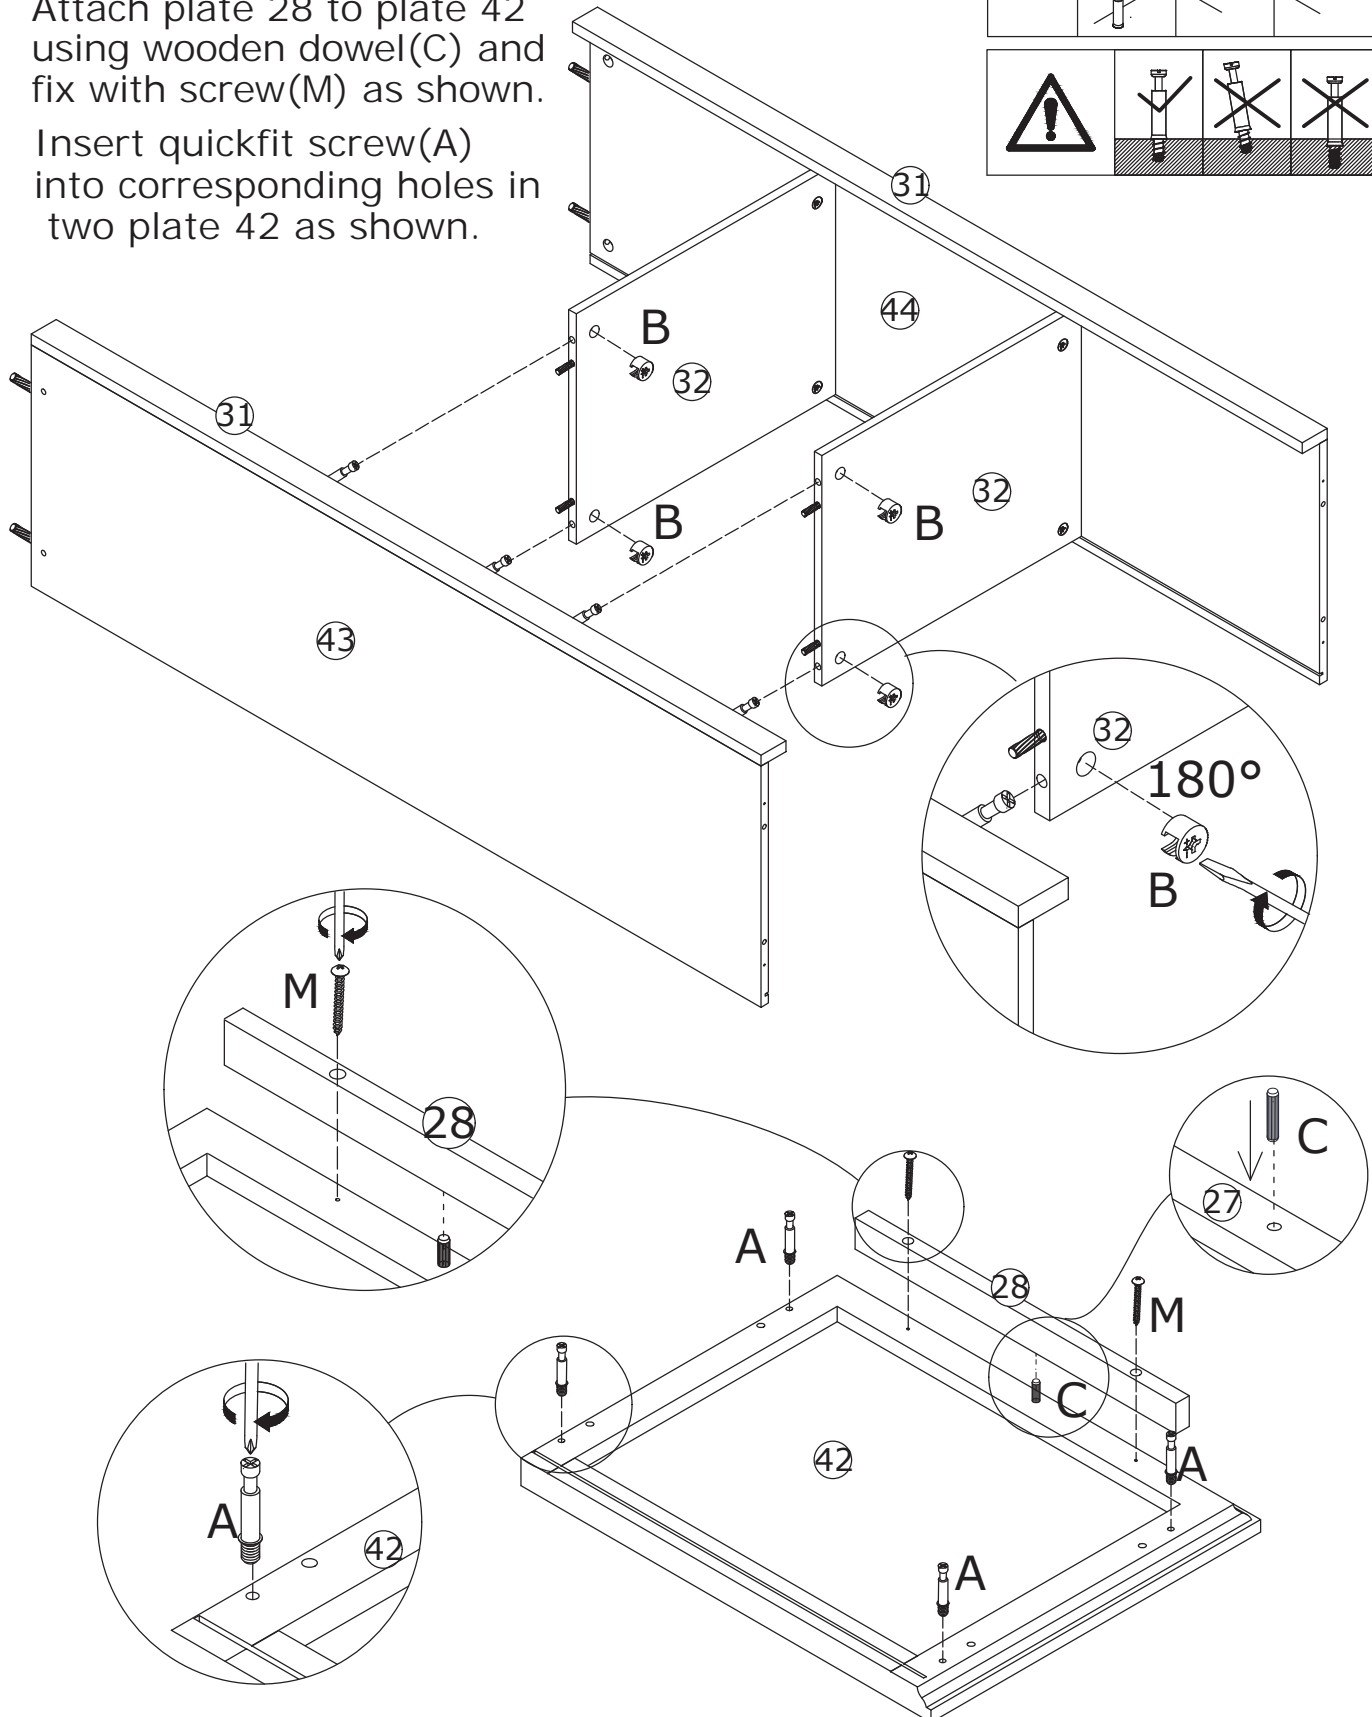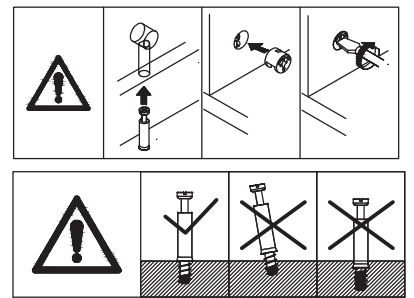

41



  
Cover plate 42 to plate 43 and 44, put cam lock(B) into holes in plate 43,44 and turn clockwise to tighten as shown.
Stick part(H) to plate 43 and 44 as shown.

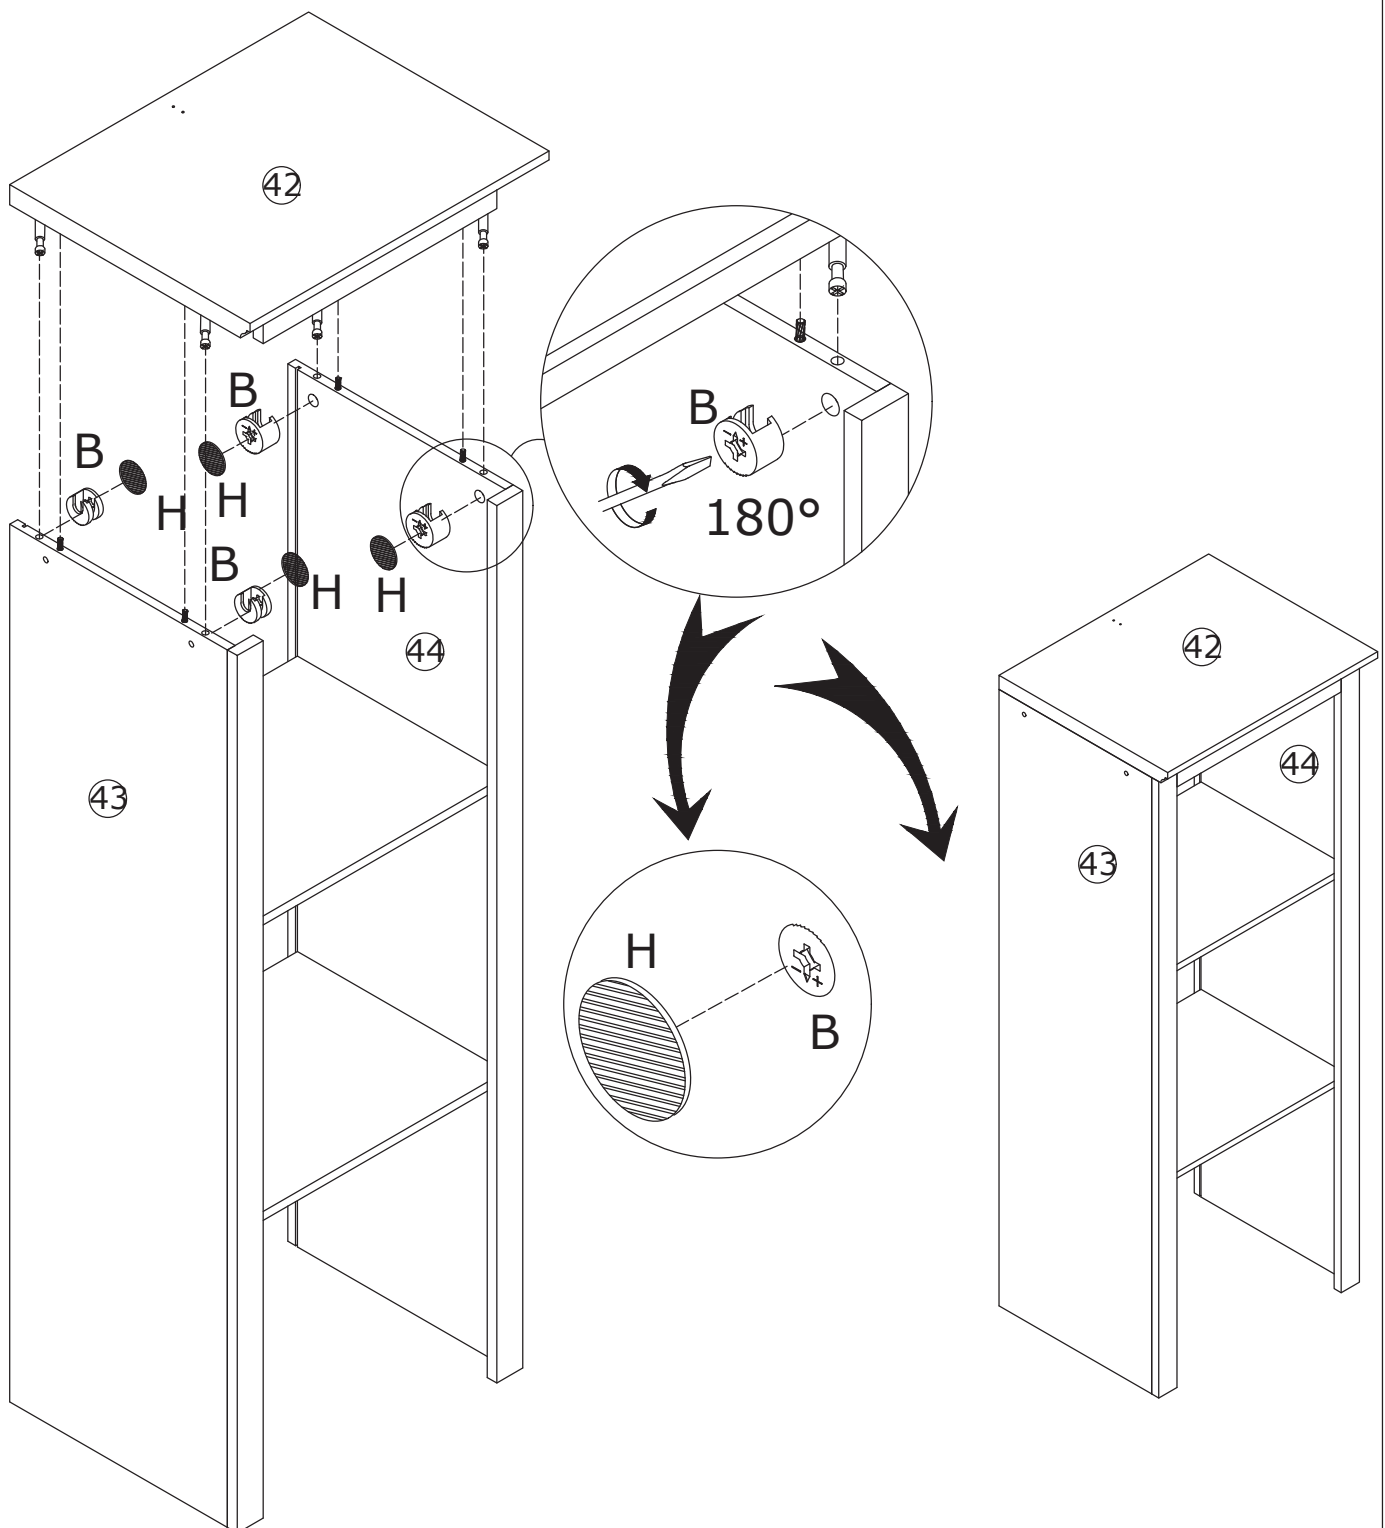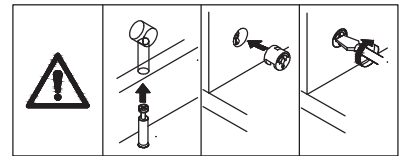


42



 Slide back plate 33 along grooves as shown.
Insert wooden dowel(C) into plate 43 and 44 as shown.

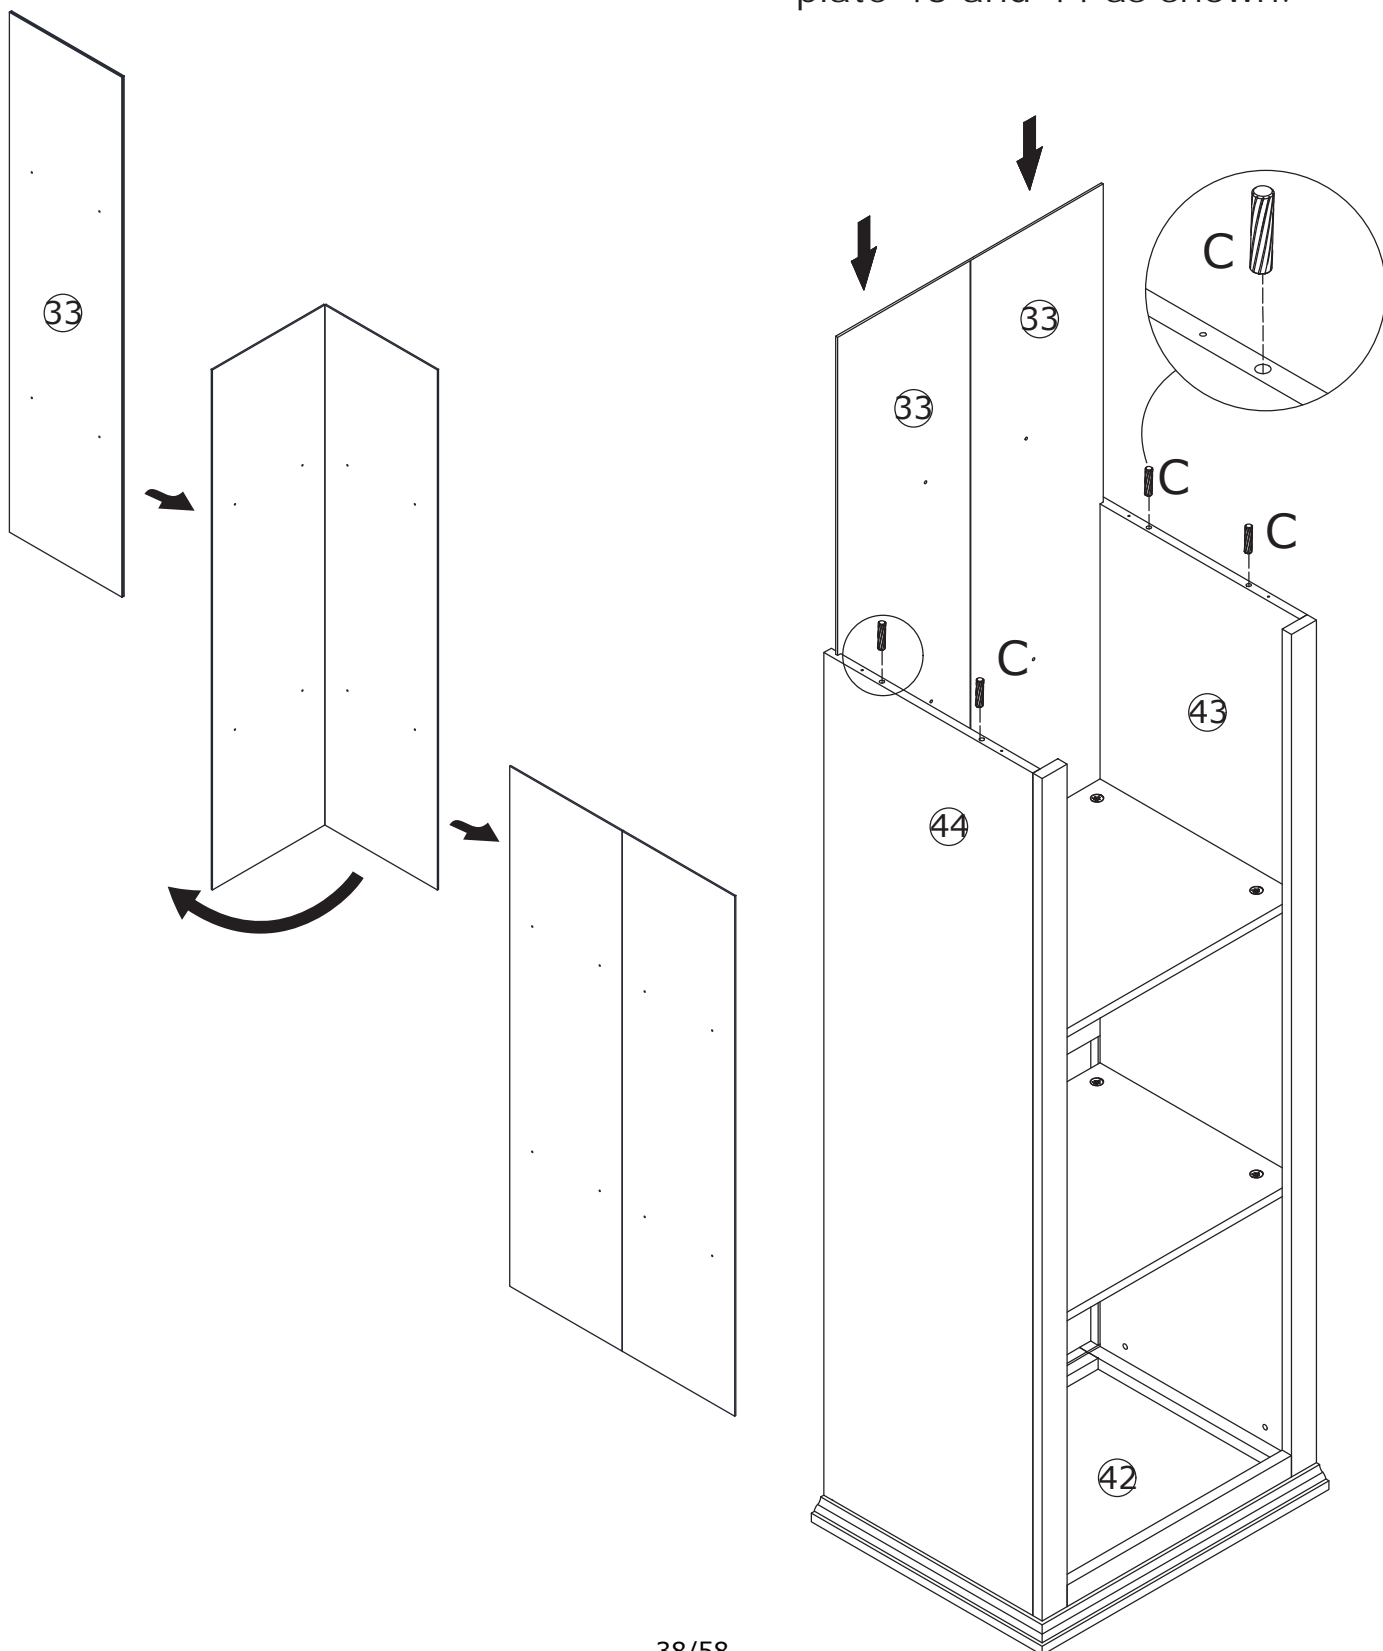



43

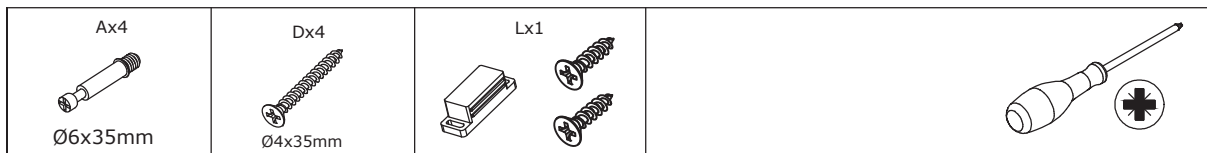 



Insert quickfit screw(A) into corresponding holes in plate 45 as shown.

Fix part(L) to plate 45 as shown.

 
 
Fix plate 45 to plate 43 and 44 using screw(D) as shown.

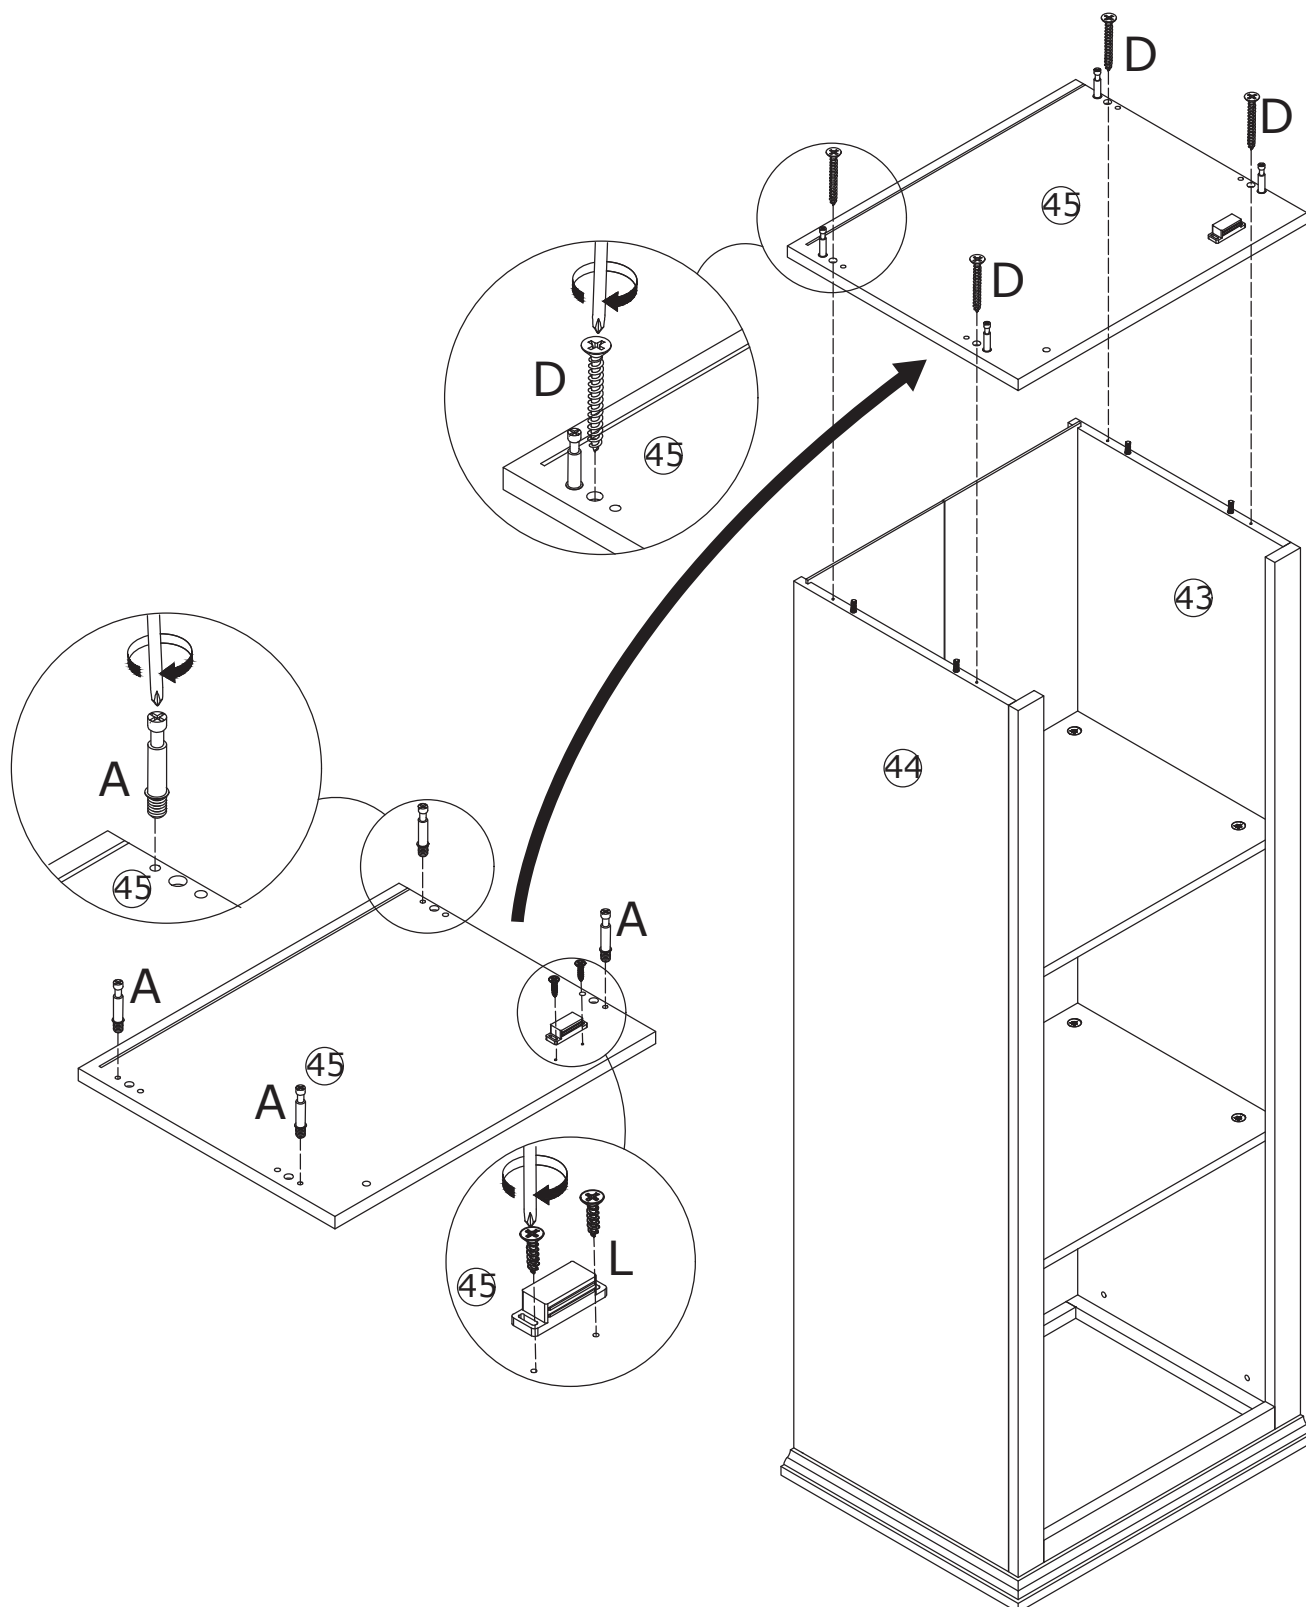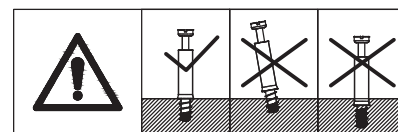

44

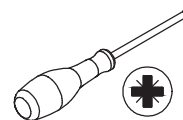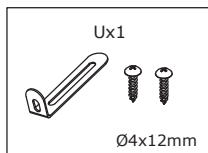  



Fix part(U) to plate 42 as shown.

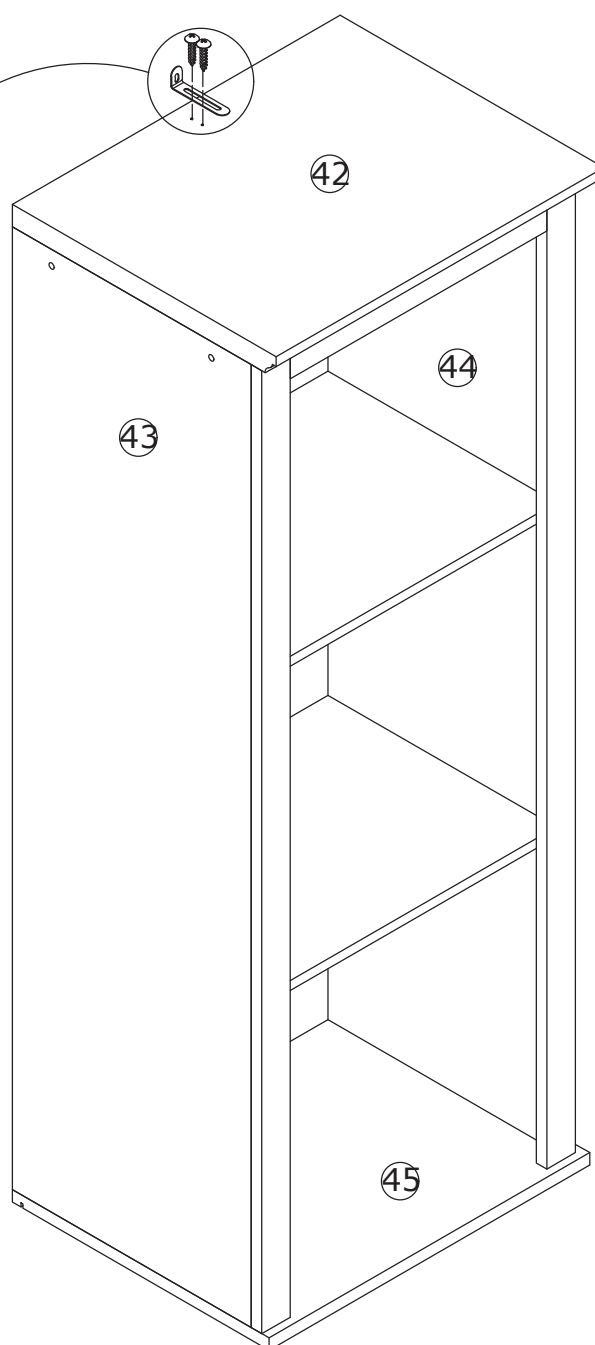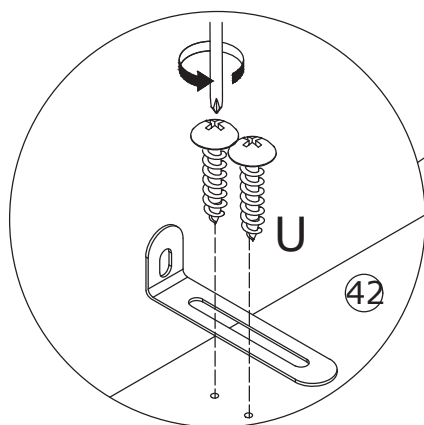  

45



Bx4
Ø15x10mm

  Hx4
Ø20mm

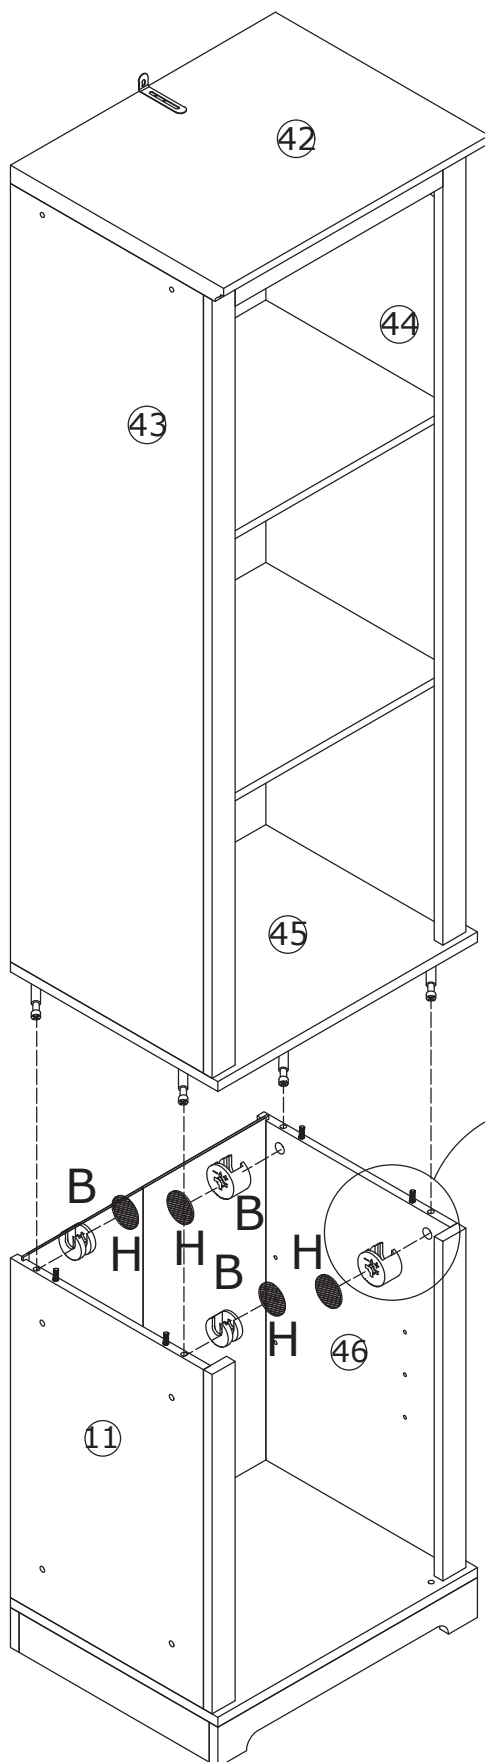
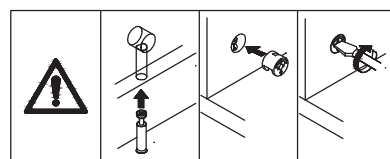


Connect the two components together, put cam lock(B) into holes in plate 11,46 and turn clockwise to tighten as shown.

  
Stick part(H) to plate 11 and 46 as shown.

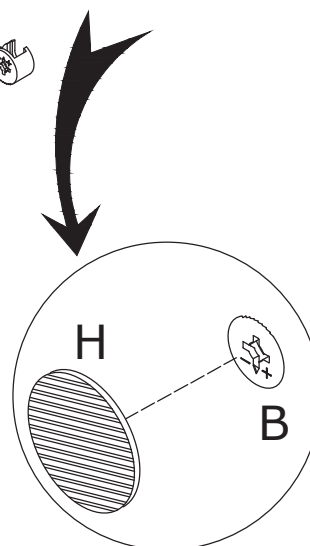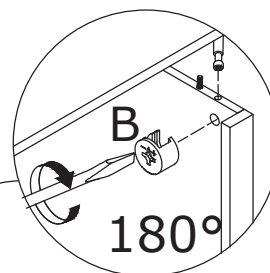

46

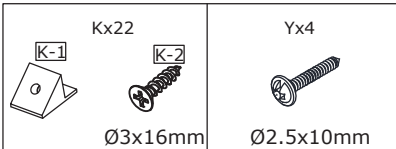  

 Insert buckle(K-1) into back slots and fix with screw(K-2) as shown.
Fix back plate to the unit with screw(Y) as shown.




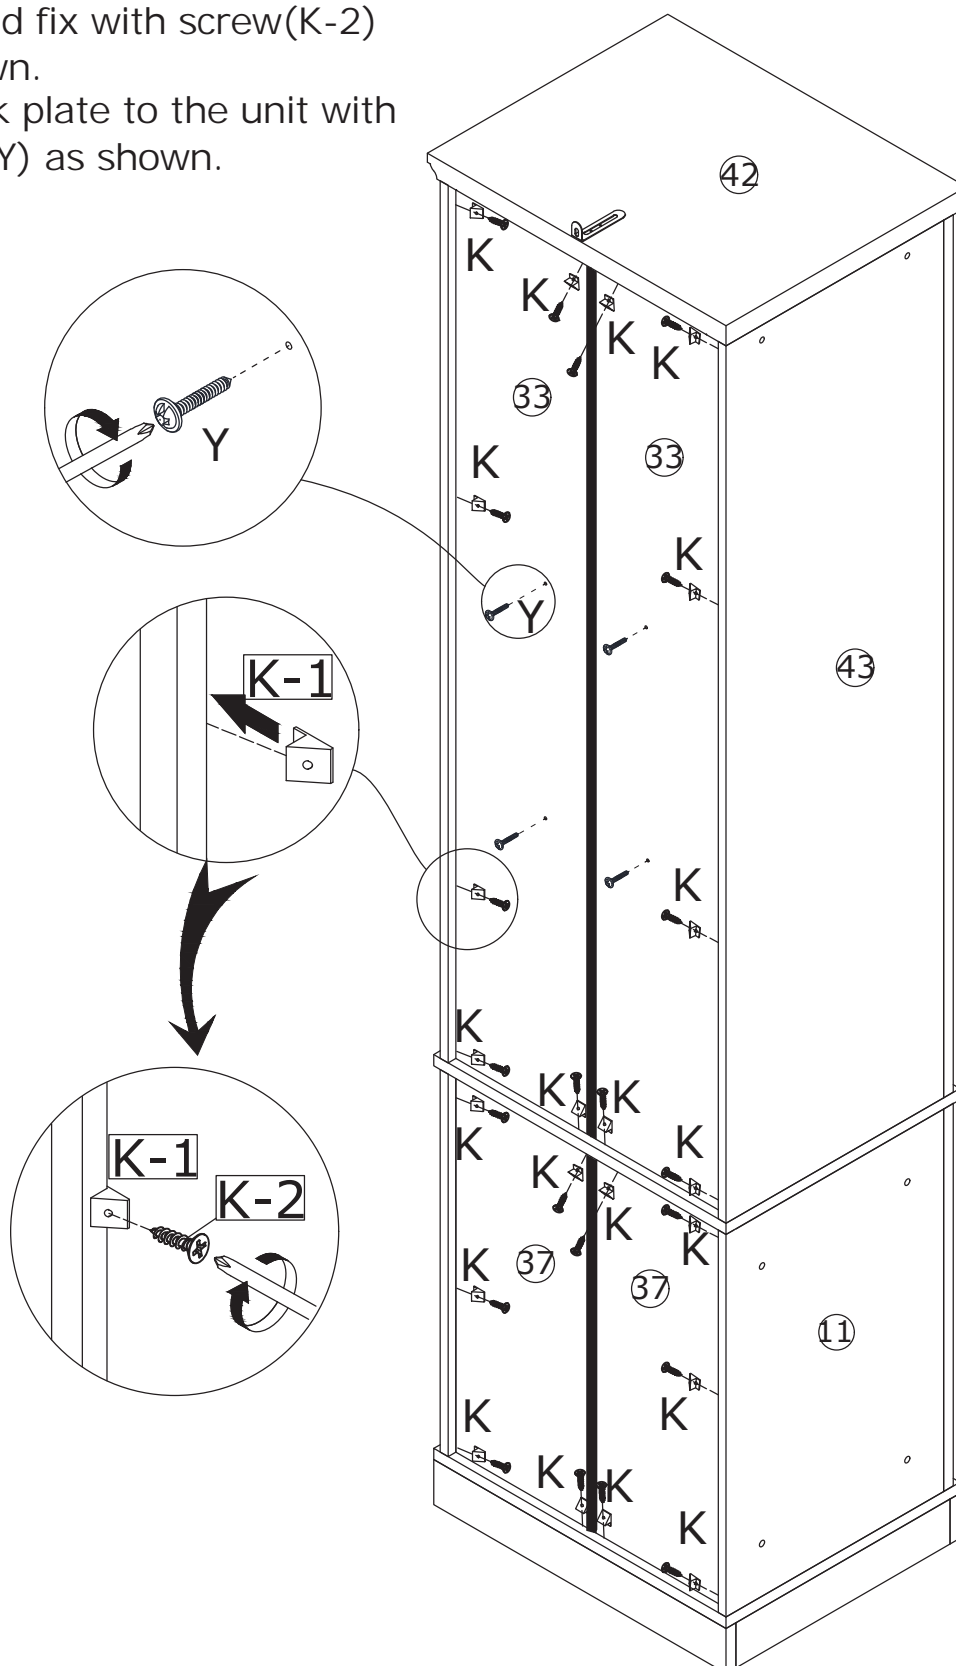


47

Jx4



    Insert part(J) into corresponding holes in plate 11 and 46, place shelf 48 in as shown.

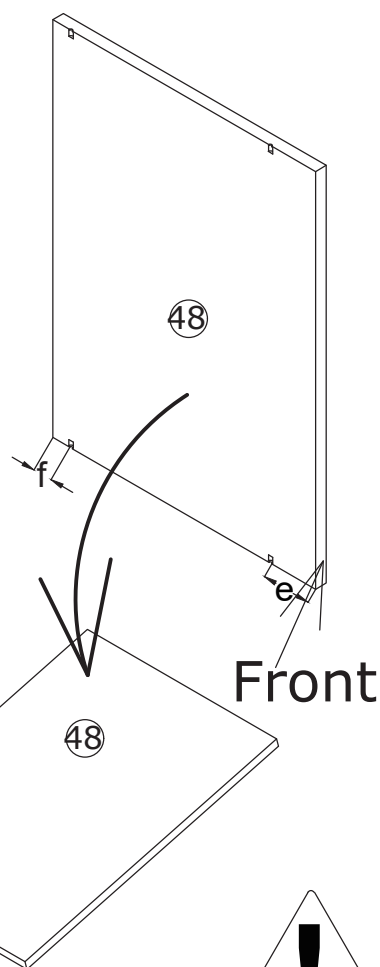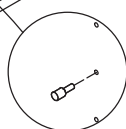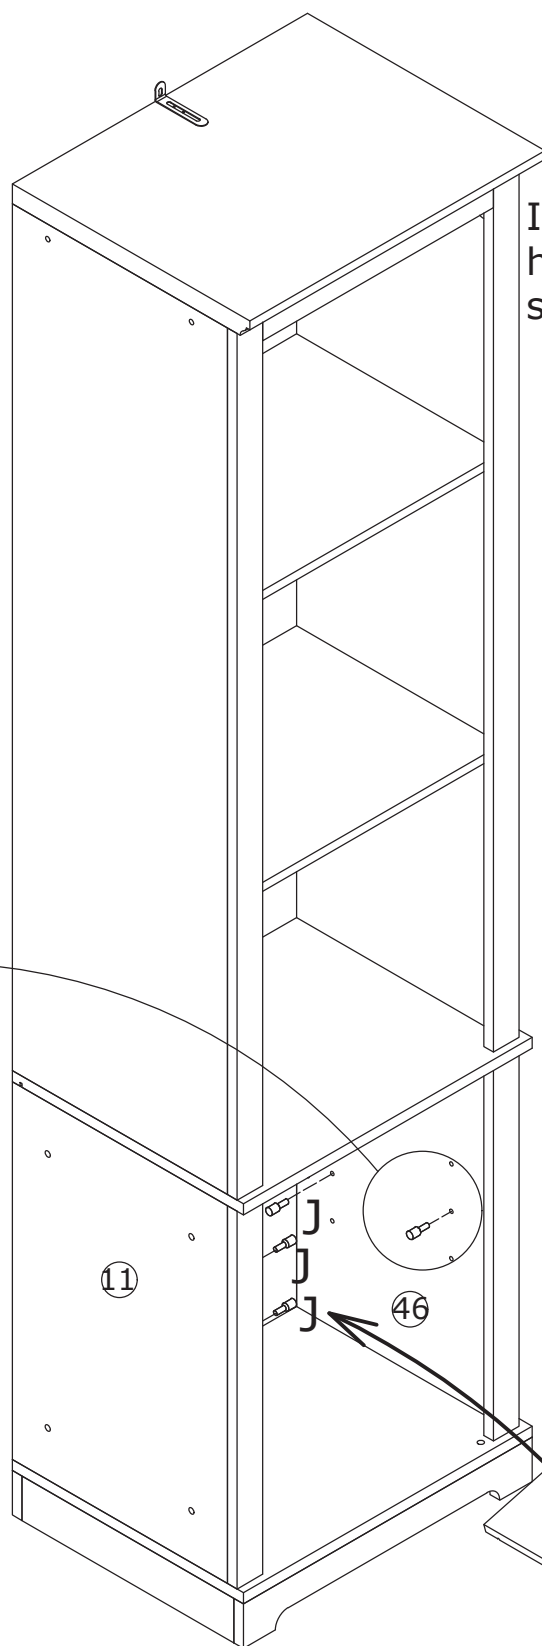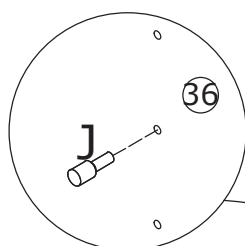

Distance: $e > f$

48



Ex2




Fx1




  Gx1


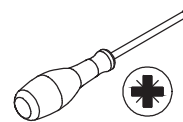



  
Insert part(E) into plate 25 as shown.
Fix part(G) and knob(F) to plate 25 as shown.

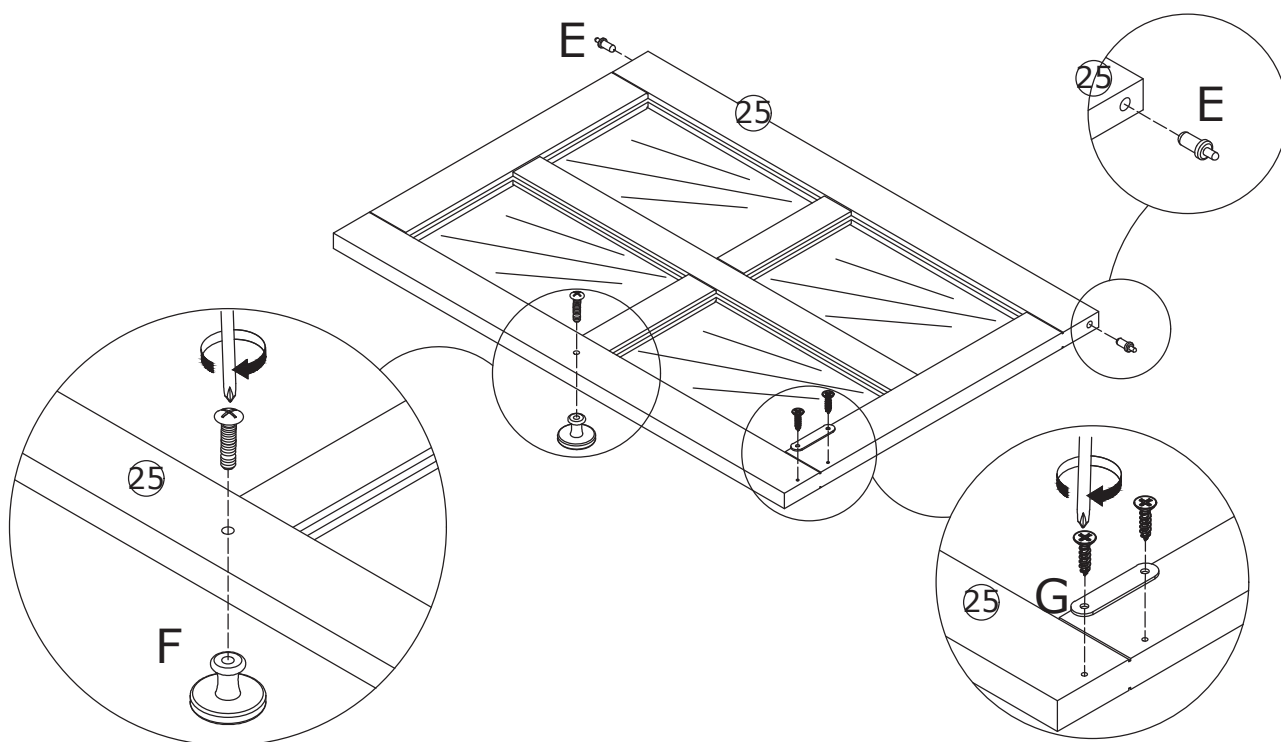

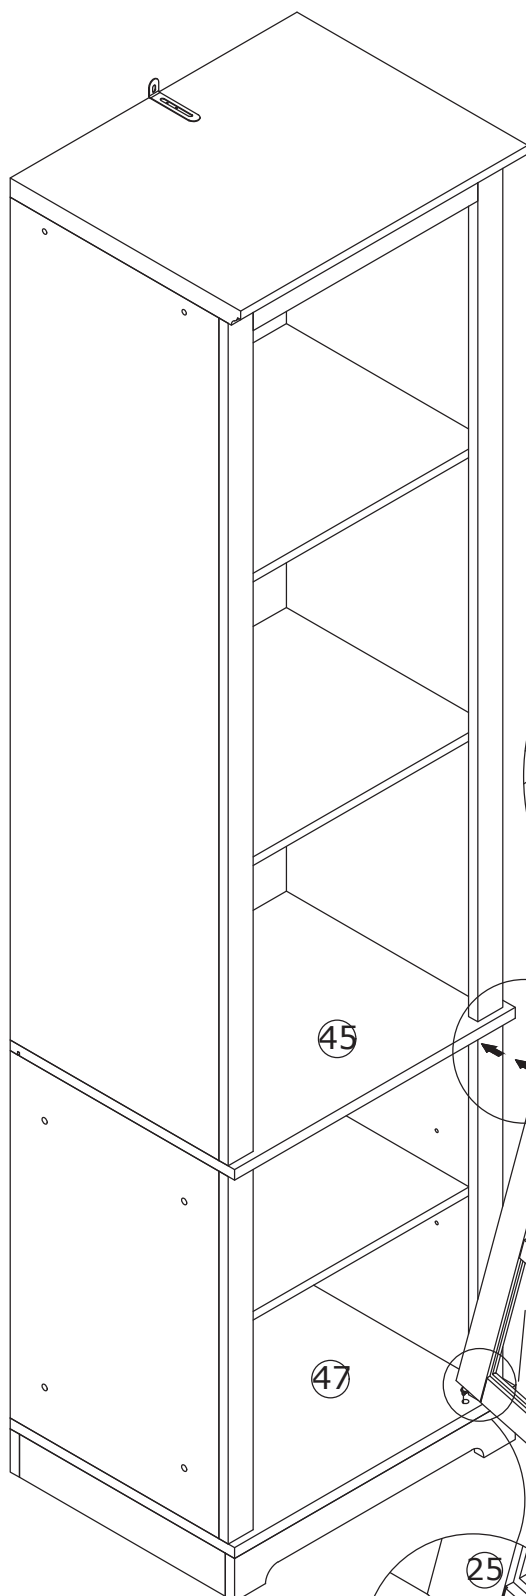

Assembled the door plate
as shown.

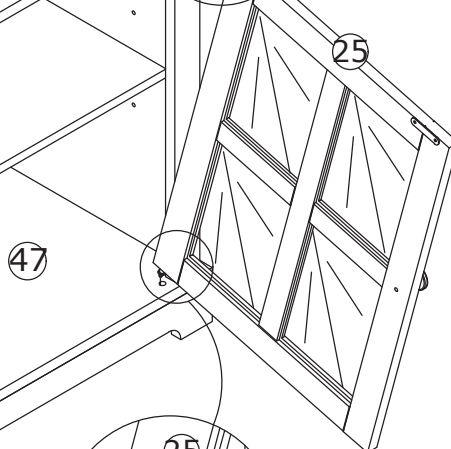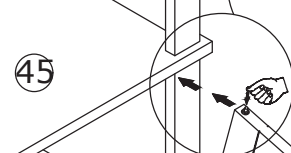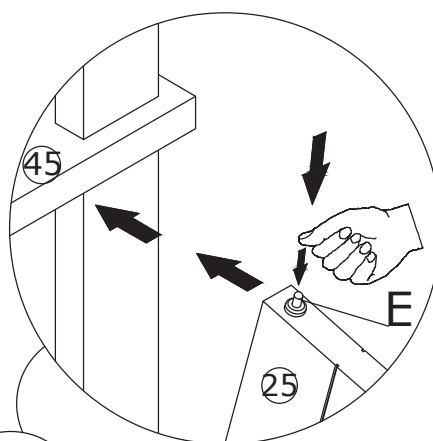   


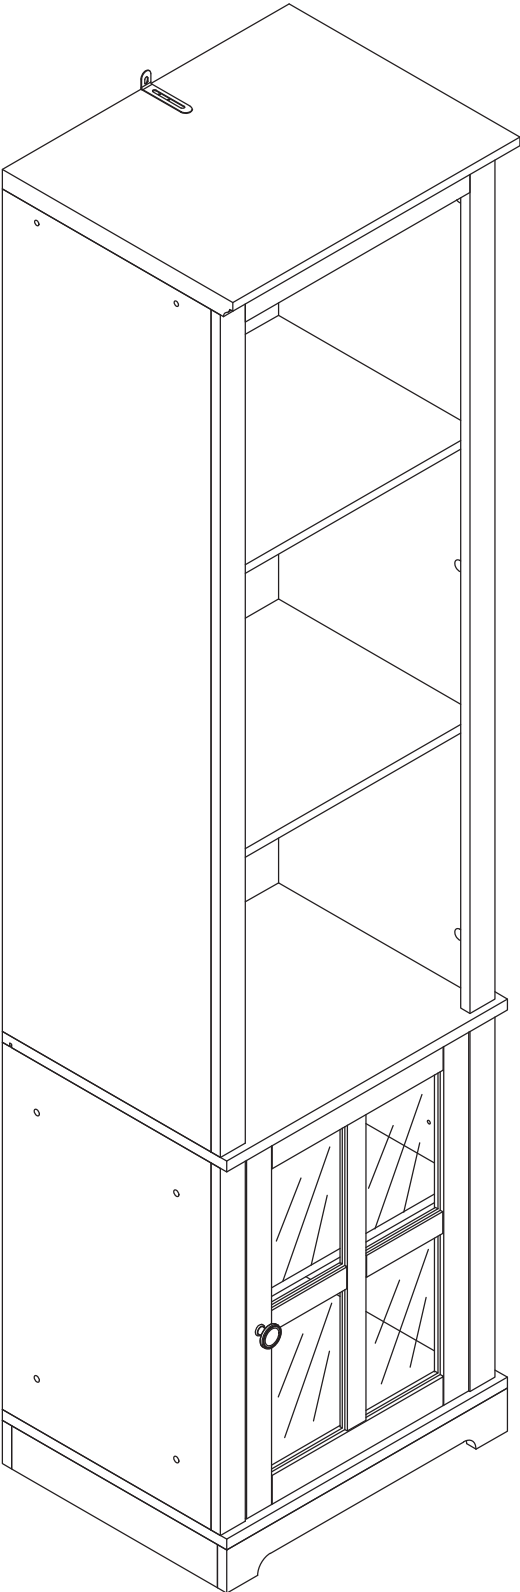 


51

If there are only two high cabinets, please follow the figure below

 Left high cabinet

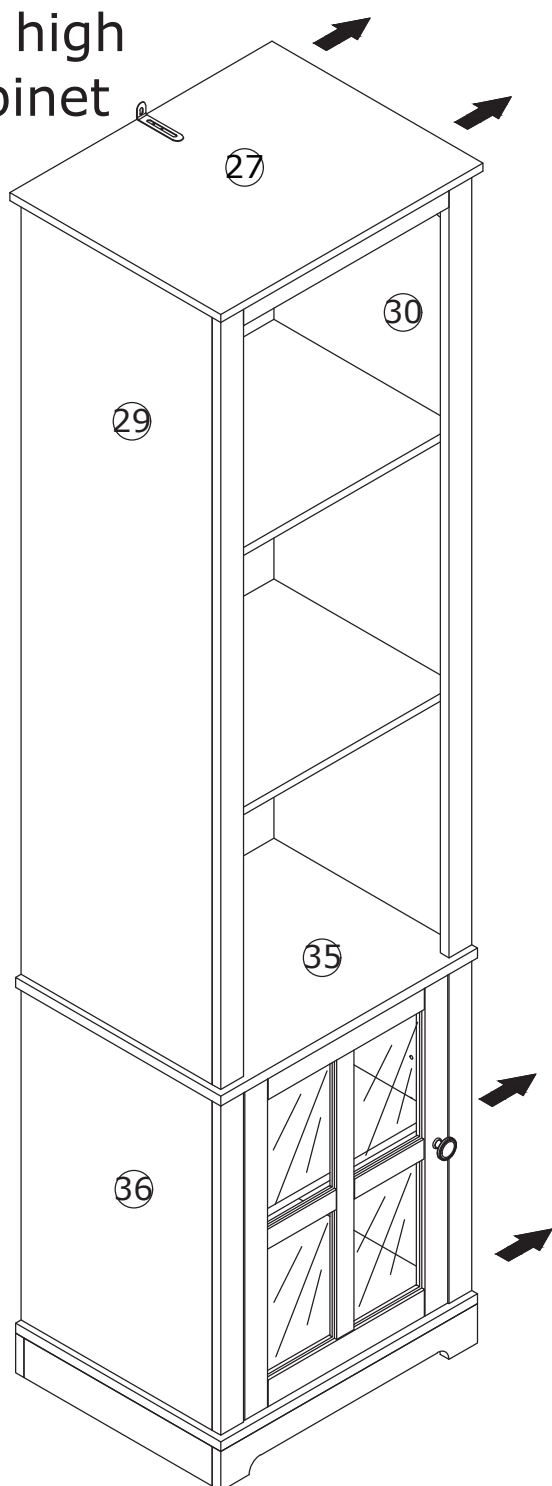



Right high cabinet

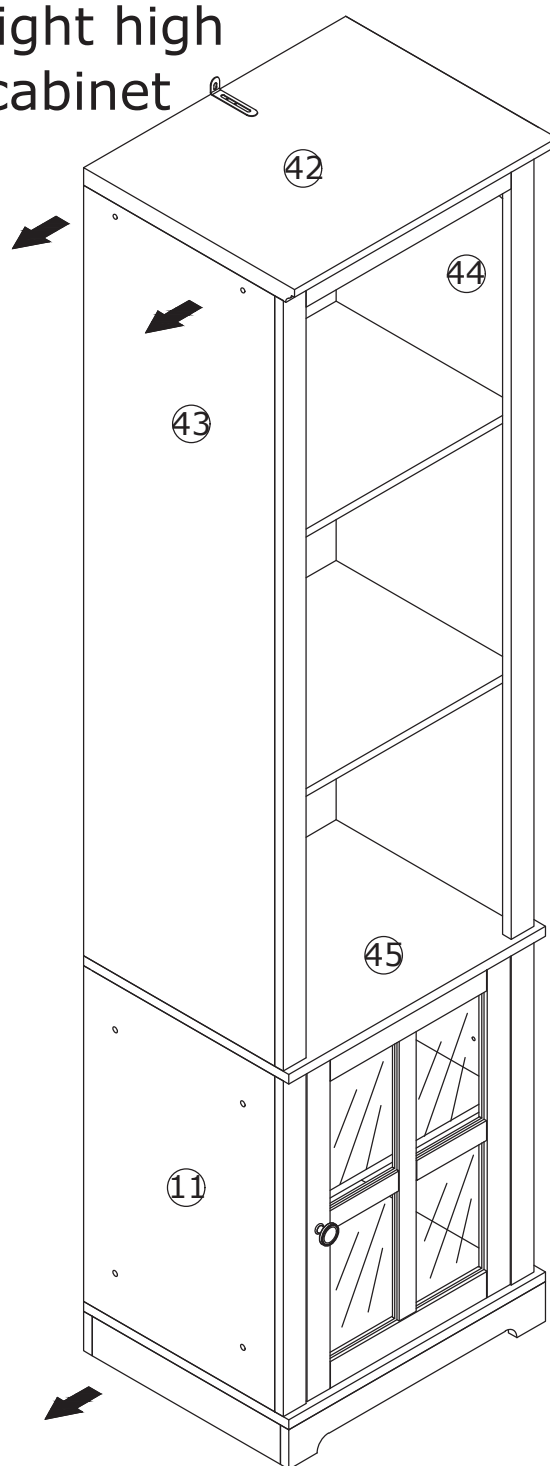 

52

<p>Wx6</p>  <p>Ø6x18mm</p>	<p>Xx6</p>  <p>Ø6x18mm</p>	
---	---	---




 
 
Fix them together using hardware pack(W,X) as shown.

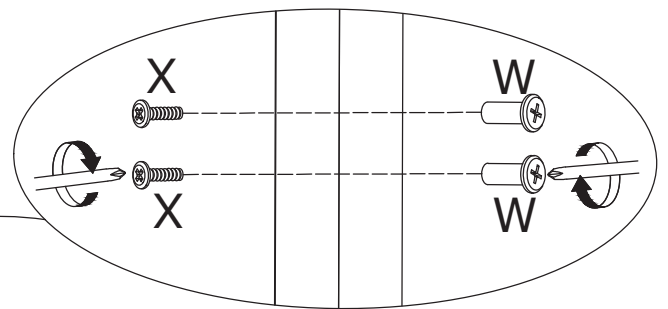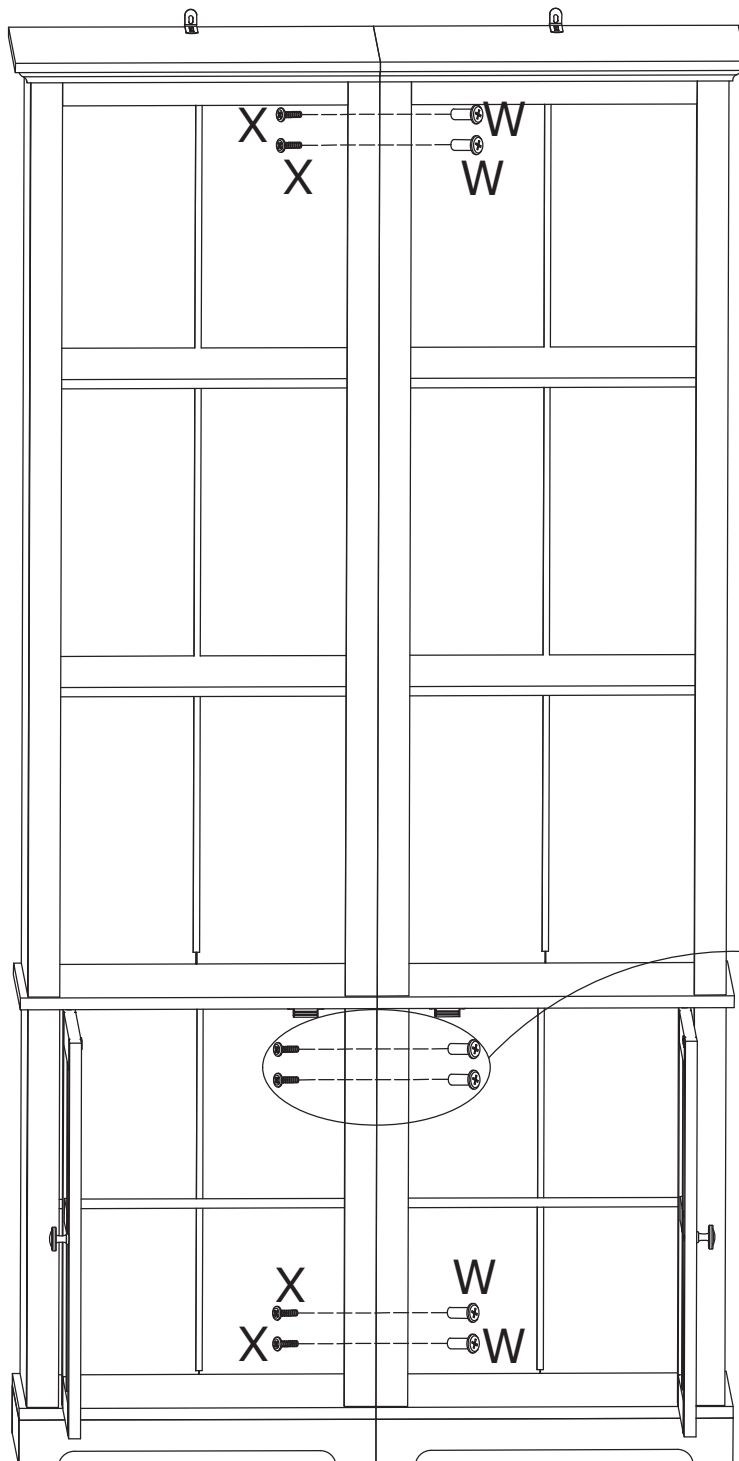



53

Dx2
Ø4x35mm

     Vx2
Ø6x30mm

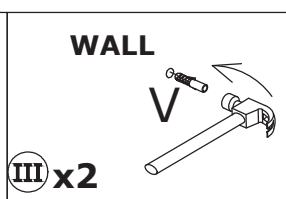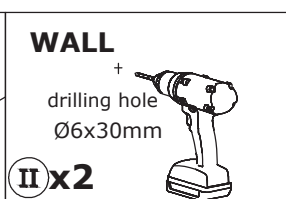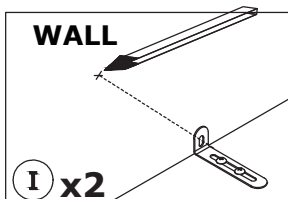


  Drill holes on wall. Knock part(V) into holes.
Fix the cabinet to part(V) on wall through
hardware pack(D) as shown.

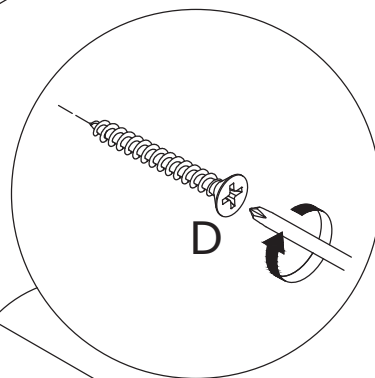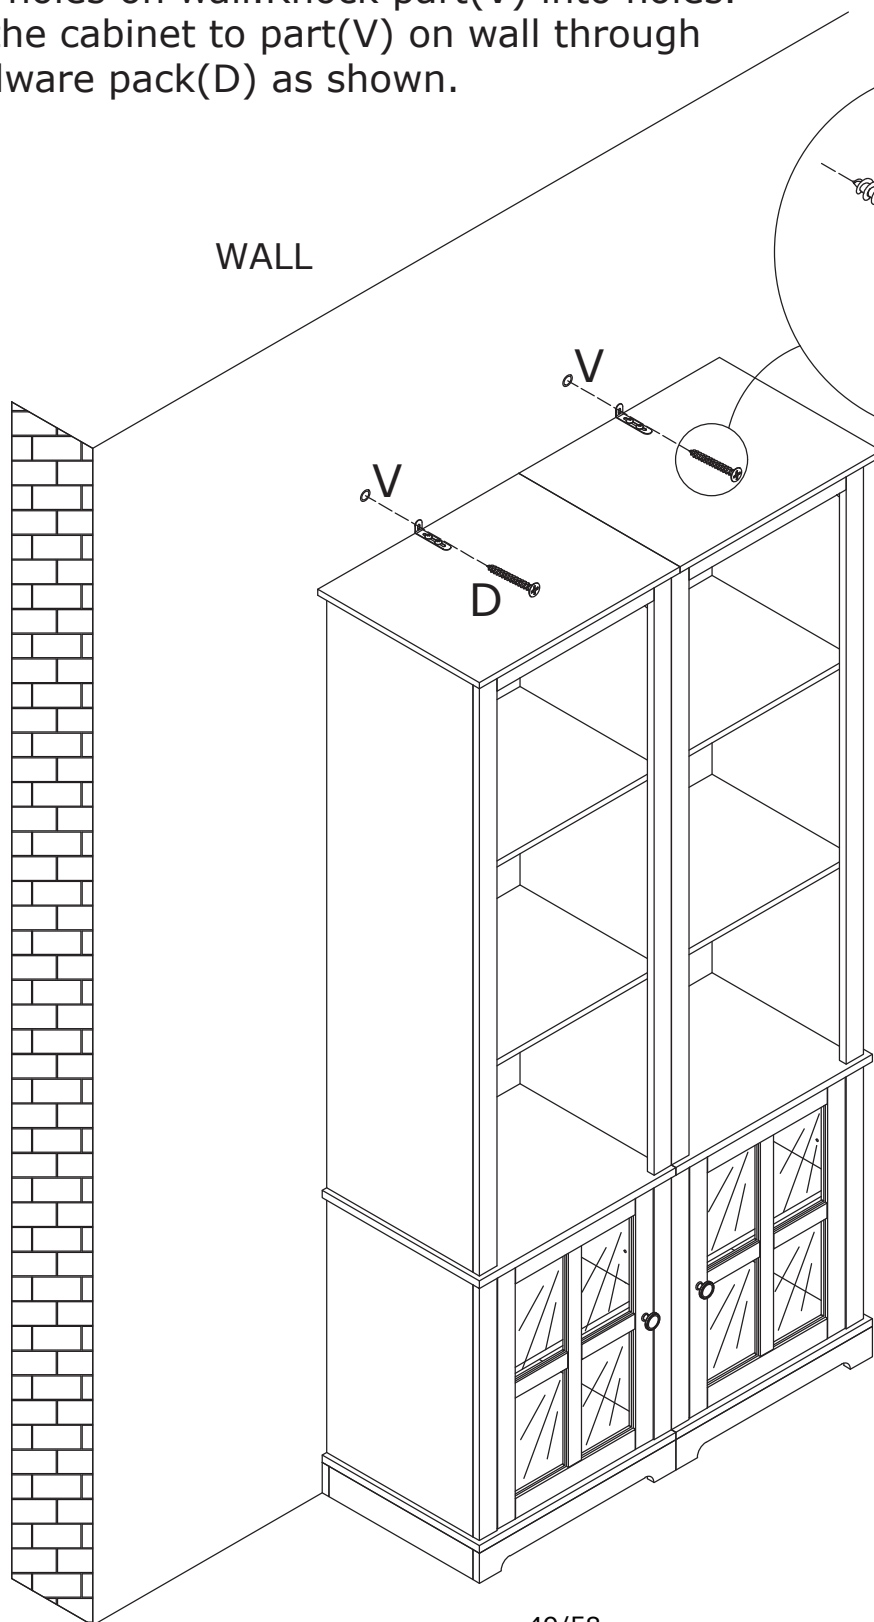

54

 
If there are left and right high cabinets,
hanging cabinets and TV cabinets, please
install them as shown in the figure below.

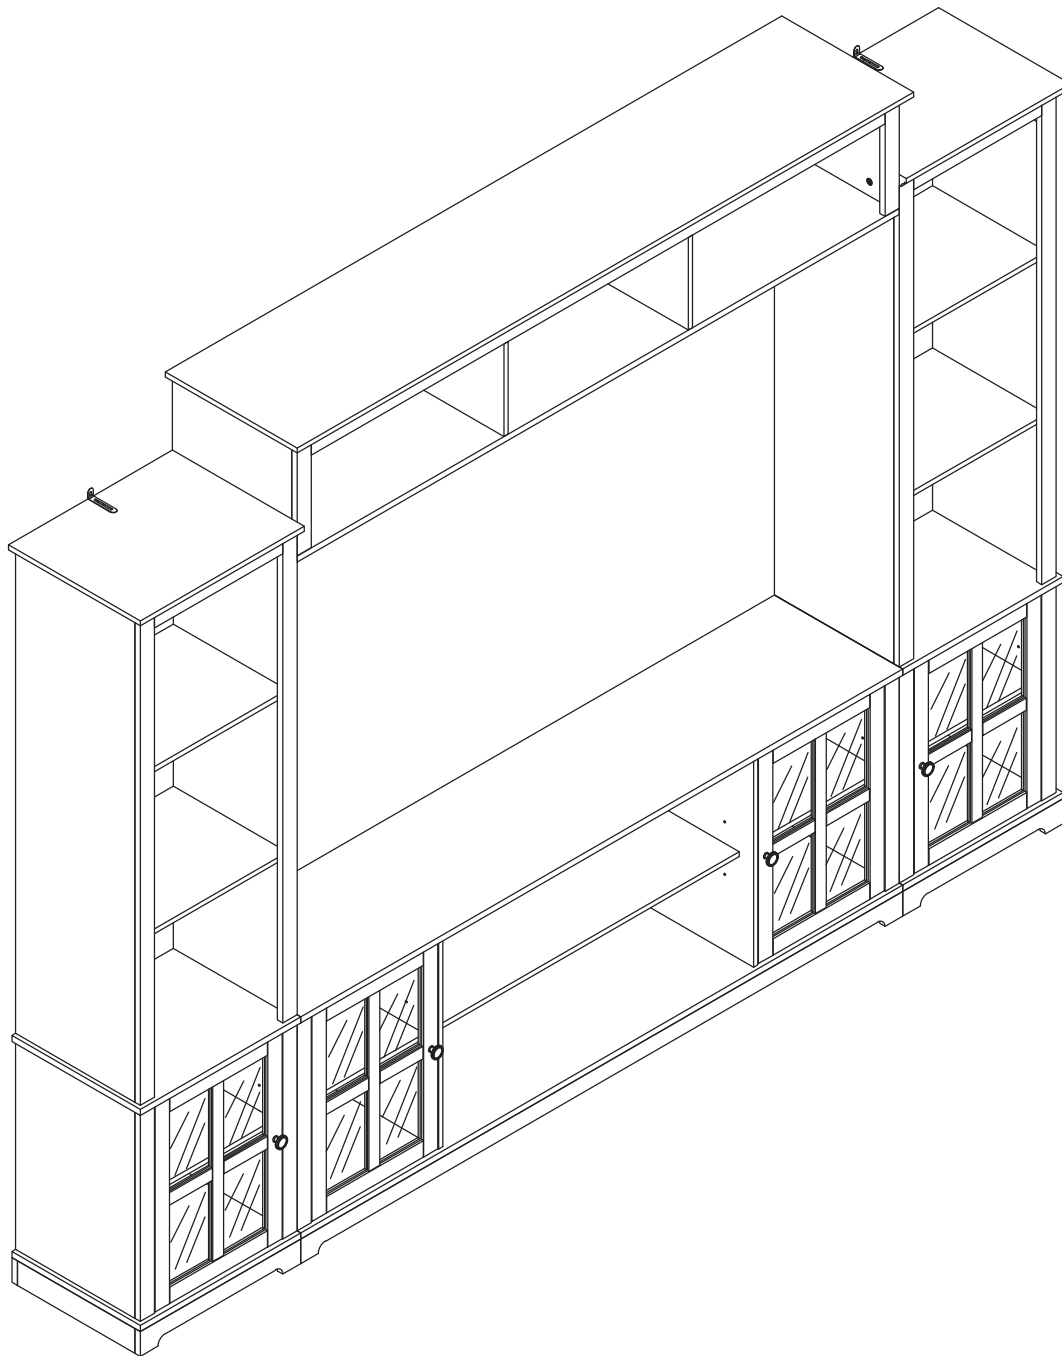

Left high cabinet


Right high cabinet

 Take out shelf 16 and 17、48 from cabinets.

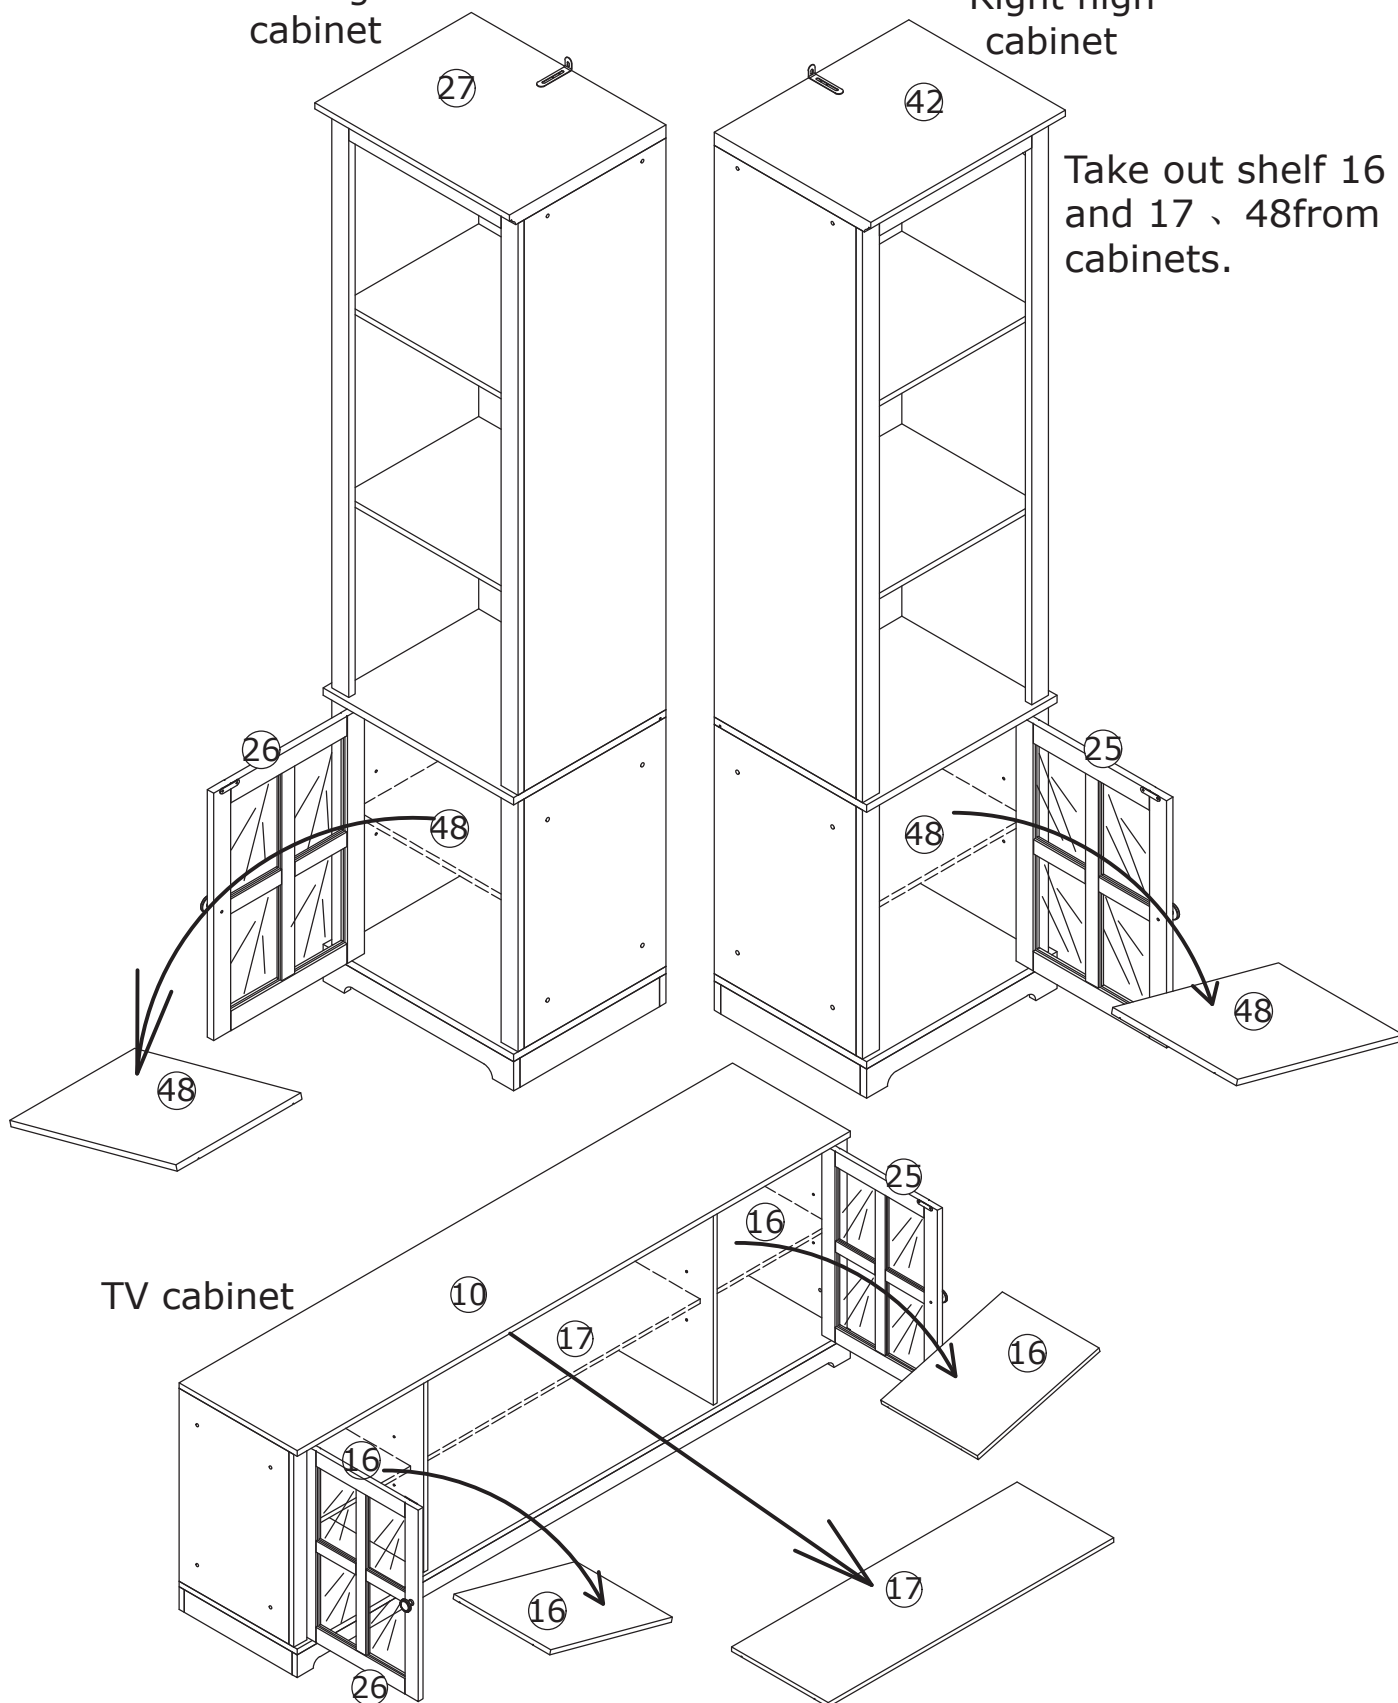

56

 
Assemble four units together as shown.

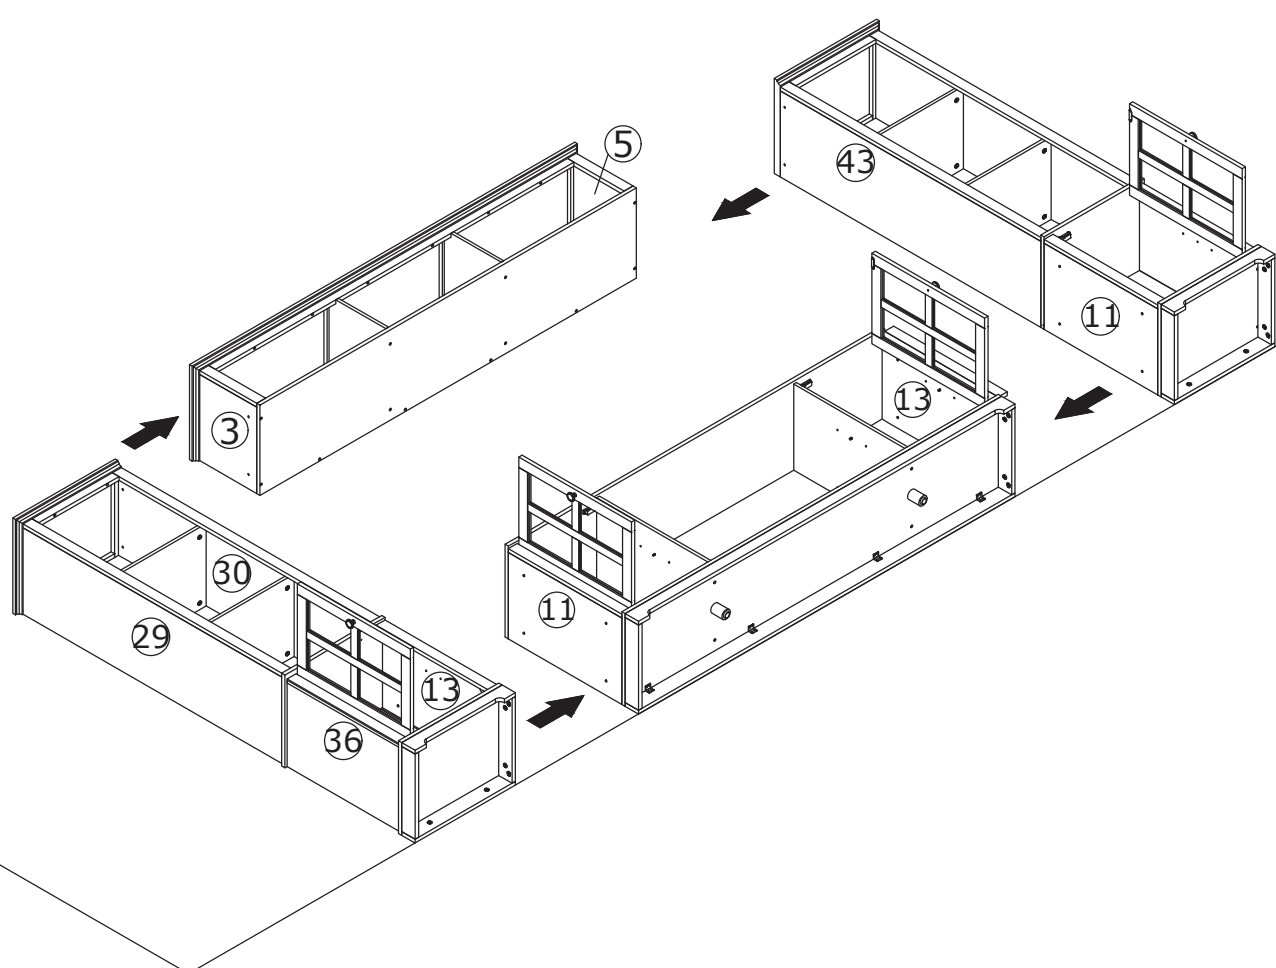

57




 Fix them together using hardware pack(W,X) as shown.

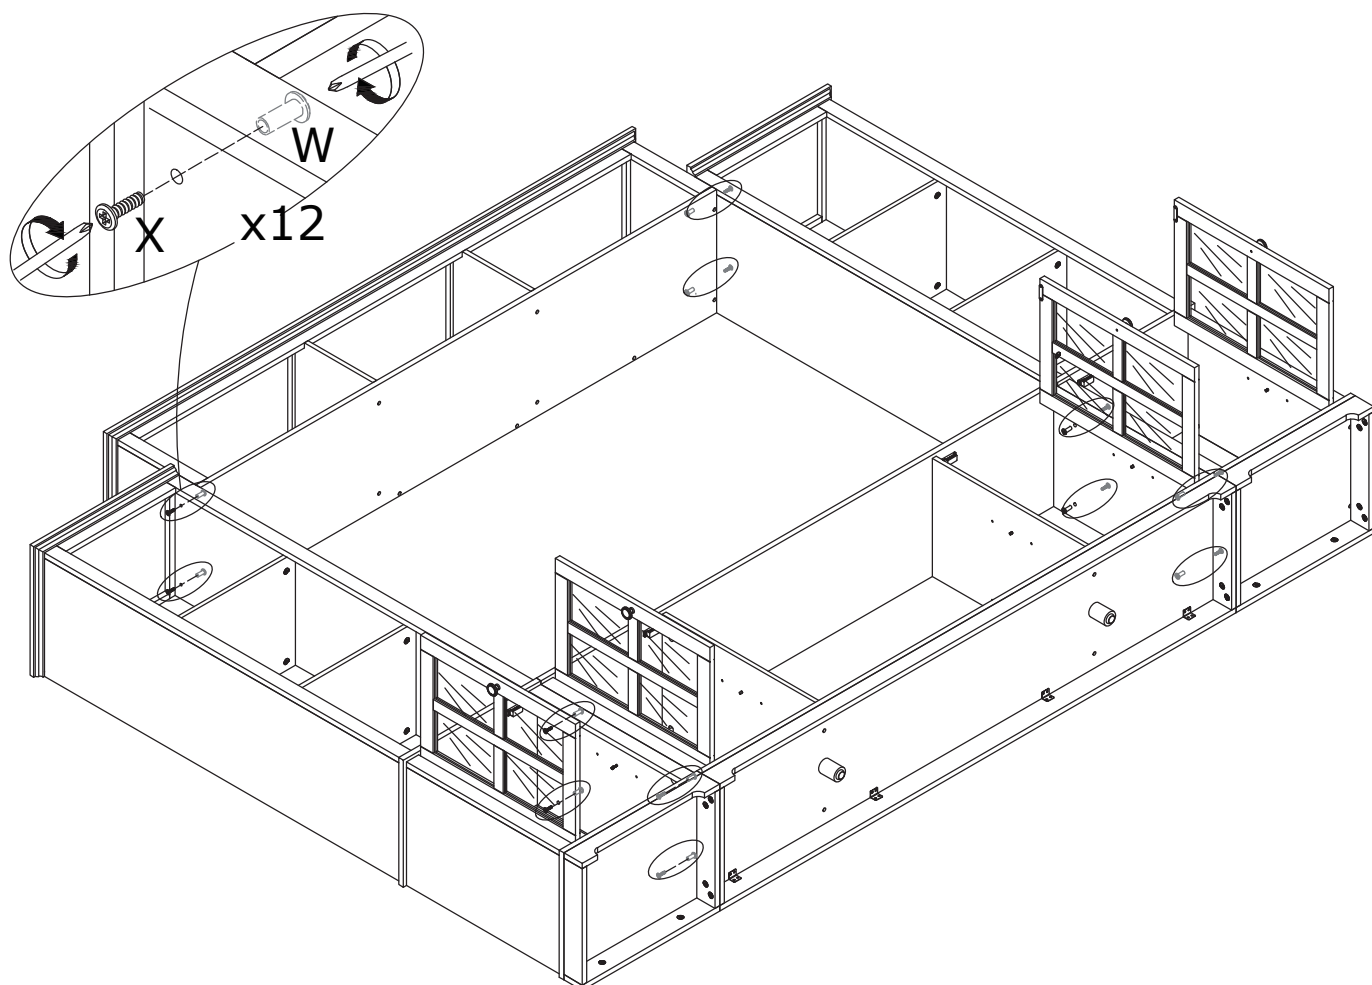


58

 Place shelf 16 and 17, 48 in.

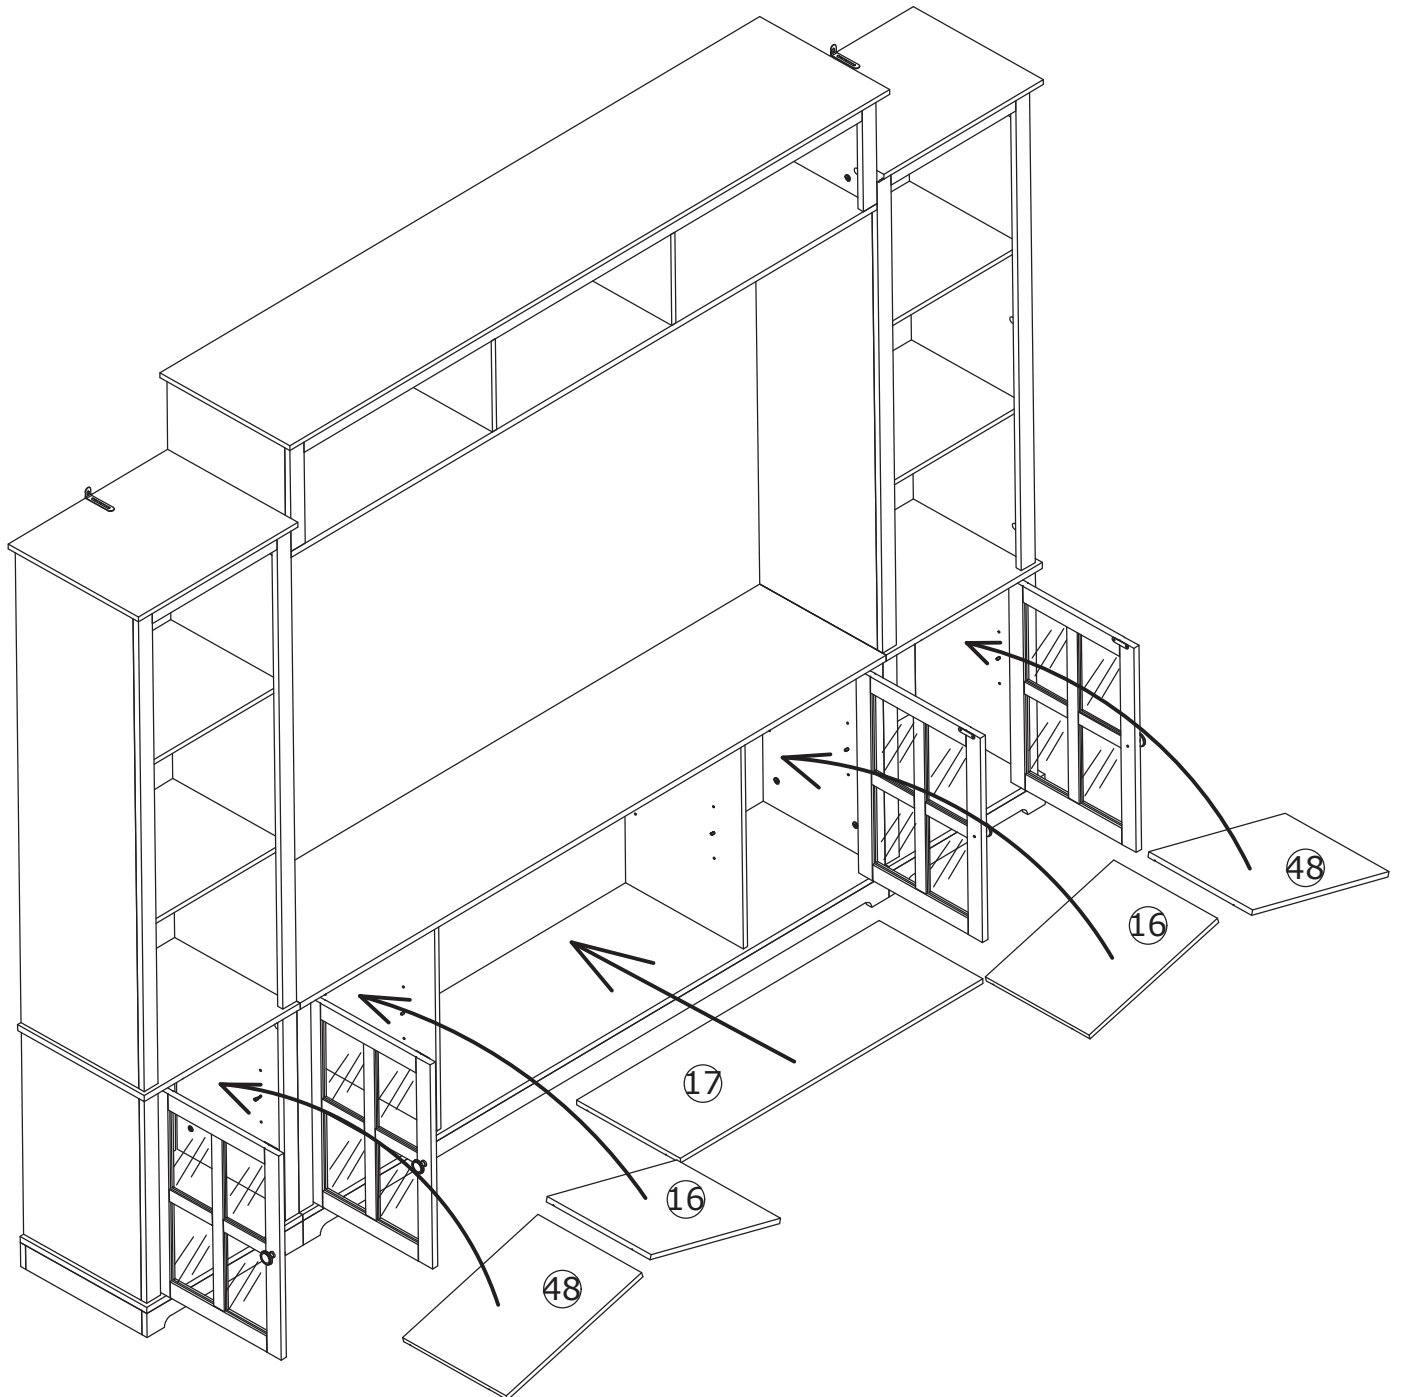



 
Please measure the distance between these holes and the distance from the hole center to the bottom.

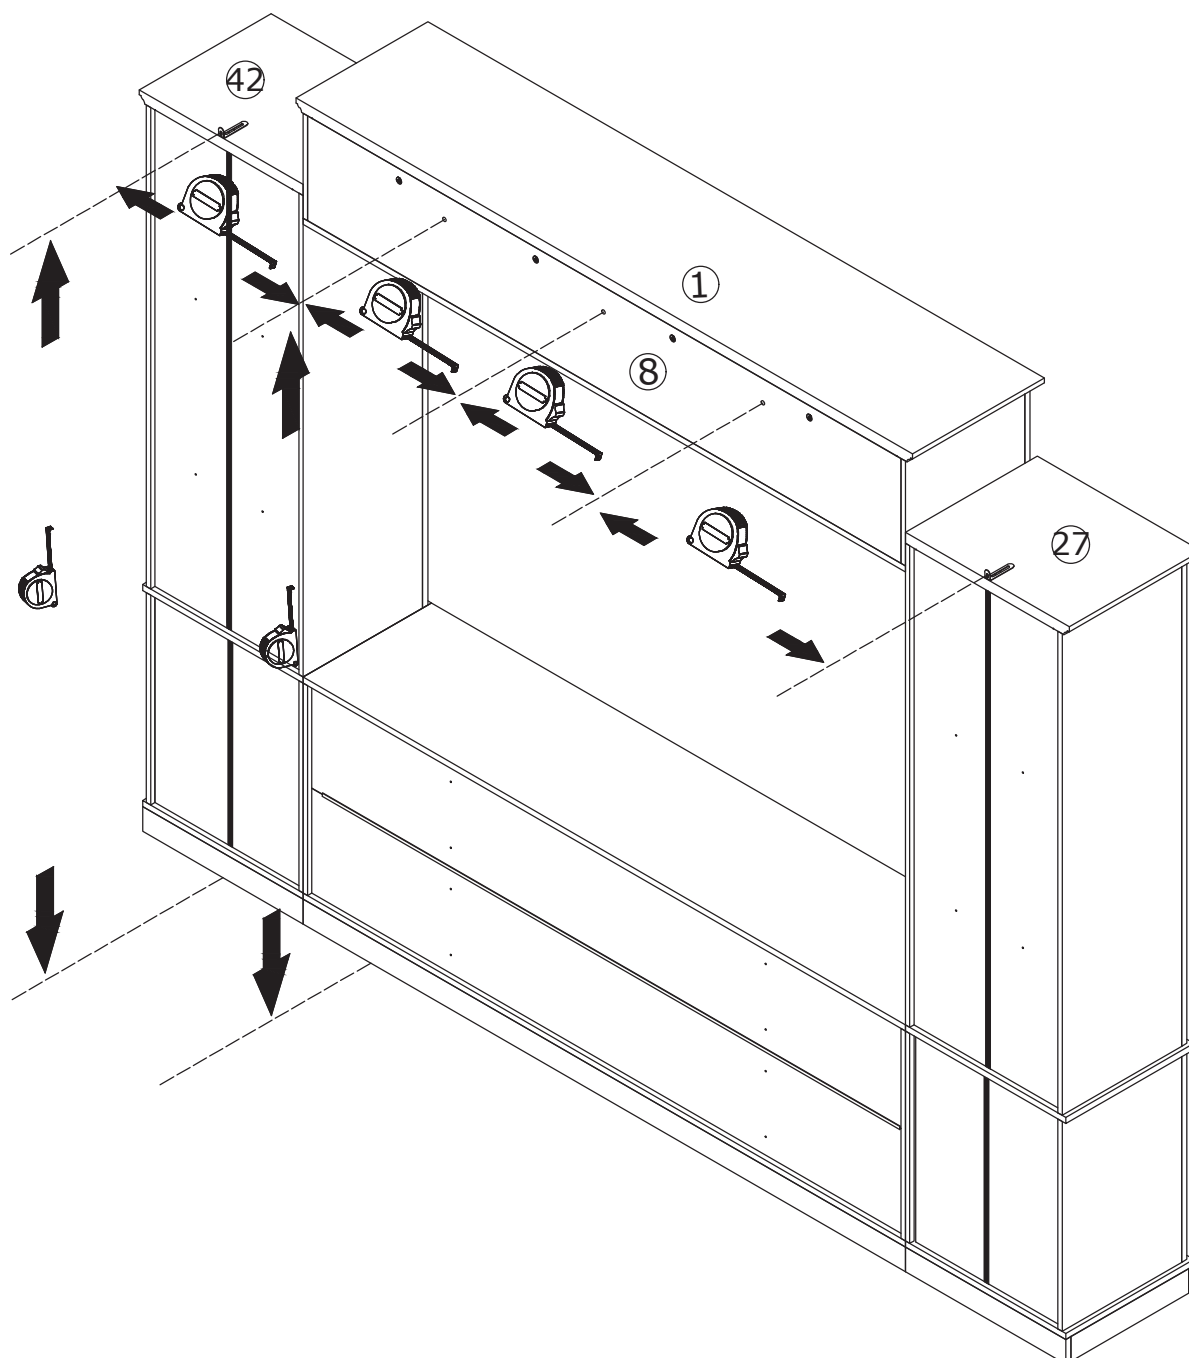

60



 
Drill holes on wall.

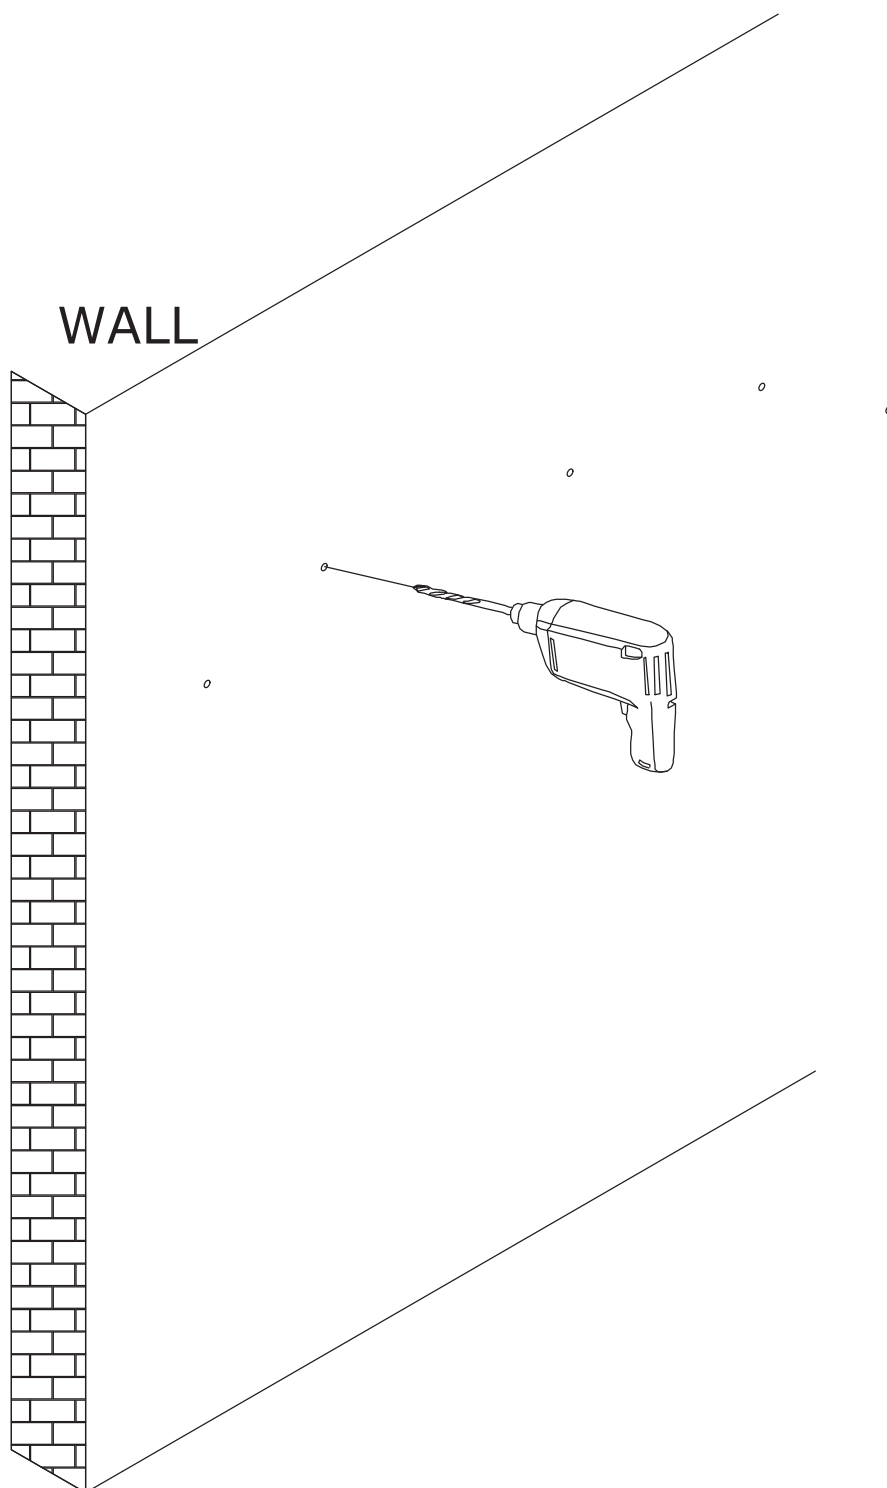

61



 
Knock part(R) and (V) into holes.

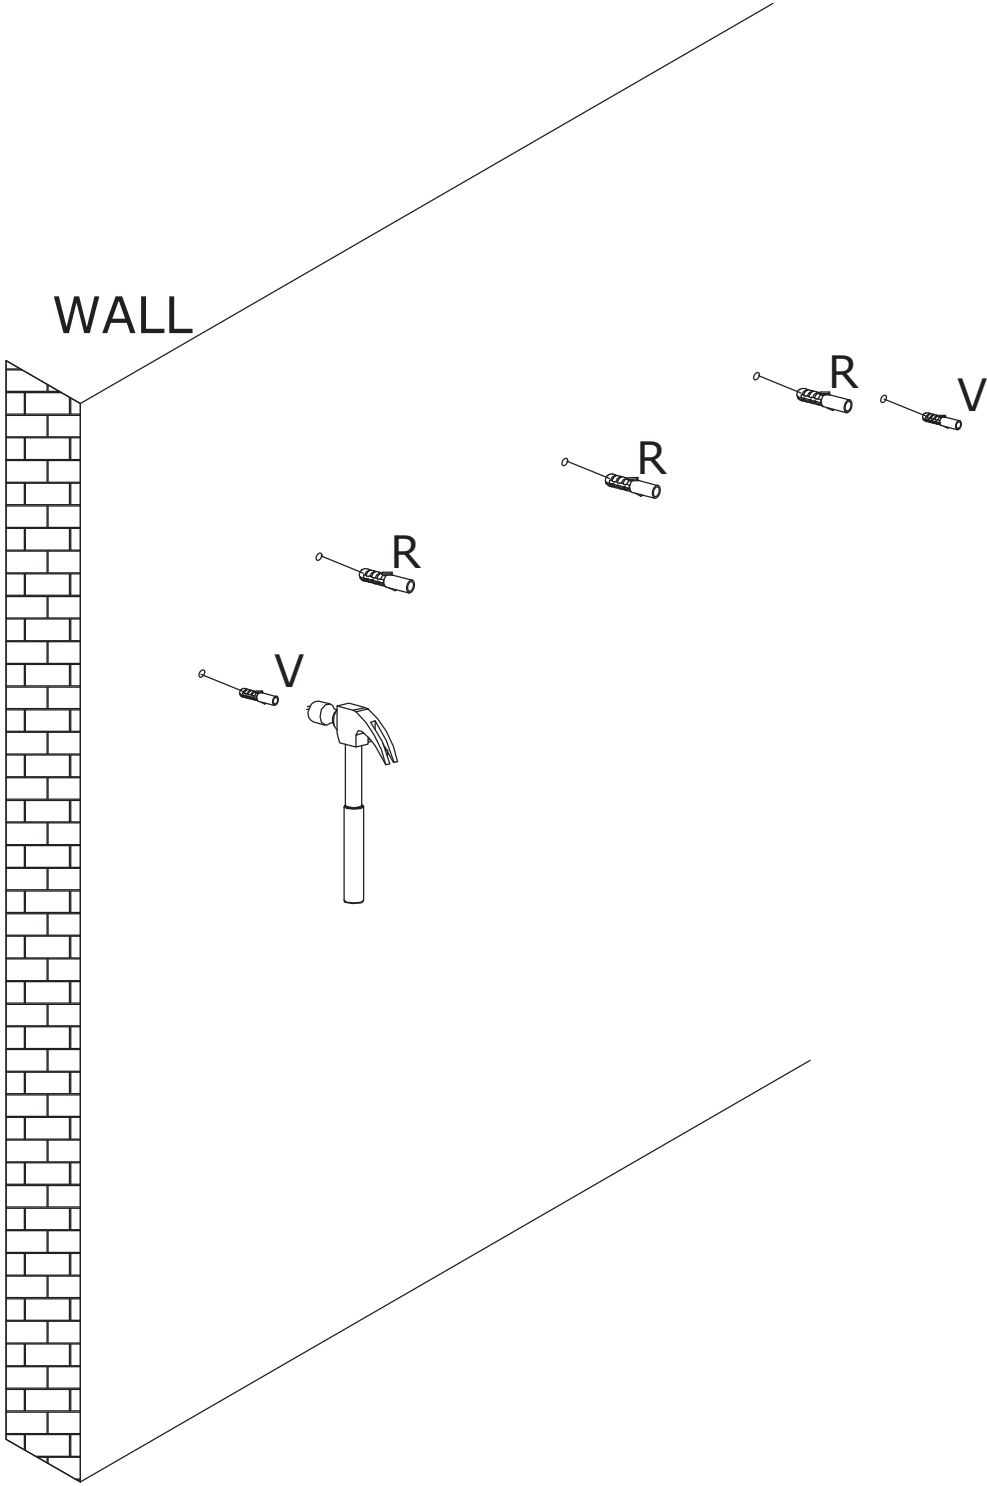

62



 Fix the cabinet to part(R,V) on wall through hardware pack(S,D) as shown.

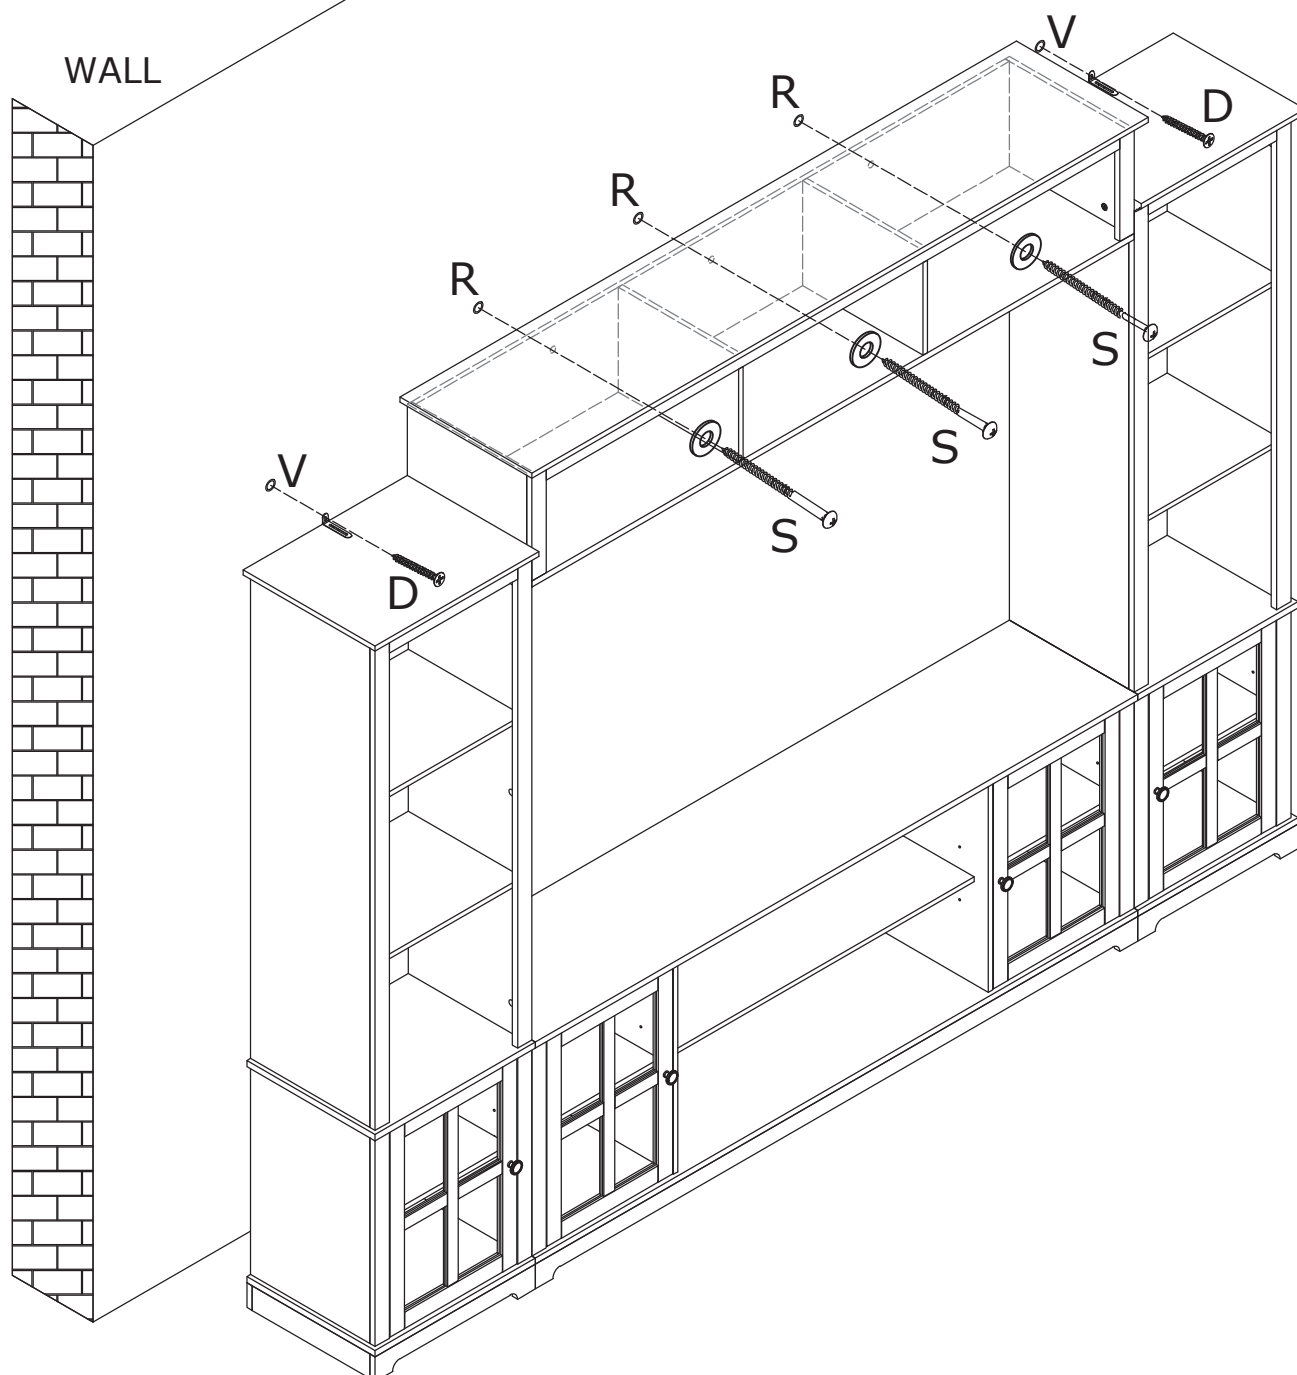

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOUR ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.

AFTER-SALES CONTACT



feedbackstation@163.com



(303)800-6387