

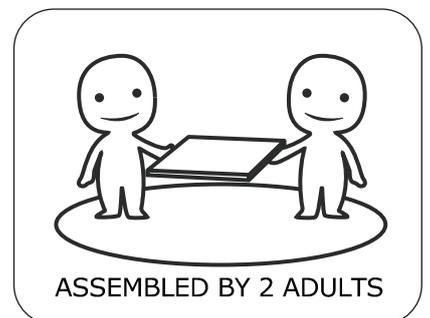




Wood Cat Cage

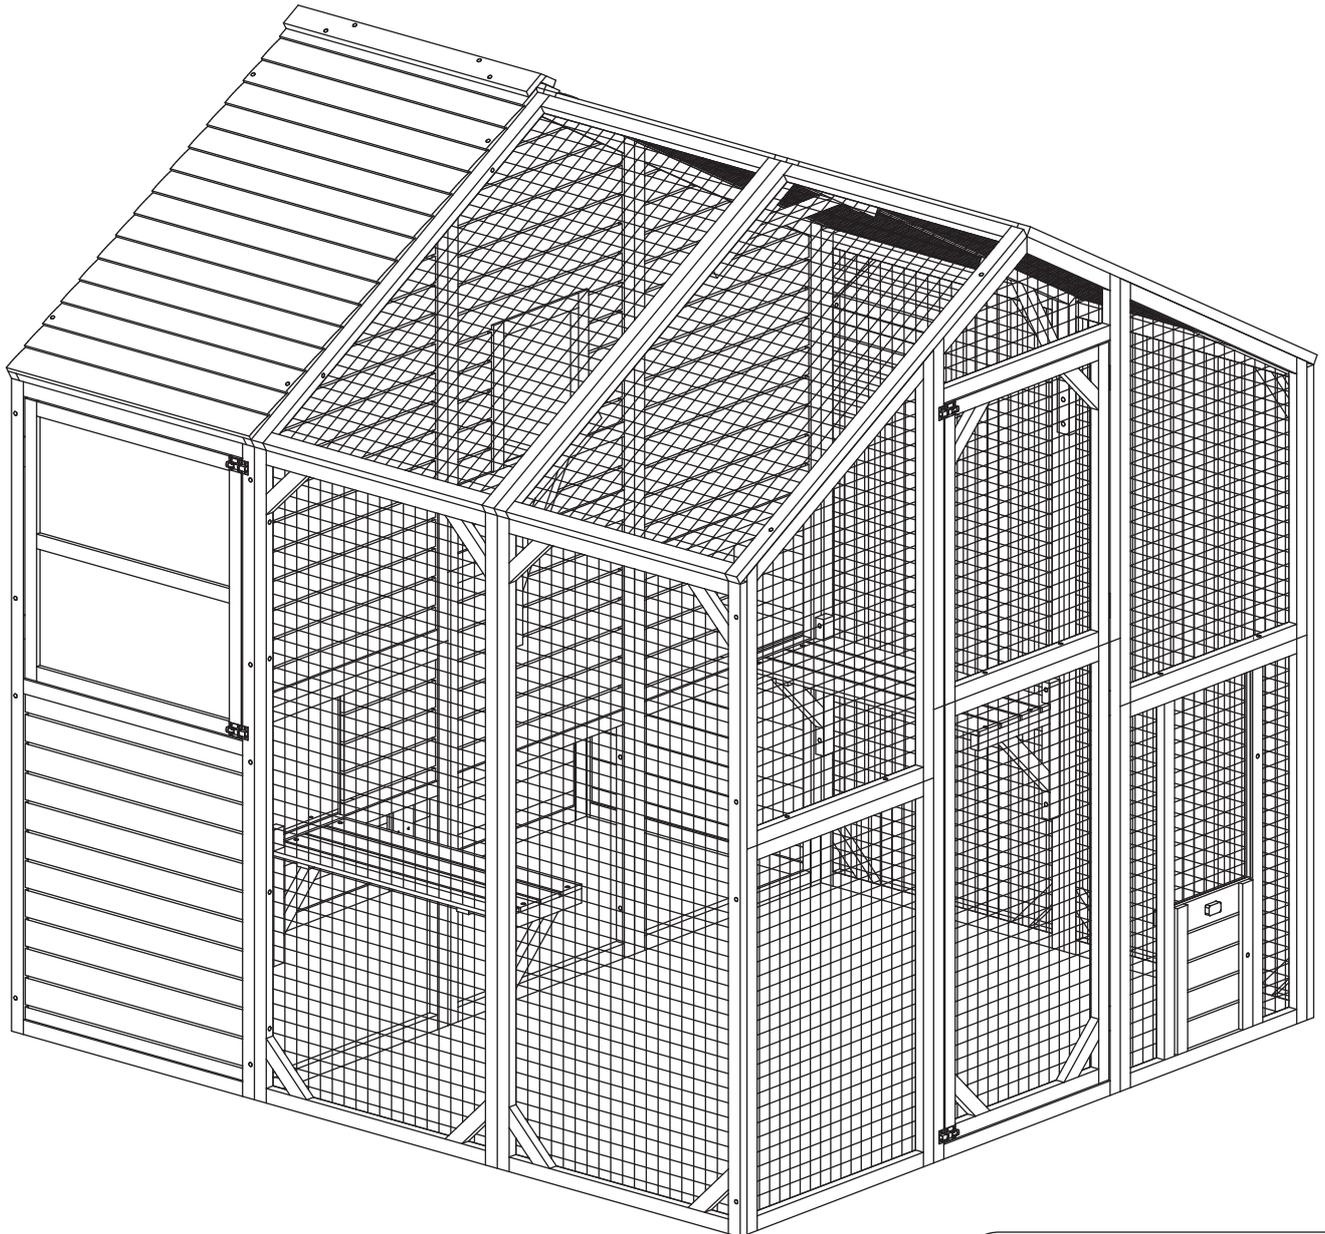

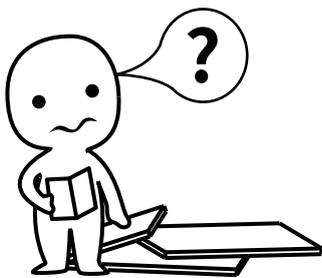


IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

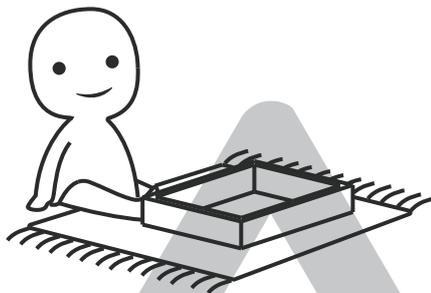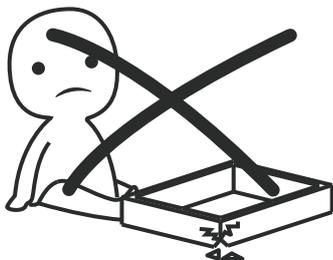


AVOID SCRATCHES!

In order to avoid scratching this furniture should be assembled on a soft layer- could be a rug.

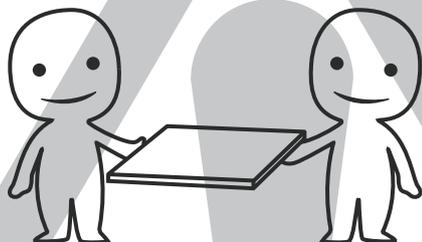

IMPROVE EFFICIENCY !

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

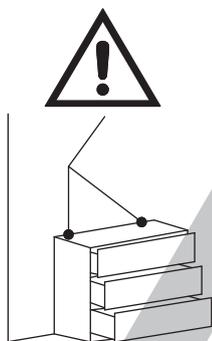

ANTI-TOPPLE WARNING !


Overturnd furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !

It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

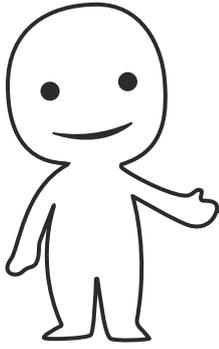


Please prepare the following tools




When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

A x 52

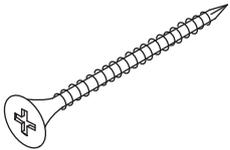


M3.5 x 50 mm

B x 8

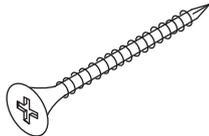


M3.5 x 45 mm

C x 28

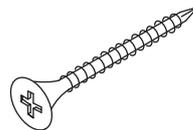

M3.5 x 40 mm

D x 21

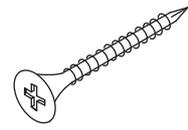

M3.5 x 35 mm

E x 29



M3 x 30 mm

F x 96



M3 x 25 mm

G x 36




M3 x 12 mm


H x 32



I x 6

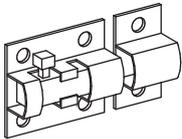














J x 1












 











K x 1




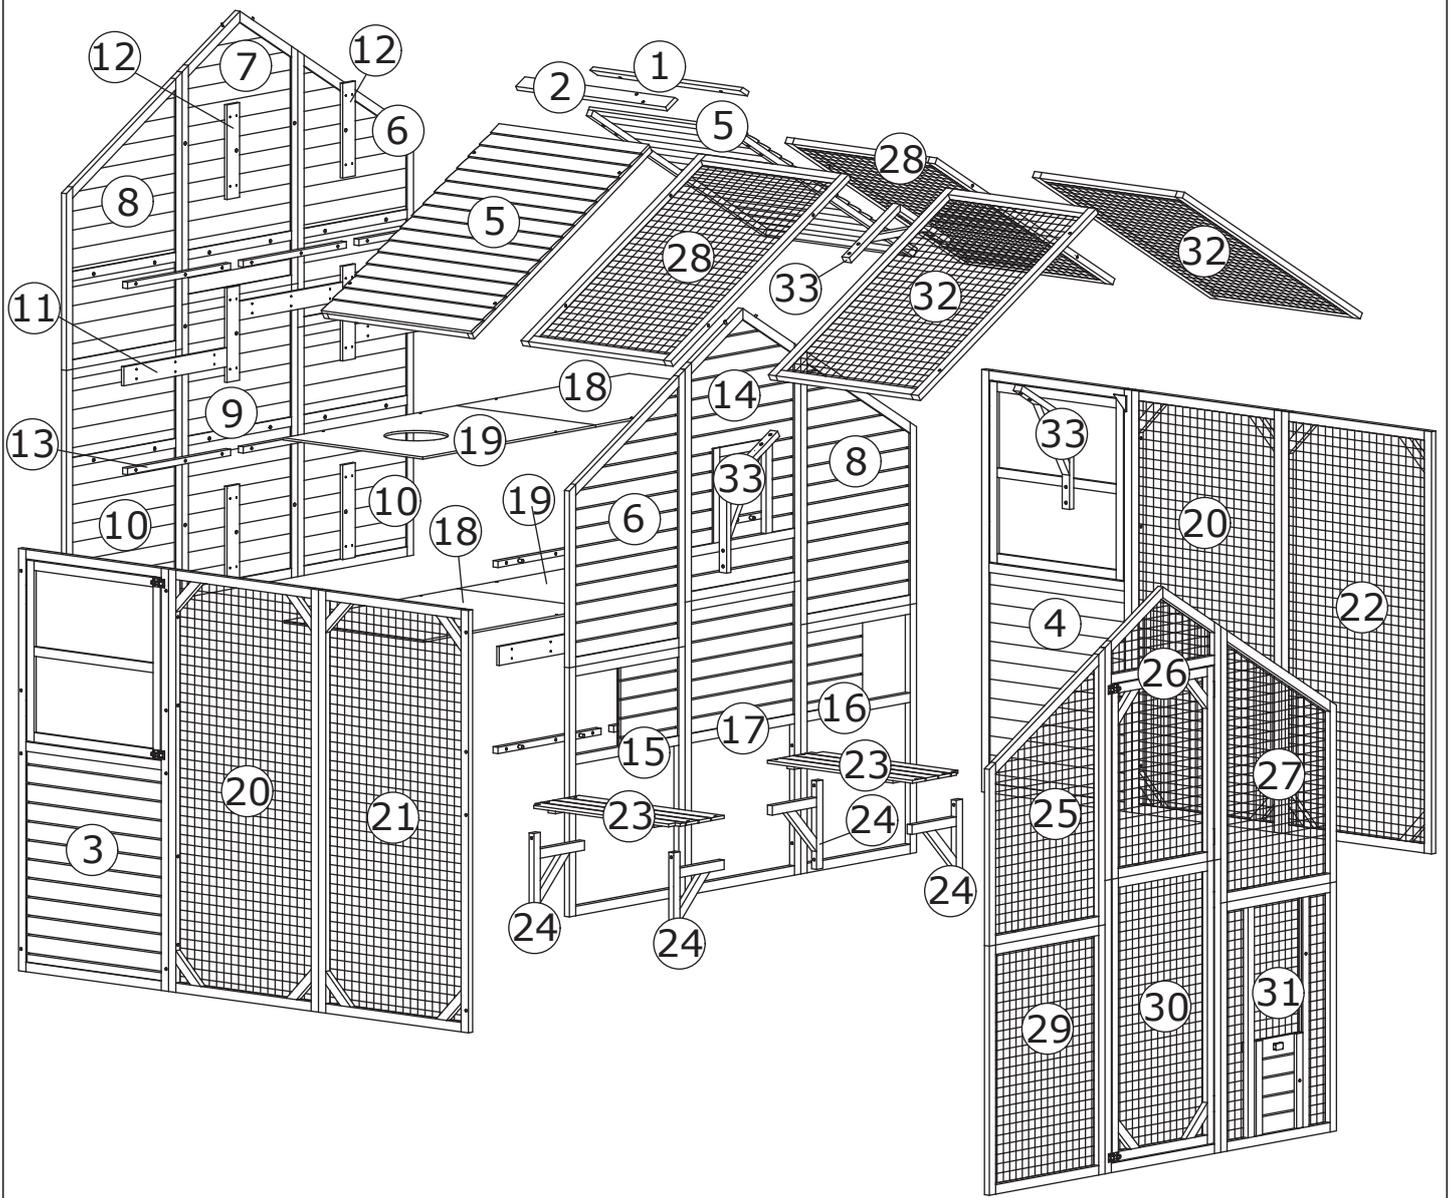

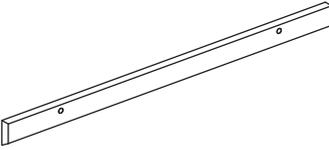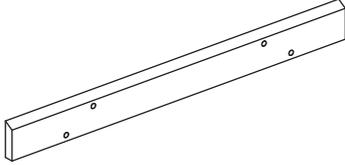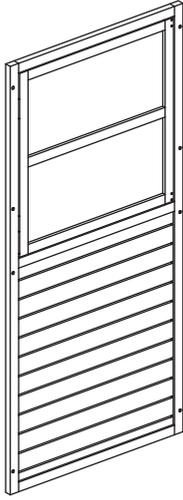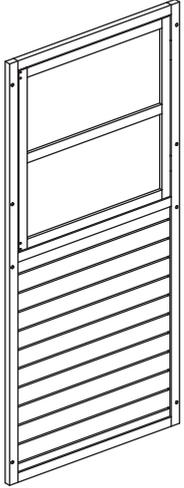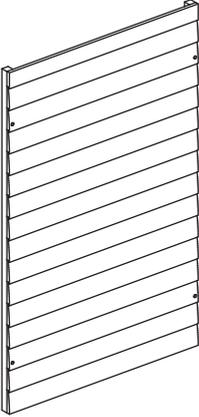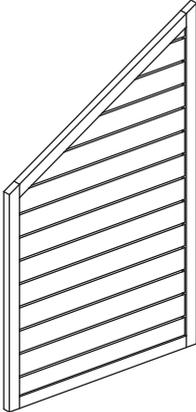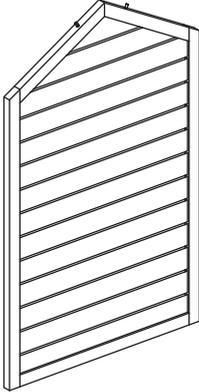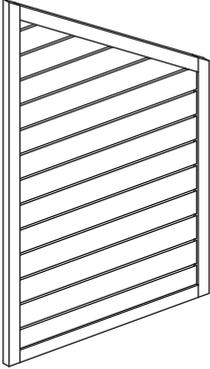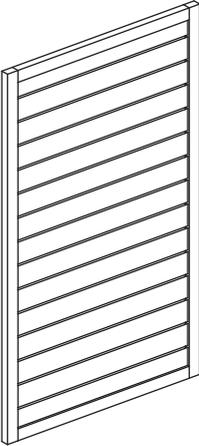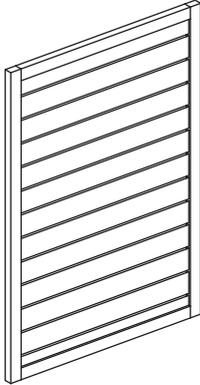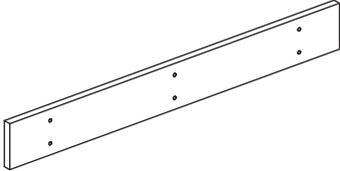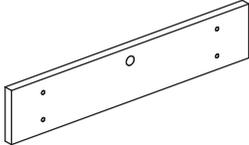
<p>①</p>  <p>x1</p>	<p>②</p>  <p>x1</p>	<p>③</p>  <p>x1</p>	<p>④</p>  <p>x1</p>
<p>⑤</p>  <p>x2</p>	<p>⑥</p>  <p>x2</p>	<p>⑦</p>  <p>x1</p>	<p>⑧</p>  <p>x2</p>
<p>⑨</p>  <p>x1</p>	<p>⑩</p>  <p>x2</p>	<p>⑪</p>  <p>x6</p>	<p>⑫</p>  <p>x8</p>

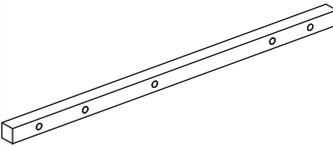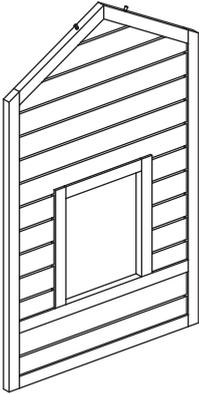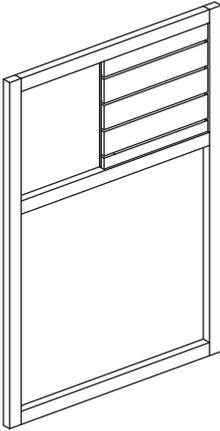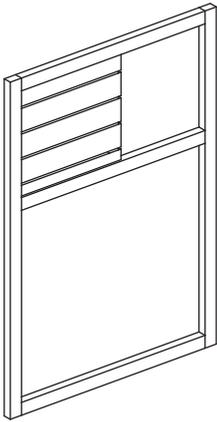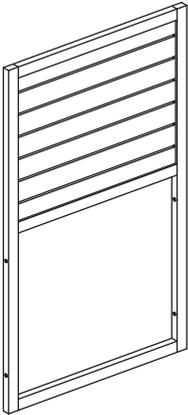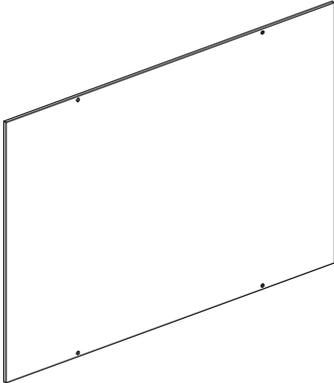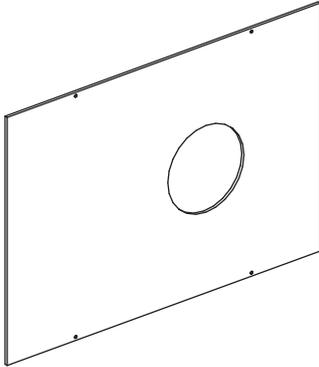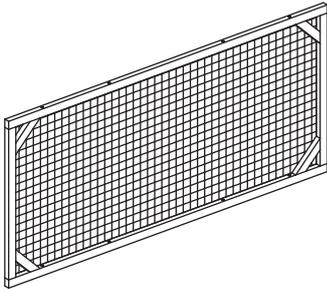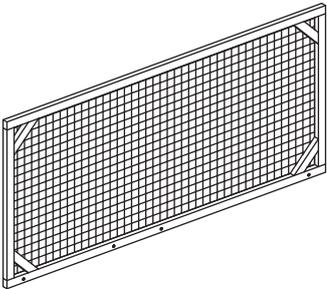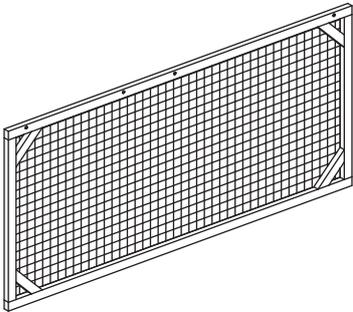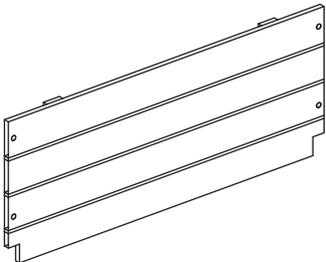
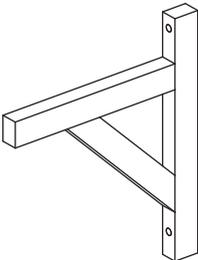
<p>13</p>  <p>x12</p>	<p>14</p>  <p>x1</p>	<p>15</p>  <p>x1</p>	<p>16</p>  <p>x1</p>
<p>17</p>  <p>x1</p>	<p>18</p>  <p>x2</p>	<p>19</p>  <p>x2</p>	<p>20</p>  <p>x2</p>
<p>21</p>  <p>x1</p>	<p>22</p>  <p>x1</p>	<p>23</p>  <p>x2</p>	<p>24</p>  <p>x4</p>
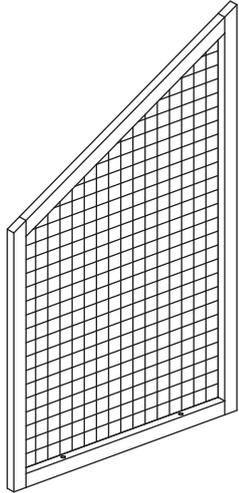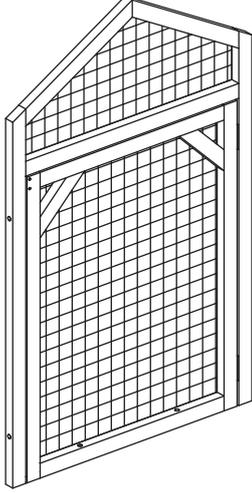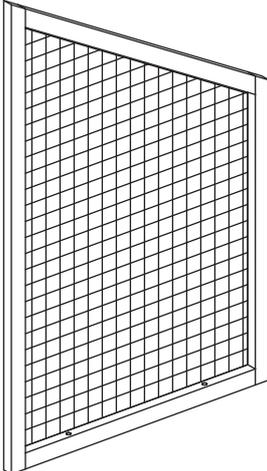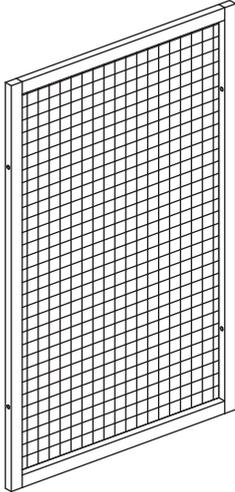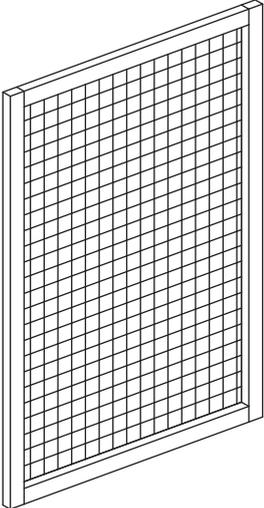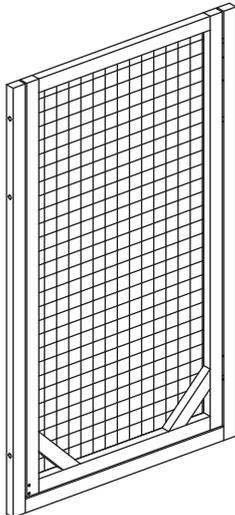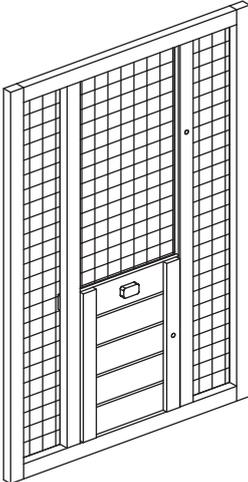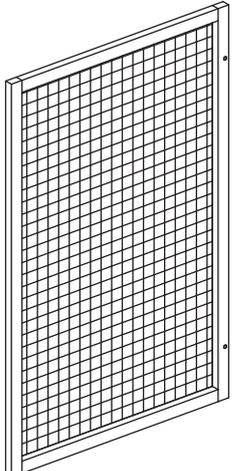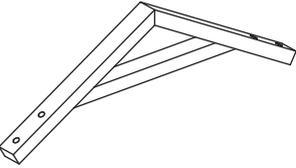
<p>(25)</p>  <p>x1</p>	<p>(26)</p>  <p>x1</p>	<p>(27)</p>  <p>x1</p>	<p>(28)</p>  <p>x2</p>
<p>(29)</p>  <p>x1</p>	<p>(30)</p>  <p>x1</p>	<p>(31)</p>  <p>x1</p>	<p>(32)</p>  <p>x2</p>
<p>(33)</p>  <p>x3</p>			




1

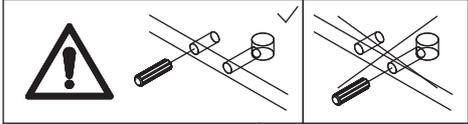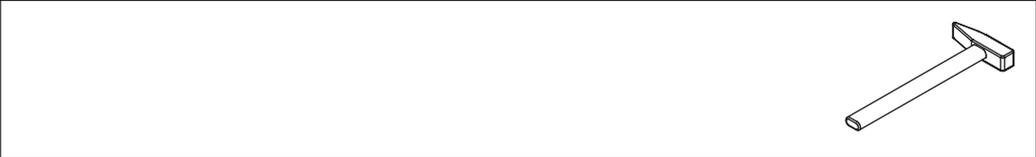

Knock wooden dowel(H) into plate 7 and 9 at first.

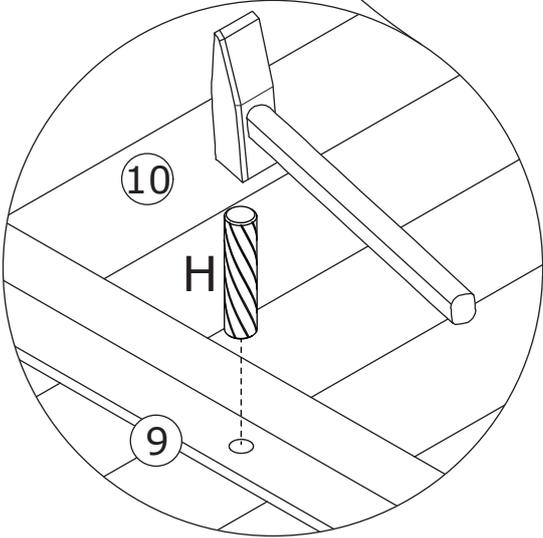
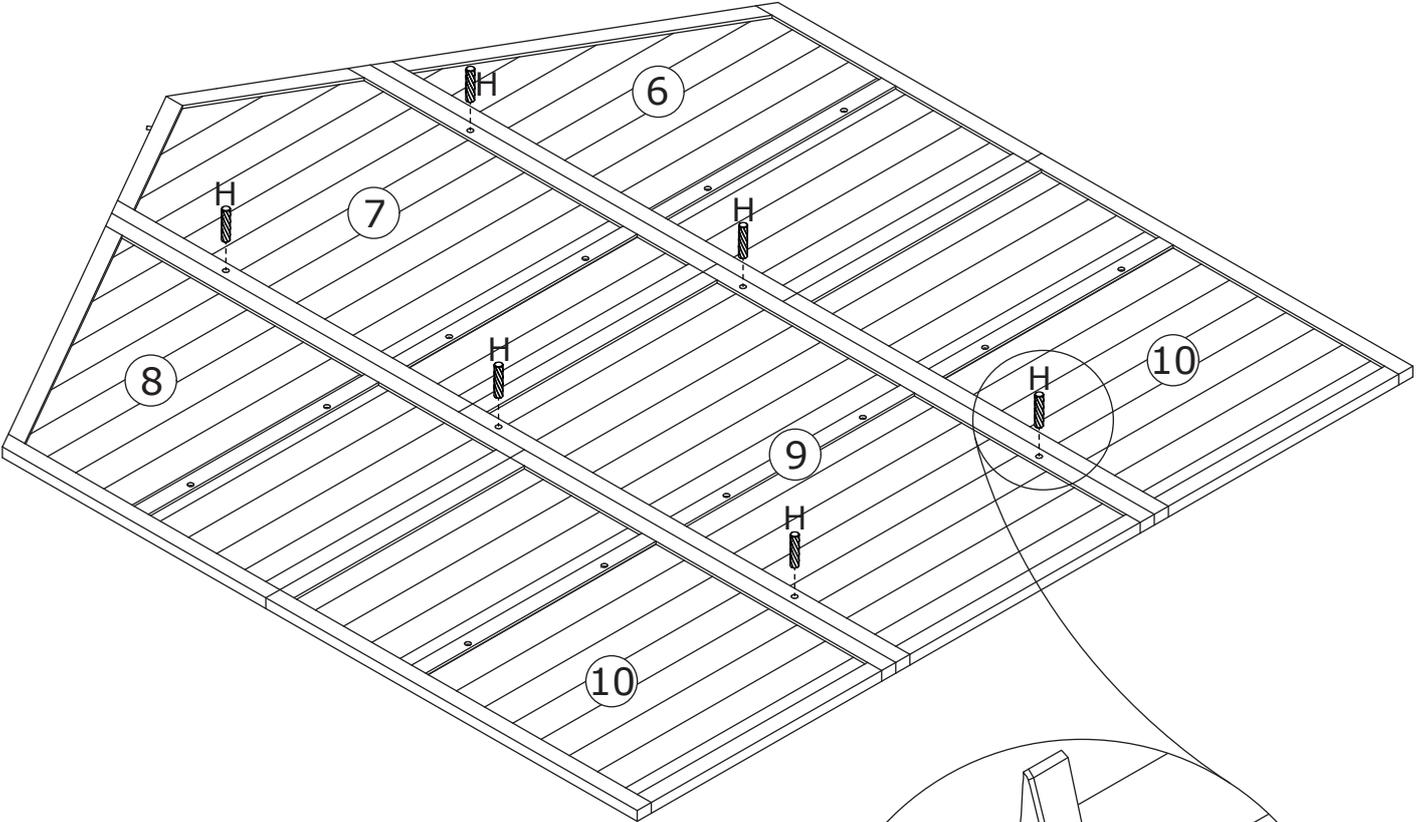


2

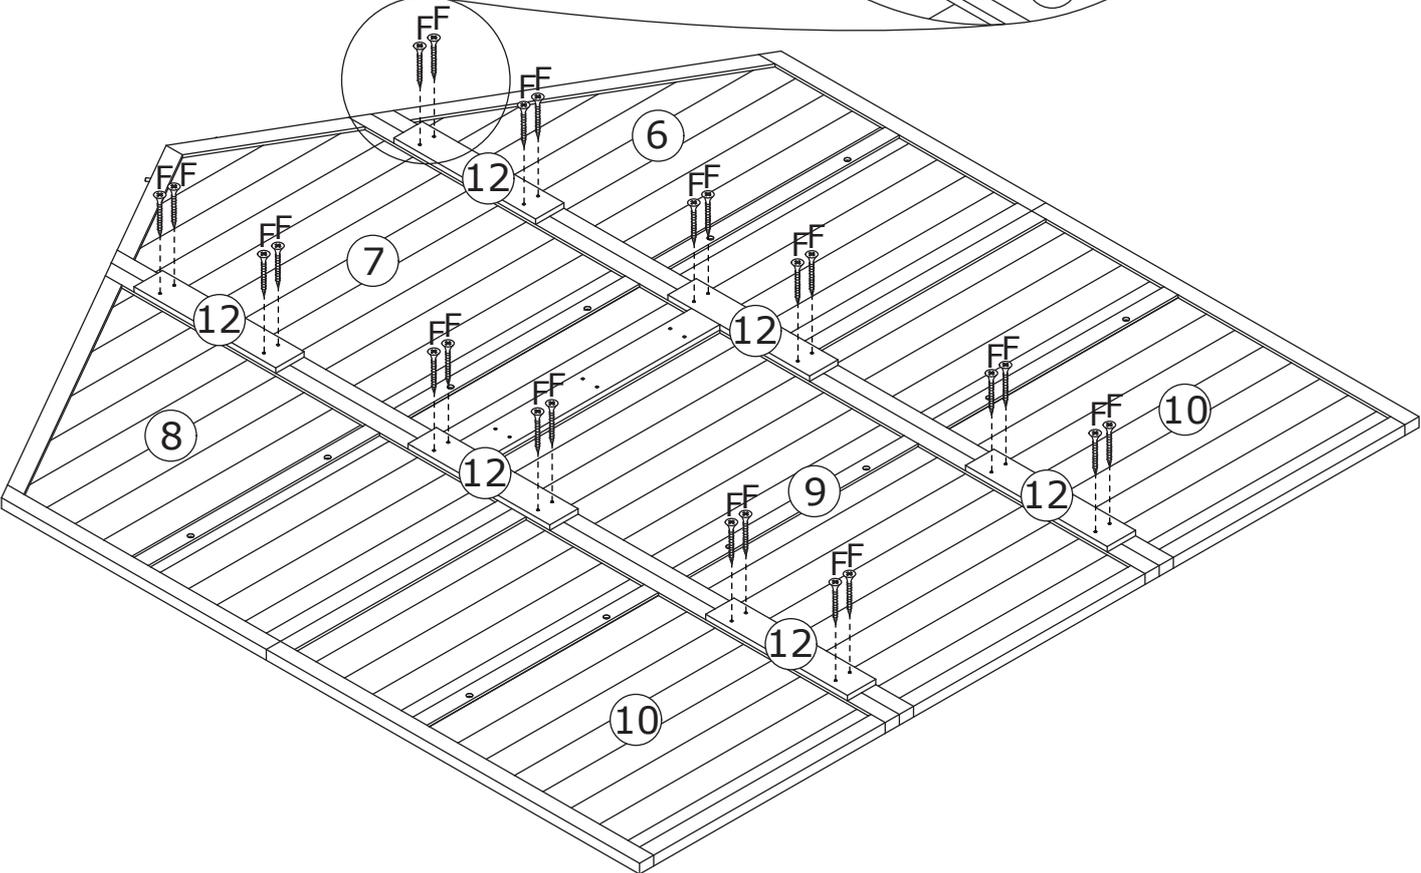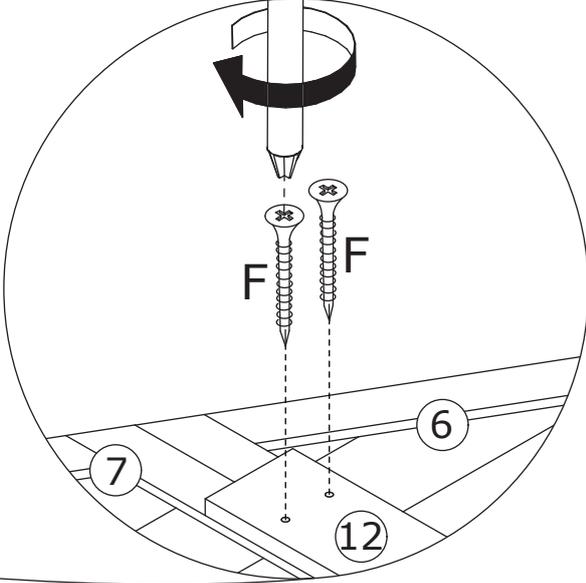 






Fix plate 12 to plate 6, 7, 8, 9 and 10 with screw(F) as shown.

 3

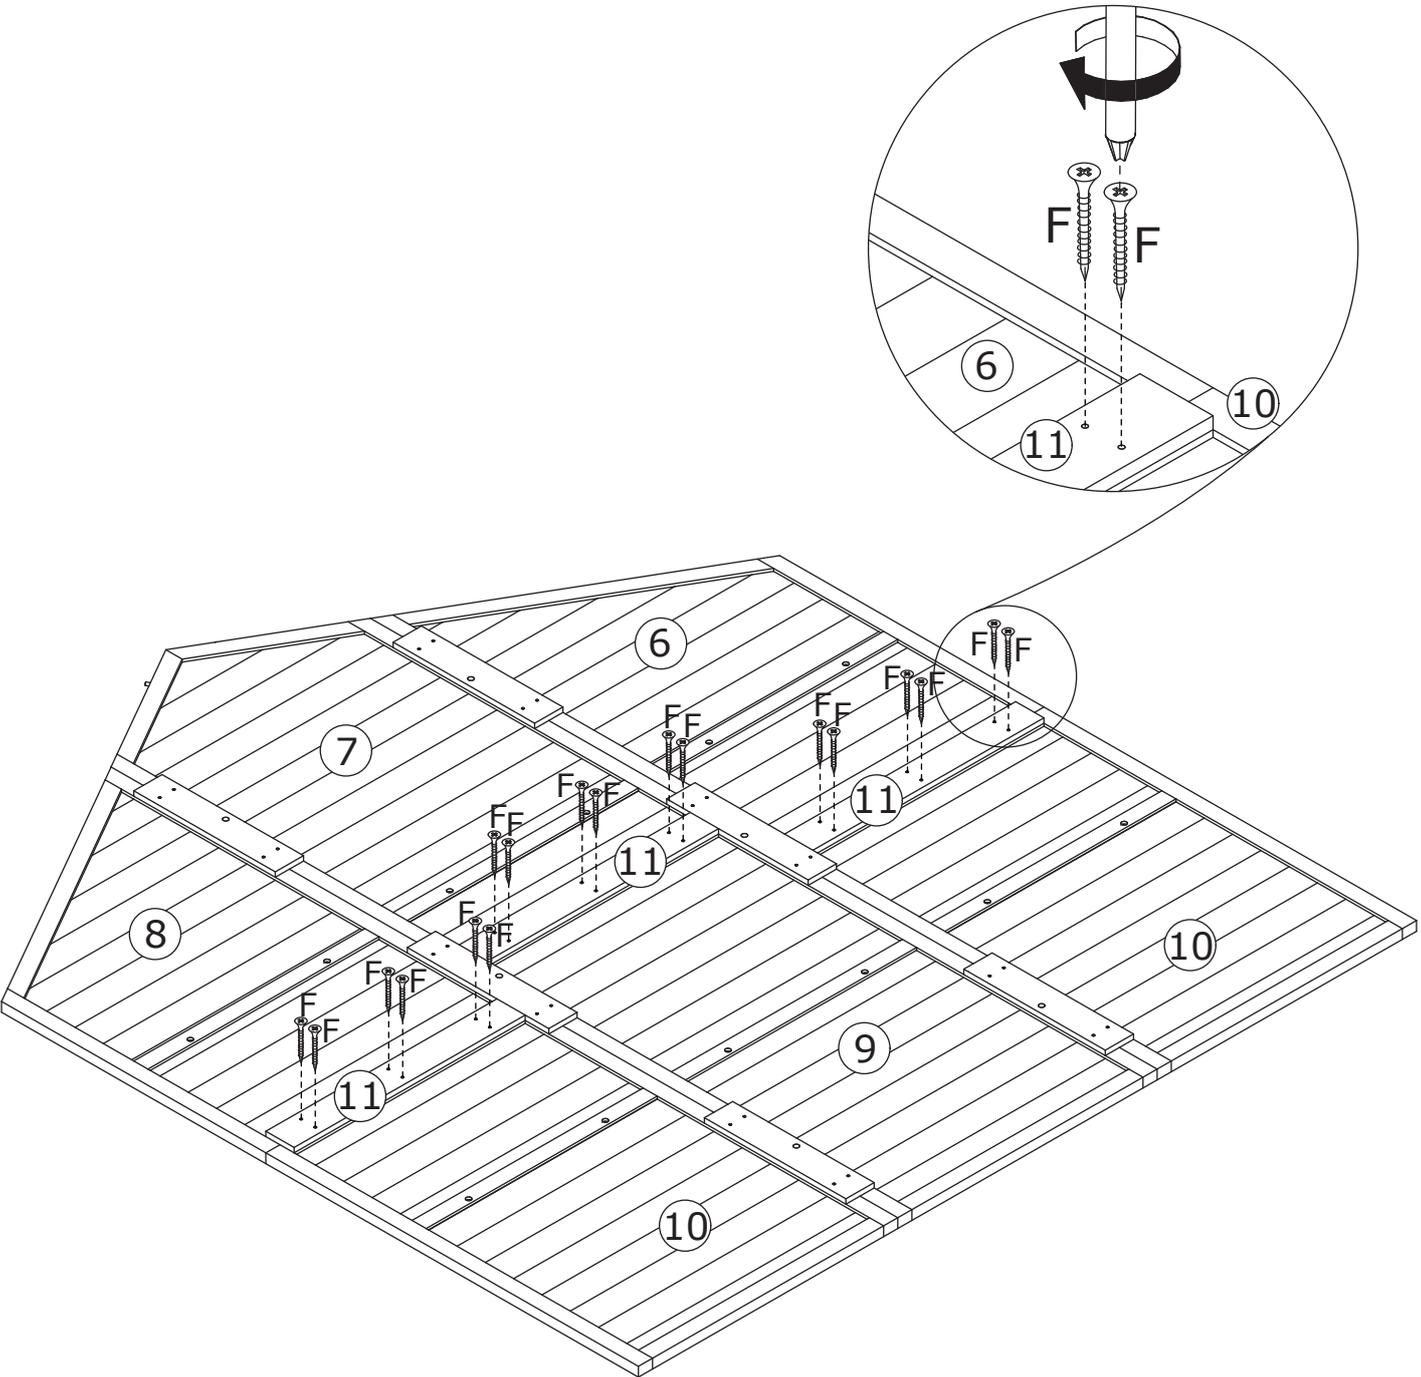

Fix plate 11 to plate 8 and 10 with screw(F) as shown.
Fix plate 11 to plate 7 and 9 with screw(F) as shown.
Fix plate 11 to plate 6 and 10 with screw(F) as shown.




4

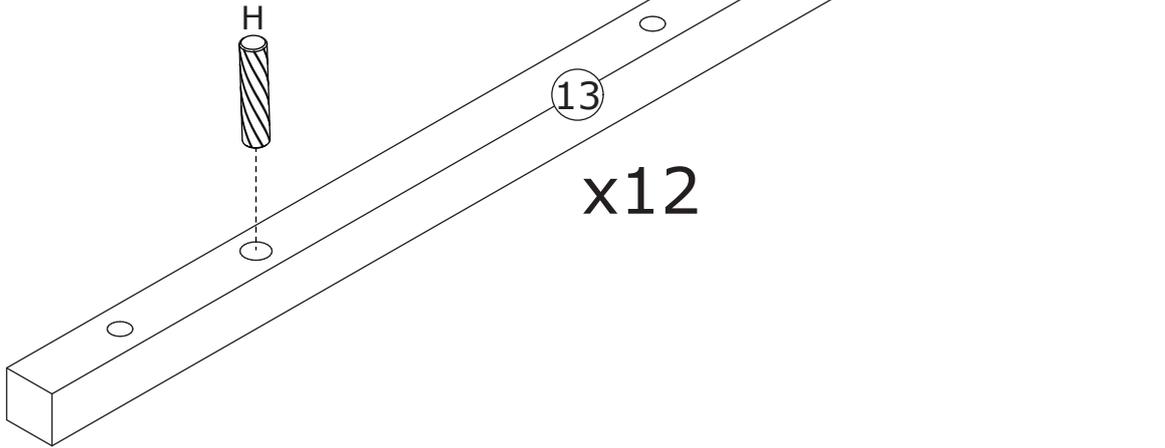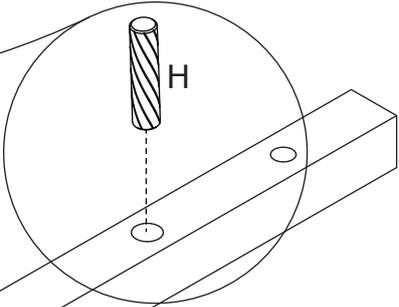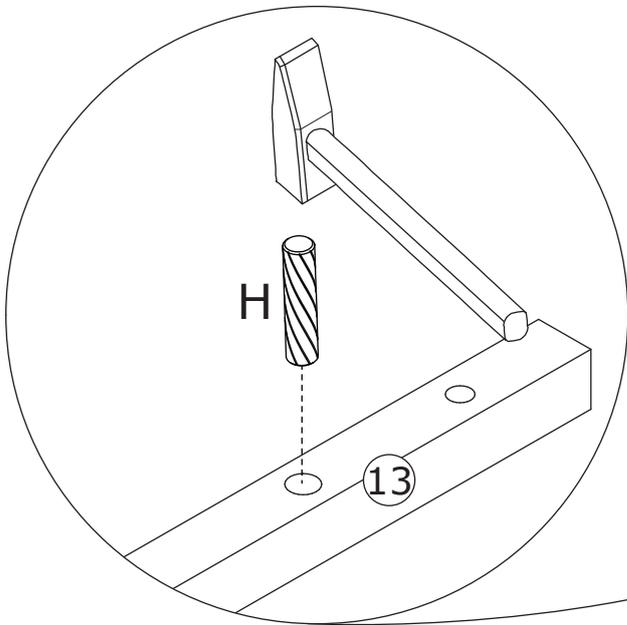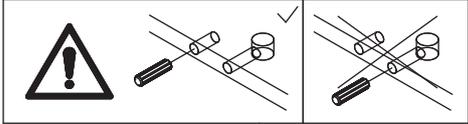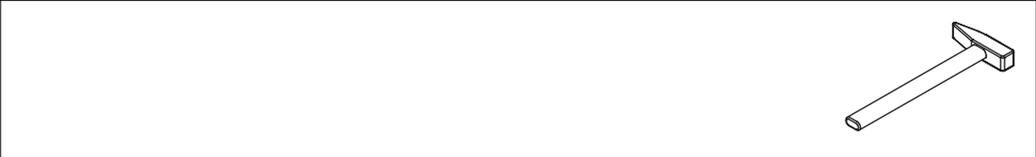

Knock wooden dowel(H) into plate 13 at first.






5

 E x 18
M3 x 30 mm

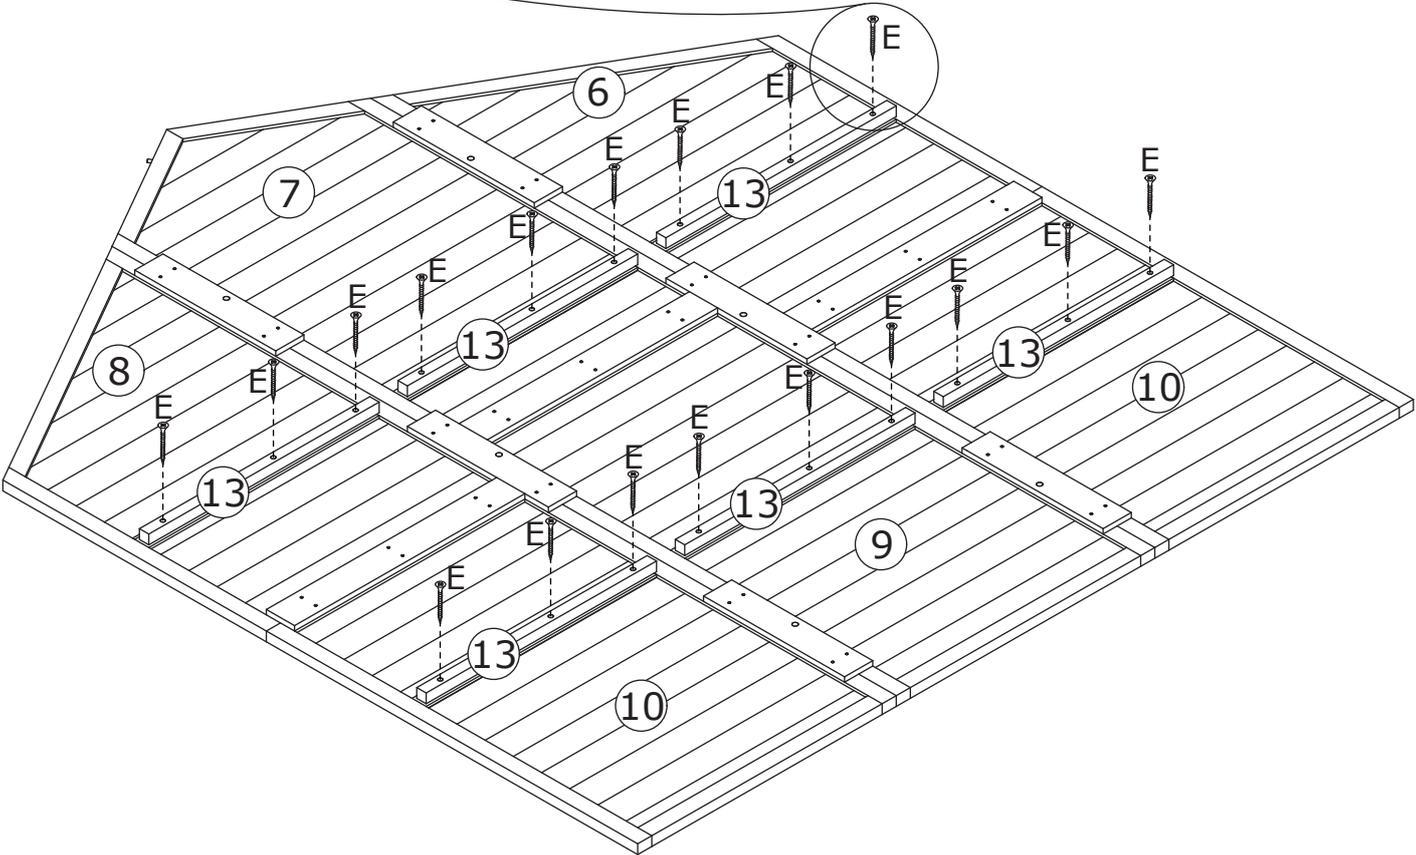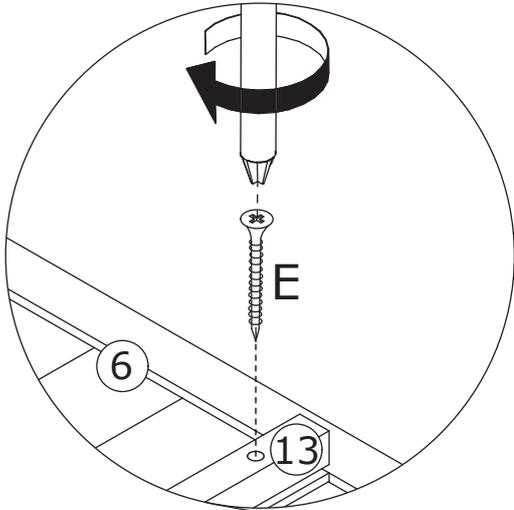



Fix plate 13 to plate 6, 7, 8, 9 and 10 with screw(E) as shown.

6

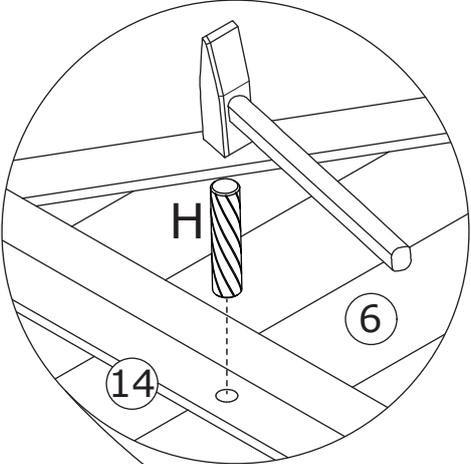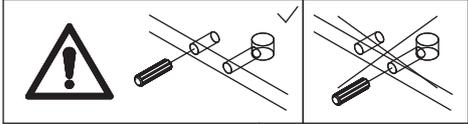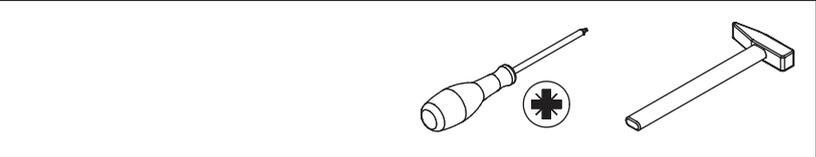
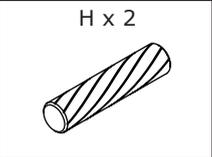
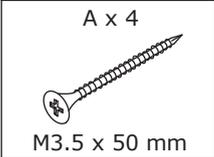


Knock wooden dowel(H) into plate 14 at first.
Place plate 6, 8, 14, 15, 16 and 17 together
as shown
Fix plate 17 to plate 15 and 16 with screw(A)
as shown.

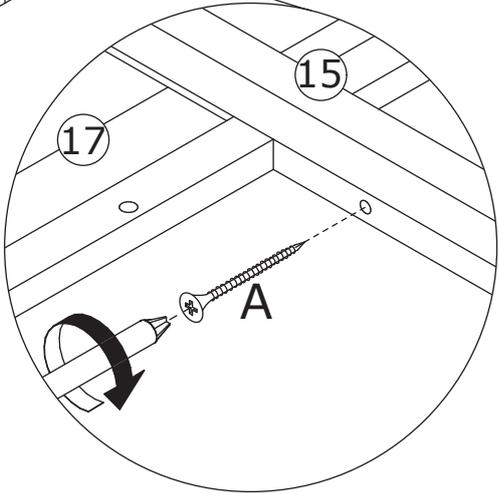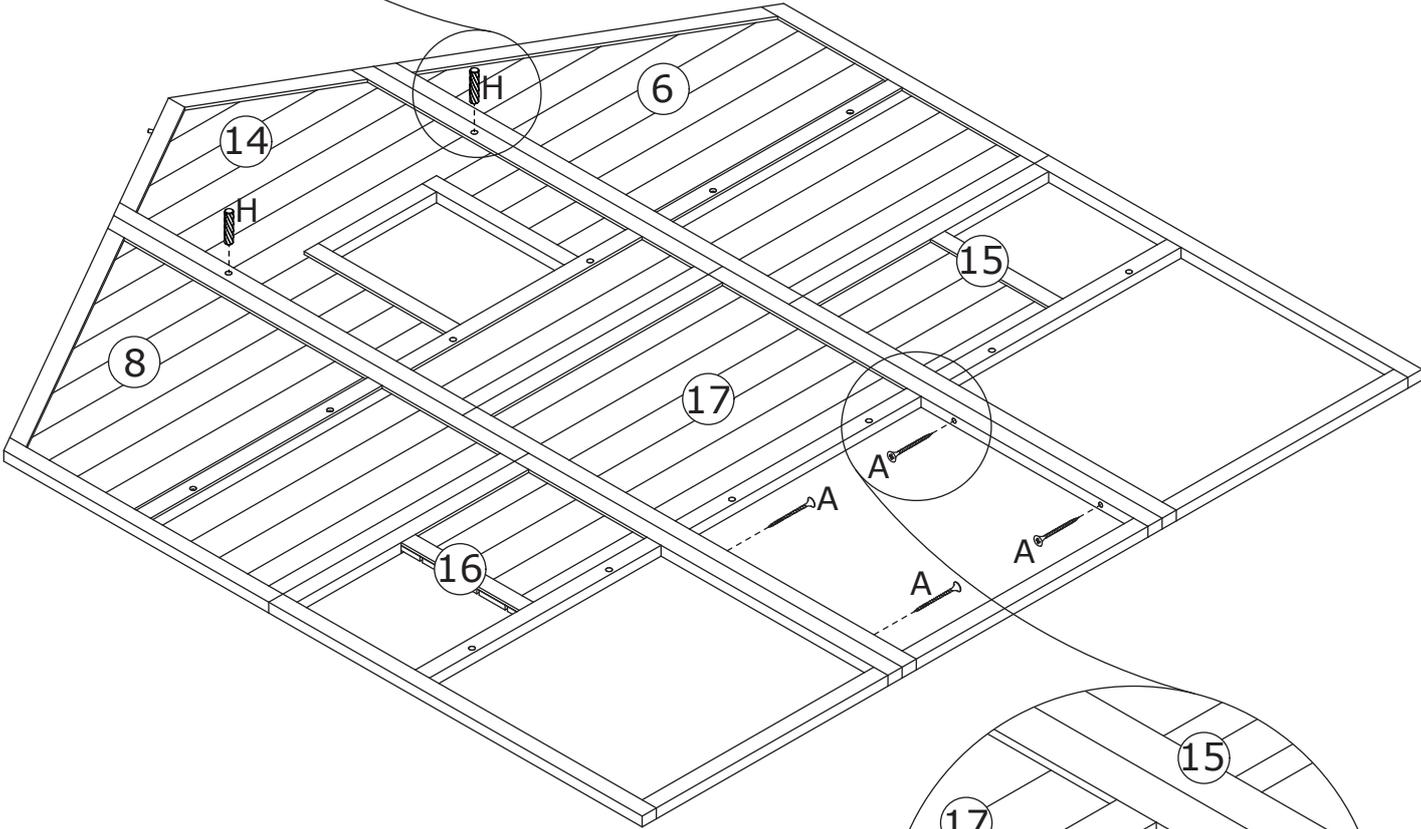







7

 F x 26
M3 x 25 mm

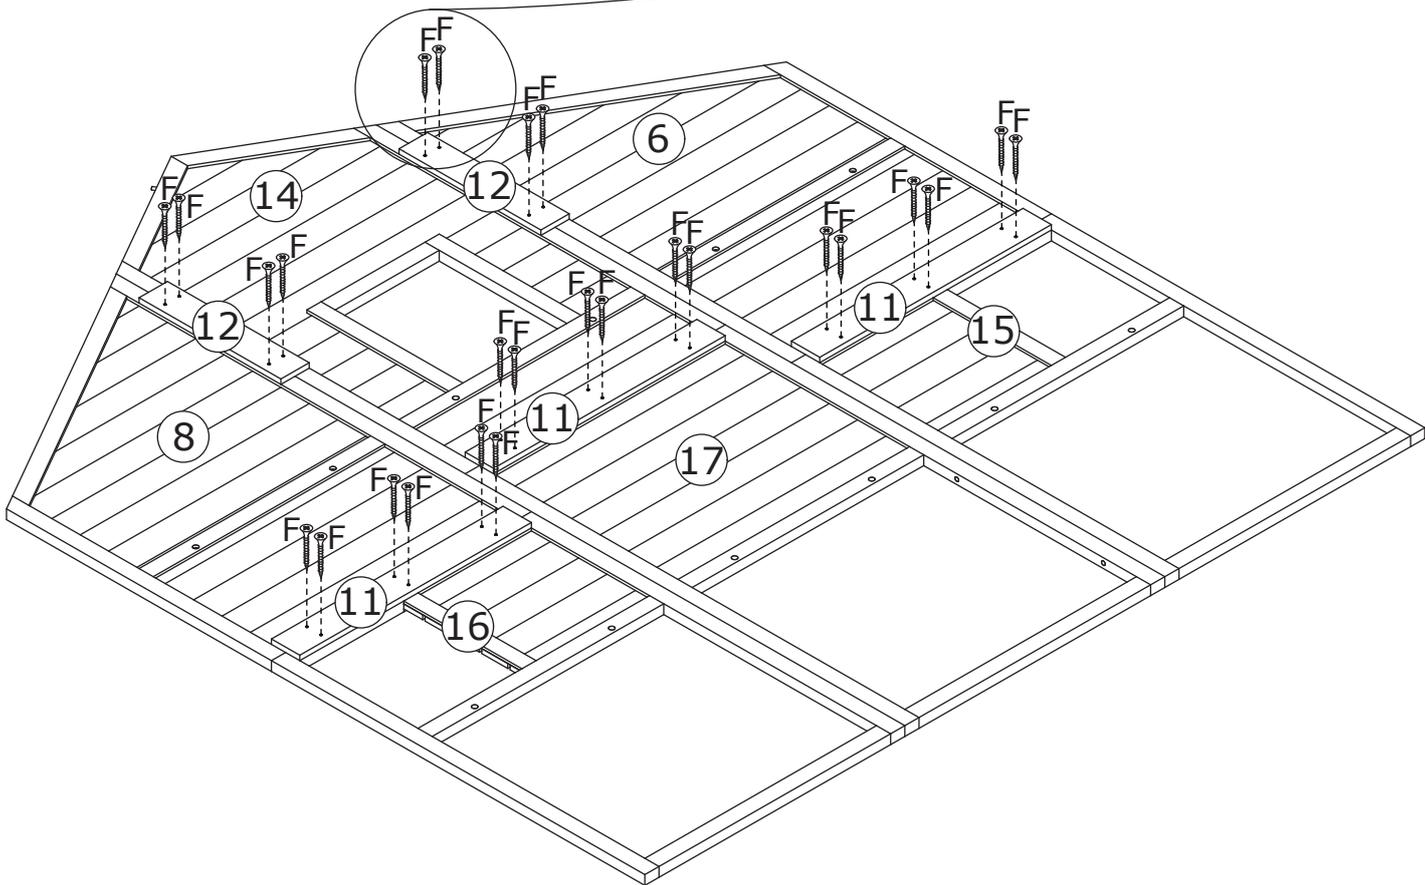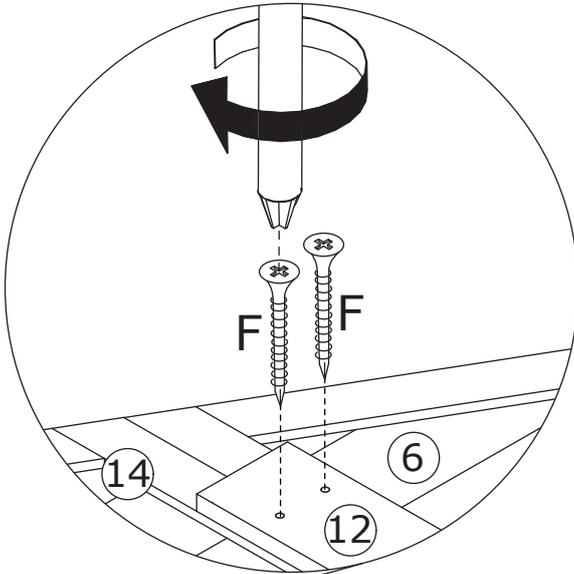



Fix plate 12 to plate 8, 6 and 14 with screw(F) as shown.
Fix plate 11 to plate 6, 15, 14, 17, 8 and 16 with screw(F) as shown.

 8

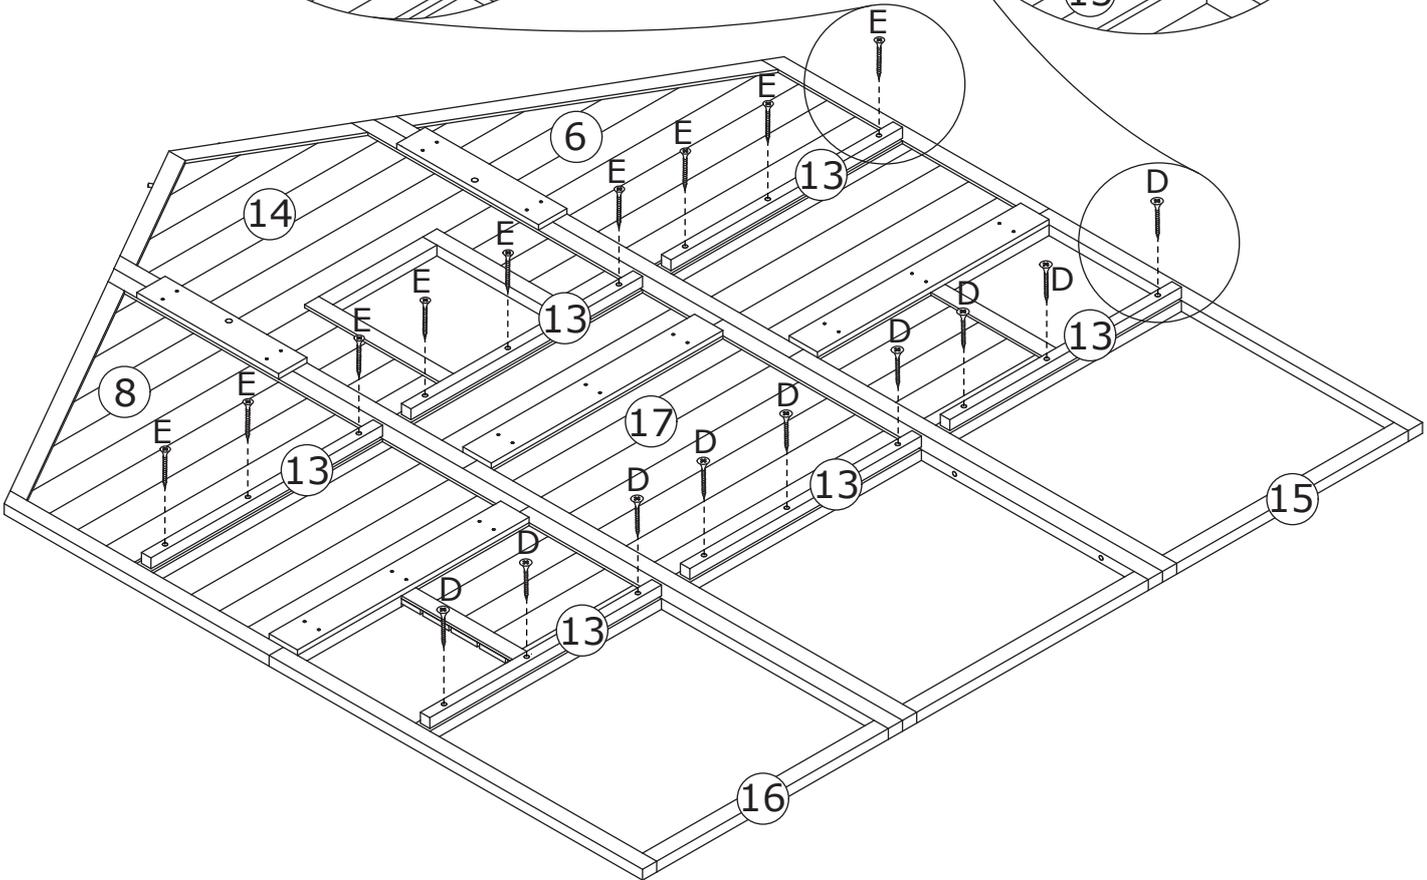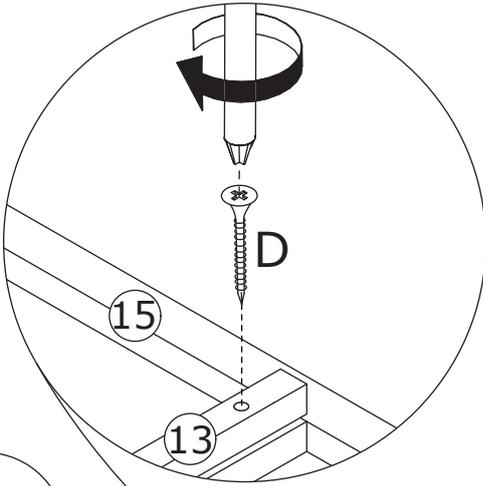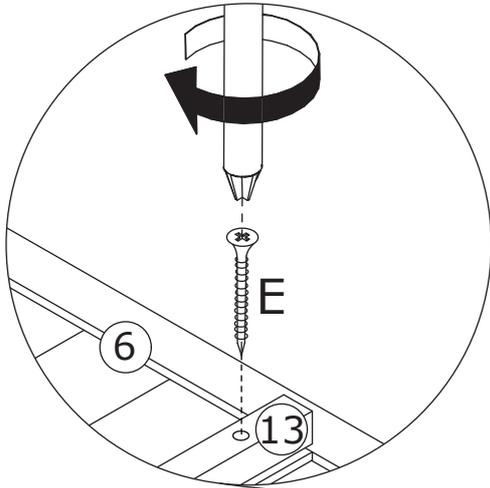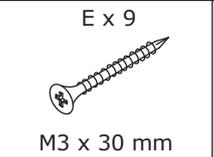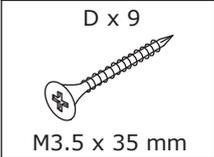


Fix plate 13 to plate 6, 8 and 14 with screw(E) as shown.
Fix plate 13 to plate 15, 16 and 17 with screw(D) as shown.

  9


<p>C x 8</p>  <p>M3.5 x 40 mm</p>	<p>G x 12</p>  <p>M3 x 12 mm</p>	<p>I x 2</p> 	
--	---	--	---

Fix plate 4 to the two components(plate 8, 16, 6 and 10) with screw(C) as shown.
Fix lock(I) to plate 4 with screw(G) as shown.




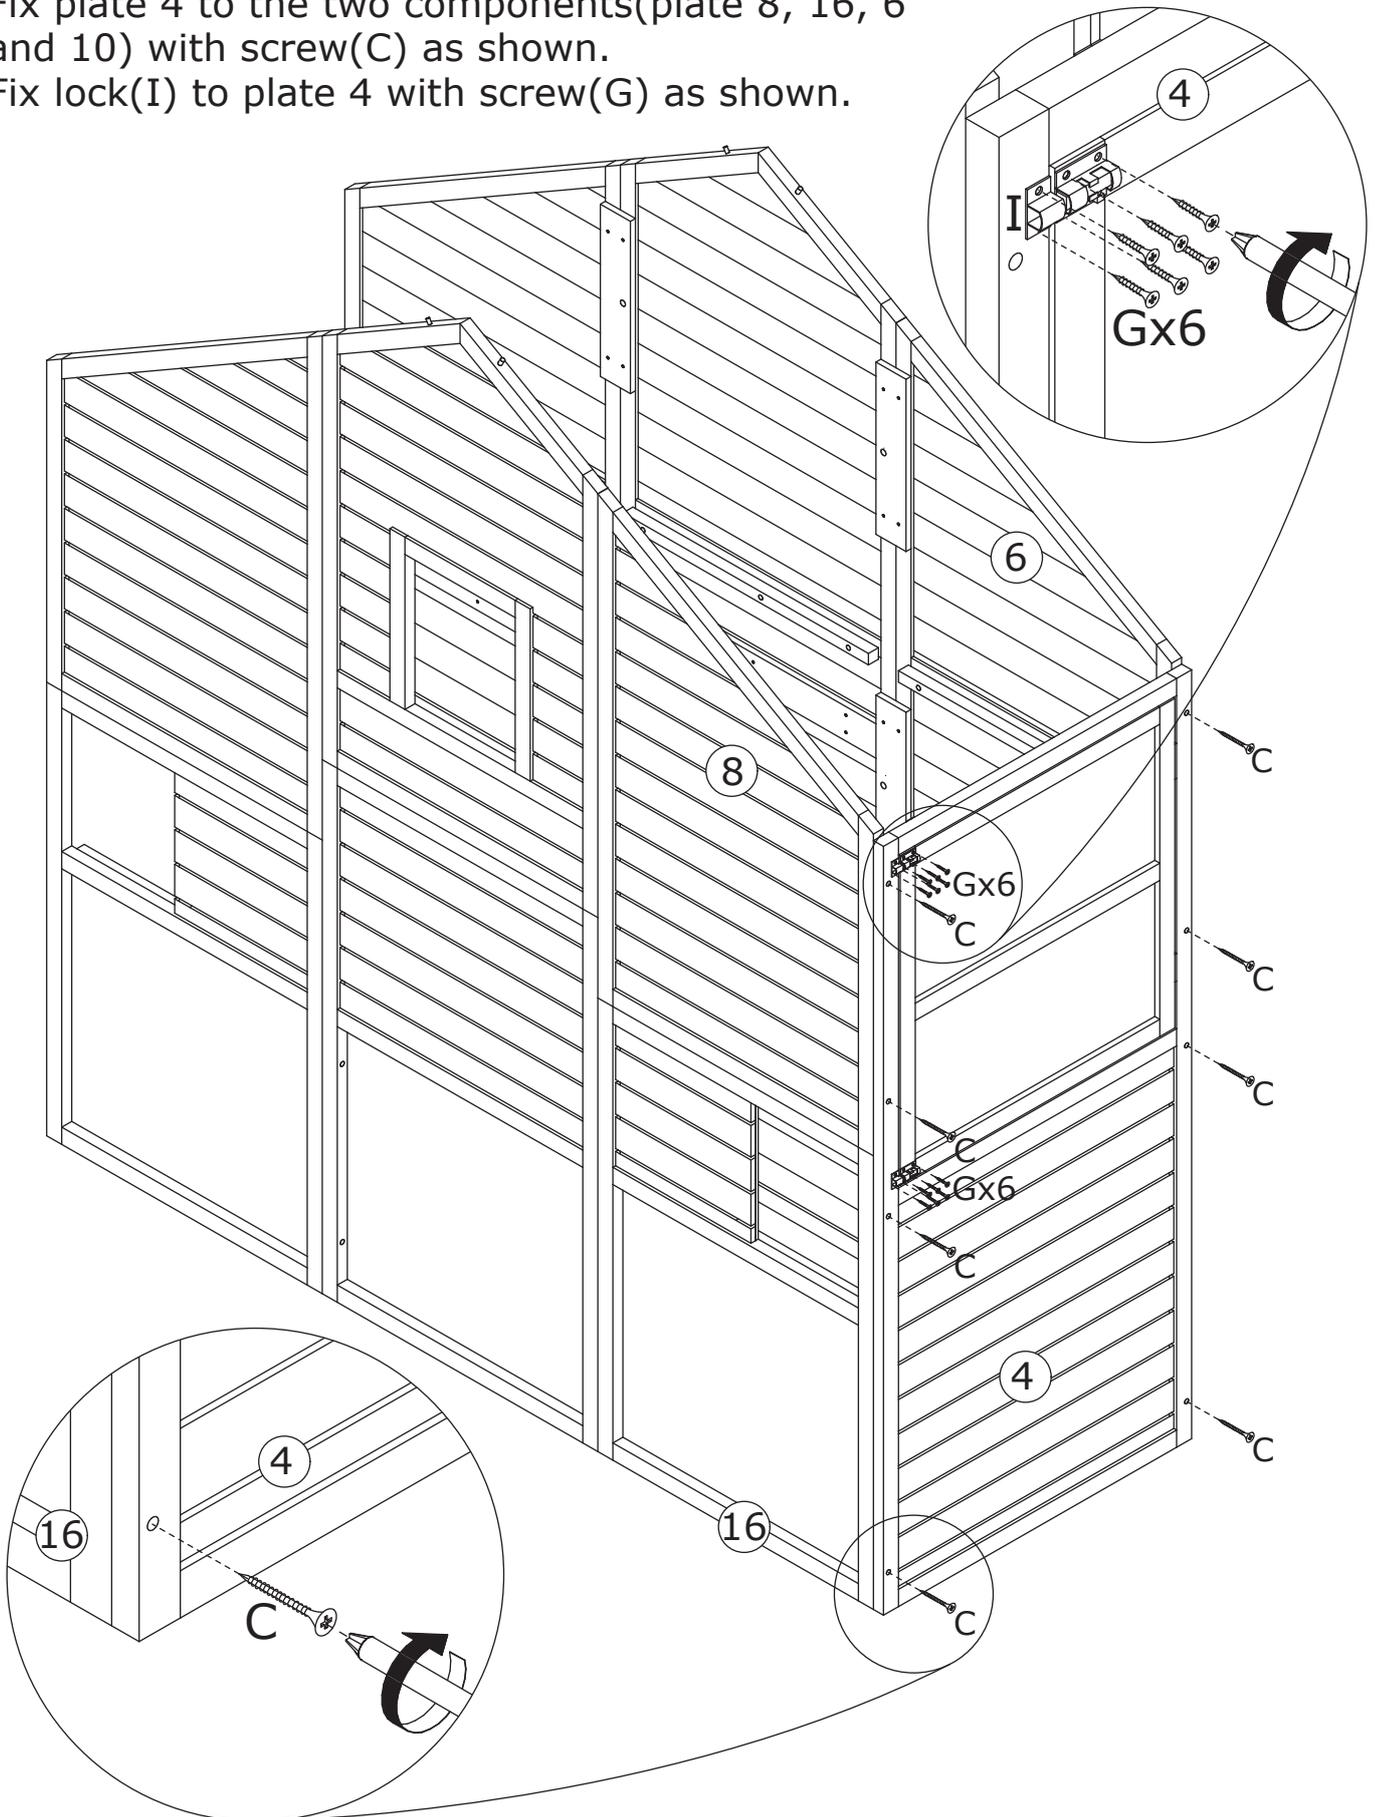


10




Place shelf plate 18 and 19 as shown.

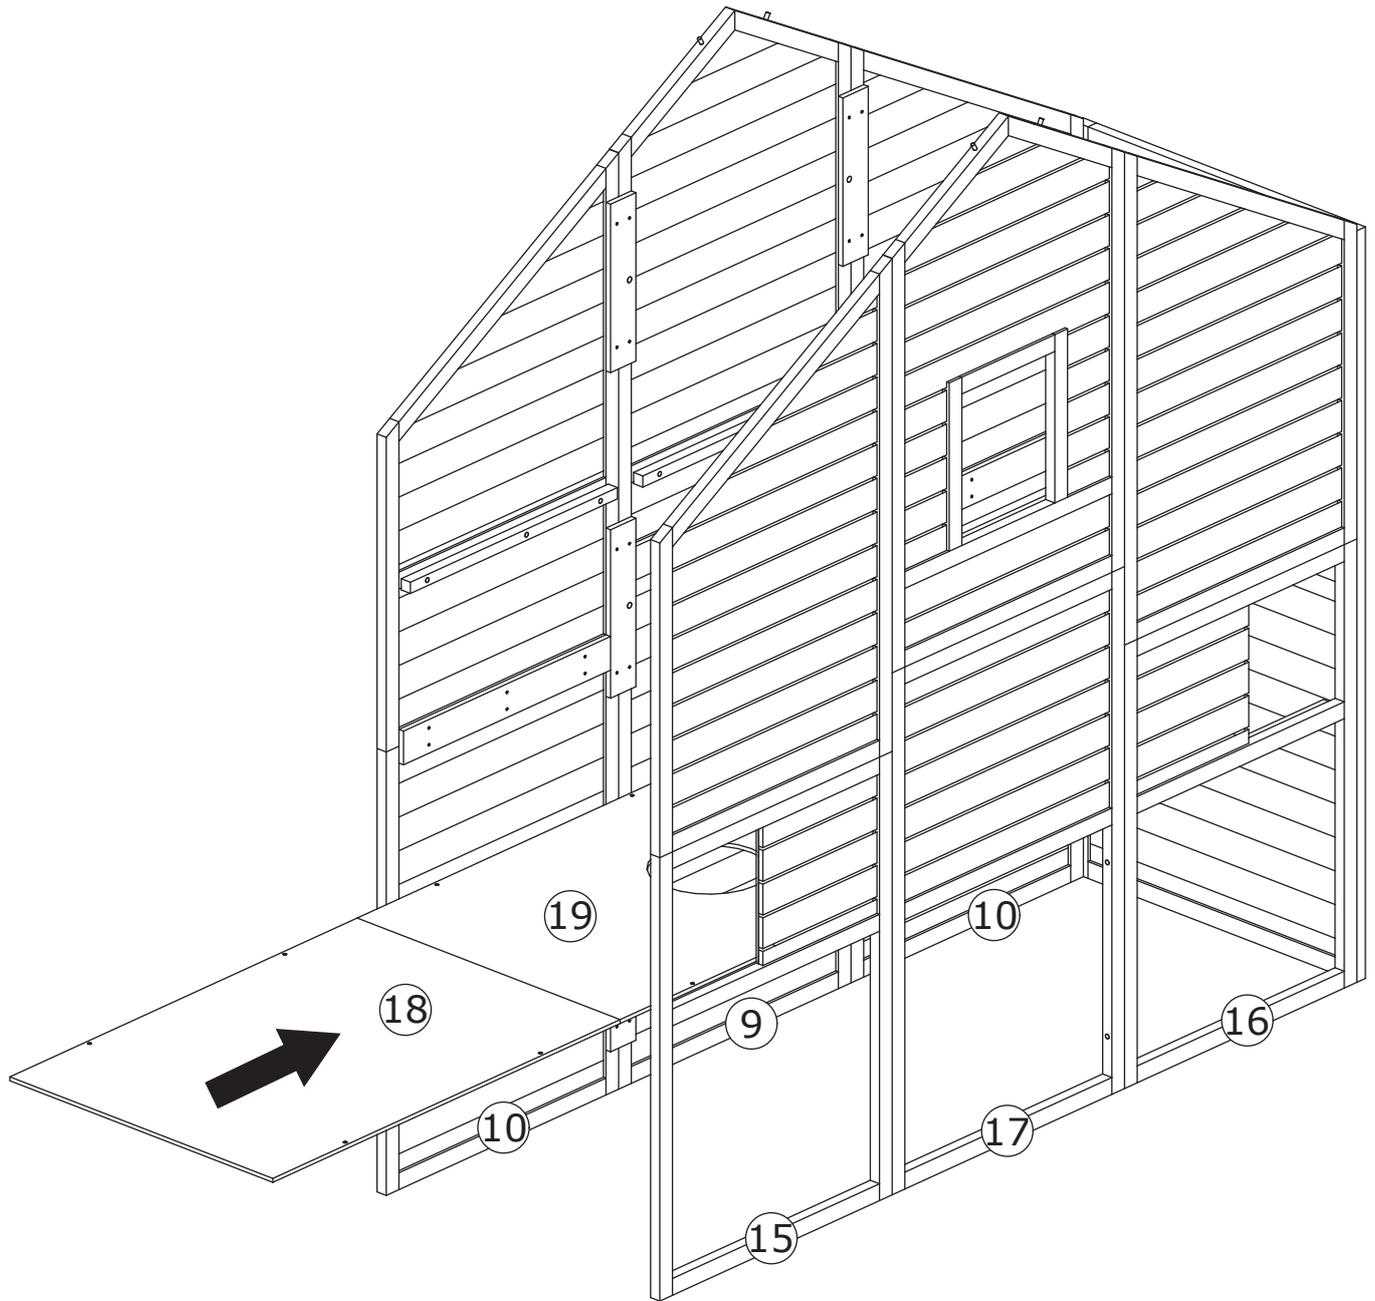

11

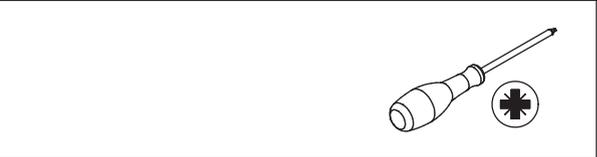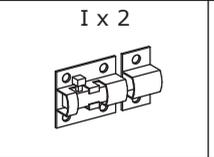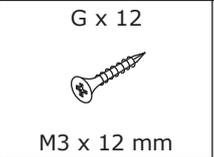
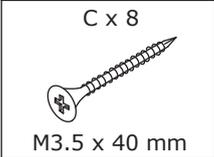


Fix plate 3 to the two components(plate 6, 15, 8 and 10) with screw(C) as shown.
Fix lock(I) to plate 3 with screw(G) as shown.

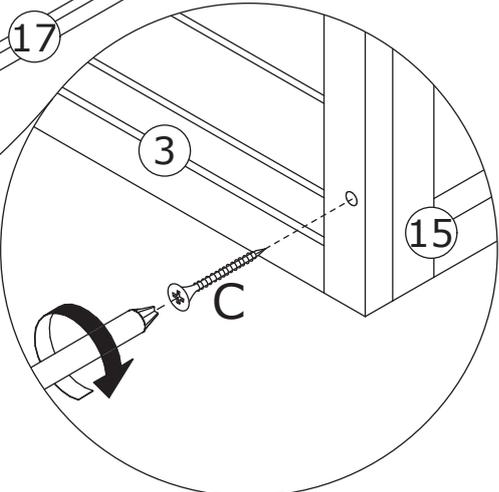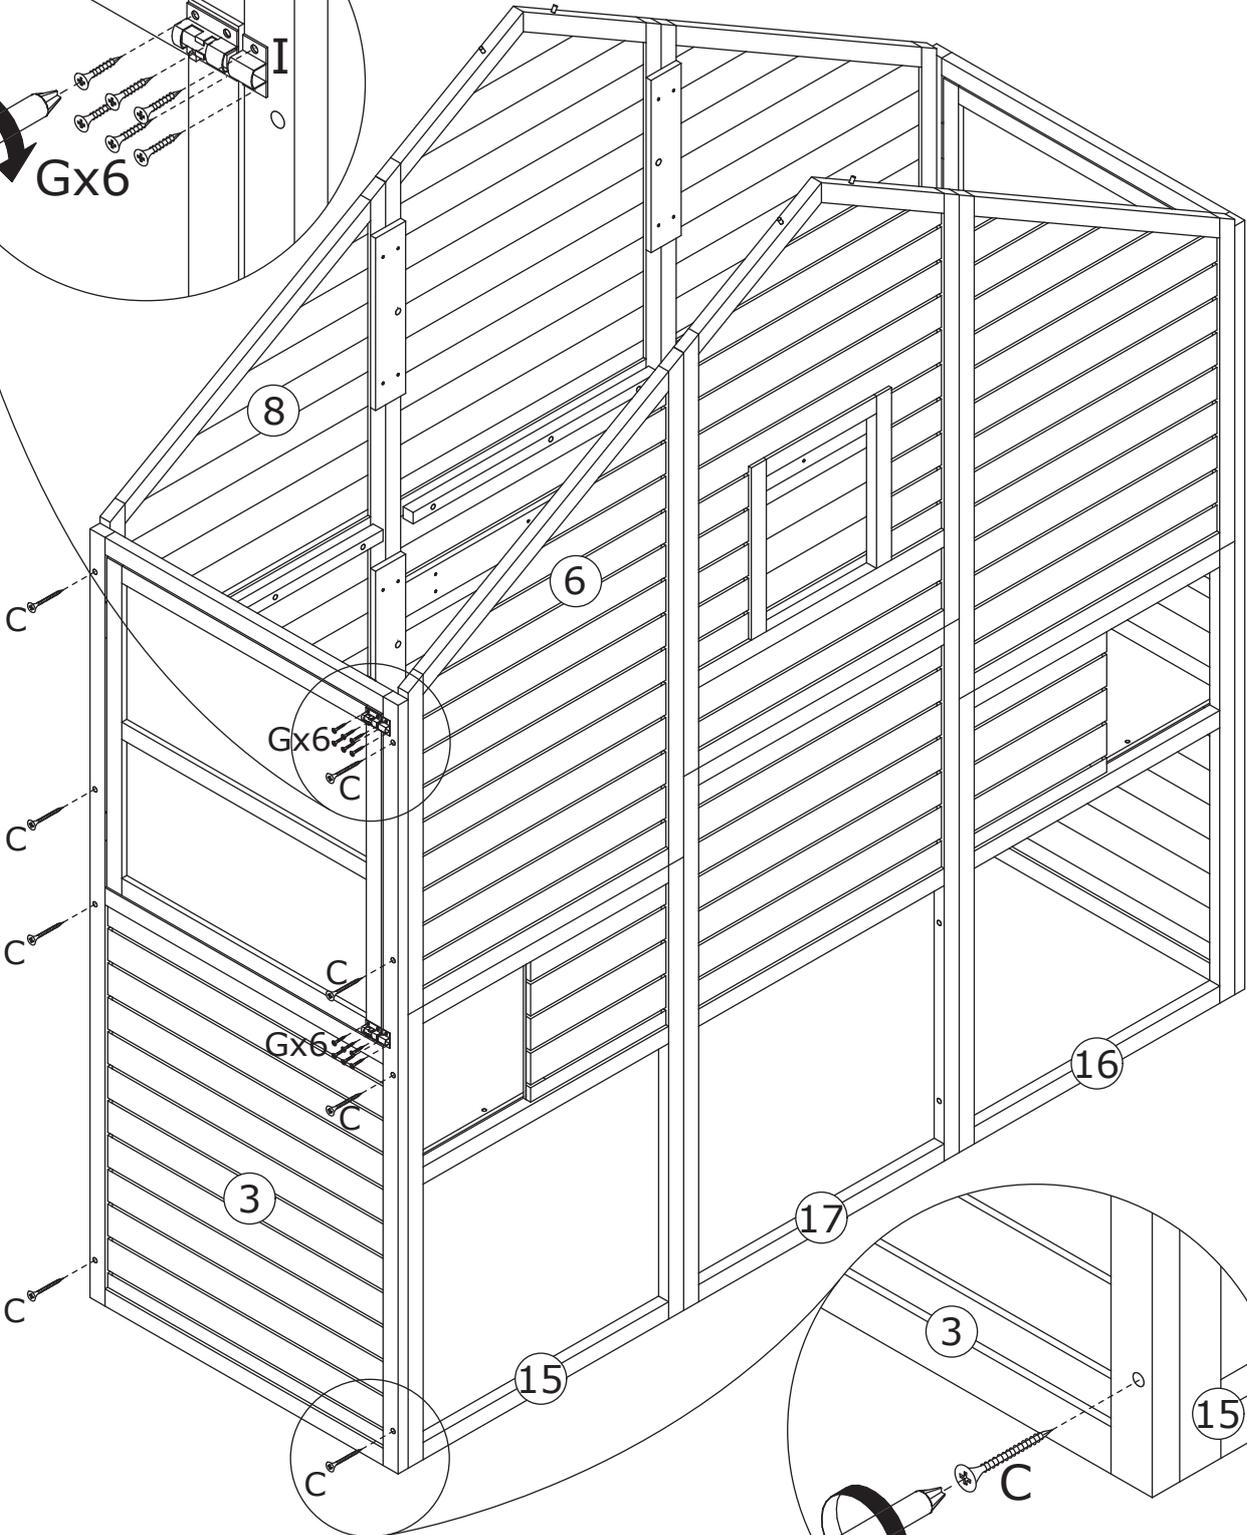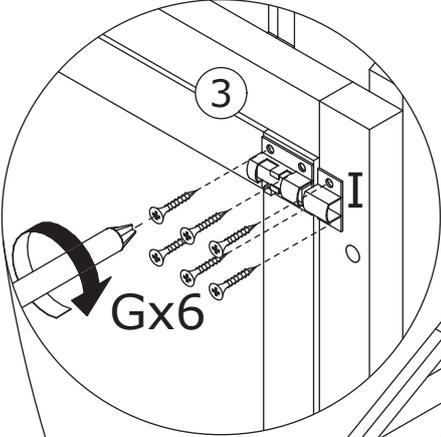

12

 
F x 8
M3 x 25 mm

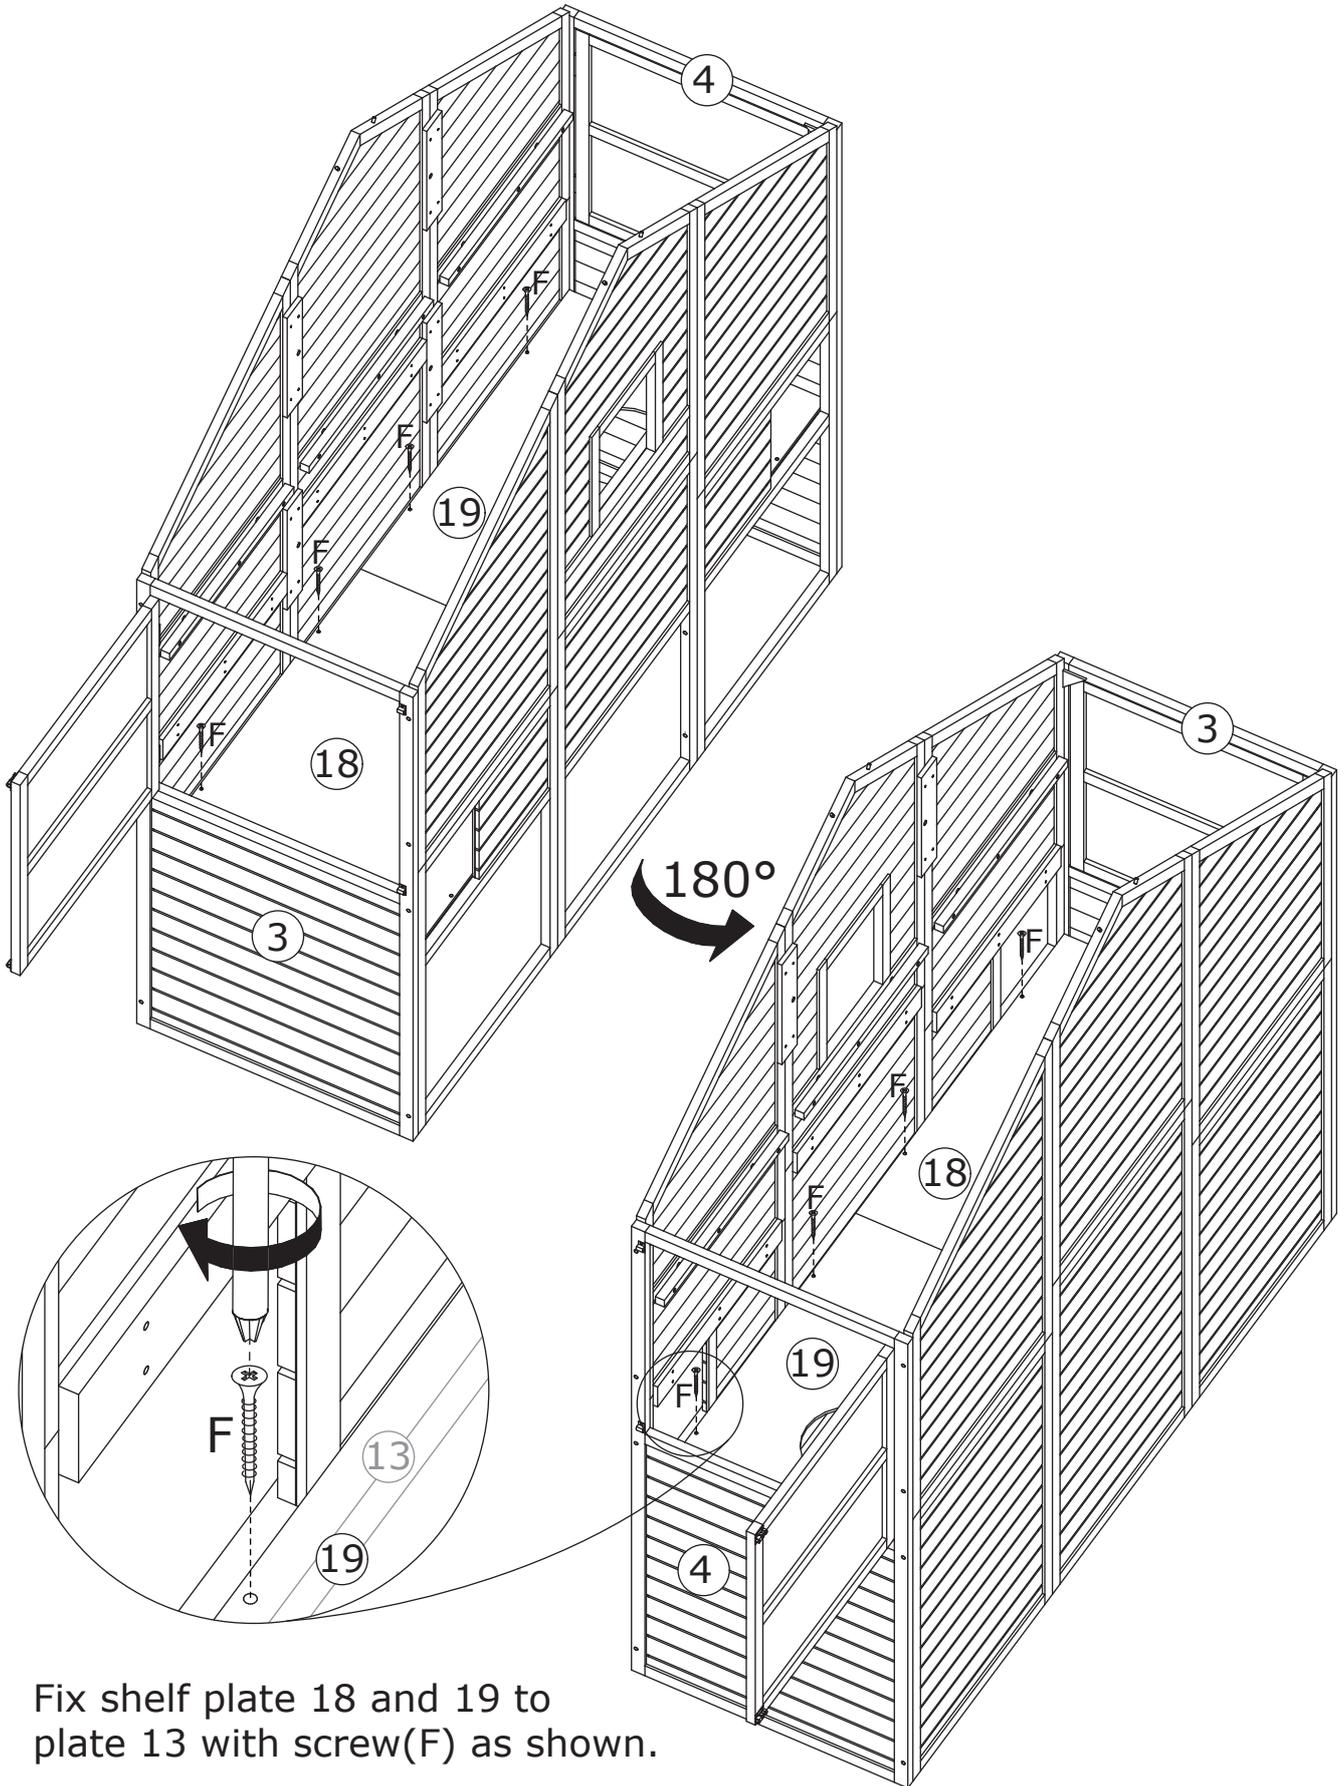

Fix shelf plate 18 and 19 to plate 13 with screw(F) as shown.



13

Place another two shelf plate 18 and 19 as shown.

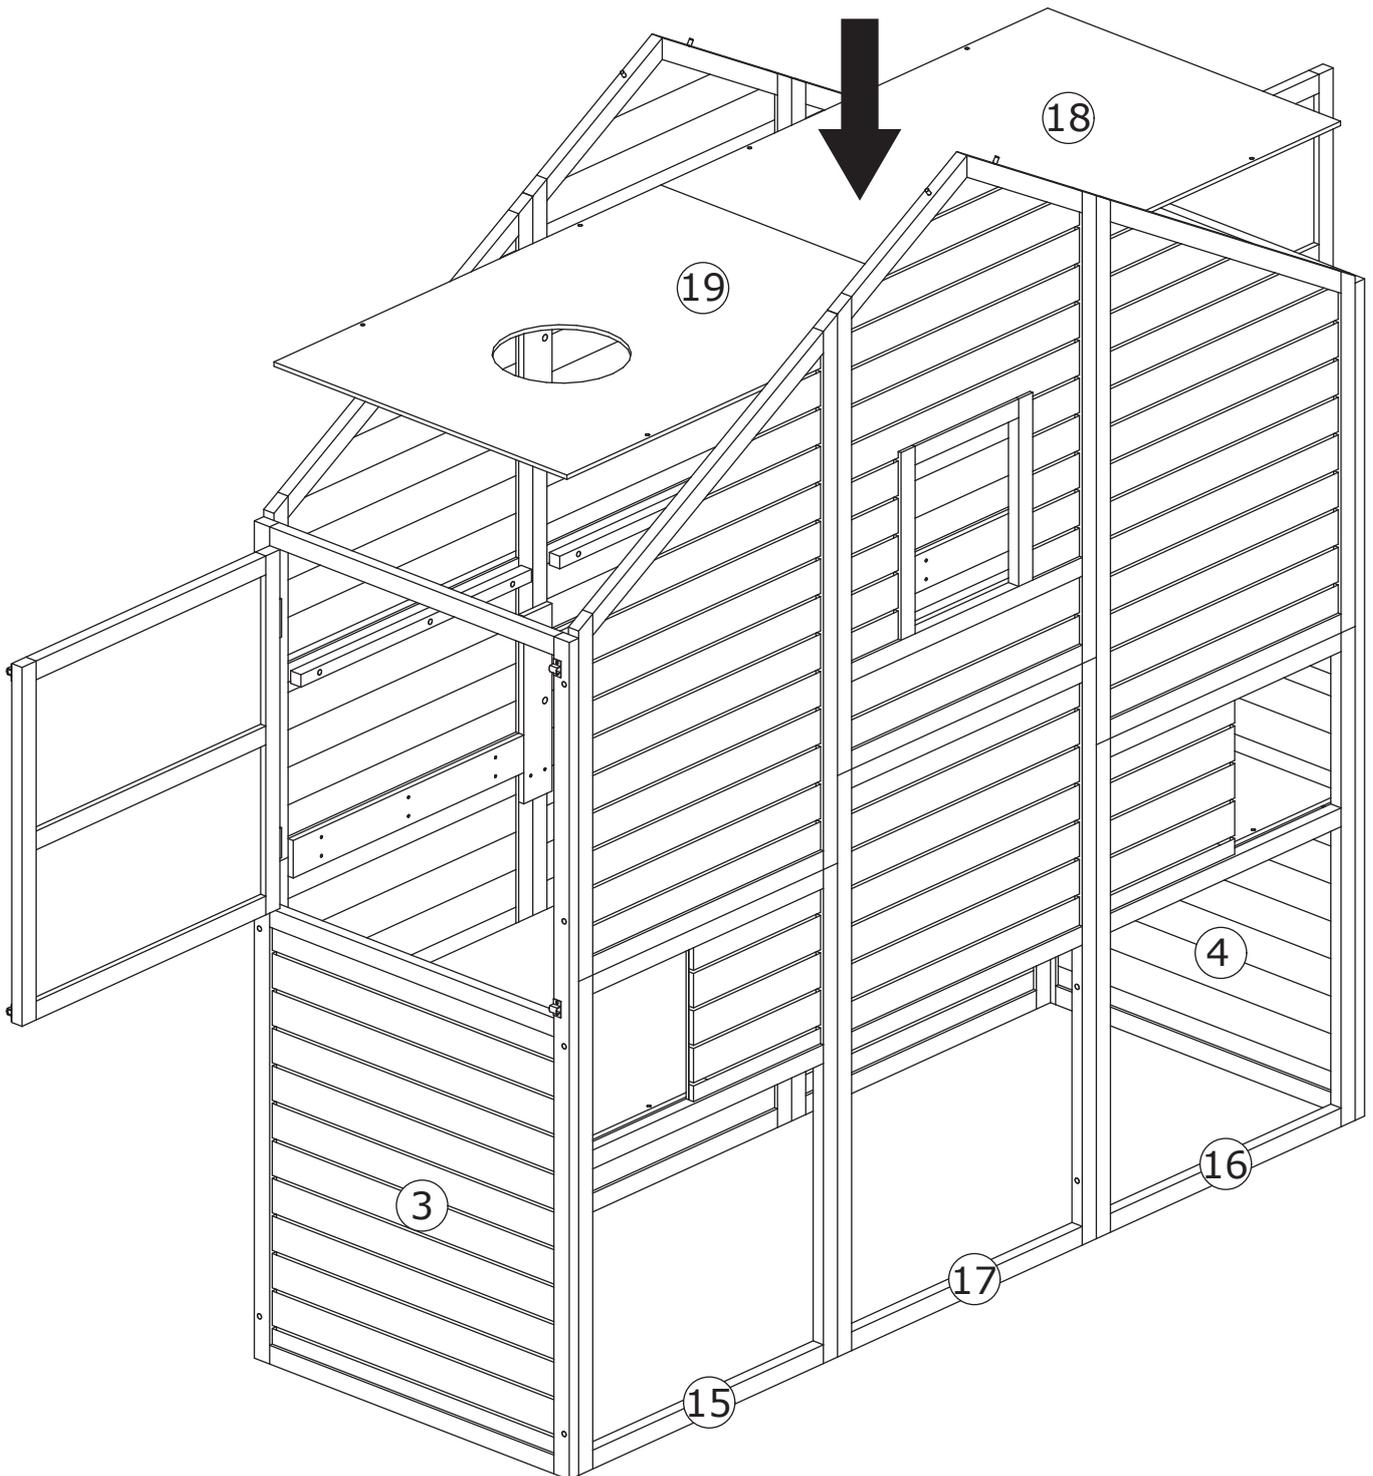

14


 
F x 8
M3 x 25 mm

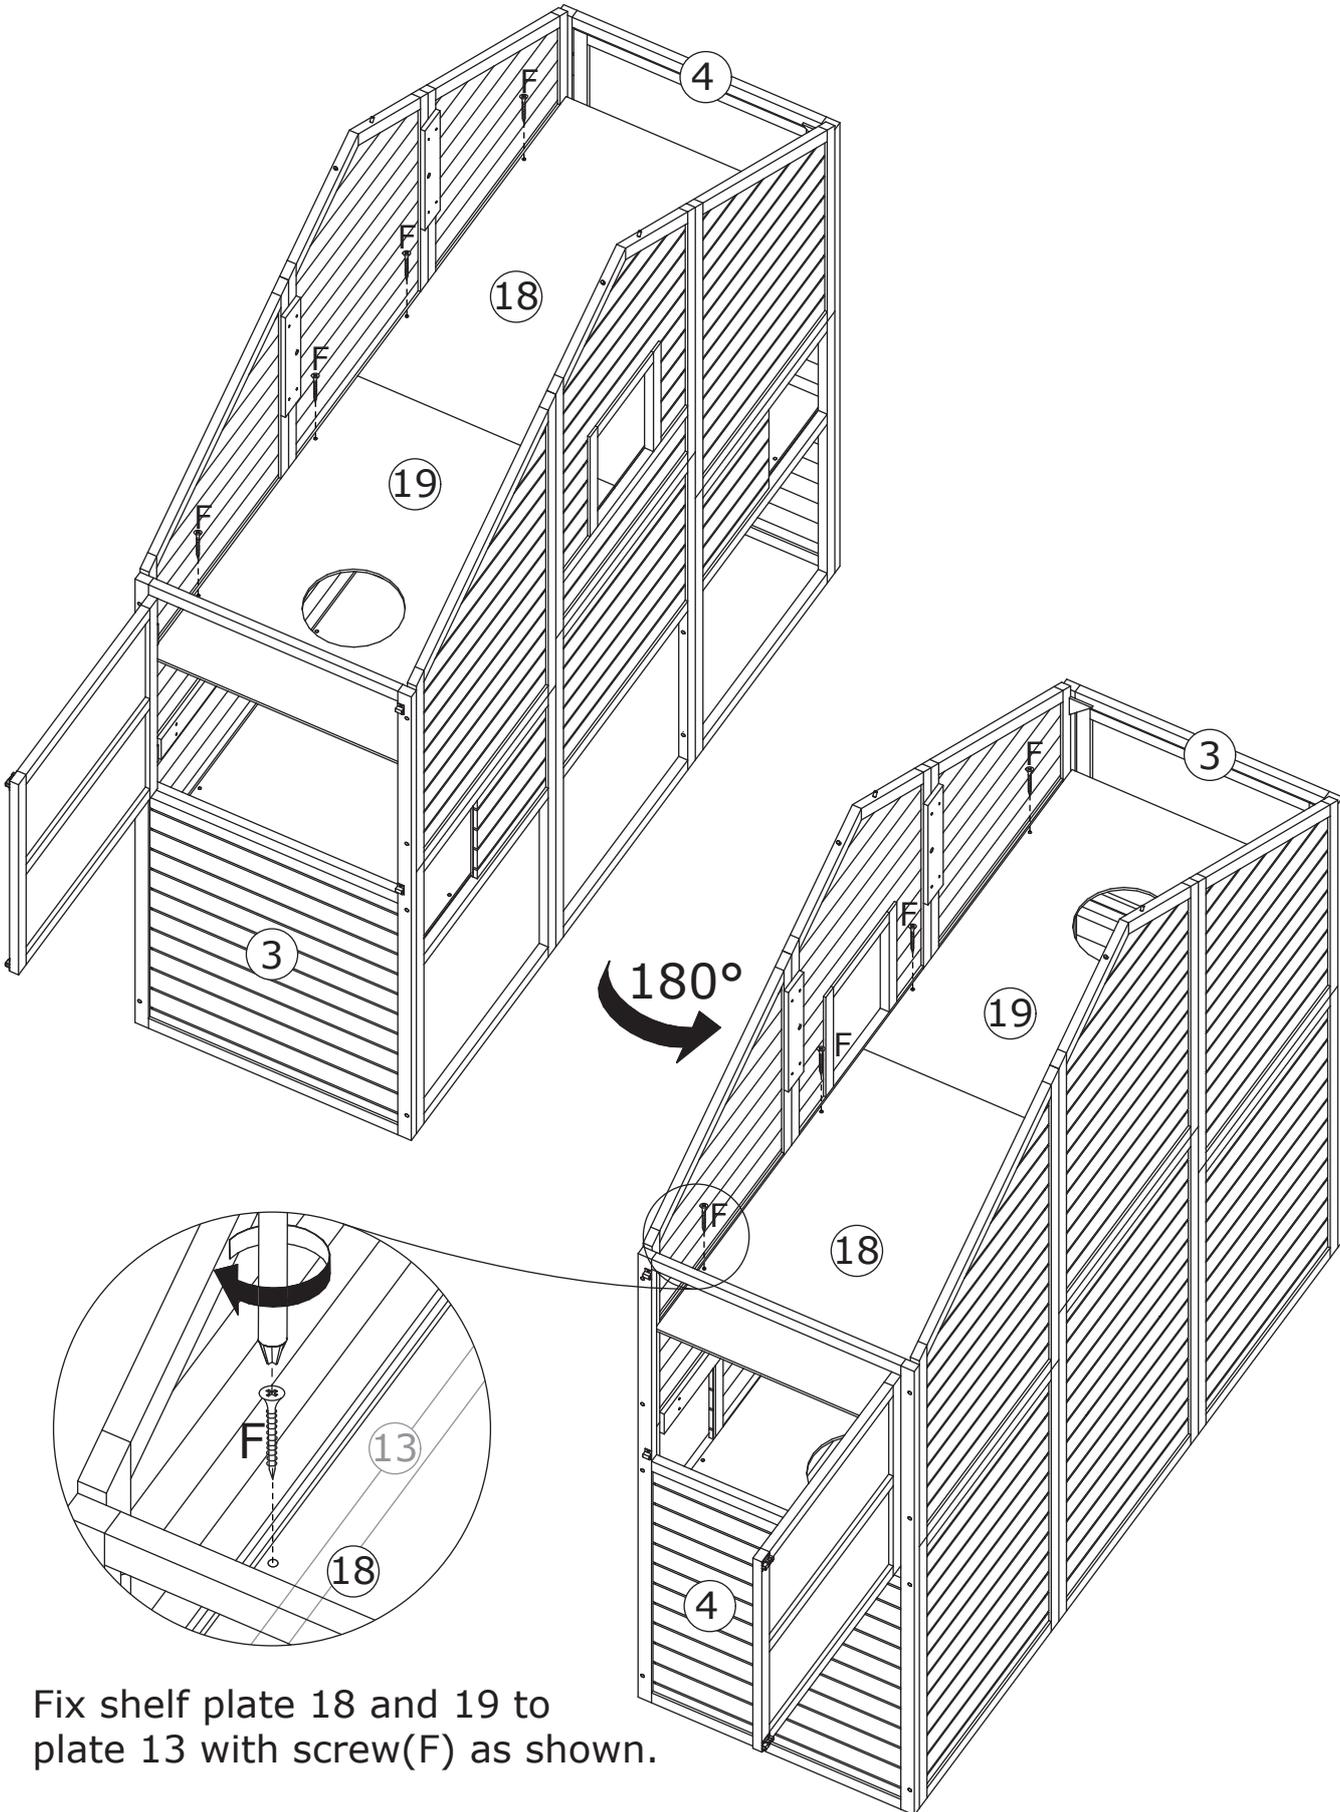


Fix shelf plate 18 and 19 to plate 13 with screw(F) as shown.

15

 A x 8
M3.5 x 50 mm

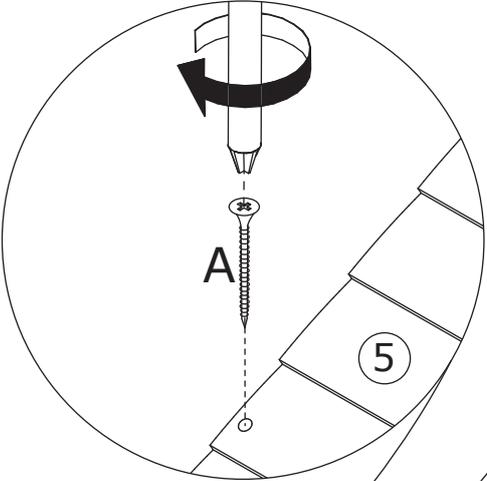



Fix top plate 5 to plate 6, 14, 7 and 8 with screw(A) as shown.

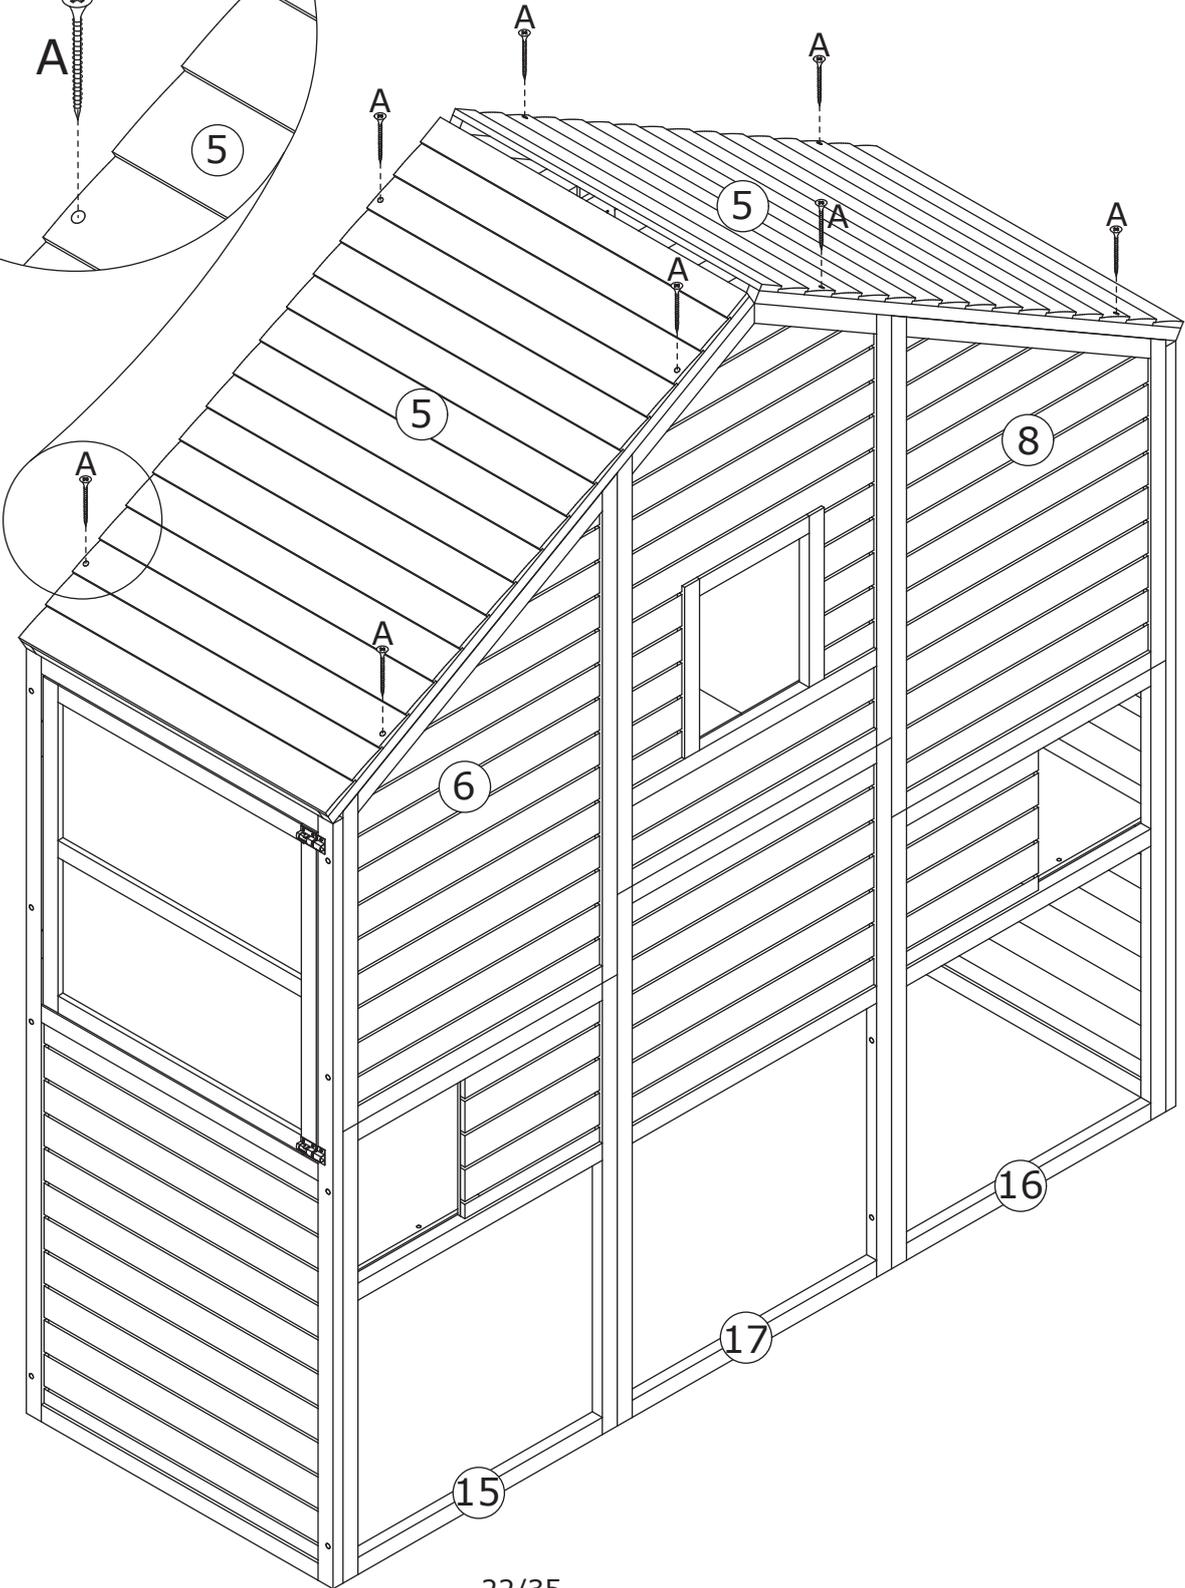

16


 
E x 2
M3 x 30 mm

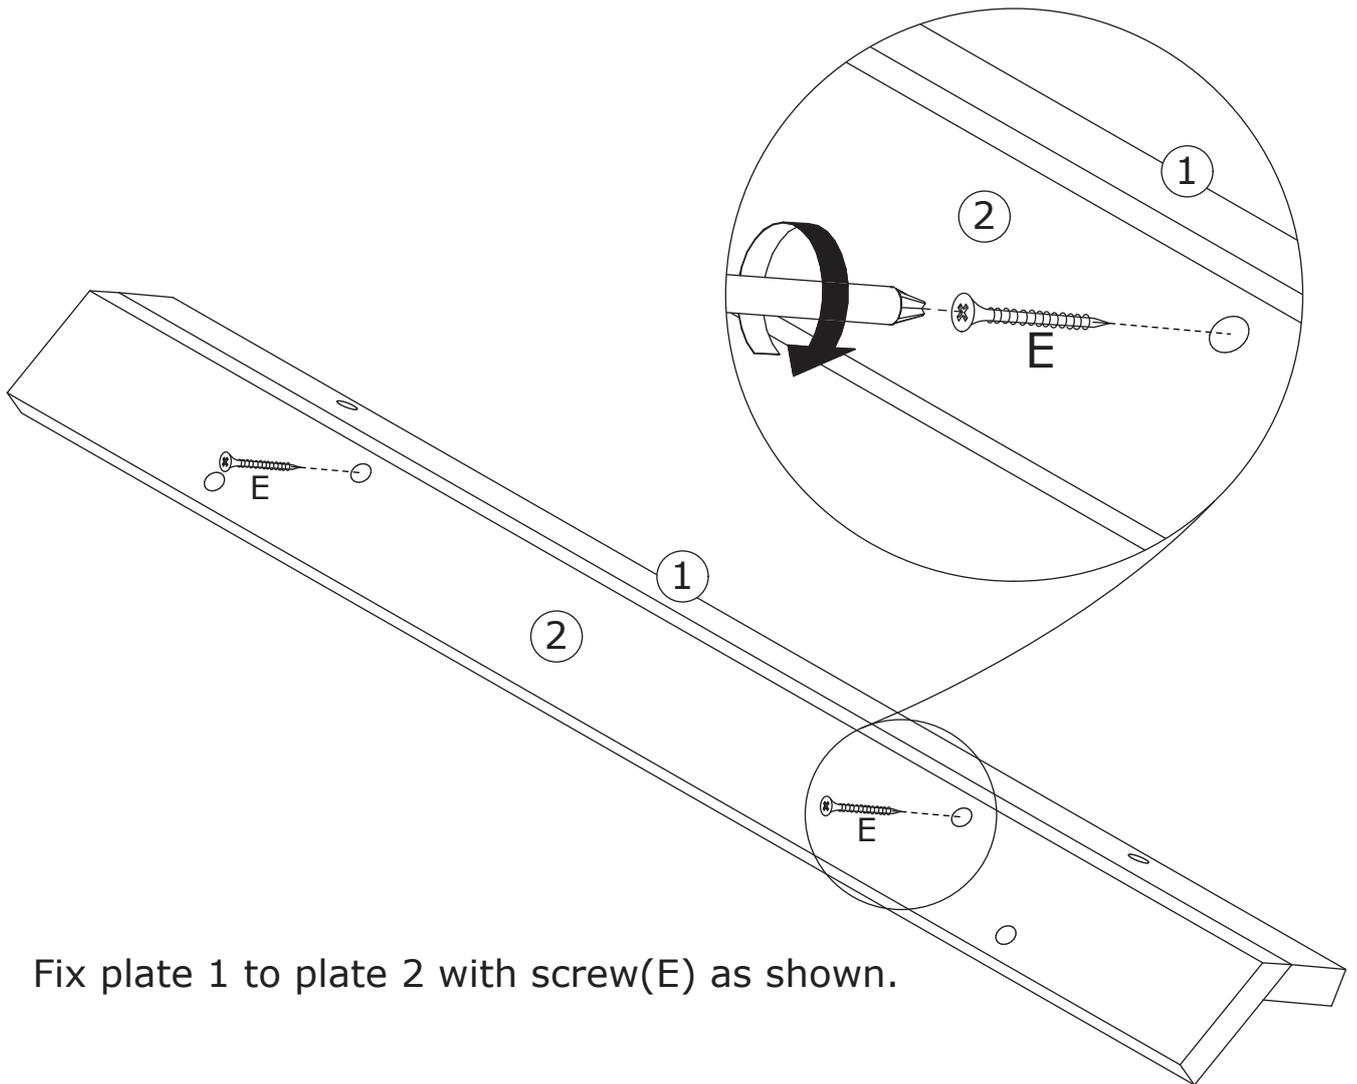


Fix plate 1 to plate 2 with screw(E) as shown.

17


 
F x 4
M3 x 25 mm

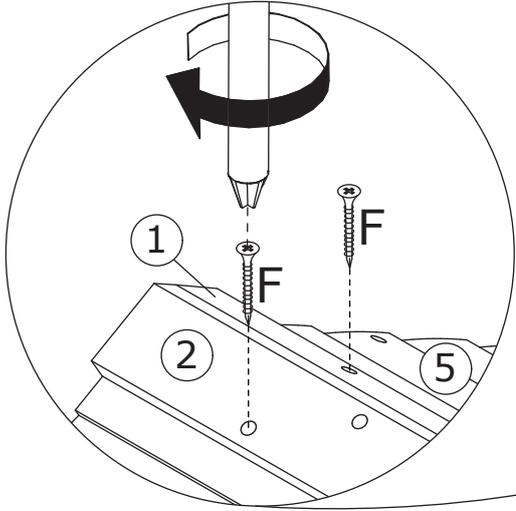



Fix plate 1 and 2 to plate 5 with screw(F) as shown.

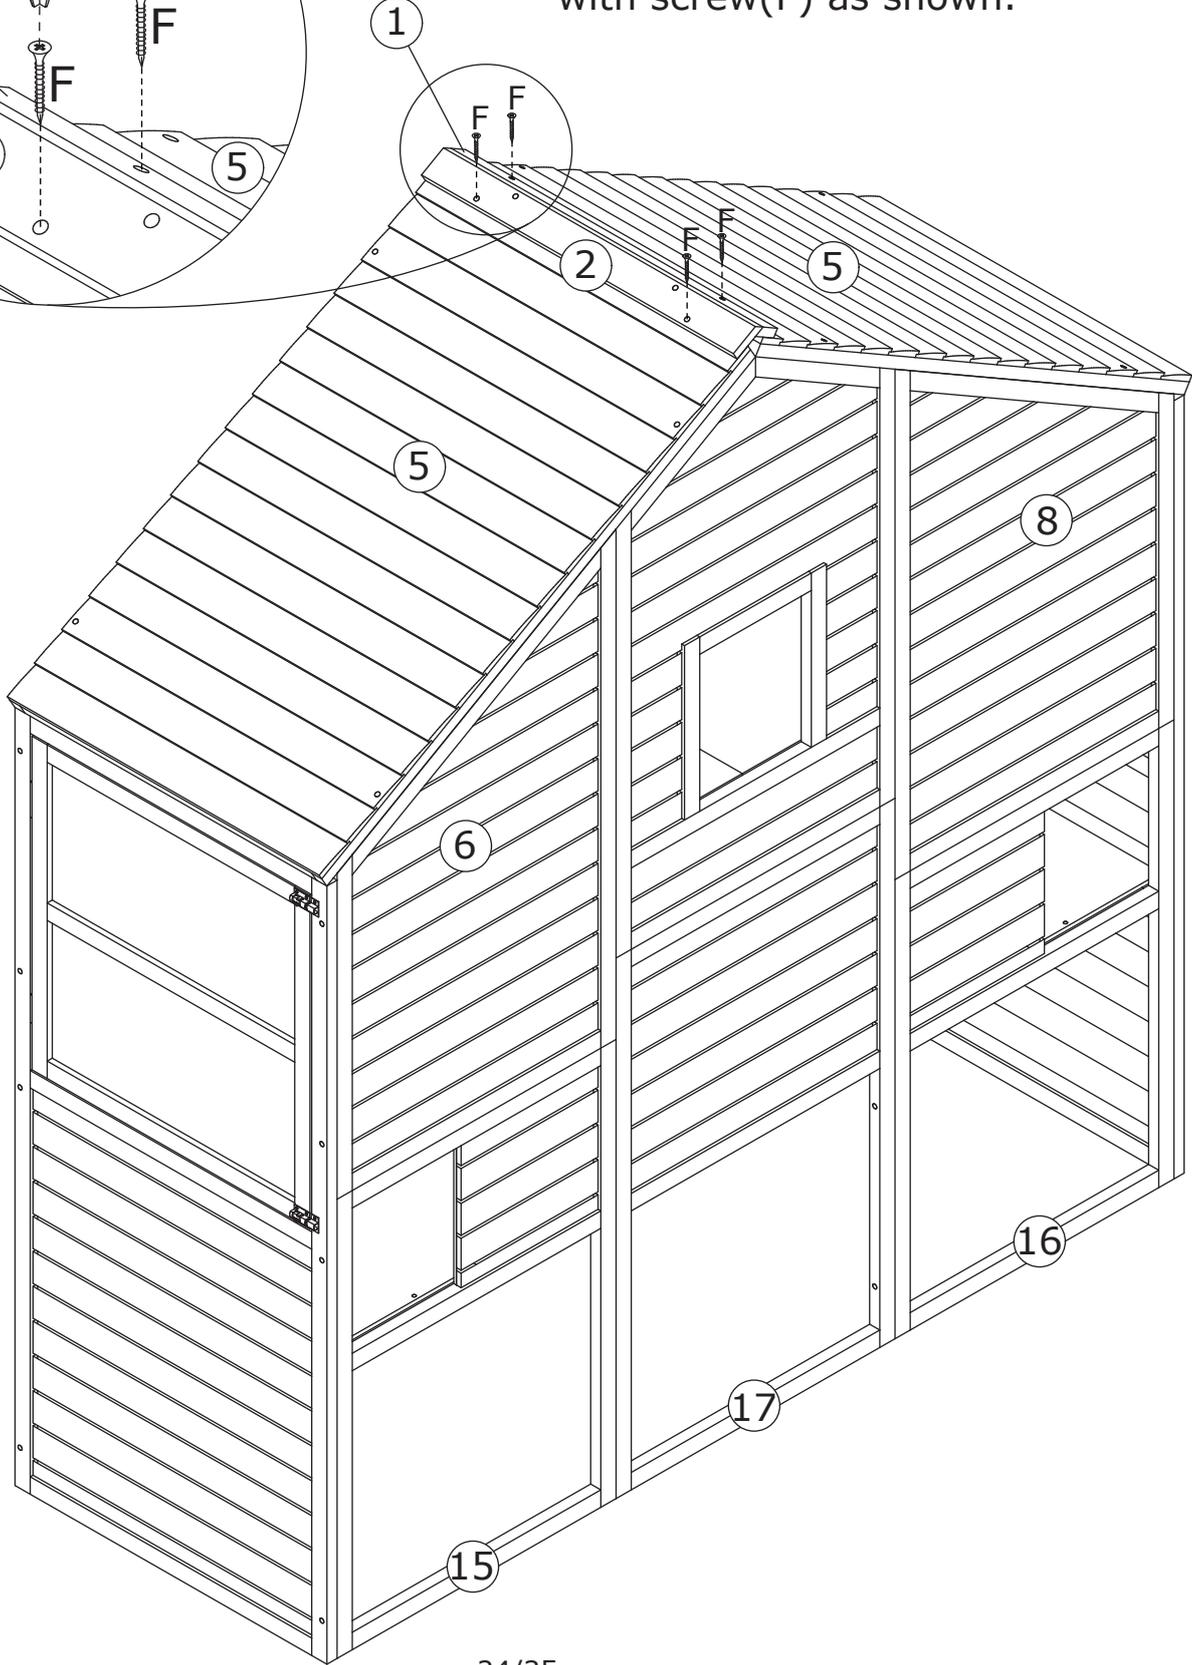

18

 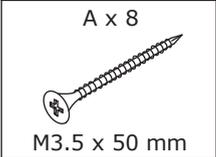


Fix plate 20 to plate 3 with screw(A) at first.
Fix plate 21 to plate 20 with screw(A) as shown.

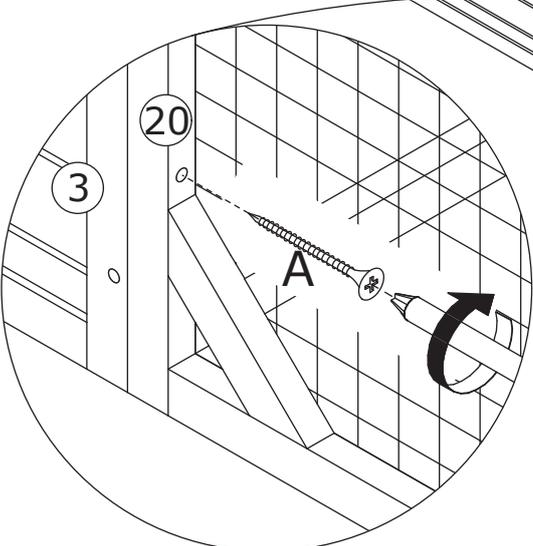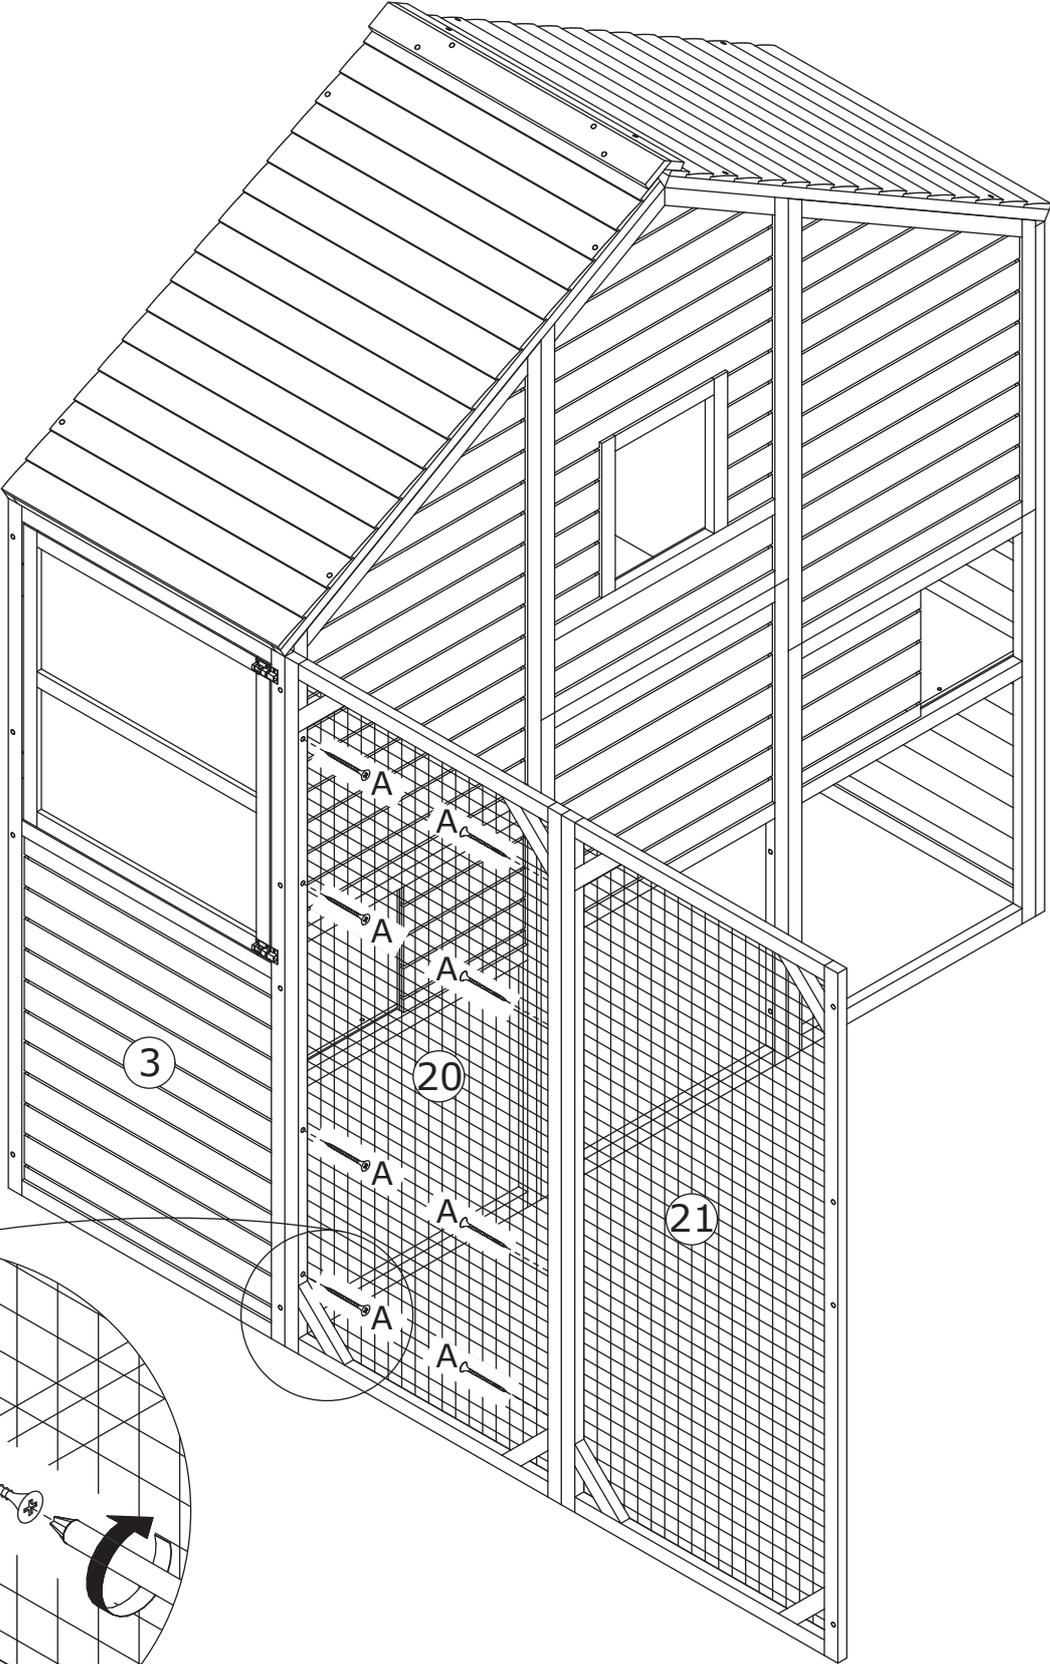


19

 A x 8
M3.5 x 50 mm




Fix another plate 20 to plate 4 with screw(A) at first.
Fix plate 22 to plate 20 with screw(A) as shown.

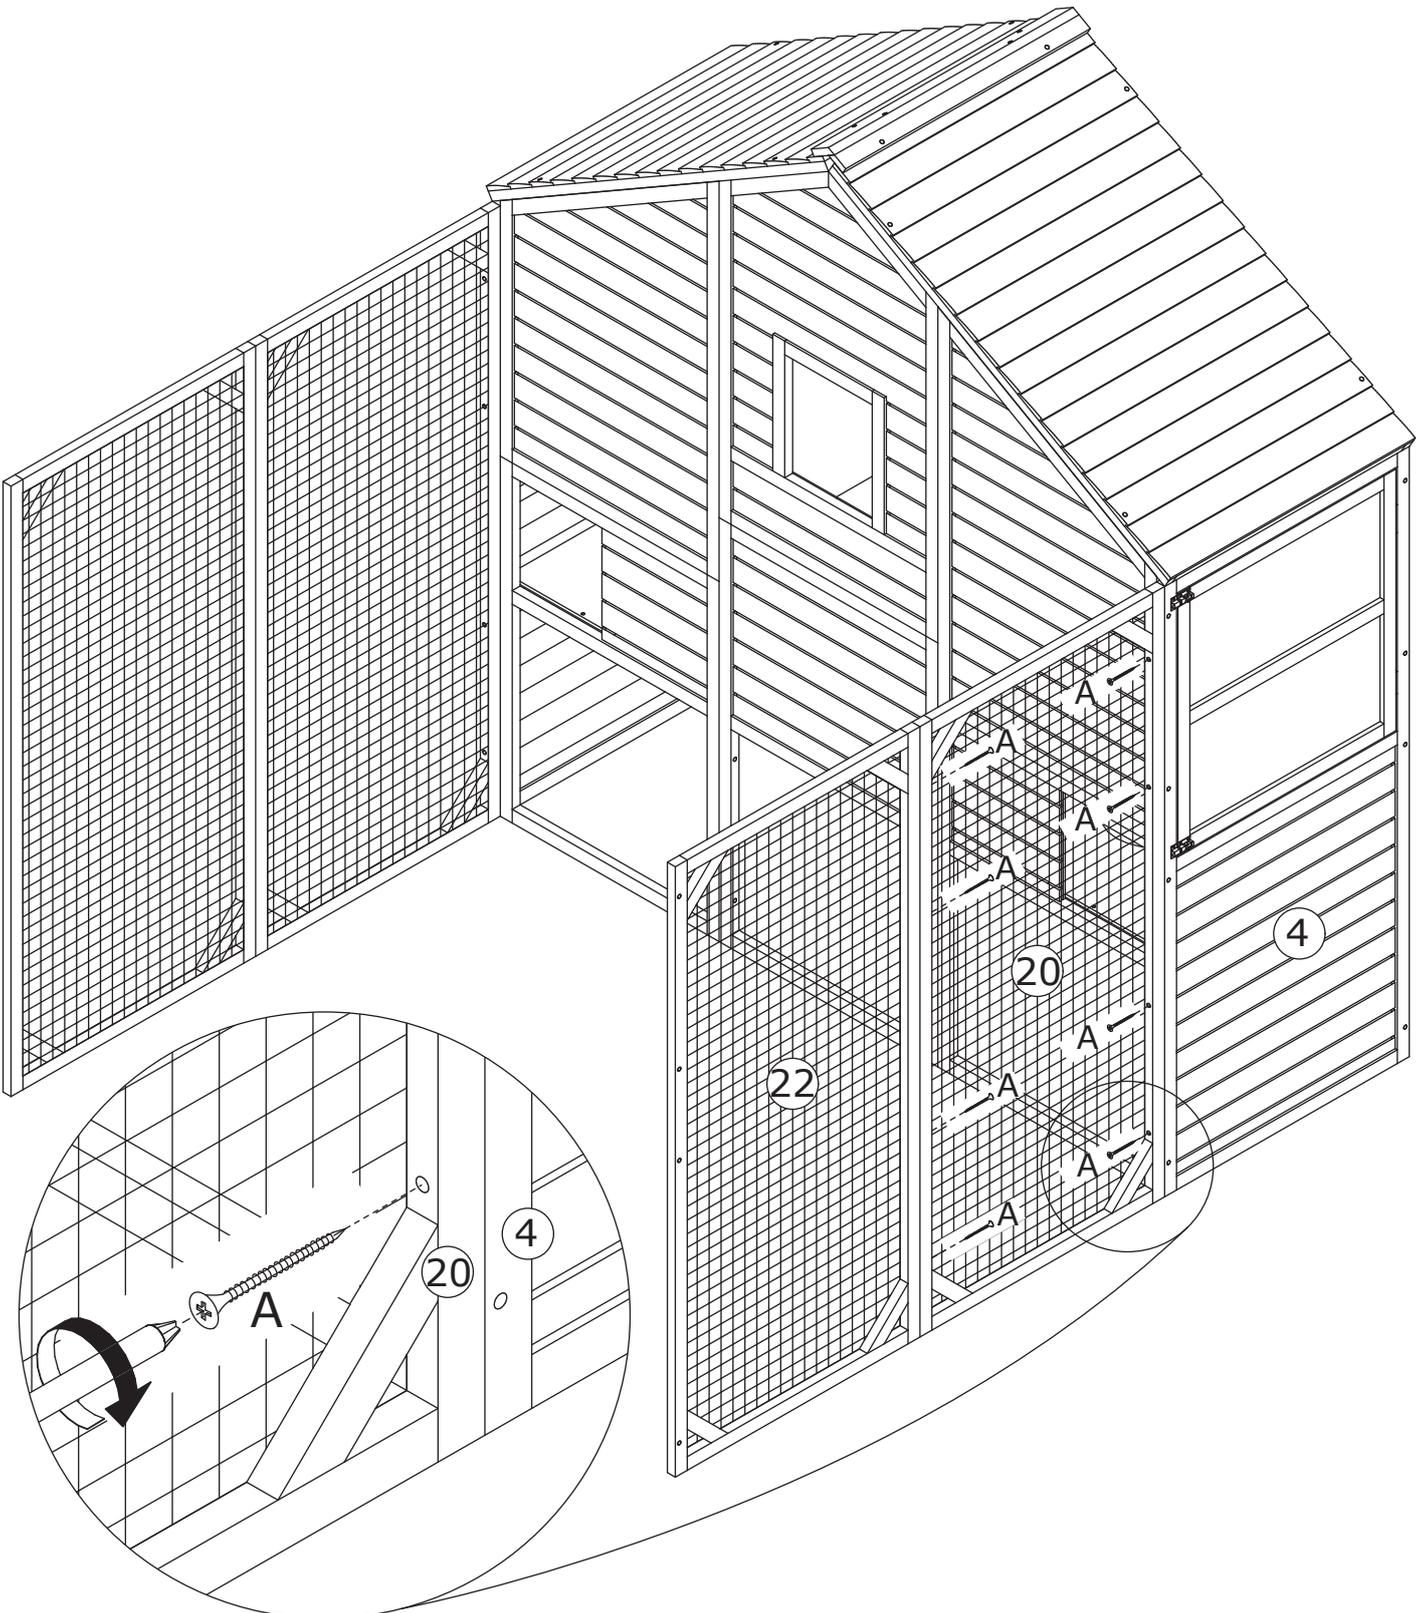


20

 F x 8
M3 x 25 mm




Fix plate 23 to plate 24 with screw(F) as shown.

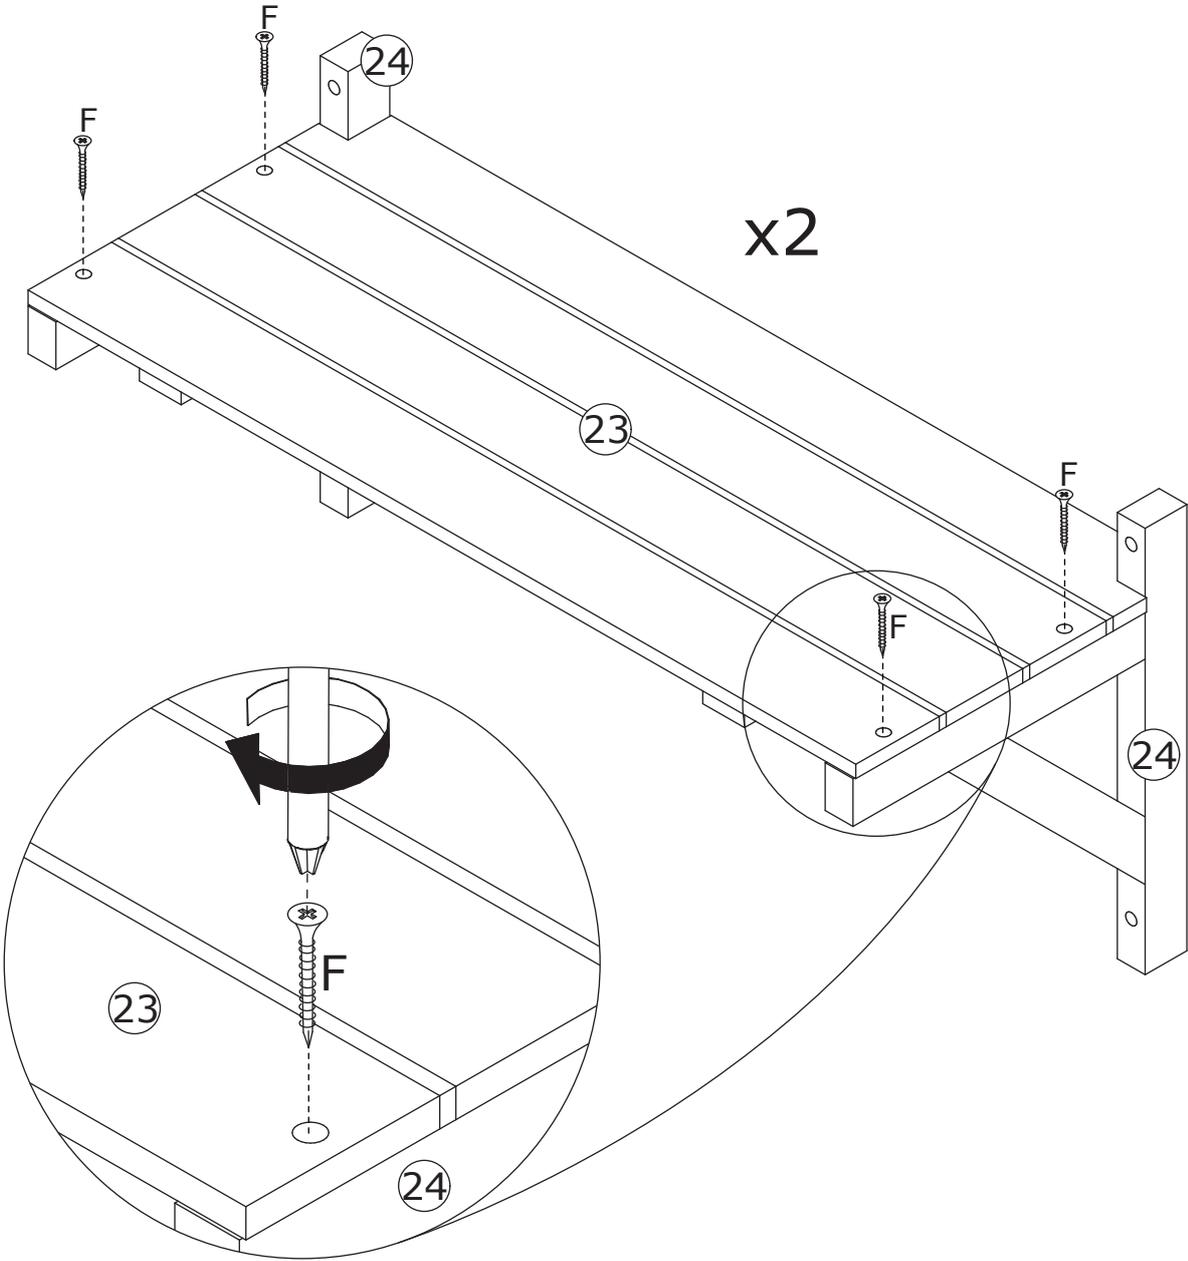


21

 B x 4
M3.5 x 45 mm




Fix the component to plate 20 with screw(B) as shown.

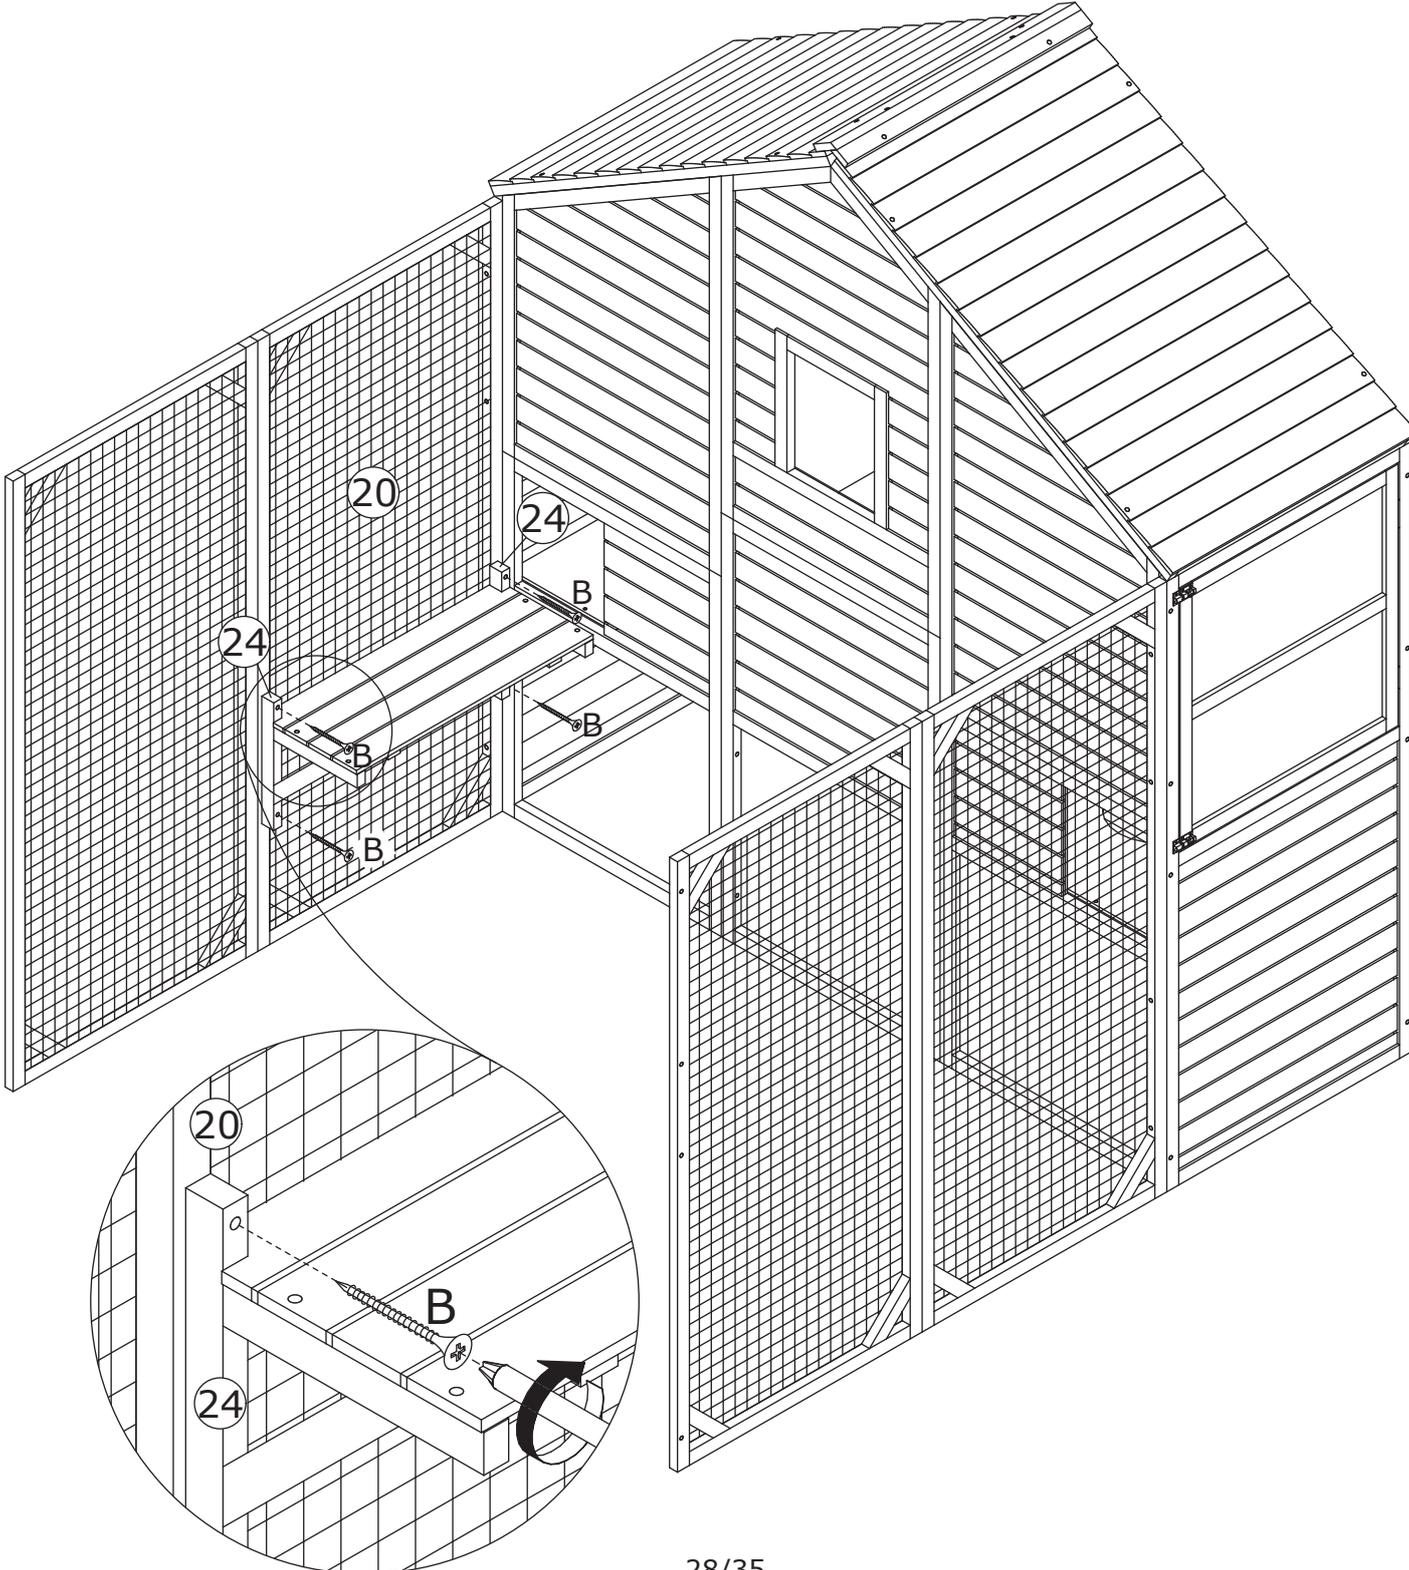


22



 
B x 4
M3.5 x 45 mm






Fix the component to another plate 20 with screw(B) as shown.

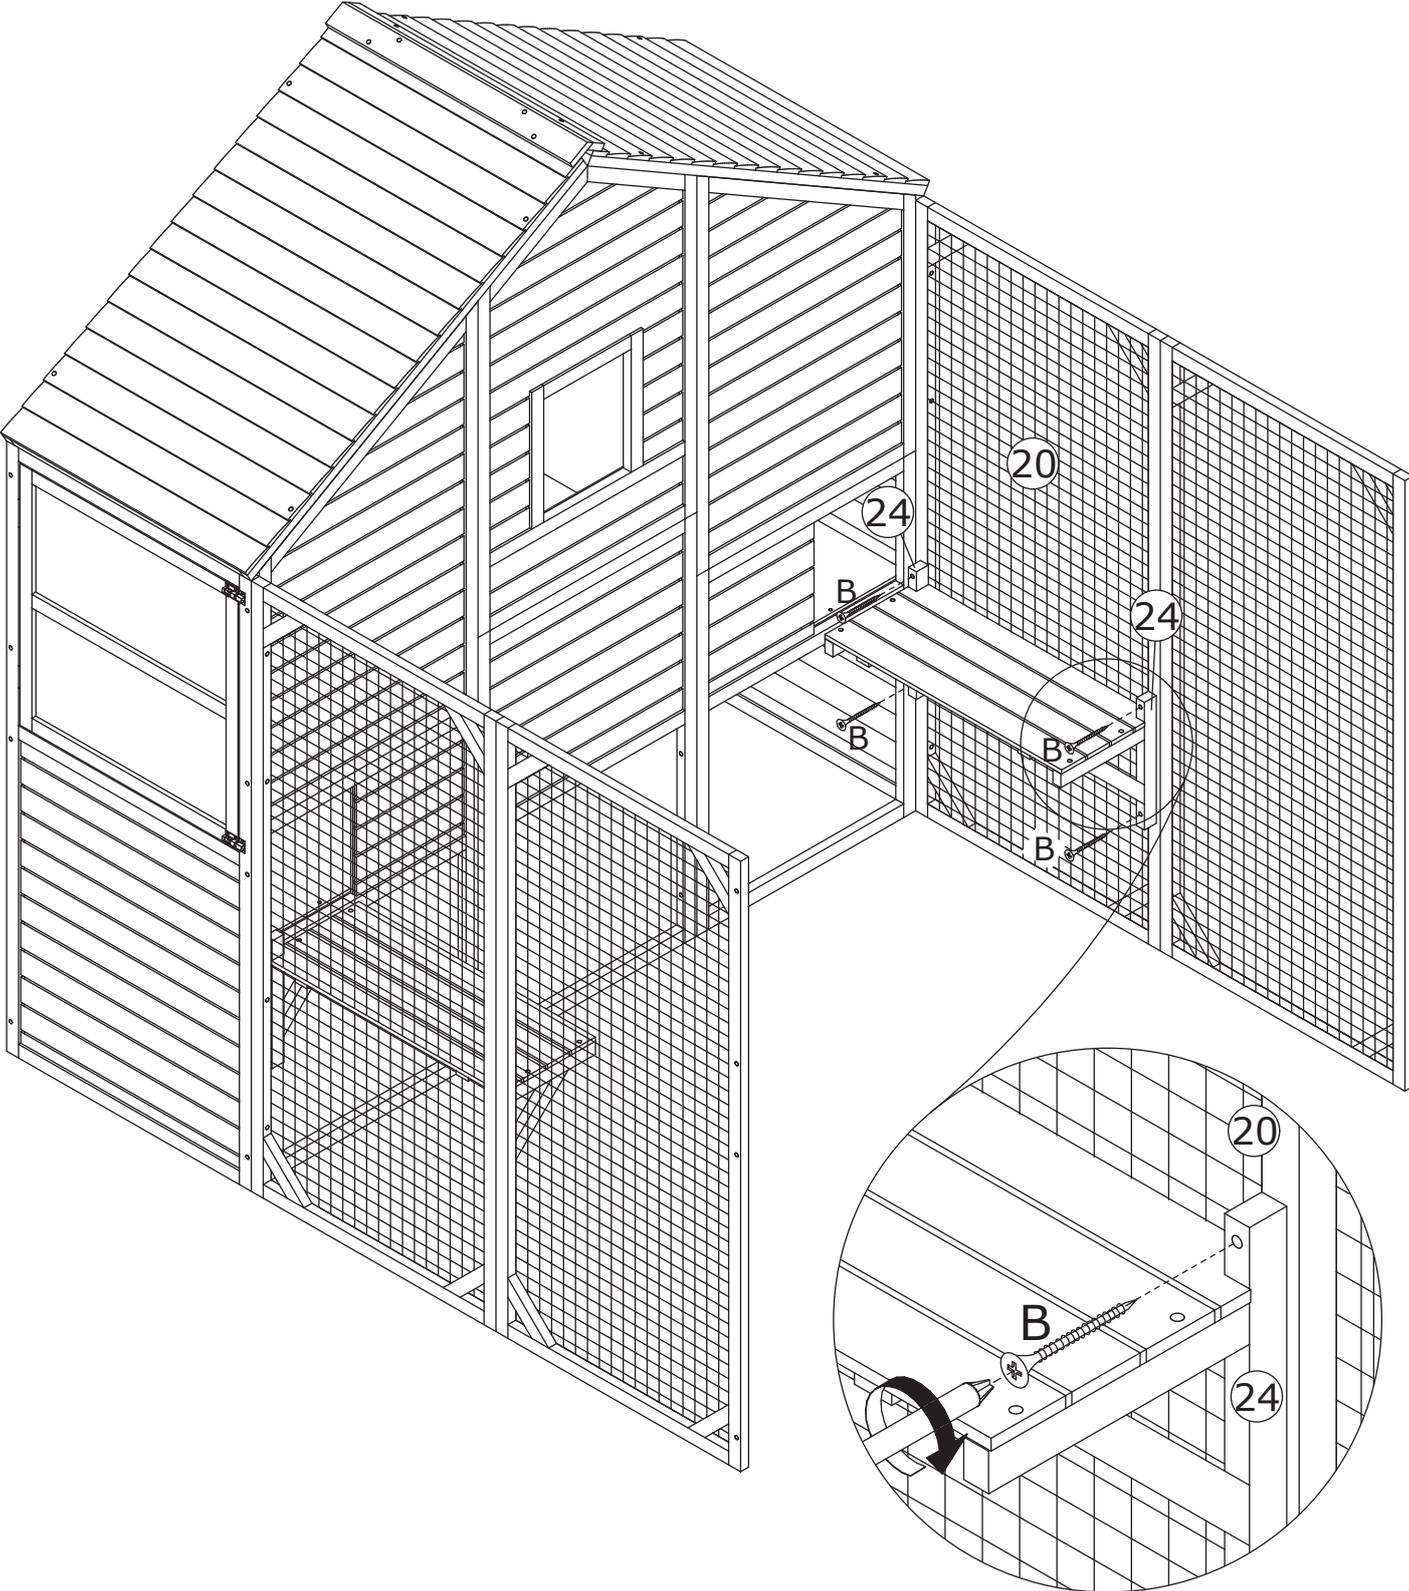

23

 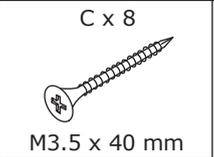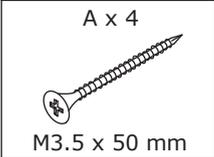


Fix plate 25 to plate 29; plate 27 to plate 31 with screw(A) at first.
Fix plate 25 and 29 to plate 21 with screw(C) as shown.
Fix plate 27 and 31 to plate 22 with screw(C) as shown.

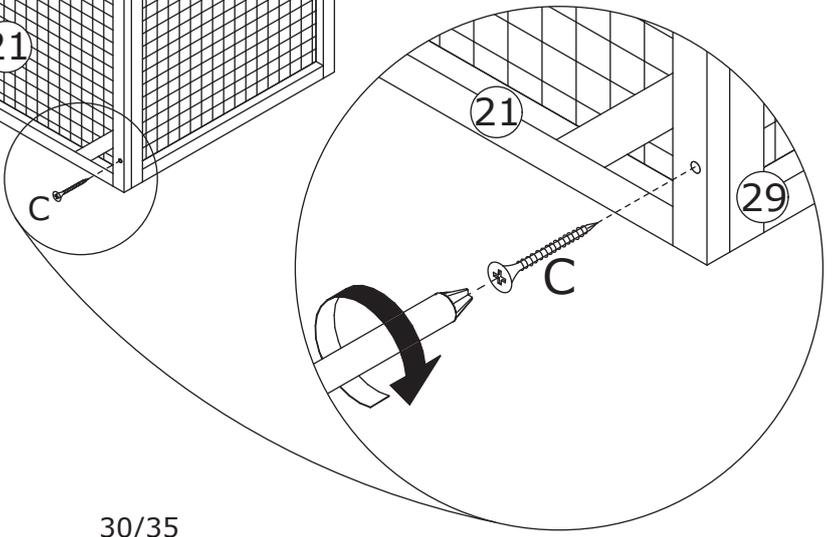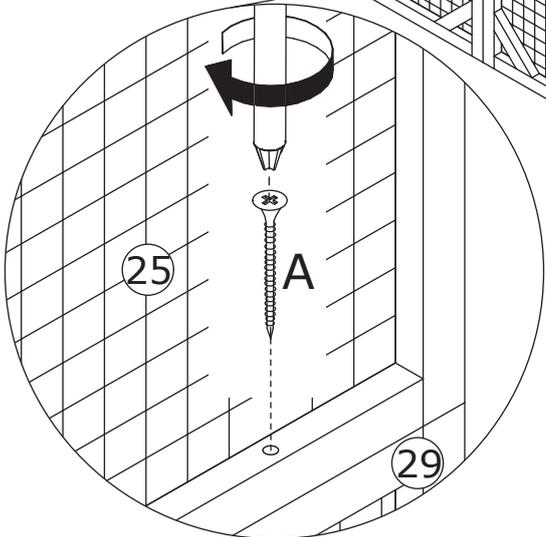
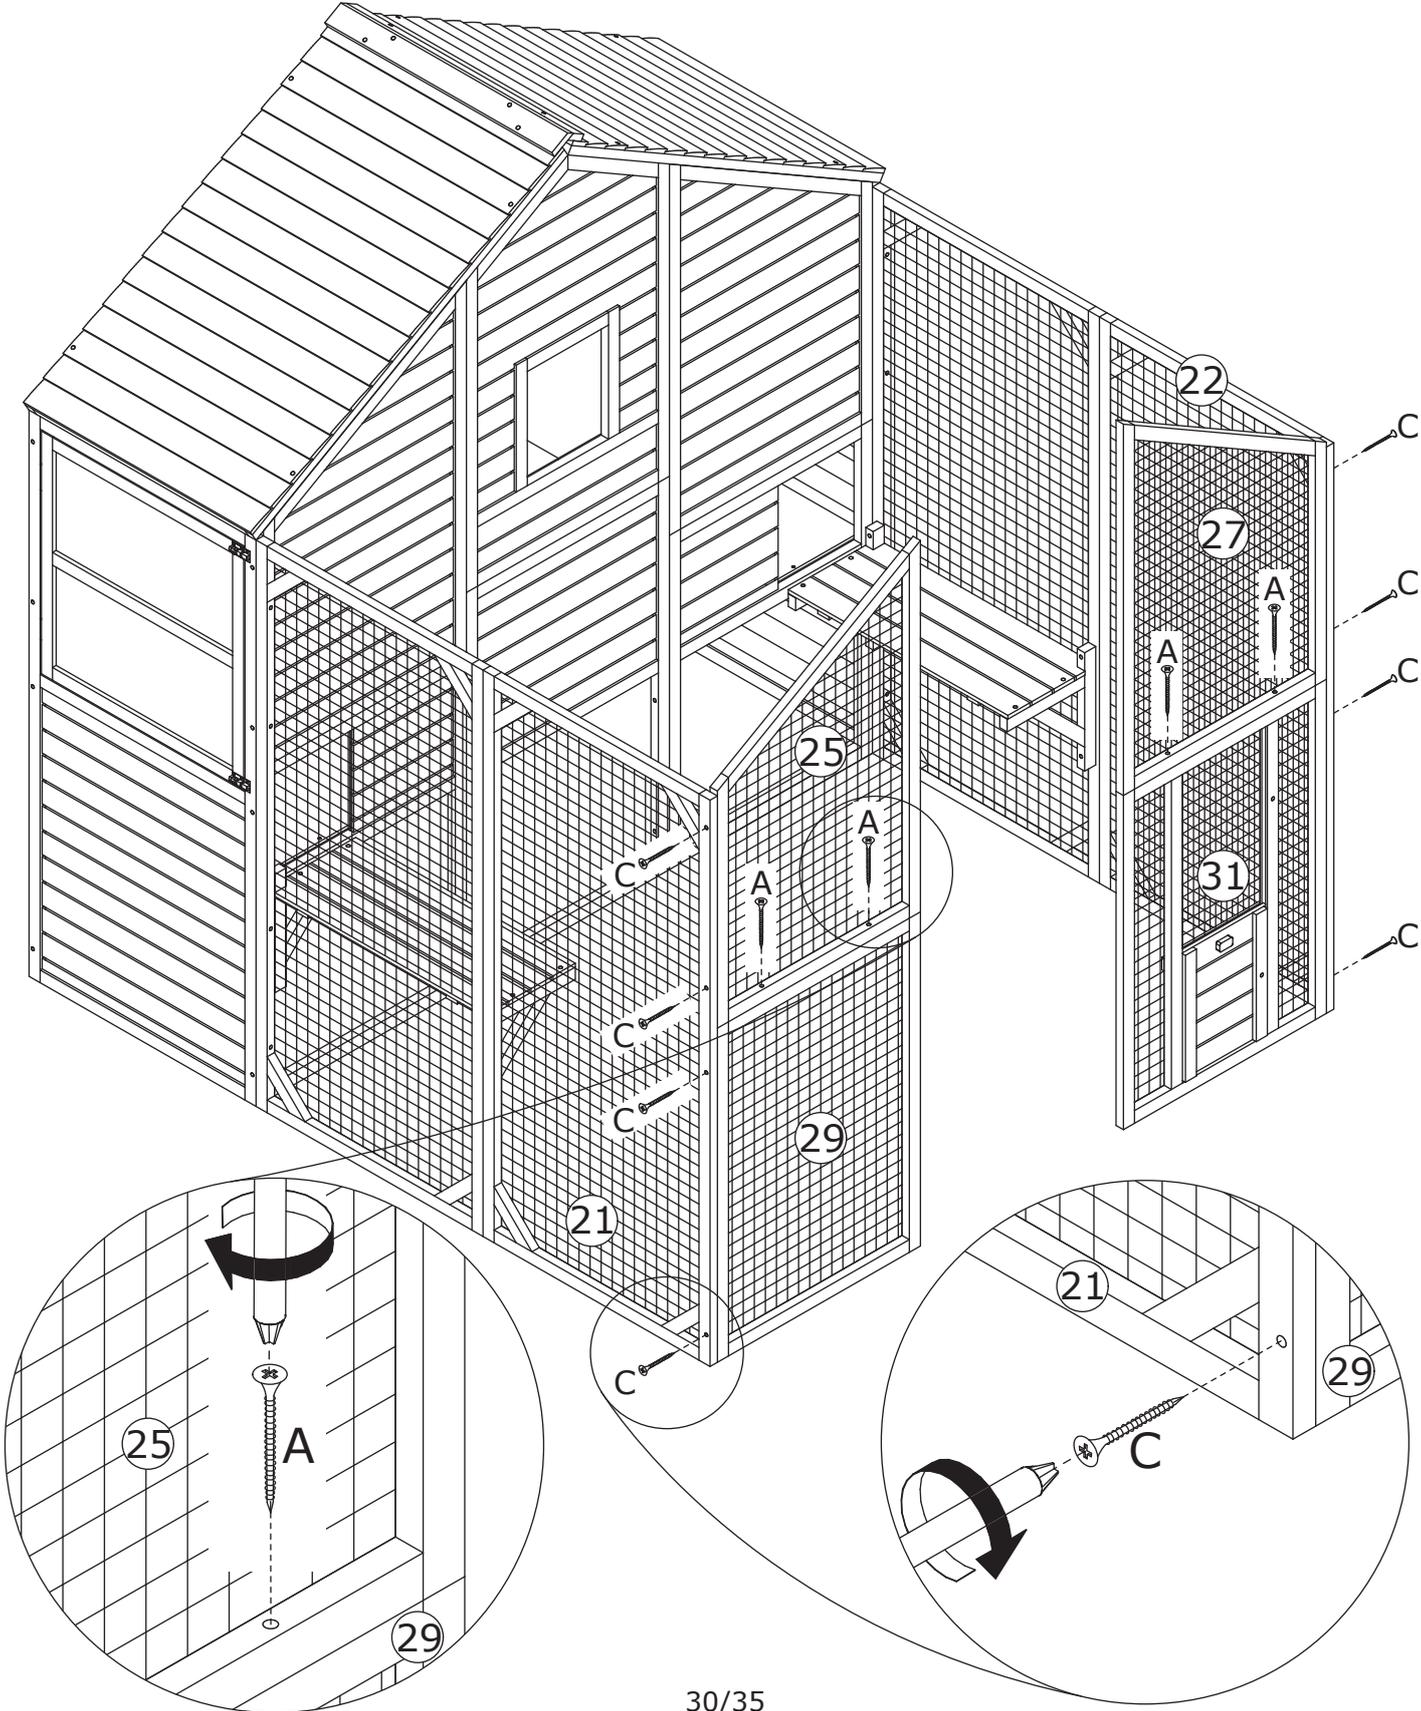


24

 A x 10
M3.5 x 50 mm





Fix plate 26 to plate 25 and 7 with screw(A) at first.
Fix door plate 30 to plate 25, 27, 29 and 31 with screw(A) as shown.

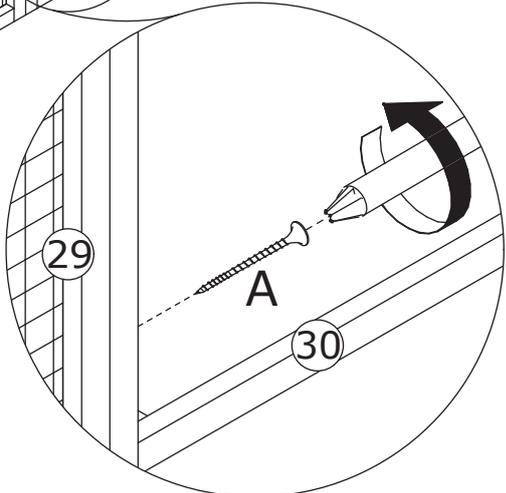
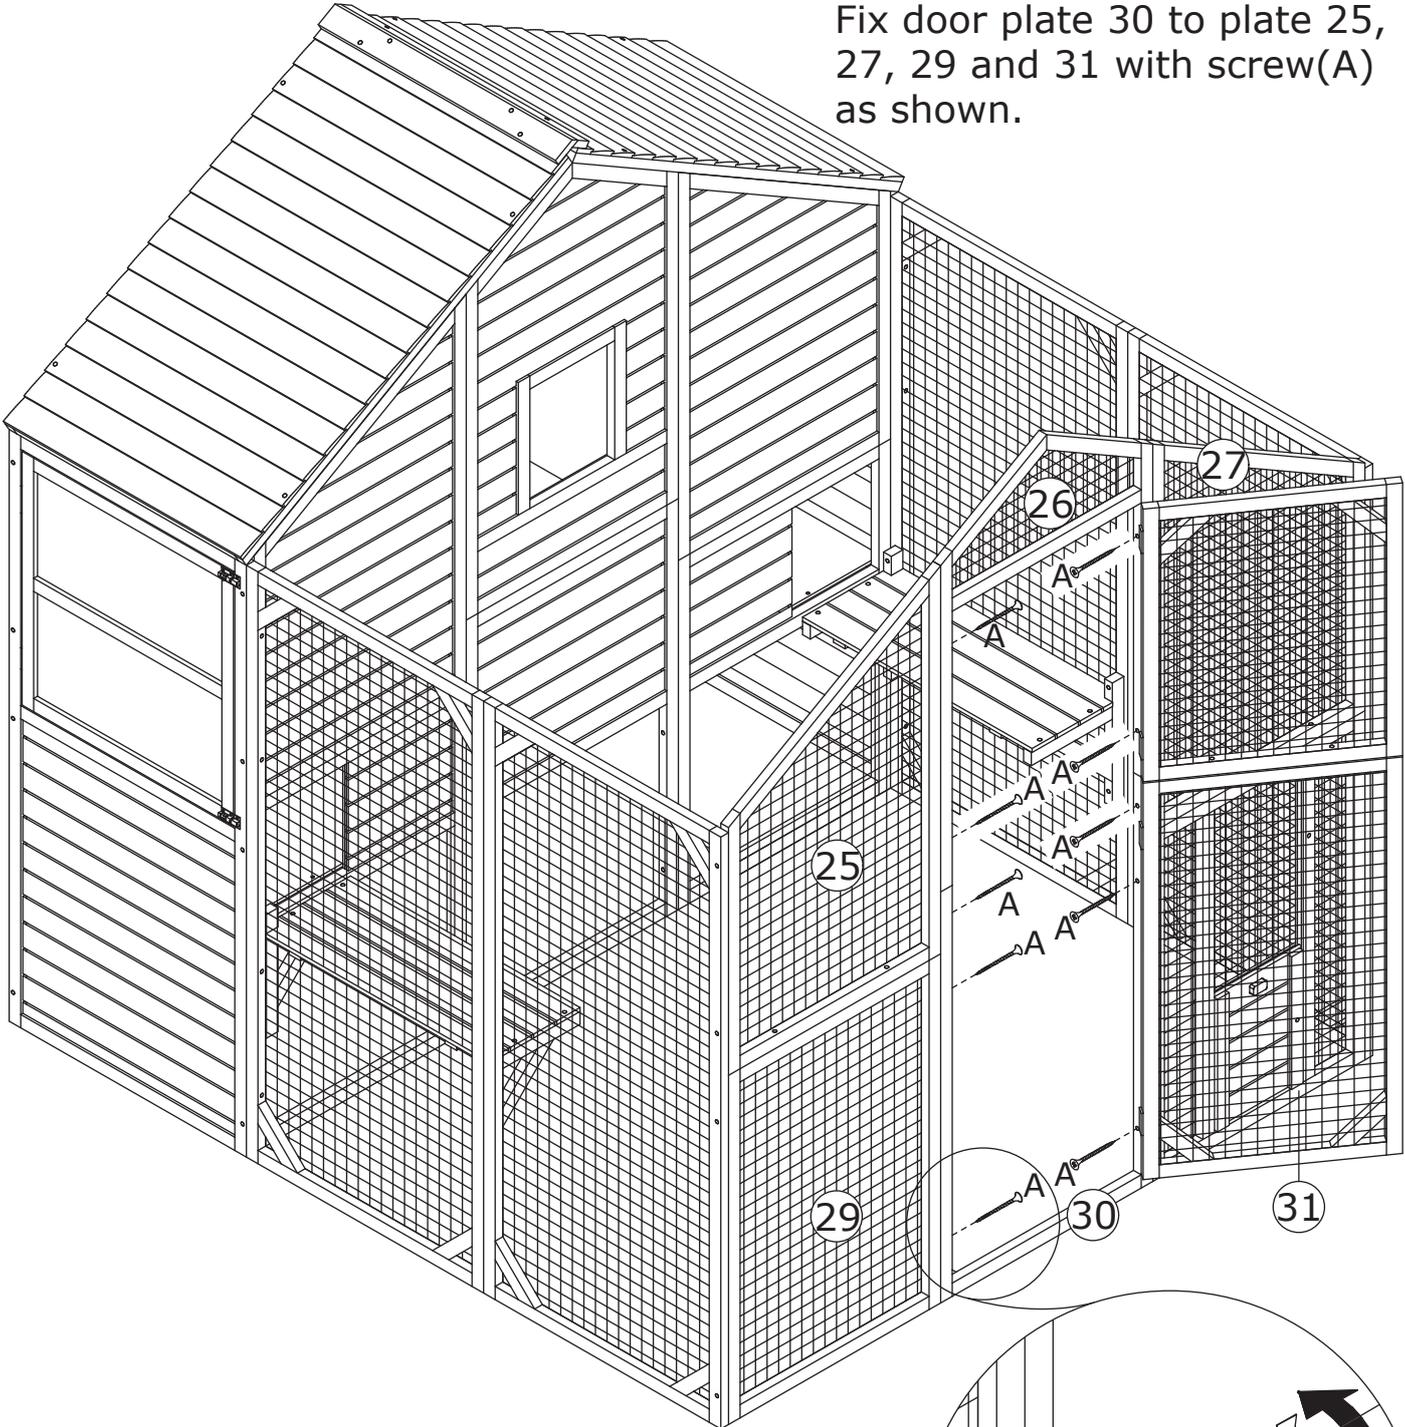


25

 
 
A x 2
M3.5 x 50 mm




Fix plate 26 to plate 30 with screw(A) as shown.

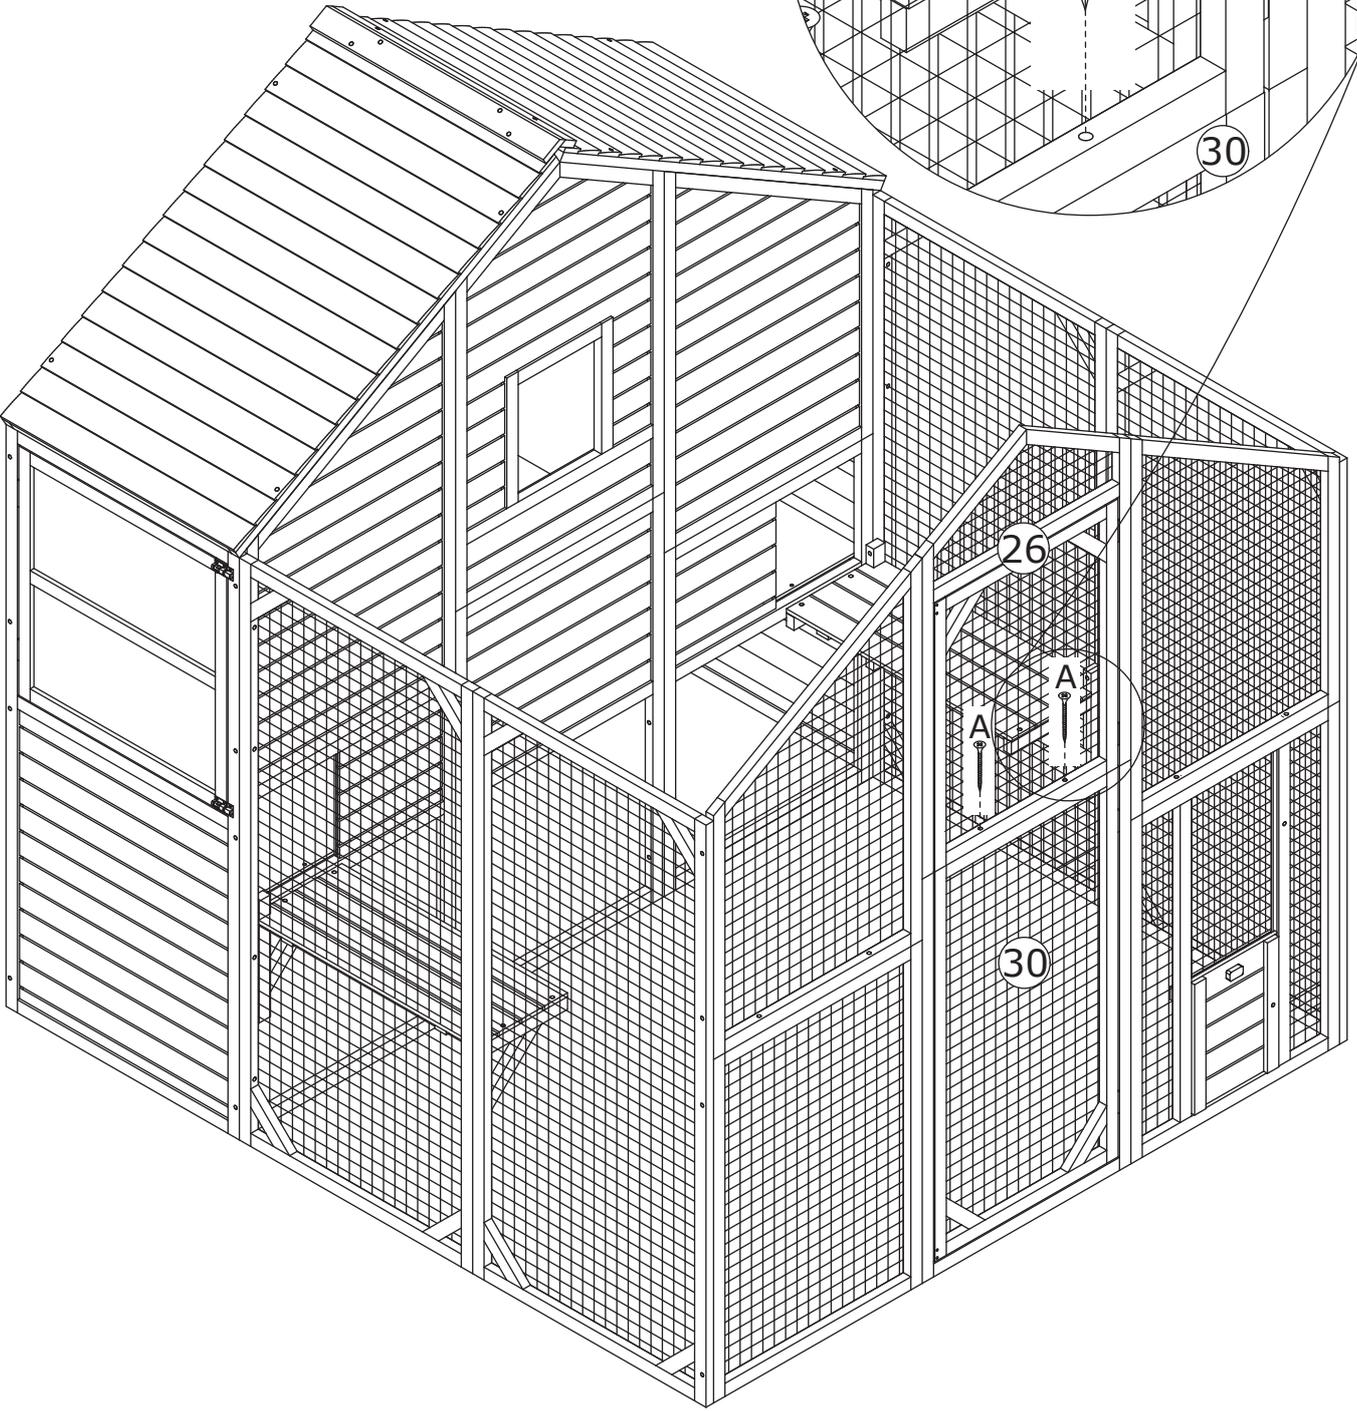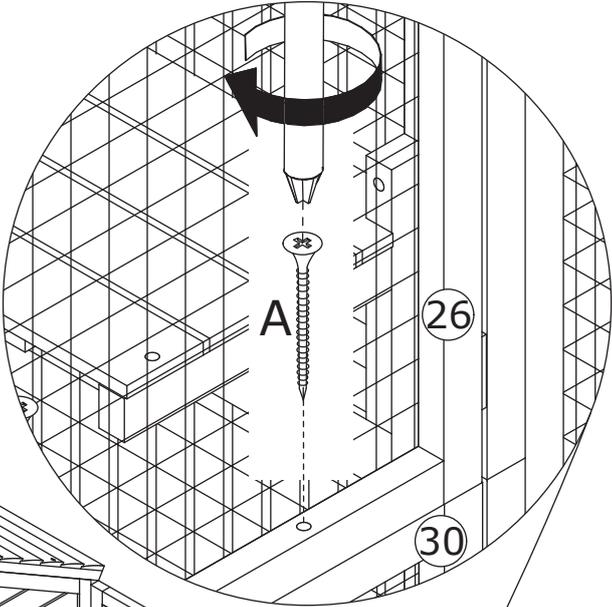




26

  G x 12 M3 x 12 mm 	I x 2 	J x 1 	K x 1 	
---	--	--	---	---




Fix part(J) and (K) to plate 31 as shown.
Fix lock(I) to plate 26 and 30 with screw(G) as shown.

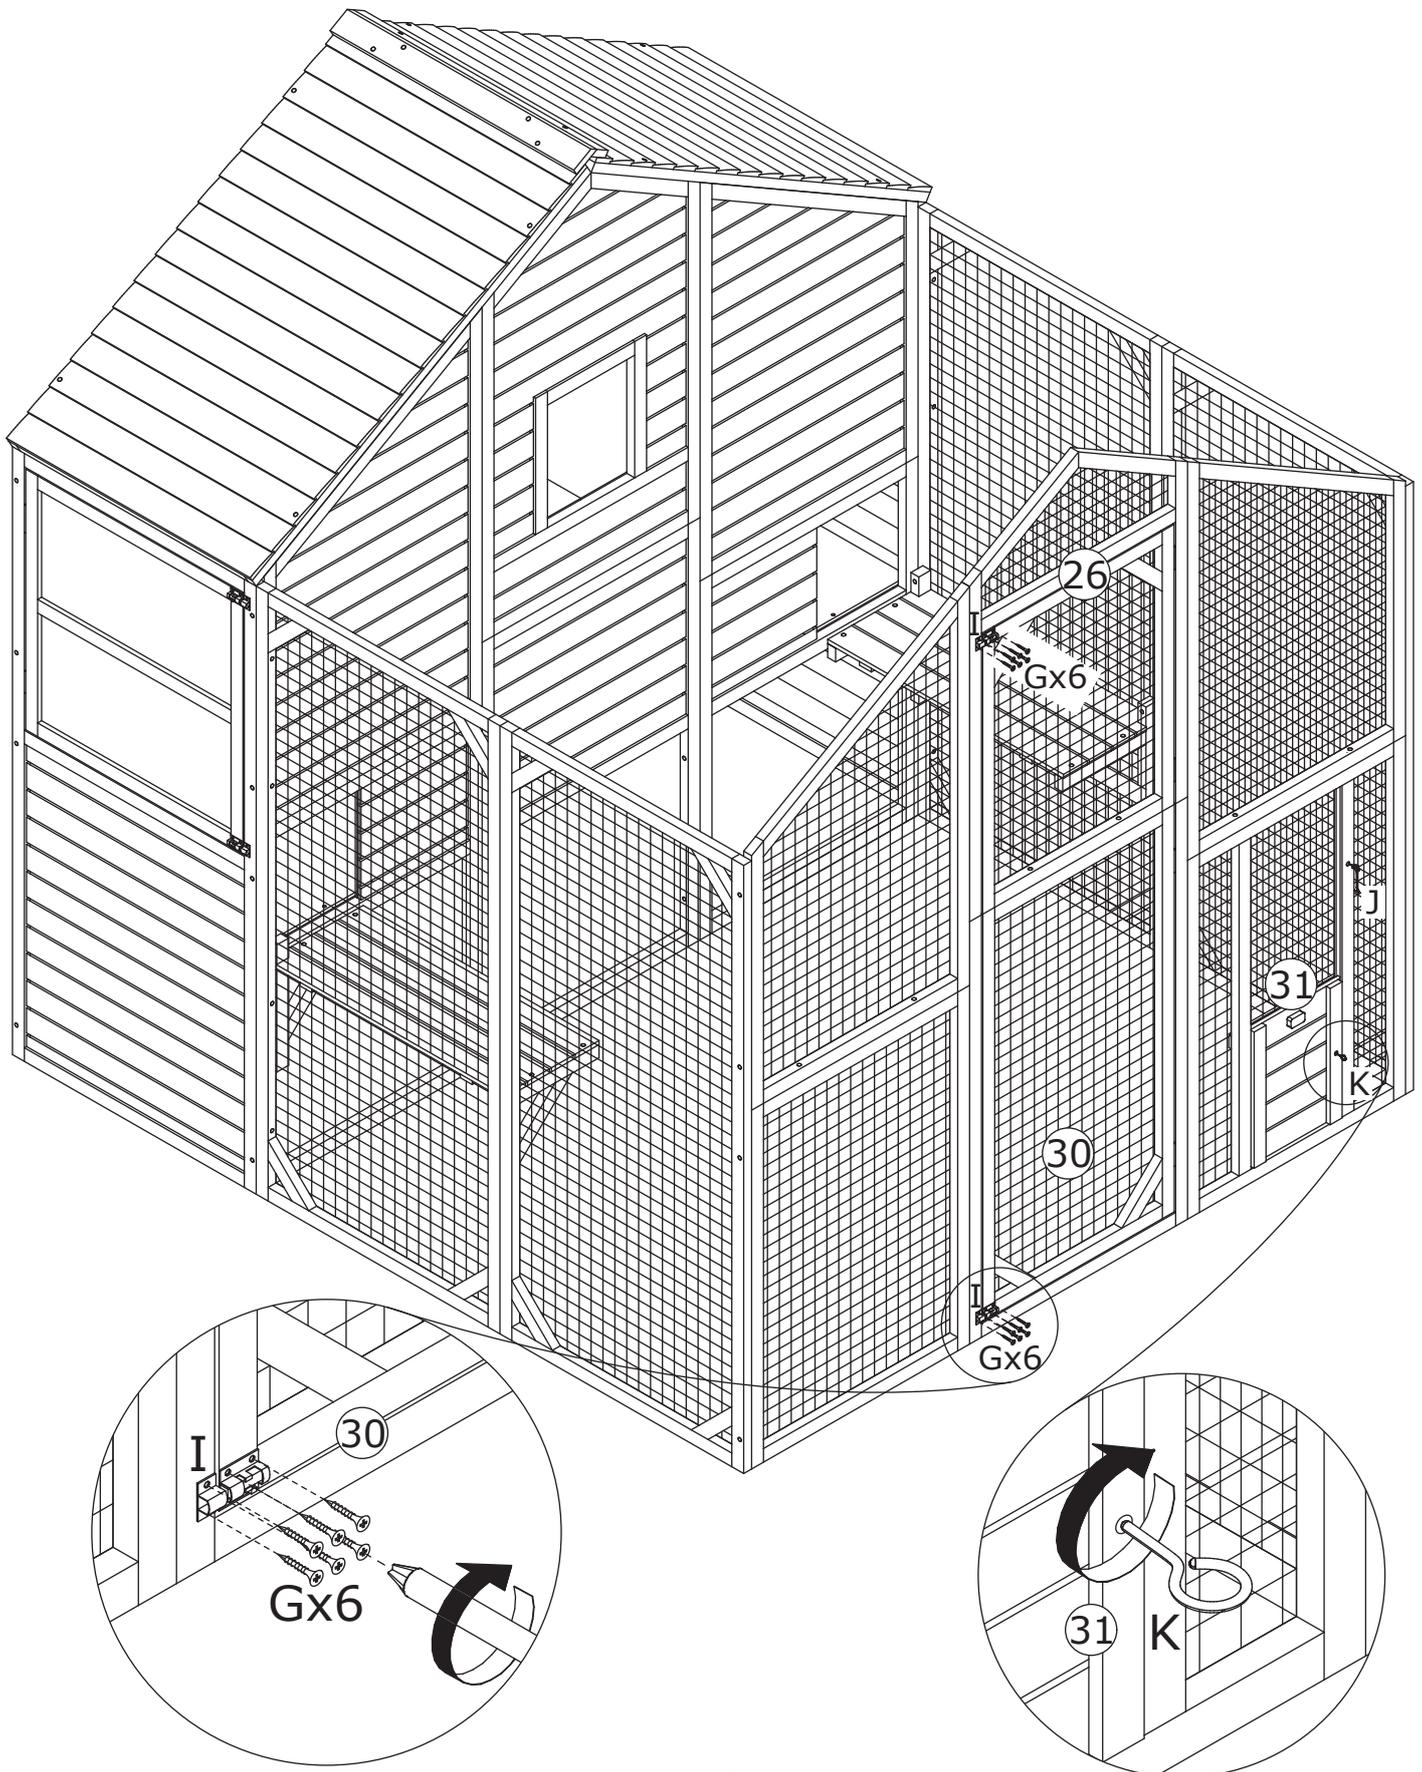

27

 
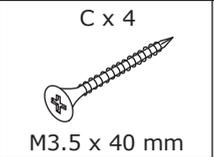
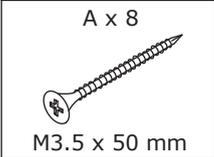


Fix plate 28 to plate 5 and 32 with screw(A) at first.
Fix plate 32 to plate 25, 26 and 27 with screw(C) as shown.

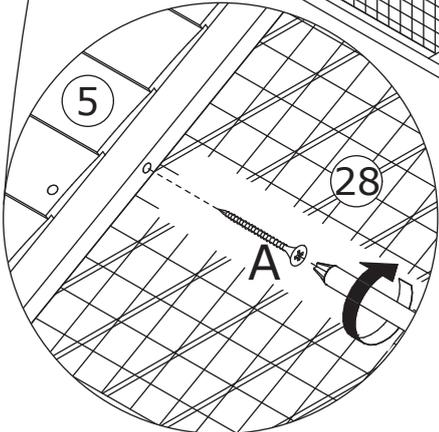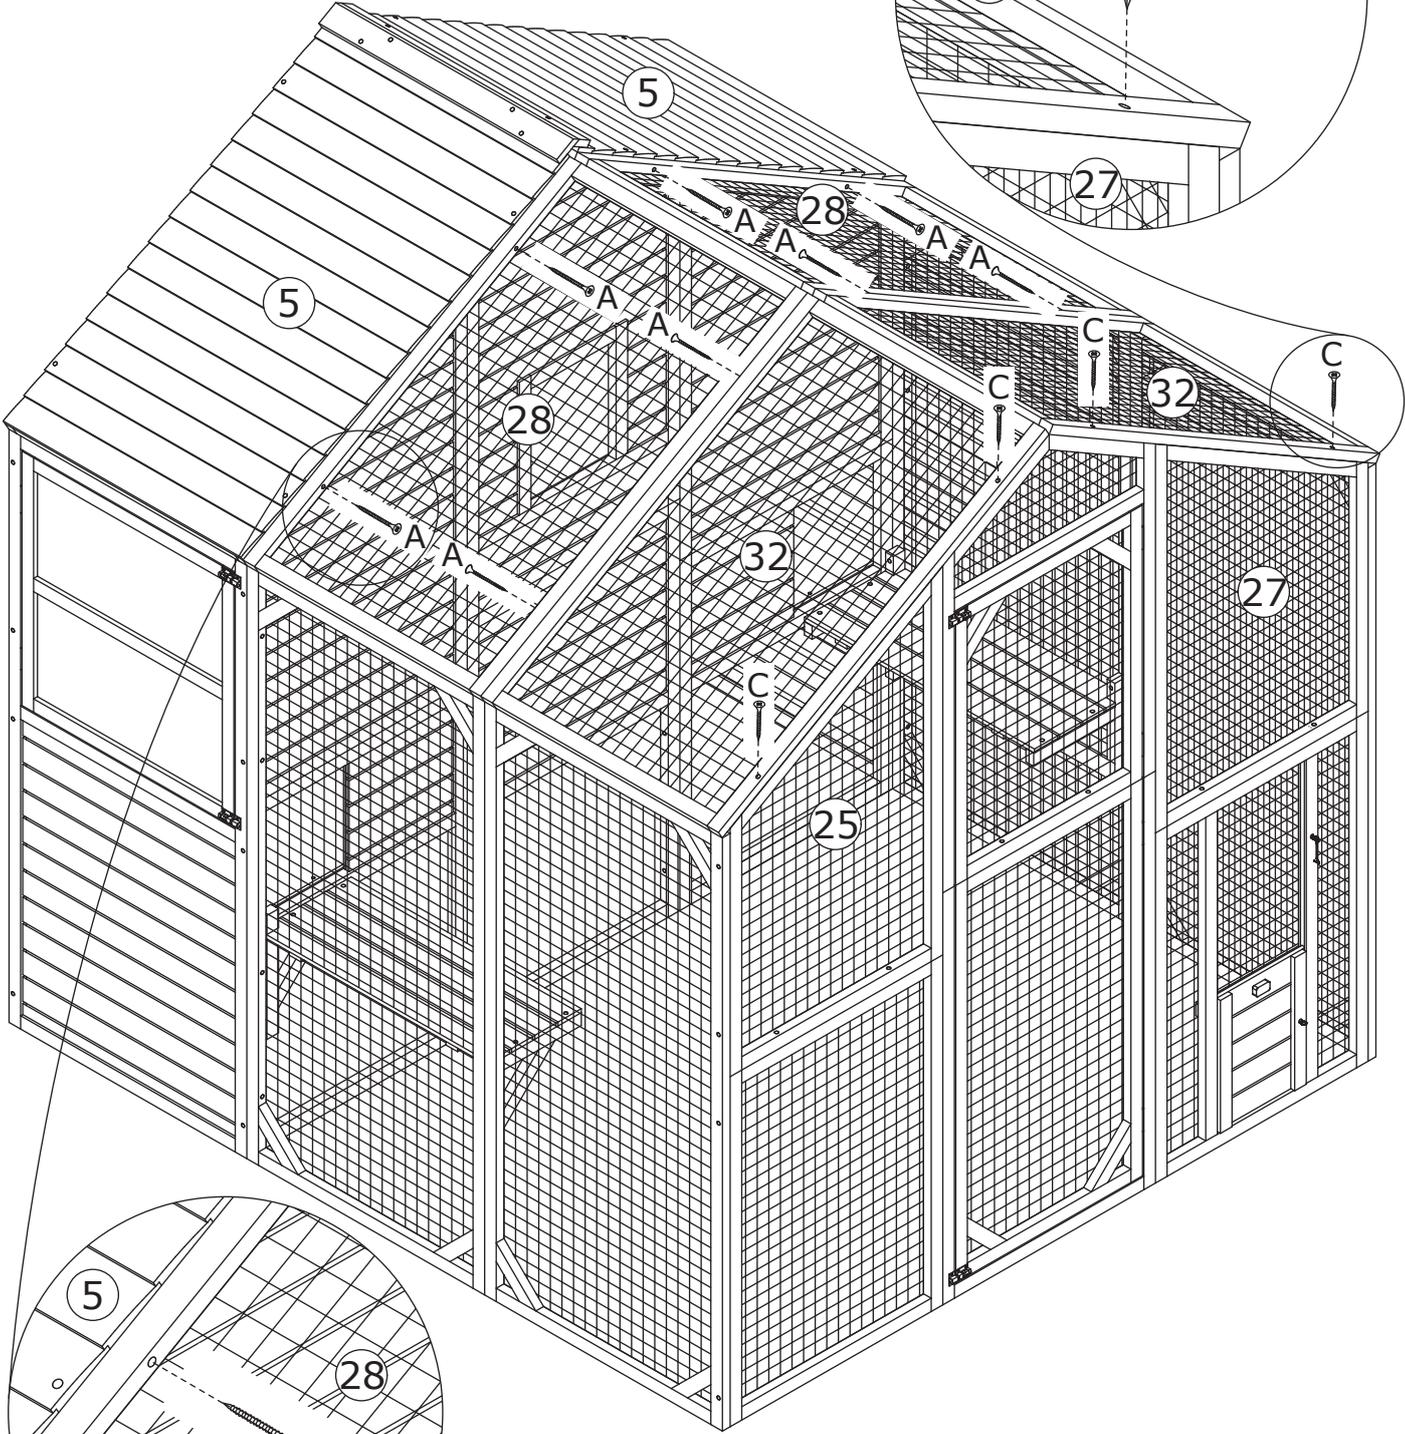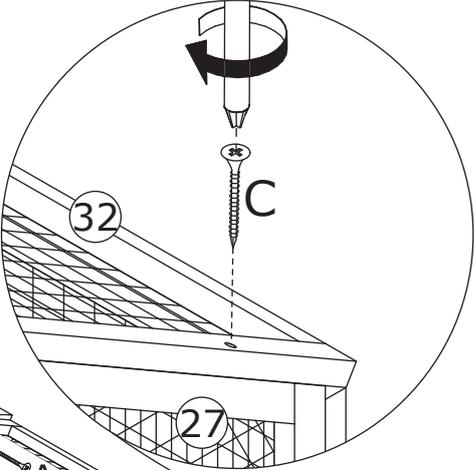


28

 D x 12
M3.5 x 35 mm

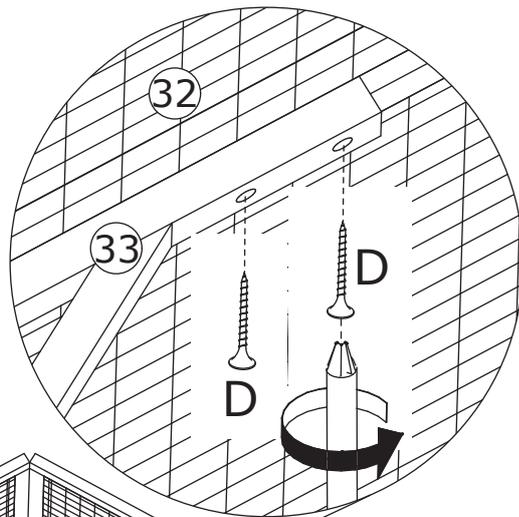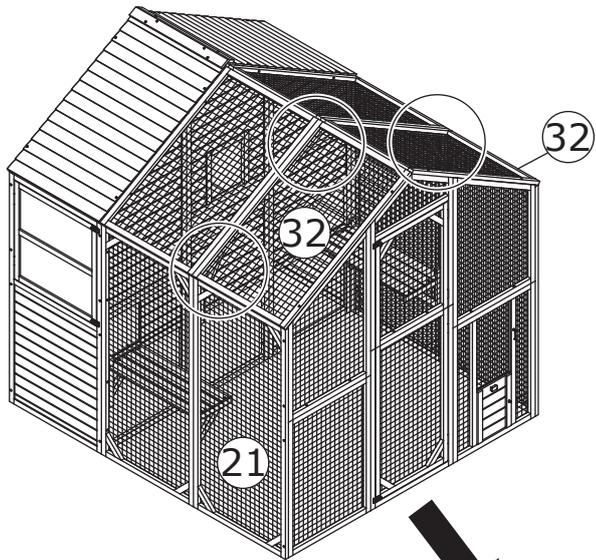

Fix plate 33 to plate 21, 22 and 32 with screw(D) as shown.

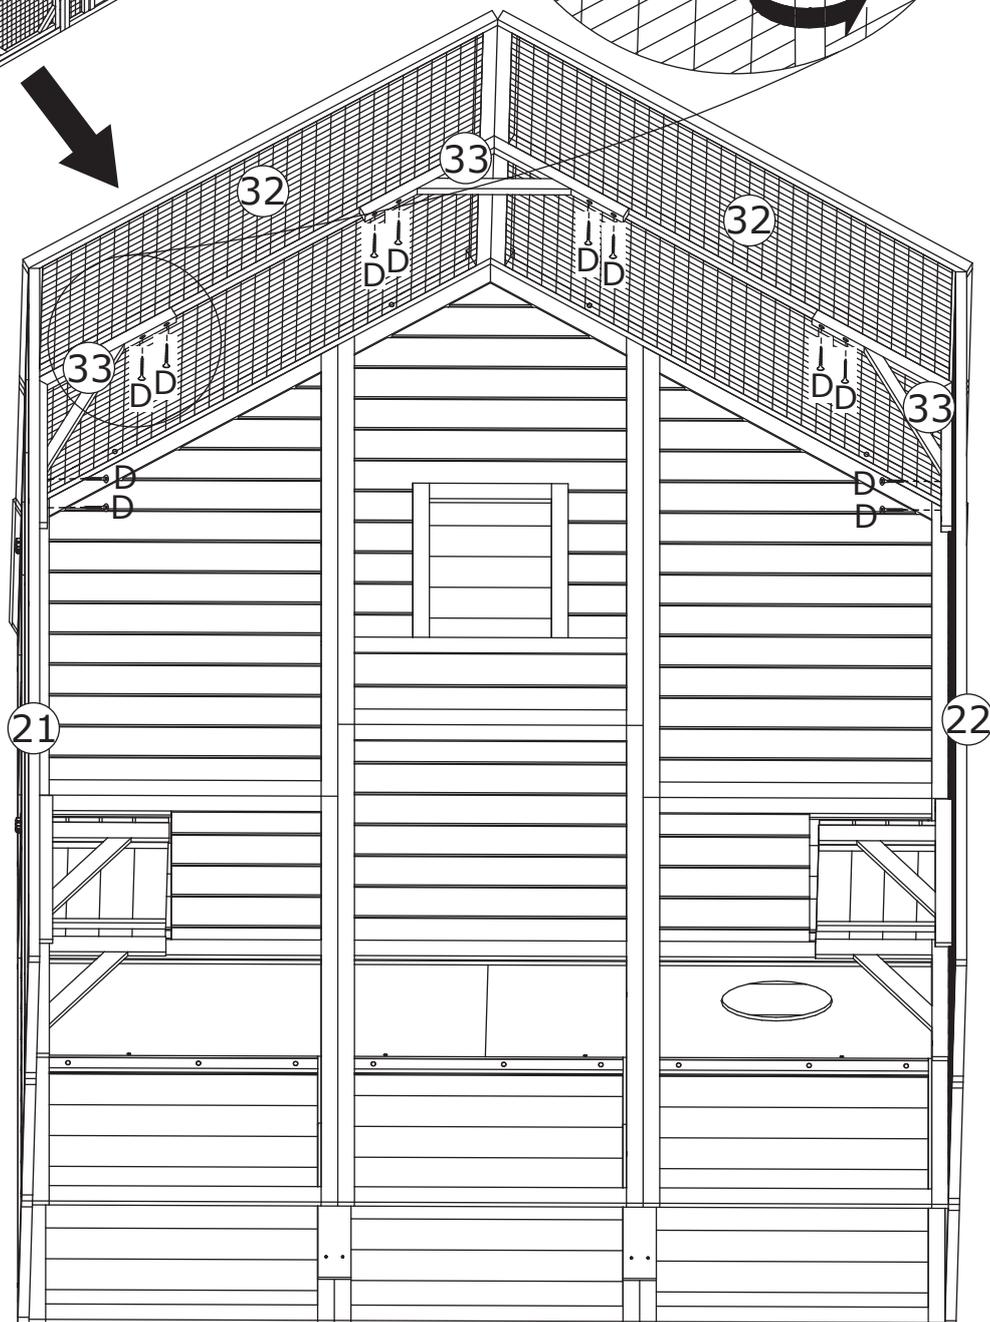

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOU ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.

AFTER-SALES CONTACT



feedbackstation@163.com



(303)800-6387