


INSTALLATION MANUAL

CEILING FAN WITH LIGHTS

Model No.: CFL-1127-01/CFL-1127-02

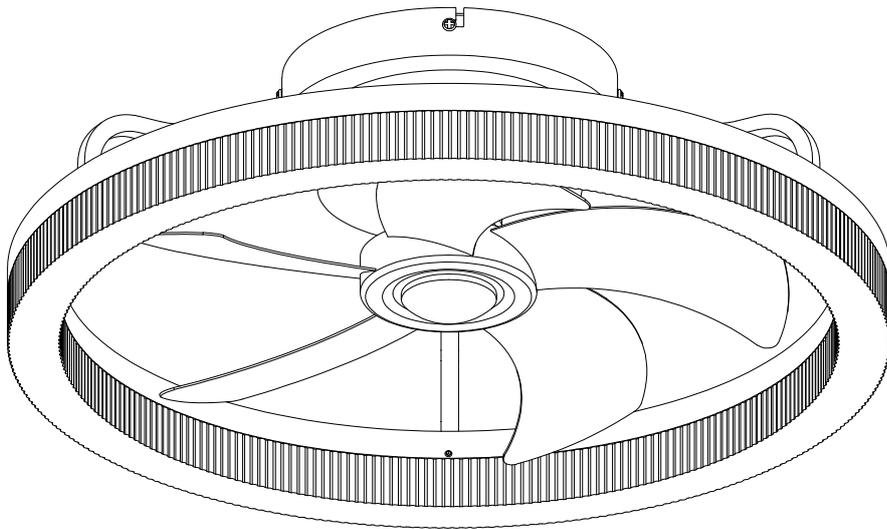

TOOLS REQUIRED



 
Ladder



Pliers




Wire
Strippers



Screwdrivers

PACKING LIST

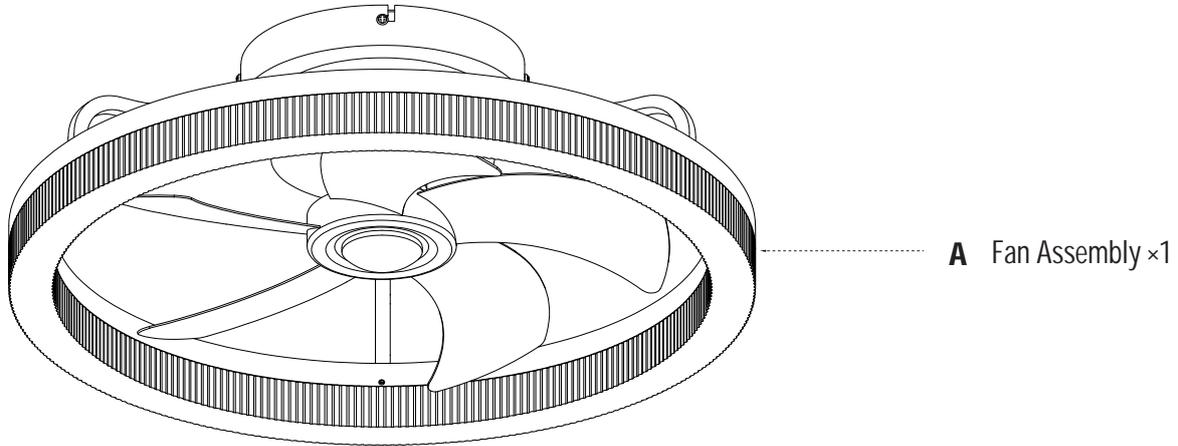

INSTALLATION KIT


AA  Mounting Bracket	1x	BB  Wire Nut	3x	CC  Outlet Box Screw	2x	DD  Long Wood Screw	4x	EE  Long Plastic Anchor	4x	FF  "S" Hook	1x
GG  Canopy Screw	4x	HH  Short Wood Screw	2x	II  Short Plastic Anchor	2x	JJ  Remote Control	1x	KK  Remote Holder	1x	LL  Pair of Gloves	1x

NOTE:


1. The listed quantity is for installation, extra hardware may be included.
2. Mounting bracket (AA) and canopy screws (GG) are pre-installed on fan assembly (A).

INSTALLATION

1. Install the Mounting Bracket

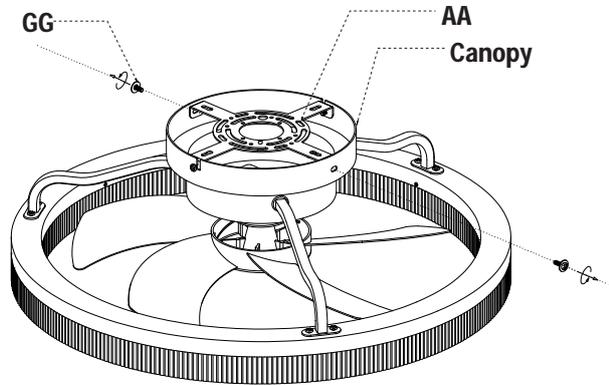


Step 1: Loosen and remove the canopy screws (GG) from the round holes, and loosen the canopy screws (GG) in the 'L' holes but do not remove them, and then remove the mounting bracket (AA) from the canopy.

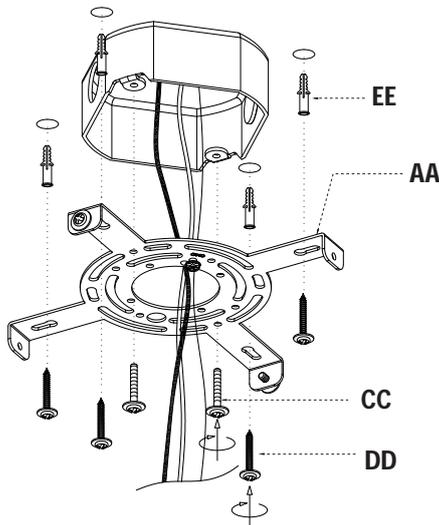

Step 2: Mark and drill screw holes in the ceiling, then insert the long plastic anchors (EE).


Step 3: Use outlet box screws (CC) to fix the mounting bracket (AA) to the outlet box, and then tighten it with long wood screws (DD).

2. Hang the Fan

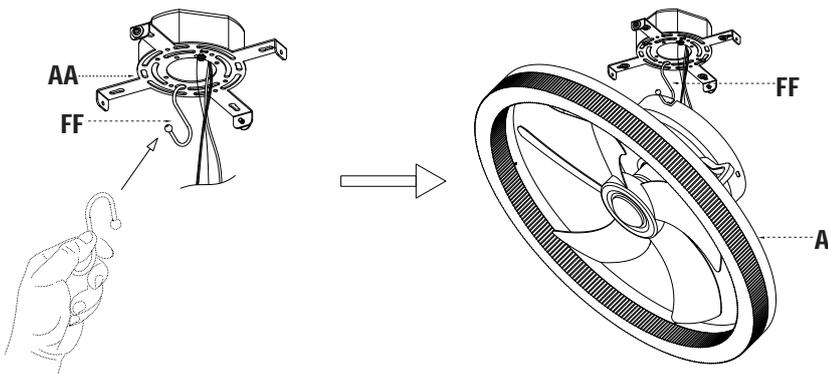

Hang the fixture onto the mounting bracket (AA) with "S" hook (FF) provided.

3. Connect the Wires

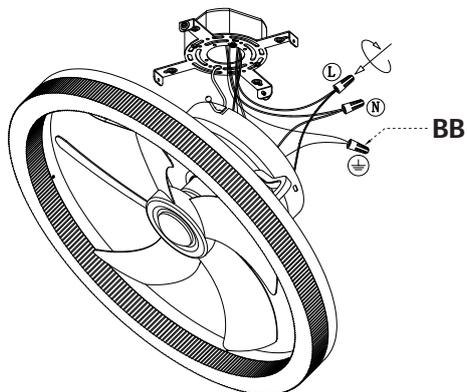


Step 1: Connect the wires from the fan to the house supply wires with wire nuts (BB), ground wire (green, green/yellow, or bare copper) to ground wire, neutral wire (white) to neutral wire, and hot wire (black) to hot wire. Wrap the connection with electrical tape.

Step 2: Spread apart the wires so that the hot wires are on one side of the outlet box and the neutral wires are on the other side.


Note:

This fan only needs one set of input wires (black, white, and ground wire). Both of the fan and lights will be controlled by the remote controller. This fan can only be connected to an on/off switch if you have one, not a dimmer switch.


4. Attach the Canopy

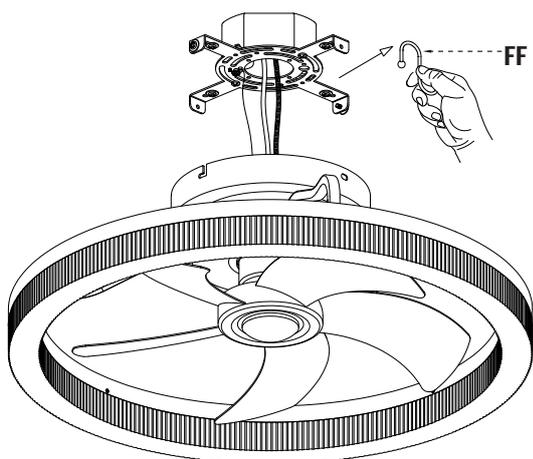


Take away the "S" hook (FF).

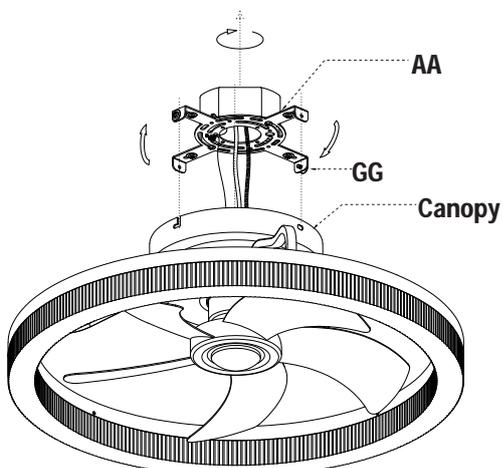

Align the "L" slots from the canopy to the canopy screws (GG) on the mounting bracket (AA), rotate the canopy to lock it onto the mounting bracket (AA).

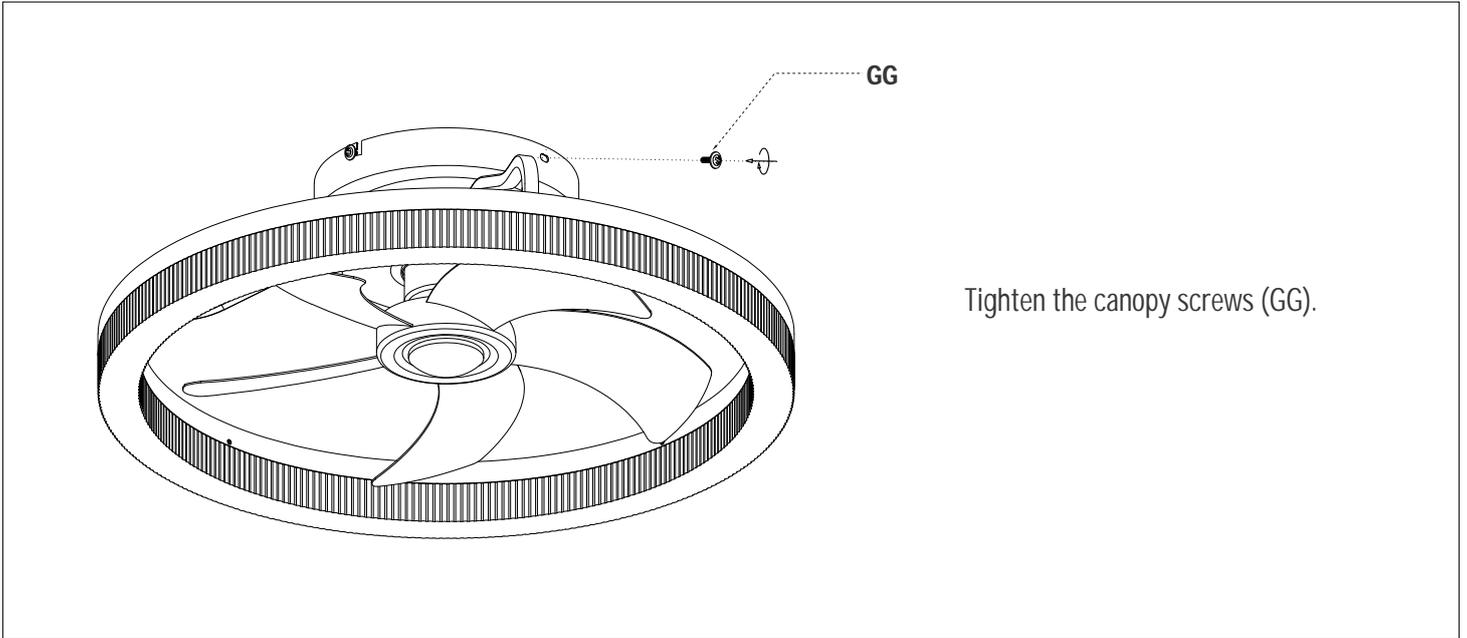


5. Install the Remote Holder

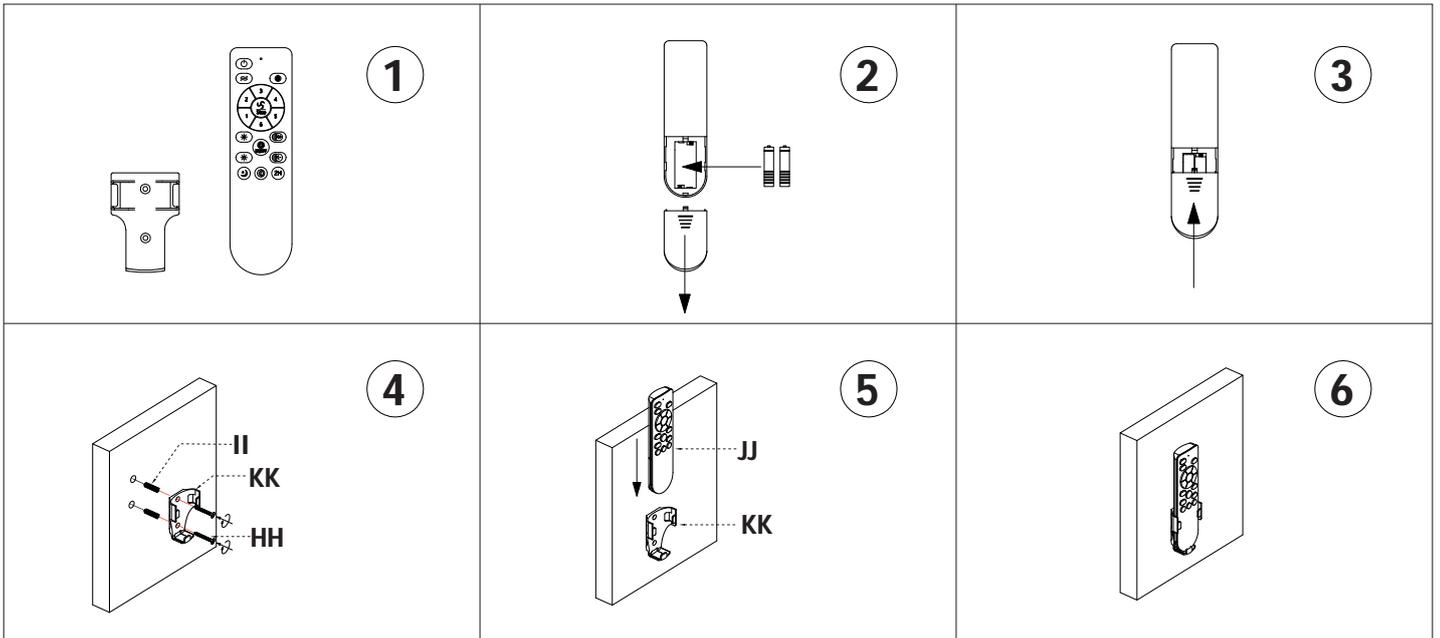

1. Insert 2 batteries before using: AAA 1.5V battery x 2pcs (not included).
2. Mark and drill screw holes in the wall, then insert the short plastic anchors (II).
3. Use short wood screws (HH) to fix the remote holder (KK) onto the wall.

REMOTE CONTROL INSTRUCTIONS

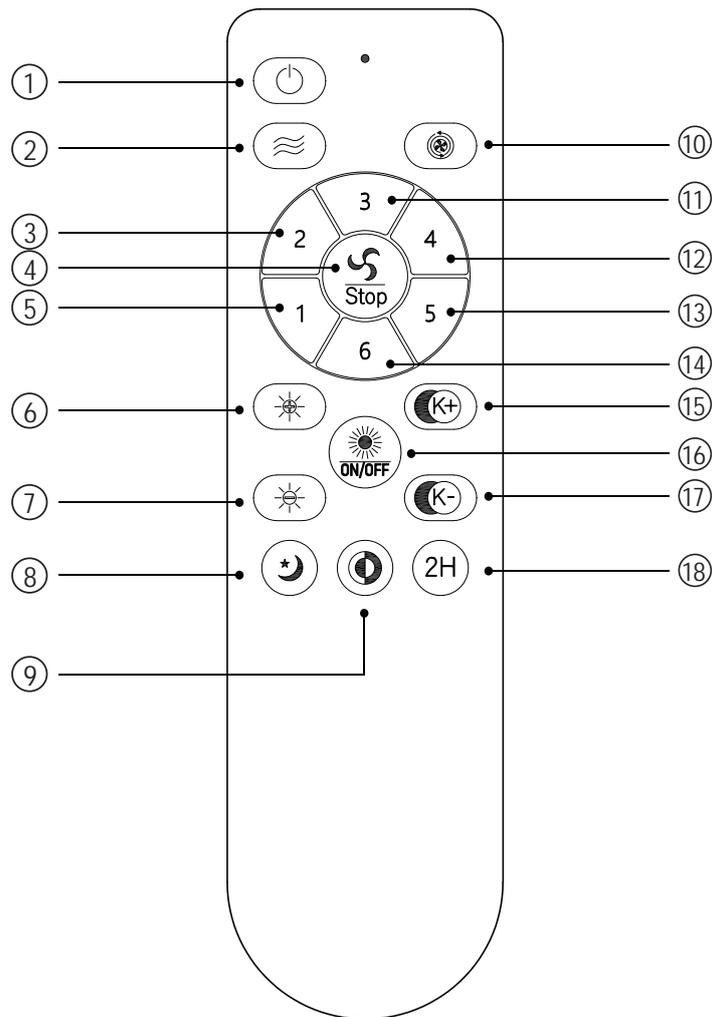

NOTE:


Please insert 2 batteries before using. AAA 1.5V battery x 2pcs (not included).

- ① : Turn off power.
- ② : Natural wind, fan speed will change automatically with this function.
- ⑤ ③ ⑪ ⑫ ⑬ ⑭ : Turn on the fan on 1/2/3/4/5/6 speed.
- ④ : Turn off the fan.
- ⑩ : Fan moves forwards or reversely.
- ⑥ ⑦ : Adjust the brightness of the light.
- ⑮ ⑰ : Adjust the light color temperature.
- ⑯ : Turn on / off the light.
- ⑨ : Quick switch of the light color: warm white→cool white→daylight white.
- ⑧ : Night mode, dim the lights
- ⑱ : 2H for timing the fan.

REMOTE SIGNAL PAIRING: If the remote control loses signal of the fan, press and hold the button ⑯ at the very beginning after it's turned on from wall switch. After the fan light flashes or beeps, it's done.

APP CONTROL INSTRUCTIONS

Install the "FanLamp Pro" app from Google Play, Apple App Store, or other app stores by scanning the QR code or searching for the app name. Ensure that your phone is connected to the internet and Bluetooth enabled.

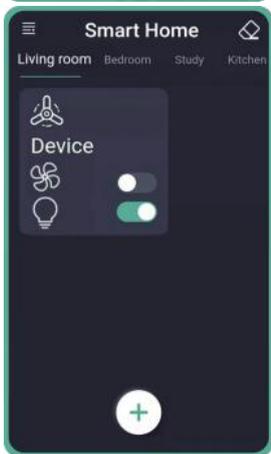

- Pairing: Click the Pair button within 5 seconds after turning on the fan from the wall switch. Once the fan flashes or beeps, it has been successfully paired with your phone and can now be controlled through the app.
- Slide the slider to change the fan speed.
- Slide the slider to change the brightness of the light.
- Quick switch for "White" light color.
- Quick switch for "Yellow" light color.
- Quick switch for "Natural" light color.
- Night mode: Dim the lights.
- Fan moves forward.
- Fan moves reversely.
- Change the direction of the wind. (Not supported)
- Timing the fan.
- Natural wind: The fan speed will change automatically when you use this function
- Sleeping wind. (Not supported)
- Turn on/off the light.
- Turn on/off the fan.
- Unpairing: Click the unpair button within 5 seconds after turning on the fan. Once the fan flashes or beeps, it has been successfully unpaired from your phone.



Scan for Installation Video



APP Control Applicable