30" **TECHNICAL DRAWING CEILING HEIGHT GUIDE** 11 ½" 19" Maximum Ceiling Height* Ø6" Vent Opening 19" 110 1/2" 8 3/4" **UPPER CHIMNEY COVER** 44 ½" Minimum Ceiling Height 86" 26" 15" 8 %" **TOP** 24" - 30" **LOWER CHIMNEY COVER** Distance from Cooktop to Bottom of Range Hood 24" 9" Electric Range: 24" - 30" Gas Range: 30" 3 1/4" 9 1/8" 14 3/4" 12 3/8" 36"

19"


SIDE

NOTE: All dimensions in Inches unless otherwise specified. Dimensions in this technical drawing may vary by $\pm\ 1/16$ " (2mm). For detailed installation steps, refer to the user manual. Complete installation instructions and specifications can be found at hauslane.com.

29 3/8"

FRONT

*This height range represents the standard maximum and minimum heights. Additional extension (CHEOO1) requires a separate purchase.

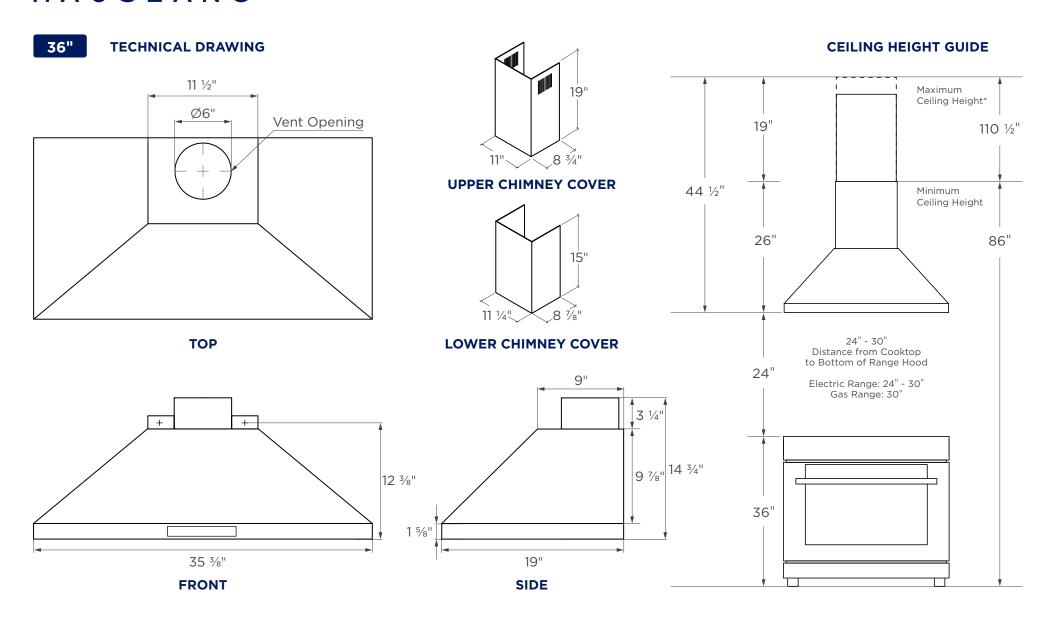

*This height range represents the standard maximum and minimum heights. Additional extension (CHE001) requires a separate purchase.