



**<INSERT IMAGE HERE>**

## **EcoSpin Product Guide**

Contents

Contents ..... 2

Introduction ..... 3

Register Your Product Online..... 4

    Important Safety Precautions ..... 5

    Product Specifications..... 5

Directions for Washing..... 6

    Washing Guide ..... 6

    Rinsing ..... 6

Need to Contact Us? ..... 7

Limited Manufacturer’s Warranty ..... 8

## Introduction

### Thank You for Choosing Avalon Bay EcoSpin

Please read this manual thoroughly and follow all instructions and safety guidelines. With proper care and maintenance, this appliance will provide you with many years of trouble-free use.

The EcoSpin is an eco-friendly, hand-powered spin cycle for washing garments. It is suited to wash and spin delicate articles, such as bras, t-shirts, underwear, socks, face towels and more.

When you're washing and you add water, note that you'll need to use more power initially to start the cycle because of water resistance. It will get easier after the first few spins.



Before using your EcoSpin, please read this manual carefully. Incorrect operation can result in serious damage or injury.

## Register Your Product Online

### Register Your Avalon Bay Product Online Today!

Take advantage of all the benefits product registration has to offer:

**Service and Support**

Diagnose troubleshooting and service issues faster and more accurately

**Recall Notifications**

Stay up to date for safety, system updates and recall notifications

**Special Promotions**

Opt-in for Avalon Bay promotions and offers

Registering your product information online is safe & secure and takes less than 2 minutes to complete:

**Register.Avalon-Bay.com**

Alternatively, we recommend you attach a copy of your sales receipt below and record the following information, located on the manufacturer's nameplate on the rear of the unit. You will need this information if it becomes necessary to contact the manufacturer for service inquiries.

**Date of Purchase:** \_\_\_\_\_

**Serial Number:** \_\_\_\_\_

**Model Number:** \_\_\_\_\_

## Important Safety Precautions

---

**ATTENTION:** Be careful not to add water higher than the Max Level listed here. If water is too high, the fast speed of the handle will cause the EcoSpin to overflow.

Important Safety Precautions:

- For storage, pull the handle up slightly and then fold it down over the lid
- Never try to move the appliance by grabbing the handle
- Open the plug of the drain hose before draining and spinning
- Make sure the EcoSpin is level when spinning to avoid damaging the feet
- Do not use boiling water.
- Do not store the machine with water in it.
- Do not overload the machine.
- Keep machine and all laundry detergents away from children and pets.



### **ATTENTION**

The suction cups are designed to hold the machine in place during washing.

There are small tabs in the front part of the suction cups, which are specially designed for removing the machine. You pull up on these tabs to easily remove the suction cup from the surface; if necessary (the suction force will vary depending upon the surface).

## Product Specifications

---

|                                      |                          |
|--------------------------------------|--------------------------|
| <b>FULLY INSTALLED PRODUCT SIZE:</b> | 13.39" x 13.39" x 13.50" |
| <b>LOAD CAPACITY:</b>                | 4.63lbs                  |
| <b>WASH TIME:</b>                    | 2 minutes                |
| <b>SPIN TIME:</b>                    | 30 seconds               |
| <b>WARRANTY:</b>                     | 12 months                |

## Directions for Washing

Sort the laundry into loads according to material type and/or colors. Note: There are 5 basic load types:

1. White cottons and linens
2. Colorfast cottons and linens
3. White synthetics and cotton blends
4. Nylons and colored synthetics
5. Delicates

Place the EcoSpin on the edge of a flat, level sink or tub.

Add the required amount of water and detergent according to the washing chart. For best results and easier rinsing, make sure to add the detergent and water before adding the clothes.

Add the laundry and close the lid.

Turn it clockwise until fully tight.

Pull the handle until it is full upright.

Begin turning the handle to wash, using added power at first. Turn clockwise one round and then counter-clockwise one round.

## Washing Guide

| Load (pcs) | Water % Full | Detergent     | Wash Time  |
|------------|--------------|---------------|------------|
| 1-2        | 1/4 load     | 1 tablespoon  | 1 minute   |
| 2-3        | 1/3 load     | 2 tablespoons | 1.5minutes |
| 3-4        | 1/2 load     | 3 tablespoons | 2 minutes  |

After washing, take off the drain hose and open the plug-in order to drain.

## Rinsing

Turn the handle a few times to spin the laundry and drain any excess water.

Leave the laundry in the machine and refill it with clean water according the amount listed in the washing guide above.

Close the lid and rotate the handle for about 30 seconds.  
Drain the load.

If the clothes need further rinsing, fill with clean water and repeat the process again.

## Spin Dry

---

Make sure to take off the drain hose and open the plug.

Rotate the handle in one direction. The faster you rotate it the drier the clothing will get.

For best results, hold the machine using your other hand so you can rotate quickly.

When spinning, you will be rotating the handle quickly so it's possible that the machine will shake slightly. This is normal. If it is shaking too much, too much it might mean the clothing isn't distributed properly. In this case, just let go of the handle until it stops working. Open the lid to balance the articles inside, then close the lid and begin to spin again.

## Need to Contact Us?

|                               |  |
|-------------------------------|--|
| <b>WEBSITE:</b>               | <a href="http://www.avalon-bay.com">http://www.avalon-bay.com</a>  |
| <b>SUPPORT EMAIL ADDRESS:</b> | <a href="mailto:support@avalon-bay.com">support@avalon-bay.com</a> |
| <b>TELEPHONE NUMBER:</b>      | 1-844-528-2566   |

## Limited Manufacturer's Warranty

This appliance is covered by a limited manufacturer's warranty. For one year from the original date of purchase, the manufacturer will repair or replace any parts of this appliance that prove to be defective in materials and workmanship, provided the appliance has been used under normal operating conditions as intended by the manufacturer.

### Warranty Terms

During the first year, any components of this appliance found to be defective due to materials or workmanship will be repaired or replaced, at the manufacturer's discretion, and at no charge to the original purchaser. The purchaser will be responsible for any removal or transportation costs.

### Exclusions

The warranty will **not** apply if damage is caused by any of the following:

- Power failure
- Damage in transit or when moving the appliance
- Improper power supply such as low voltage, defective household wiring, or inadequate fuses
- Accident, alteration, misuse, or abuse of the appliance such as using non-approved accessories, inadequate air circulation in the room or abnormal operating conditions (extreme temperatures)
- Use in commercial or industrial applications
- Fire, water damage, theft, war, riot, hostility, or acts of God, such as hurricanes, floods, etc.
- Use of force or damage caused by external influences
- Partially or completely dismantled appliances

### Obtaining Service

When making a warranty claim, please have the original bill of purchase with purchase date available. Once confirmed that your appliance is eligible for warranty service, all repairs will be performed by an Avalon Bay authorized repair facility. The purchaser will be responsible for any removal or transportation costs. Replacement parts and/or units will be new, re-manufactured, or refurbished and are subject to the manufacturer's discretion. Do not use an unauthorized person to replace or fix a damaged main cord.

For technical support and warranty service, please email [support@avalon-bay.com](mailto:support@avalon-bay.com).