


FWC008-11

Wine Refrigerator

User Manual

SKU:FWC008-11BL-USZX

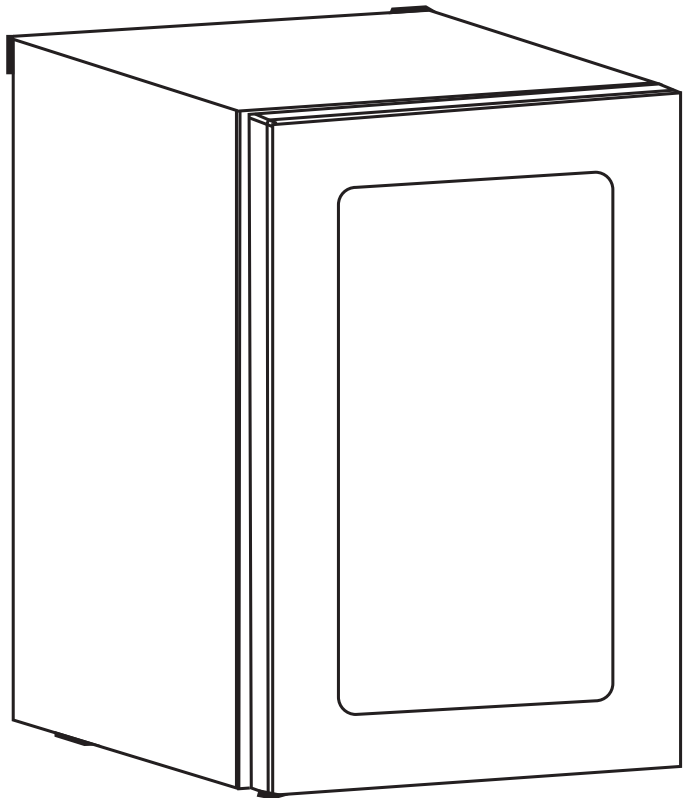

For Customer Service Support
Call: 1-833-632-0897
Email: support@homyd.com

Thank You for Choosing Our Product

Thank you for choosing our product.

We sincerely appreciate your trust and support. Your satisfaction is our top priority, and we are committed to delivering high-quality products and attentive service.

If you have any questions or suggestions during use, please do not hesitate to contact us. We are always here to assist you.

Contact Information

Email: support@homyd.com (Replies within 24 hours on business days)

Toll-Free: 1-833-632-0897 (Monday to Friday, 9:00 AM – 6:00 PM ET)

We hope this product brings ease and enjoyment to your daily life.

Warranty Statement

This product is covered by a limited warranty that protects against defects in materials and workmanship under normal household use.

If your product develops a fault after the return period of your purchase platform has ended, please contact us directly. We will do our best to assist you based on the warranty terms.

For warranty-related inquiries, please reach out using the contact details listed above.

Contents

Important Safety Instructions	02
Key Components And Structure	04
Installation Guide	05
Getting To Know Your Wine Refrigerator	06
Clean And Maintenance	08
FAQs	10
Troubleshooting	11
Specifications	13
Warranty Policy	14
Return Policy	15

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should be followed to reduce the risk of fire, electric shock, and injury to persons or property. Read all instructions before using the appliance.



Risk of Fire or Explosion—Flammable Refrigerant Used

Risk of fire or explosion. Dispose of the unit in accordance with federal or local regulations. Flammable refrigerant used.

Risk of fire or explosion. Flammable refrigerant used. To be repaired only by trained service personnel. **DO NOT** puncture refrigerant tubing.

Risk of fire or explosion. Flammable refrigerant used. Consult User Manual or Owner's Guide before attempting to service this product. All safety precautions must be followed.

Child Safety

1. Keep shelves in place to prevent children from climbing inside.
2. Risk of child entrapment. Before discarding the unit, remove the door.
3. Children should be supervised to ensure that they **DO NOT** play with the appliance.
4. This appliance is **not** intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or a lack of experience and knowledge, unless supervised or instructed on its use by a person responsible for their safety.

Installation & Placement

5. The wine refrigerator is for **indoor** use only.
6. **DO NOT** tilt it beyond 45° or place it upside down, and **NEVER** tip it over. When transporting the wine refrigerator, always keep it upright.
7. The appliance must be correctly installed and connected to the power supply in accordance with the installation instructions before it is used.

Electrical Safety


8. **DO NOT** cover the power cord or place objects on it. Keep the cord clear of high-traffic areas. **DO NOT** submerge the cord in water.
9. Plug this appliance into a dedicated outlet. The main power supply must be properly grounded.

10. Ensure the plug is fully inserted into the wall outlet. **NEVER** unplug the unit frequently by pulling on the power cord.
11. This unit must be positioned so that the plug is accessible. **DO NOT** run the cord over carpeting or other heat-insulating materials.
12. **DO NOT** use an extension cord unless absolutely necessary. If one must be used, it must be a UL-listed, 3-wire grounding-type appliance cord with a grounding plug and outlet, rated for 115 V and at least 10 A.
13. Unplug your unit before cleaning, servicing, or when not in regular use.
14. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or a similarly qualified person to prevent a hazard.

Hazard Prevention & Disposal

15. **DO NOT** damage the unit's refrigerant circuit.
16. **DO NOT** overfill your wine refrigerator to ensure proper cooling.
17. **DO NOT** use an open flame or have an open flame near the unit.
18. **DO NOT** operate your refrigerator in the presence of explosive fumes.
19. If the appliance does **not** cool properly, dispose of any spoiled food as necessary.
20. **DO NOT** touch the cooled surfaces when the appliance operates, especially not with wet hands.
21. **DO NOT** use other electrical devices to defrost the appliance, and never scrape off ice or frost with sharp tools.

KEY COMPONENTS AND STRUCTURE

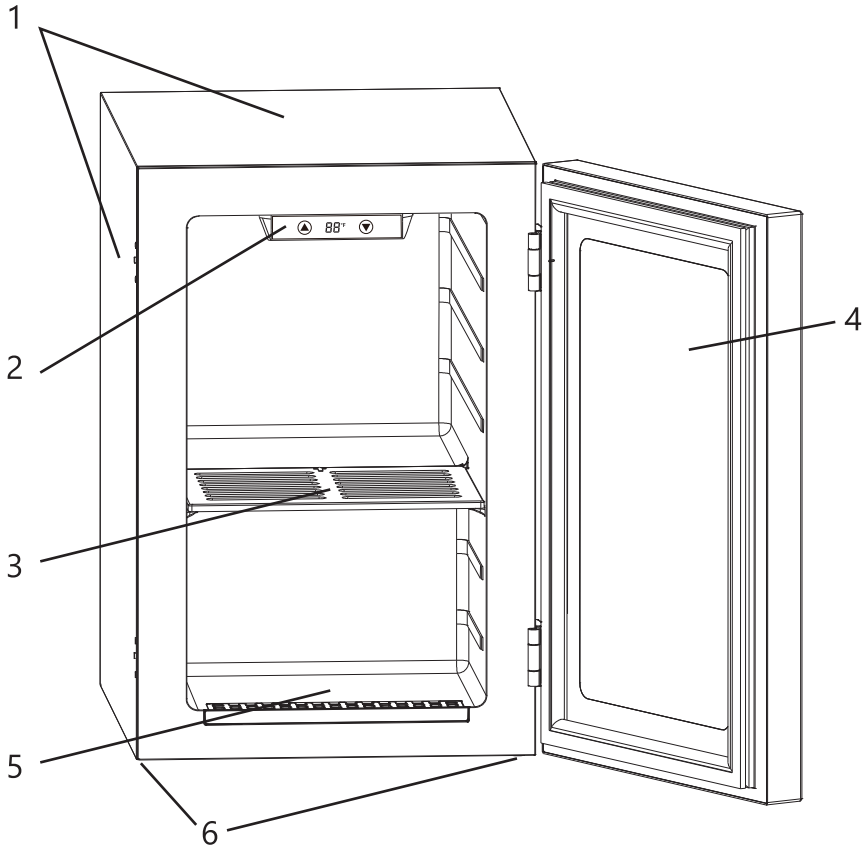

- ① Outer Cabinet
- ② Control Panel
- ③ Shelf
- ④ Door
- ⑤ Drip Tray
- ⑥ Non-adjustable Leveling Legs

INSTALLATION GUIDE

Warning

Before plugging in the wine refrigerator, let it stand upright for at least 24 hours to let the refrigerant settle.


Installation Limitations

1. **DO NOT** overfill your wine refrigerator for proper cooling.
2. This unit is freestanding only and **not** designed for built-in installation.
3. Ensure there is a suitable power outlet (**115 volts, 15-amp outlet**) with proper grounding to power the wine refrigerator.
4. **DO NOT** use a three-prong adapter or cut off the third grounding prong to accommodate a two-prong outlet.
5. Select a **hard** location for the unit, even surface away from direct sunlight or heat source (e.g., radiators, baseboard heaters, cooking appliances, etc.).
6. **DO NOT** install in uninsulated or unheated areas (e.g., garages). The appliance is designed to operate in ambient temperatures between **10°C (50°F)** and **32°C (90°F)**.

Preparation Before Use

- Remove all packaging material. This includes the foam base and all adhesive tape holding the accessories inside and outside.
- Level the unit after properly placing it in its final position.
- To ensure high-quality product performance, follow these dimensions during installation: sides **5 cm (2 inches)**, top **5 cm (2 inches)**, and back **25 cm (10 inches)**.
- Check that the drip tray is located inside, near the bottom of the door, and ensure it is correctly positioned and not loose, missing, or misaligned.
- Wipe the interior surfaces, walls, door seals, and all accessories with lukewarm water and a soft cloth. Dry thoroughly before powering on.

GETTING TO KNOW YOUR WINE REFRIGERATOR

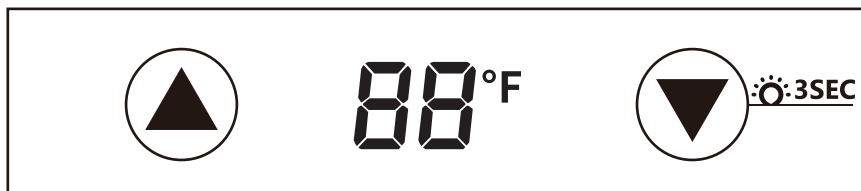

Start up the unit

Connect the power cord to a standard wall outlet. **DO NOT** use a GFCI (Ground Fault Circuit Interrupter) outlet to connect the wine refrigerator. After connecting, you will immediately hear a short beep.

Control the display

Temperature—Adjustable Control Panel

The default temperature is **43°F**. Adjust via ▲ or ▼ buttons within **40–61°F**.

Display flashes during setting, then reverts to current internal temperature after a few seconds.

The display adjusts as temperature changes. Press ▲ or ▼ buttons during adjustment to view the set temperature.

Note: The wine refrigerator restores **last** setting when power resumes after outage.

Light with LED

Press and hold the ▼ button for **3** seconds to turn the LED light on and off.

Load beverages

When first loading the wine refrigerator to full capacity, we recommend the following steps to effectively cool a large number of beverages.

1. Use the adjustable control panel to set the temperature to **43°F** (the default temperature).
2. Allow the wine refrigerator to cool for a minimum of **2** hours.
3. Load the beverages.
4. After initially filling with beverages, the internal temperature will rise as indicated on the display.
5. Once the unit has cooled the beverages to **43°F**, use the adjustable control panel to select a desired cooler internal temperature (the lowest temperature setting is **40°F**, the highest temperature setting is **61°F**)
6. Let the wine refrigerator run for several hours to reach the target lower temperature.

Note: It is normal for temperature variances to occur inside the unit, and areas near the door will have slightly warmer temperatures.

CLEANING AND MAINTENANCE

Caution: Before cleaning your wine refrigerator, always read and follow the manufacturer's instructions to prevent personal injury and product damage.

Cleaning the machine

Dusting under, behind, and around the wine refrigerator will improve the cooling efficiency and save energy. The interior of the wine refrigerator should be cleaned to avoid any odors. Follow the cleaning procedure below.

1. Unplug the wine refrigerator and empty the beverages from it.
2. Use soap and warm water to clean the wine refrigerator.
3. Wipe the door gaskets and the condenser (rear of the unit) clean with warm water.
4. Reconnect the wine refrigerator when the unit is clean and dry.

Note: Clean door gaskets every **3** months. Door gaskets must be kept clean and pliable to ensure a proper seal. Petroleum jelly applied lightly on the hinge side of door gaskets will keep the gaskets pliable and ensure a good seal.

Defrosting the machine

1. Remove the beverages. Unplug the unit to melt the frost. (**DO NOT** use mechanical tools or non-manufacturer-recommended methods to speed up defrosting.)
2. Melted frost will flow into a drip tray. If excess water accumulates, empty it manually.
3. Clean the interior with lukewarm water and a soft cloth, dry thoroughly, then reset the temperature to **6°C (43°F)** and cool for **2** hours.
4. Reload the beverages and adjust to your desired temperature.

Note:

1. **DO NOT** use hot water, harsh detergents, gasoline, kerosene, solvents, acids, or anything flammable to clean the wine refrigerator. These can damage the paint and degrade the plastic components.
2. If any replacement components are required, they must be obtained from the customer service department. This ensures the correct replacement components are provided and minimizes the risk of possible ignition due to incorrect parts or improper service.

Power Interruptions

Occasionally, there may be power interruptions due to thunderstorms or other causes. Remove the power cord from the AC outlet when a power outage occurs. When power has been restored, replug the power cord into the AC outlet.

Note:

The temperature of the wine refrigerator will revert to the **last** set temperature after any power outage. Reset your temperature selection.

Vacation and Moving Care

For long vacations or absences, empty contents from the wine refrigerator, unplug the unit, and clean unit and door gaskets according to “**CLEANING AND MAINTENANCE**” part. Prop doors open, so air can circulate inside. When moving, always move the wine refrigerator vertically. **DO NOT** move the unit while it is lying down; possible damage to the sealed system could occur.

FAQs

1. Is this rated for outdoor use?

This wine refrigerator is primarily designed for indoor use and is not suitable for outdoor use.

2. What are the warranty specifications?

We provide a 12-month warranty and lifetime technical support for this refrigerator. If you would like to learn more, contact our customer service team.

3. Is it normal for the wine refrigerator to get hot on the outside?

It is normal for a refrigerator to emit some heat on the outside. This happens because refrigerators work by transferring heat from inside the unit to the outside, keeping the inside cool.

4. Can the shelf inside the wine refrigerator be moved?

The shelf inside the wine refrigerator is adjustable and can be moved.

TROUBLESHOOTING

Problem	Possible Cause	Solution
The appliance does not operate.	There is a power failure, or the appliance is not plugged in.	Ensure the appliance is plugged in and the power outlet has power.
	A house fuse has blown, or the circuit breaker is tripped.	Replace the broken fuse or reset the circuit breaker.
The appliance does not operate.	Frequent door openings or incomplete door closures.	Close the door tightly and DO NOT open the door too frequently or for a long period of time.
	Temperature setting is not suitable.	Adjust temperature control to cooler setting.
	The door gasket does not seal properly	Ensure the door gasket is not loose
The appliance is too cold.	The temperature control setting is too cold.	Adjust to a warmer setting and allow several hours for temperature to adjust.
The appliance runs too frequently.	More cooling is required for the environmental conditions.	In high-temperature and high-humidity environments, it may be normal for the unit to run continuously to maintain a constant temperature.
	Frequent opening of the door allows warm air to enter.	Reduce the frequency of opening the door.
	The appliance is in a high-temperature and humid environment.	This is a normal situation for the appliance to run. Lower the room humidity level with a dehumidifier or air conditioner.
Moisture build-up on interior or exterior of the unit.	Poor door seal.	Check door gaskets for proper seal.
	Ambient temperature or humidity is high.	Lower the room humidity by dehumidifier or air conditioner.

Problem	Possible Cause	Solution
The door of the appliance does not shut properly.	The appliance is not placed on a level surface.	Level the appliance.
	There are objects or obstacles blocking the passage, pipe, or opening.	Check for blockages.
Received the product damaged or missing accessories.	Possible damage caused during shipping.	In this situation, contact our customer service team. They will be more than happy to assist you in resolving the issue.

SPECIFICATIONS

FWC008-11 Wine Refrigerator	
SKU	FWC008-11BL-USZX
MODEL	FWC008-11
VOLTAGE	115V~60HZ
RATED CURRENT	0.9A
REFRIGERANT	R600A, 0.49Oz/14g
FOAMING	CYCLOPENTANE
DIMENSIONS(W×D×H)	11.0*14.8*16.8 inches
NET WEIGHT	21.2lbs

WARRANTY POLICY

1-Year Limited Warranty

Toll-Free Call: 1-833-632-0897 Mon to Fri, 9AM - 6PM (ET)

Email: support@homyd.com

Thank you for choosing our products. We provide a 1-Year Limited Warranty for items purchased through our official channels. Please kindly note that this warranty is for the original purchaser and is non-transferable. If you purchase from an unauthorized seller, please get in touch with them directly.

We are committed to ensuring that our products are free from defects in materials and workmanship for one year from the date of purchase, as long as they are used under normal household conditions and maintained according to the User Manual. **Please note that certain conditions and exclusions apply:**

Should you find any defects in the original product or its non-wearable parts, we will be happy to repair or replace the item within one year of purchase. If a replacement is necessary, the warranty period will continue from the original purchase date. Please be aware that normal wear and tear, or damage due to mishandling, accidents, or failure to follow instructions, are not covered. However, replacement parts are available for purchase. Feel free to contact us for more information.

Please also note that this warranty does not cover damage caused by exposure to liquids or foreign materials, unauthorized repairs or modifications, or use in commercial or non-household environments (unless specified for commercial use).

If you encounter any issues with your product, we are here to help. You can reach us by phone at **1-833-632-0897** or email us at **support@homyd.com**. For certain product categories, we also offer the option to upgrade your warranty to our VIP service.

Our friendly phone support team is available from **Monday to Friday, 9 AM - 6 PM (ET).**- To assist you more efficiently, please have your product with you when you call. Besides, we aim to respond to emails within 24 business hours. If you don't receive a reply within this timeframe after sending us an email, kindly check your spam folder to ensure you don't miss our response.

In addition to the one-year warranty, we also offer lifetime technical support. After the warranty period, service is still available at an additional cost. Please don't hesitate to contact us with any questions or concerns.

RETURN POLICY

We offer a 30-day return policy for purchases made directly through our company. This policy is separate from and does not override the return policies of third-party platforms.

Return Eligibility

Items must be returned within 30 days of purchase.

Products should be in new or like-new condition, with original packaging and all accessories (manuals, handles, keys, etc.).

Returns not related to quality issues will require the buyer to cover return shipping costs, which will be deducted from the final refund.

How to Initiate a Return

Contact our customer service team for return authorization.

Provide the following information:

Proof of purchase (e.g., screenshot with platform name, order number, date, item, and amount)

After approval, we will send a return shipping label. Attach it to the product box and return via the designated carrier.

Once we receive and inspect your return, we will process your refund within 2–3 **business days** (excluding original processing or handling fees).

***Note:**

- *Returned products that are damaged or missing parts may not qualify for a refund.*
- *This return policy does not affect your warranty rights.*
- *For details, please refer to the "Return Policy" section of this manual or the return policy on your purchase platform.*

SKU: FWC008-11BL-USZX

