 


60" ELECTRIC FIREPLACE MEDIA STAND WITH SYNC COLORFUL LED LIGHTS

ASSEMBLY, CARE & USE INSTRUCTIONS

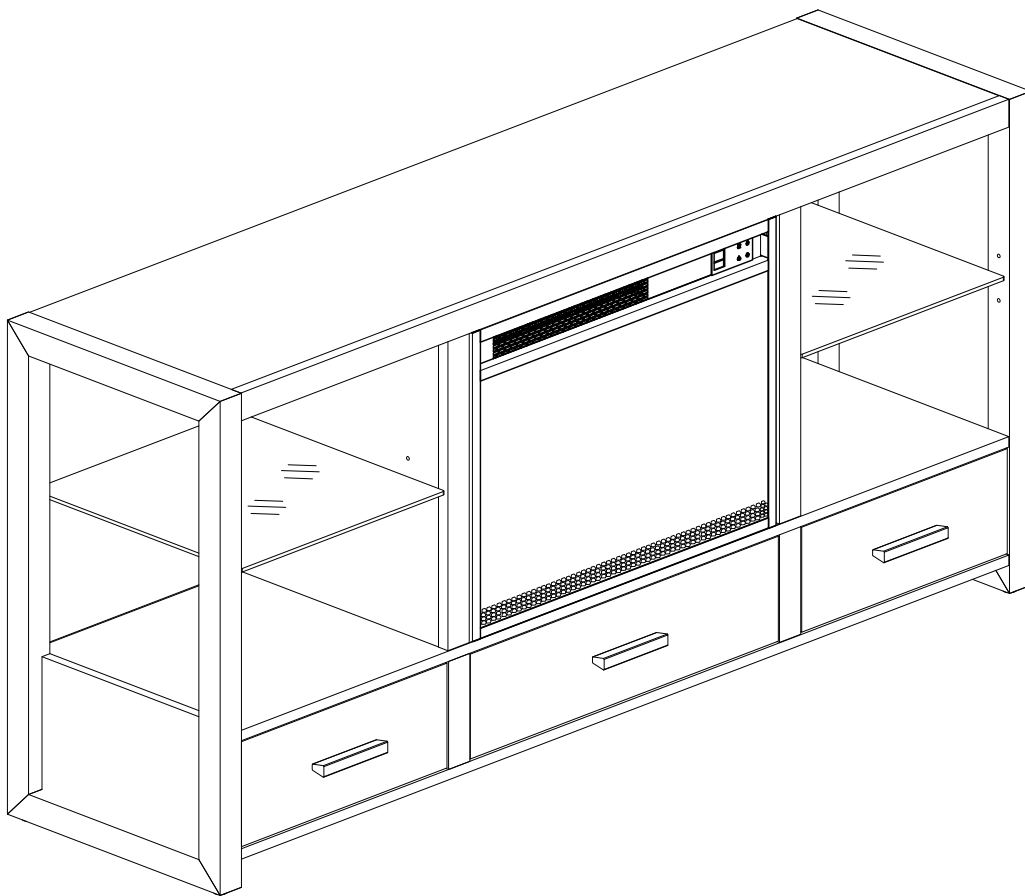

W101-RV23-DR Dark Rustic Oak

W101-RV23-RB Reclaimed Barnwood Color

THANK YOU

We appreciate the trust to purchase our electric fireplace media mantel. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing us!

ASSEMBLY TIPS

Before you begin, locate the instructions and hardware. Take out all the parts and compare them to the diagrams below. Be sure you have all the parts and can identify them.

Two people are required to assemble this product. Assembly time will take approximately 30-90 minutes.

Before assembly, use scissors to unwrap the parts from the packaging.

DO NOT use a box cutter or exacto-knife as you may cut into the mantel pieces inside the box and damage the finish. Check for the hardware bag which is RED and located inside the packaging, taped to the top box.

DO NOT discard any pieces.

CAUTION

 
There are small components used in the construction of this product.

Loose items should be kept away from pets and children to avoid a choking hazard. Keep all plastic and packaging film away from pets and children to avoid suffocation.


CARE AND MAINTENANCE

1. Dust your fireplace mantel regularly with a soft non-lint producing cloth or household dusting product.
2. You can clean your fireplace insert with a gentle non-abrasive household cleaner. Make sure to dry your fireplace immediately with a soft cloth or towel.

TOOLS REQUIRED (NOT INCLUDED)

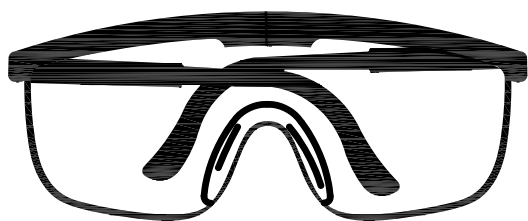


Safety goggles

 



Phillips screwdriver

Questions, problems, missing parts? Before returning to your retailer, send email to this mail box at any time: service@cambridgeelectrical.cn





 
Package Contents

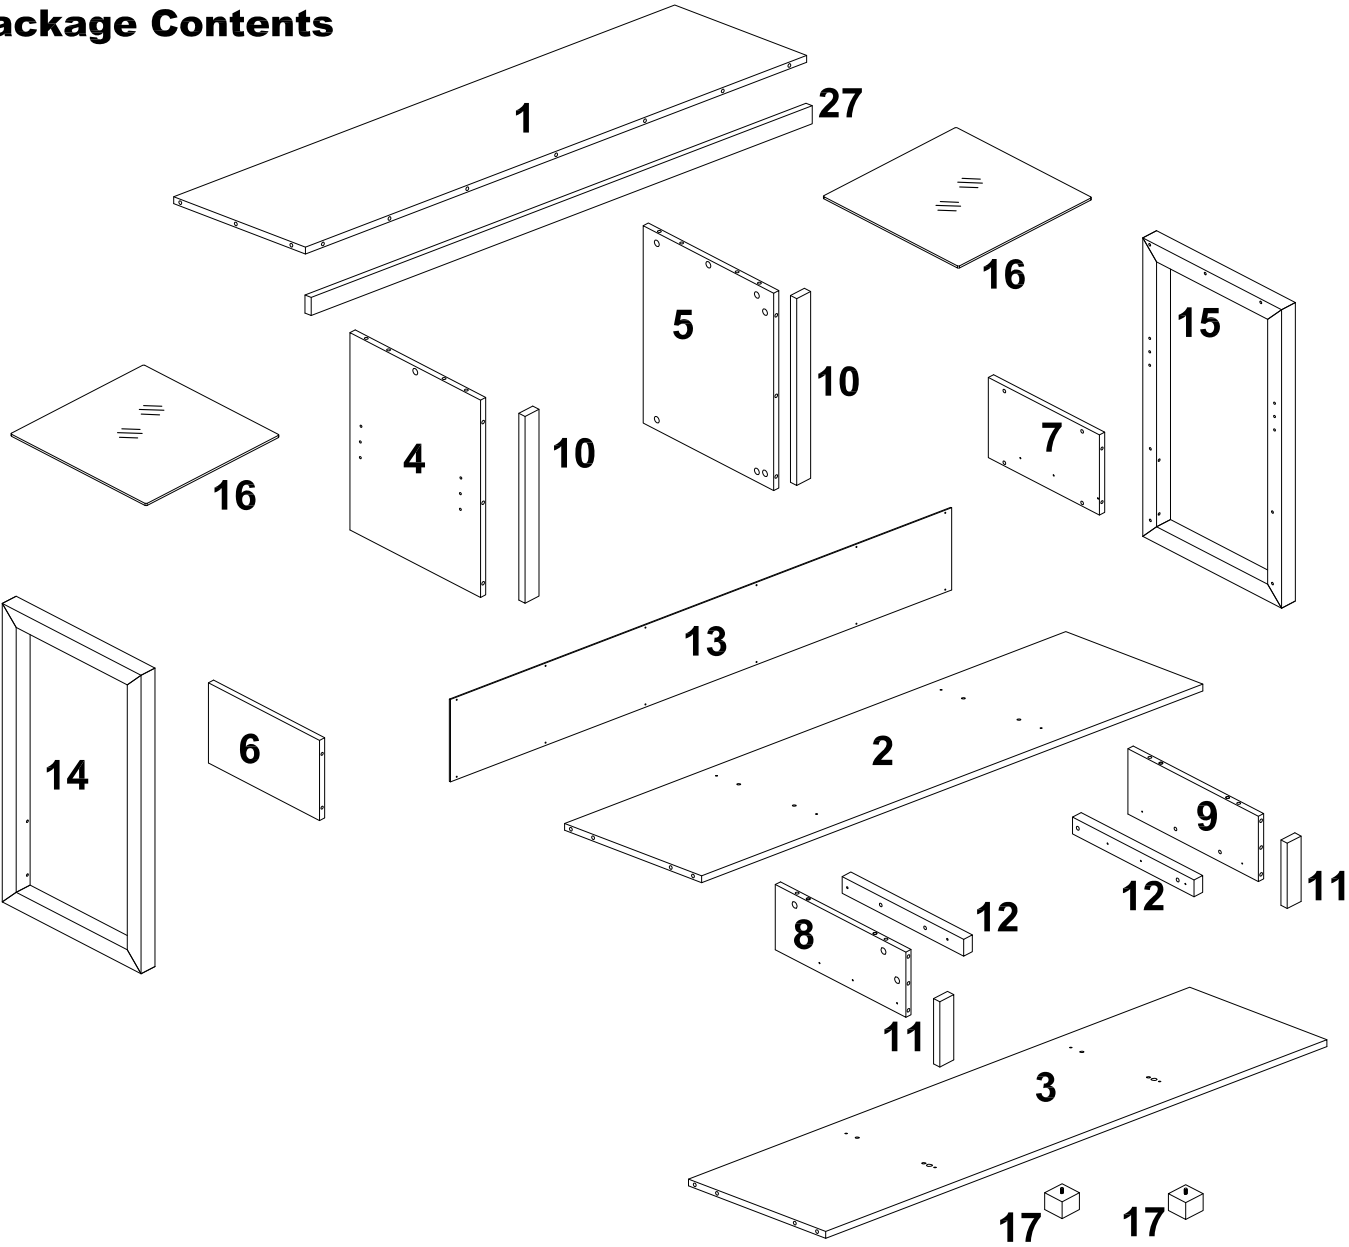


X2

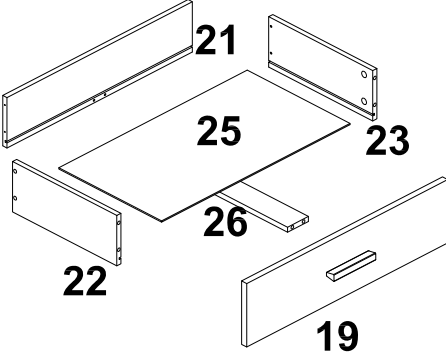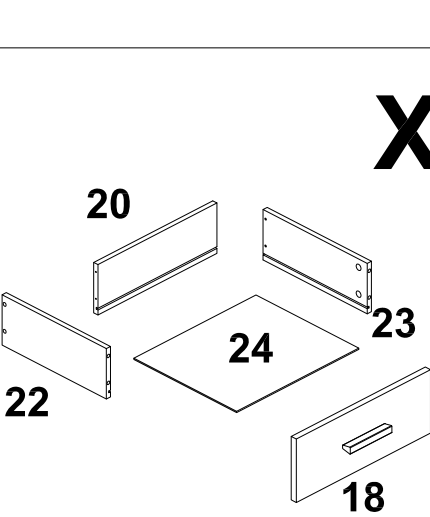  



Hardware List

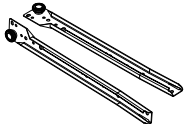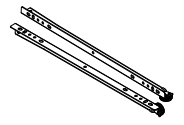     A		Ø8*30	Wood dowel	37+1pcs
B		Ø6*35	Cam bolt	36+1pcs
C		Ø15*12	Cam lock	36+1pcs
D		Ø15*10	Cam lock	14+1pcs
E		Ø6*25	Cam bolt	18pcs
F		Ø5*60	Screw	4pcs
G		Ø3*12	Screw	40+2pcs
H		Ø6*50	Screw	4pcs
I		Ø4*30	Screw	18pcs
J		Ø3*12	Screw	12pcs
K			Glass Clip	8pcs
L			Drawer Pull	3set
M		M4*22	Drawer Blot	6pcs
N			Drawer Side Slide	6pcs
O			Drawer Bottom Slide	6pcs
P		Ø15*30		48+1pcs
Q		M4	Hex Key	1pcs
R			Anti-Tipping	2set
S			Nut	2pcs

 
Step 1





E x18

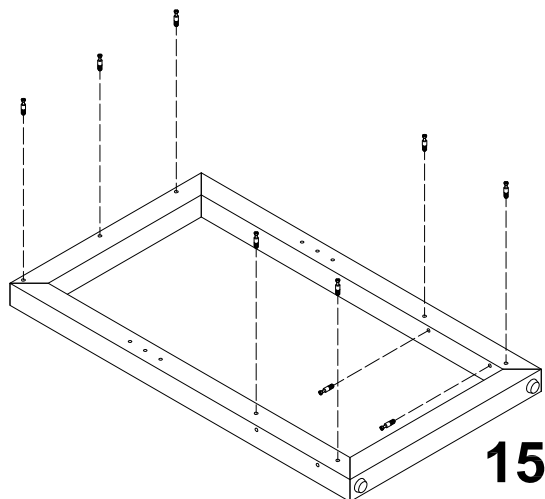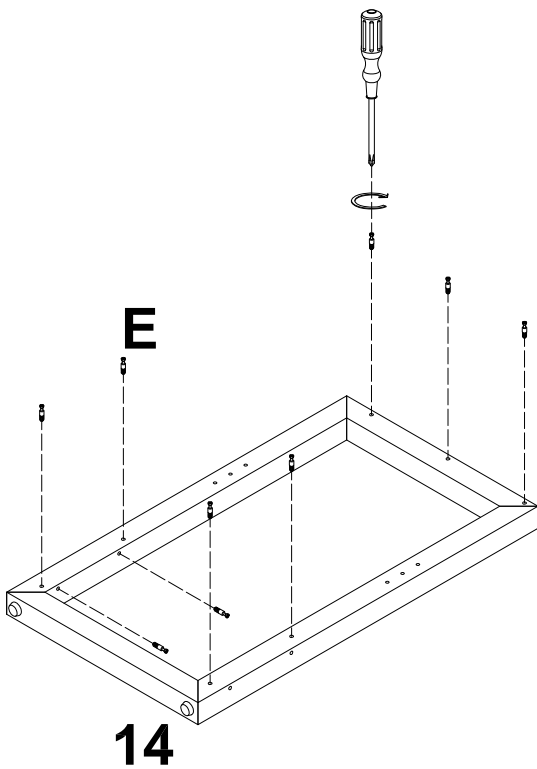  




 
Step 2





F x 4

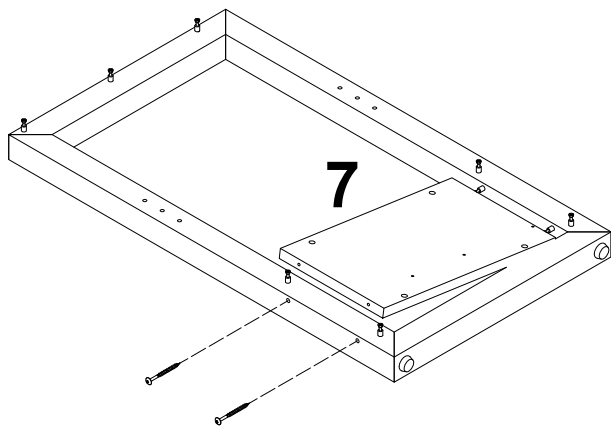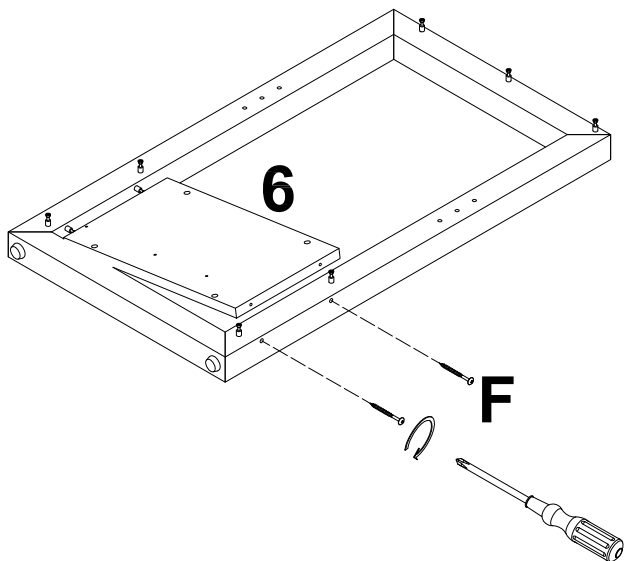  

    
Step 3

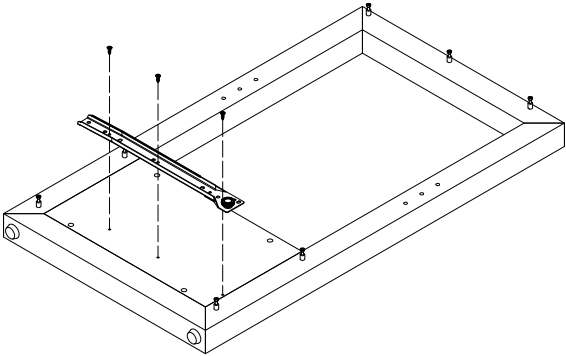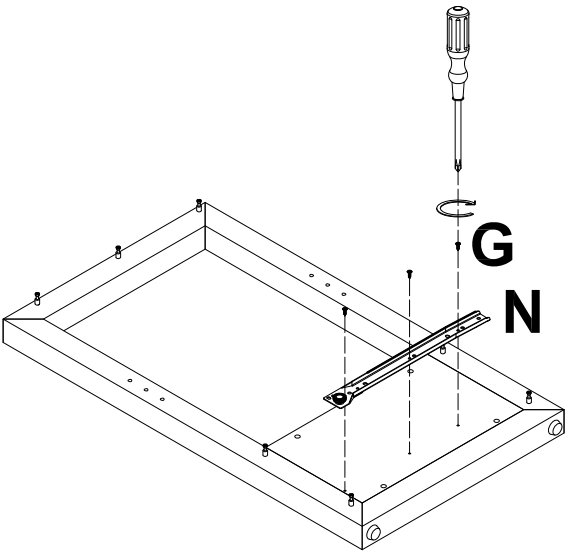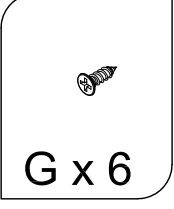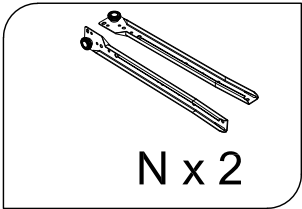

  Step 4

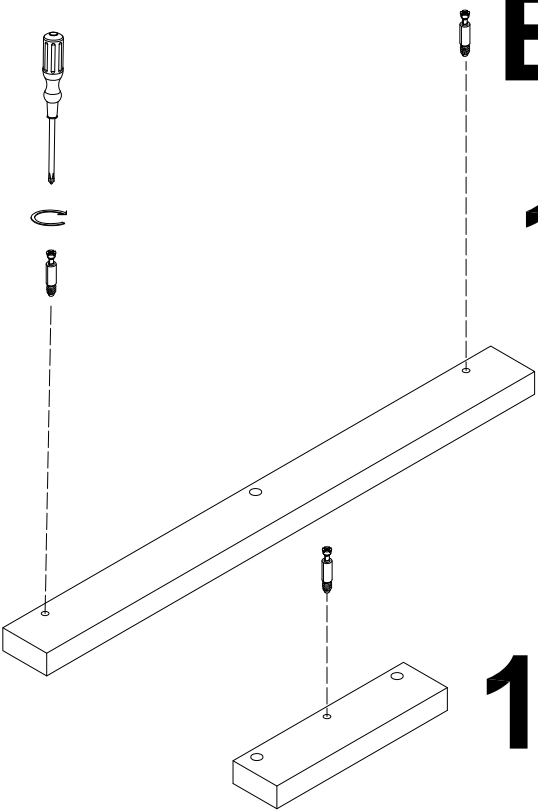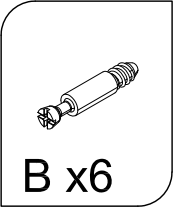



 
Step 5




A x 2



   C x 4

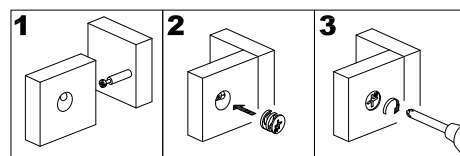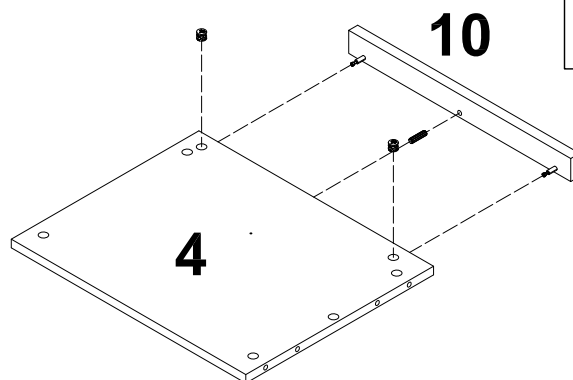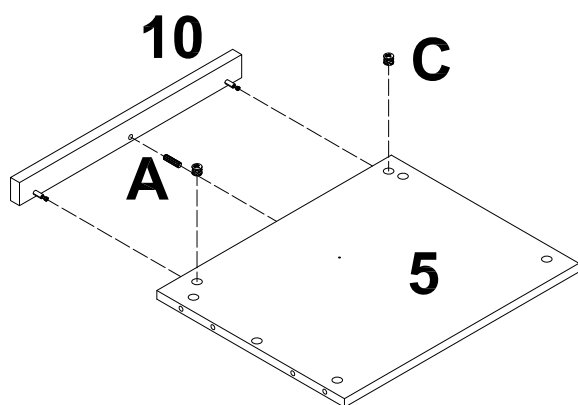



 
Step 6







A x 4




 
 
 
C x 2

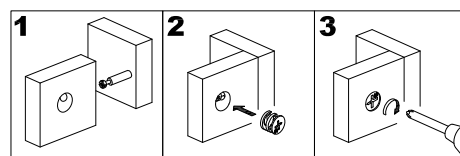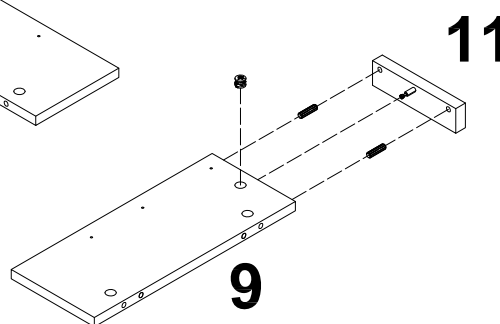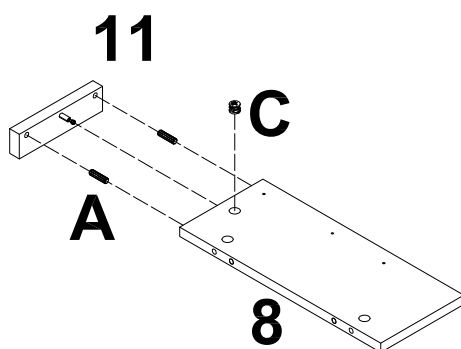

    
Step 7

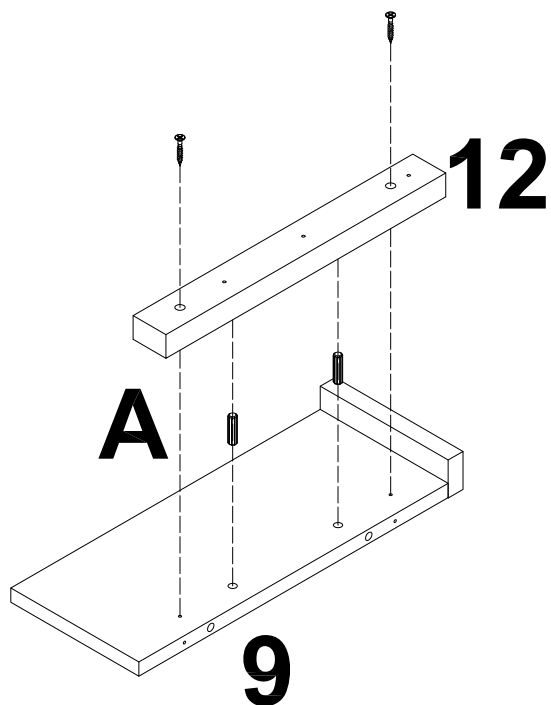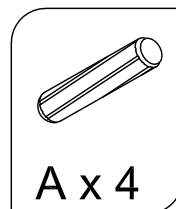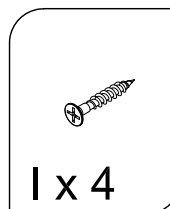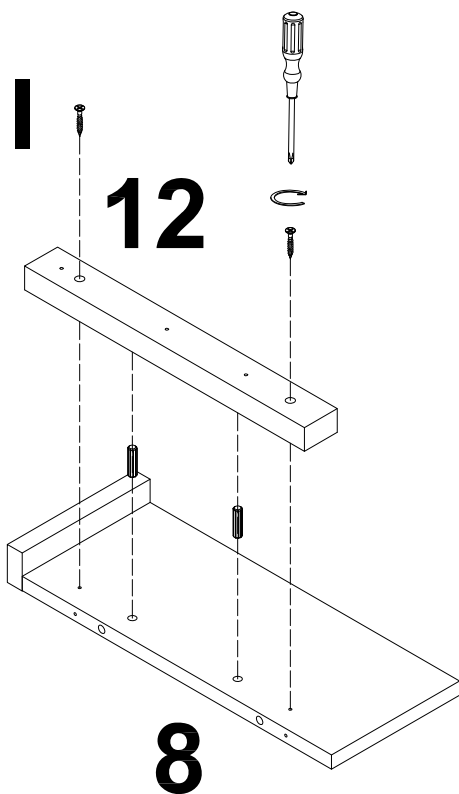

    
Step 8

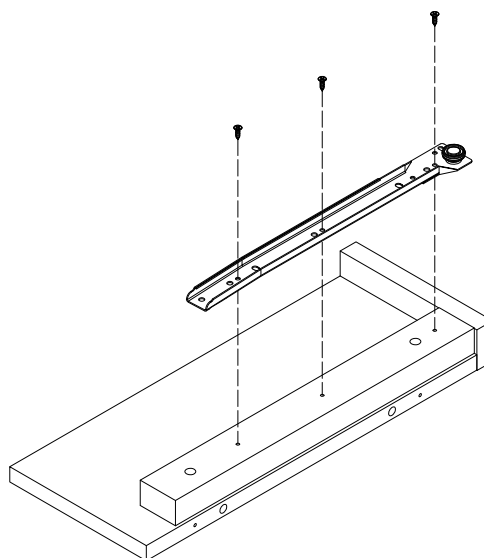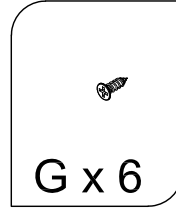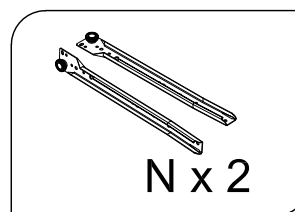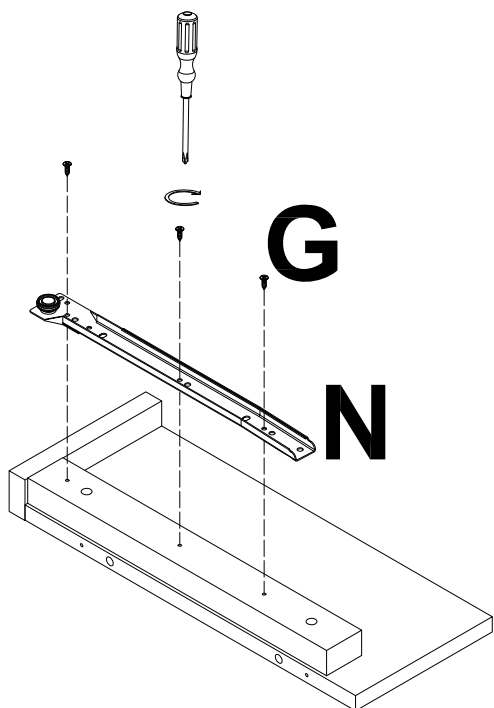


 
Step 9

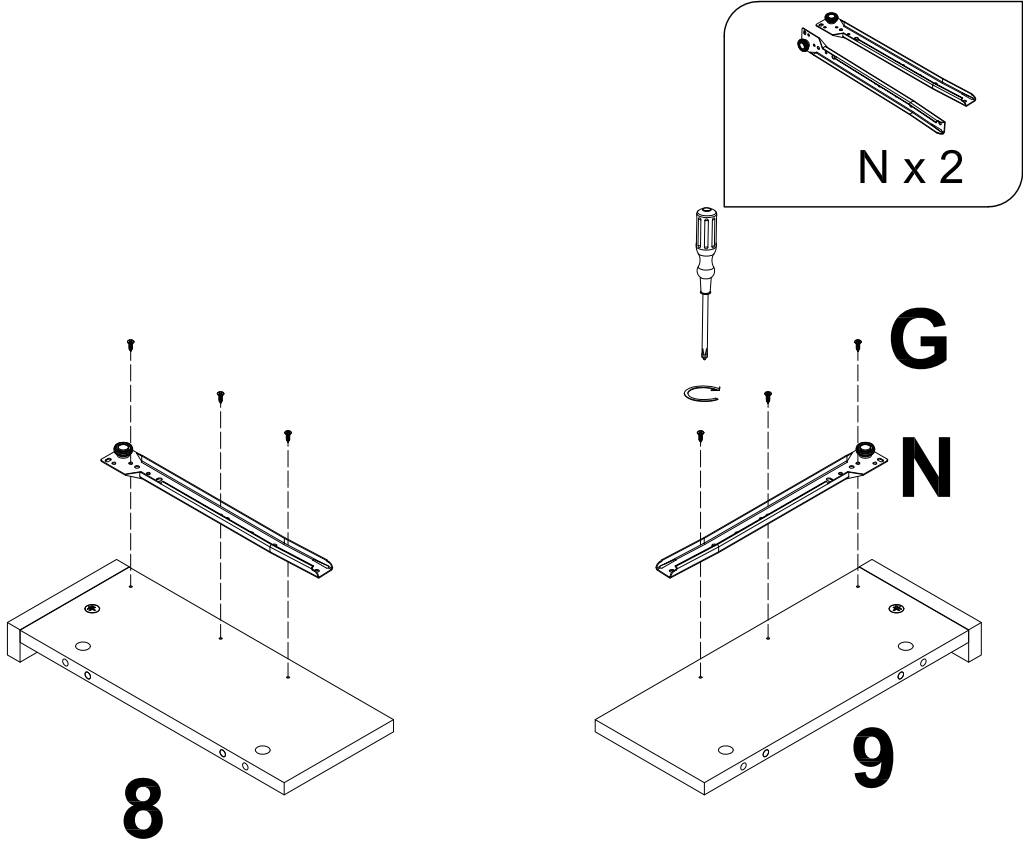

 Step 10


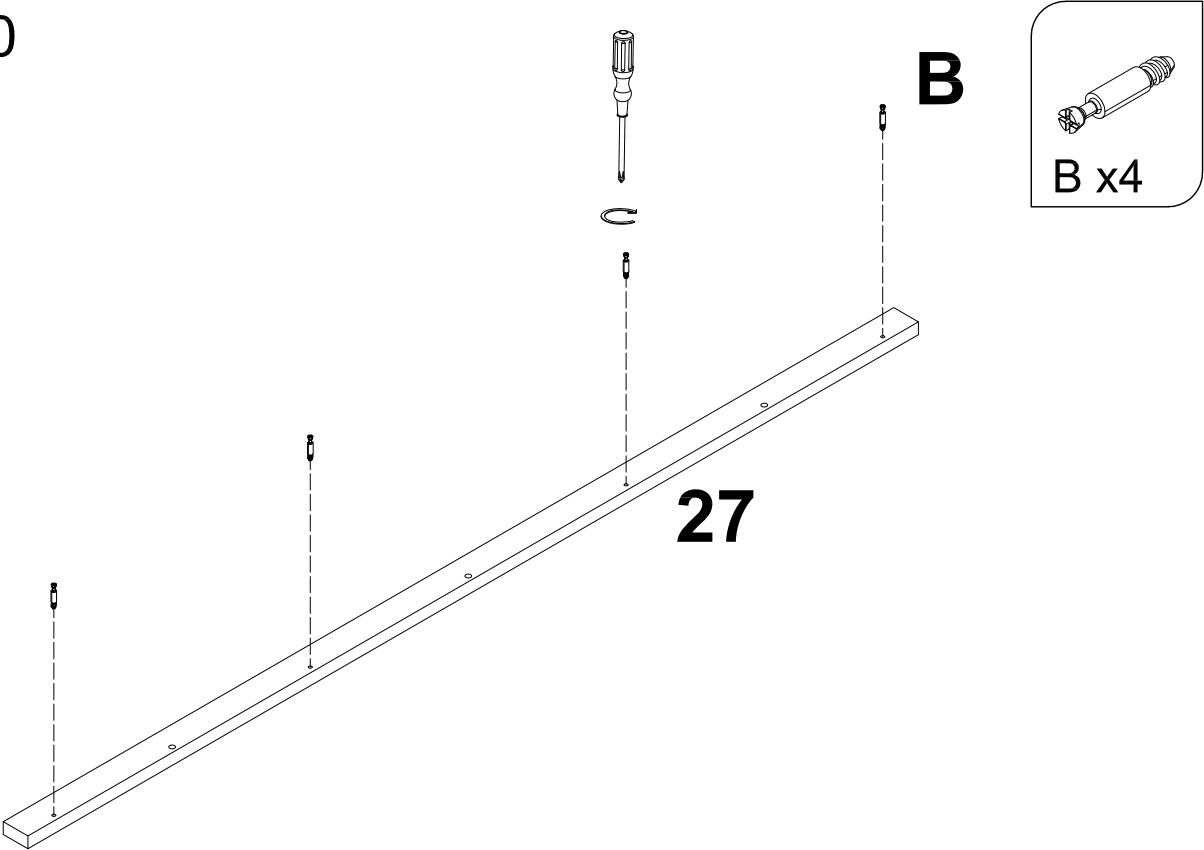


  Step 11

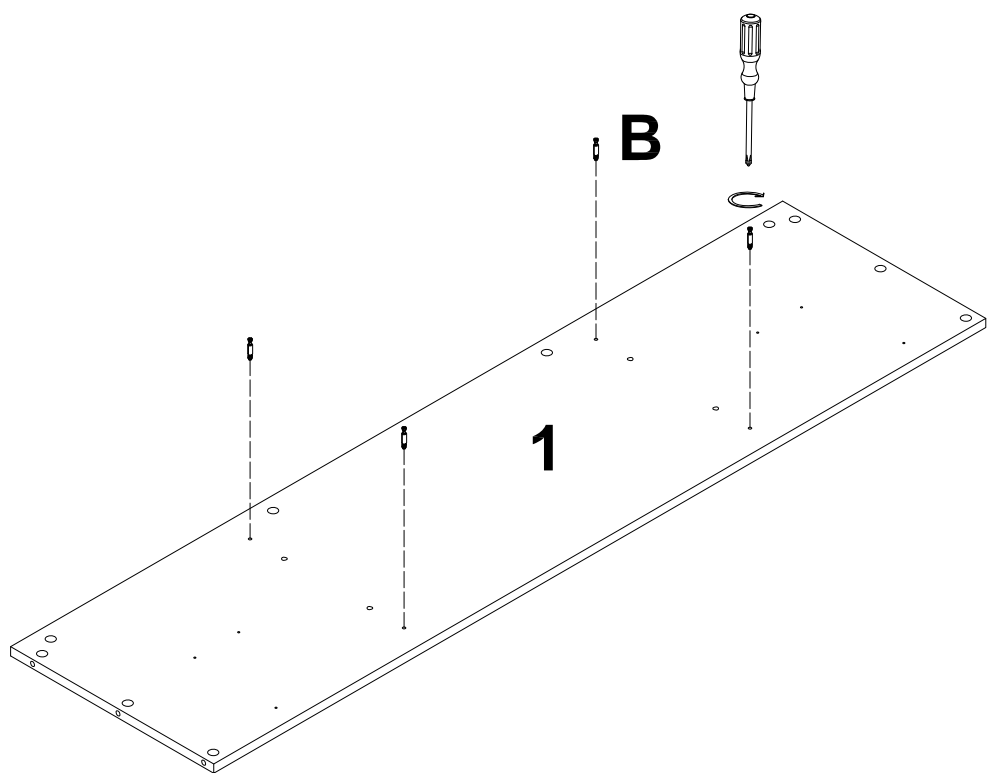

B x4

  
Step 12

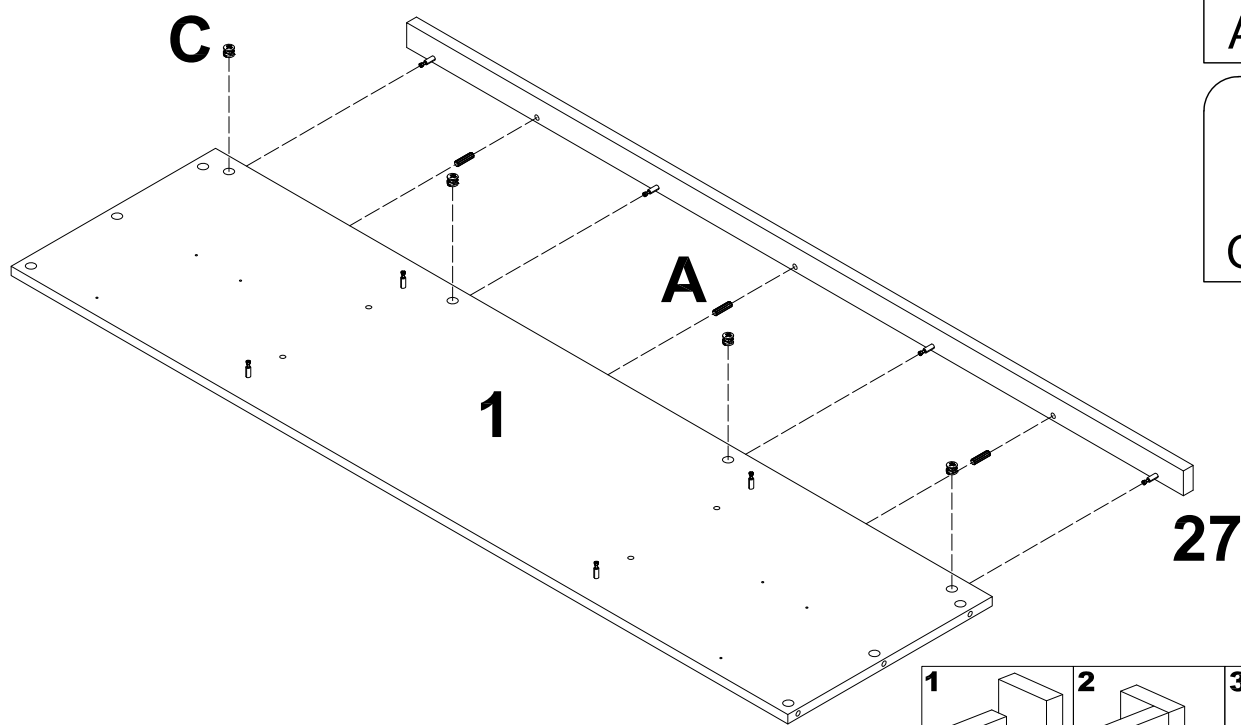



A x 3



 C x 4

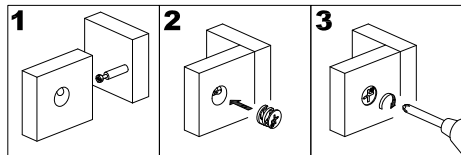

  
Step 13

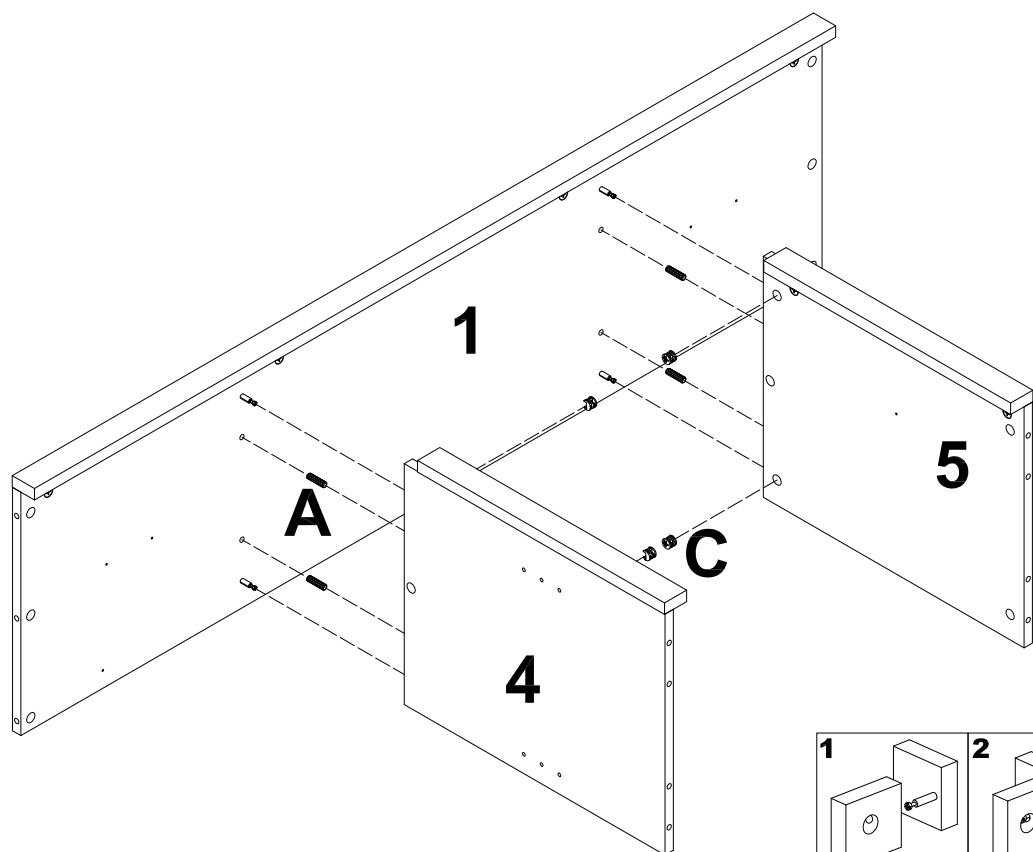



A x 4



 C x 4


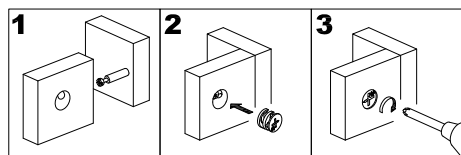


  Step 14

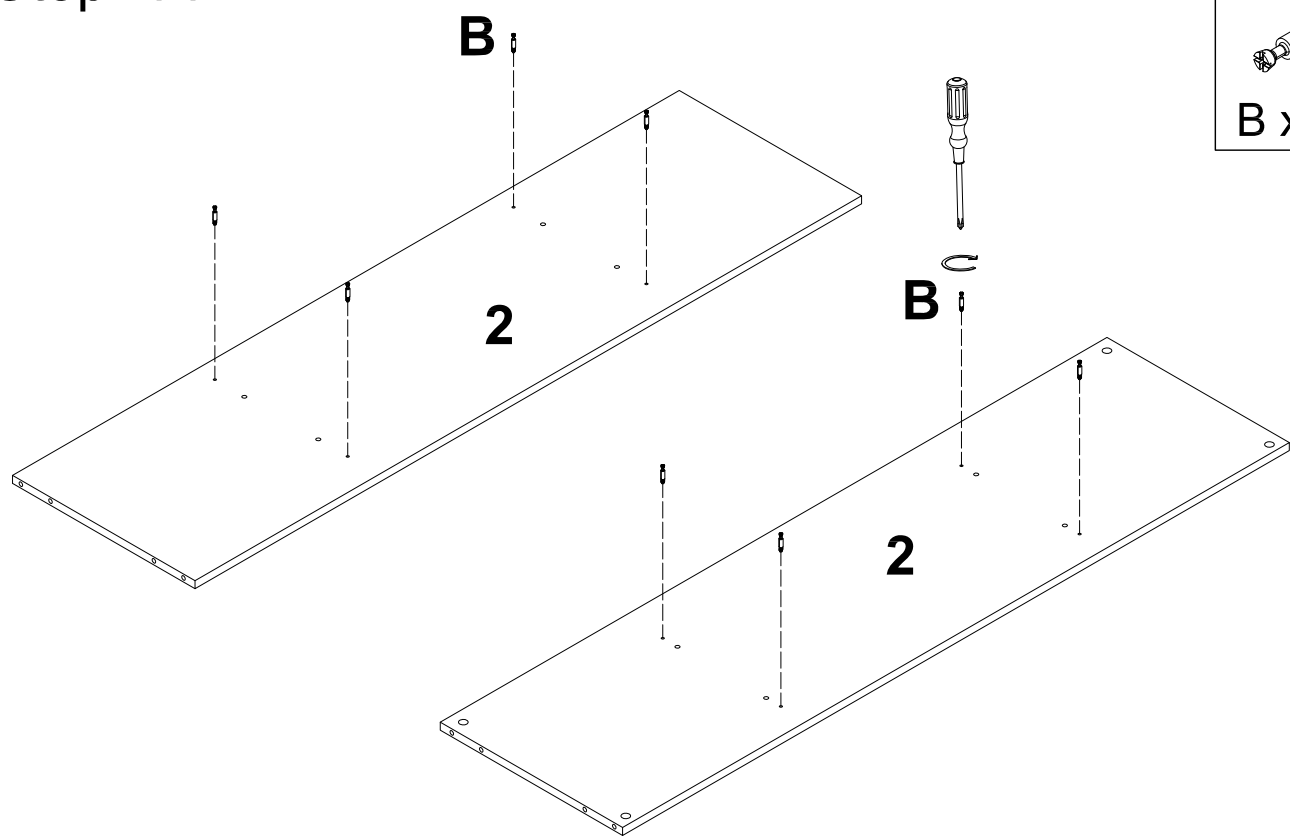

B x 8

  
Step 15

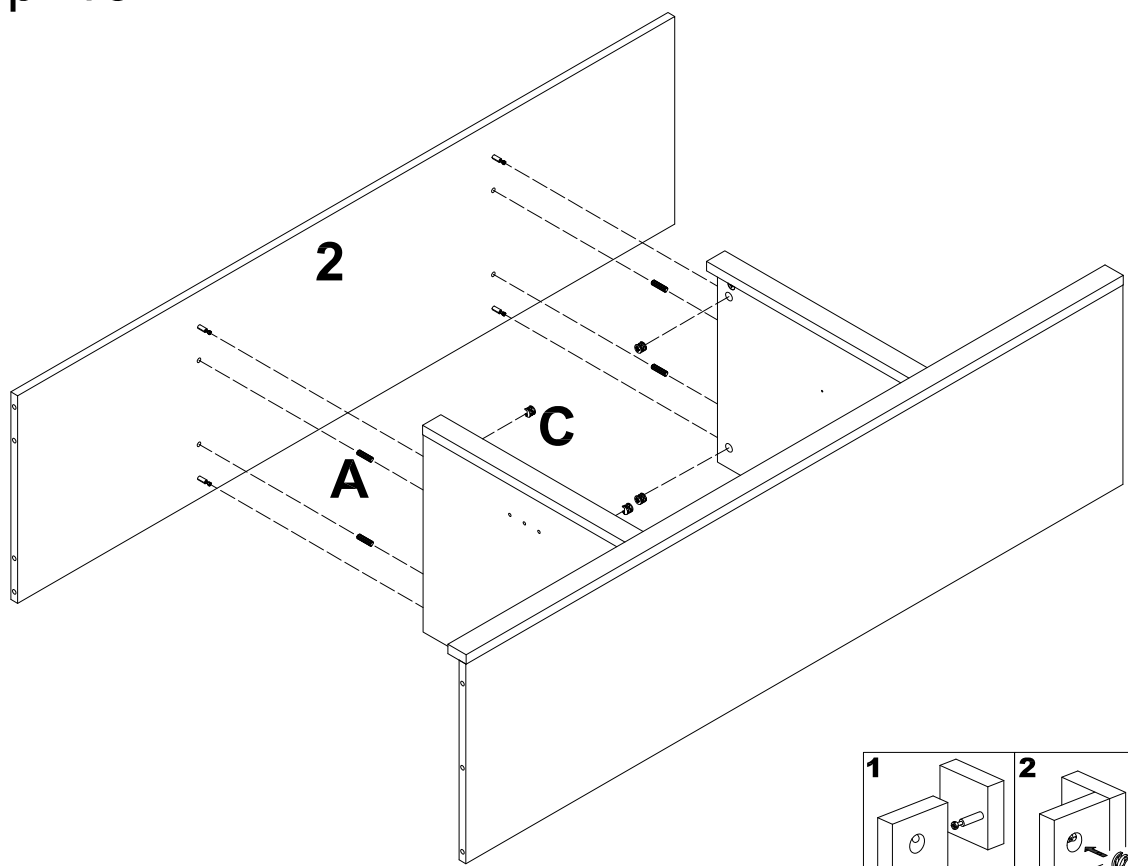



A x 4



 C x 4

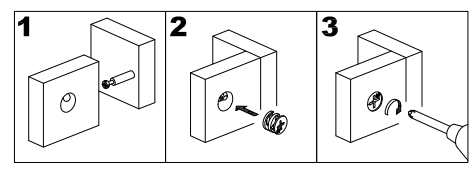

  
Step 16

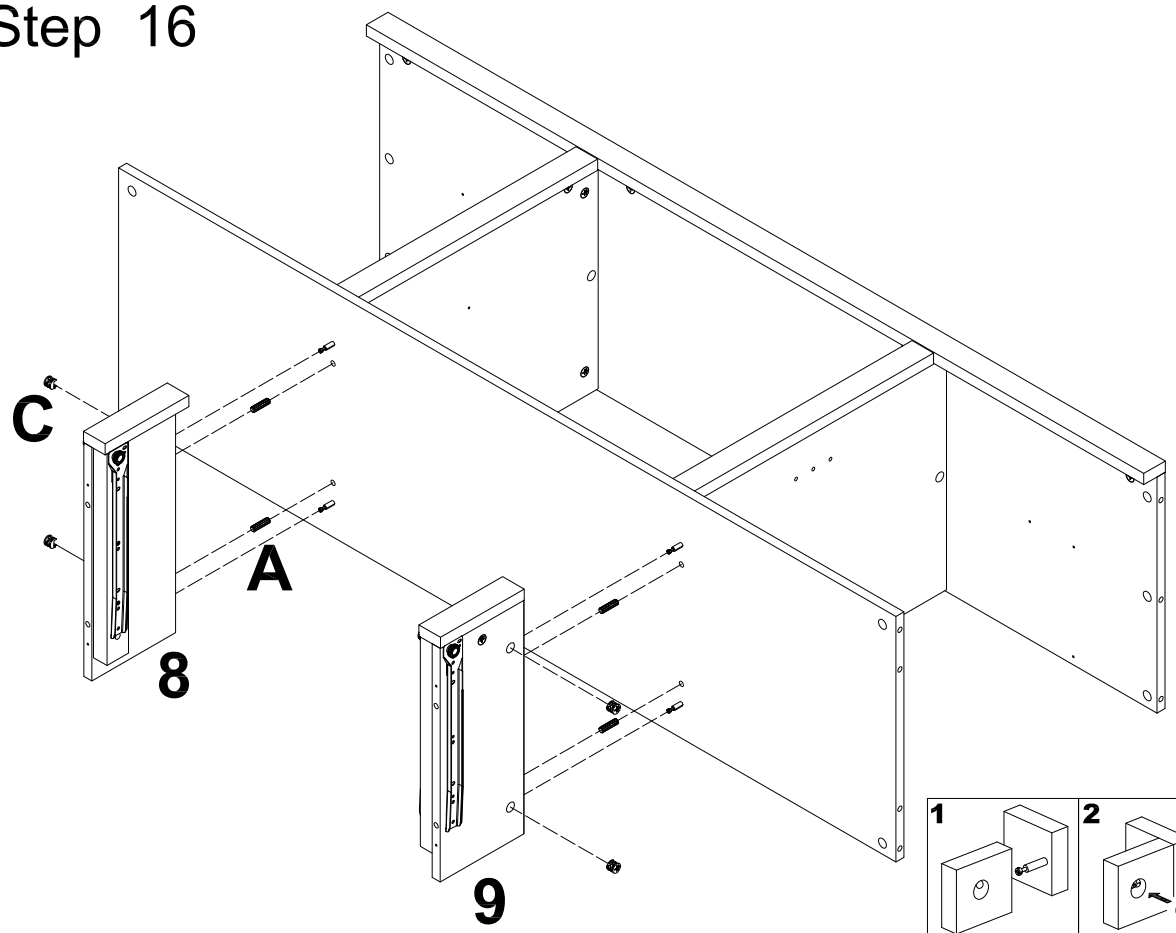



A x 4



 
C x 4

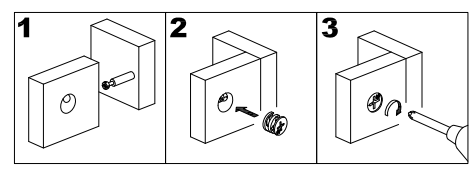

  Step 17

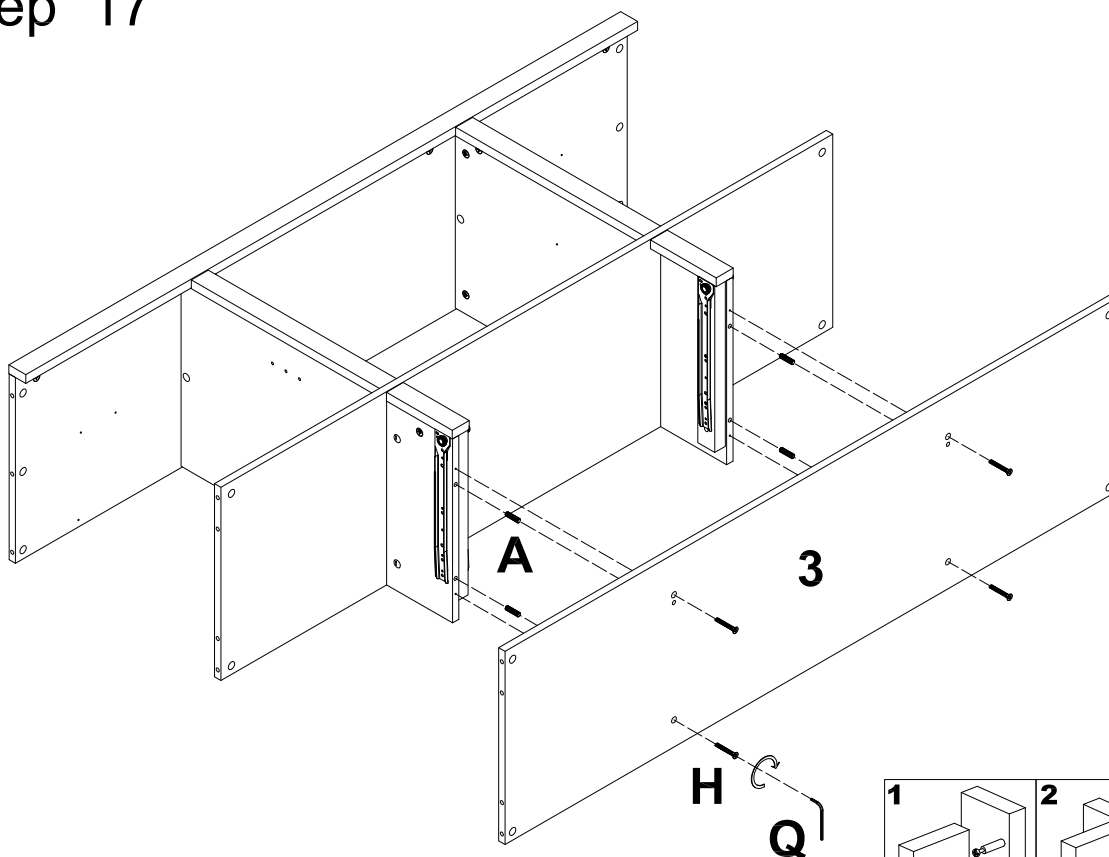


A x 4

 


H x 4




 
Q x 1

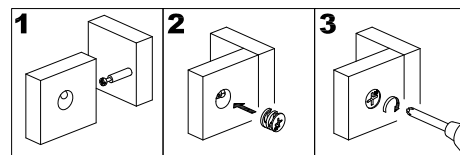

 Step 18

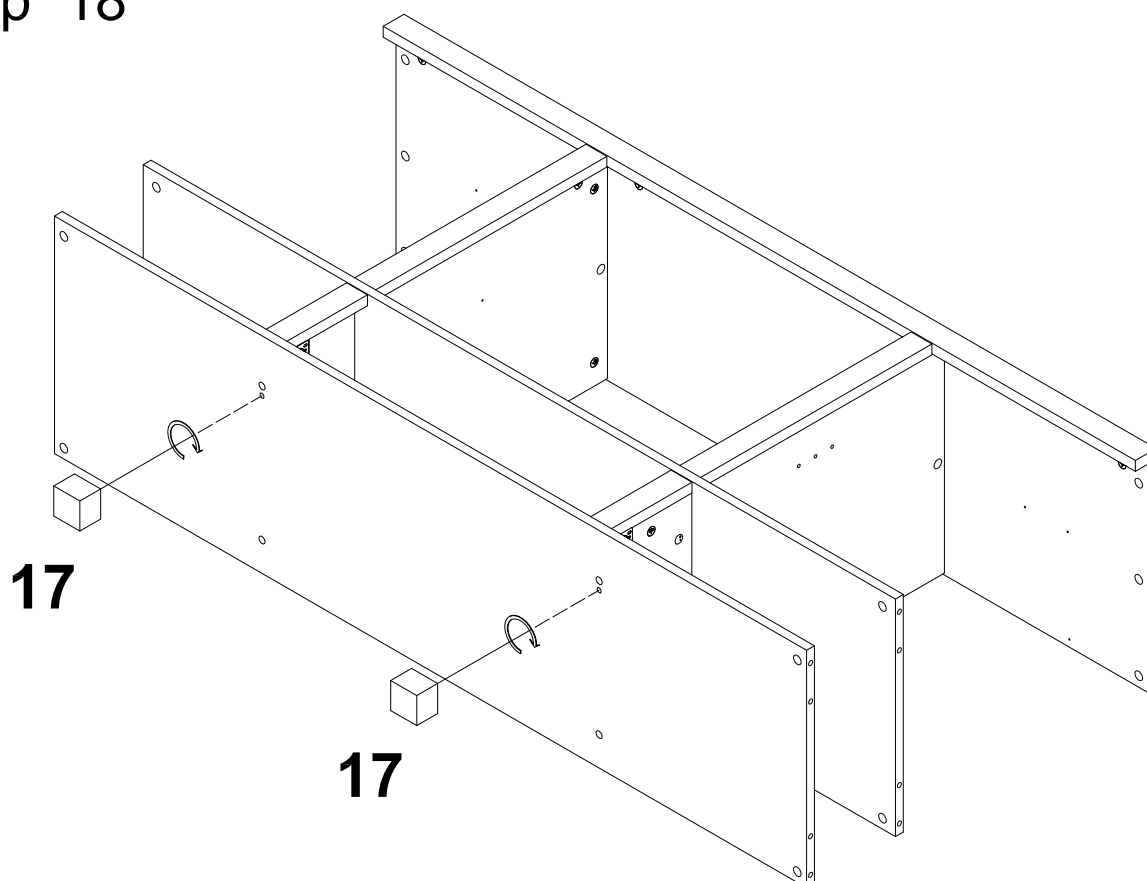

  Step 19

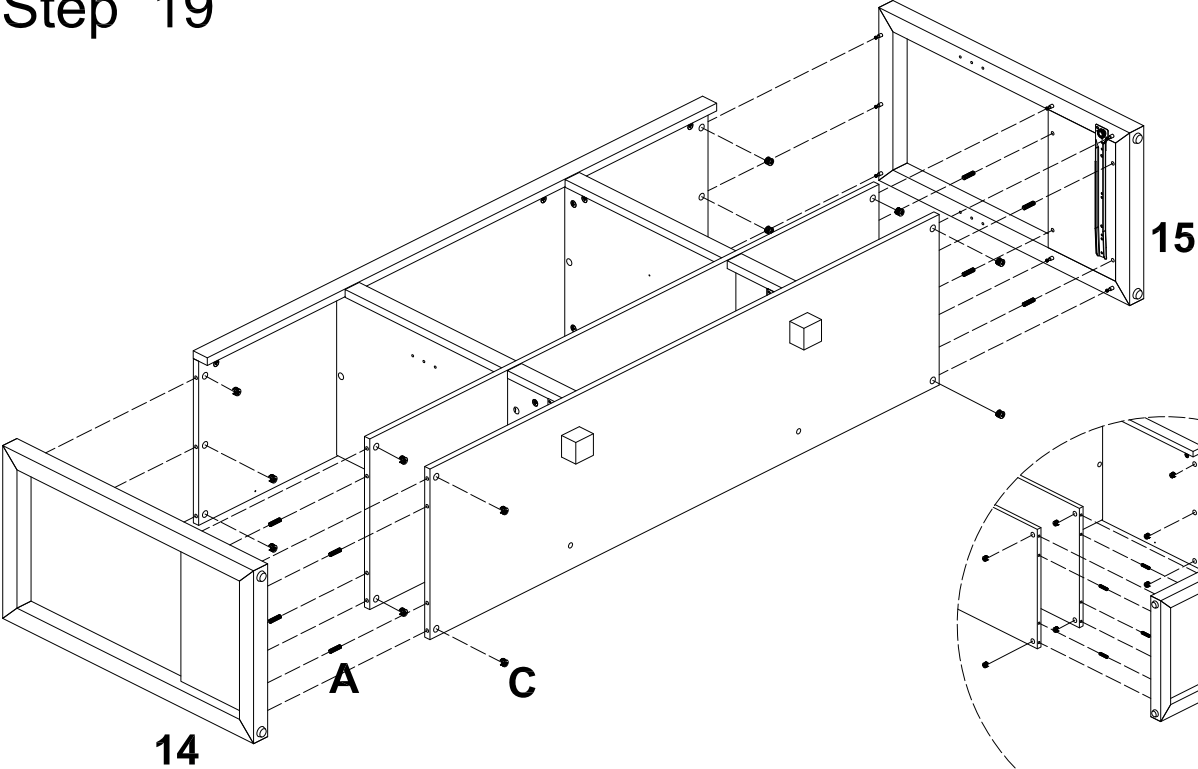


A x 8




C x 14

 Step 20

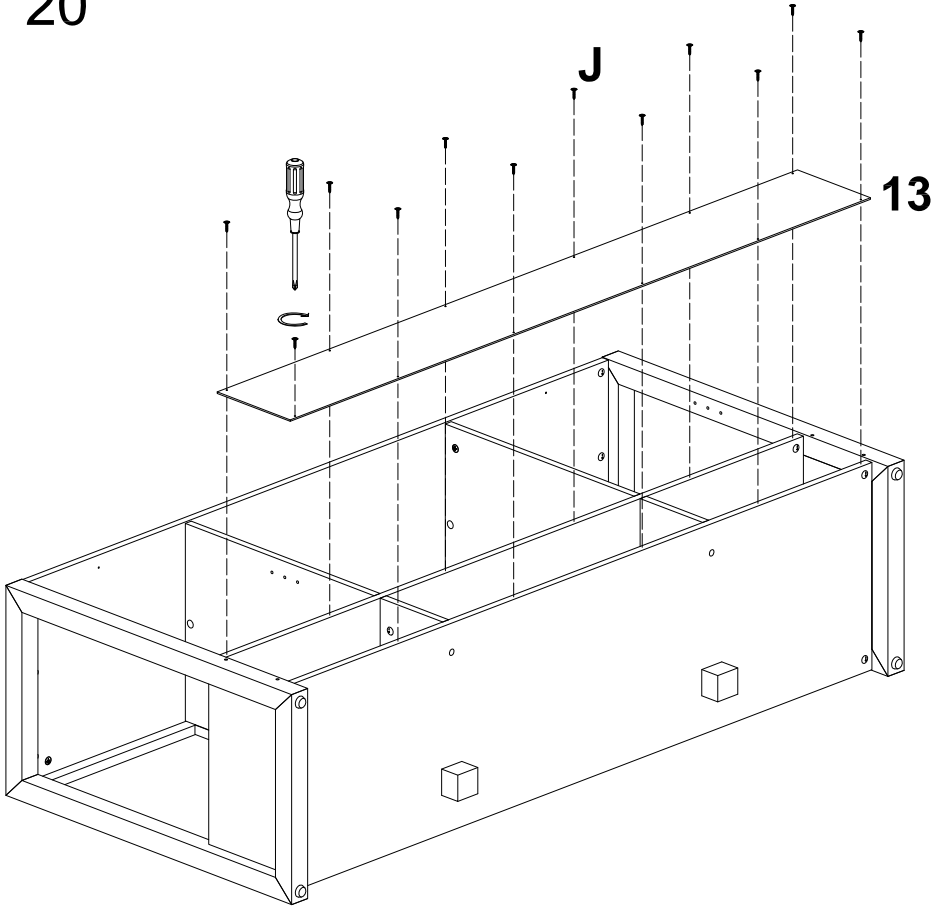


J x 12

 Step 21

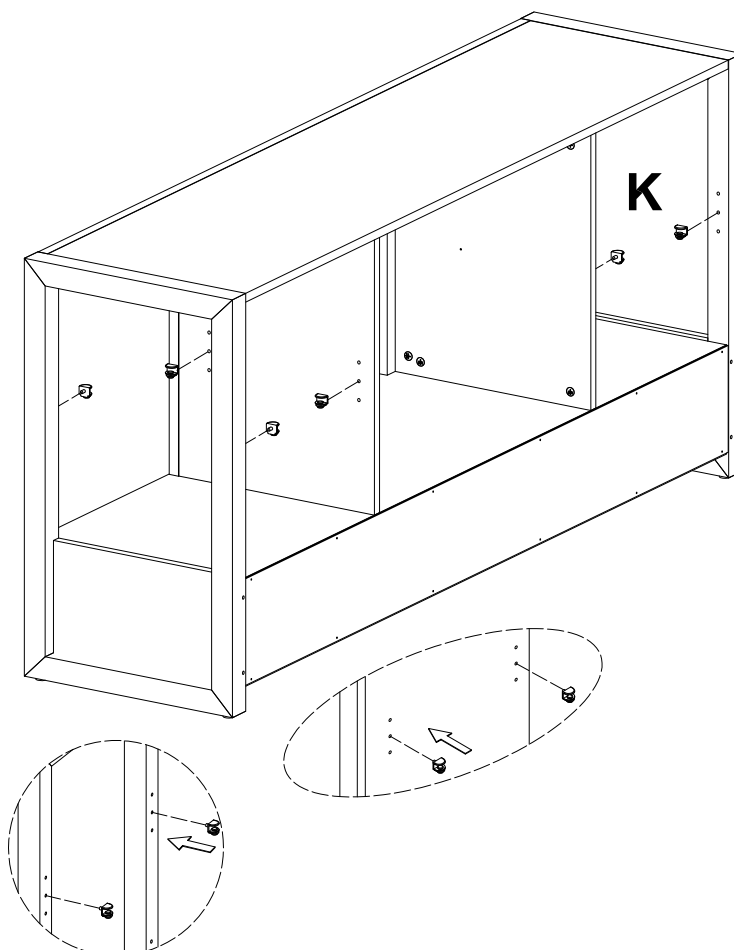

K x8

 Step 22

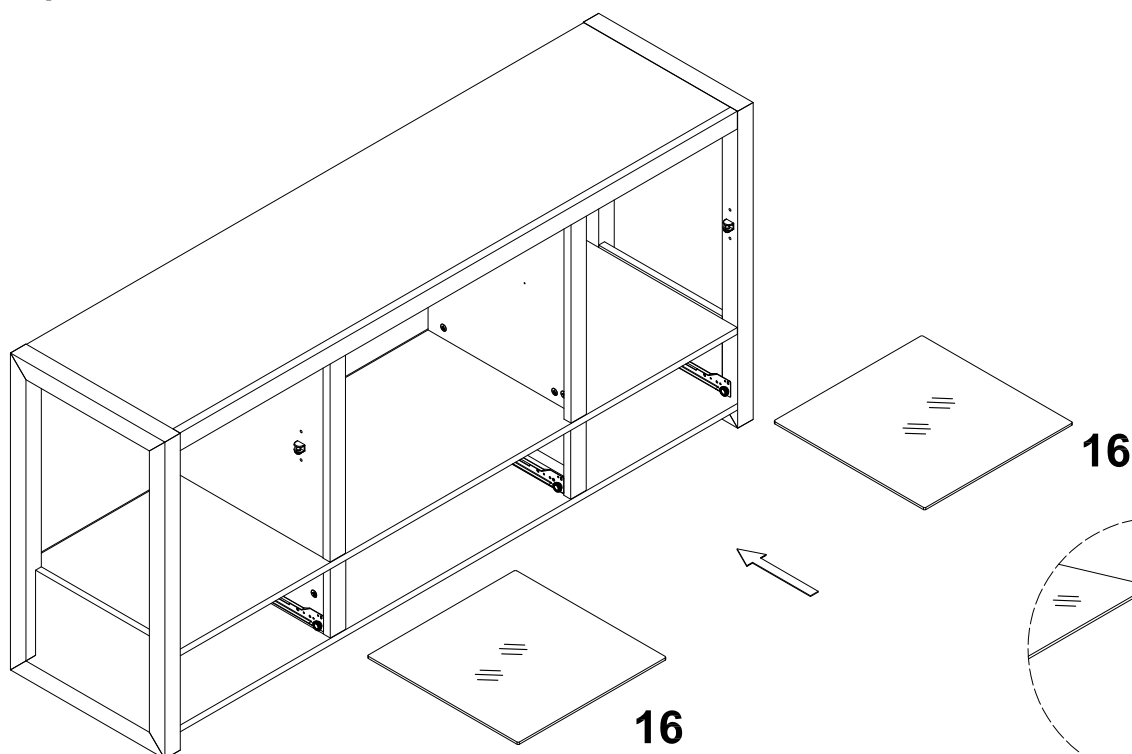


16


16

Tighten, do not move


 
Step 23

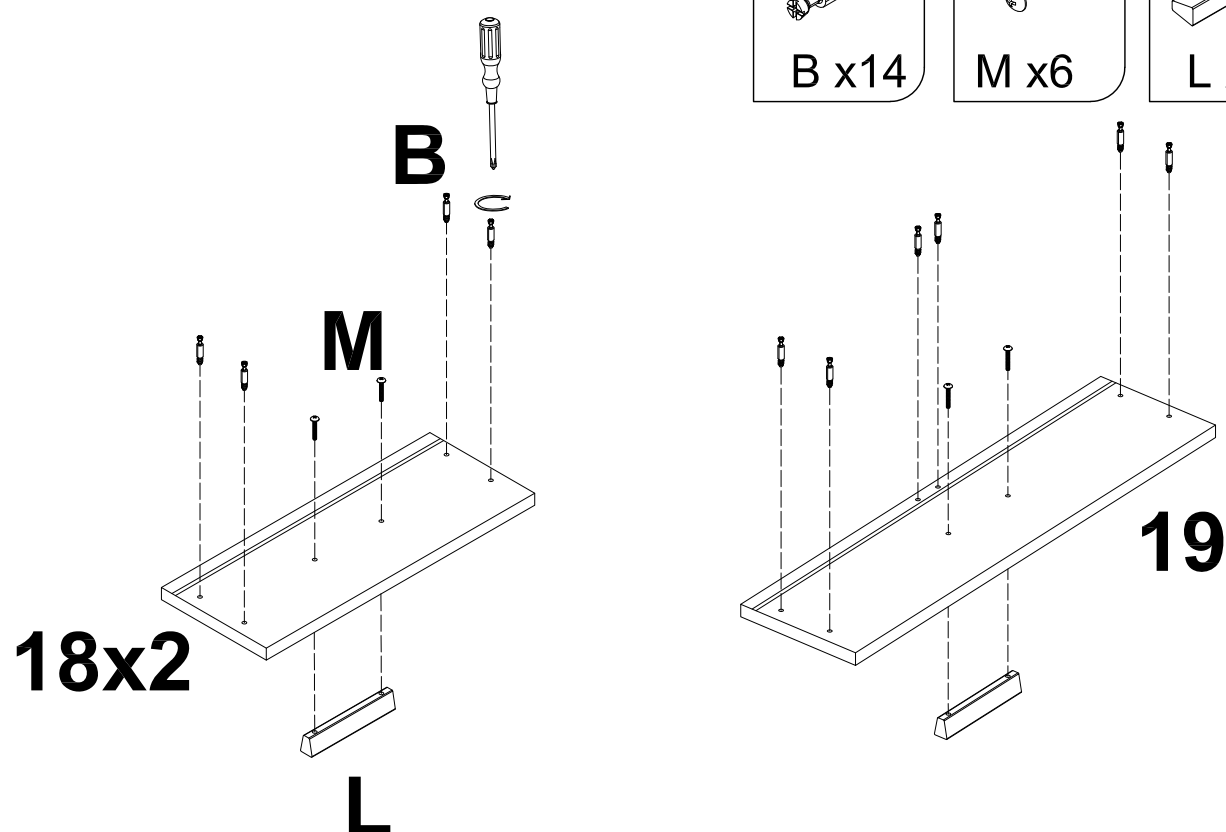


 
Step 24

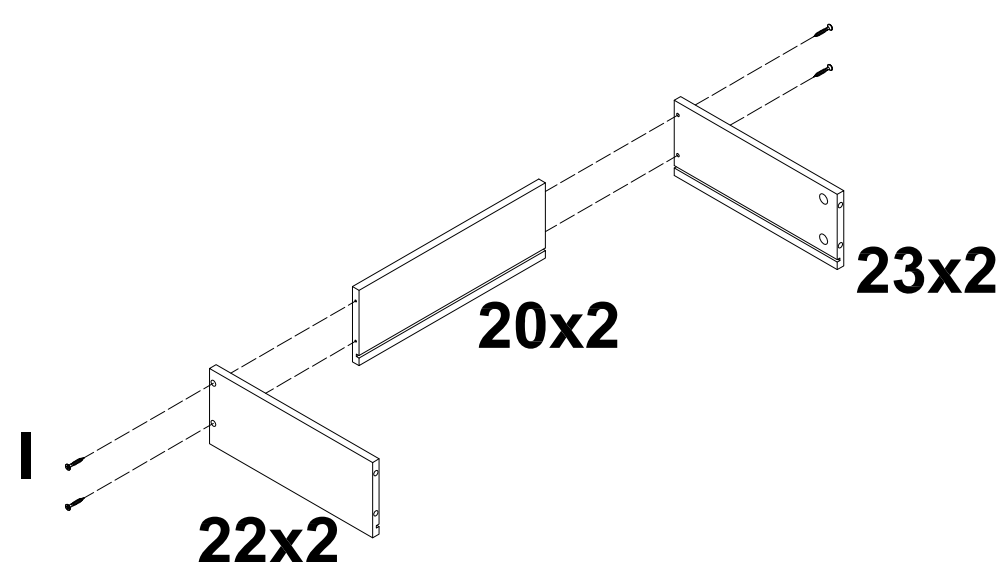

  Step 25

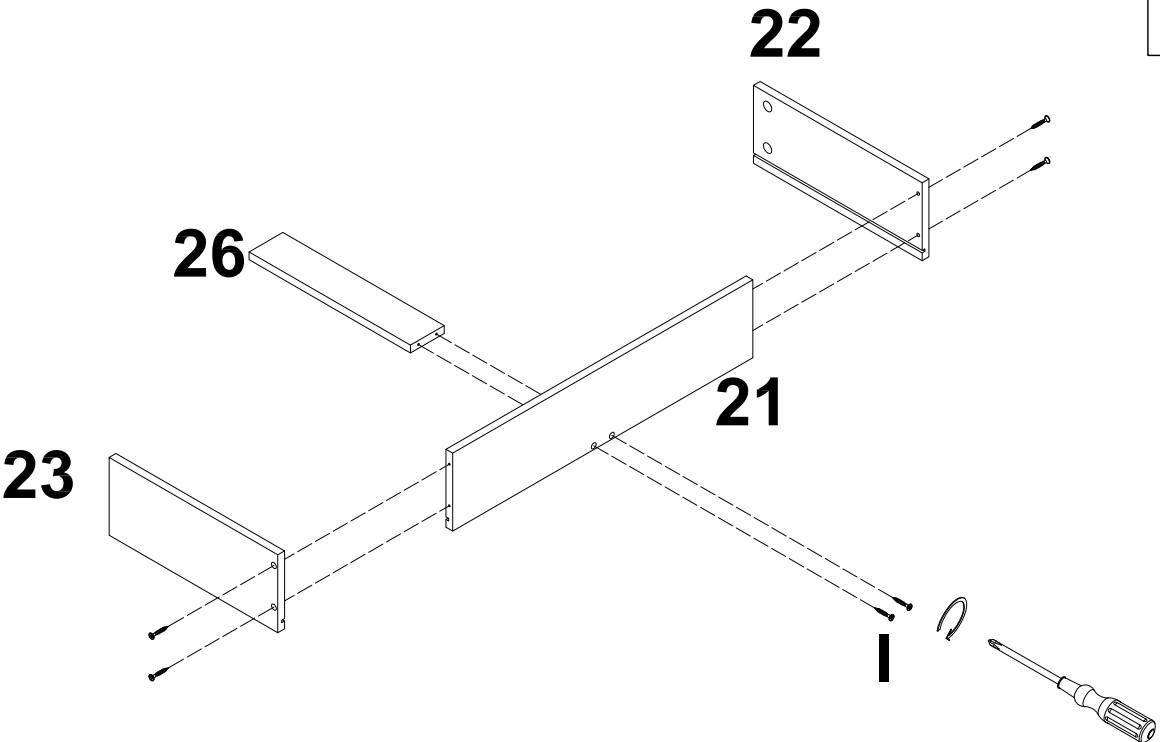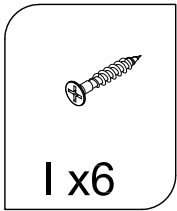

  Step 26

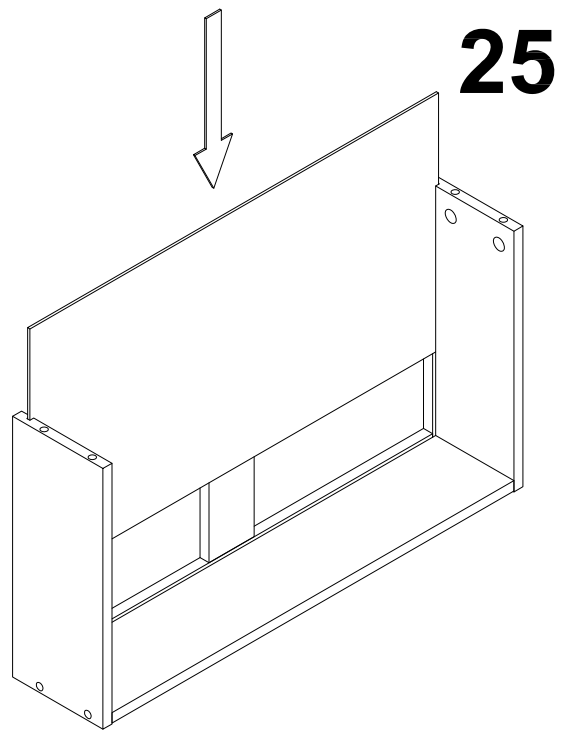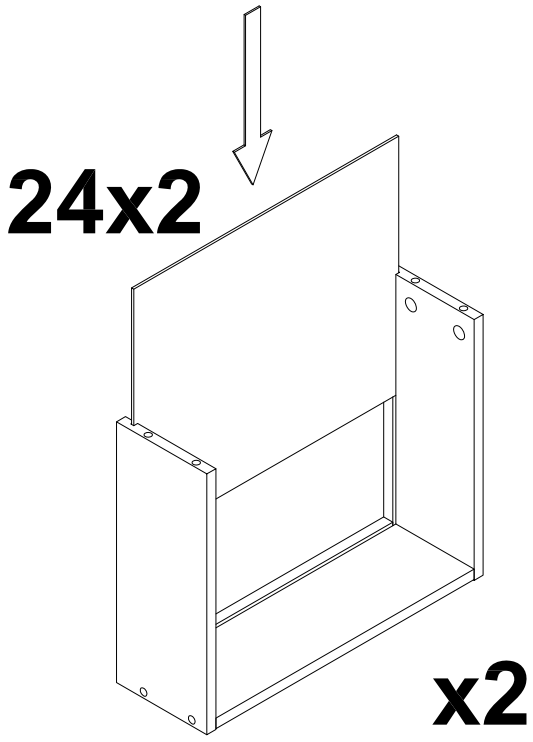


Step 27





D x14

 18x2

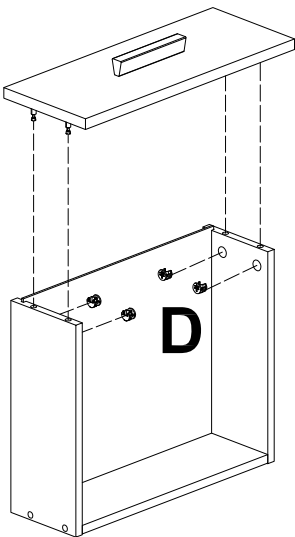


D

  19

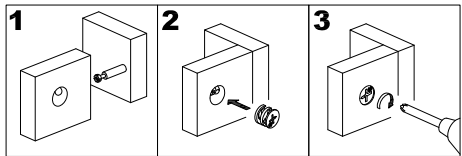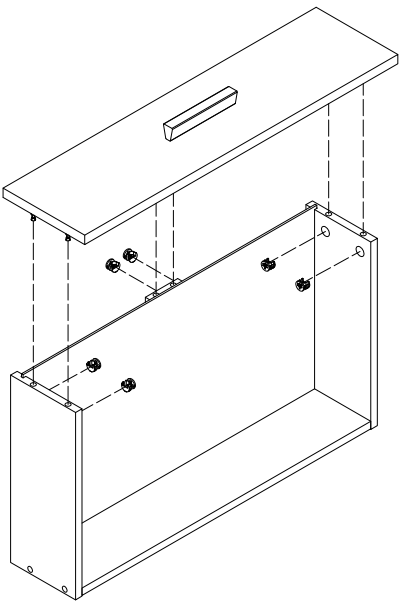

 
Step 28



O x 6



 
G x 18

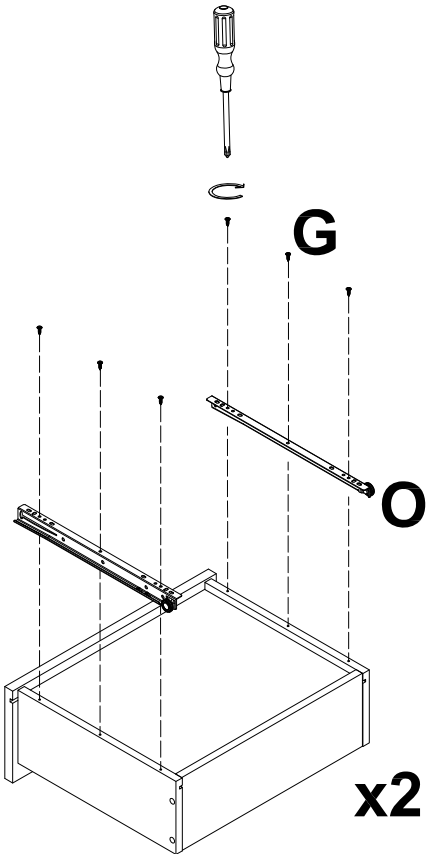


G

O


 
x2

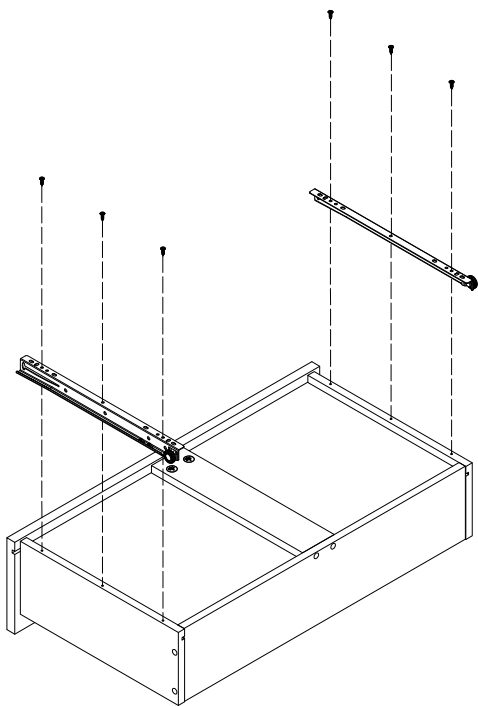

 Step 29

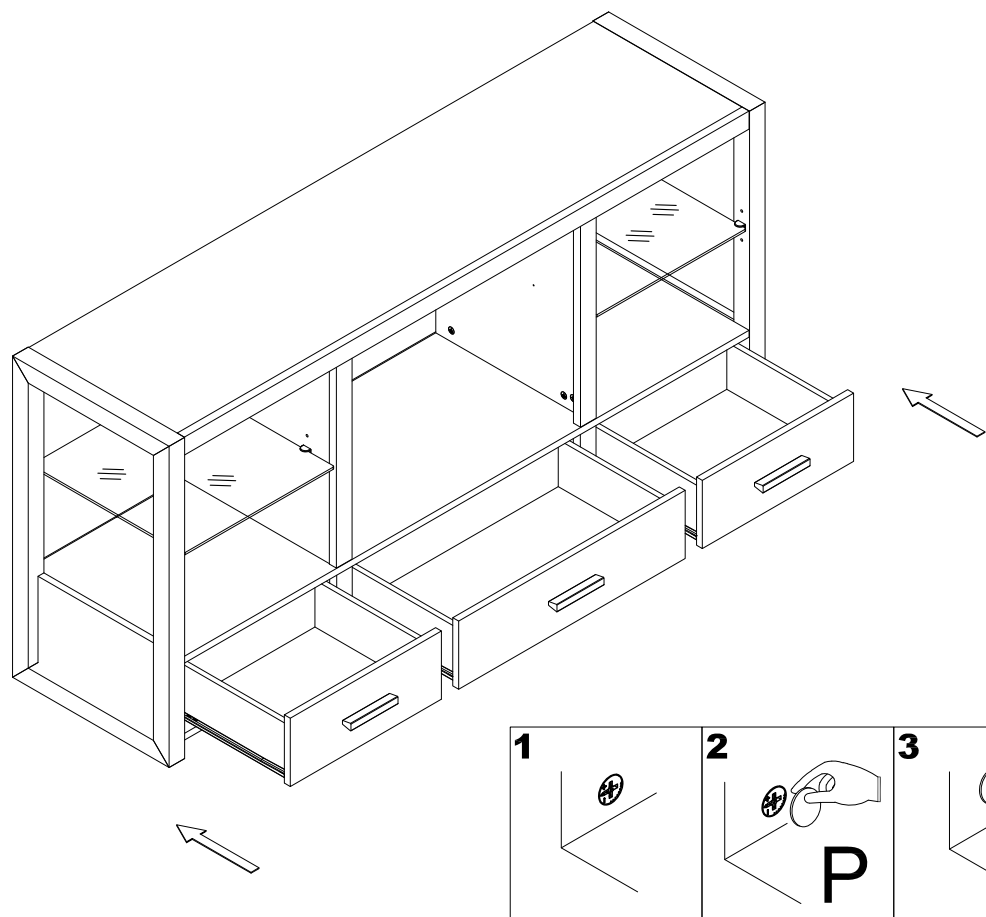


 
 
Step 30

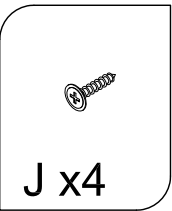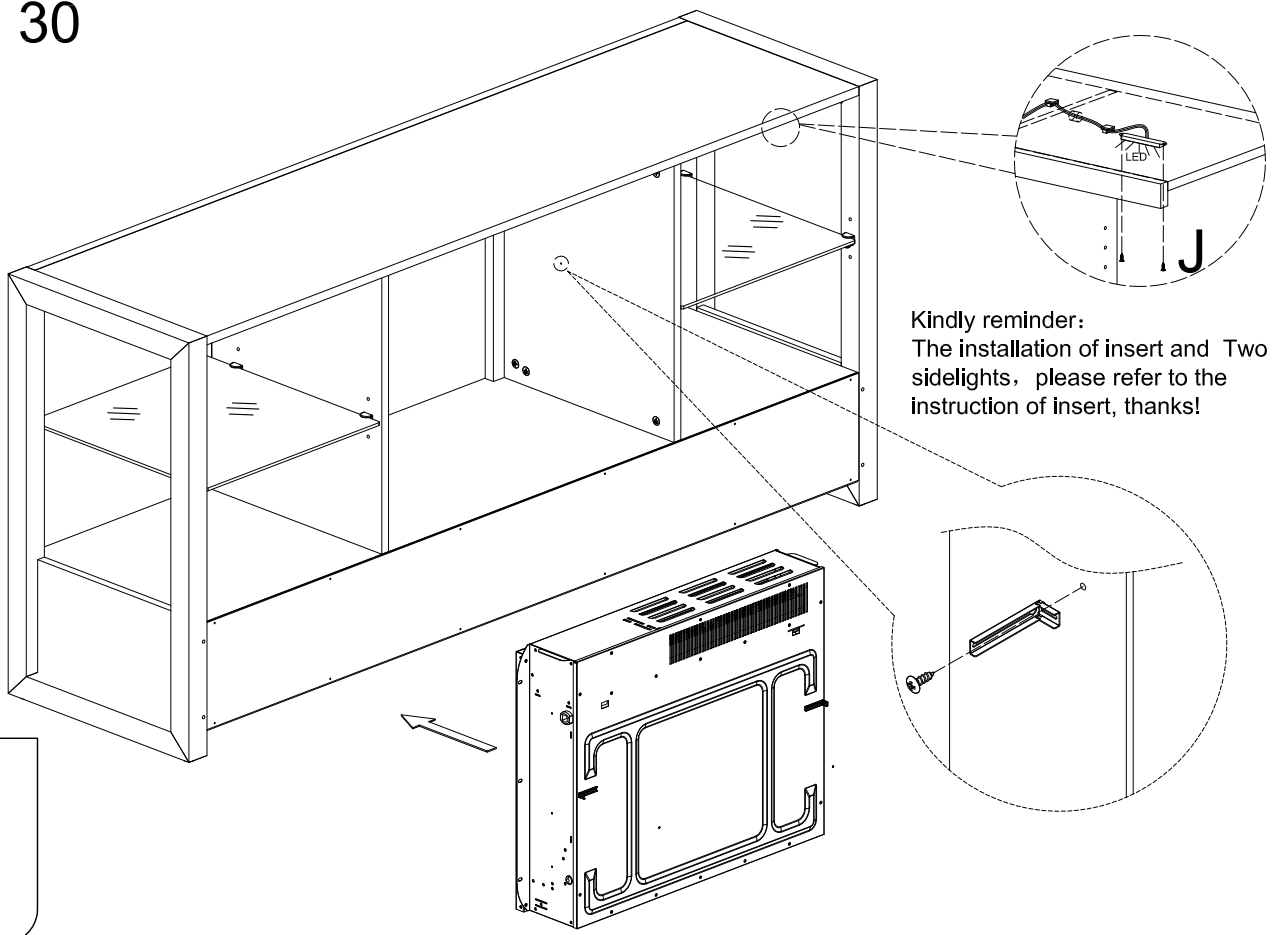

Step 31


WARNING

   Serious or fatal injuries can occur from furniture tipping over. To prevent the furniture from tipping over we recommend that it is permanently fixed to the wall. Wall anchor and hardware are included with this product. Please make sure hardware is suitable for your walls before installing, as different wall materials may require different types of anchors.

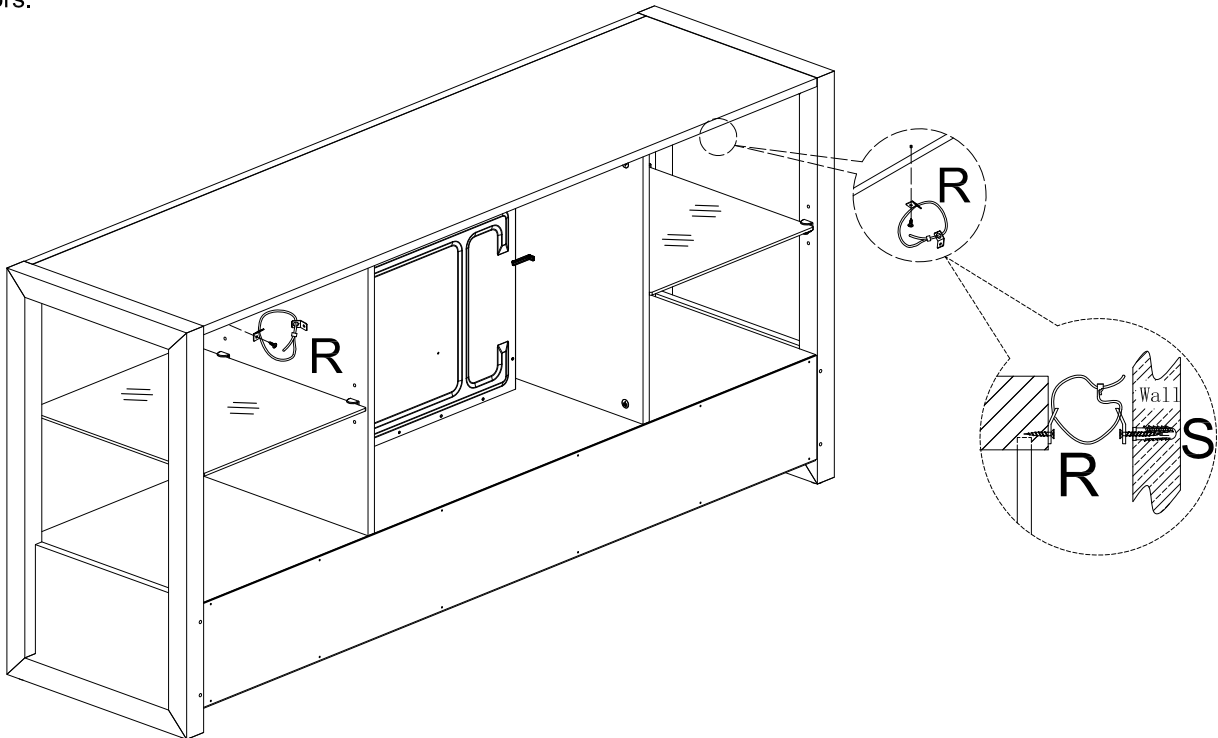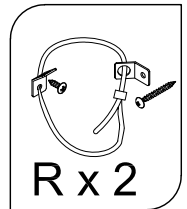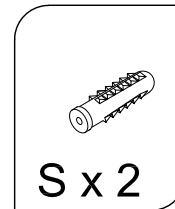

CAUTION: This unit is intended for use only with the products and maximum weights indicated. Use with other products or products heavier than the maximum weights indicated may result in instability causing possible injury.

 Note: Flat Panel TVs with base support should be placed squarely in the center of the stand with no overhang on any side.

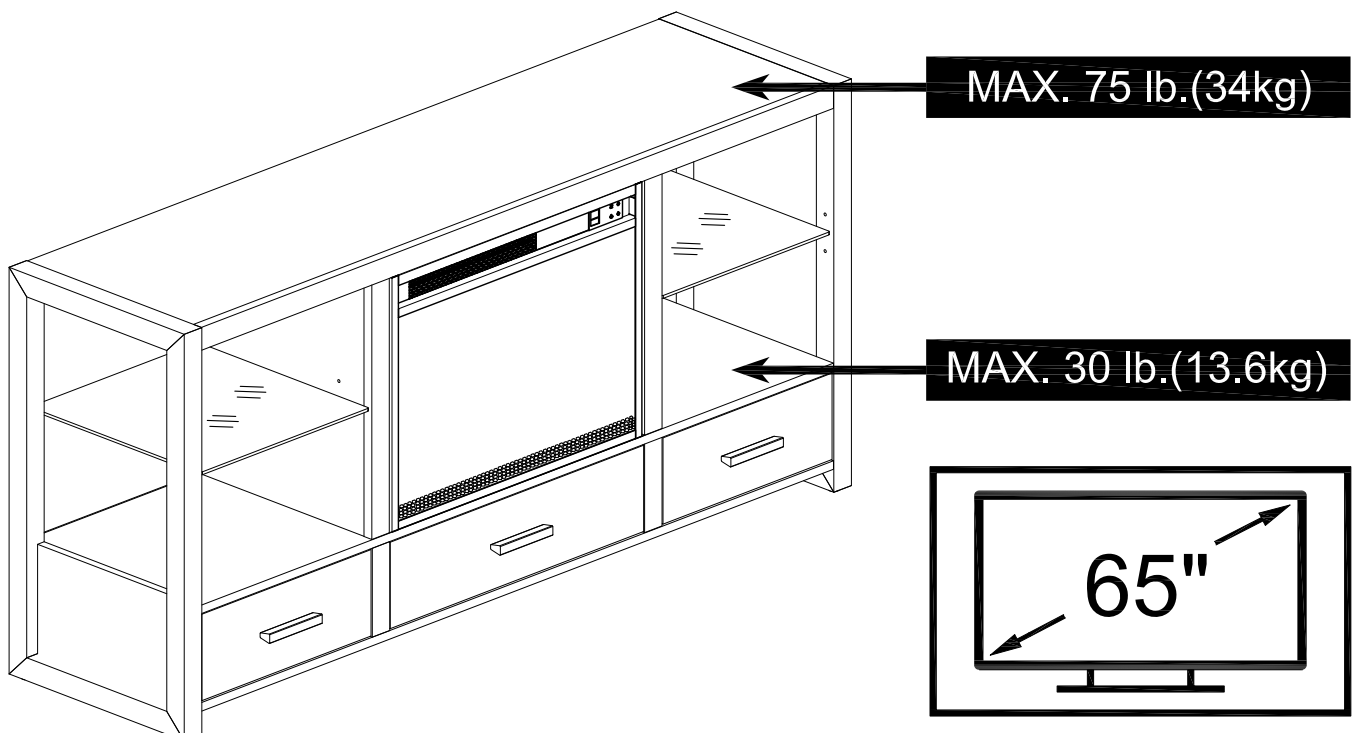

YOU'RE FINISHED!