

Use and Care - Electric Burner

Do not use a steam cleaner to clean this cooktop, as steam could penetrate electrical components and cause a short circuit.

Before cleaning, switch off the cooktop and allow the surface to cool completely.
Disconnect the power plug from the power outlet.

Over time, the air inlet/air outlet opening may accumulate dust and debris and should be cleaned with a soft dry cloth or brush, compressed air or small vacuum cleaner.

To clean, wipe the cooktop surface with a soft moist cloth with mild detergent.
Wipe away any remaining detergent and dry thoroughly.

A glass cooktop cleaner, available in the cleaning sections of most grocery, discount or hardware stores, may be used for stubborn spills. When not in use, unplug the cooktop.

NOTE: Do not rinse under running water or immerse in water.