 


TOWEL AND BLANKET WARMER

User Manual

SKU: TW001-20WH-USZX

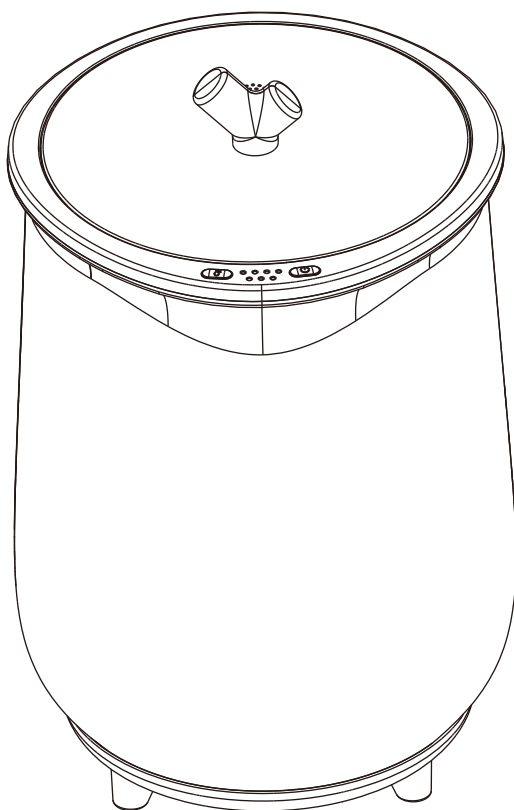

For Customer Service Support

Call 1-833-632-0897

Email support@homyd.com

Congratulations

Dear Customer:

Welcome to the our family. Thank you for purchasing one of our products.

Our goal is to provide you with superior service. If there is anything missing from or wrong with your order, or if you have any questions about using our product, PLEASE contact us.

Email: support@homyd.com

Our team is available 24/7 to address your questions, comments, and concerns. Your satisfaction is our ultimate goal. We want to make everything right so you'll share your positive experience with other shoppers.

If you experience any problems, please send an email to support@homyd.com

Our mission:

- * To be the most trusted appliance brand.
- * To create practical, compact appliances that better your life.

TABLE OF CONTENTS

Instruction	2
Instructions For Indicators	2
Setup And Operation	3
Instructions For Fragrance Disc	4
Tips For Best Results	4
Safety Instructions	5
Fcc Information	6
Care And Maintenance	6
Product Information	7
Warranty And Service	7

I INSTRUCTION

Thank you for purchasing our towel and blanket warmer.

With normal care and proper treatment, it will provide years of reliable service.

 
 
Please read all instructions before using this product.

Please retain this manual for future reference.

FEATURES

- The generous cavity has the capacity to hold two large bath towels or one personal throw blanket.
- Provide 20/40/60/90 minutes of heating time.
- Set low/medium/high heating temperature.
- A disc holder for inserting a fragrance disc to add a fresh, odor-neutralizing scent to your towels and blankets.

I INSTRUCTIONS FOR INDICATORS

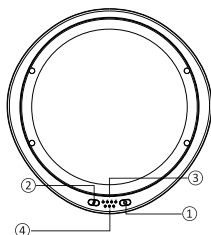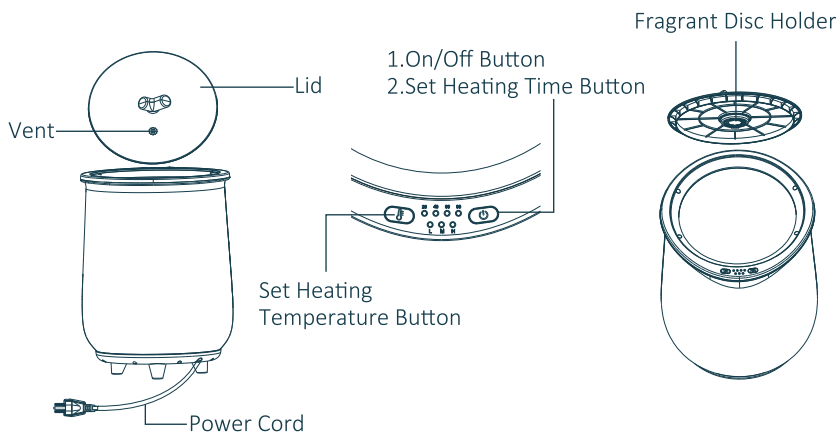

① Power switch button, long press to turn it on, and short press to select the heating time: 20/40/60/90 minutes.

② Set the heating temperature level: Low/Medium/High.

③ Display heating time.

Red color means the temperature of the interior surface is higher than 167°F, the INTERIOR SURFACE of the device is unsafe to touch; Blue color means the temperature of the interior surface is lower than 167°F.

④ Display heating temperature level.

I SETUP AND OPERATION

1. Open the lid and remove any packaging contents.
2. Place the Towel & Blanket Warmer on a hard, dry and level surface.
3. Insert the power cord into an electrical outlet.

NOTE: ① This Towel & Blanket Warmer has a 3- prong grounding plug. To reduce the risk of electric shock, plug the power cord into a grounded (earthed) electrical outlet.

② The rated voltage is 120V, don't plug it into outlets of 220-240V countries

4. Open the lid and place ONLY DRY towel (s) or a blanket inside.

NOTE: ① Use cotton or cotton blend towels or fabrics only.

② Placing damp or wet towels inside the product will damage it and might cause danger.

5. Close the lid.
6. Long press ON/OFF button to turn it on, and short press ON/OFF button to select the heating time of 20/40/60/90 minutes. Press the temperature button, you can set the heating temperature of the towel warmer: Low/Medium/High.

The default heating time is 20 minutes, high-temperature heating.

7. 1- minute rapid heating, 6 minutes to reach a high temperature.

8. Open the lid to take out the towel(s) or blanket.

*Note: To avoid damage to the product, gently open the lid when taking out items.

9. Press the ON/OFF button at any time to stop or start the heating cycle.

10. The product will automatically turn off after 20/40/60/90 minutes. The timers can be freely switched. Each time you press the timer button, the working time resets and counts down from 20/40/60/90 minutes.

11. After the heating cycle is complete, the INTERIOR SURFACE of the Towel & Blanket Warmer will remain too hot to touch until turned off for 30 minutes.



 
- Before plug please check and make sure the power cord is undamaged.
- Do not use the wet hand to plug in the adapter.
- Please don't stand or seat on the product.
- When moving the product, please don't pull the power cord or drag the product directly to avoid any damaged caused.
- Please don't let children and pets play with the products to prevent any accidents.
- Do not use the wet hand to pull out the power cord in order to avoid any electric shock.
- Do not use this product in damp environment to avoid electric shock.

I INSTRUCTIONS FOR FRAGRANCE DISC

This fragrance disc is designed for users who enjoy using aromatherapy tablets or essential oils, specifically when warming towels.

Note: Aromatherapy tablets, fragrance disc or essential oils are not included with this product.

1. Remove the fragrance disc from its sealed plastic bag.
2. Slide it into the fragrance disc holder located on the underside of the lid.

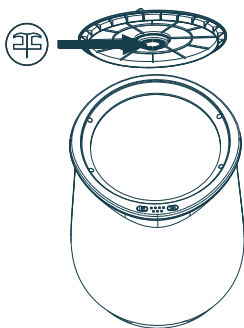

The fragrance disc is an innovative air fresher for your home, which also effectively eliminates odors.

I TIPS FOR BEST RESULTS

1. Use cotton or cotton blend towels or fabrics only.
2. For fast and even heating, loosely pile one towel into the Towel & Blanket Warmer. Tightly rolled or folded towels will take longer to heat thoroughly. Two towels will take longer to heat than one.
3. Use only with DRY fabrics.
NOTE: Do NOT use with damp or wet articles.
4. Avoid using delicate fabrics that cannot withstand high heat. Any fabric indicating that a cool iron must be used may not be able to withstand the heat of the Towel & Blanket Warmer, resulting in damage to the fabric and the product.
5. Once the heating cycle has begun, keep the lid closed. This will prevent heat from escaping. Opening the lid mid-cycle may result in slower heating times.
NOTE: Condensation on the lid and interior of the product is normal.
6. When used with the Towel & Blanket Warmer, the Fragrance Disc may warp over time.
7. The Fragrance Disc can last for up to two years at room temperature. The longevity of the scent will decrease when exposed to heat from the Towel & Blanket Warmer. Replace the disc when you can't longer smell the scent.

I SAFETY INSTRUCTIONS

Please read the following instructions carefully before putting your device into use. Please retain these instructions for further reference!



WARNING

To reduce risk of fire, electric shock or serious injury to persons when using the appliance, adhere to the following basic precautions:

FOR HOUSEHOLD USE ONLY.

- Always unplug the product from the electrical outlet immediately after use. Do not use the device for anything other than its intended use.
- Do not place or store the device where it can fall or be pulled into a tub or sink.
- Do not place or drop into water or other liquid. **DO NOT IMMERSE IN WATER.**
- Do not reach for the product after it has fallen into water. Unplug it immediately.
- Care should be taken so that objects do not fall into and/or liquids are not spilled onto the device.
- The device should never be left unattended when plugged in.
- Close supervision is necessary when this device is used near children or disabled persons.
- Only use the device for its intended use as described in this manual.
- Never operate the device if it has a damaged cord or plug, if it is not working properly or if it has been dropped, damaged or immersed in water.
- Keep the cord away from heated surfaces. Do not wrap the cord around the exterior of the device or let the cord hang over a table or counter edge.
- Do not use outdoors.
- Do not alter the safety plug or use an extension cord with this device.
- Do not operate with a voltage converter.
- Do not touch hot surfaces and vent.
- Do not use accessory attachments not recommended by the manufacturer, as this may cause injuries.

I FCC INFORMATION

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment!

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1) This product may cause harmful interference.
- 2) This product must accept any interference received, including interference that may cause undesired operation.

WARNING: Changes or modifications to this product not expressly approved by the party responsible for compliance could void the user's authority to operate the product.

Note: This product has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This product generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this product does cause harmful interference to radio or television reception, which can be determined by turning the product off and on, the user is encouraged to try to correct the interference by one or more of the following measures.

- Reorient or relocate the receiving antenna.
- Increase the distance between the product and receiver.
- Connect the product to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for assistance.

I CARE AND MAINTENANCE

- Before cleaning, make sure the power supply is turned off and the plug has been pulled out from the socket.
- Use a soft dry cloth to wipe the product when the device is damp to touch.
- Do not pull the power plug by wet hands.
- Do not use water washing the product, do not spray the water or any liquid to the interior of the device.

Maintenance

- Make sure the power supply is turned off and the plug has been pulled out from the socket.
- Sweep off the dust. Keep the device clean and away from damp places.
- Store the device in a cool, dry place out of reach of children.
- Avoid contact with sharp edges or pointed objects which might cut or puncture the cover of the device.

I PRODUCT INFORMATION

PRODUCT INFORMATION

Product name: Towel Warmer
Product sku: TW001-20WH-USZX
Product model: TW001-2
Capacity: 20L
Rated voltage: 120V~ 60hz
Rated power: 450W

BOX CONTENTS

Electric Towel Dryer *1
User Manual * 1

I WARRANTY AND SERVICE

Thank you for purchasing this product. We will provide related services after confirming your purchase certificate.

Warranty details:

During the warranty period, if any non-human damage occurs, our company promises to provide free warranty.

1. After receiving your product, the technical team will conduct further quality verification.
2. If it is determined that the damage is not caused by man-made damage, it is a quality problem with the product itself. Our company will repair it in time. If it cannot be repaired,

We will replace the same product for you. If the same product is no longer sold, the market price of the replacement product will not be lower than the market price of the previous product.

3. Warranty period 1 year.

The following situations are not covered by the warranty:

1. Damage caused by incorrect use of the product or self-disassembly and repair;
2. Intentional damage to the product;
3. Damage caused by force majeure.

You can also arrange for service after the warranty has expired at an additional cost.

These are our general terms for warranty service.

However, regardless of the warranty terms, we always urge our customers to contact us with any questions.

If you have any questions about our products, please contact us (support@homyd.com) and we will do our best to resolve them for you.

Call: 1-833-632-0897

Working hours: Mons to Fris, 8 AM - 4 PM (PT)

Email: support@homyd.com

SKU: TW001-20WH-USZX

