

CARE AND MAINTENANCE

Always use felt pads under all articles to prevent discoloration or softening of the lacquer. Plastic and rubber bases on items can discolor wood. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish. On highly used surfaces we recommend applying a quality paste wax which should be used on a regular basis to provide additional protection from scratches and spills. How often you apply the wax depends on how much wear the furniture receives.

NOTICE


- * Please make sure that you have all parts indicated before you begin assembly of this item
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly
- * This item may require periodic tightening




Model# CHS2200

Product Dimensions: 35.4"W×15.7"D×28.7"H

Part List and Hardware List

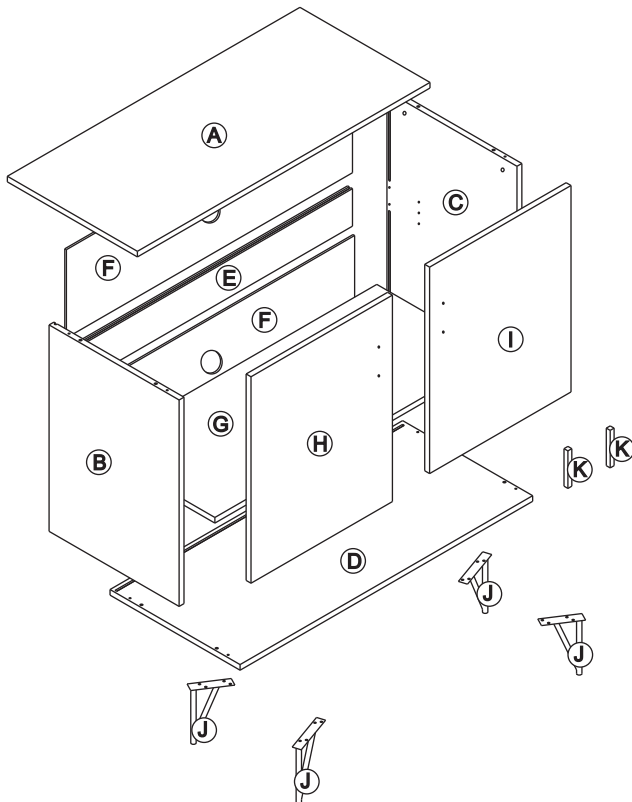

HW1x4 	HW2x8 
HW3x8 	HW4x8 
HW5x4 	HW6x16  6x12mm
HW7x4 	HW8x4  3.5x16mm
HW9x4 	HW10x4  4x25mm
HW11x24  4x14mm	HW12x1 

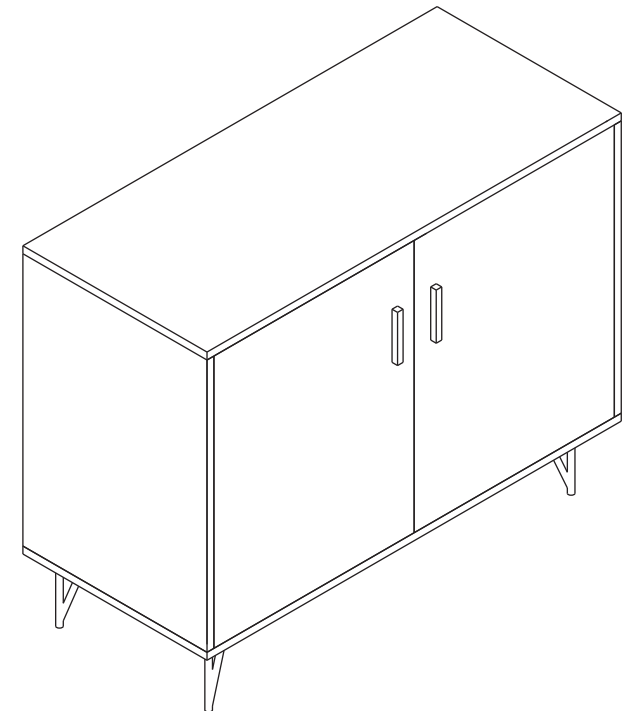


PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.


If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 60 minutes.


1

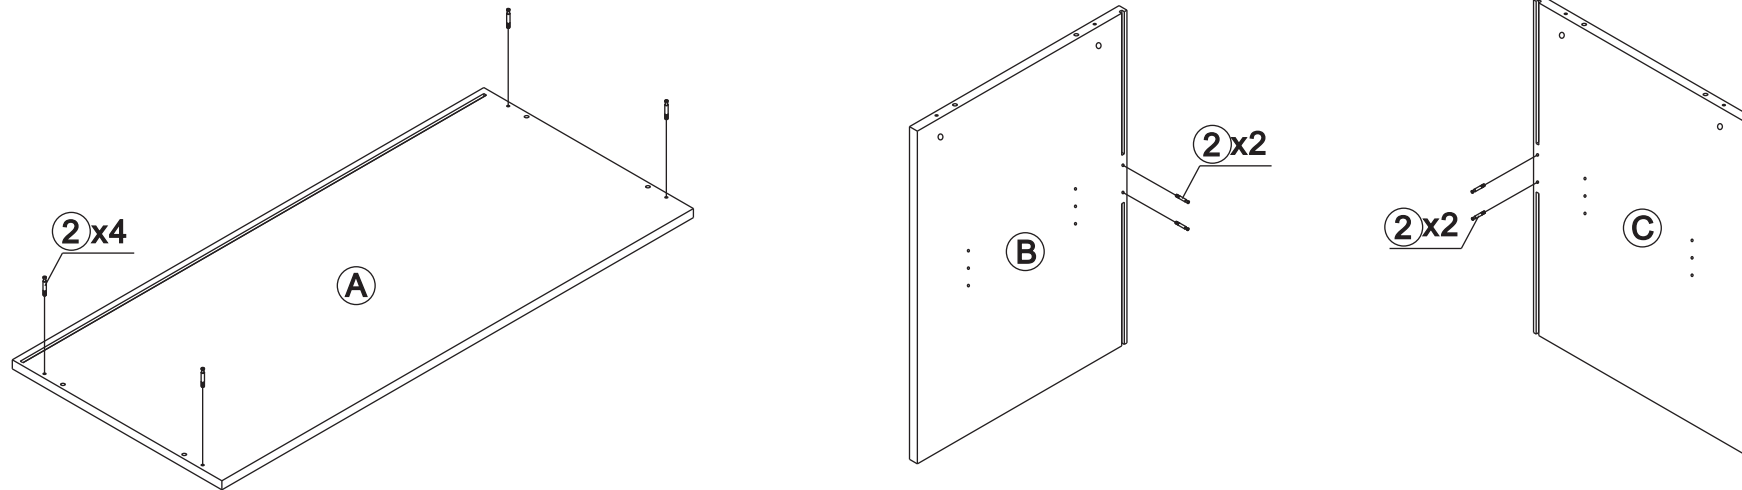


2

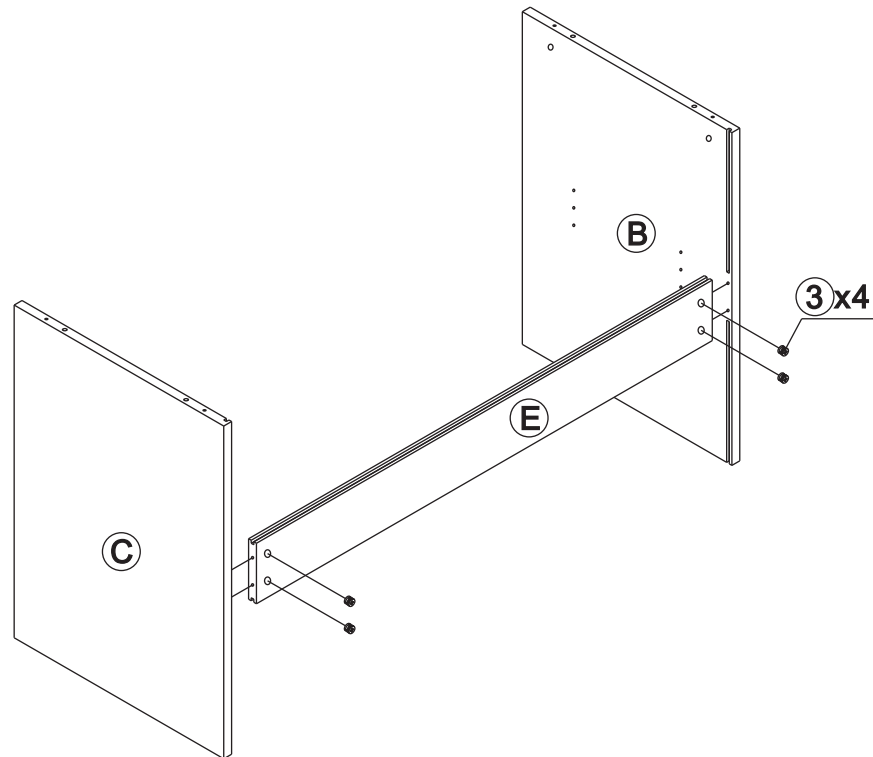


3

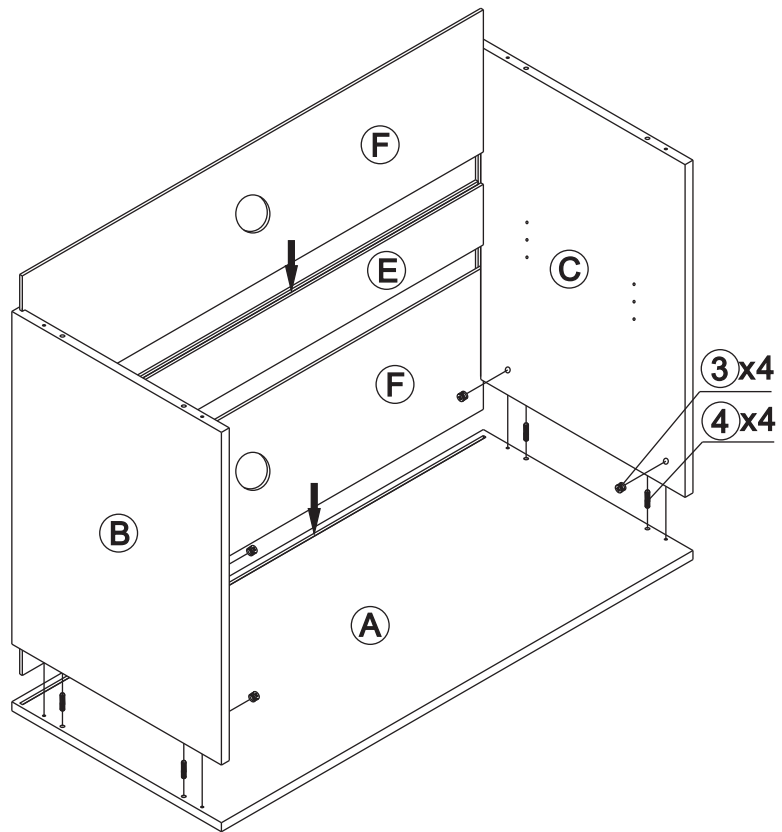


4

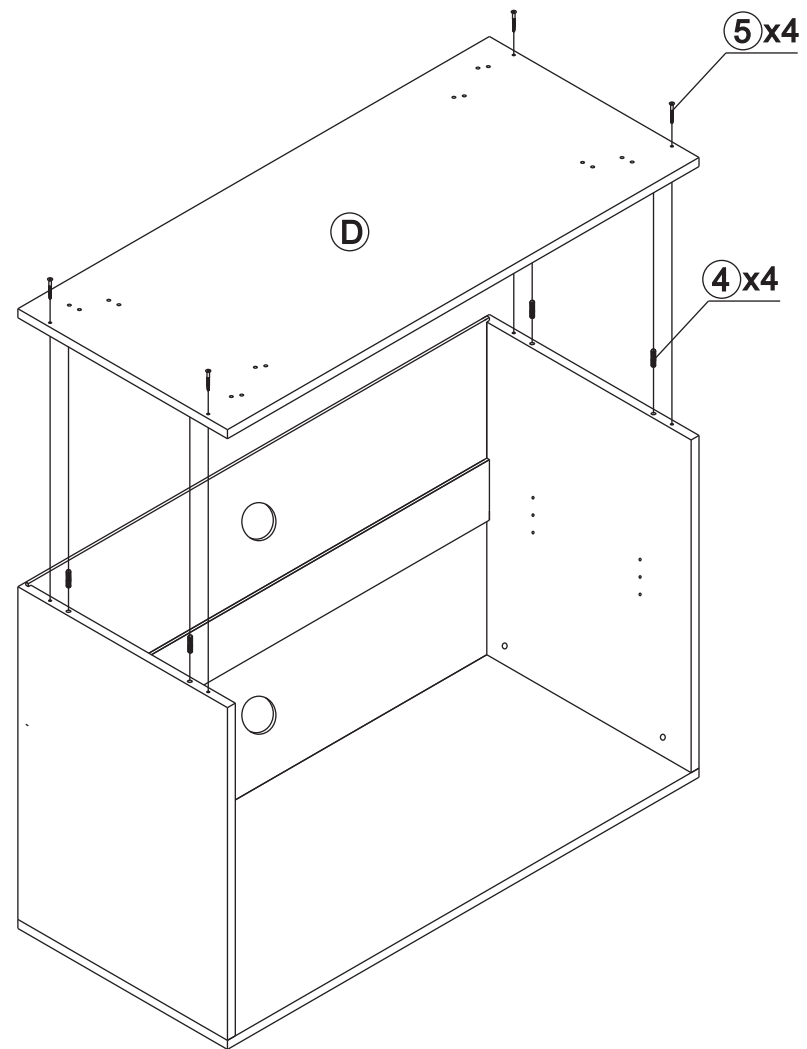


5

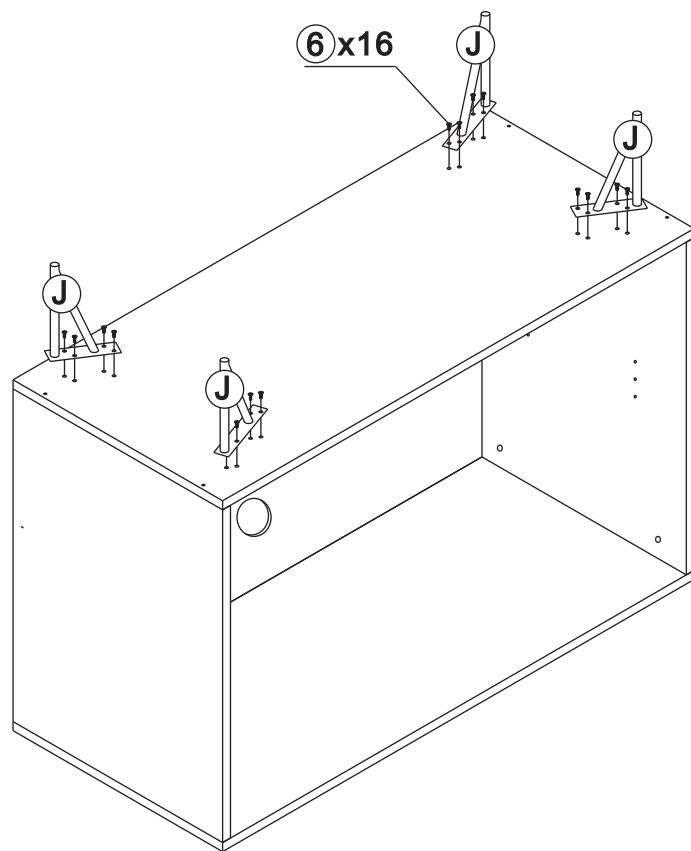


6

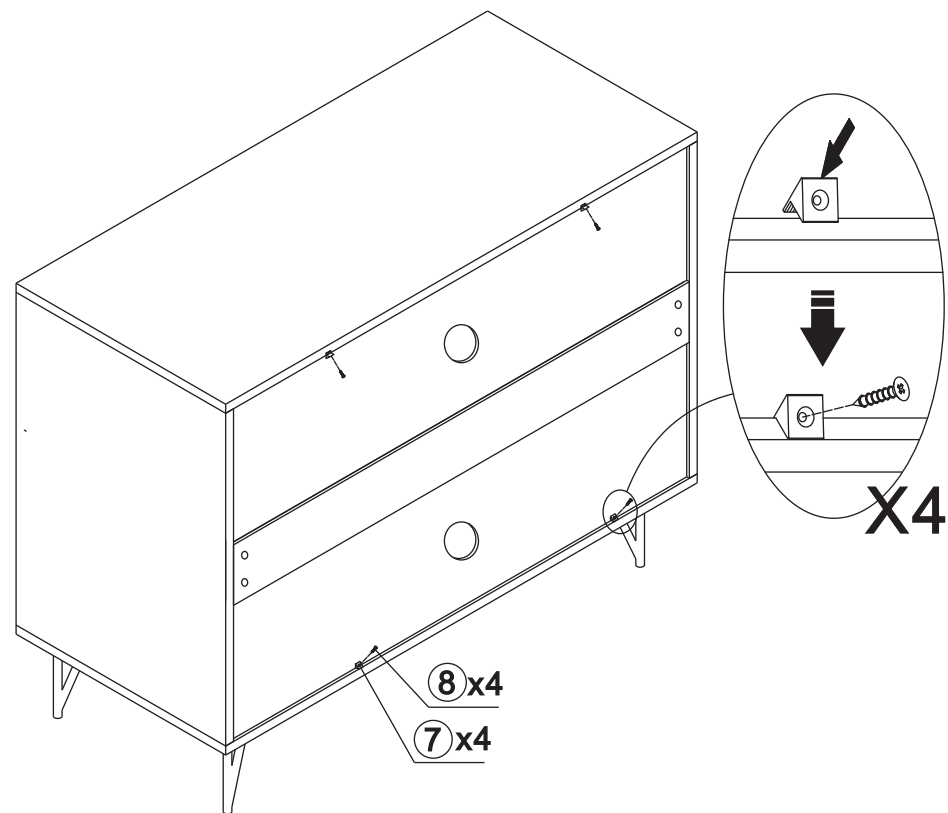


7

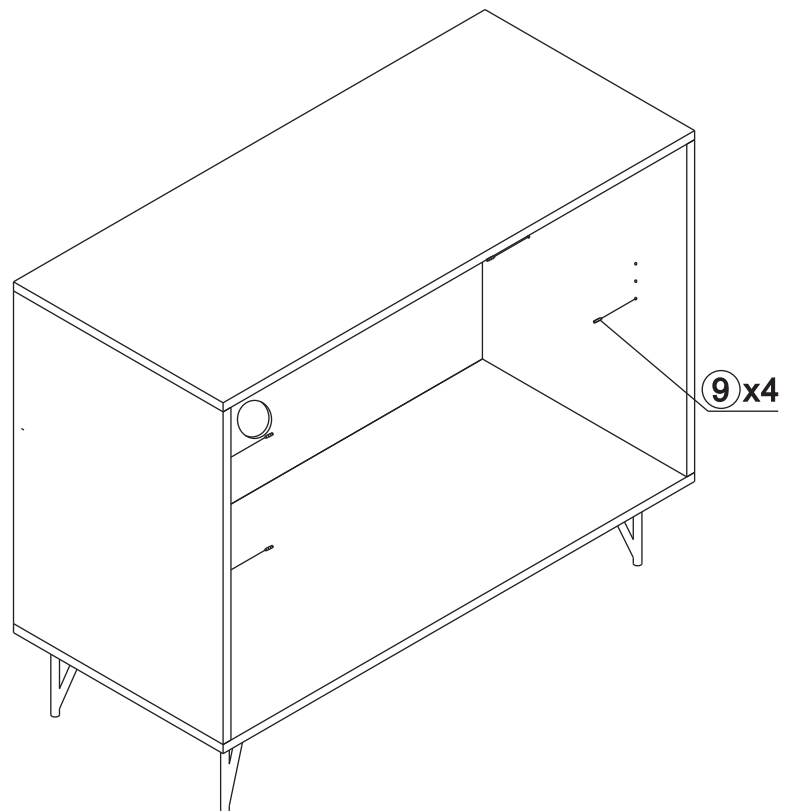

8

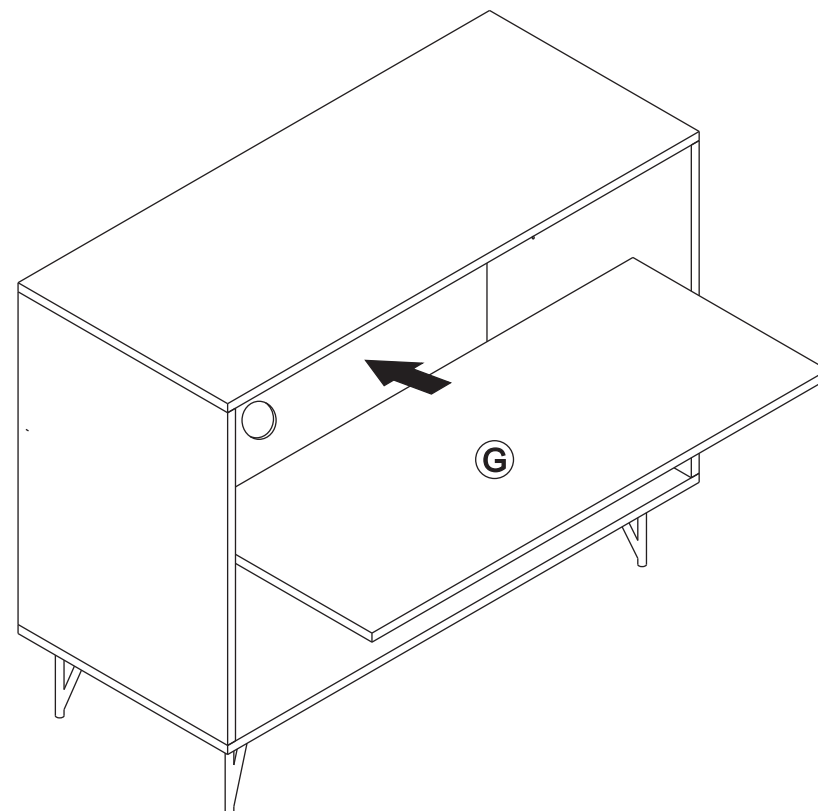

9

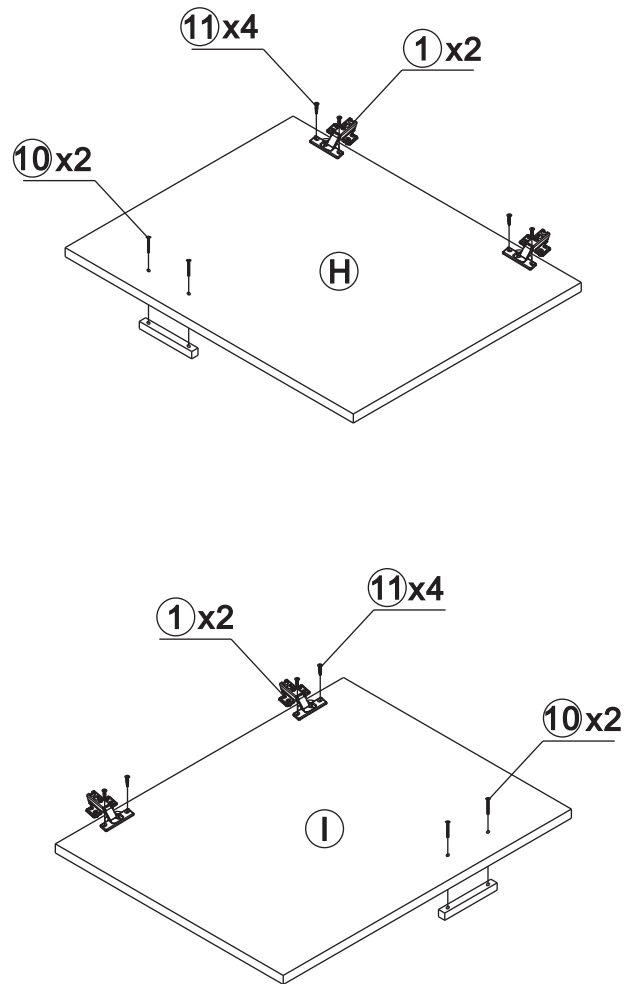

10

