


Thank you for choosing Sunnydaze Decor. We stand behind our brand and the quality of the items we sell. Replacement parts or products can be requested with the 1-year warranty period. Proof of purchase must be provided. This includes the date of the purchase as well as photos of the product defect. Photos are used to determine the cause of the defect and to provide future quality control. The request will be reviewed, and replacement pieces will be sent at our discretion. For warranty information, visit <https://tiny.cc/SunnydazeWarranty>

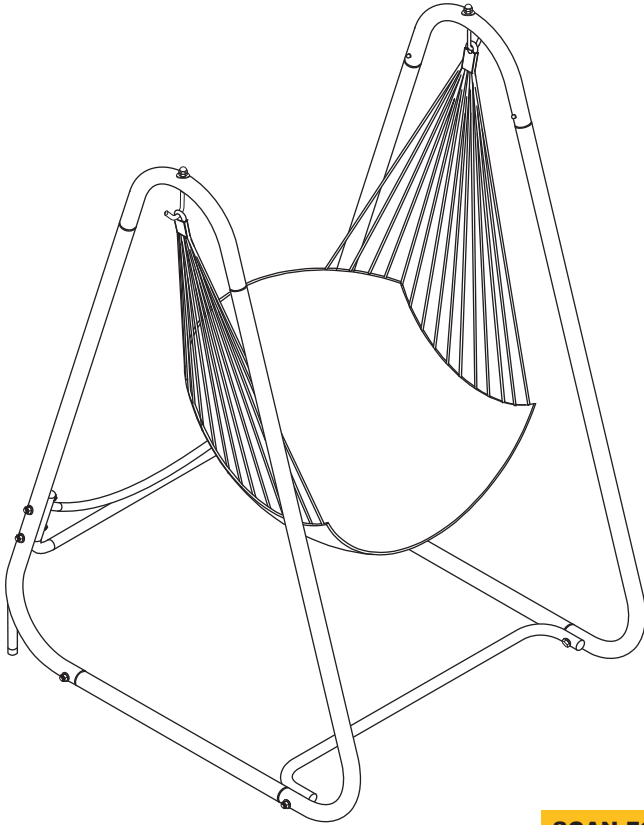




 
 












If you have any questions, comments or concerns, feel free to contact us by phone at 833-982-1977, by email: customerservice@sunnydazedecor.com, or via our contact us page at <https://tiny.cc/SunnydazeContact>

  HANGING HAMMOCK CHAIR WITH STEEL A-SHAPED STAND

Review all assembly and care information before using this product. Save this manual for future reference.
Assemble components on a soft, clean surface to avoid damaging the finish.



  Inspect packaging to ensure all parts are accounted for before disposing of packing materials.
 Save the packing slip.

No.	PARTS	QTY.
A	 Top Support	2
B	 Left Back Leg	1
C	 Left Front Leg	1
D	 Right Back Leg	1
E	 Right Front Leg	1
F	 Base Bar	2
G	 Back Brace	1
H	 Front Brace	1
I	 Hammock Chair	1
J	 J-Bolt	2
K	 M8x75mm Bolt	6
L	 M8x50mm Bolt	2
M	 Cap Nut	2
N	 Nut	2
O	 Lock Nut	8
P	 Curved Washer	2
Q	 Flat Washer	16
R	 13mm Spanner	1
S	 14mm Spanner	1

SCAN FOR HAMMOCK SAFETY TIPS



<https://tiny.cc/hammock-safety>

CAUTION

This hanging hammock chair with stand is not designed to be used like a swing. Bouncing, swinging, and any other significant movement may result in serious injury.

This product must be used on a level, stable surface. Make sure all hardware is fully tightened and the snap buttons are properly engaged before each use.

WARNING

CHOKING HAZARD — This item contains small parts that can be swallowed. Keep children and pets away during assembly.


WARNING:

Manufacturer and seller expressly disclaim any and all liability from personal injury, property damage or loss, whether direct or indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.

ASSEMBLY

STEP 1

- A: 2
- B: 1
- C: 1
- D: 1
- E: 1
- F: 2

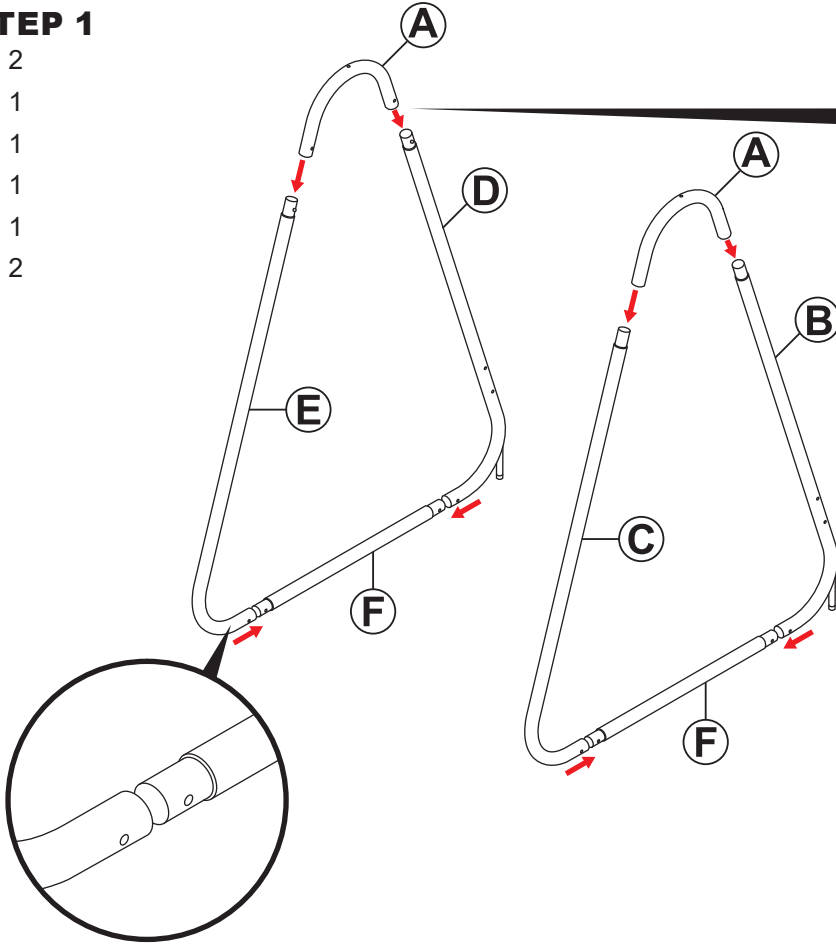


TIP: Lay components flat on the ground and ensure the spring buttons are facing upward.

Align Left Back Leg (B) and Left Front Leg (C) with one Base Bar (F). Align the spring buttons on the legs with Top Support (A). Press the button and slide the support onto the legs until the buttons snap through the holes.

Repeat this process with Right Back Leg (D) and Right Front Leg (E) and one Base Bar (F).

STEP 2

- H: 1
- K: 2
- L: 2
- O: 4
- Q: 8

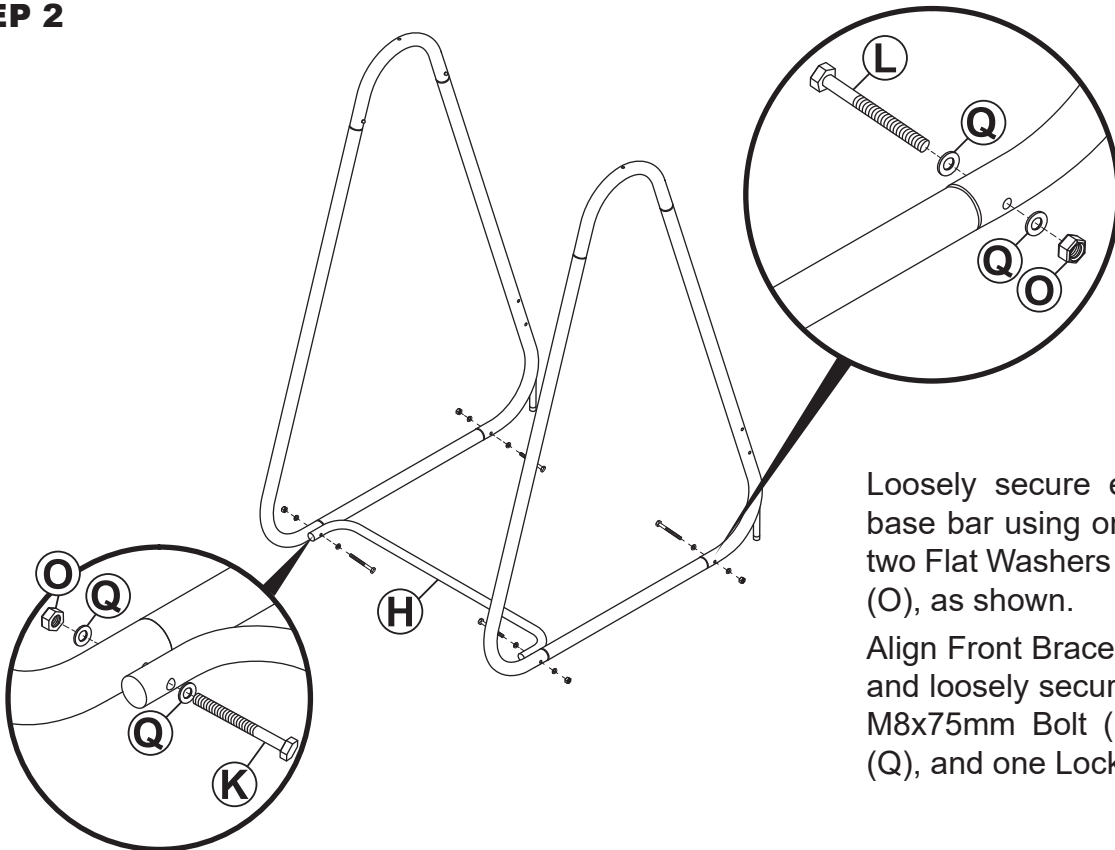


Loosely secure each back leg to the base bar using one M8x50mm Bolt (L), two Flat Washers (Q), and one Lock Nut (O), as shown.

Align Front Brace (H) with the front legs and loosely secure each side using one M8x75mm Bolt (K), two Flat Washers (Q), and one Lock Nut (O), as shown.

STEP 3

- G: 1
- J: 2
- K: 4
- M: 2
- N: 2
- O: 4
- P: 2
- Q: 8

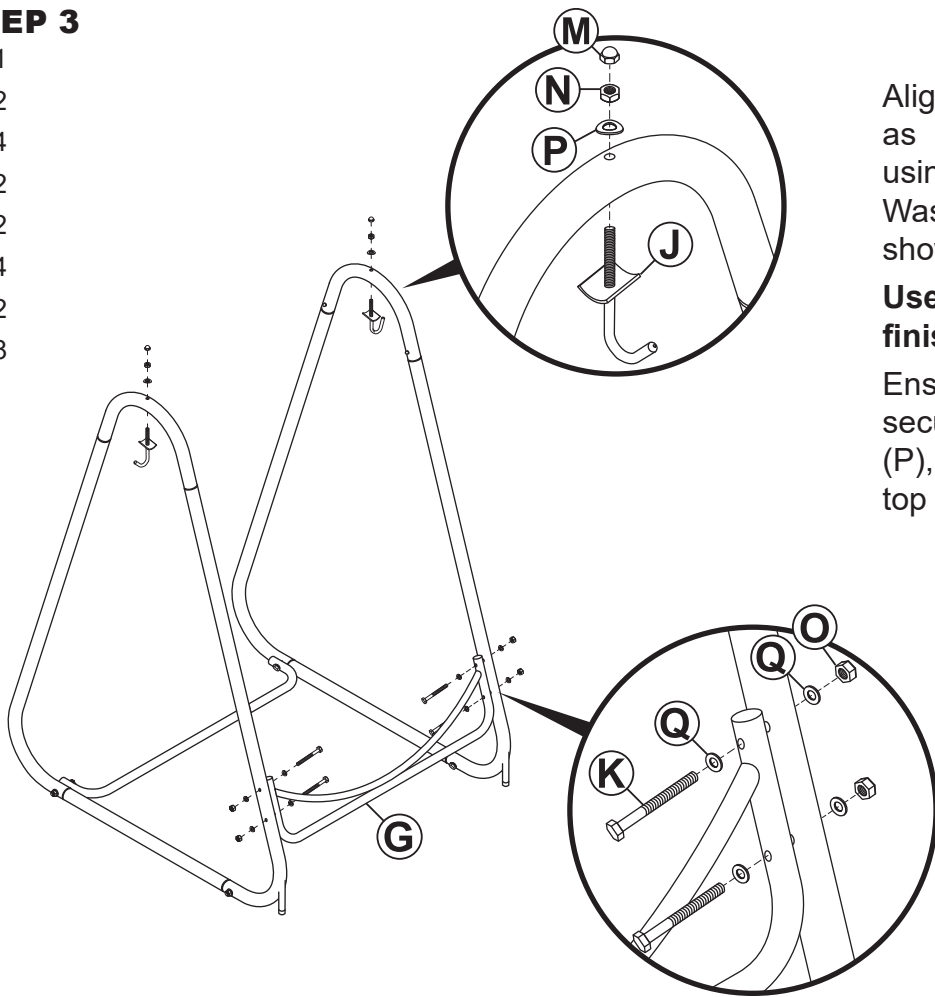


Align Back Brace (G) with the back legs, as shown. Loosely secure each side using two M8x75mm Bolts (K), four Flat Washers (Q), and two Lock Nuts (O), as shown.

Use the included Spanners (R,S) to finish fully tightening all hardware.

Ensuring the hook faces outward, firmly secure one J-Bolt (J), Curved Washer (P), Nut (N), and Cap Nut (M) to each top support.

STEP 4

- I: 1

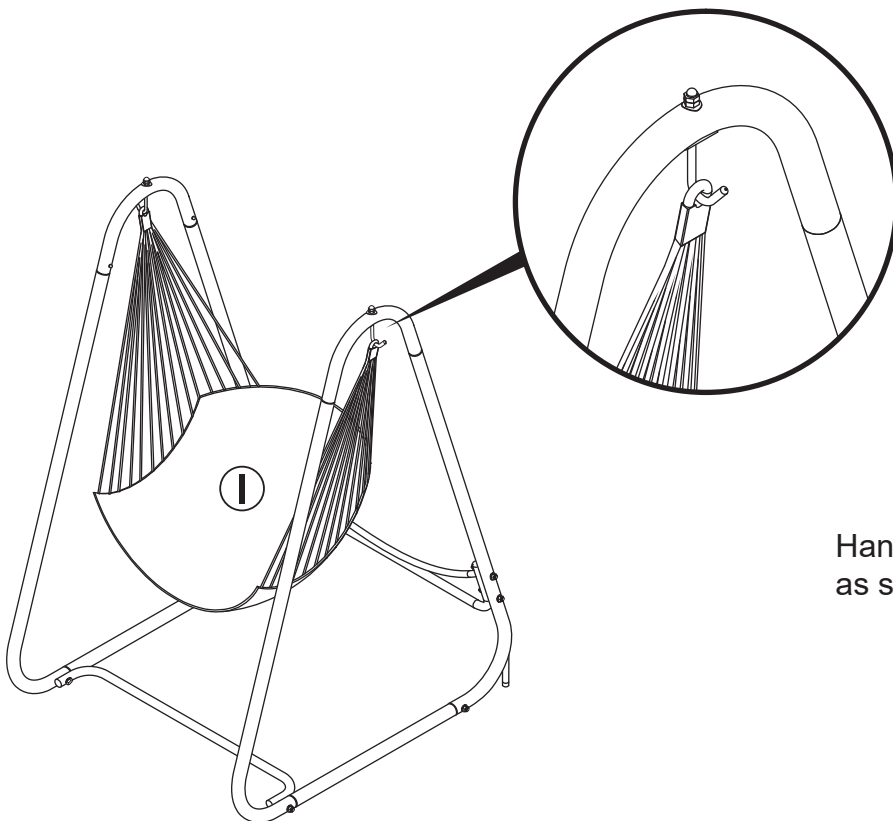

Hang Hammock Chair (I) on the hooks as shown.

CARE & MAINTENANCE

SAFE USE: Do not stand in the chair. Only use this unit on a flat, level surface.

CHILDREN: Supervise children at all times. Never allow children to play or sleep in hammock chairs.

INSPECT: Check unit for damage before each use. Periodically check hardware and tighten as necessary. Do not use this unit if the ropes, fabric, or stand show signs of weakness.

SUN EXPOSURE: All fabrics will eventually fade from sun exposure. Maintain the fabric color and integrity by storing the chair indoors when not in use.

WINTER CARE & STORAGE: Maintain the overall appearance and prevent damage by storing this item indoors when not in use, especially during winter and inclement weather. A cool, dry location is recommended to prevent damage. Covering with a breathable cover while in storage helps prevent dust build-up. Ensure the chair is dry before storing as moisture promotes mold and mildew growth.

SCRATCHES: The powder-coating is tough and durable, but, even under normal use, some scratching is inevitable. Scratches can be repaired with rust-resistant paint (not included); consult an expert at your local hardware store.

WARNING: THE ONE-YEAR WARRANTY DOES NOT COVER DAMAGES OR DEFECTS CAUSED BY THE APPLICATION OF CHEMICAL TREATMENTS, PROTECTIVE COATINGS, TOUCH-UP PAINT, OR CLEANING PRODUCTS.

CLEANING

 SPOT CLEAN/HAND-WASH ONLY  DO NOT USE BLEACH OR FABRIC SOFTENERS  LAY FLAT TO DRY

HAMMOCK: Spot clean with a damp cloth.

For more stubborn stains, hand-wash in a bathtub or kiddie pool using mild soap and a soft-bristled scrub brush. Soaking may be required for heavily soiled fabric or ropes.

Thoroughly rinse all soap residue. Air-dry on a flat surface to prevent the ropes from stretching. The ropes may shrink slightly while drying but will stretch back out with use.

STAND: Use a soft, damp cloth to wipe stand surfaces. Note, hardware may rust after long-term exposure to humidity and moisture.

TROUBLESHOOTING

- If the stand seems unstable, make sure it is on a level surface.
- If a spring button does not engage during assembly, it may be misaligned or stuck. Check to make sure the button is properly aligned with the corresponding hole. If the button is stuck, use a thin, small tool to help release the button from the tube in which it is installed.

SAFETY STATEMENTS & WARNINGS

- Do not exceed the weight capacity.
- Never stand in the chair.
- Inspect item before use to ensure components are not damaged and hardware is securely fastened.
- Keep furniture a safe distance from heat sources such as, but not limited to, fire pits, patio heaters, and grills.
- Do not allow children to use this product without adult supervision.
- Do not use harsh chemicals, abrasive materials, or a pressure washer to clean the furniture.

Any modification to the product or failure to follow recommended care will void the product warranty.

If you experience issues with assembly or the product was damaged during shipping, please contact our customer service team through one of the methods mentioned at the top of page 1. Please have the item number and order information ready to expedite response time.

WARNING:

Manufacturer and seller expressly disclaim any and all liability from personal injury, property damage or loss, whether direct or indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.