 


WC-03

Wine Refrigerator

User Manual

SKU:FWC003-15BL-USZX

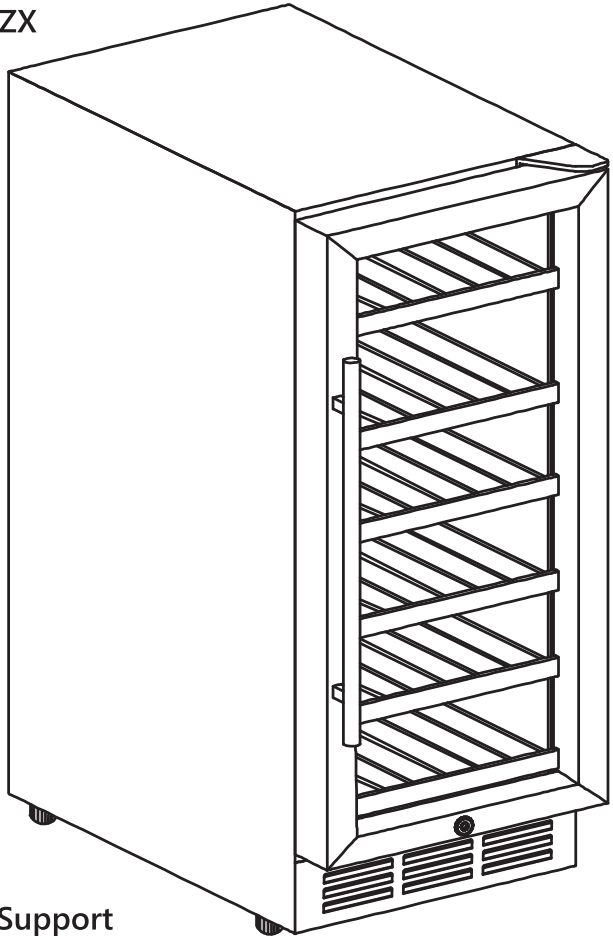

For Customer Service Support
Call: 1-833-632-0897
Email: support@homyd.com

THANK YOU FOR CHOOSING US

Thank You for Choosing Our Product

Thank you for choosing our product.

We sincerely appreciate your trust and support. Your satisfaction is our top priority, and we are committed to delivering high-quality products and attentive service.

If you have any questions or suggestions during use, please **DO NOT** hesitate to contact us. We are always here to assist you.

Contact Information

Email: support@homyd.com (Replies within 24 hours on business days)

Toll-Free: 1-833-632-0897 (Monday to Friday, 9:00 AM – 6:00 PM ET)

We hope this product brings ease and enjoyment to your daily life.

Warranty Statement

This product is covered by a limited warranty that protects against defects in materials and workmanship under normal household use.

If your product develops a fault after the return period of your purchase platform has ended, please contact us directly. We will do our best to assist you based on the warranty terms.

For warranty-related inquiries, please reach out using the contact details listed above.

Contents

Important Safety Instructions	02
Key Components and Structure	04
Installation Guide	05
Getting to Know Your Wine Refrigerator	09
Cleaning and Maintenance	10
FAQs	12
Troubleshooting	13
Specifications	16
Warranty Policy	17
Return Policy	18

IMPORTANT SAFETY INSTRUCTIONS

 Read and review instructions to understand the operation and use of the product.

 Indicates the presence of a hazard that can cause personal injury, death, or substantial property damage if the warning included with this symbol is ignored.

Warnings

Failure to follow these instructions could result in electric shock, fire, or burn hazards, which could cause property damage, personal injury, or death. When using electrical appliances, basic safety precautions should always be followed, including the following:

Electrical & Fire Safety

1. Plug into an individual electrical outlet with a voltage rating that matches the rating label on the wine refrigerator (115V AC only, 60Hz, 10A). Ensure the plug is fully inserted and use receptacles that cannot be turned off by a switch or pull chain.
2. Plug into a grounded 3-prong outlet. **DO NOT**, under any circumstances, cut or remove the third ground prong from the power cord supplied.
3. **DO NOT** connect or disconnect the electric plug with wet hands. **DO NOT** operate the wine refrigerator with wet hands, while standing on a wet surface, or submerged in water.
4. Unplug the wine refrigerator or disconnect power before cleaning or servicing to prevent electrical shock or death.
5. **DO NOT** use cords with cracks or abrasions. If the supply cord is damaged, it must be replaced by the manufacturer, service agent, or qualified personnel.
6. Be cautious when moving the wine refrigerator to avoid damaging or rolling over the power cord. When positioning the appliance, ensure that the power cord is not trapped or damaged.
7. **DO NOT** use an extension cord with this appliance. However, if you must use an extension cord, it is absolutely necessary that it be a UL-listed, 3-wire grounding-type appliance extension cord with a grounding-type plug and outlet, and that the electrical rating of the cord is 120 volts and at least 10 amperes.
8. **DO NOT** place multiple portable socket-outlets or portable power supplies at the rear of the appliance. It is best to install this appliance in a dedicated outlet.

9. **DO NOT** immerse the wine refrigerator, plug, or cord in water or other liquids to prevent electric shock.
10. **DO NOT** clean the wine refrigerator parts with flammable fluids. The fumes could create a fire hazard or an explosion.
11. **DO NOT** store explosive substances such as aerosol cans with flammable propellants inside the appliance.
12. **DO NOT** damage the refrigerant circuit.

Child and User Safety

13. An empty wine refrigerator can be dangerous to children. Remove any latches, lids, locks, and/or doors from unused or discarded units to prevent child entrapment and suffocation.
14. Never allow children to operate, play with, or crawl inside the wine cabinet. Ensure children **DO NOT** play with the appliance, and cleaning or maintenance should not be done by children without supervision.
15. The appliance can be used by individuals with reduced physical, sensory, or mental capabilities, or those lacking experience and knowledge, provided they have received supervision or instruction on the safe use of the appliance and understand the associated hazards.
16. Before disposing of the appliance, remove the door and leave the shelves in place to prevent child entrapment.

Placement and Maintenance

17. Keep ventilation openings in the appliance or built-in structure clear of obstructions to ensure proper airflow.
18. Install the unit away from wind, rain, water spray, and heat sources, like ovens or grills.
19. The wine refrigerator should be placed in a well-ventilated area with temperatures between **10°C (50°F) and 32°C (90°F)**.
20. Ensure the wine refrigerator is properly leveled for efficient operation. You may need to make several adjustments.
21. Ensure the appliance is properly cleaned and maintained according to the instructions. Avoid using unauthorized or mechanical methods to speed up defrosting.

22. If the appliance is empty for extended periods, turn it off, defrost, clean, dry, and leave the door open to prevent mold growth.
23. **DO NOT** attempt to repair or replace any part of your wine refrigerator unless specifically recommended in the manual. All other servicing should be referred to a qualified technician.



Risk of Fire or Explosion—Flammable Refrigerant Used

Dispose of the appliance following federal or local regulations. Follow all handling instructions to ensure safe disposal.

 
DO NOT use mechanical devices to defrost the unit.

DO NOT puncture refrigerant tubing.

Servicing must be performed by trained personnel only.

KEY COMPONENTS AND STRUCTURE

- 1.Control Panel
- 2.Hinge
- 3.Wood Shelves
- 4.Lock
- 5.Air Outlet
- 6.Glass Door with Handle
- 7.Adjustable Leveling Legs

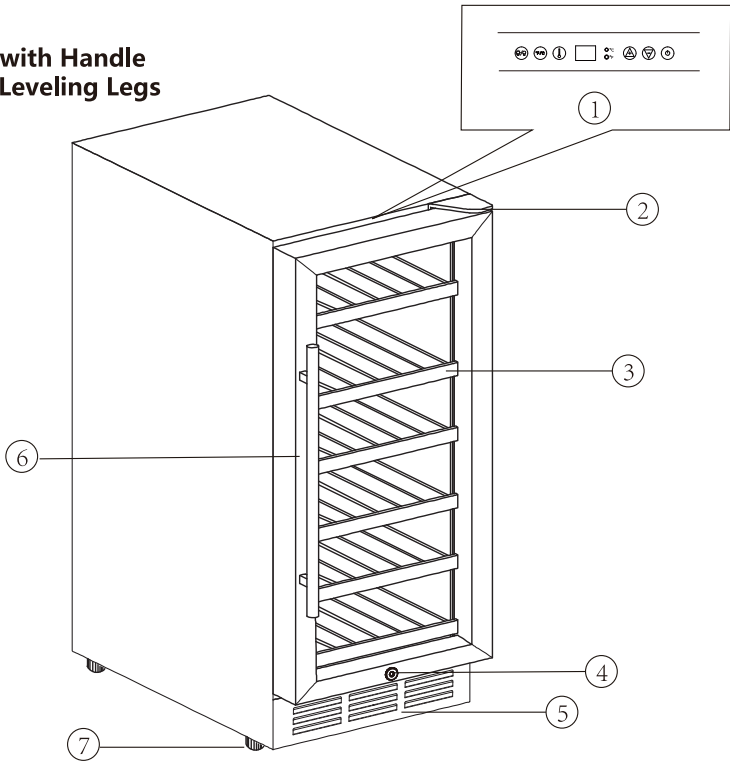

Accessories

- 6 x Wood Shelves
- 2 x Key
- 1 x Stainless Steel Handle
- 1 x User Manual
- 2 x Extra Leveling Legs
- 6 x Black Plastic Plugs
(used to plug the screw holes)
- 3 x Extra Screws

 
INSTALLATION GUIDE

Before Using the Appliance

1. Remove the exterior and interior packaging.
2. To ensure proper operation of the appliance, it's important to keep it level. Adjust the leveling legs as needed to maintain stability.
3. Before connecting the appliance to the power source, let it stand upright for approximately **24 hours**. This will reduce the likelihood of a malfunction in the cooling system due to handling during transport.
4. Clean the interior surface using lukewarm water and a soft cloth.

Door Handle Installation

1. Remove the sealing gasket at the handle installation area, exposing the two screws inside. The sealing gasket can be easily removed by hand without the need for tools.
2. Align the handle with the screws on the door. Use a Phillips screwdriver to tighten the screws inside the sealing gasket until the handle fits snugly and is securely attached to the door frame. (**DO NOT** overtighten to avoid damaging the handle assembly.)
3. Reinstall the sealing gasket to its original position.

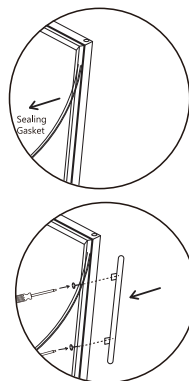

Door Lock

This unit can be secured with a lock and key. The keys are included in the plastic bag containing the Instruction Manual. To lock the door, insert the key into the lock and turn it clockwise until the metal pin is fully engaged. To unlock, turn the key counterclockwise. Remove the key after use and store it in a safe place.

Shelves

To remove the shelves from the track, pull each shelf out to the shelf post, as shown in the figure. Lift it up again, then slowly pull the shelf out.

Door Reversal Instructions

1. The door hinge of the unit is installed on the right side by default.
2. **DO NOT** plug the unit into the power outlet if you plan to reverse the door hinge.
3. **DO NOT** place the unit upside down during installation, as this may cause damage to the appliance.

Tools Required

1. Phillips screwdriver

 
 


2. Hex wrench



A. Unplug the Power Cord: Before starting door reversal, ensure the unit is unplugged.

B. Remove Plugs: Use a sharp implement to lever out the plugs, which are located on the door frame (3 at the top and 3 at the bottom) and on the door itself. If the plastic plugs are broken, disregard them. The holes to move the hinges are already pre-drilled.

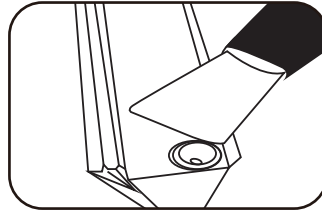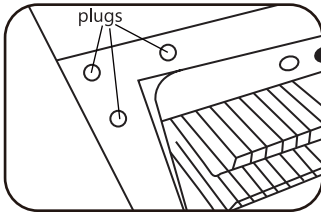



Note: The following instructions describe the door reversal installation step-by-step as illustrated in items C-F(please see the picture illustrations to ensure correctness).

C. Take Off the Door

Please commence disassembly solely from the bottom of the door, following the steps below :


1) Lay the unit flat or tilted with the door facing upward to change its opening direction.

  2) Use a hexagonal wrench to remove the two screws connecting the bottom door, as shown in the figure (be cautious not to lose the metal anti-slip washers in between).

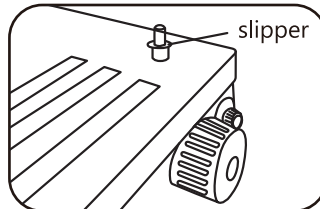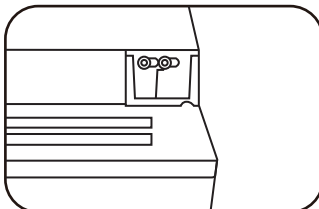


3) Lift slightly as depicted in the illustration to extract the connecting piece between the door and the hinges(i.e., lift from the hinge pin).

 Note: Ensure the preservation of the connecting pieces under the door and hinges, as they will be required for subsequent steps.

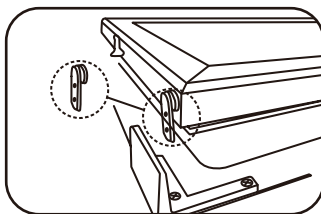


 4) Tilt the door slightly(as shown in the figure) to detach it.

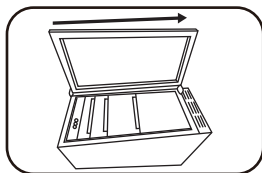


D.Install the Door on the Opposite Side:

 a. Use a Phillips screwdriver to disassemble the upper and lower hinge brackets from the machine(save the removed screws for the next step).

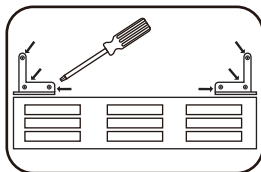

b. Use the screws removed earlier to affix the upper and lower left hinge brackets, found in the accessories, to the door frame on the opposite side of the machine.

 c. Transfer the saved connecting piece to the underside of the door on the opposite side.

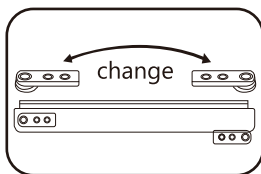

d. Incline the door and insert it onto the hinge bracket above the machine.

e. Proceed to move the lower part of the door into the hinge bracket pin.

f. Secure the two hex screws from the lower hinge bracket, ensuring that you DO NOT lose the intermediary metal anti-slip washers.

E. Insert the plugs removed in the second step into the holes on the side from which the door was removed. If the plug is broken, six extra ones are provided.

F. Settle Down the Refrigerant: Wait at least 24 hours before plugging in the refrigerator to allow the refrigerant to settle. Then plug in the unit.

Installation Limitations

1. This wine refrigerator is suitable for free-standing or built-in (fully recessed) installation.
2. Place the wine refrigerator on a solid, level floor strong enough to support it when fully loaded. Adjust the leveling legs to stabilize it, ensuring noise-free, vibration-free operation.
3. Install the wine refrigerator in a space with temperatures between 10°C (50°F) and 32°C (90°F) and humidity under 60%. Extreme temperatures can affect performance and cause temperature fluctuations.
4. Connect the wine refrigerator to a dedicated, properly grounded 115V AC power supply (60 Hz), following local electrical codes. For power or grounding questions, consult a certified electrician.
5. Plug the unit into a dedicated, properly installed, and grounded wall outlet. Under no circumstances should the third (ground) prong be cut or removed from the power cord.

GETTING TO KNOW YOUR BEVERAGE REFRIGERATOR



Power Button

The unit will turn on automatically once it is plugged into a power outlet.

To turn it off, press and hold the  **Power Button** for 3 seconds. To turn it on manually, touch the  **Power button**.

Temperature Adjustment Button

Press  to increase or press  to decrease the temperature in 1- degree increments. The adjustable temperature range is 5°C (40°F) to 18°C (65°F). For better cooling performance, set a lower temperature and let the unit run for at least 2 hours before loading beverages.

Upper/Lower Zone Switch Button

Press  to begin adjusting the temperature for the upper or lower zone.

Celsius/Fahrenheit Switch Button

Press the button to switch between Celsius (°C) and Fahrenheit (°F) temperature display modes.

Lighting Button

Touch the lighting button to turn the internal LED light on or off.

When the light is off, it will automatically turn on when the door is opened and turn off when the door is closed.

CLEANING AND MAINTENANCE

Cleaning the Appliance

1. Turn off the power and unplug the wine refrigerator before cleaning or performing maintenance. Remove all items, including shelves.
2. Wash the inside surfaces with warm water and a baking soda solution ((use approximately 2 tablespoons of baking soda per quart of water).
3. Clean the shelves using a mild detergent solution. Never use harsh cleansers or scouring pads on any part of the appliance.
4. Wring excess water out of the sponge or cloth when cleaning around the controls or any electrical components to avoid moisture damage.
5. Wipe the exterior with warm water and a mild liquid detergent. Rinse thoroughly and dry with a clean, soft cloth. **DO NOT** use steel wool or steel brushes on stainless steel surfaces, as steel particles may lead to rusting.

Note: If the unit will not be used for over three weeks, turn off the power and leave the door slightly open to prevent odors.

Defrosting the Appliance

1. Turn off the machine using the button and stop the compressor, and unplug the power cord to melt the frost layer. (Never use mechanical devices or methods not recommended by the manufacturer to accelerate defrosting.)
2. Allow the frost to melt on its own, making sure that the internal drain is not blocked.
3. During this time, the melted frost will flow through the internal drain pipe into the water collection tray on top of the compressor. The heat of the compressor will evaporate the liquid. (If the drip tray is overfilled, it will need to be cleaned manually)
4. Clean the interior with warm water and a soft cloth, wipe dry thoroughly, and reset the temperature and cool for 2 hours.

Handling Power Interruptions

1. Power outages may occasionally occur due to storms or other causes.
2. Most interruptions are resolved within a few hours and should not significantly affect the appliance's temperature. During this time, try to keep the door closed as much as possible to help maintain a stable internal environment.
3. In the event of a power outage, unplug the appliance from the power outlet. When power is restored, plug it back in.
4. If the power outage lasts for an extended period, take appropriate measures to protect the contents.

Moving the Appliance

1. Remove all items (bottles) from the wine refrigerator.
2. Securely tape down any loose items, such as shelves, inside the wine refrigerator.
3. Turn the adjustable leg up to the base to avoid damage.
4. Tape the door shut.
5. Ensure that the wine refrigerator stays securely in the upright position during transport.
6. Protect the outside of the wine refrigerator with a blanket or a similar item.

Energy Saving Tips

 
1. The wine refrigerator should be located in the coolest area of the room, away from heat sources or direct sunlight.
2. Ensure that the wine refrigerator is adequately ventilated. Never cover air vents.
3. Only open the wine refrigerator door for as long as necessary. Frequent opening of the door will affect the internal temperature.

Charcoal Filtration System

Wine is a living entity that breathes through its cork. To preserve its quality and taste, it must be stored at the ideal temperature and conditions. The wine refrigerator features an active charcoal filtration system to ensure air purity, cooling efficiency, and an odor-free environment for your wines.

To Replace the Filter:

1. Remove the bottles of wine stored on the two shelves in front of the filter.
2. Remove the shelves and set them aside to be replaced once you have changed the filter.
3. Utilize a flat-head screwdriver or an alternative tool to insert into the slot of the activated carbon box, and disengage it by rotating in a counterclockwise direction.

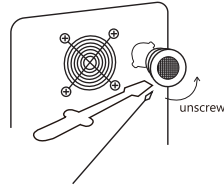

4. Remove the existing filter and replace it with a new one.
5. Insert the new filter into the hole and turn it 45 degrees in a clockwise direction.

FAQs

1. Is this appliance rated for outdoor use?

This appliance is primarily designed for indoor use. Please avoid using it in open outdoor environments to ensure its proper operation and longevity.

2. Has anyone installed this under the counter? And does that void the warranty?

This model is not designed for built-in or under-counter installation. It requires proper ventilation on both sides to ensure effective cooling. Installing it under the counter may restrict airflow, potentially affecting performance and longevity.

3. What are the warranty specifications?

We provide a 12-month warranty and lifetime technical support for this refrigerator. If you would like to learn more, please contact our customer service team.

4. Can the shelves inside the unit be moved?

The shelves inside the unit are adjustable and can be moved.

5. Is it normal for a wine refrigerator to get hot outside?

It is normal for a wine refrigerator to emit some heat on the outside. This happens because refrigerators work by transferring heat from inside the unit to the outside, keeping the inside cool.

TROUBLESHOOTING

Problem	Possible Cause	Solution
The unit does not run	The unit may not be plugged in, or the plug may be loose.	Ensure the unit has been plugged in properly.
	The unit is turned off.	Press  power button to turn on the unit.
	House fuse has blown or tripped the circuit breaker.	Check/replace fuse. Reset the circuit breaker.
The unit is not cold enough	External environment may require a higher setting	Set a colder setting. Allow several hours for the temperature to stabilize
	The unit was recently disconnected	It takes 2 hours for the unit to fully cool down
	Prolonged or frequent door openings	Open the door less often
	The door is not closed completely	Ensure the door is properly closed
	The door gasket is not sealing properly	Check the gasket. Clean or replace if necessary
The compressor turns on and off frequently	Room temperature is higher than normal	This is normal, the unit works harder in warmer environments
	A large amount of content was added at once	This causes the unit to run longer until the temperature stabilizes
	Prolonged or frequent door openings	Open the door less frequently
	The temperature has not been set correctly	Press either  or  to check the set temperature, and set the temperature correctly
	The door is not completely closed	Close the door properly
	The door gasket is not sealing properly	Check the gasket. Clean or replace if needed

Problem	Possible Cause	Solution
The light does not work	The unit is not plugged in	Plug in the unit
	Circuit breaker tripped or fuse blown	Check and/or replace the fuse or reset the breaker
	The light button is "OFF"	Press the  light button to turn the light ON
Vibrations	The unit is not leveled	Check to ensure that the unit is level
	Bottles are vibrating against each other	Ensure bottles are properly spaced and not touching
	Object is placed under the unit	Remove any objects under the unit
The unit makes too much noise	The unit is not level	Level the unit properly
	Normal noise from the flow of the refrigerant	Gurgling or popping noises are normal as refrigerant flows and walls expand/contract
The door will not close properly	The unit is not level	Level the unit properly
	Door was reversed and improperly installed	Reinstall the door properly
	The gasket is dirty	Clean the door gasket
	The shelves are out of position	Place the shelves properly
Moisture builds up on the interior or exterior of the unit	This is normal during high humidity periods.	Reduce room humidity
	This is normal in a high-temperature environment	Move the unit to a cooler place and avoid direct heat or sunlight
	Prolonged or frequent door openings	Open the door less often
	The door does not seal completely	Check door gaskets for proper seal

Problem	Possible Cause	Solution
Error Code: E1-E2-E3-E4-E7-E8	A sensor has failed	Contact customer service for assistance
Received product damaged or with missing accessories	Possible damage caused during shipping	Contact customer service for assistance
The unit was received with the outer box placed upside down	This may have been accidentally caused by the delivery personnel	Carefully check the outer box for damage. Wait 24 hours before plugging in the unit.
It seems that there was a liquid leak when the unit was received	Possible internal damage during transit	Contact customer service for support

SPECIFICATIONS

WC-03 Wine Refrigerator	
SKU	FWC003-15BL-USZX
MODEL	WC-03
VOLTAGE	115V~60HZ
RATED CURRENT	1.4A
REFRIGERANT	R600a,1.52Oz/43g
FOAMING	CYCLOPENTANE
PRODUCT DIMENSIONS	15.0*22.8*33.5 in
NET WEIGHT	68.3 LBS

WARRANTY POLICY

1-Year Limited Warranty

Toll-Free Call: 1-833-632-0897 Mon to Fri, 9AM - 6PM (ET)

Email: support@homyd.com

Thank you for choosing our products. We provide a 1-Year Limited Warranty for items purchased through our official channels. Please kindly note that this warranty is for the original purchaser and is non-transferable. If you purchase from an unauthorized seller, please get in touch with them directly.

We are committed to ensuring that our products are free from defects in materials and workmanship for one year from the date of purchase, as long as they are used under normal household conditions and maintained according to the User Manual. **Please note that certain conditions and exclusions apply:**

Should you find any defects in the original product or its non-wearable parts, we will be happy to repair or replace the item within one year of purchase. If a replacement is necessary, the warranty period will continue from the original purchase date. Please be aware that normal wear and tear, or damage due to mishandling, accidents, or failure to follow instructions, are not covered. However, replacement parts are available for purchase. Feel free to contact us for more information.

Please also note that this warranty does not cover damage caused by exposure to liquids or foreign materials, unauthorized repairs or modifications, or use in commercial or non-household environments (unless specified for commercial use).

If you encounter any issues with your product, we are here to help. You can reach us by phone at **1-833-632-0897** or email us at **support@homyd.com**. For certain product categories, we also offer the option to upgrade your warranty to our VIP service.

Our friendly phone support team is available from **Monday to Friday, 9 AM - 6 PM (ET)**.- To assist you more efficiently, please have your product with you when you call. Besides, we aim to respond to emails within 24 business hours. If you don't receive a reply within this timeframe after sending us an email, kindly check your spam folder to ensure you don't miss our response.

In addition to the one-year warranty, we also offer lifetime technical support. After the warranty period, service is still available at an additional cost. Please don't hesitate to contact us with any questions or concerns.

RETURN POLICY

We offer a 30-day return policy for purchases made directly through our company. This policy is separate from and does not override the return policies of third-party platforms.

Return Eligibility

Items must be returned within 30 days of purchase.

Products should be in new or like-new condition, with original packaging and all accessories (manuals, handles, keys, etc.).

Returns not related to quality issues will require the buyer to cover return shipping costs, which will be deducted from the final refund.

How to Initiate a Return

Contact our customer service team for return authorization.

Provide the following information:

Proof of purchase (e.g., screenshot with platform name, order number, date, item, and amount)

After approval, we will send a return shipping label. Attach it to the product box and return via the designated carrier.

Once we receive and inspect your return, we will process your refund within **2–3 business days** (excluding original processing or handling fees).

***Note:**

- Returned products that are damaged or missing parts may not qualify for a refund.
- This return policy does not affect your warranty rights.
- For details, please refer to the “Return Policy” section of this manual or the return policy on your purchase platform.

SKU: FWC003-15BL-USZX

