

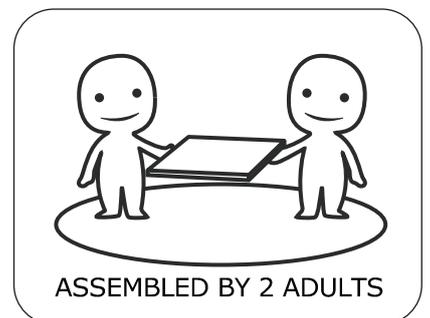




Dog Cage

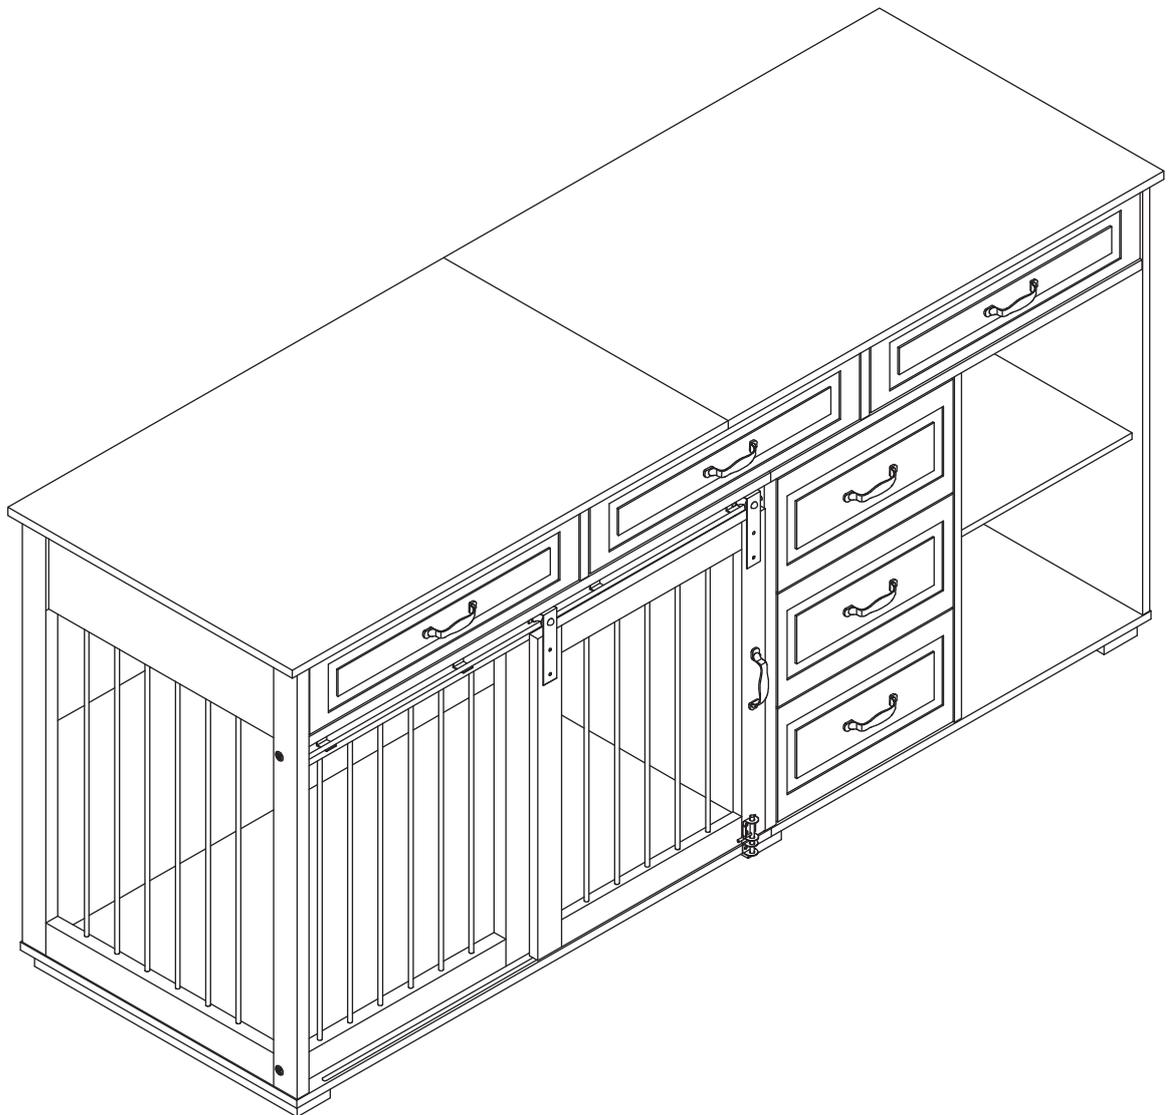

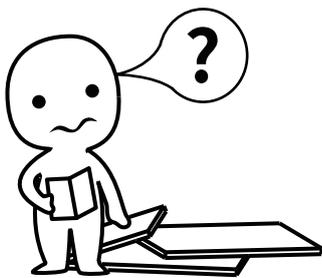


IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

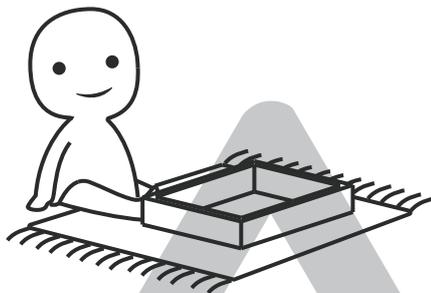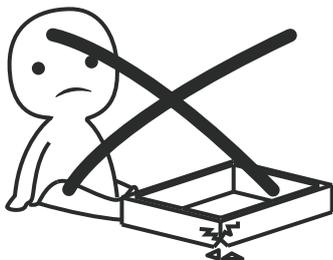


AVOID SCRATCHES!

In order to avoid scratching this furniture should be assembled on a soft layer- could be a rug.

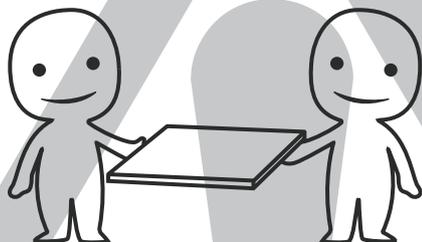

IMPROVE EFFICIENCY !

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

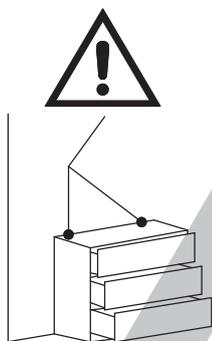

ANTI-TOPPLE WARNING !


Overturnd furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !


It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.


















Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

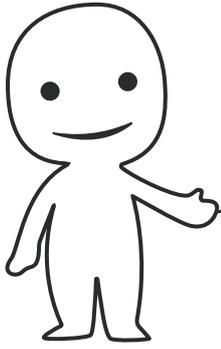


Please prepare the following tools

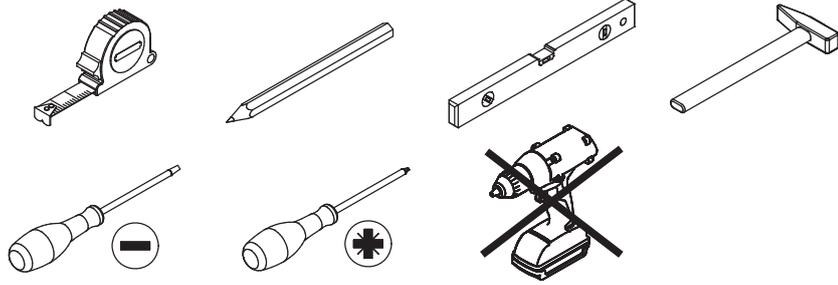

When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

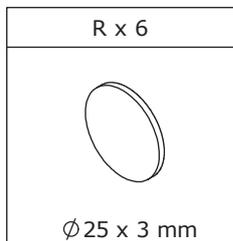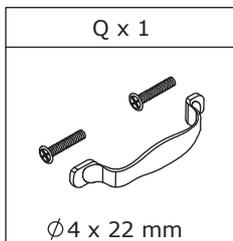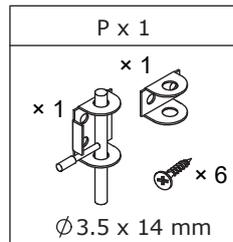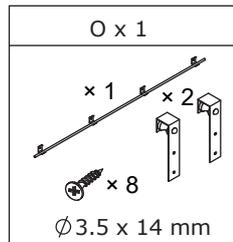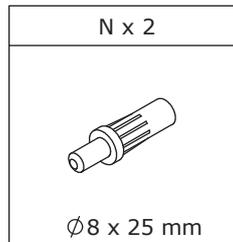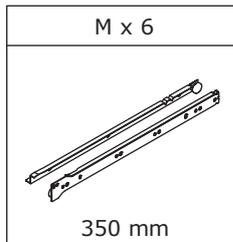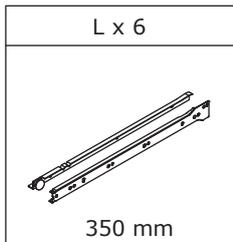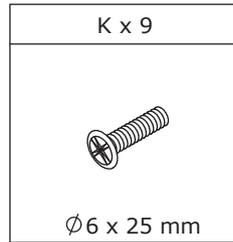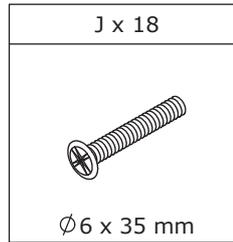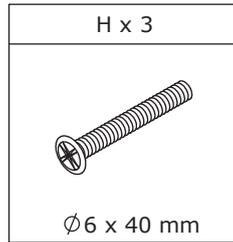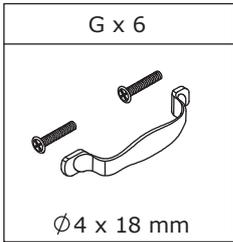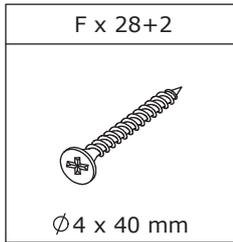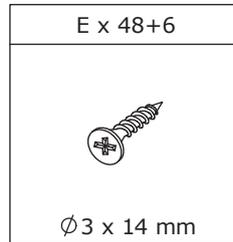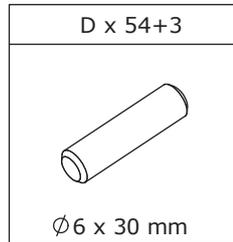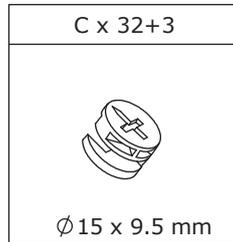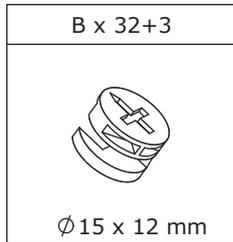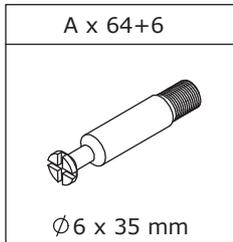

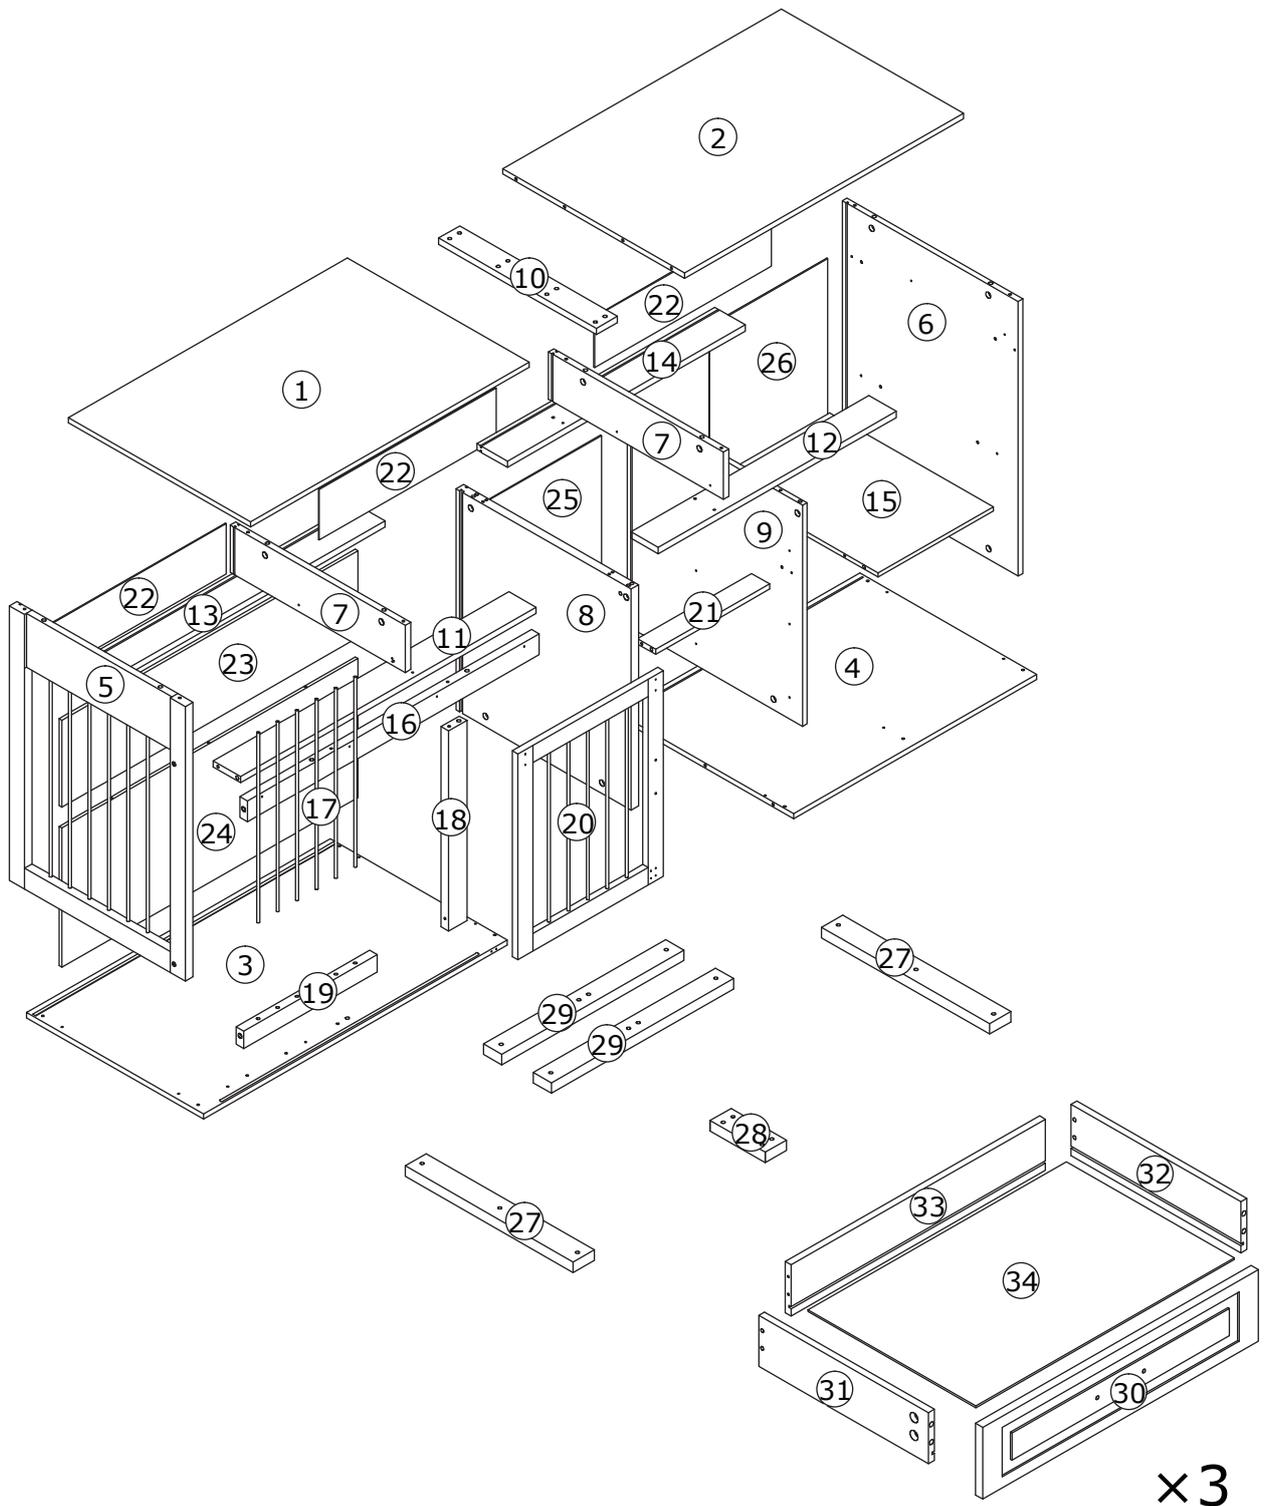


×3

⚠ WARNING

Children have died from furniture tipover. To reduce the risk of furniture tipover:




- ALWAYS install tipover restraint provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

This is a permanent label. Do not remove!


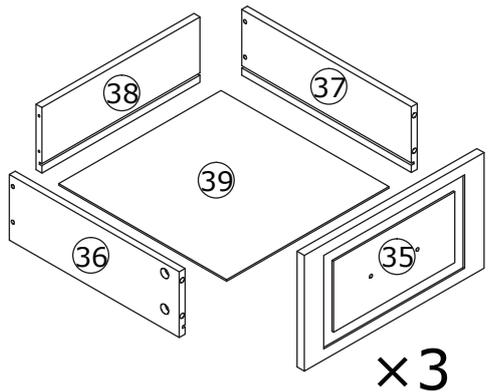


×3

  
1

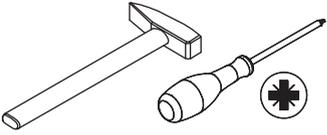A x 10  Ø6 x 35 mm	D x 10  Ø6 x 30 mm	E x 24  Ø3 x 14 mm	L x 6  350 mm	M x 6  350 mm	
---	---	---	--	---	---




Screw eccentric rod(A) and insert wooden dowel(D) into board 5, 6, 8 and 9 at first.

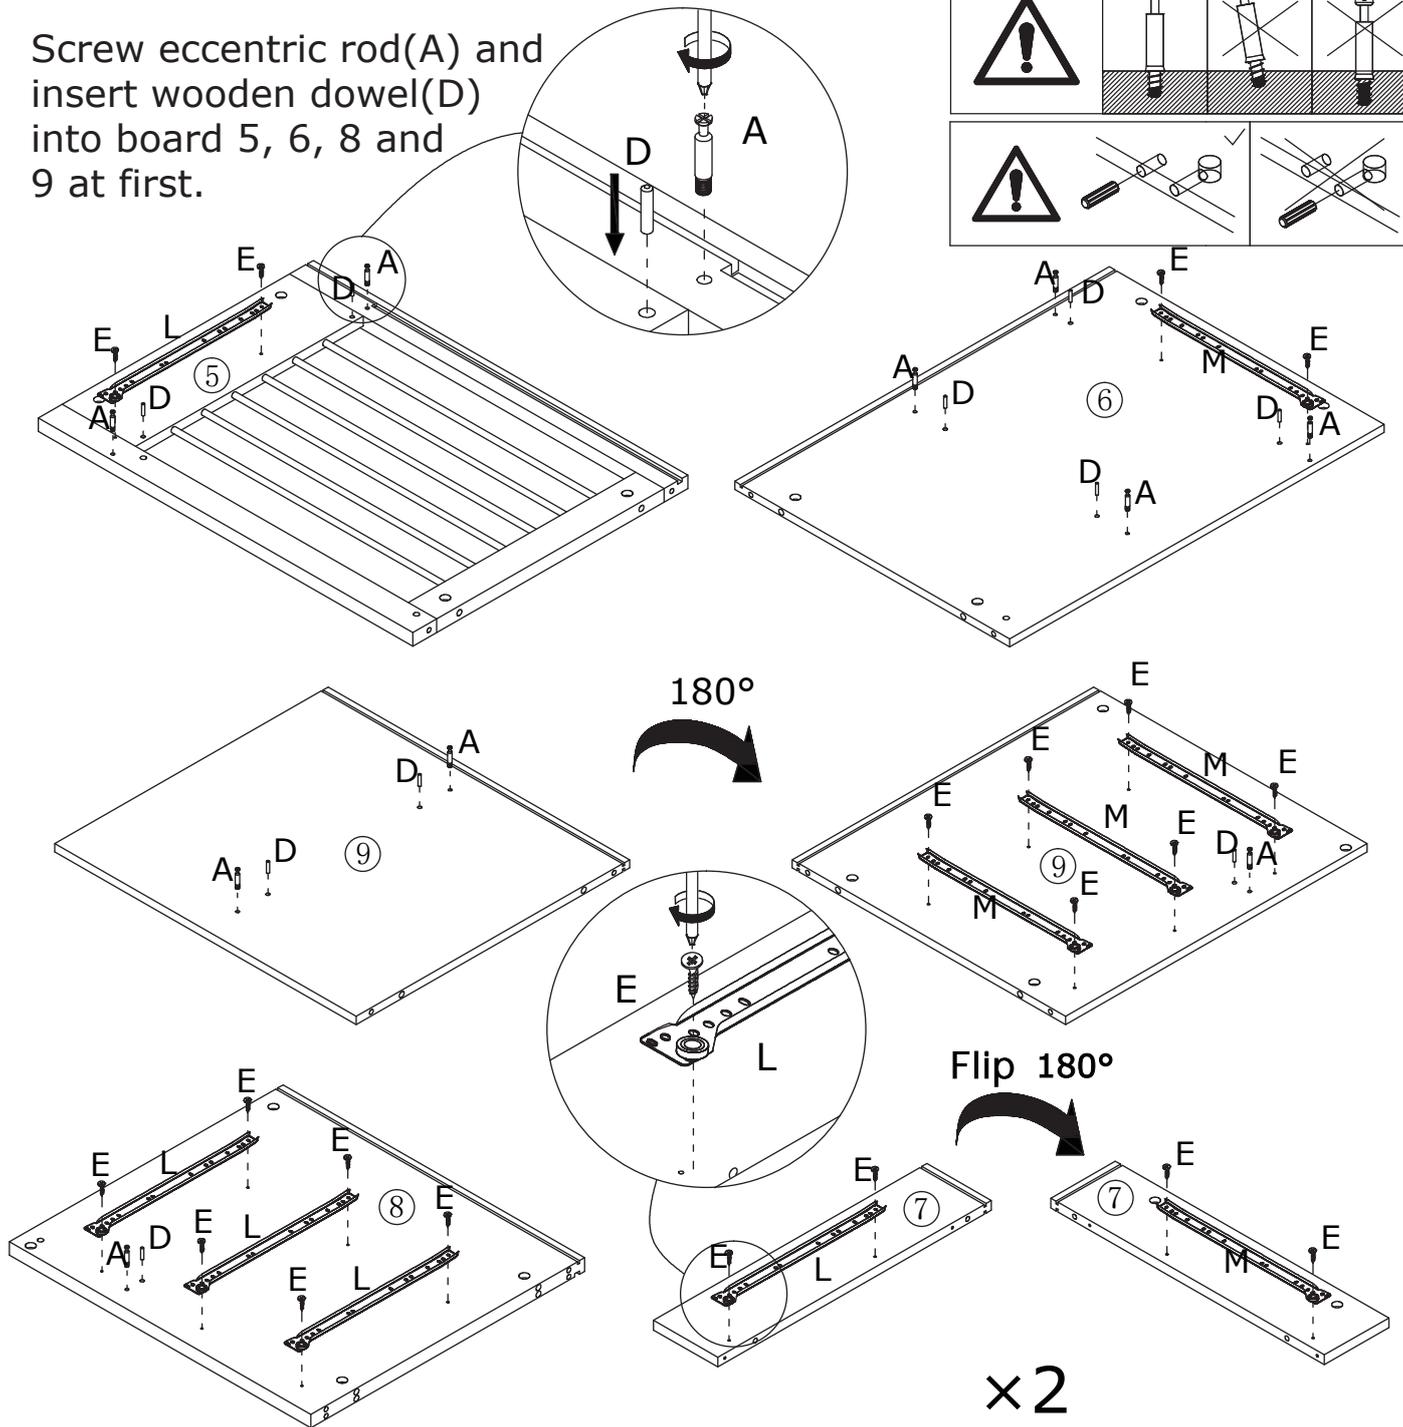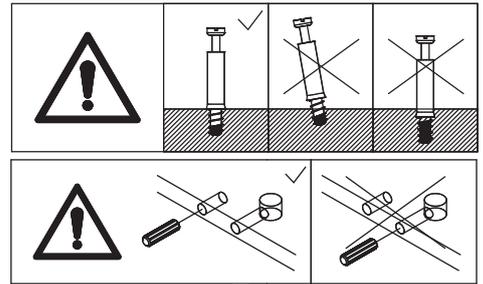






Fix slide rail(L) to board 5, 7 and 8 respectively with screw(E) as shown.
Fix slide rail(M) to board 6, 7 and 9 respectively with screw(E) as shown.

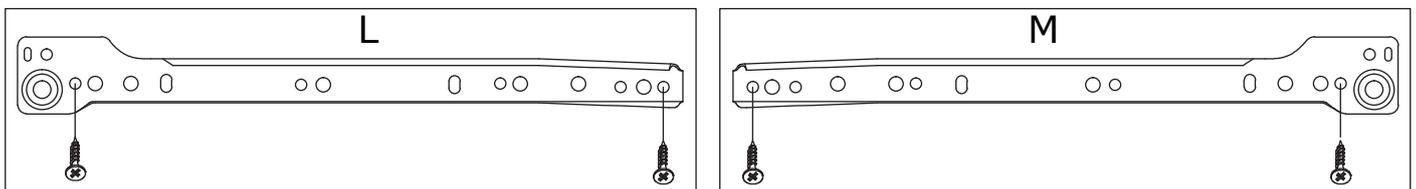

2

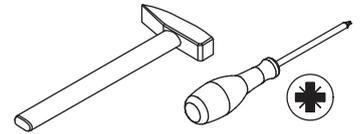
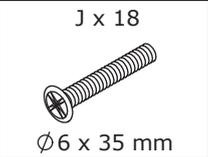
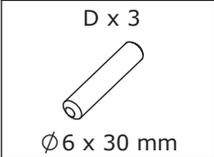


Connect board 3 to board 4 using wooden dowel(D) as shown.

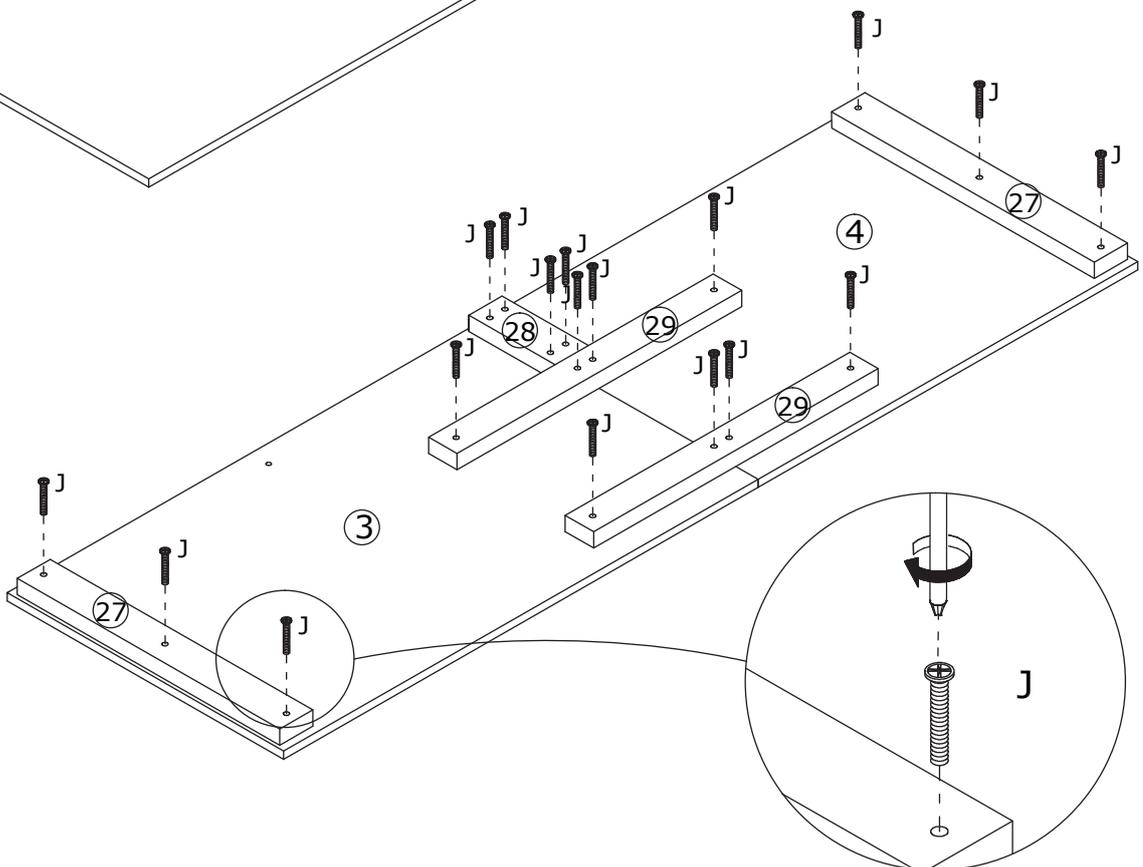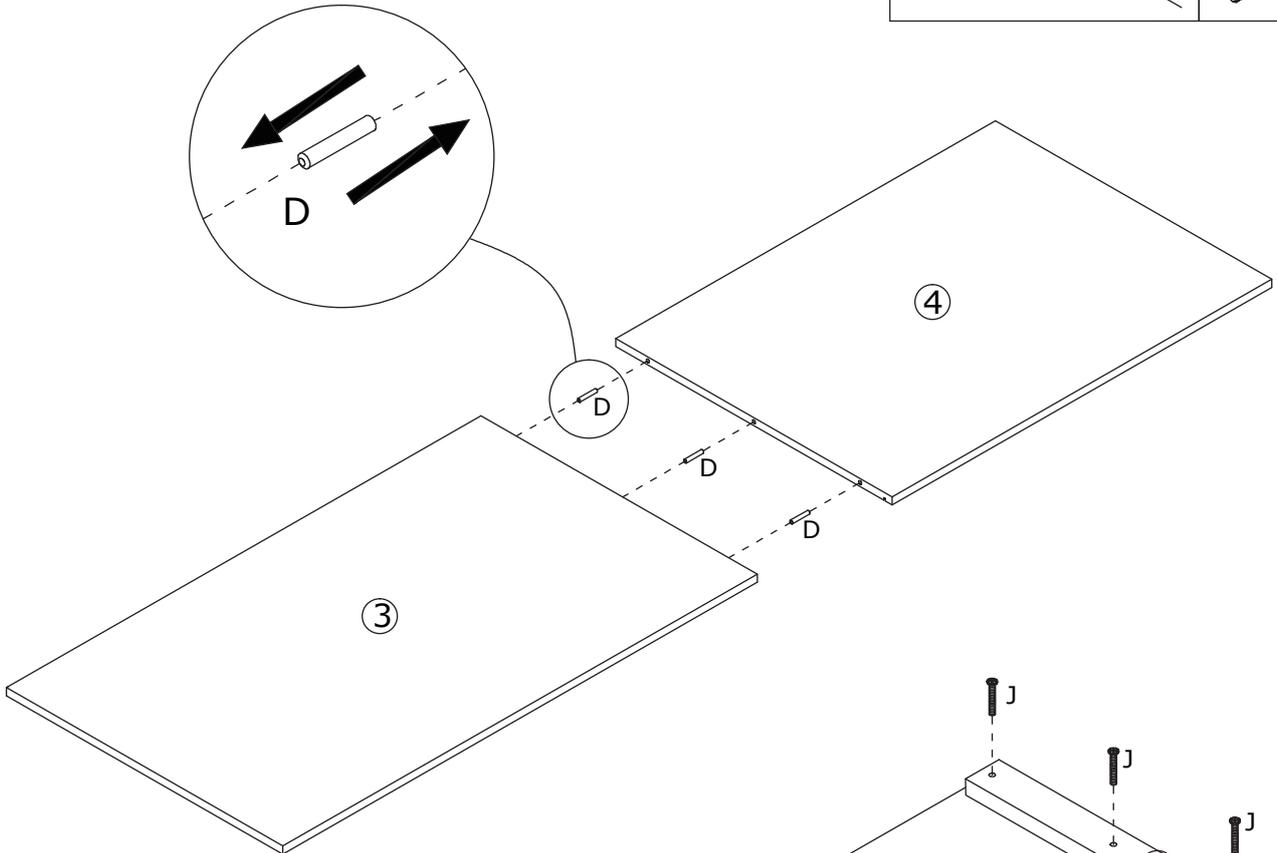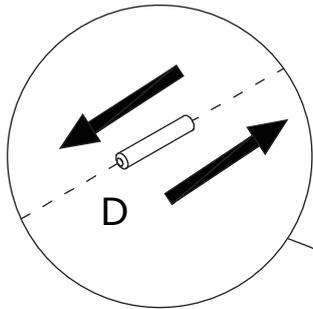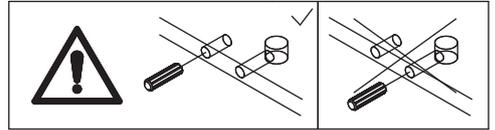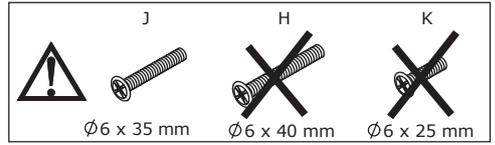

Fix board 27, 28 and 29 to board 3 and 4 with screw(J) as shown.







3

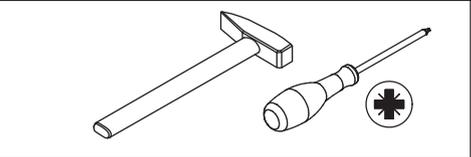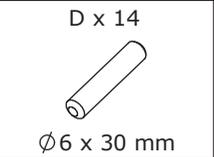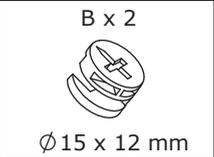



Screw eccentric rod(A) and insert wooden dowel(D) into board 3, 4, 16 and 18 at first.

Insert rod 17 into holes in board 16 at first.






Connect board 17, 18, 19 and 16 together, add cam lock(B) into board 18,19 and turn clockwise to tighten as shown.

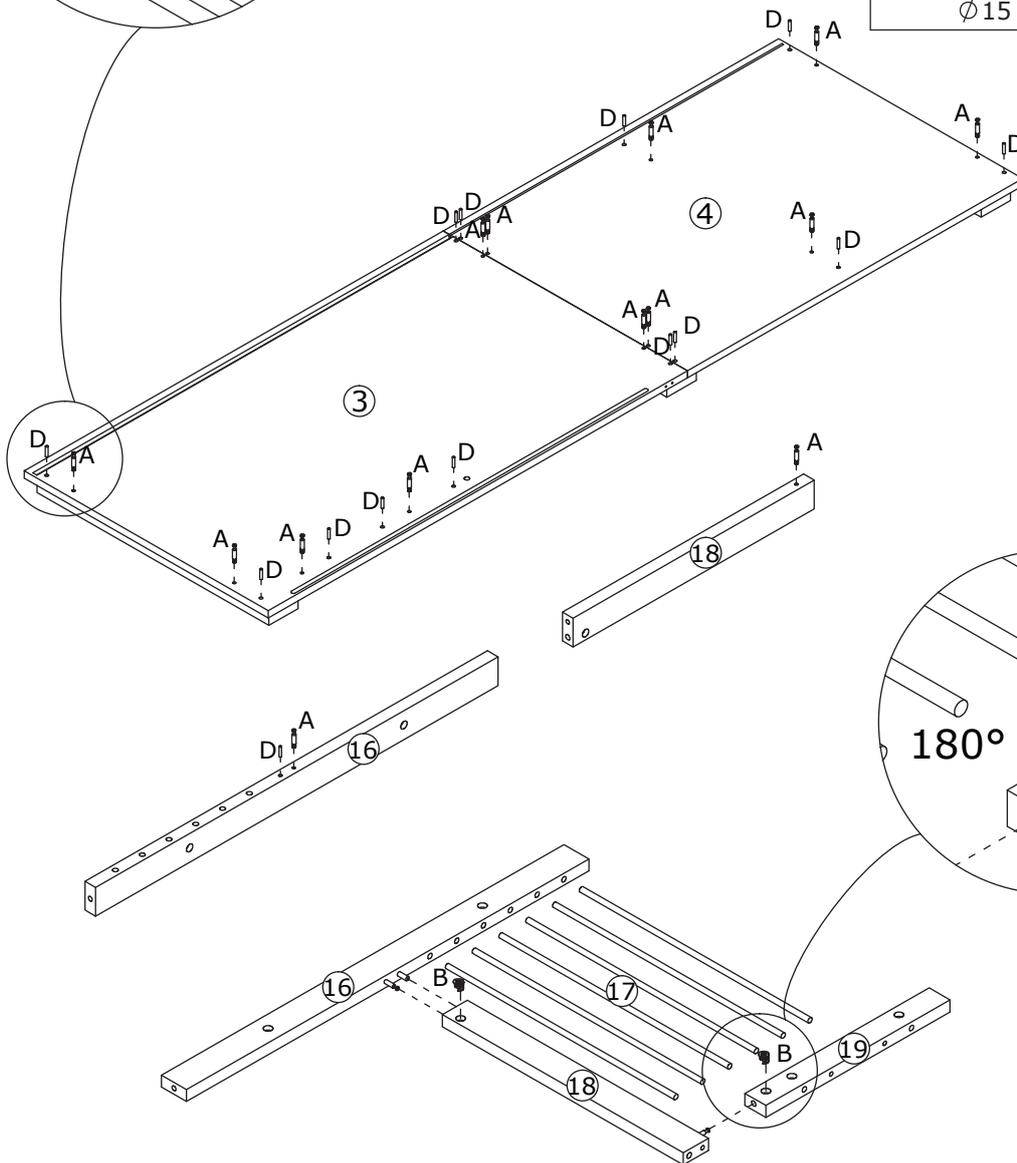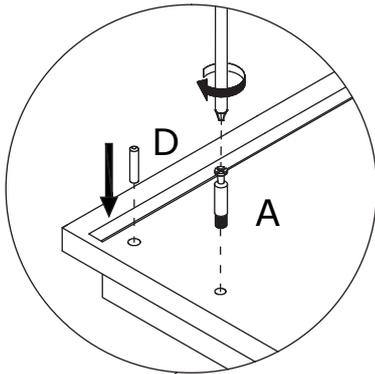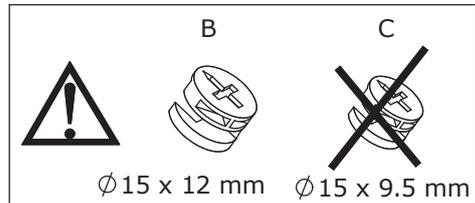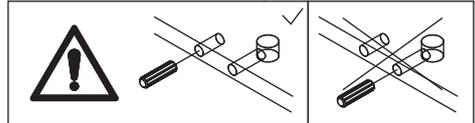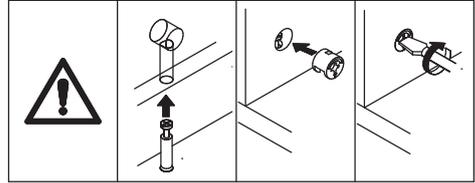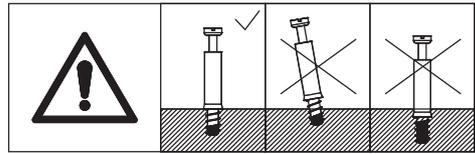

4

 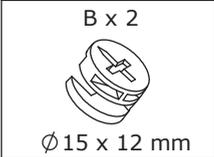


Connect board 21 to board 8 and 9, add cam lock(B) into board 21 and turn clockwise to tighten as shown.

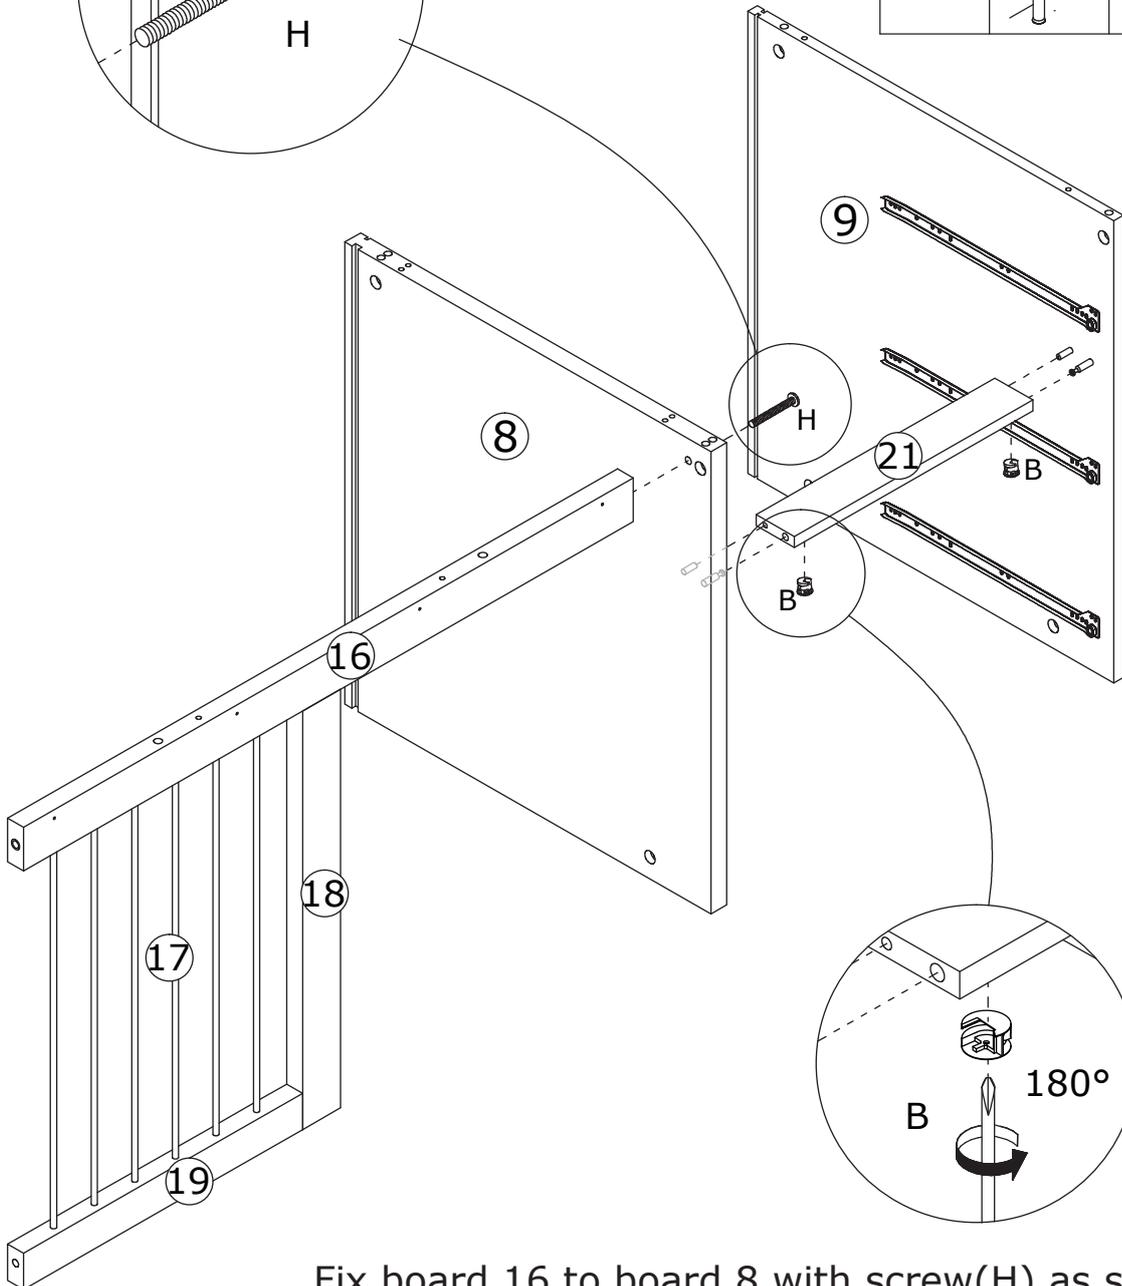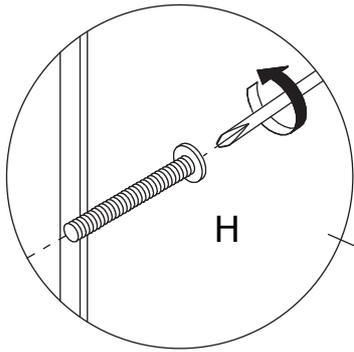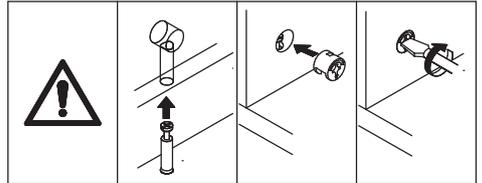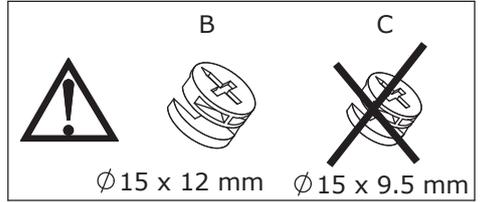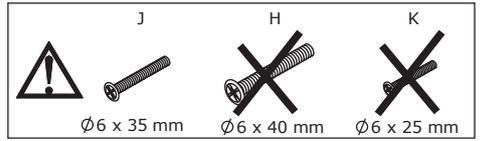




Fix board 16 to board 8 with screw(H) as shown.

5

<p>B x 4</p>  <p>Ø15 x 12 mm</p>	<p>C x 4</p>  <p>Ø15 x 9.5 mm</p>	<p>K x 1</p>  <p>Ø6 x 25 mm</p>
---	--	--



 


Connect the component to board 3 and 4, add cam lock(B) into board 9 and 19; cam lock(C) into board 8 and turn clockwise to tighten as shown.

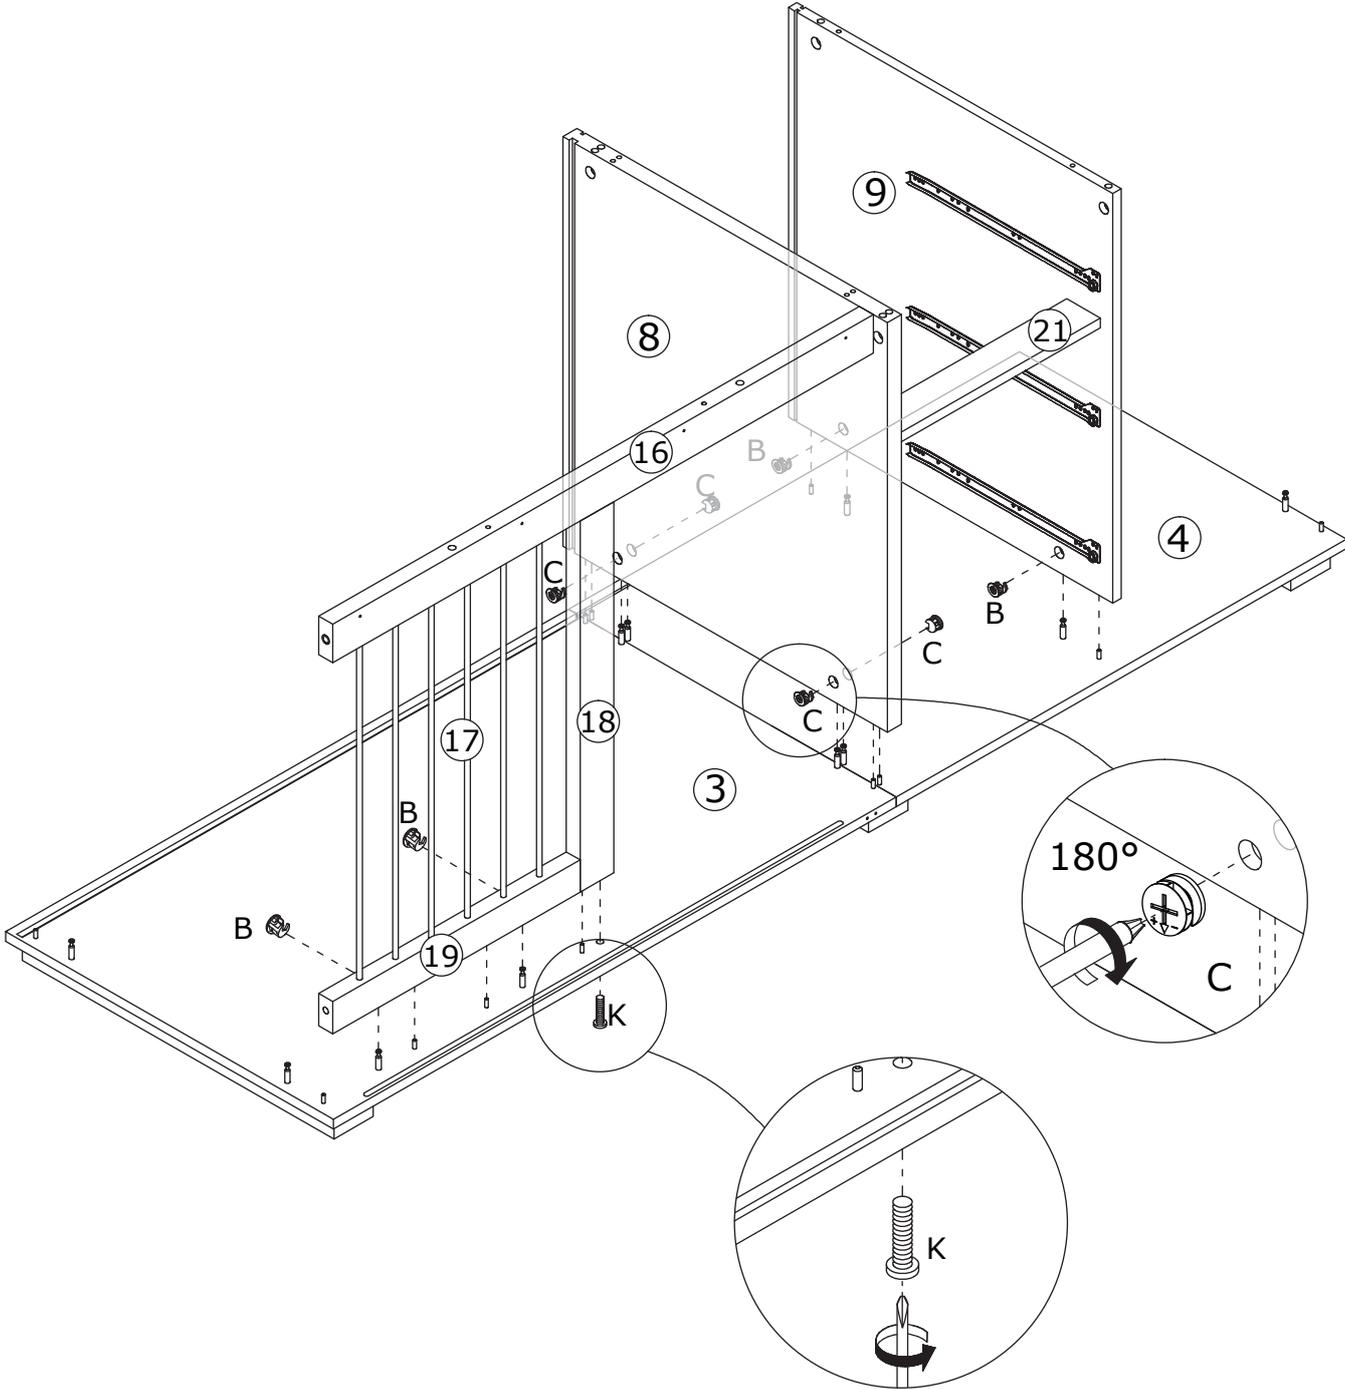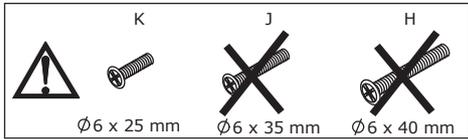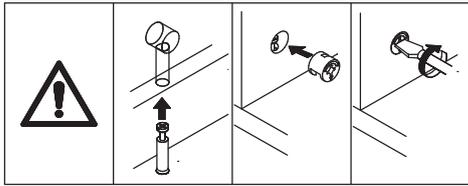


Fix board 18 to board 3 with screw(K) as shown.




6

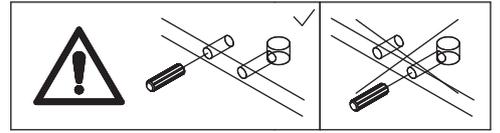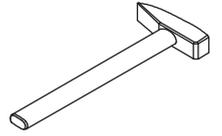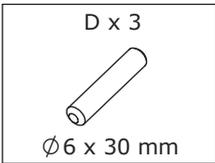




Connect board 23 to board 24 using wooden dowel(D) at first.
Insert back board 23, 24, 25 and 26 along grooves as shown.

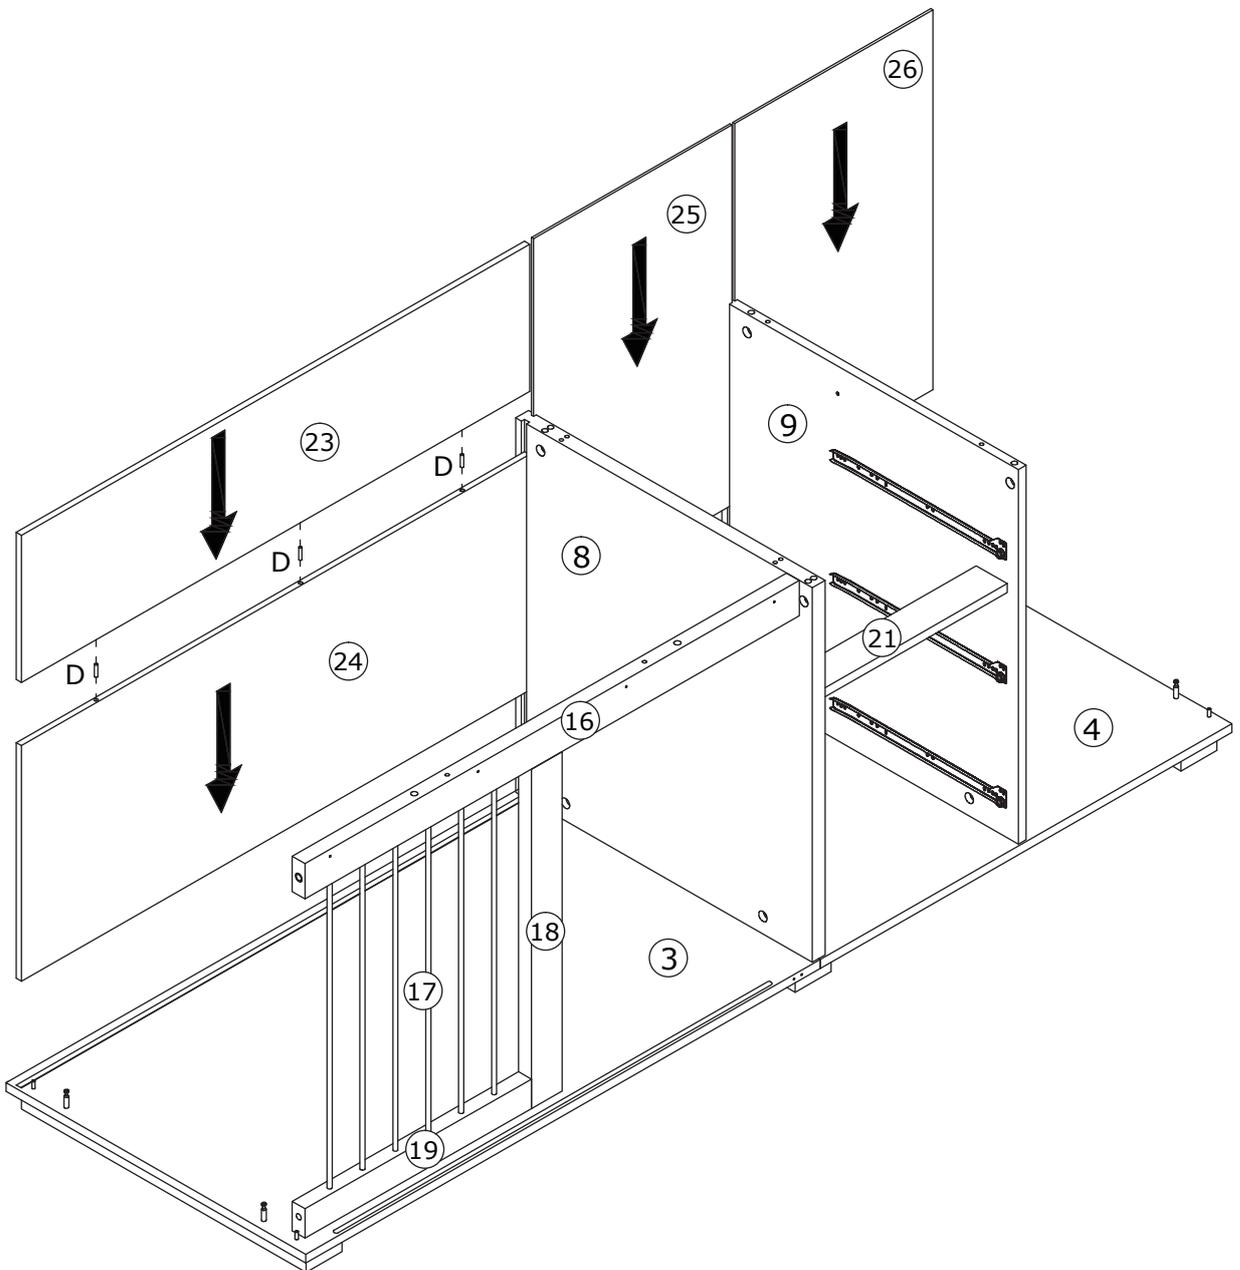





7

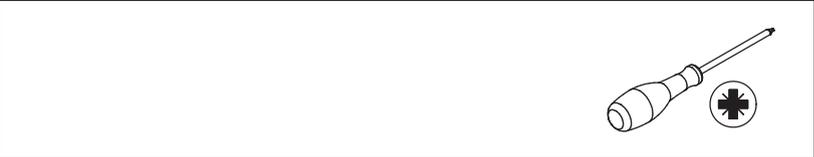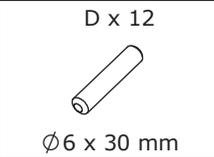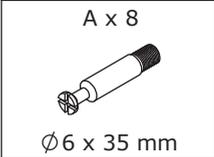

Screw eccentric rod(A) and insert wooden dowel(D) into board 13, 14, 11 and 12 at first.

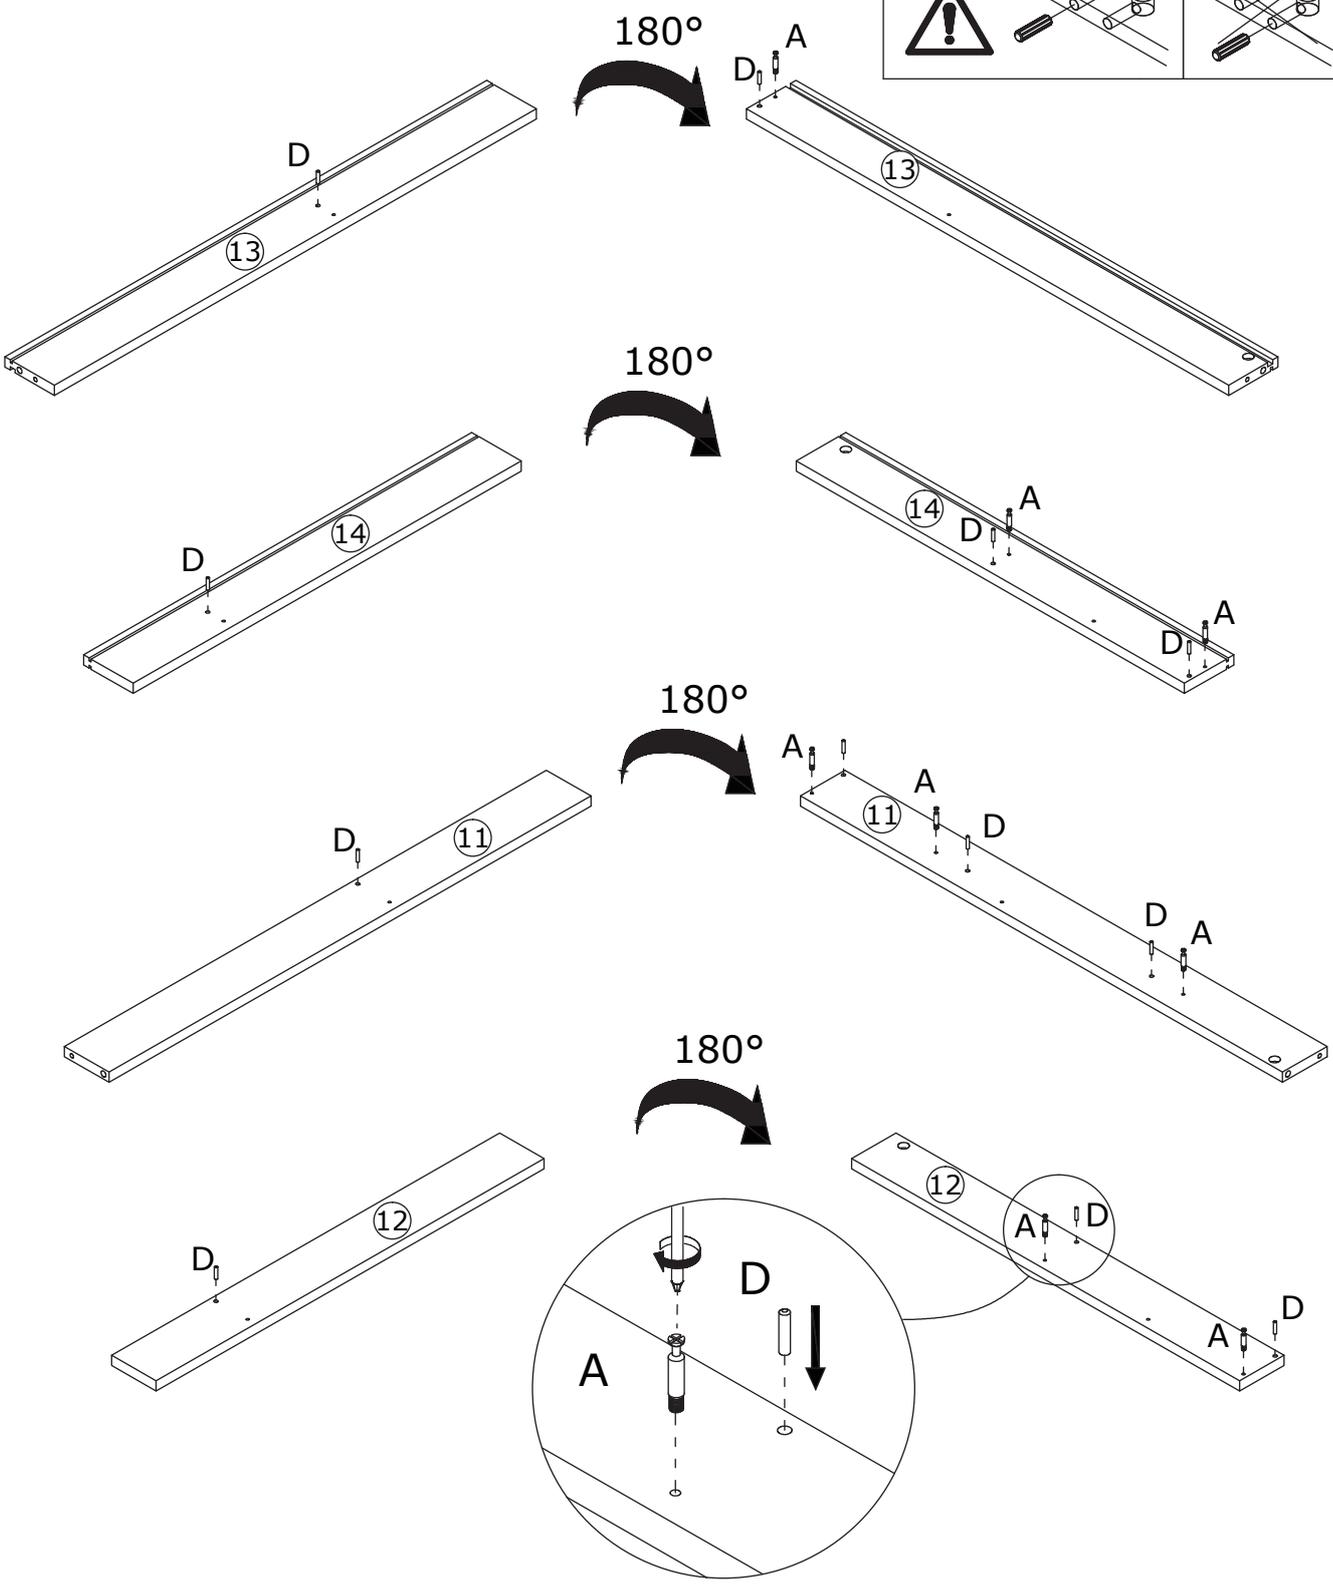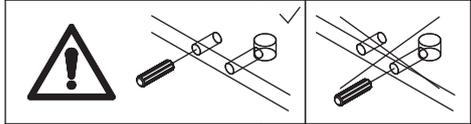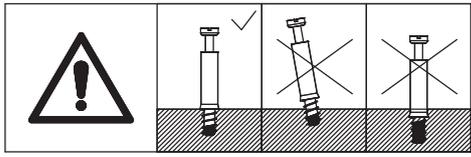


8

 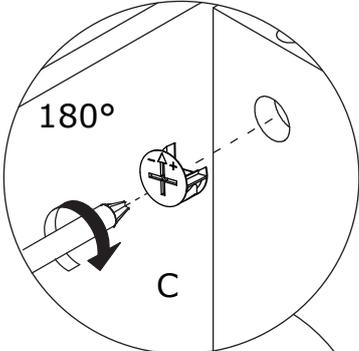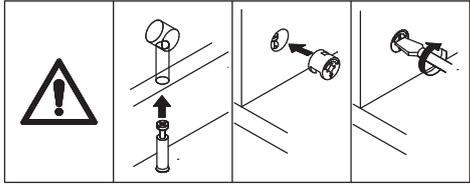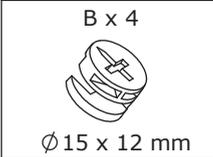



Attach board 13 and 14 to board 8 and 9, add cam lock(C) into board 8; cam lock(B) into board 9 and turn clockwise to tighten as shown.

Attach board 11 and 12 to board 16, 8 and 9, add cam lock(C) into board 8; cam lock(B) into board 16, 9 and turn clockwise to tighten as shown.

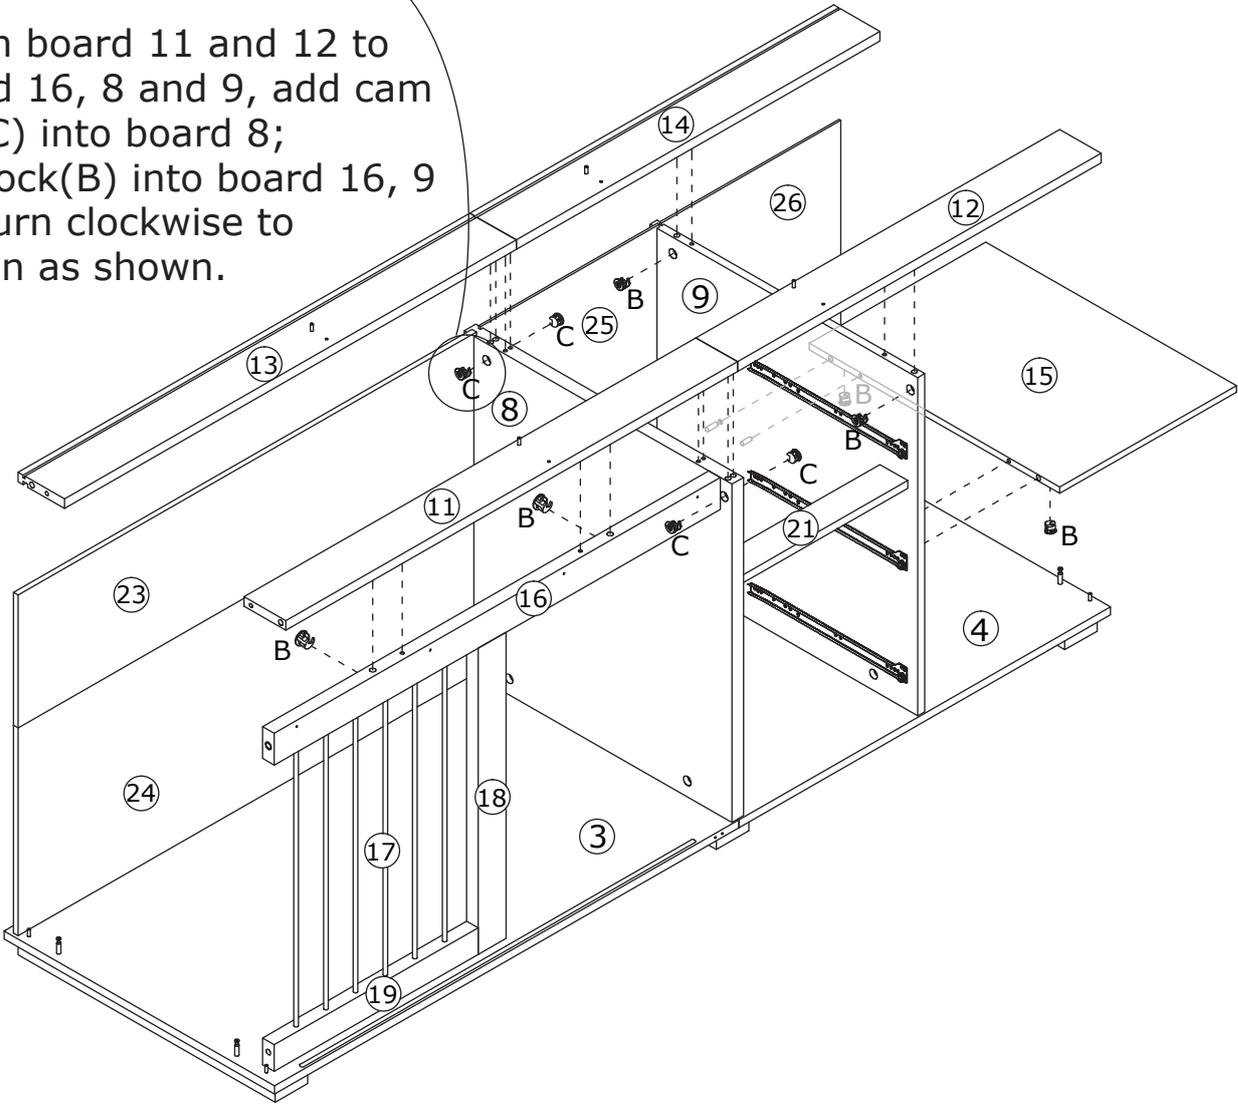







Attach board 15 to board 9, add cam lock(B) into board 15 and turn clockwise to tighten as shown.

 9


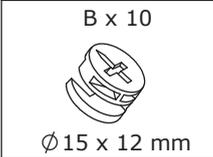


Connect board 5 and 6 to the component, add cam lock(B) into and turn clockwise to tighten as shown.


Fix board 5 to board 16 and 19 with screw(H) as shown.

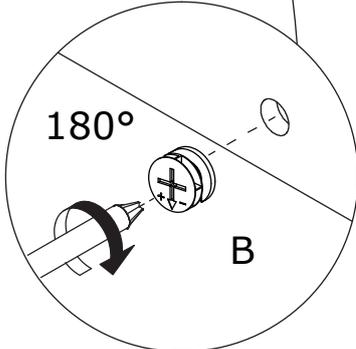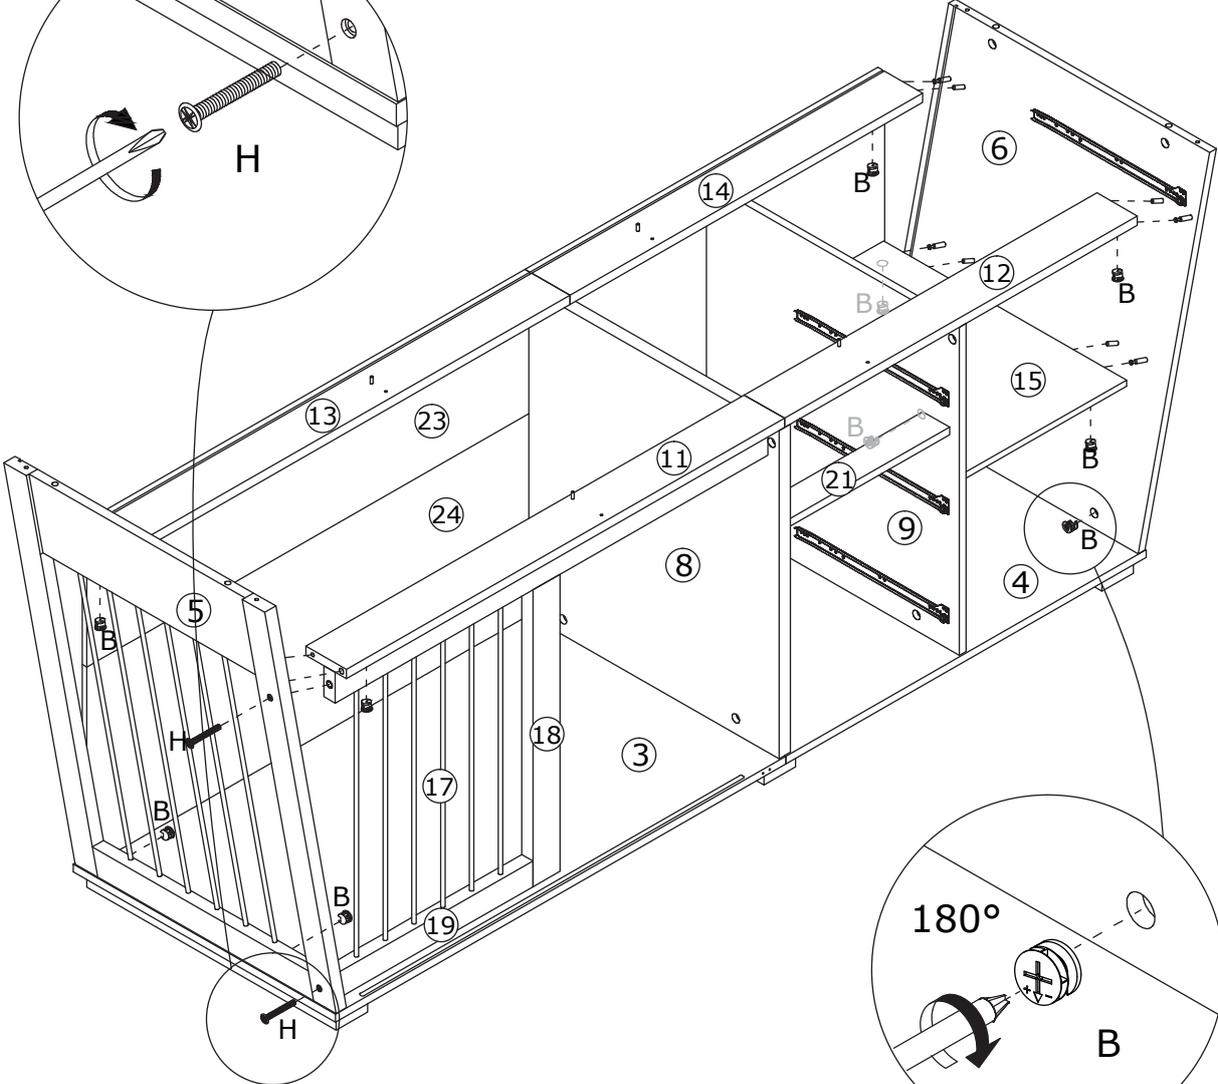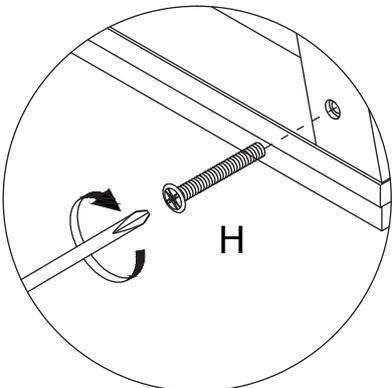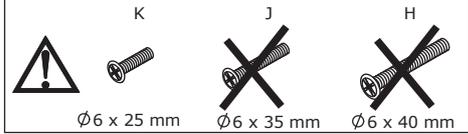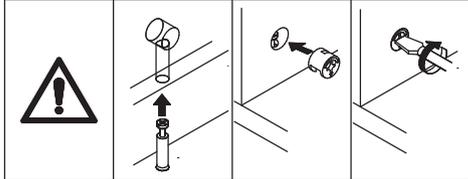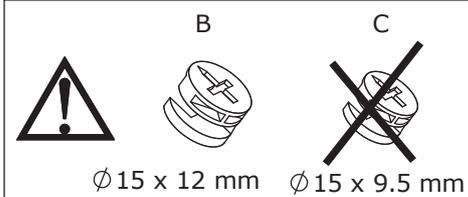

10

 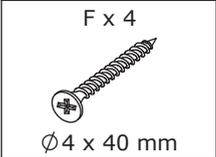


Fix board 7 to board 11, 13, 12 and 14 with screw(F) as shown.

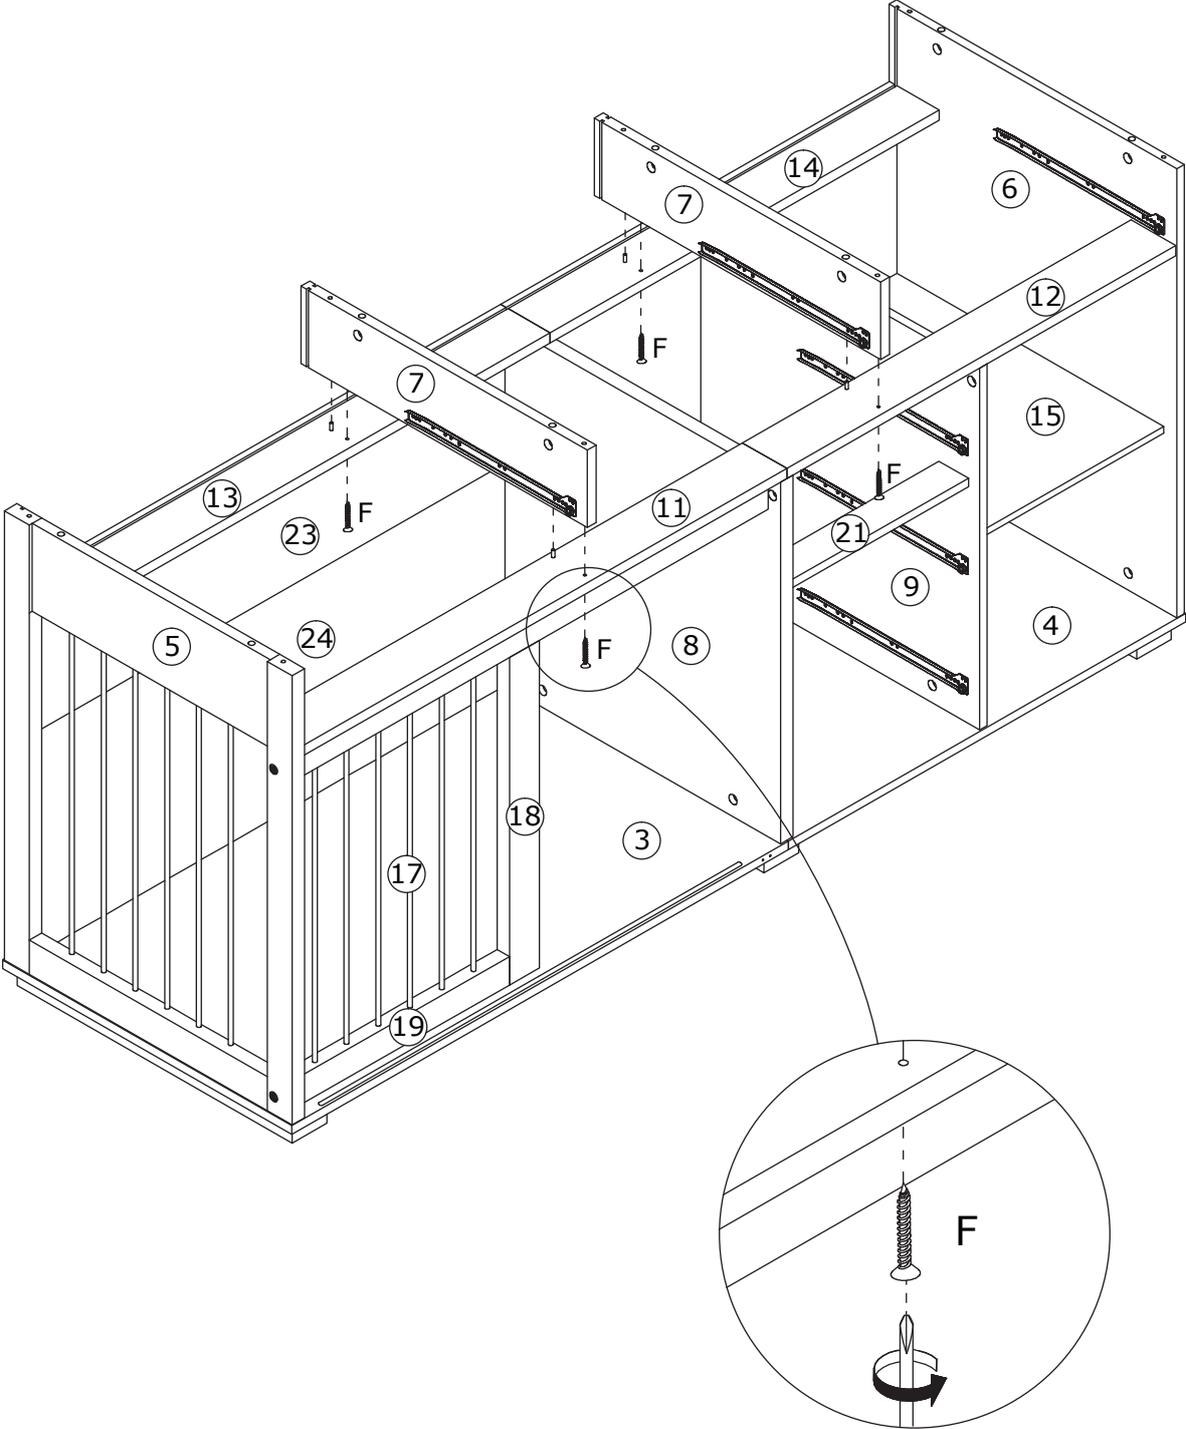


11


Insert back board 22 along grooves as shown.

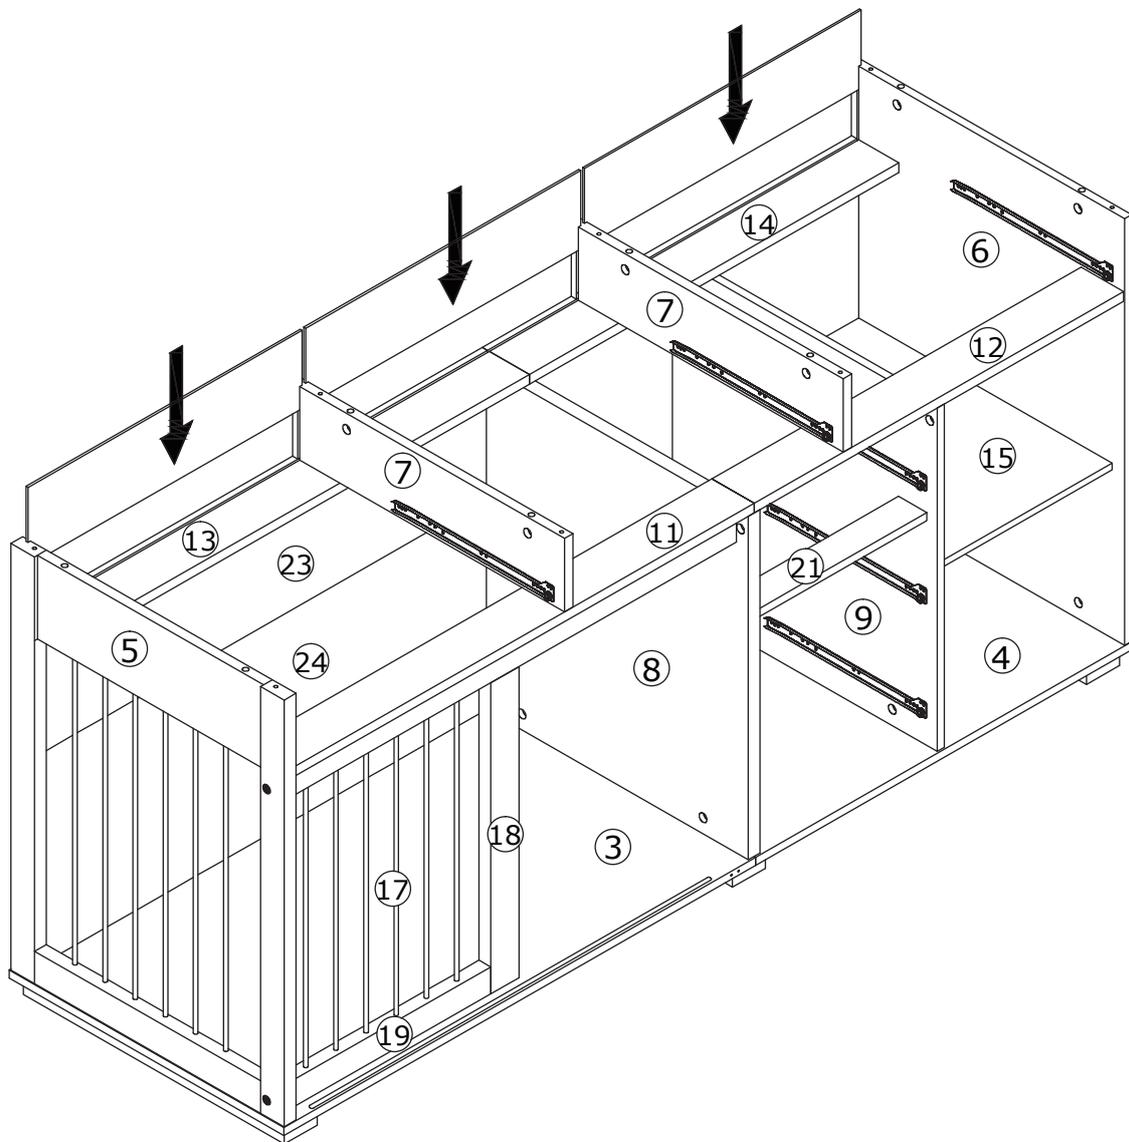




12

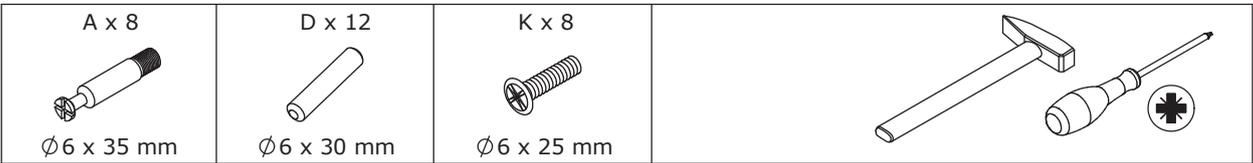


Connect board 1 to board 2 using wooden dowel(D) as shown.

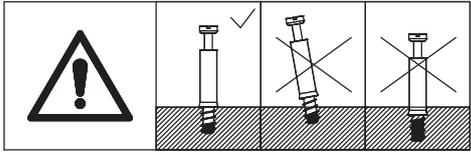



Fix board 10 to board 1 and 2 with screw(K) as shown.

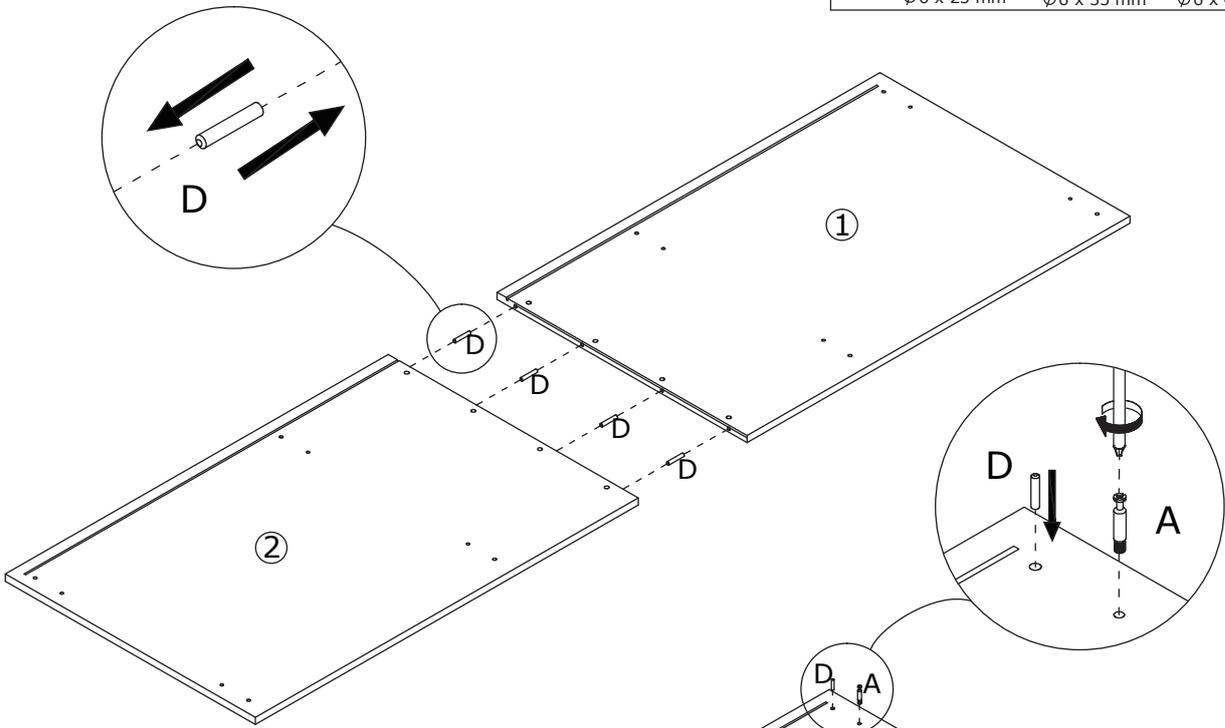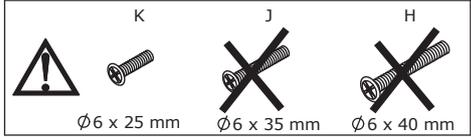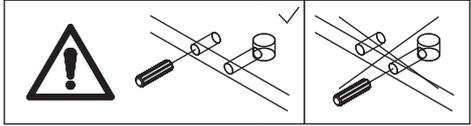





Screw eccentric rod(A) and insert wooden dowel(D) into board 2 and 1 at first.

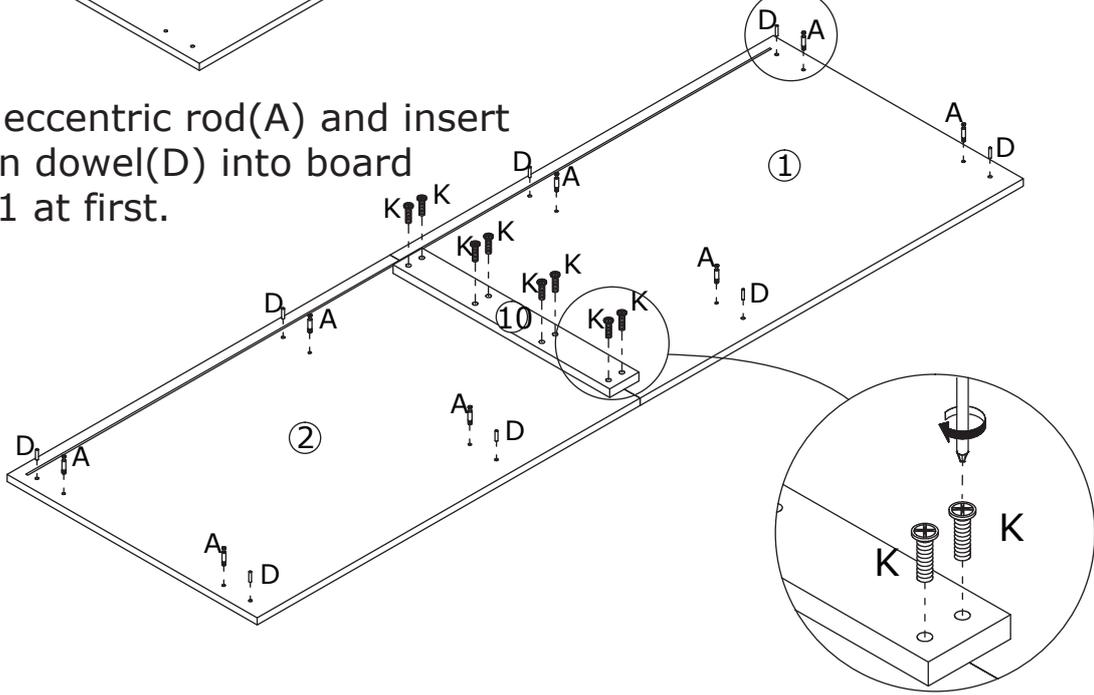


13

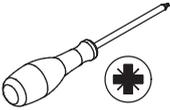
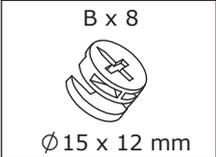


Cover board 1 and 2 to top, add cam lock(B) into and turn clockwise to tighten as shown.

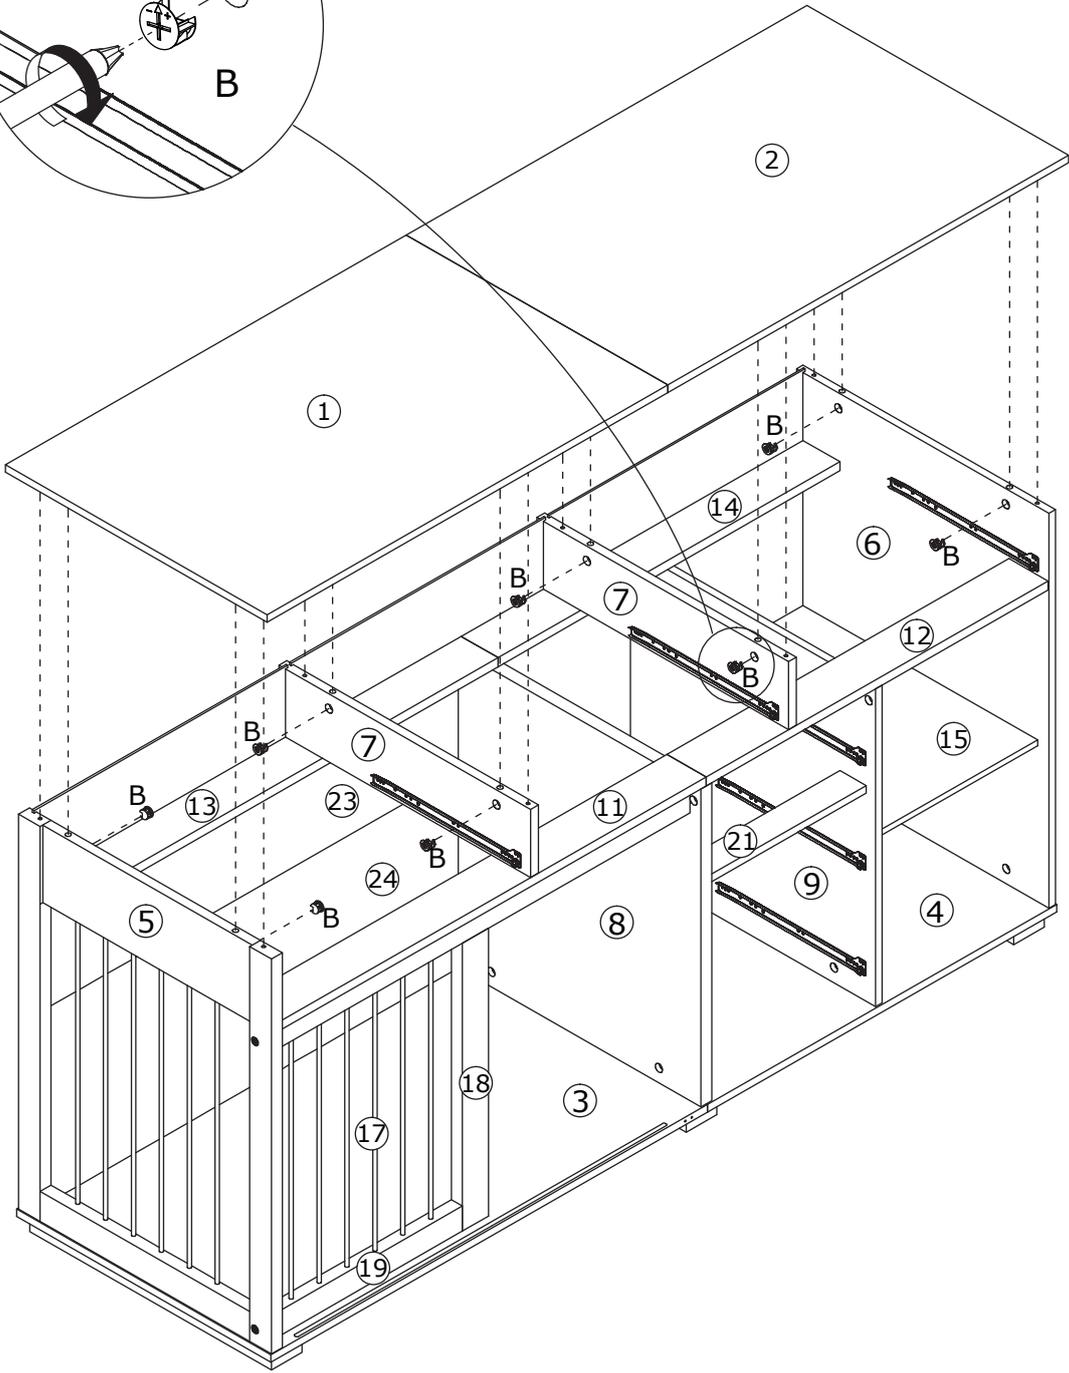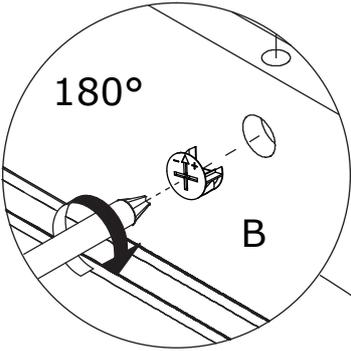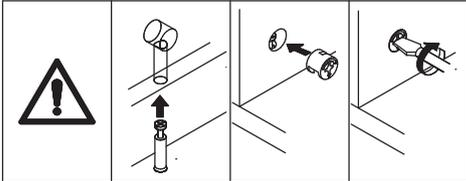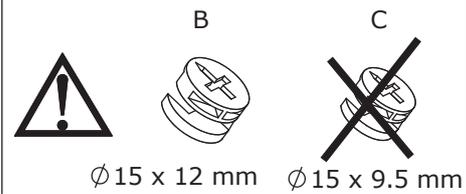

14



 
<p>A x 24  Ø6 x 35 mm</p>	<p>G x 6  Ø4 x 18 mm</p>	<p>N x 2  Ø8 x 25 mm</p>	<p>Q x 1  Ø4 x 22 mm</p>	
--	---	---	--	---

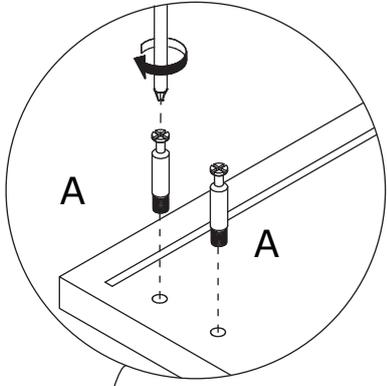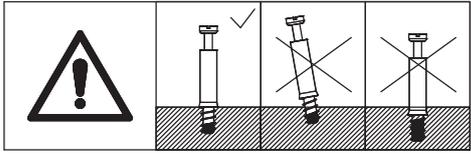



Screw eccentric rod(A) into board 30 and 35 as shown.

Fix handle(G) to board 30 and 35 as shown.



Insert part(N) into board 20 and fix handle(Q) as shown.

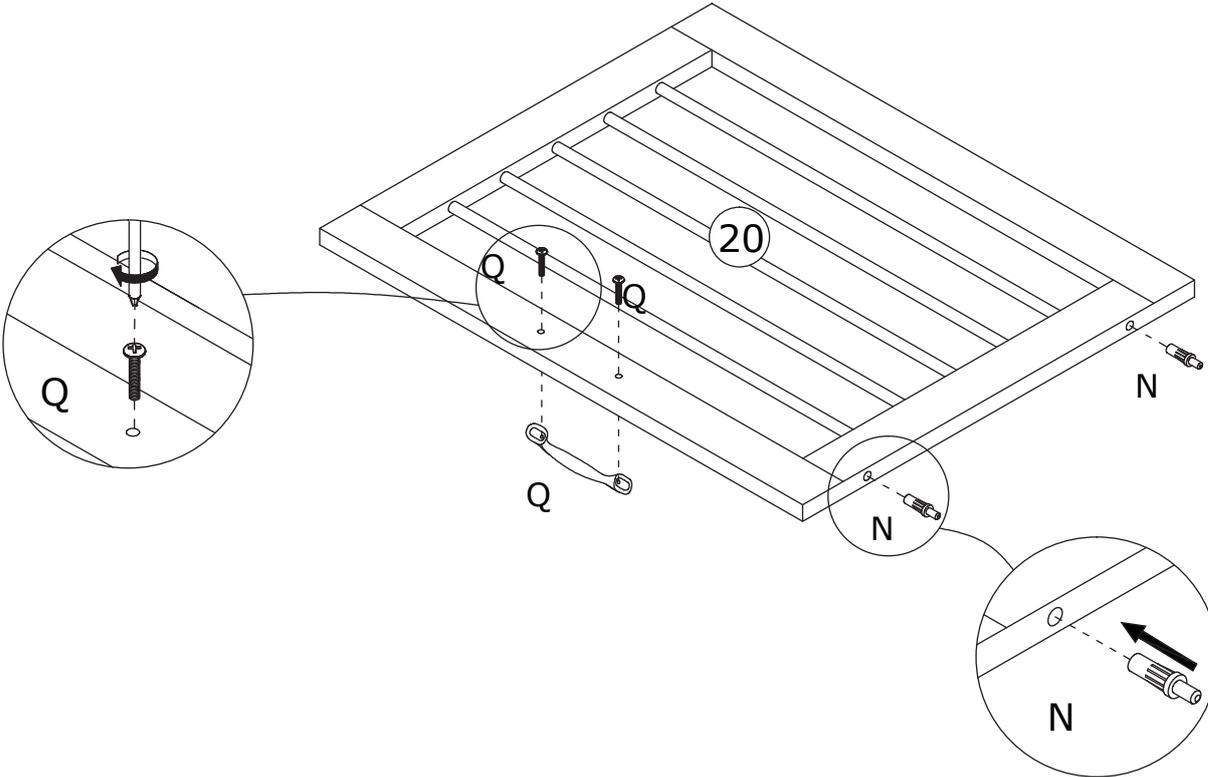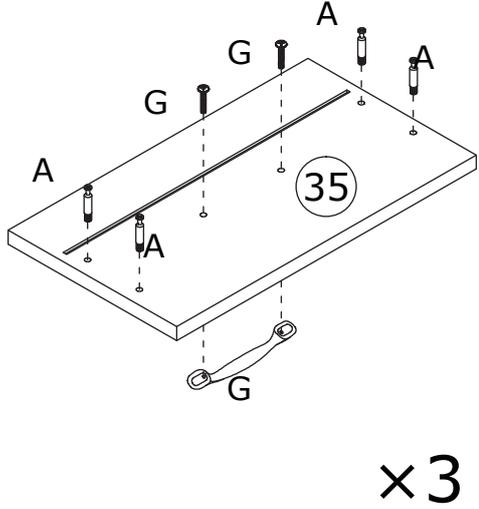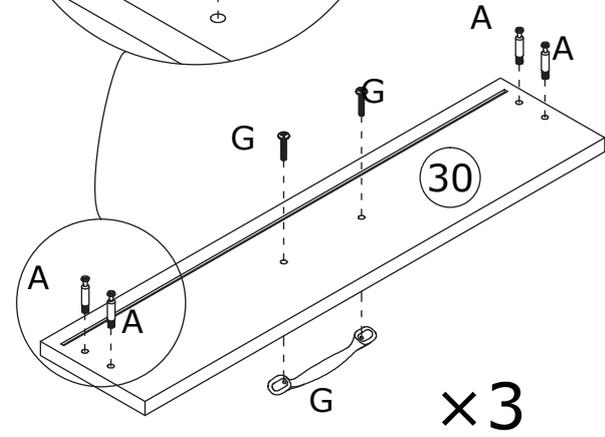

15

 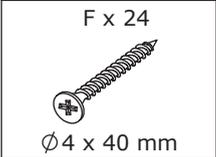



Fix board 33 to board 31 and 32 with screw(F) as shown.
Fix board 38 to board 36 and 37 with screw(F) as shown.

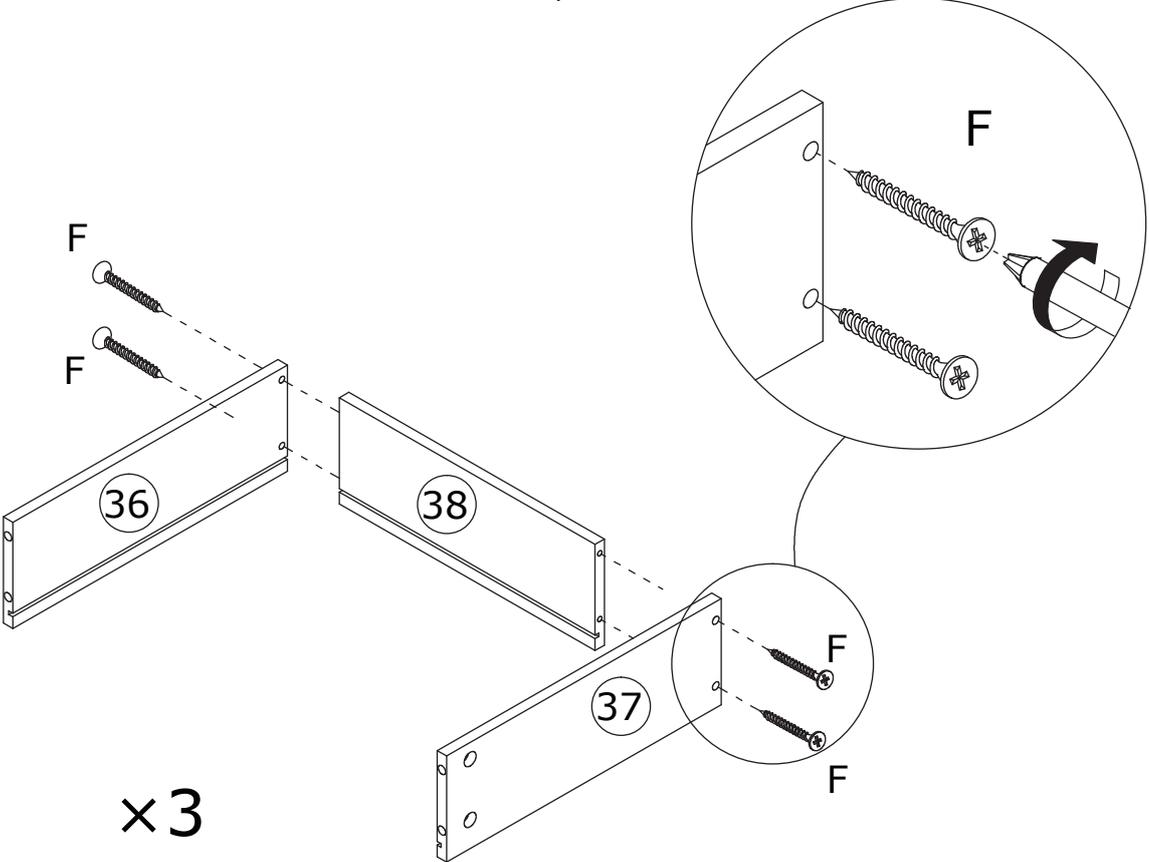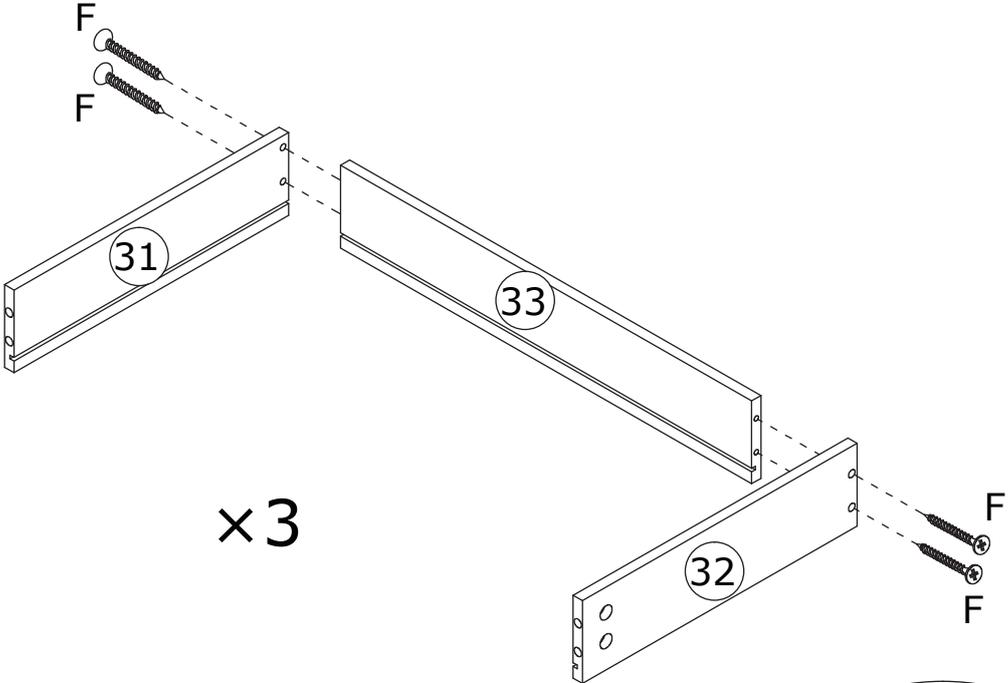

16



Insert bottom board 34 and 39 along grooves as shown.



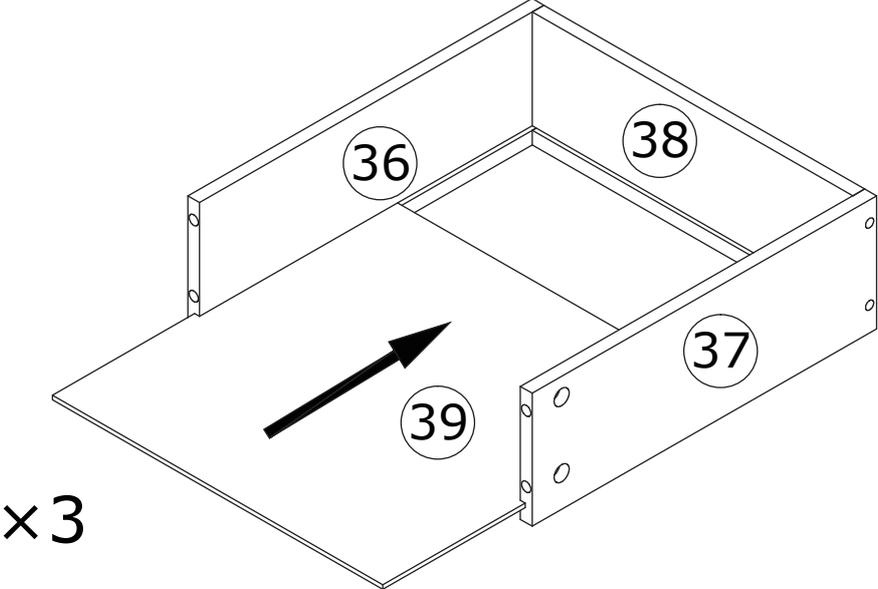
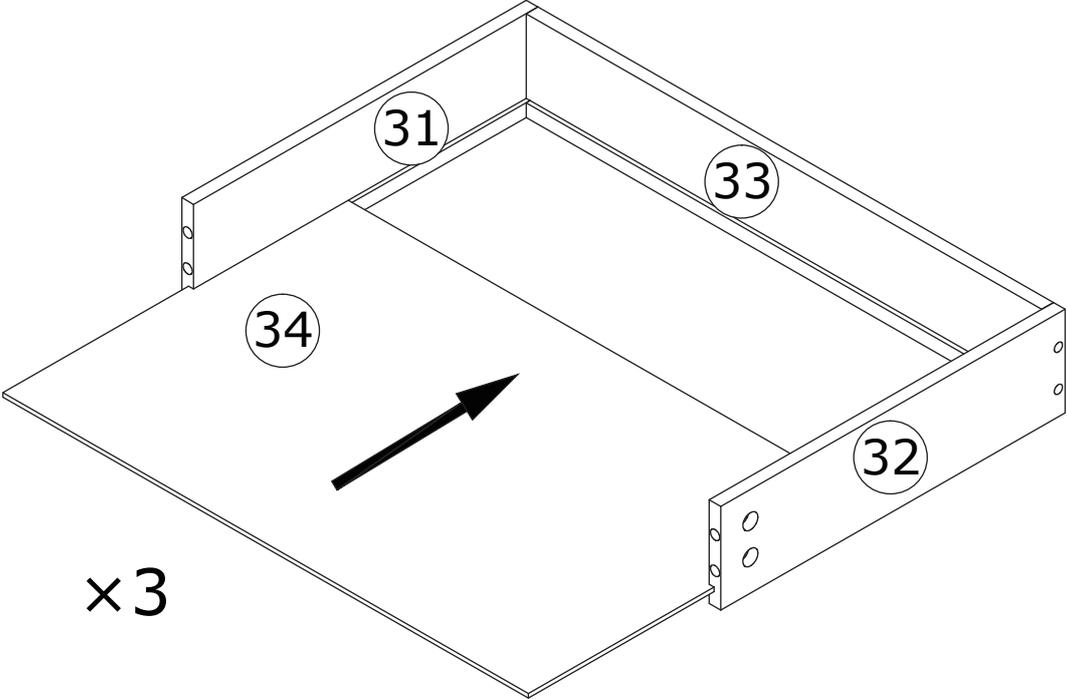


17

C x 24





 Ø15 x 9.5 mm

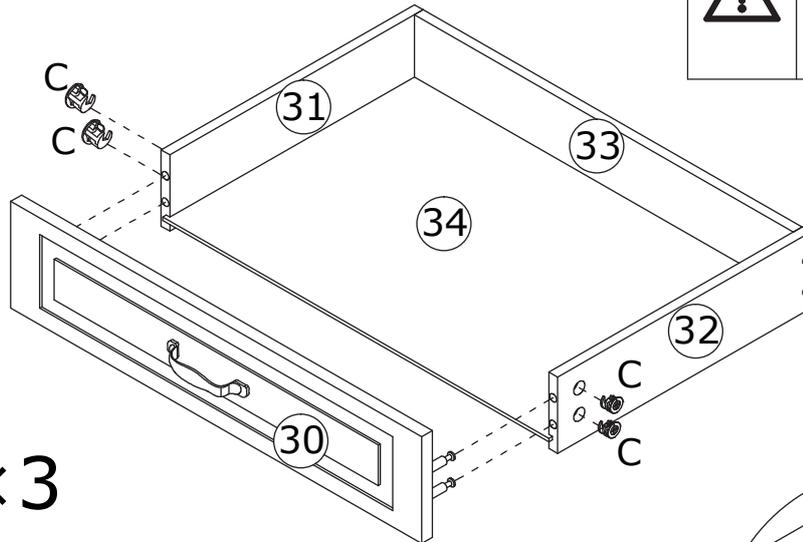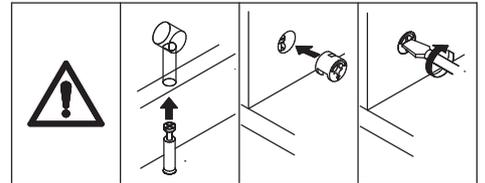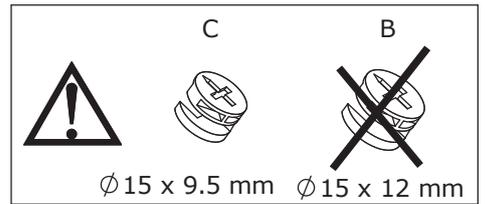


×3




Attach board 30 to board 31 and 32;
board 35 to board 36 and 37, add cam lock(C)
and turn clockwise to tighten as shown.

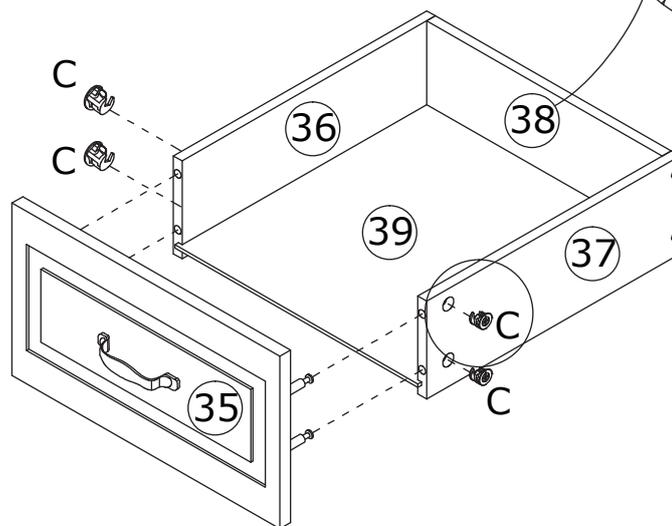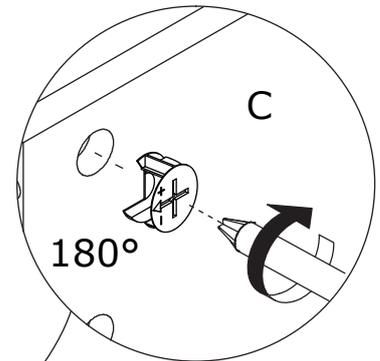


×3

 18



<p>E x 24</p>  <p>Ø3 x 14 mm</p>	<p>L x 6</p>  <p>300 mm</p>	<p>M x 6</p>  <p>300 mm</p>	
---	--	--	---

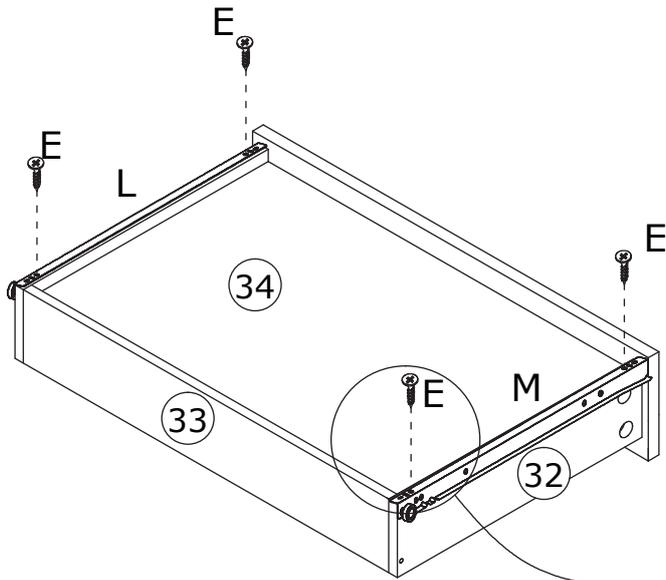  


Fix runner(L) and (M) to board 31/36 and 32/37 with screw(E) as shown.

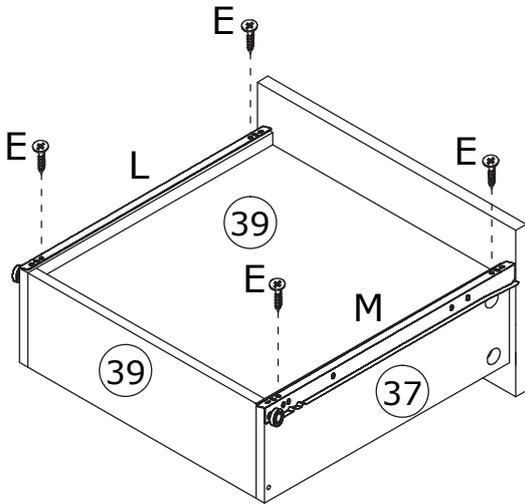


19

 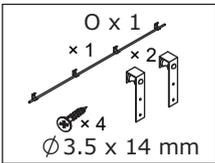

Fix part(O) to board 16 as shown.

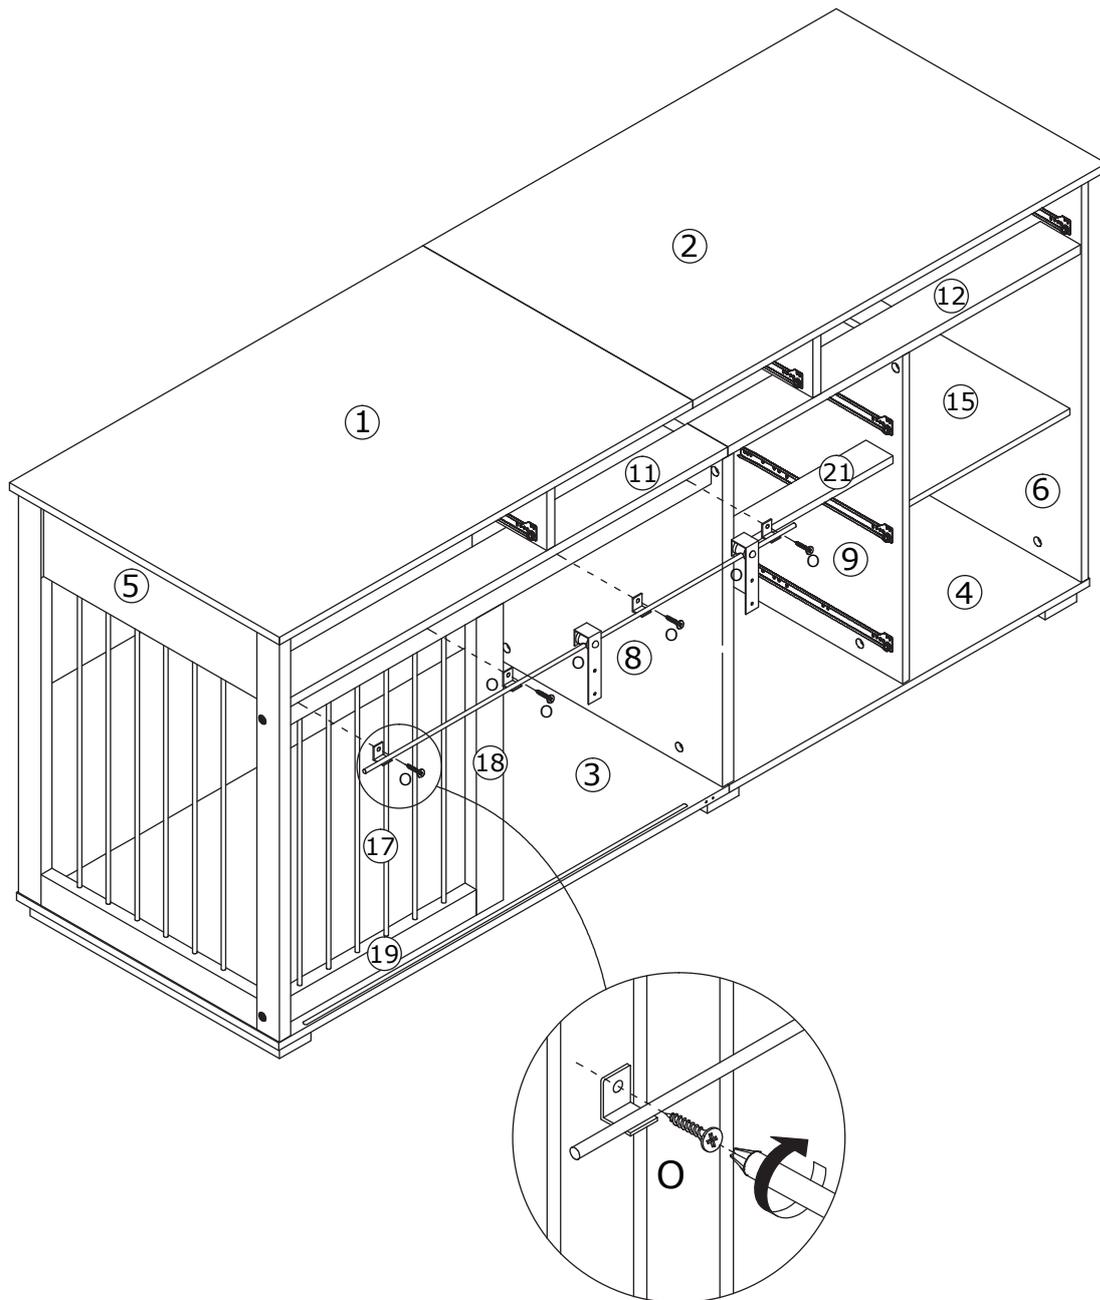


20
 
<p>O x 4</p>  <p>Ø 3.5 x 14 mm</p>	<p>P x 1</p>  <p>x 1</p>  <p>x 6</p> <p>Ø 3.5 x 14 mm</p>	 
---	---	---


Assemble door 20 to the cabinet, and fix to part(O) as shown.

Fix part(P) to board 20 and 3 as shown.

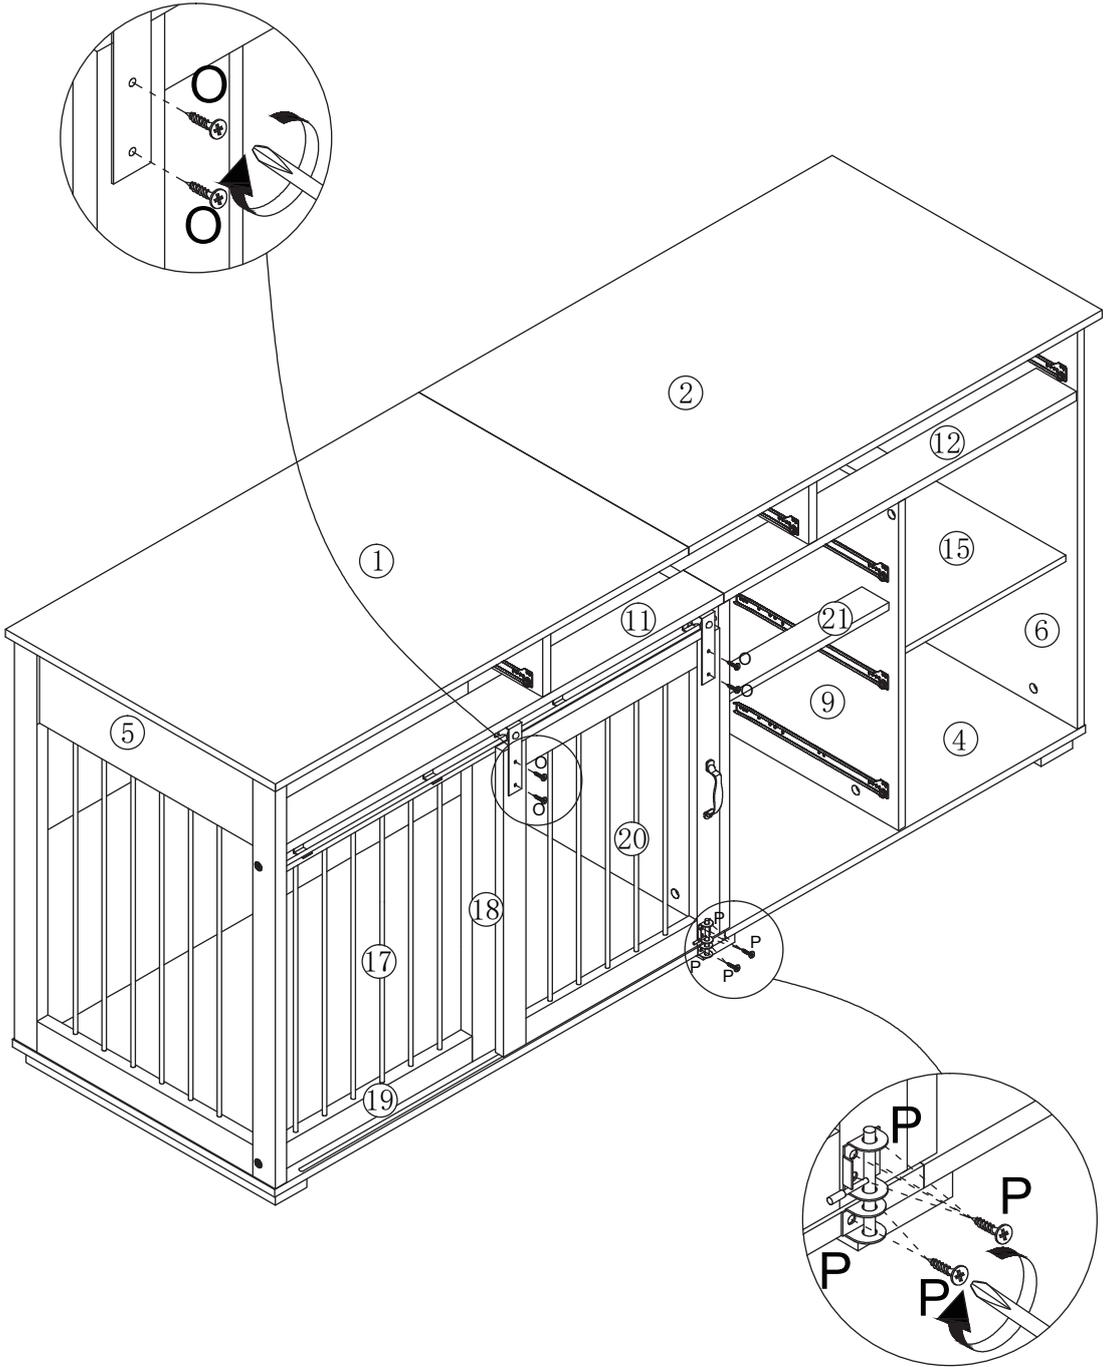

21

Insert all drawers in.

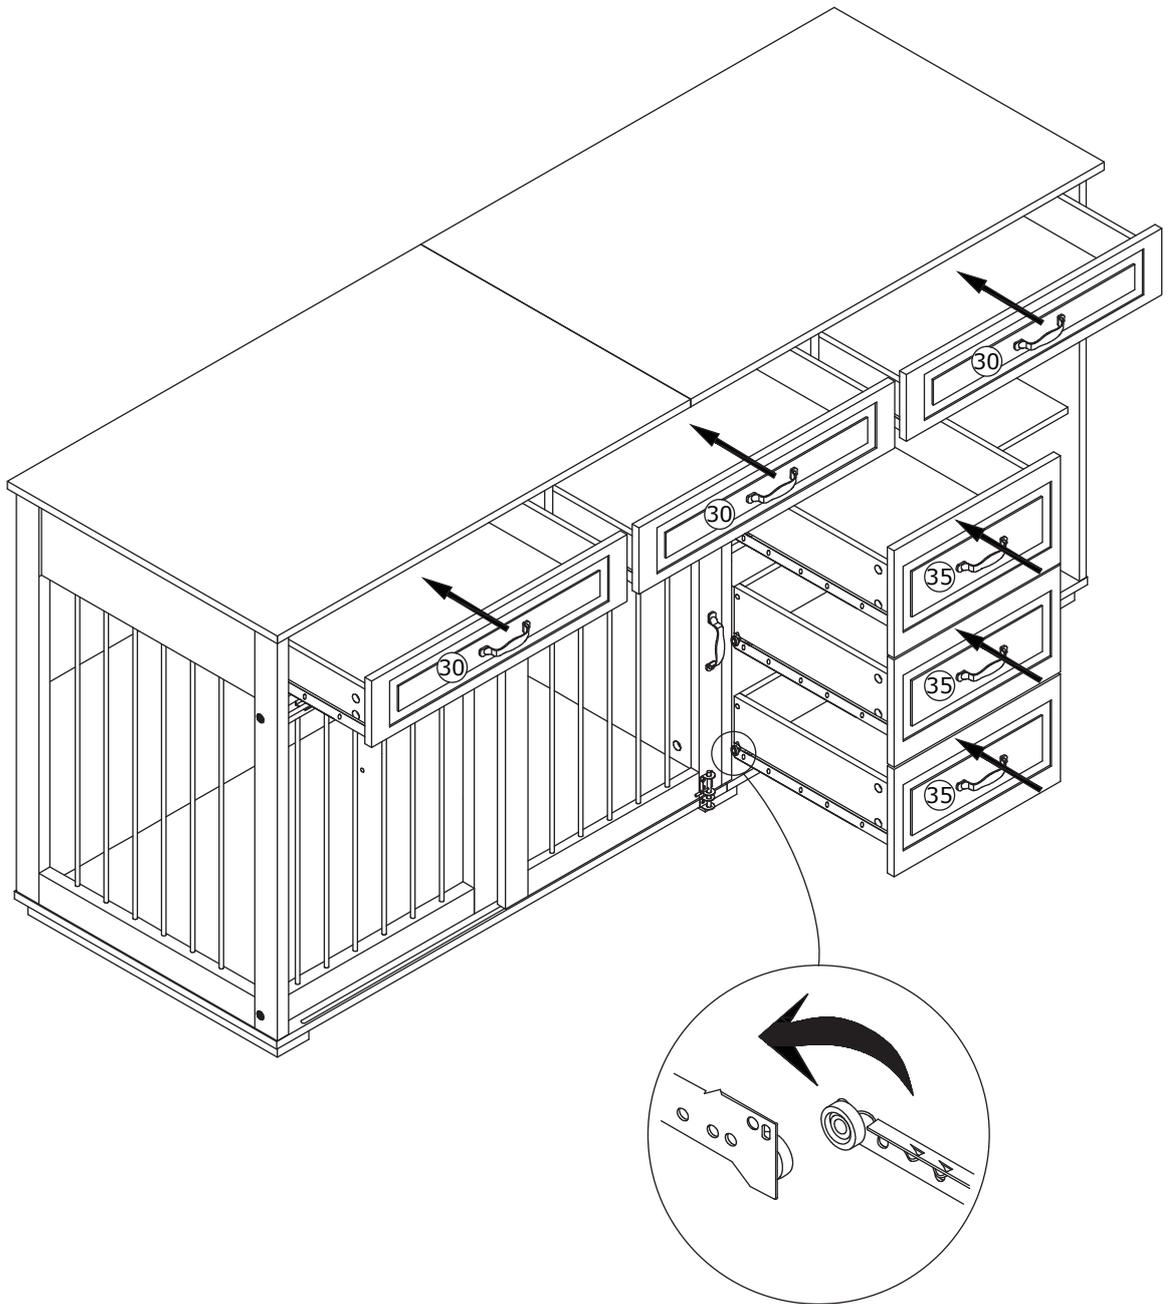


22


R x 6



 Ø25 x 3 mm



Attach the anti-slip pad(R) to the bottom of the cabinet.

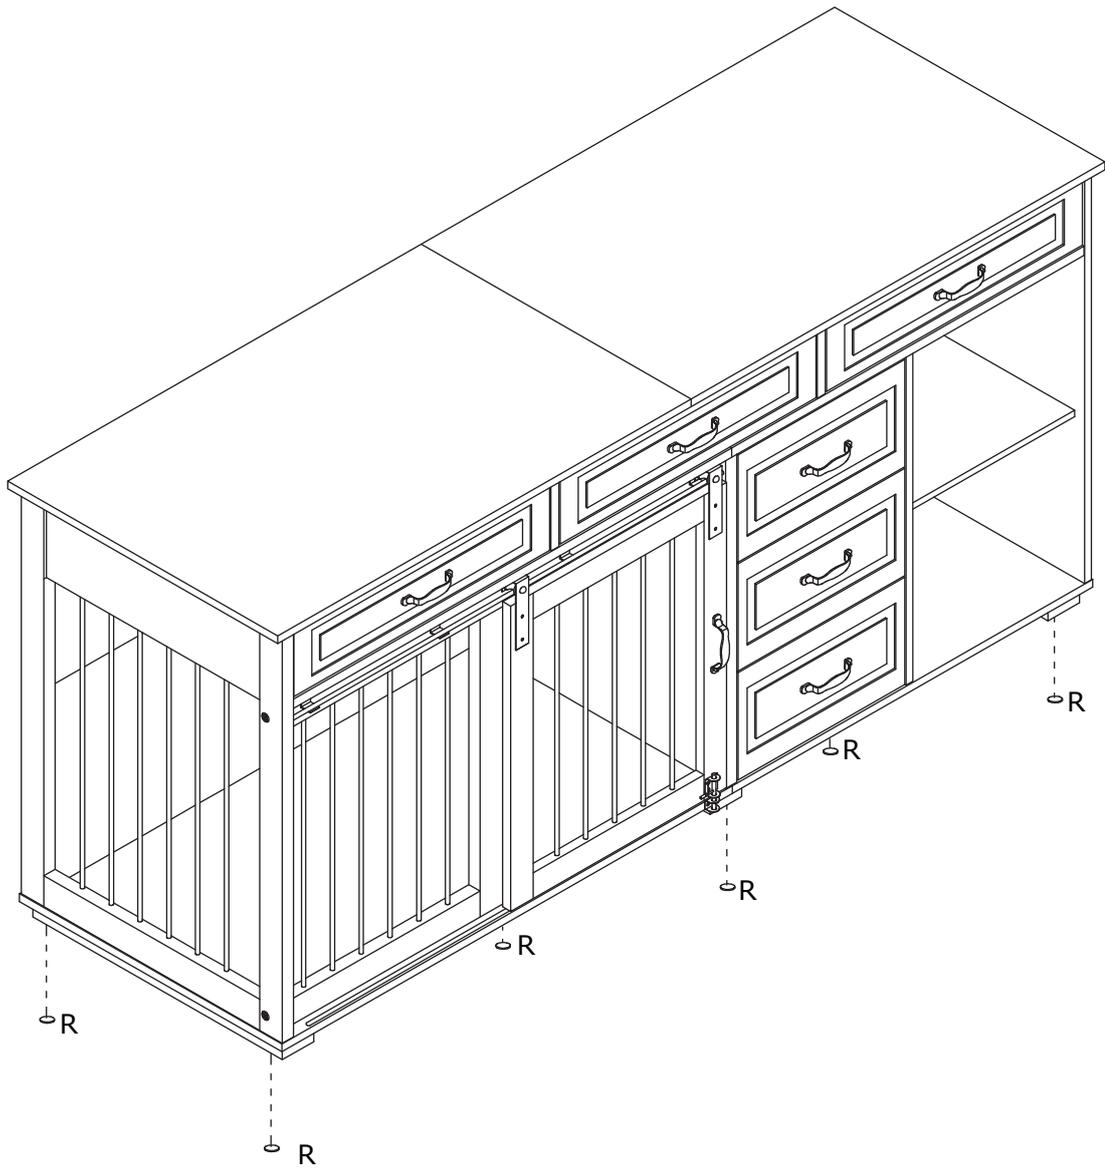

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOU ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.

AFTER-SALES CONTACT



feedbackstation@163.com



(303)800-6387