

 
ASSEMBLY INSTRUCTIONS

MODEL #


243247 243248

Questions?

GIVE US A CALL: 1-888-980-5122
MON-FRI 8:30AM - 5:30PM (PT)

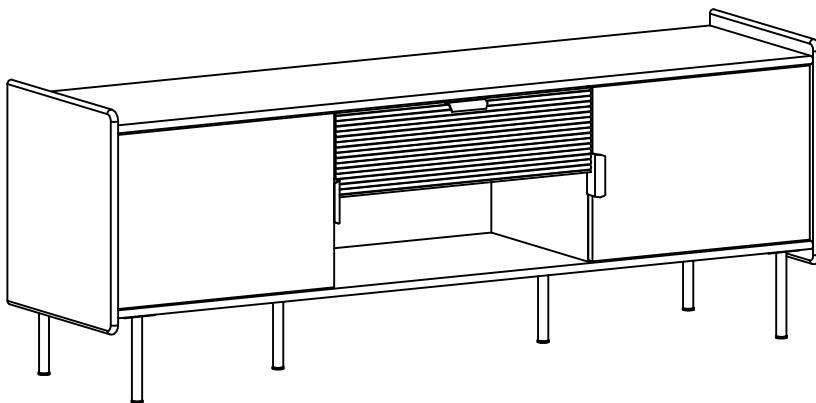

Screwdriver
(Not included)

 

(Included)
Allen Wrench



2 - People



EASY —————> DIFFICULT

The Assembly Rating is a
5-point system showing the
level of effort needed to
assemble a specific product.



Thank you for your purchase!

We hope you enjoy this new addition to your home for many years to come.

Our commitment to providing quality products does not simply end when you purchase our product. We fully stand behind our products from start to finish. Our customer service department is available Monday – Friday 8:30 AM – 5:30 PM Pacific Time and can help with assembly questions as well as, if necessary, replacing damaged or missing parts. To help expedite our service, please have these assembly instructions readily available, along with your order receipt.



Consumer Hotline
Toll-Free 1-888-980-5122



WEBSITE
www.foagroup.com



Monday to Friday
8:30AM- 5:30PM (PT)



E-MAIL
cs.ec@foagroup.com



foagroup



FurnitureOfAmerica



CHECK BEFORE STARTING

☐

Are you missing anything?

Double-check all parts, hardware and accessories listed are all accounted for.

☐

Check out our Quick Tips!

We recommend reviewing the pre-assembly handouts. Even experts need a refresher now and then!

☐

Should we send any replacements?

Are there any irregularities or flaws in the parts? We can send replacements!

☐

Prep Time!

Please review the assembly instructions and all diagrams prior to assembling.

PRE ASSEMBLY INTRODUCTION

We understand building ready-to-assemble furniture can be a challenging experience for some. To help avoid confusion, we have provided some helpful tips that may speed up the process.



Teamwork

ALWAYS have at least two people to help with transporting and assembling the product to avoid potential injury and/or damage.



Suitable Location

Assembling near the area of the intended location is highly recommended.



Sufficient Space

Make sure you have enough space to move around during the assembly.



Avoid Scratches

Use cardboard, blankets or a carpeted area while assembling furniture to prevent to prevent scratches and damages.



Flat Surface

Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

ASSEMBLY AND CARE ADVICE



**FAILURE TO FOLLOW THE GUIDELINES BELOW MAY
RESULT IN INJURY AND/OR PROPERTY DAMAGE.**



Position each part correctly
and insert screws or bolts into
their respective holes.



Turn clockwise to tighten and
only tighten when step is
completed or when instructed
to do so.



Use the appropriate hand tools
or power tools for assembly.
Select steps, such as tightening
screws and/or bolts, may require
hand tools to avoid causing
damage during assembly.



Save the instructions and store
any supplied tools for later
maintenance.



 
After two weeks, check and
tighten any loose hardware and
repeat again every six months
thereafter.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.


TV STAND




- Please keep instructions for future reference.
- Check the quantity and irregularity of parts and hardware before you start.

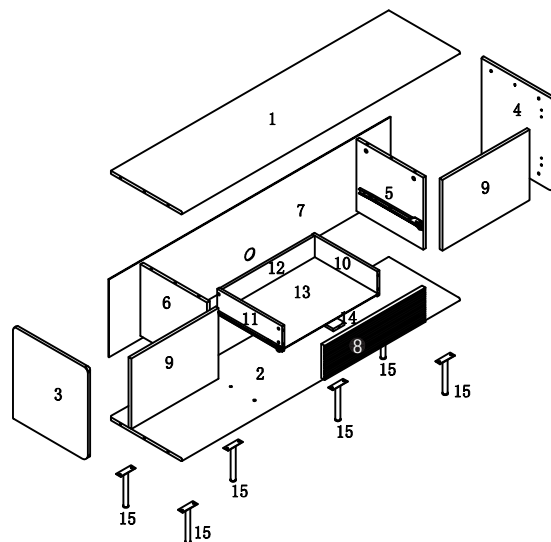


PARTS

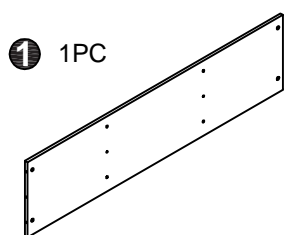 


TOP

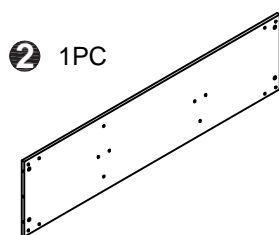 


BOTTOM PANEL

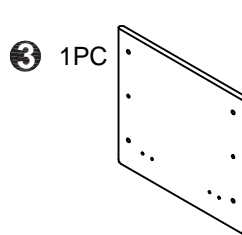 


LEFT SIDE PANEL

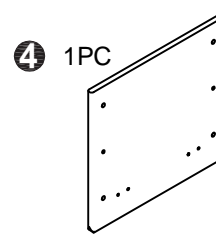 


RIGHT SIDE PANEL

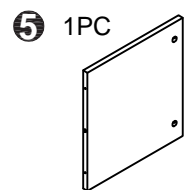 


RIGHT DIVIDER PANEL

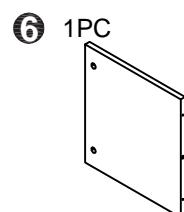 


LEFT DIVIDER PANEL

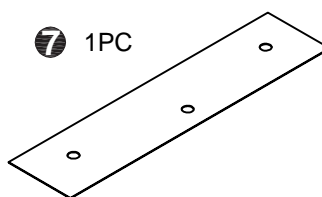 


BACK PANEL

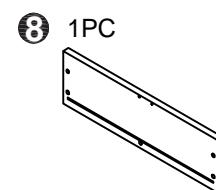 


DRAWER FRONT PANEL

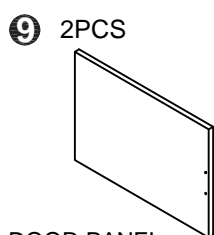 


DOOR PANEL

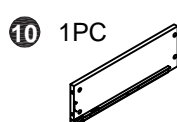 


DRAWER RIGHT
SIDE PANEL

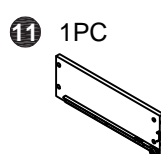 


DRAWER LEFT
SIDE PANEL

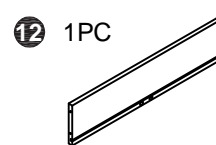 


DRAWER BACK PANEL

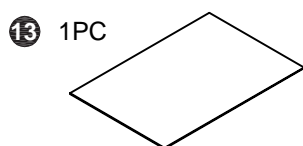 

DRAWER
BOTTOM PANEL

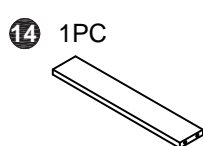 


DRAWER
BOTTOM SUPPORT

 

LEG

 
HARDWARE



CAMBOLT
L29 12PCS



 CAMLOCK L
Ø15 12PCS



DOWEL
Ø8X25 8PCS



STICKER
Ø22 12PCS



SMALL SCREW
Ø4X35 4PCS



NAIL
16PCS



FLATHEAD SCREW
Ø6X12 12PCS



 
SMALL SCREW
Ø4X30 6PCS



SMALL CAMBOLT
L20 5PCS



SMALL CAMLOCK L
Ø12 5PCS



SMALL SCREW
Ø3.5x12 6PCS



HANDEL
#64 3PCS



HINGE
301C 4PCS

 


SMALL SCREW
Ø4X16 24PCS

ASSEMBLY INSTRUCTIONS

1

HARDWARE **A** X 4PCS

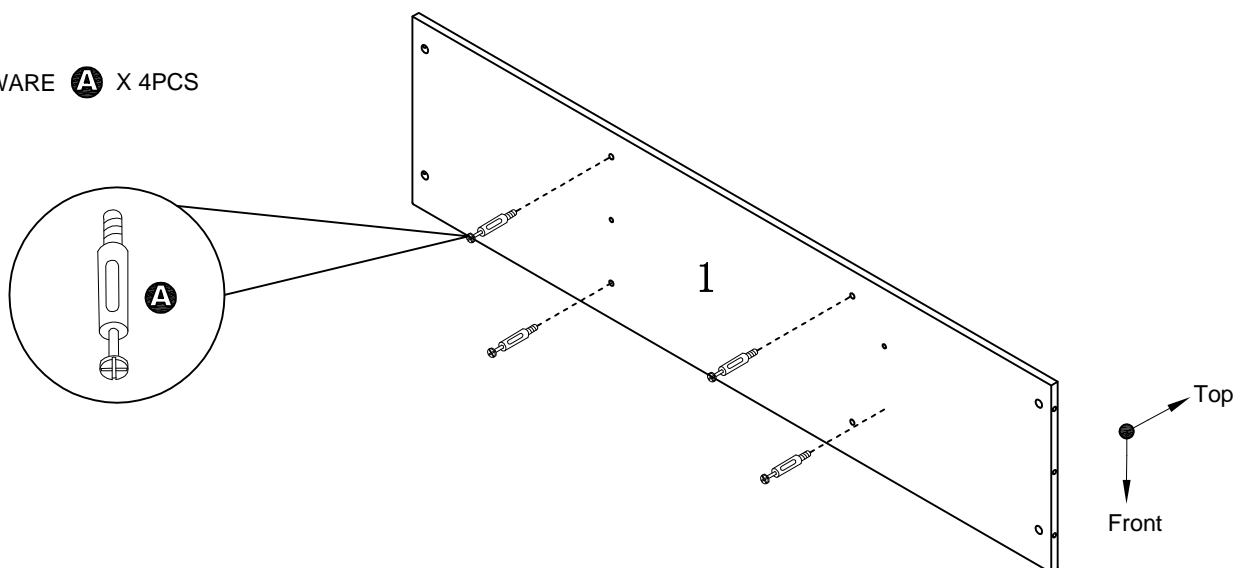


2

HARDWARE **B** X 2PCS

HARDWARE **C** X 1PC

 HARDWARE **D** X 2PCS

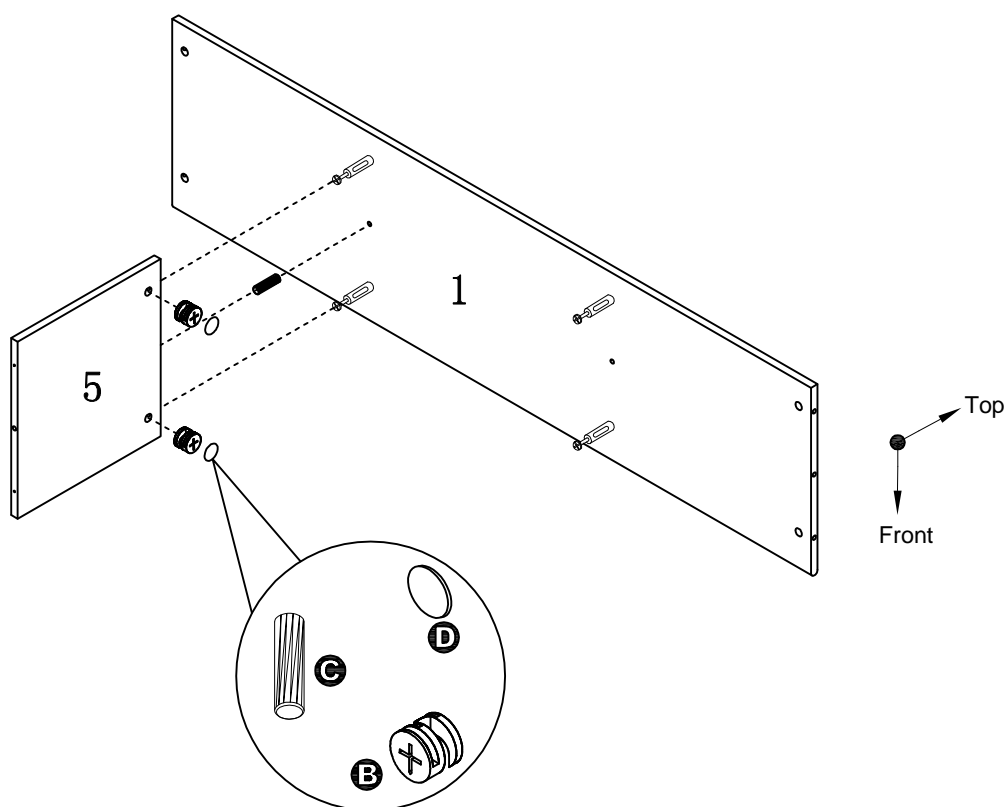

ASSEMBLY INSTRUCTIONS

 
3

HARDWARE **B** X 2PCS

HARDWARE **C** X 1PC

HARDWARE **D** X 2PCS

Top
Front

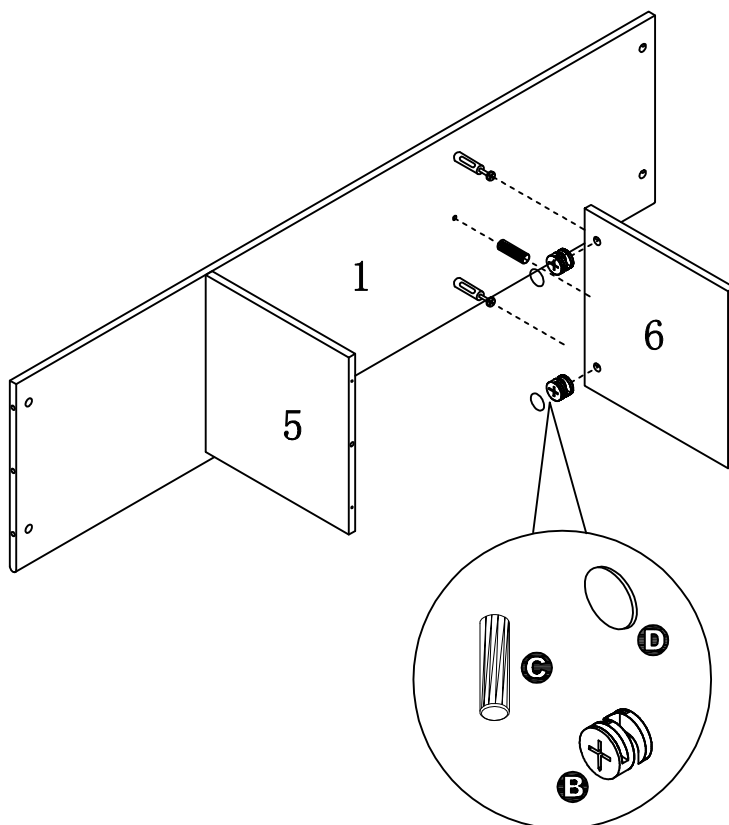


4

HARDWARE **C** X 2PCS

HARDWARE **E** X 4PCS

 
Top
Front

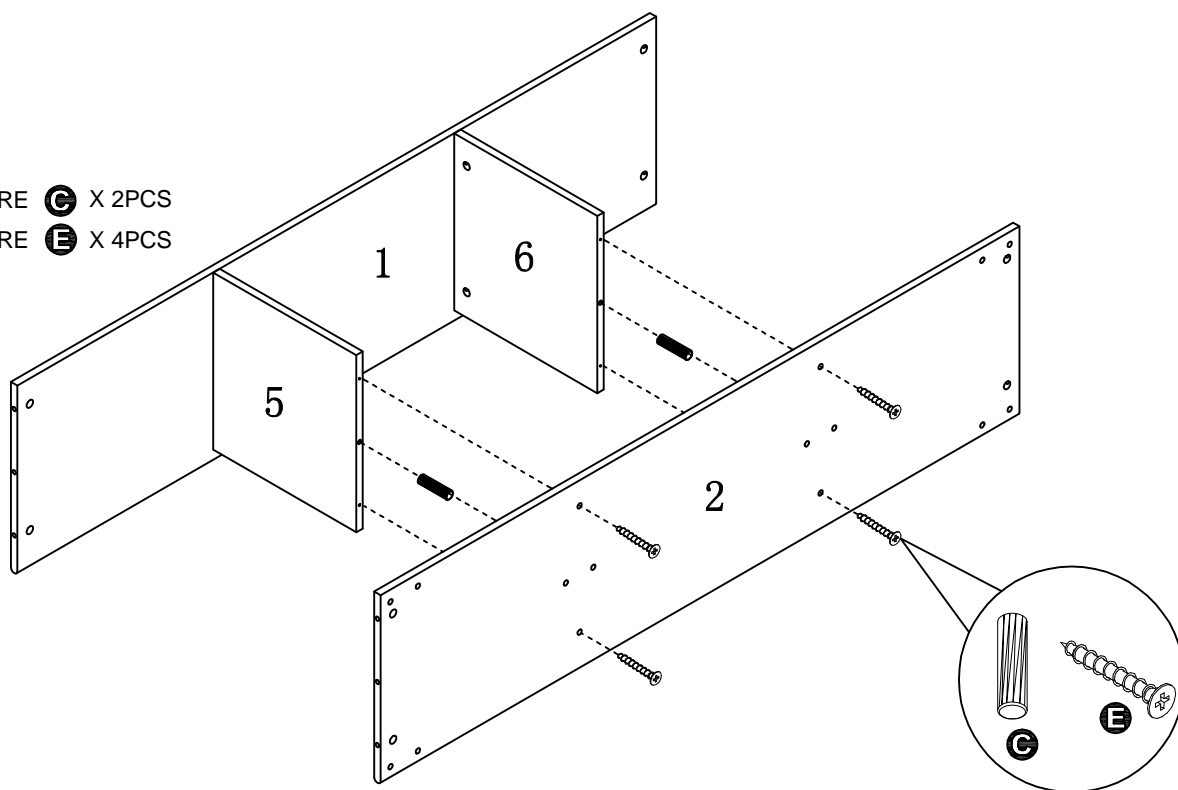

ASSEMBLY INSTRUCTIONS

5

 HARDWARE **A** X 4PCS

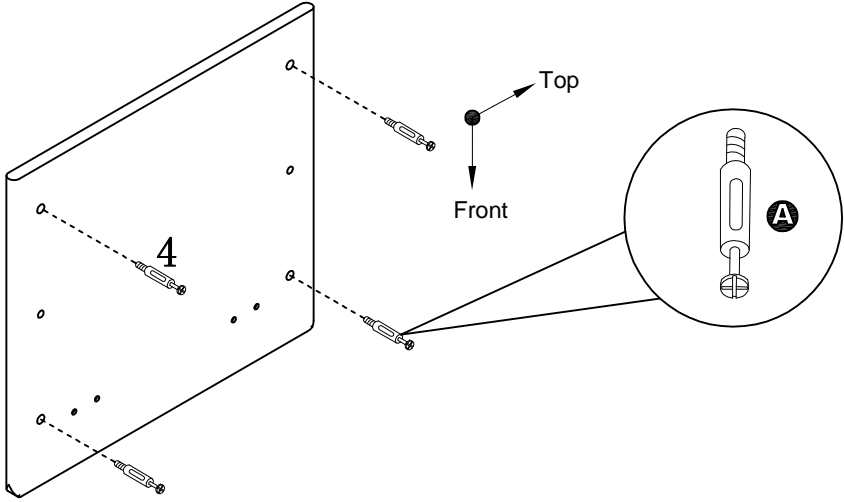


6

HARDWARE **B** X 4PCS

HARDWARE **C** X 2PCS

 
HARDWARE **D** X 4PCS

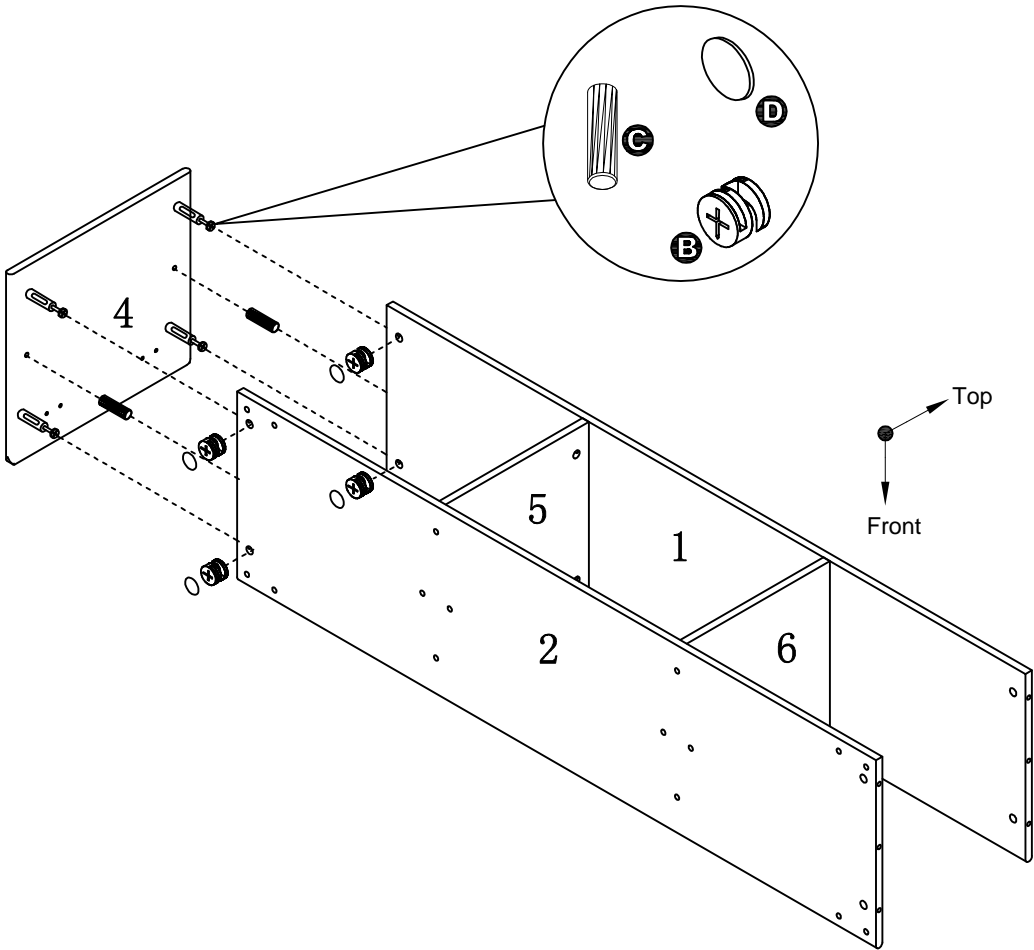

ASSEMBLY INSTRUCTIONS

7

 HARDWARE **A** X 4PCS

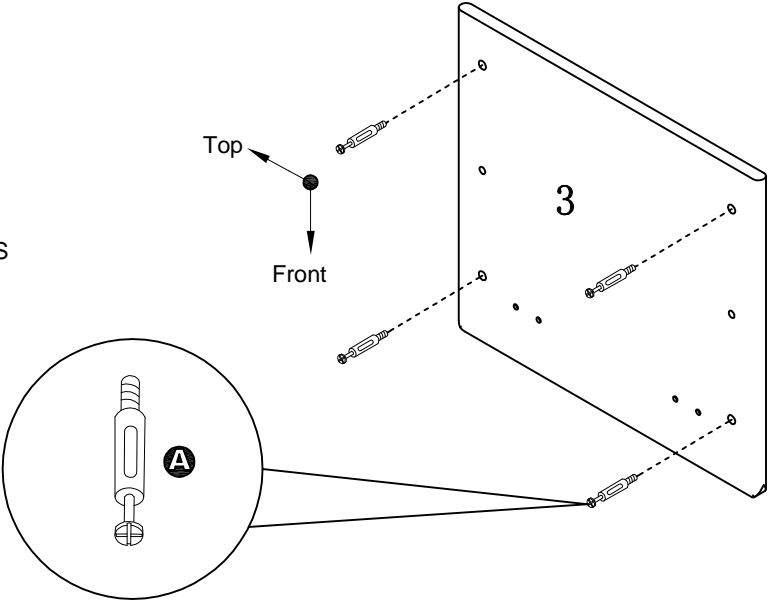


8

HARDWARE **B** X 4PCS

HARDWARE **C** X 2PCS

 
HARDWARE **D** X 4PCS

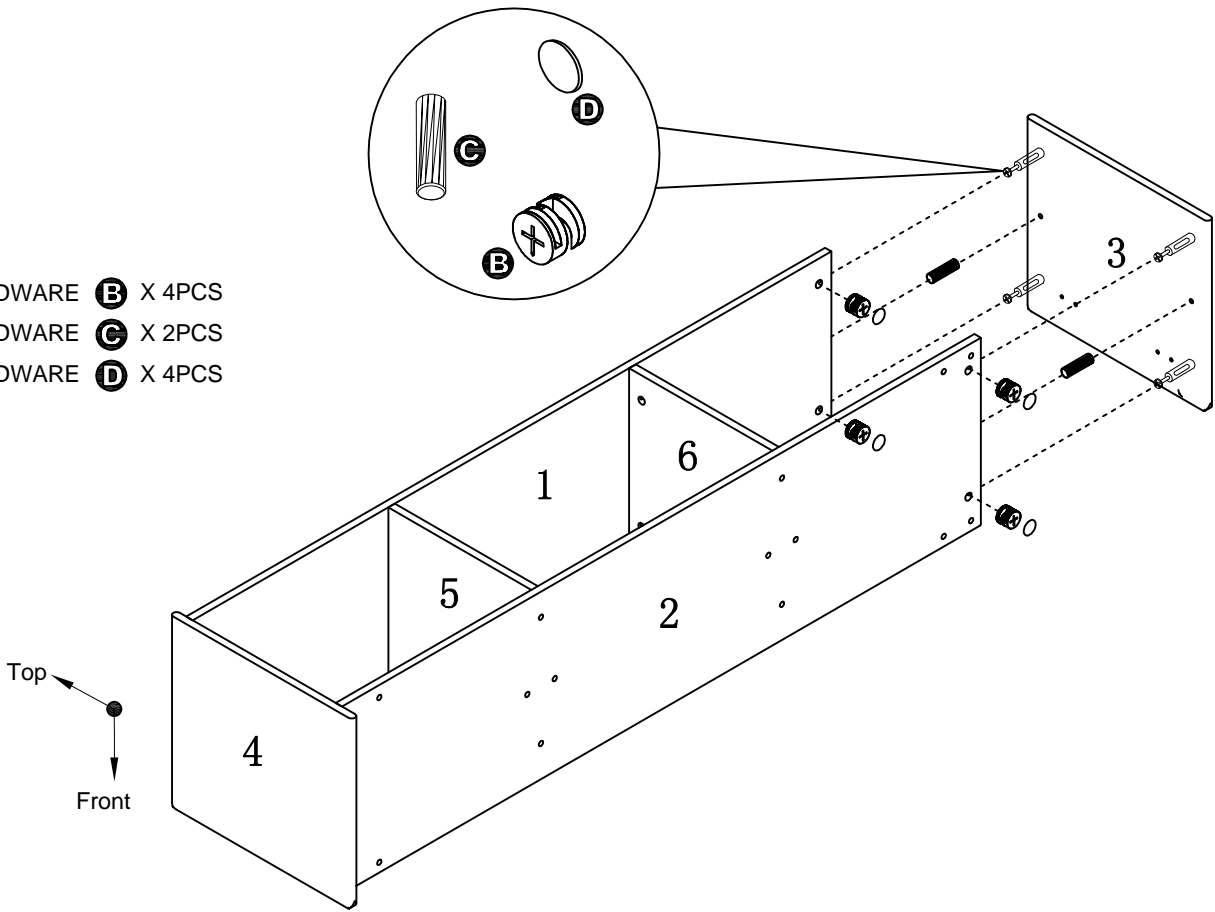

ASSEMBLY INSTRUCTIONS


9

 HARDWARE **F** X 16PCS

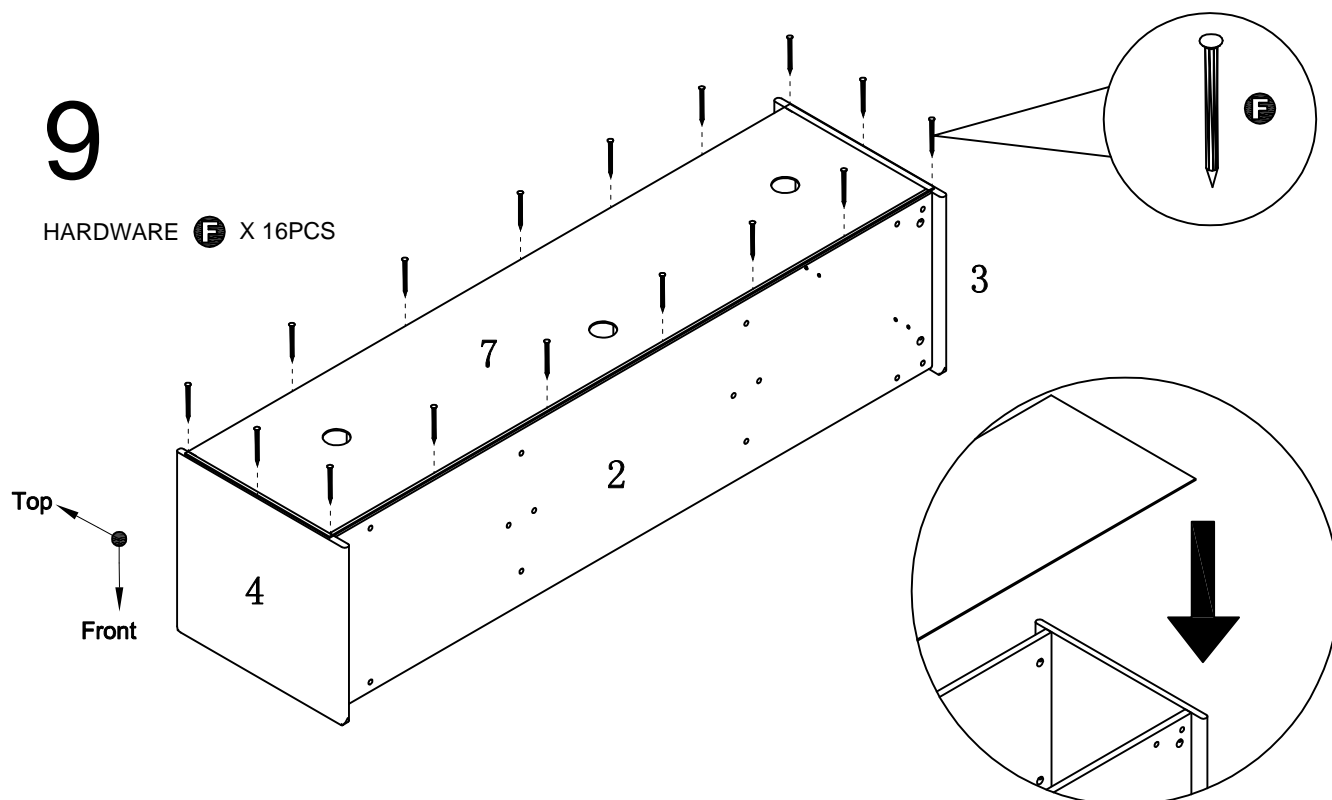

10

 
HARDWARE **G** X 12PCS

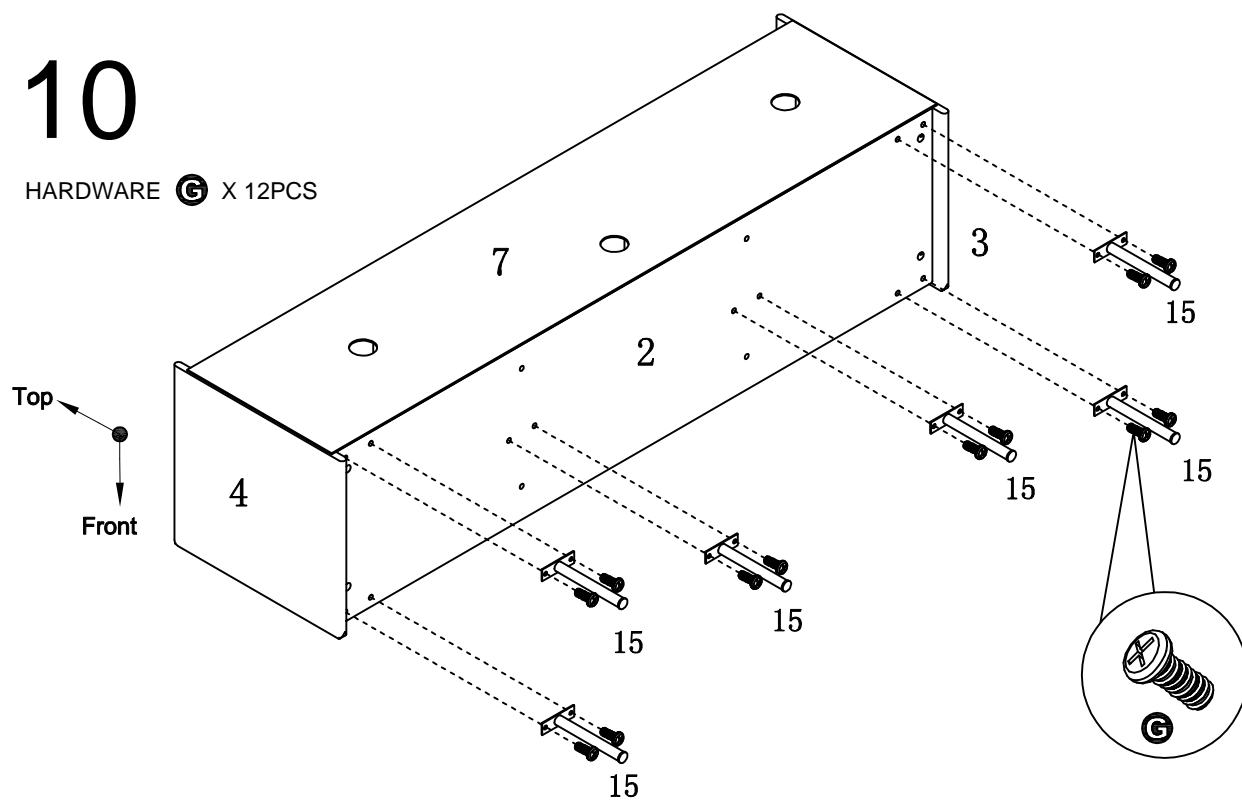

ASSEMBLY INSTRUCTIONS


11

 HARDWARE  X 4PCS

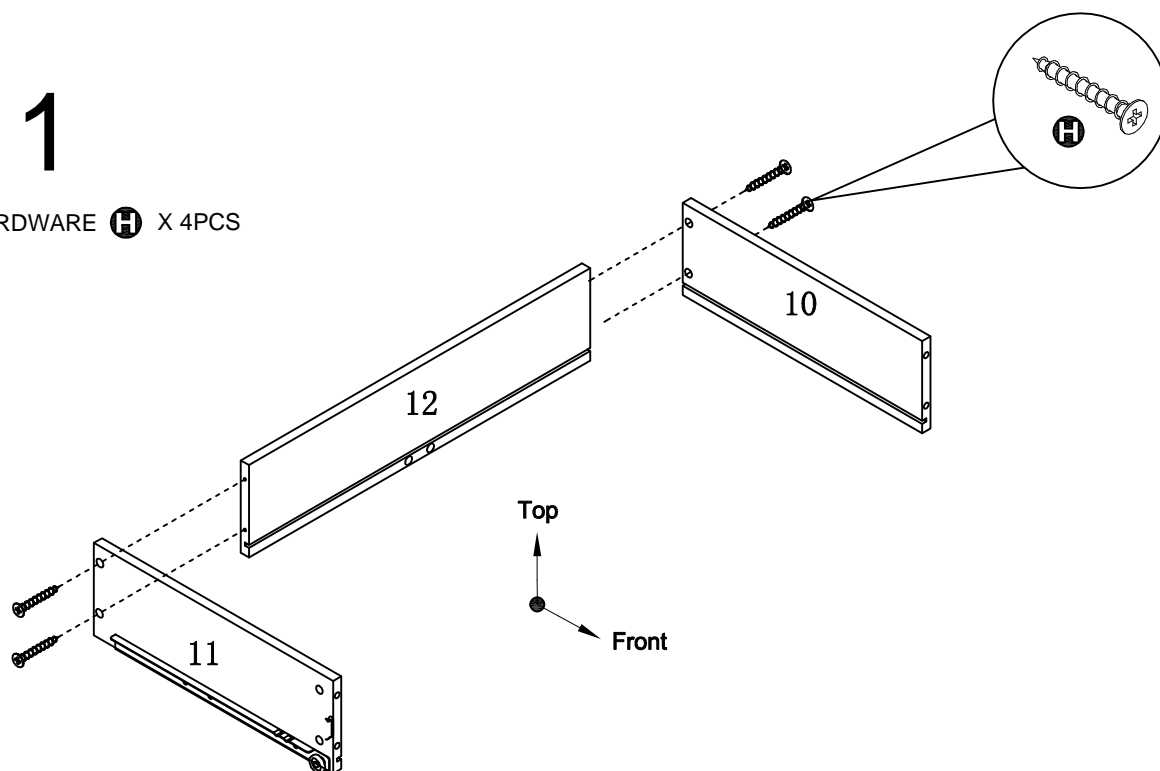


12

 HARDWARE  X 2PCS

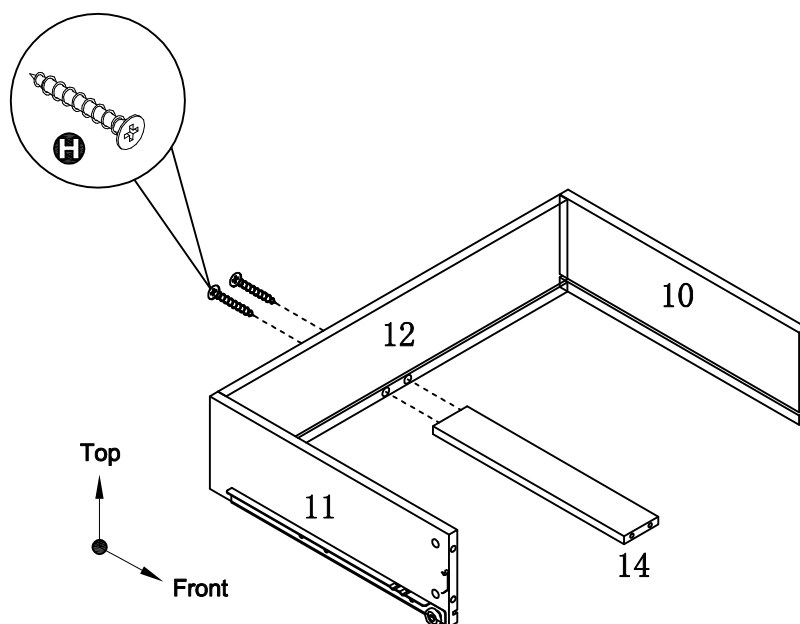


ASSEMBLY INSTRUCTIONS

 13

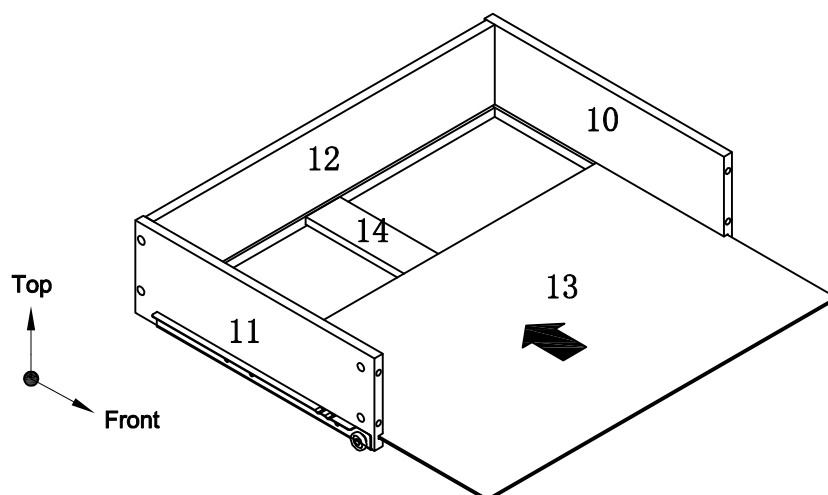

14

 
- HARDWARE **I** X 5PCS
HARDWARE **K** X 2PCS
HARDWARE **L** X 1PC

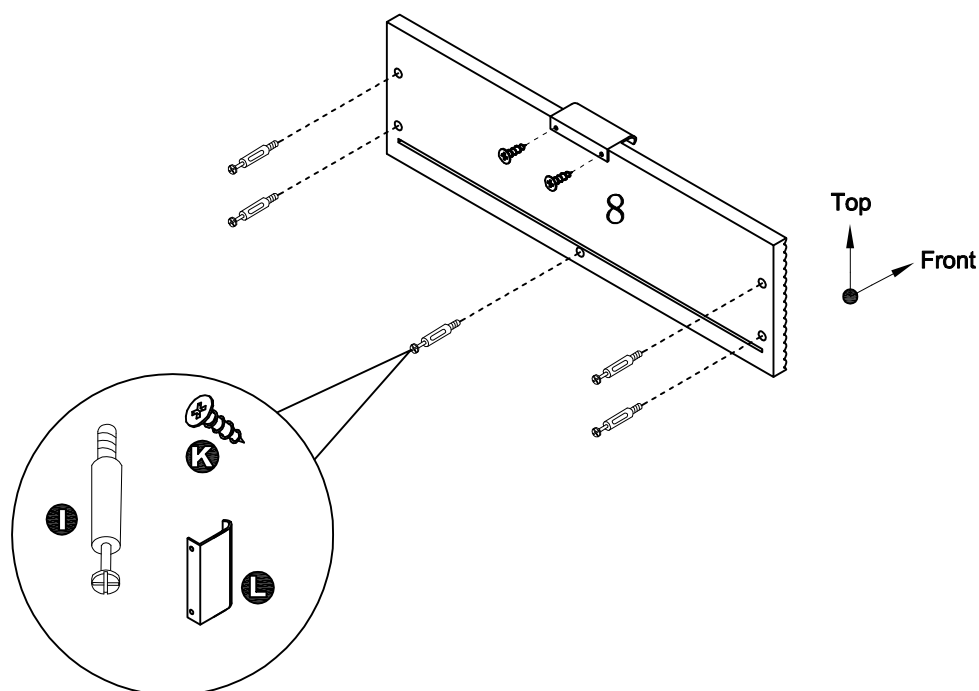

ASSEMBLY INSTRUCTIONS

15

 HARDWARE  X 5PCS

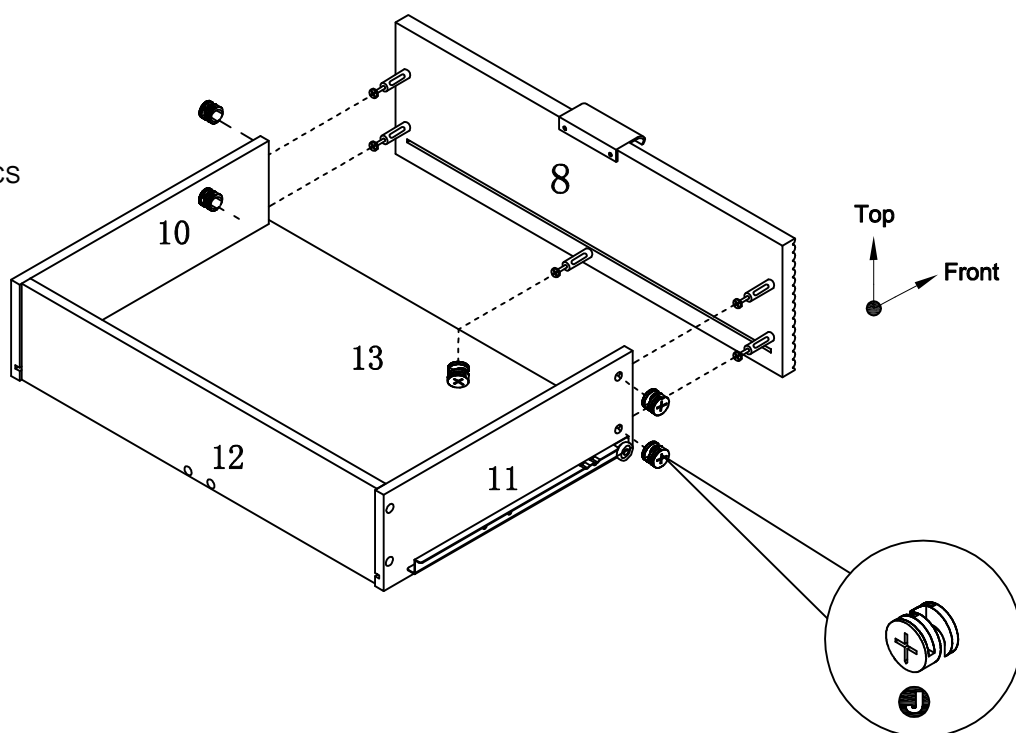

16

 
 
HARDWARE  X 2PCS

HARDWARE  X 1PC

HARDWARE  X 2PCS

HARDWARE  X 12PCS

Please refer page15 on hing adjustment guide.

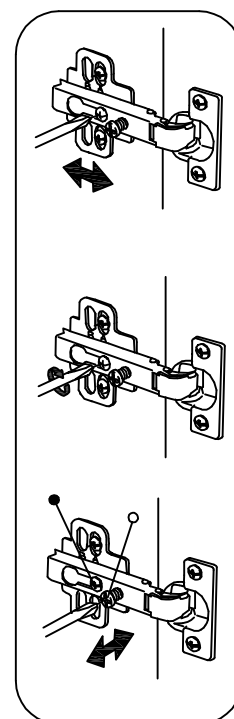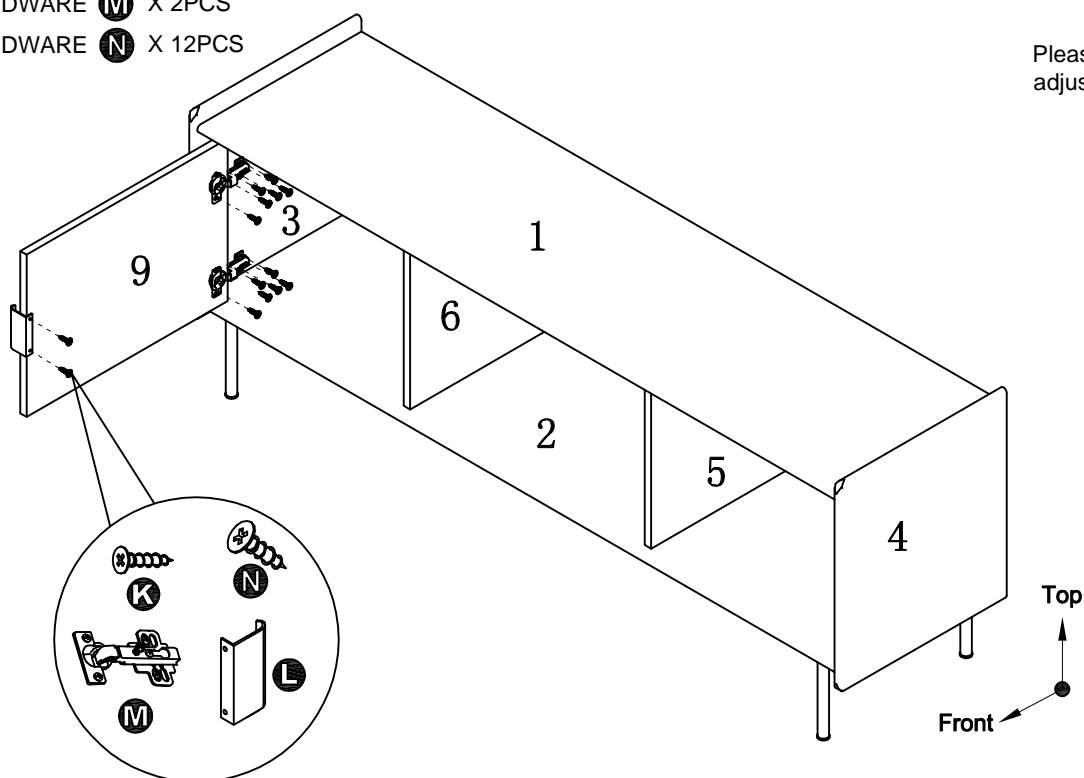

ASSEMBLY INSTRUCTIONS

HOW TO ADJUST HINGES

Gradually adjust the screws and close the door to review adjustment each time.

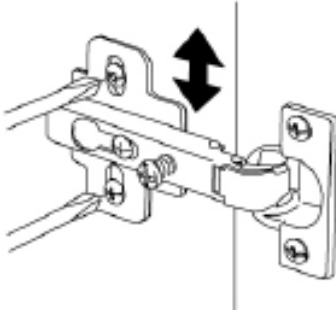 


Fig. 1

If door is too high or too low:

Loosen top and bottom screws, as shown in Fig.1, for all hinges on this door panel. Take care to support door. Adjust door up or down as necessary, hold in place, and tighten screws again.

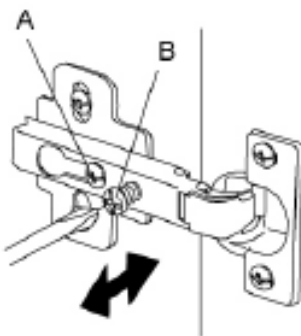 


Fig. 2

If doors have a gap in the middle or are hitting each other:

Loosen screw A and B, as shown in Fig. 2, for all hinges on this door panel. Take care to support door. Adjust door to the left or right as necessary, hold in place and tighten screw A, then B. If the door is not hanging straight, adjust the top and bottom hinges separately by tightening/loosening screw B, to correct the alignment of that corner. Turn screw B clockwise to move door toward frame. Turn screw B counterclockwise to move door away from frame.

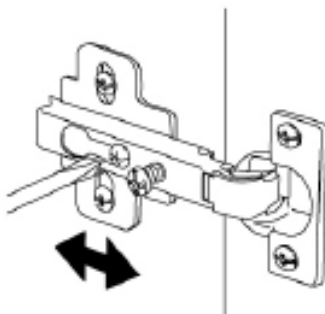 


Fig. 3

 
 
If door is too close or far from frame:

Loosen screw, as shown in Fig. 3, for all hinges on this door panel. Take care to support door. Adjust door towards or away from frame as necessary, hold in place and tighten screws again.

ASSEMBLY INSTRUCTIONS


17

- HARDWARE **K** X 2PCS
 HARDWARE **L** X 1PC
 HARDWARE **M** X 2PCS
 HARDWARE **N** X 12PCS

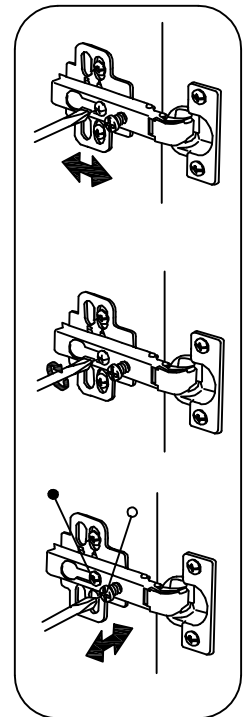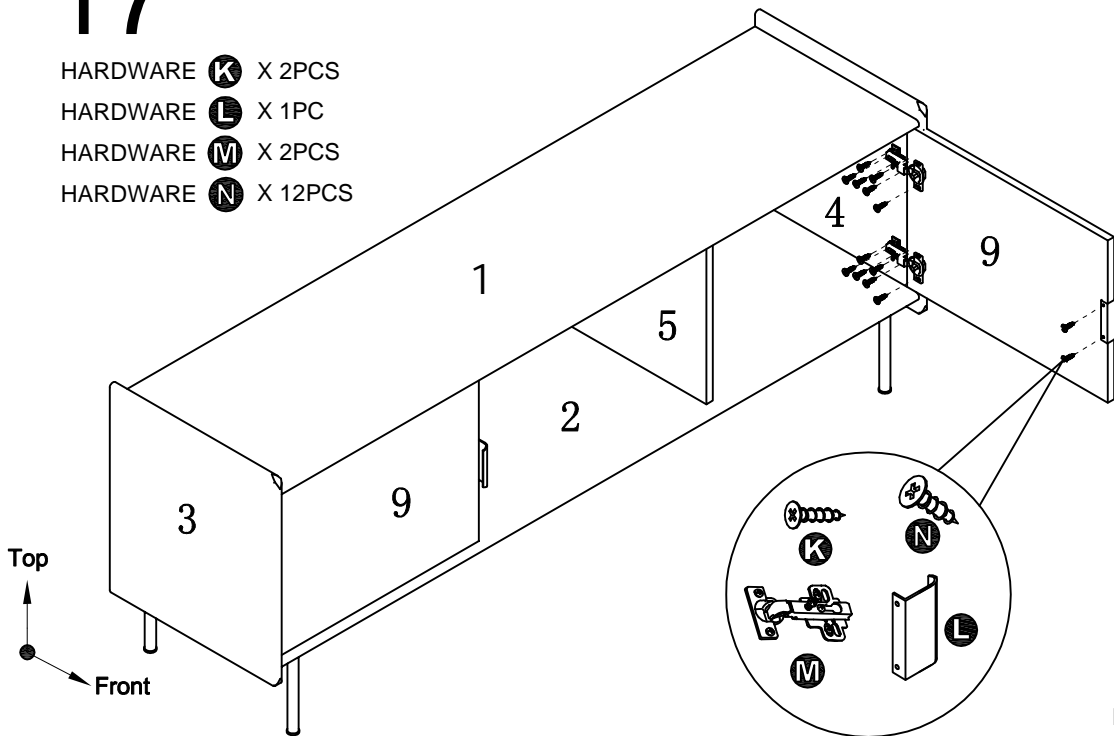

Please refer page15 on hing adjustment guide.

 18

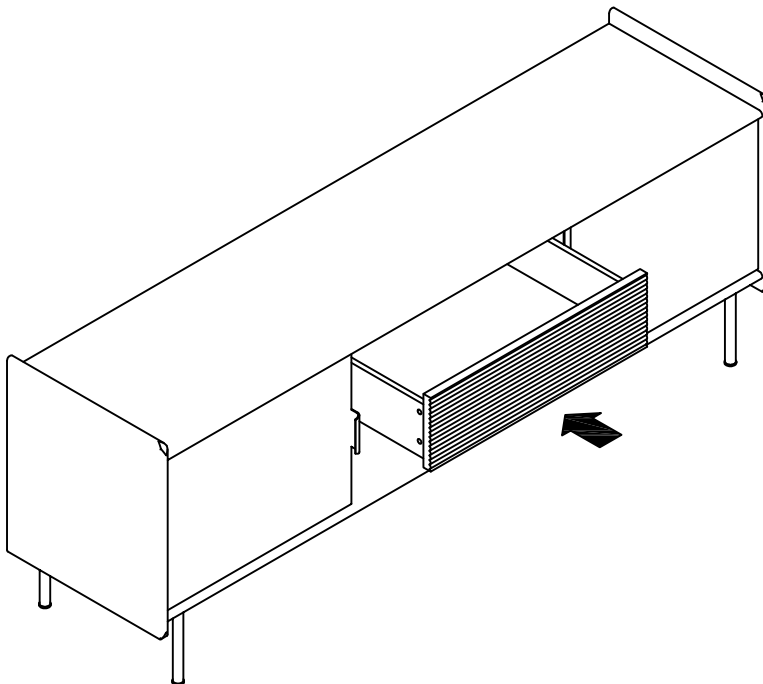

ASSEMBLY COMPLETED



Please ensure the furniture rests on an even and flat surface. If the product wobbles or feels loose, double-check all bolts and/or screws are properly tightened and secured.



Keep this handy!

Please retain this instruction manual and any order-related information for future reference.



Lift, don't drag!

To avoid damage to product please always LIFT the product when transporting or adjusting the placement.

This product is intended for RESIDENTIAL USE ONLY and not for commercial use.