 
### Important -Please read these instructions fully before starting assemble


We stand behind the quality of our products. For full warranty policy,email: poly@homeselecting.com



### If you need help or have damaged or missing parts, Components please email:poly@homeselecting.com

### Please check you have all the components listed below.

Note: The ilustration of the product shows the exact position of each part. Check when assembling.

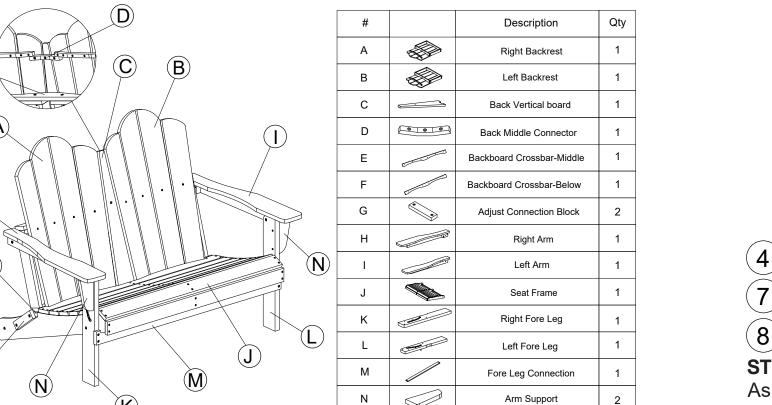


### **Hardware & Tools**


Note: The quantities below are the correct amount to complete the assembly. in some cases more fittings may be supplied than required.

	•			
1)×3	2)×11	③×2	4)×12	5×4
(a)	(j))))))))))))))))))))))))))))))))))))	<b>0</b>	0	<b>1</b>
M5×30MM Screws	M5×50MM Screws	M6×40MM Bolts	M6×50MM Bolts	M6×60MM Bolts
6)×2	7)×18	8)×18	9×1	10×1
M6×80MM Bolts	Washer	Nut	Wrench (Included)	Hex key(Included)

If you need help or have damaged or missing parts,

### ⚠ Caution: Please do not over-tighten bolts and screws during assembly.

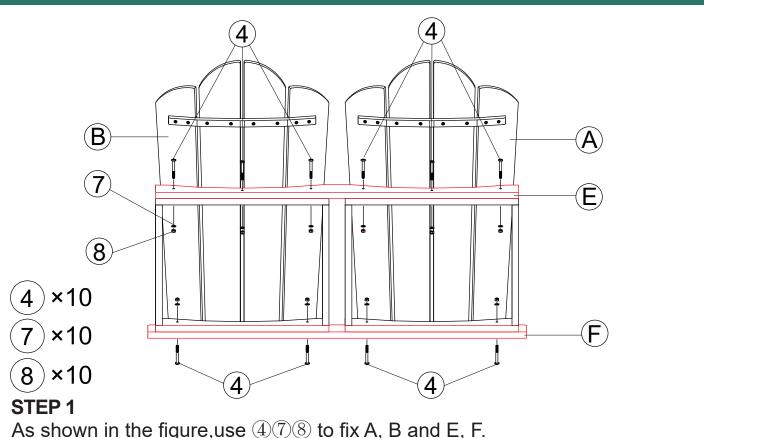


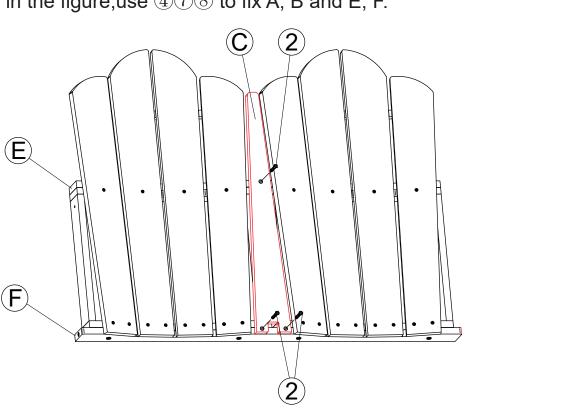


As shown in the figure, use 2 to fix C and E, F


If you need help or have damaged or missing parts,

## ⚠ Caution: Please do not over-tighten bolts and screws during assembly.

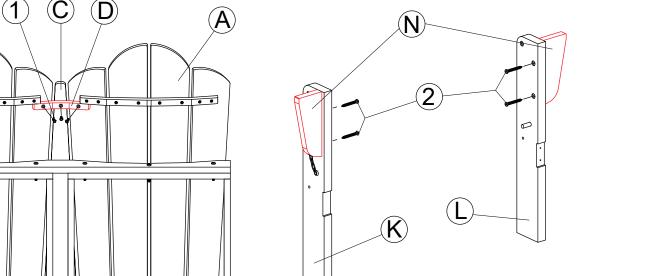

As shown in the figure, use ① to fix A, B, C and D

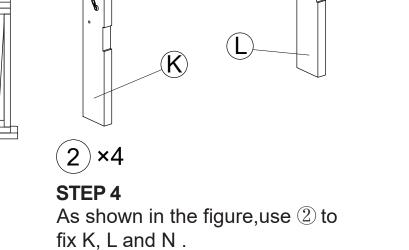


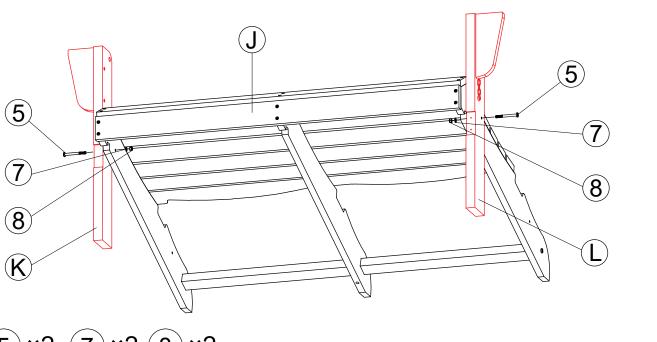


5) ×2 (7) ×2 (8) ×2 As shown in the figure,use 578 to fix K, L and J

# If you need help or have damaged or missing parts,

### ⚠ Caution: Please do not over-tighten bolts and screws during assembly.

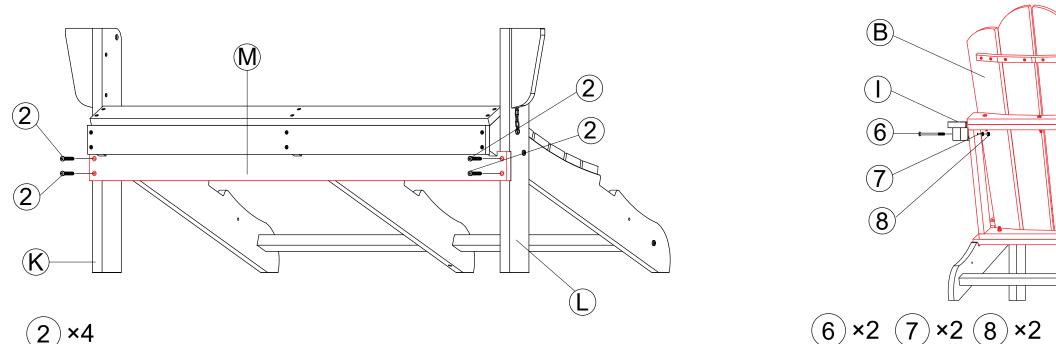

As shown in the figure,use ② to fix K, L and M

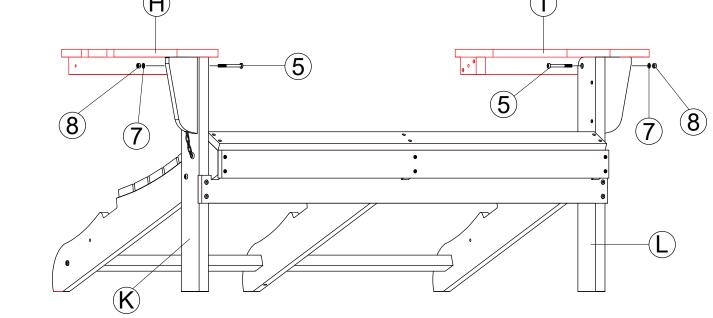

 $(5) \times 2 (7) \times 2 (8) \times 2$ 

As shown in the figure, use \$\ointilde{5}\overline{7}\emptyses to fix H, I and K, L

As shown in the figure,use 678 to fix A, B and H, I

 $(4) \times 2 (7) \times 2 (8) \times 2$ 

As shown in the figure,use 478 to fix G and J.

⚠ Caution: Please do not over-tighten bolts and screws during assembly.

If you need help or have damaged or missing parts,

## Assembly Instructions If you need help or have damaged or missing parts, please email:polv@homeselecting.com

As shown in the figure,use ③ to fix G and F.

**Floding Chair** 

⚠ Caution: Please do not over-tighten bolts and screws during assembly.

This product can be easily folded flat by pulling out the "Plug" inserted in the chair legs.

on the page 2.

## Important -Please read these instructions fully before starting assembly

separate them into their groups.

Make sure you have enough space to layout the parts before starting.

the unit or your floor.

Check you have all the components and tools listed Do not stand or put weight on the product, this could

Remove all fittings from the plastic bags and

Keep children and animals away from the work area, small parts may cause choking if swallowed.

 
Assemble on a soft level surface to avoid damaging

Assemble the item as close to its final position (in the same area) as possible.


If you need help or have damaged or missing parts,

please email:poly@homeselecting.com

Do not place furniture directly in front of radiators, fires, or any other source of heat.



Refer to the LISTING page for

 

### Cleaning & Maintenance

• Clean the product with a solution of mild soap and water. Dip a soft cloth or sponge into the solution and wipe down the entire surface.

• When not in use, cover the product with a protective cover to keep it clean and prolong its

After cleaning, thoroughly rinse the furniture with water to remove any remaining soap residue.