 
 




# Pantry

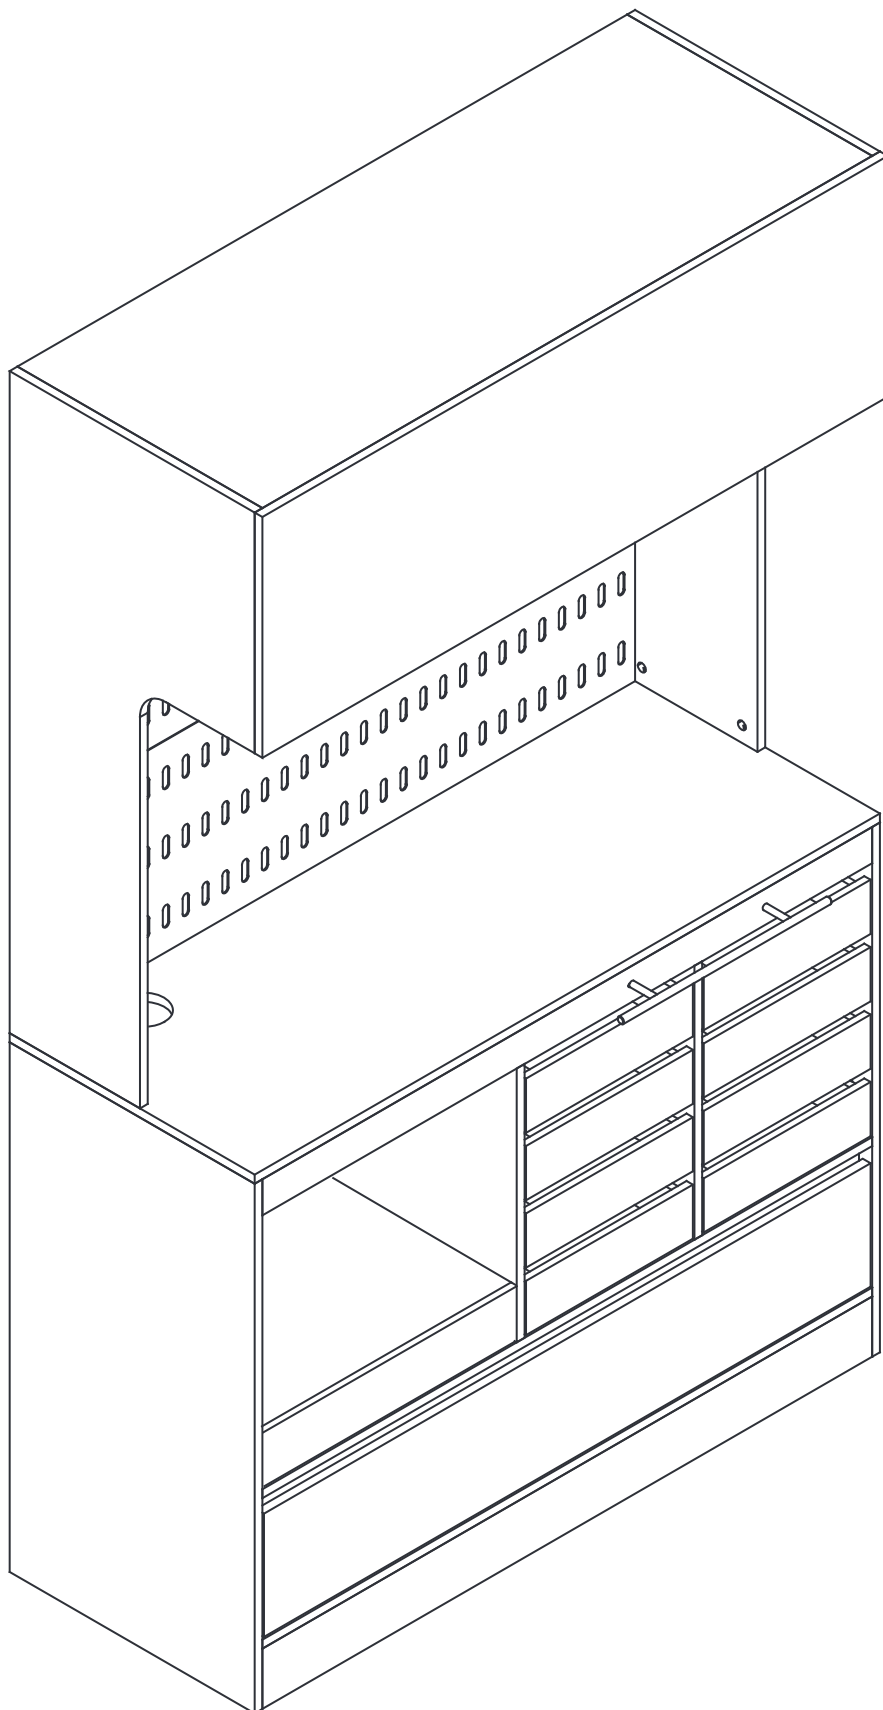

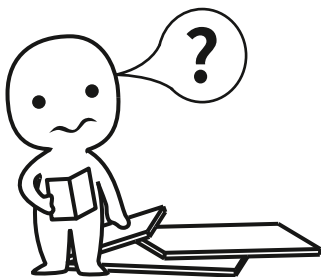


### **IMPORTANT INFORMATION!**

  please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

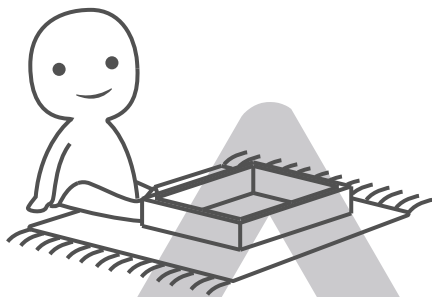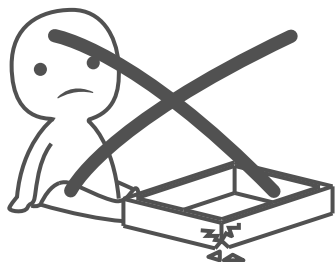



### **AVOID SCRATCHES!**

 In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.

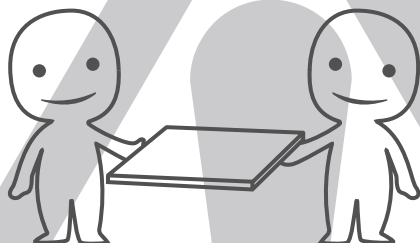

### **IMPROVE EFFICIENCY !**

  Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

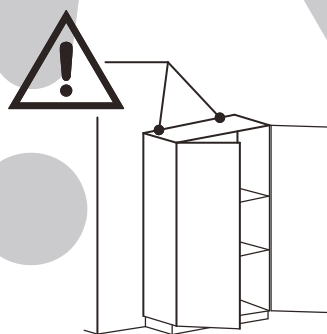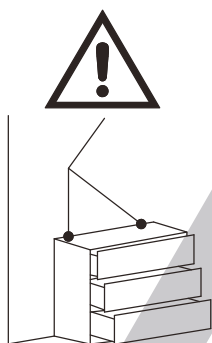

### **ANTI-TOPPLE WARNING !**

Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

 
### **IMPORTANT !**

It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.


For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.



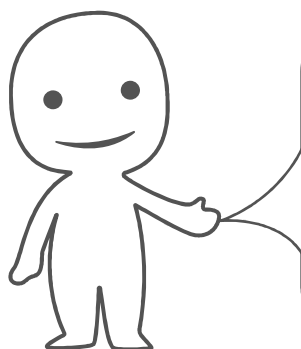


Please prepare the following tools

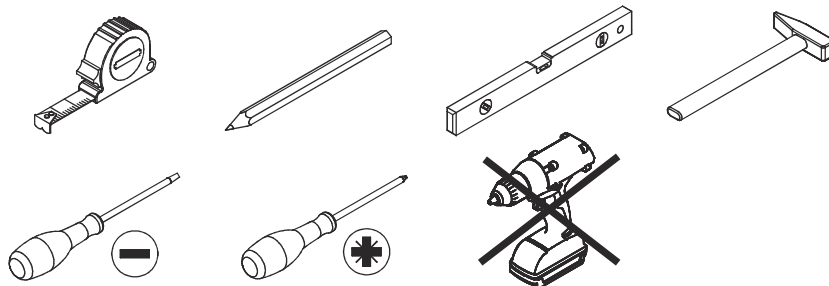 

When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

 A x 140+10

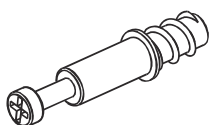


Ø5x 31 mm

B x 52+5



Ø15 x 11 mm

 C x 46+4

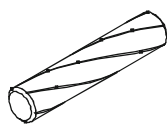

Ø8x 30 mm

D x 80+8



Ø3 x1 2 mm

E x 8



L=350 mm

F x 88+8

 


Ø15 x 9.5 mm

G x 5




H x 2

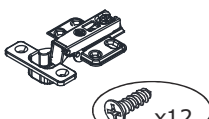

Ø3.5 x 14 mm

 J x 1

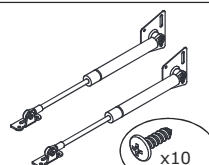


Ø3.5 x 14 mm

K x 16



Ø3x 12 mm

 L x 1

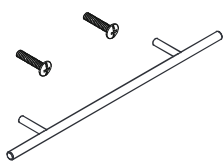

M x 14



Ø3 x 10 mm

N x 140

 


P x 2



L=400 mm

Q x 1

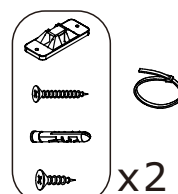


x2


R x 1



 
S x 4

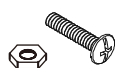

White nut

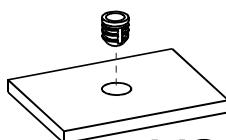 

X3


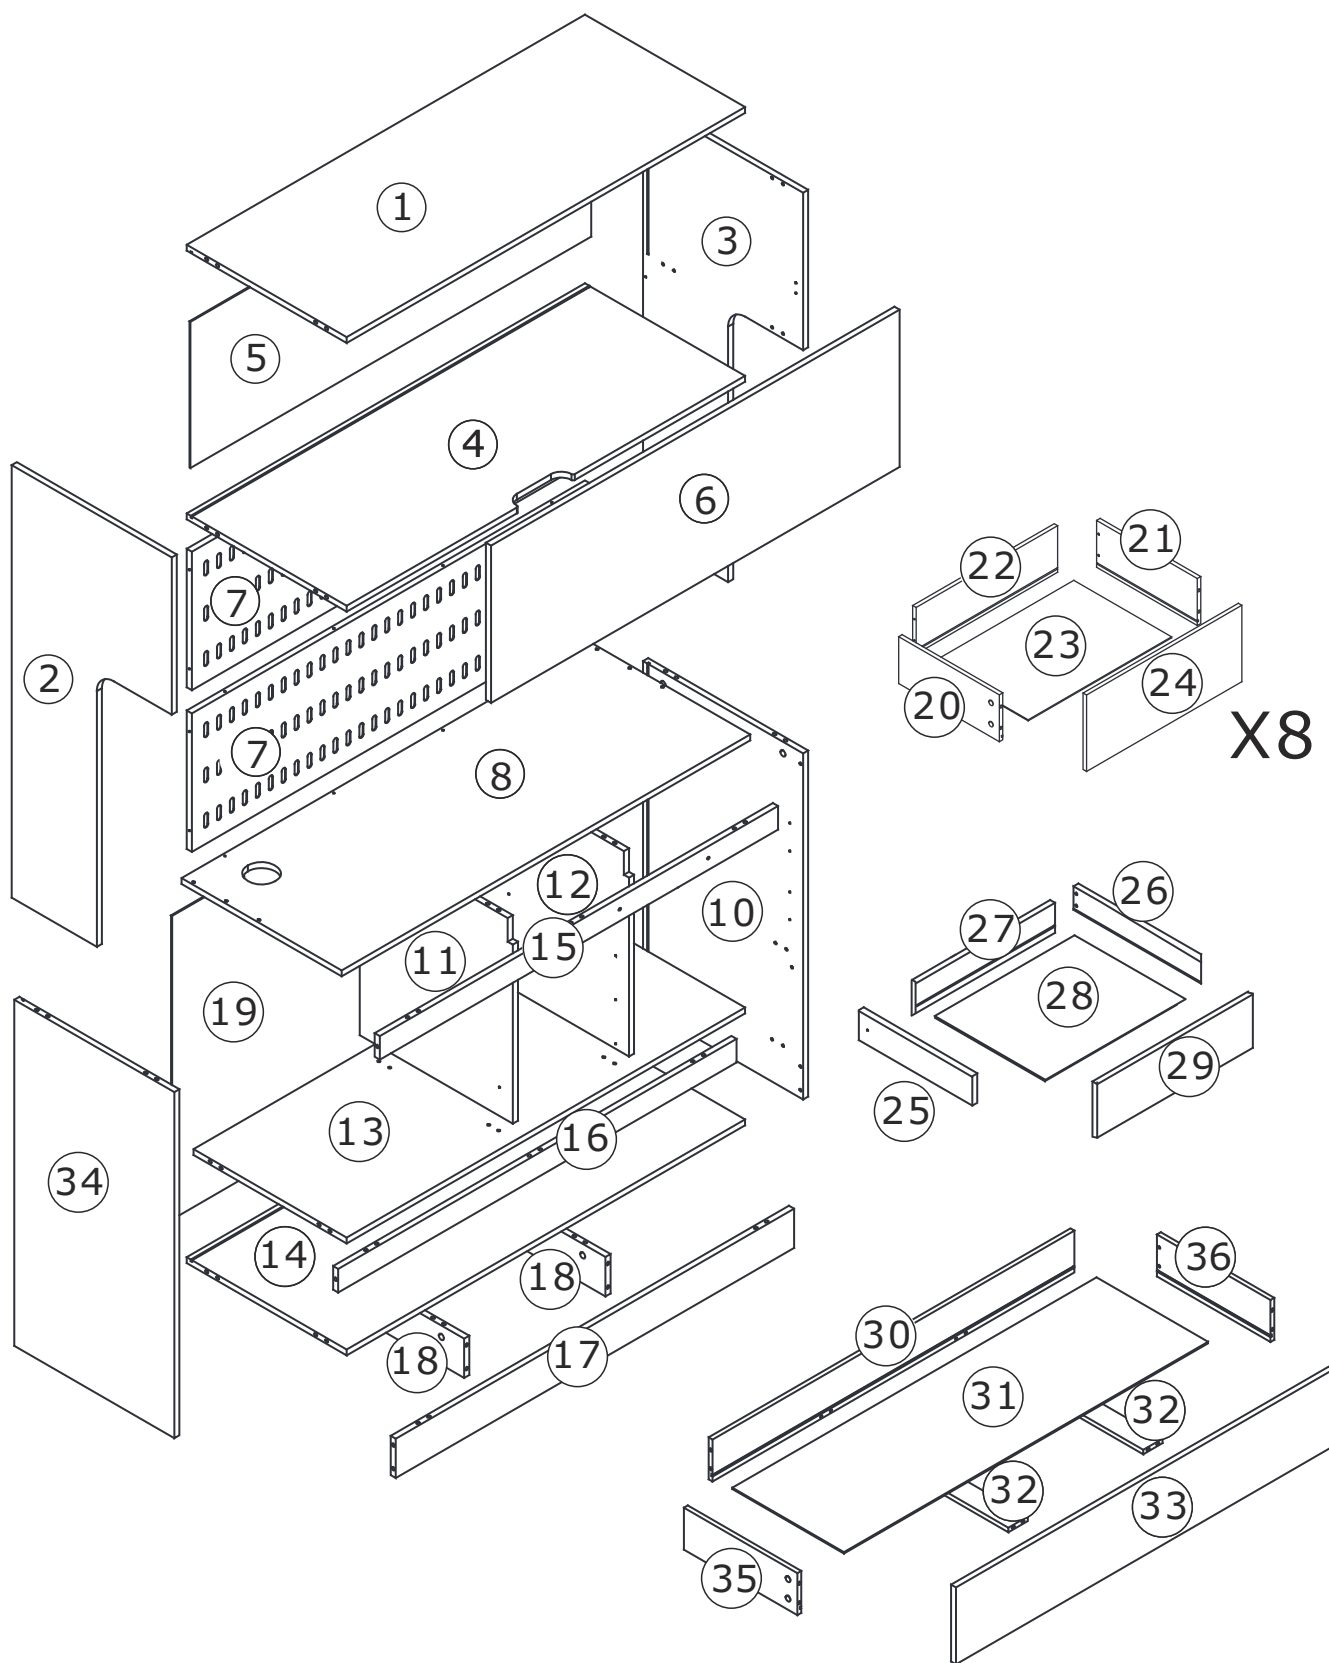 


# 1


A x 64



  Ø 5 x 31 mm

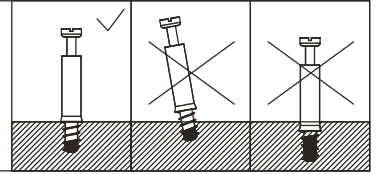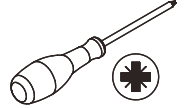

 Insert quickfit screw(A) into corresponding holes in plate 20,21 and 24 with a screwdriver as shown.

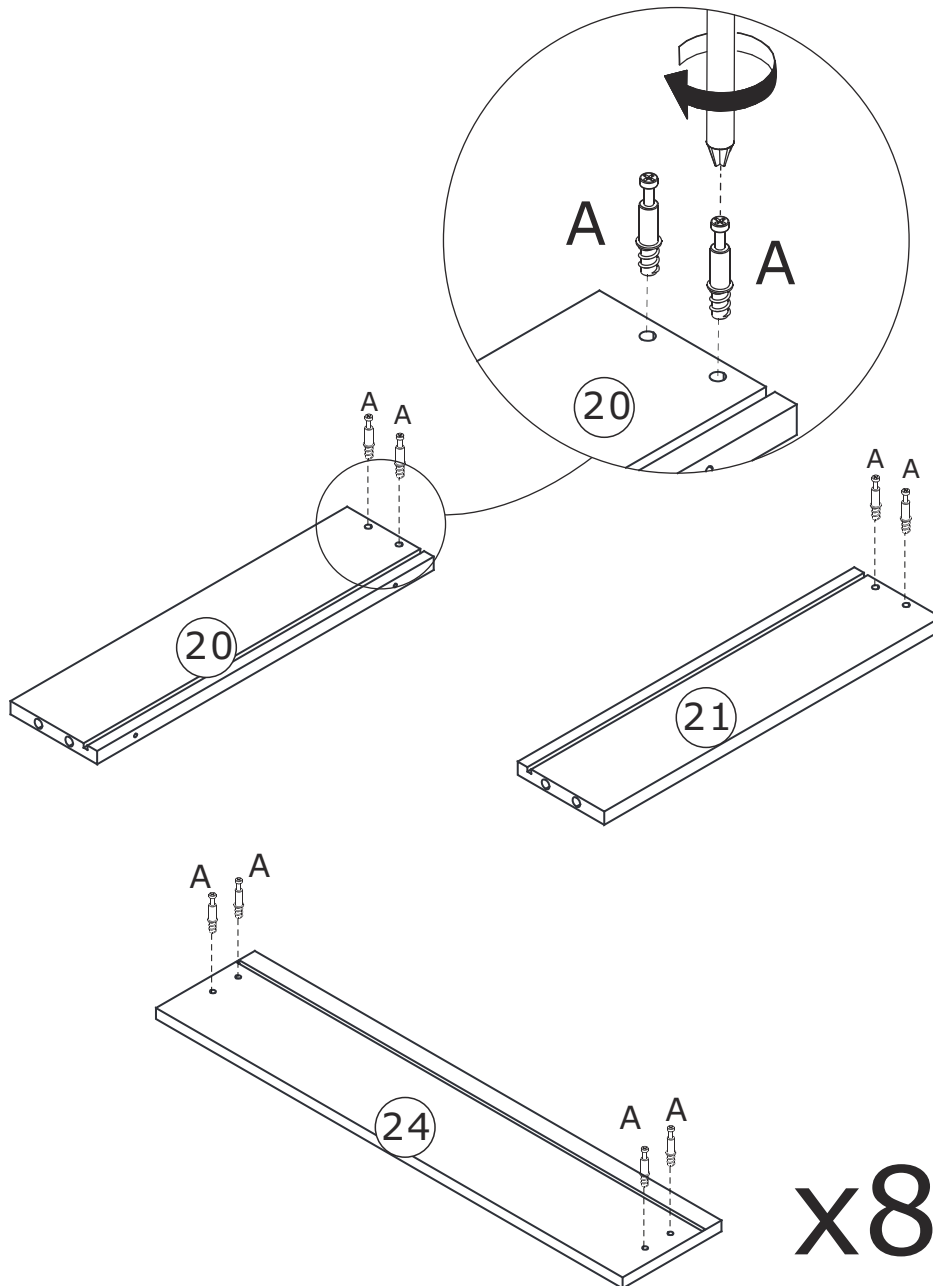


x8

2



F x 32



 Ø 15 x 9.5 mm

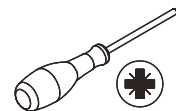

  Attach plate 20 and 21 to plate 22,  
insert cam lock(F) into plate 22 and  
turn clockwise to tighten as shown.

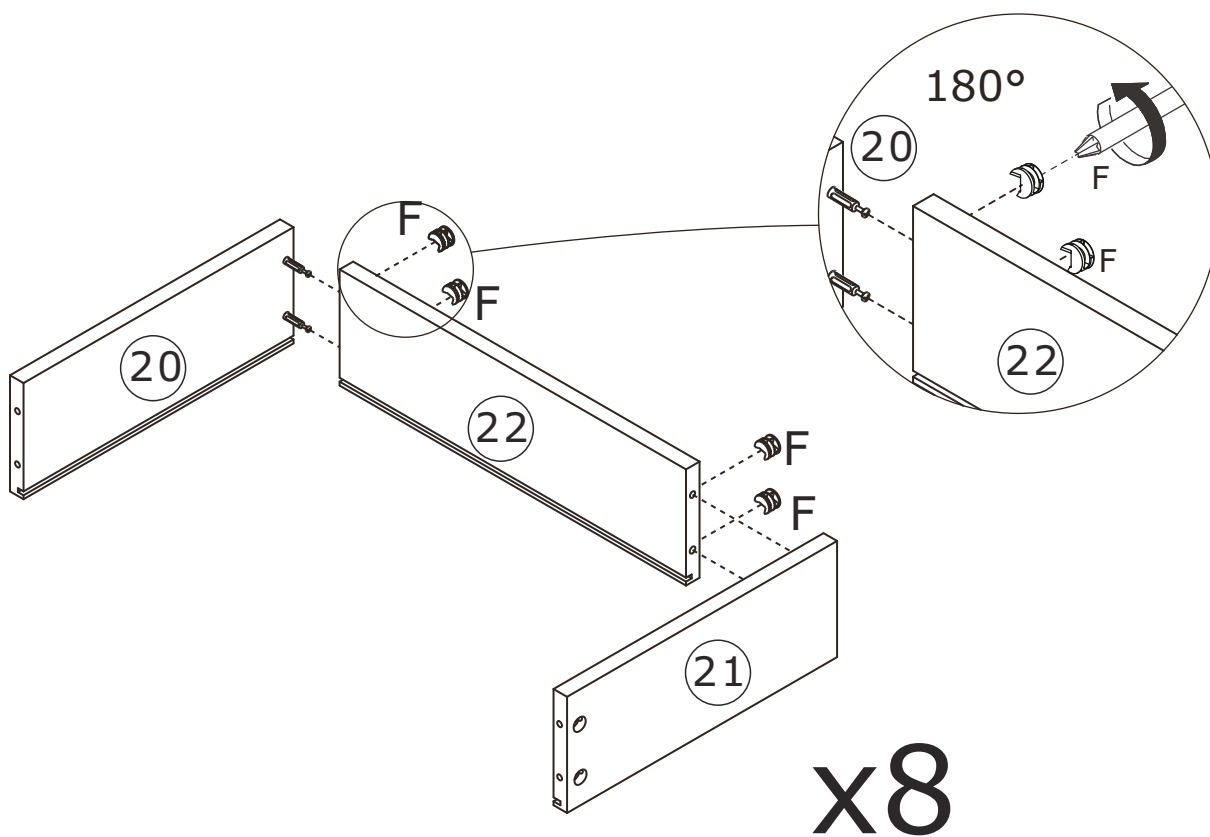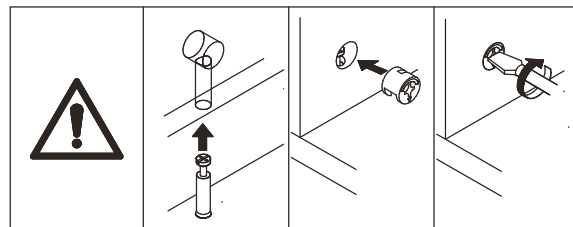

3

 
 
F x 32



Ø 15 x 9.5 mm



Slide plate 23 into available slot at first.  
Attach plate 24 to plate 20 and 21,  
insert cam lock(F) into plate 20,21  
and turn clockwise to tighten as shown.

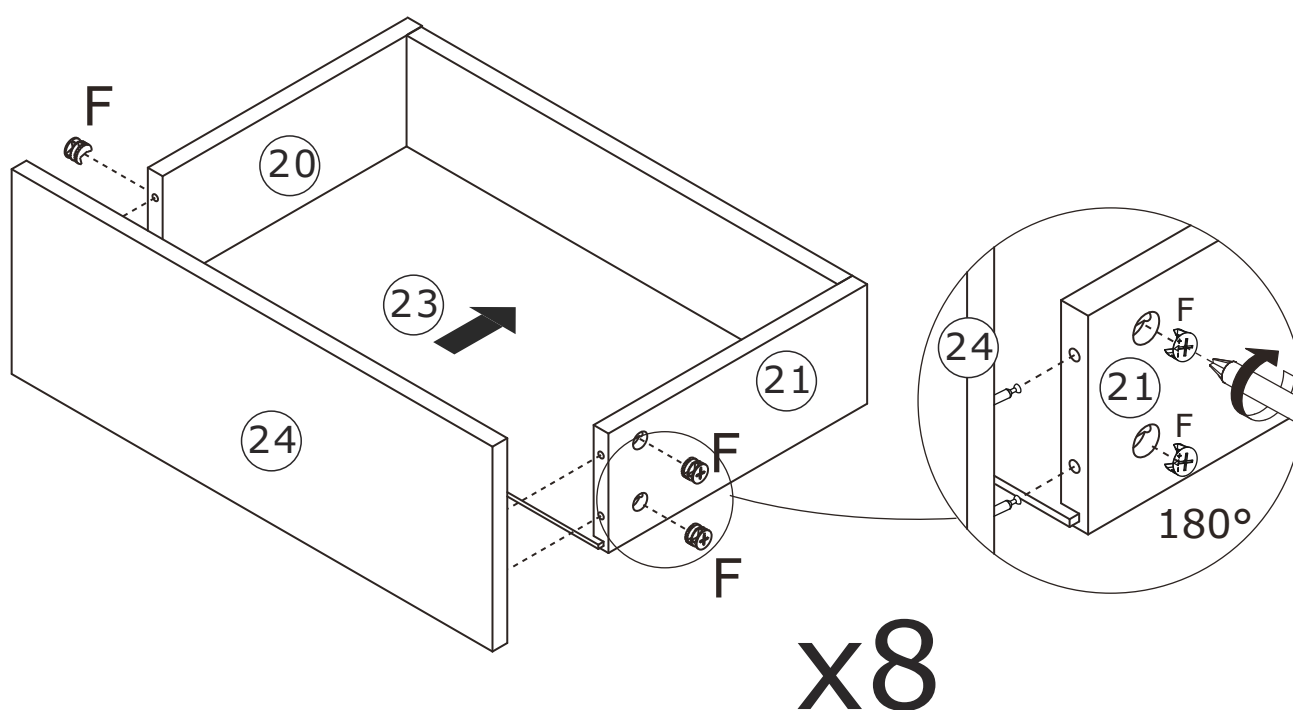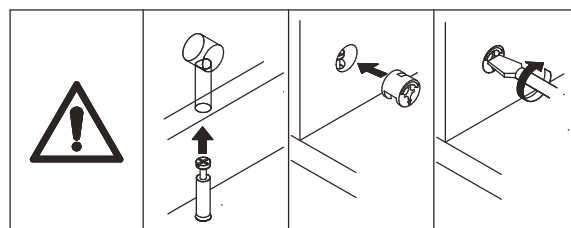


4


D x 32

 $\varnothing 3 \times 12 \text{ mm}$ 

 
E x 8

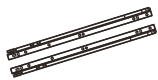

L=350 mm

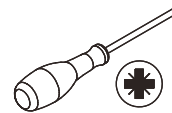 


 
Fix runner(E-DL) and (E-DR) to plate 21 and 20 respectively using screw(D) as shown.

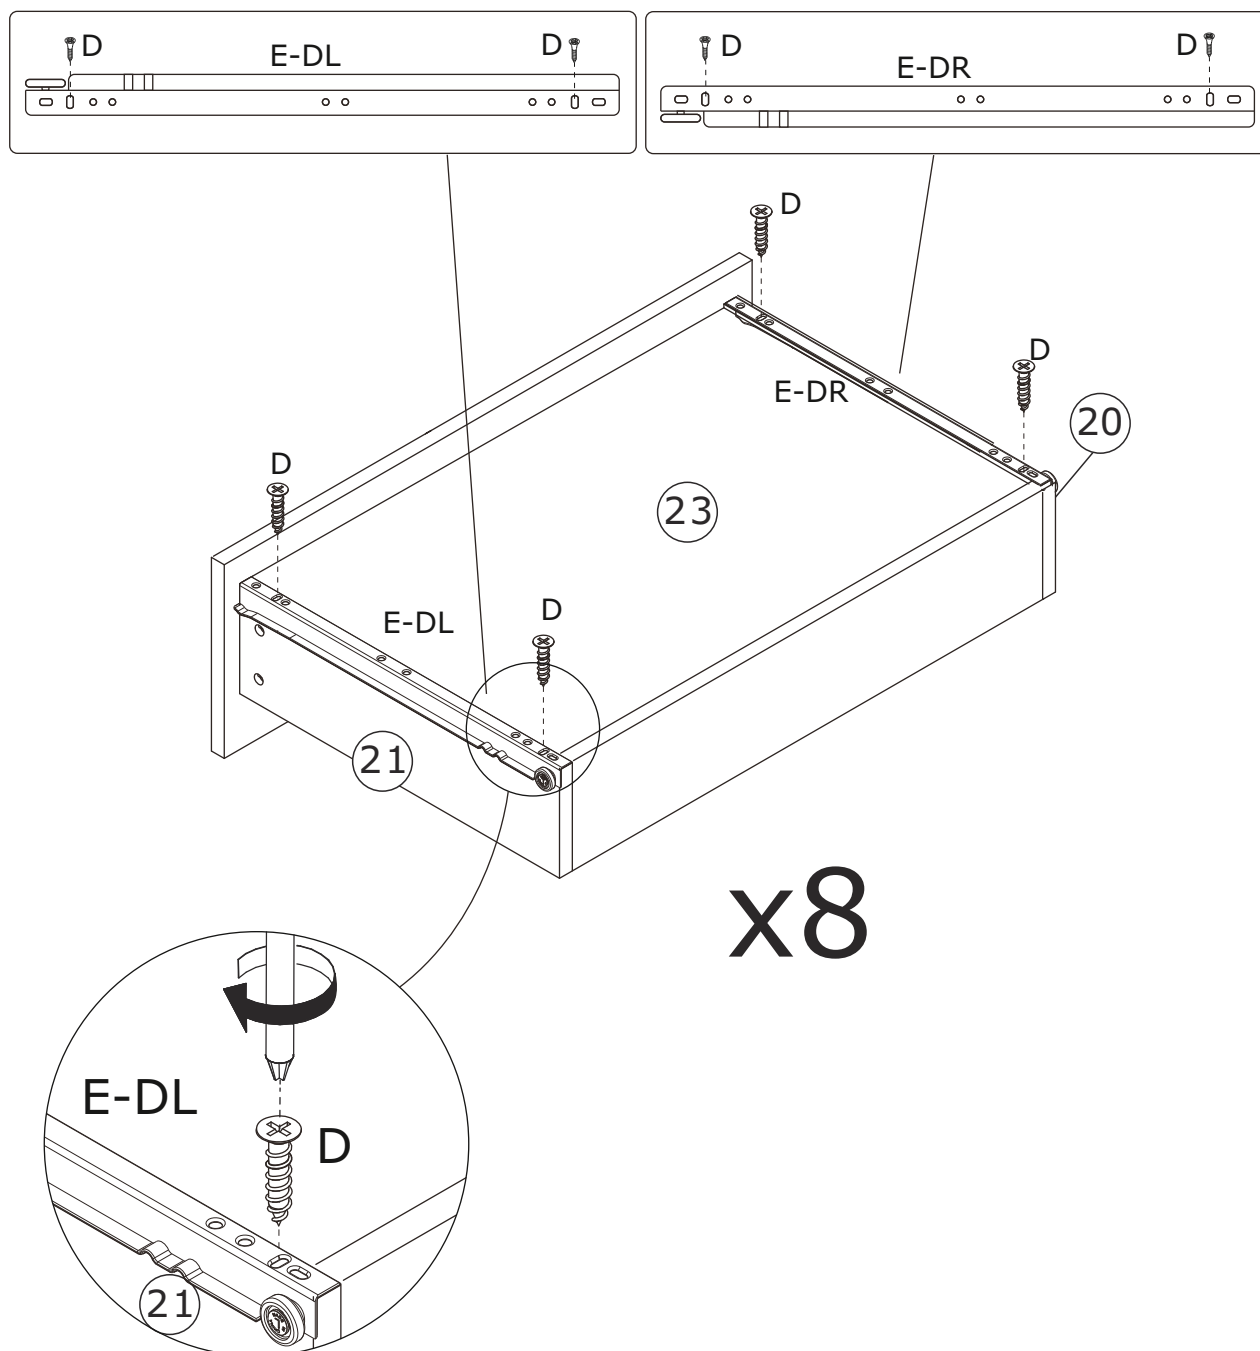

5



  Insert quickfit screw(A) into corresponding holes in plate 25,26 and 29 with a screwdriver as shown.

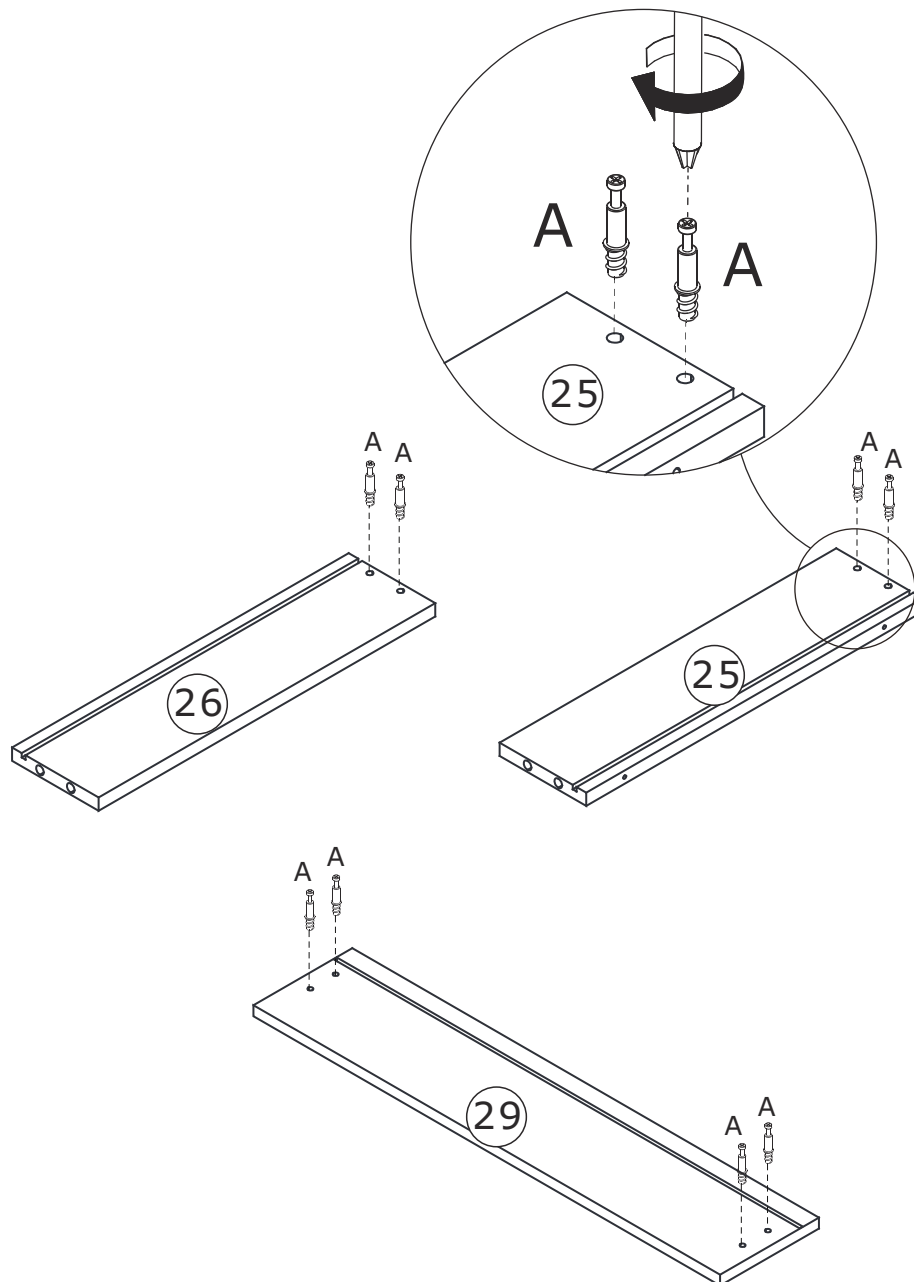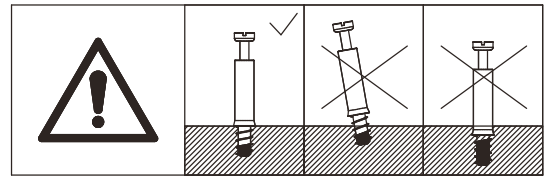


6



F x 4



 Ø 15 x 9.5 mm

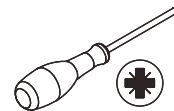

  Attach plate 25 and 26 to plate 27,  
insert cam lock(F) into plate 27 and  
turn clockwise to tighten as shown.

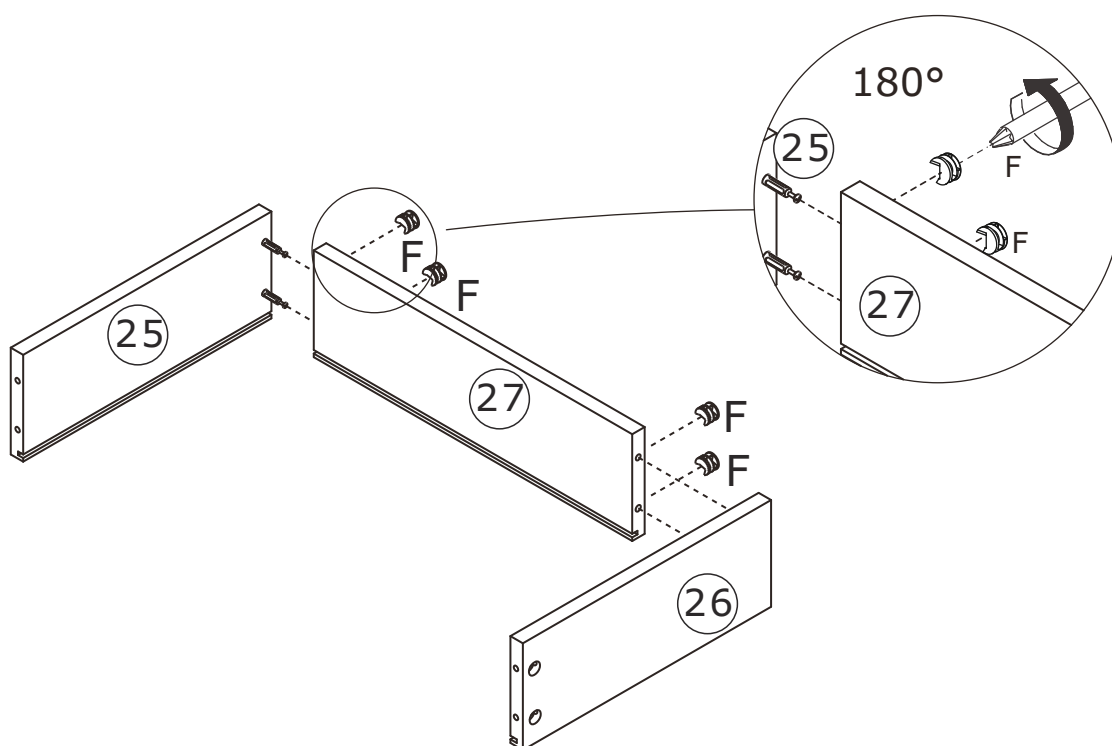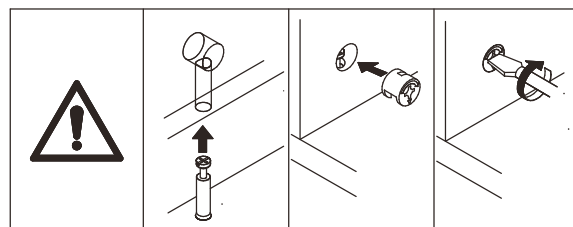




7






F x 4



 Ø 15 x 9.5 mm

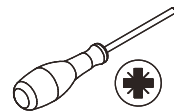

     Slide plate 28 into available slot at first.  
Attach plate 29 to plate 25 and 26,  
insert cam lock(F) into plate 25,26  
and turn clockwise to tighten as shown.

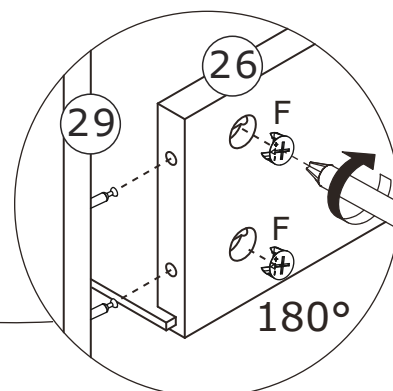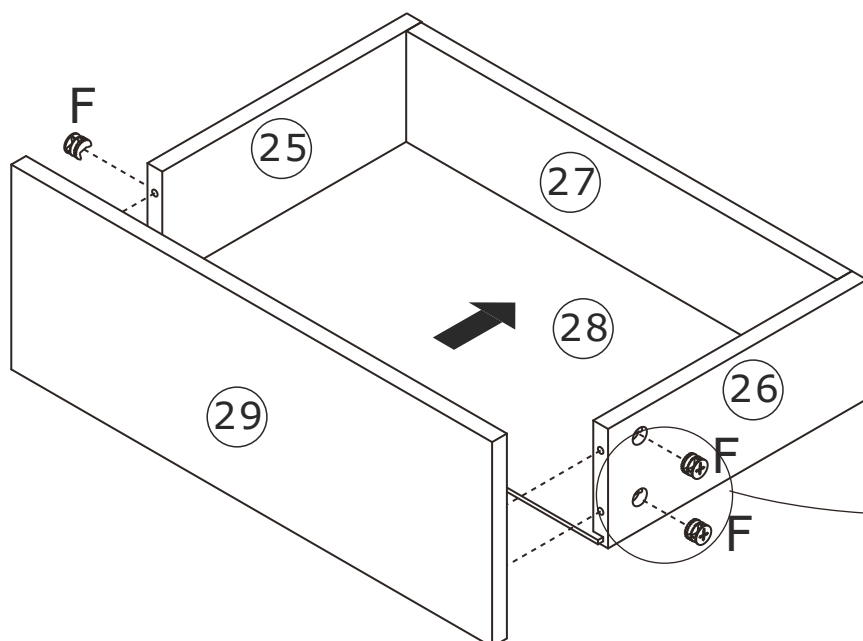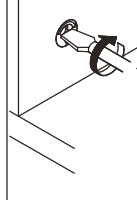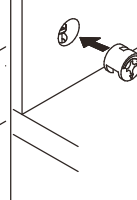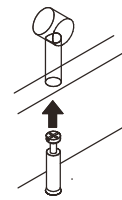


8


D x 4

 $\varnothing 3 \times 12 \text{ mm}$ 

 
P x 1

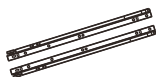


L=400 mm

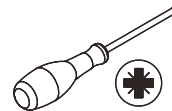 


 Fix runner(P-DL) and (P-DR) to plate 26 and 25 respectively using screw(D) as shown.






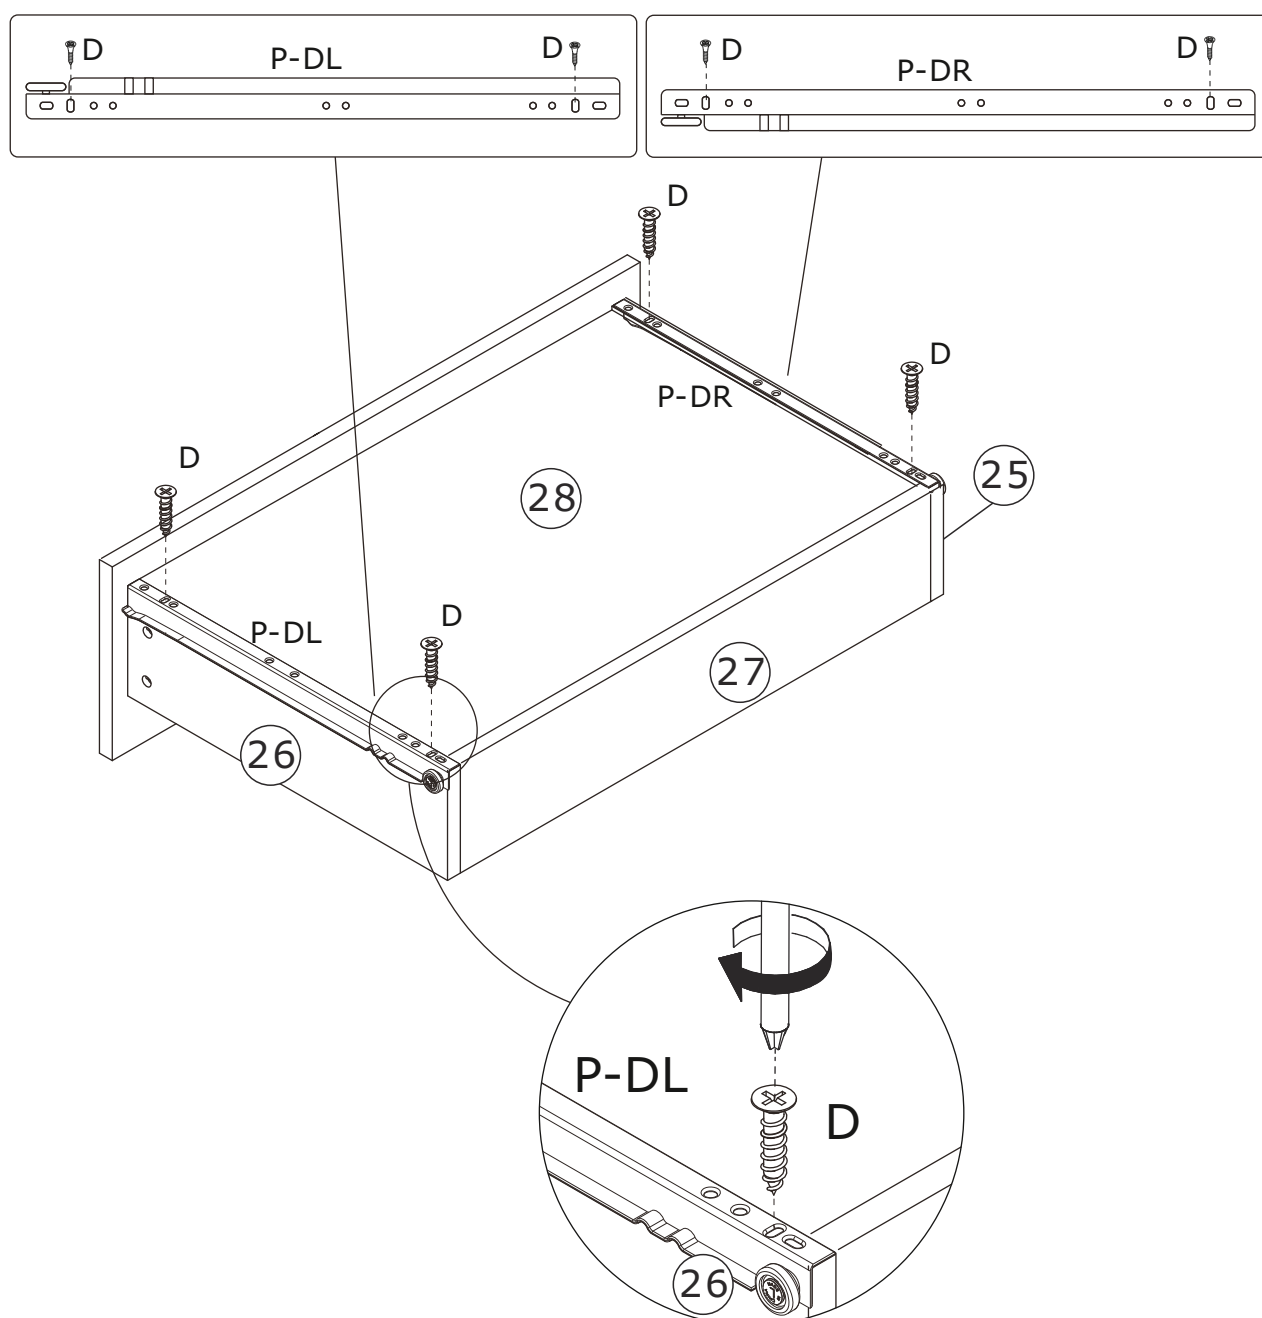


9

 A x 16  
  
 Ø 5 x 31 mm

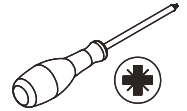 

      Insert quickfit screw(A) into corresponding holes in plate 35,36,30 and 33 with a screwdriver as shown.

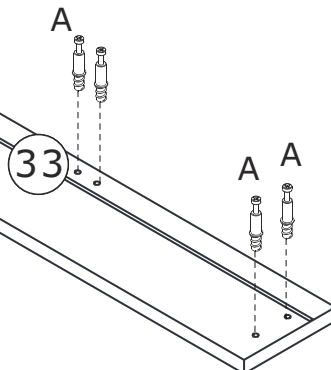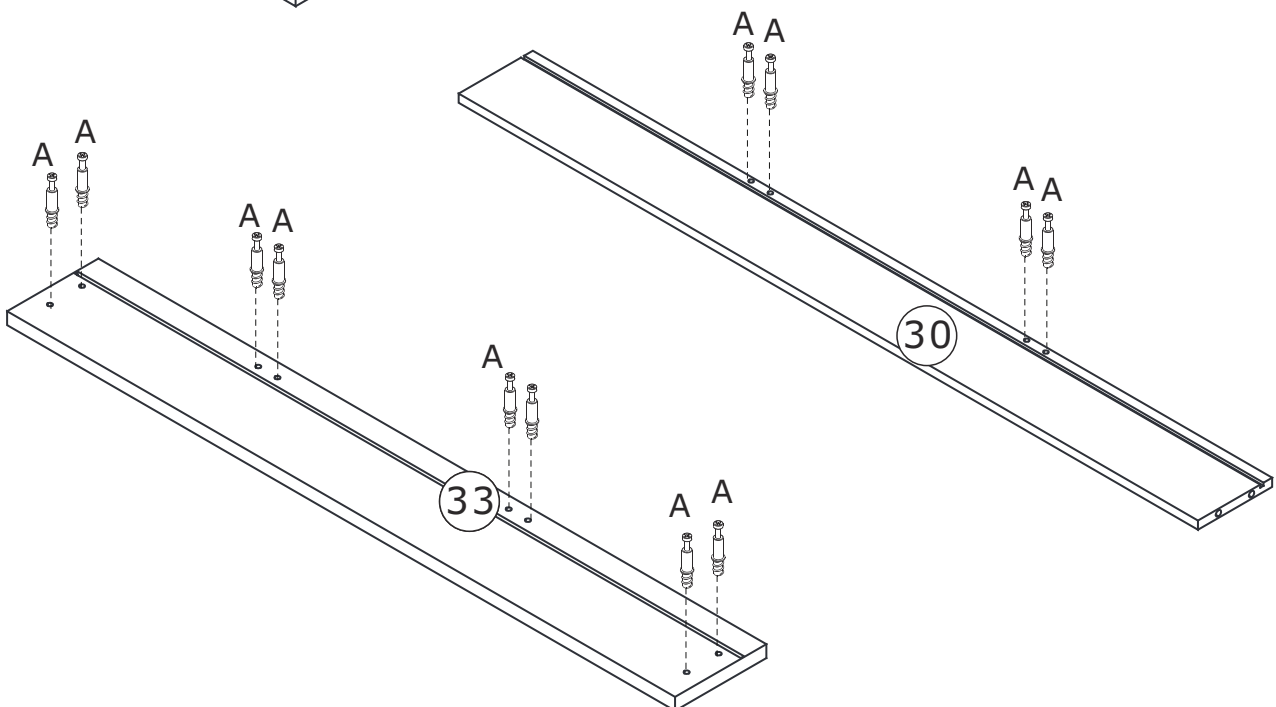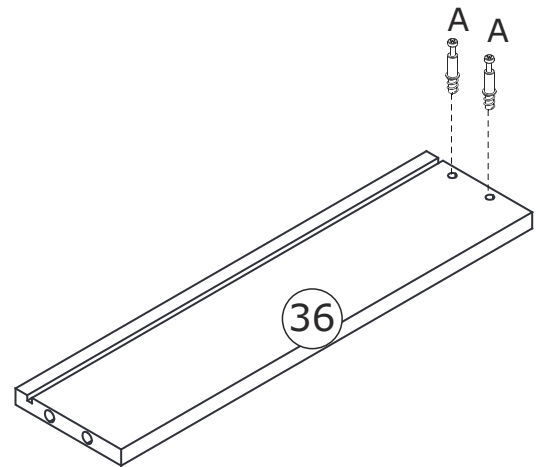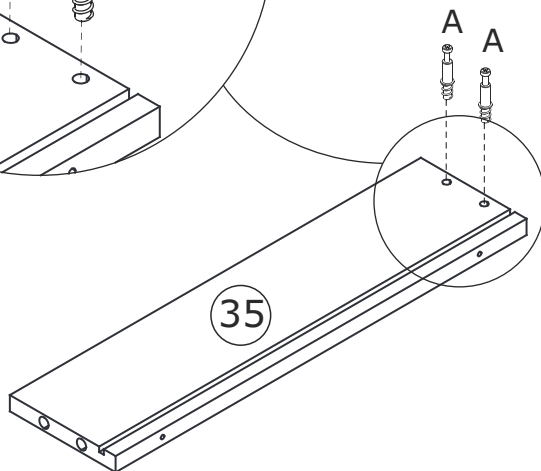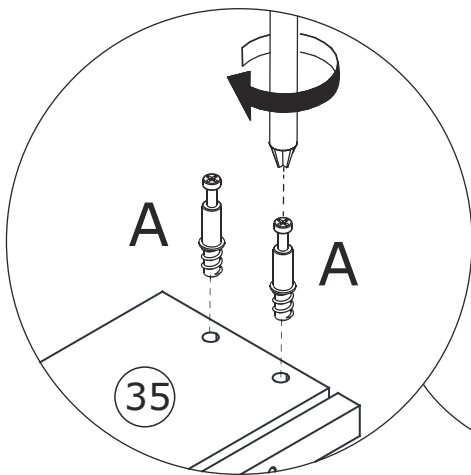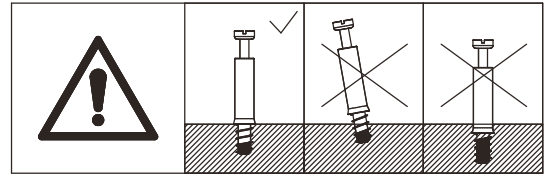


# 10



F x 8



 Ø 15 x 9.5 mm

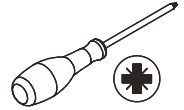

  Attach plate 35,32 and 36 to plate 30,  
insert cam lock(F) into plate 30,32  
and turn clockwise to tighten as shown.

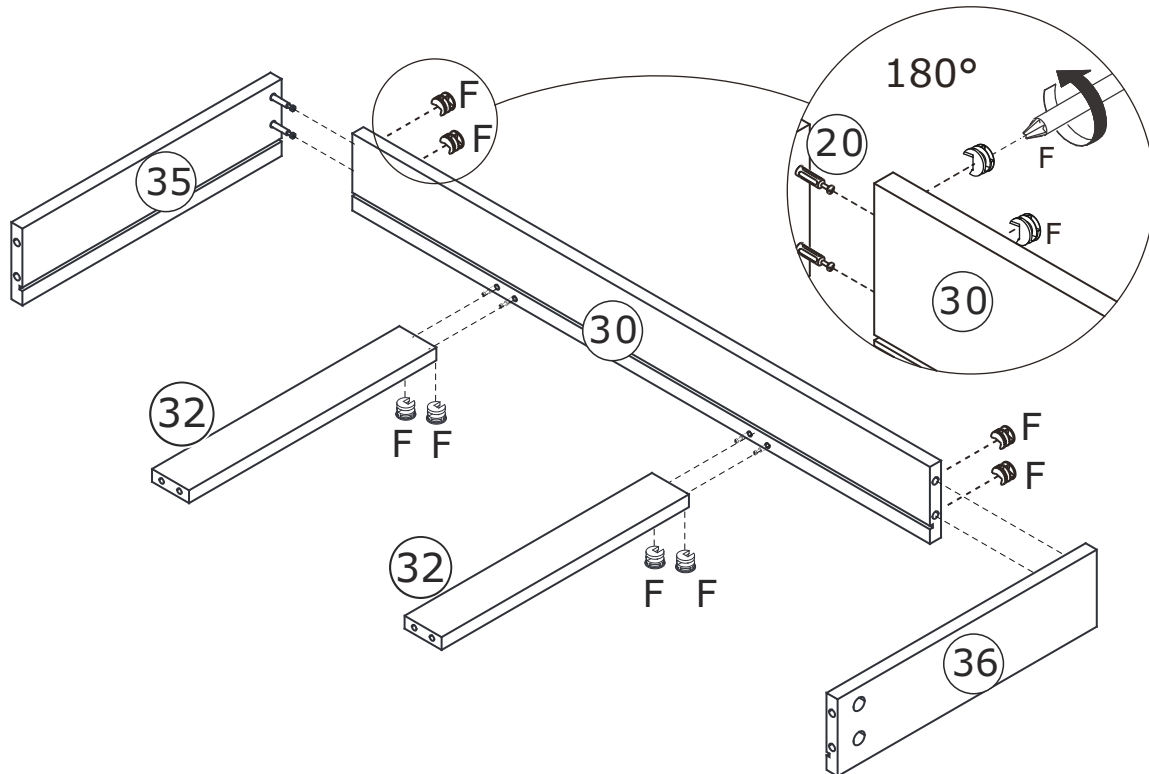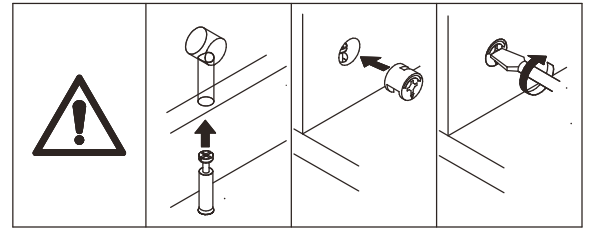


# 11




F x 8



 Ø 15 x 9.5 mm

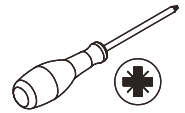

   
Slide plate 31 into available slot at first.  
Attach plate 33 to plate 35,32 and 36,  
insert cam lock(F) into plate 35,32,36  
and turn clockwise to tighten as shown.

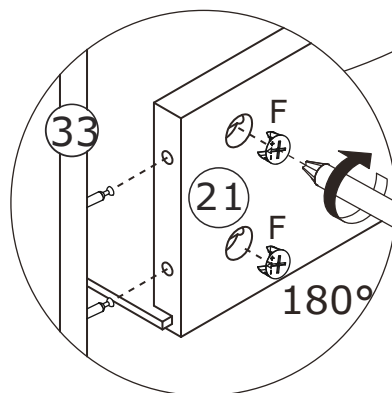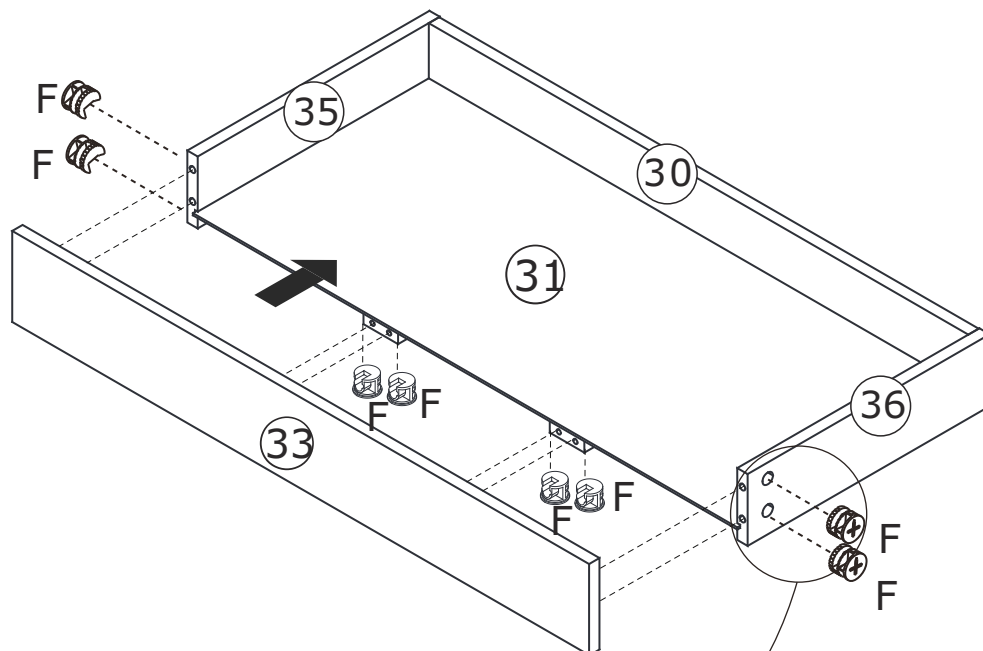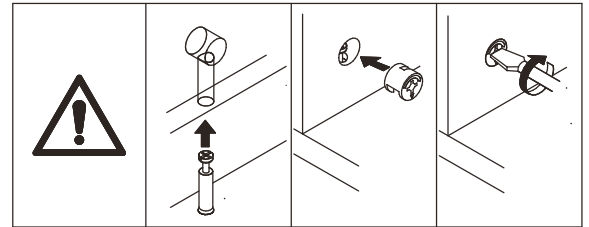

# 12

<p>D x 4</p>  <p>Ø 3 x 12 mm</p>	<p>P x 1</p>  <p>L=400 mm</p>	
-------------------------------------------------------------------------------------------------------------------	----------------------------------------------------------------------------------------------------------------	-------------------------------------------------------------------------------------

 Fix runner(P-DL) and (P-DR) to plate 35 and 36 respectively using screw(D) as shown.

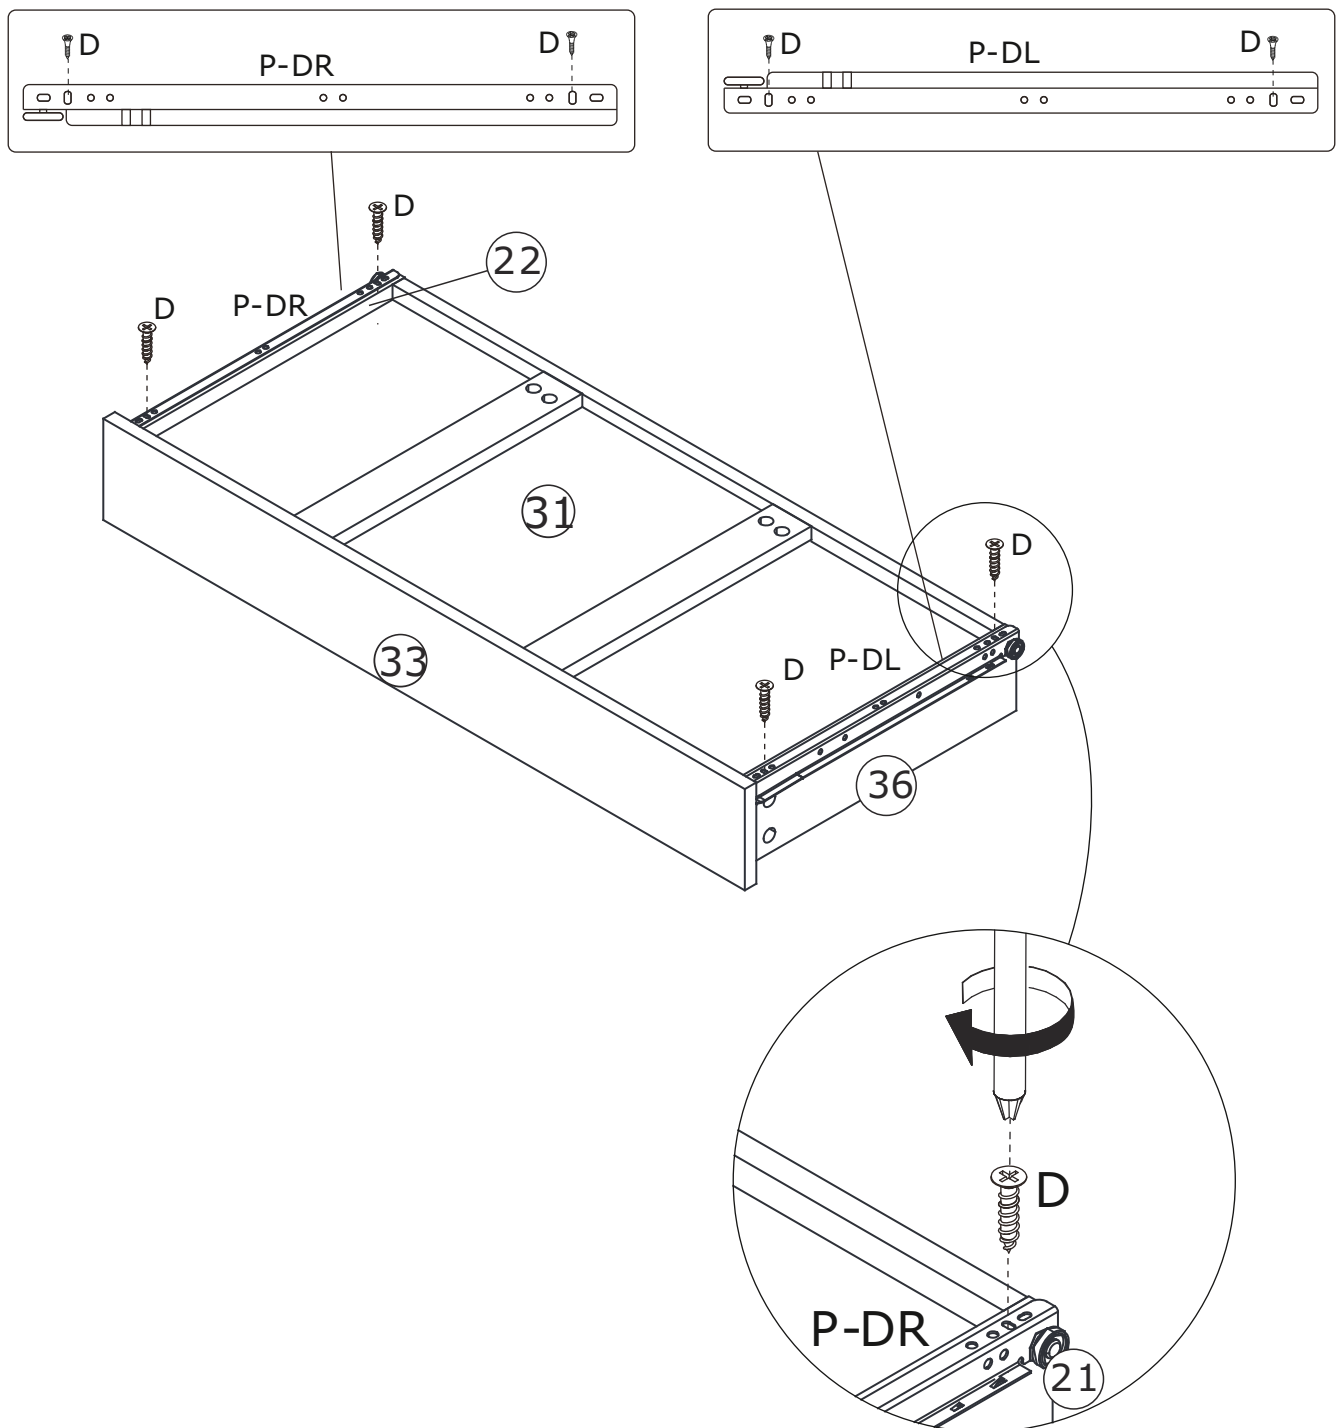

# 13

A x 3



Ø 5 x 31 mm

B x 5




Ø 15 x 11 mm

Cx2








 Ø 8x 30 mm

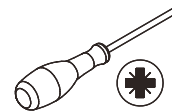

Insert quickfit screw(A) into corresponding holes in plate 13 at first.

     Attach plate 16 to plate 13 with wooden dowel(C), insert cam lock(B) into plate 16 and turn clockwise to tighten as shown.

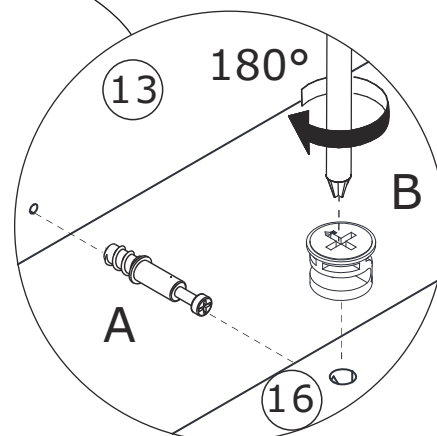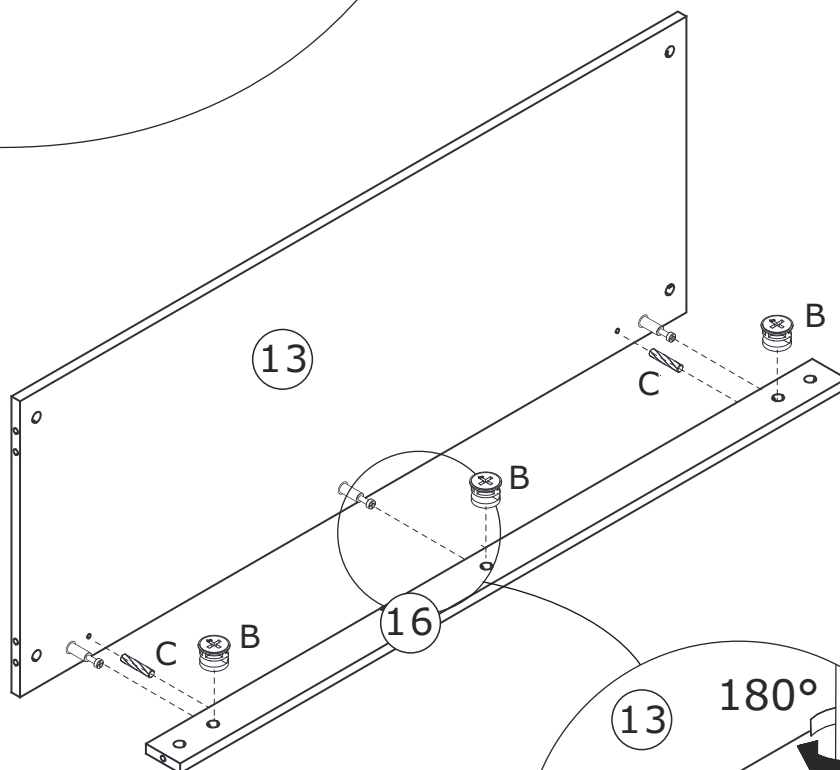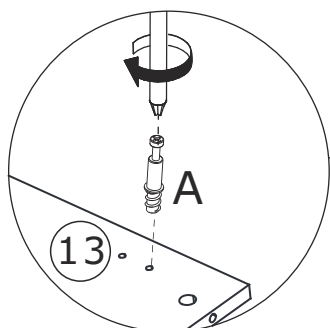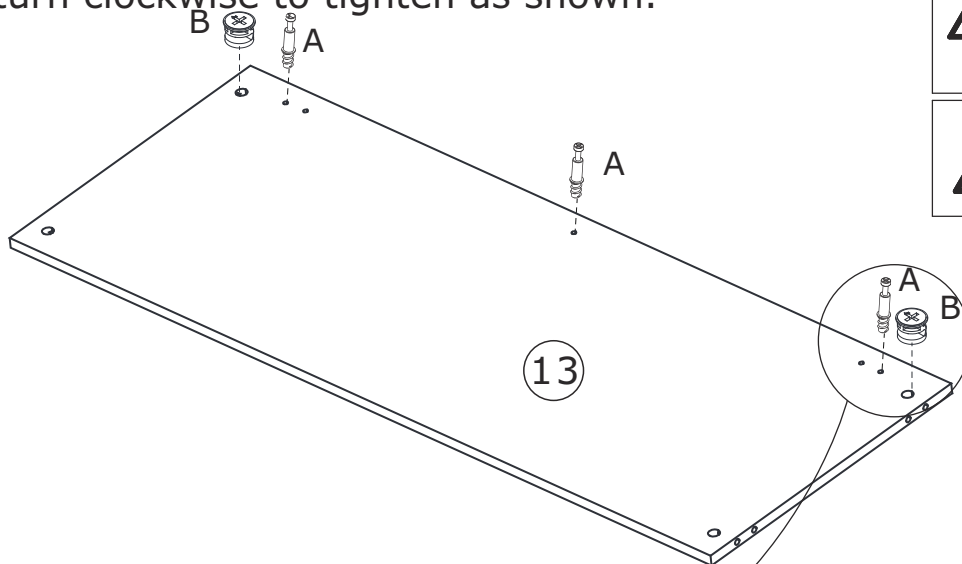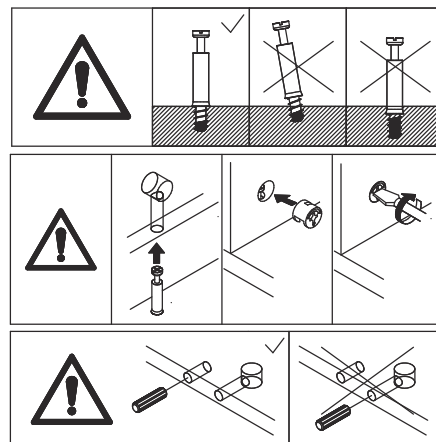


# 14

D x 8




Ø 3 x 12 mm

 E x 3

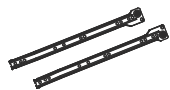


L=350 mm


 
P x 1

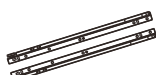



L=400 mm

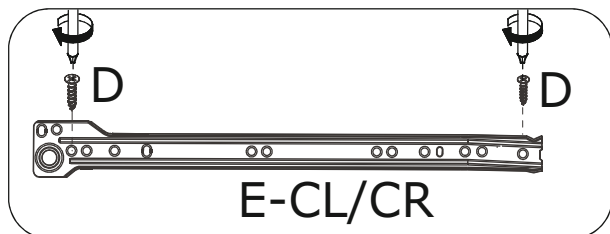 

  Fix slide rail(E-CL) to plate 11 using screw(D) as shown. Flip the plate, fix slide rail(P-CR) using screw(D) as shown.

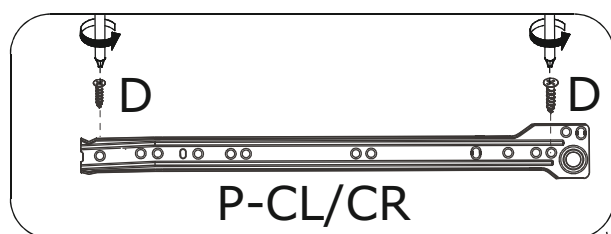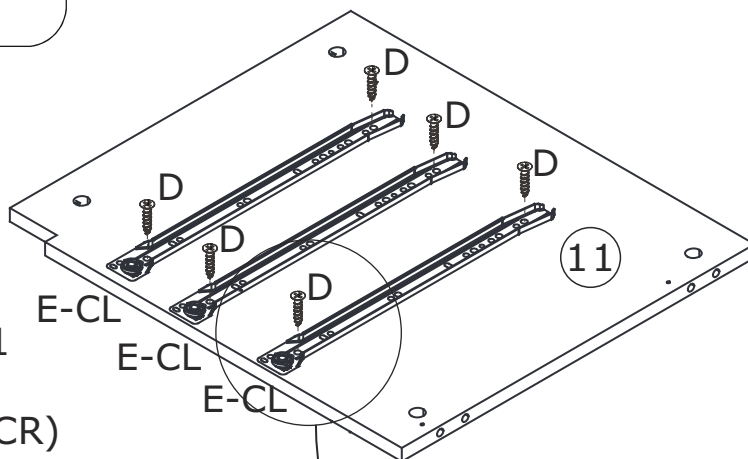

180°

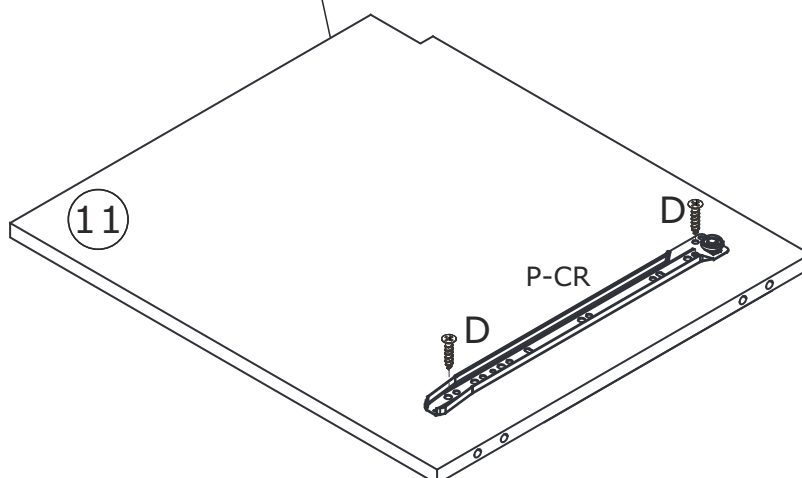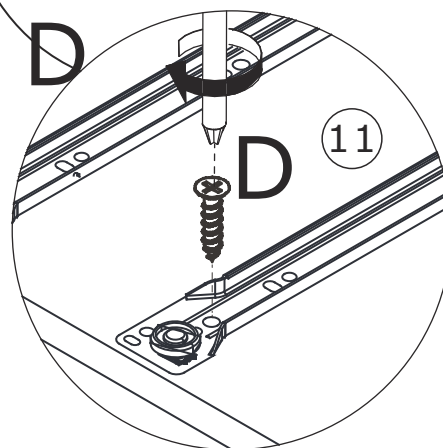  




# 15

D x 14






Ø 3 x 12 mm

 
E x 7

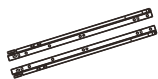


L=350 mm

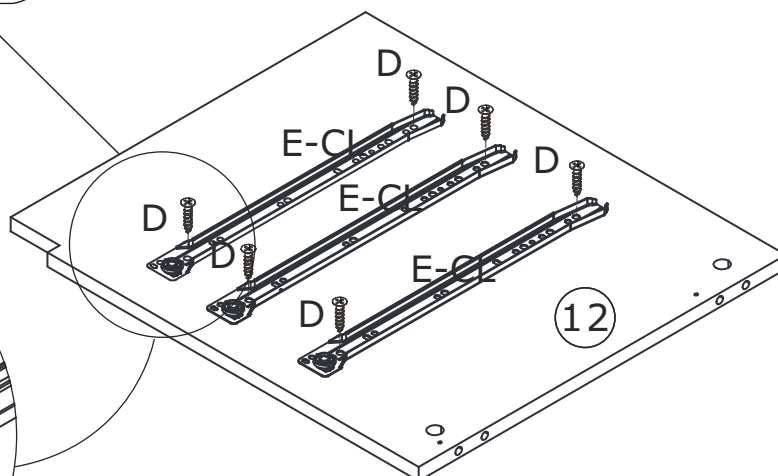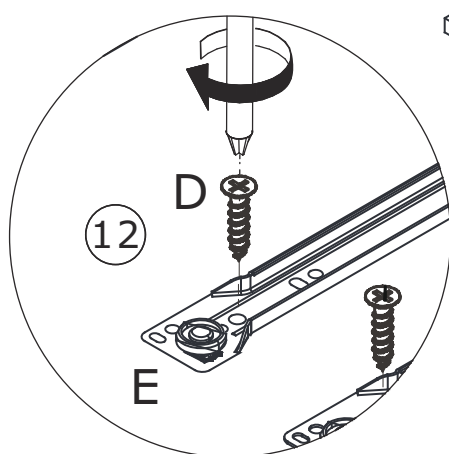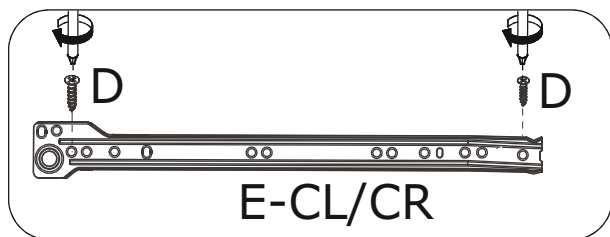   

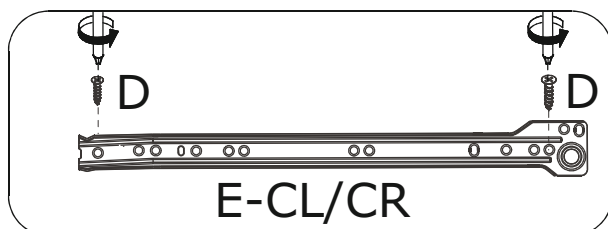 



180

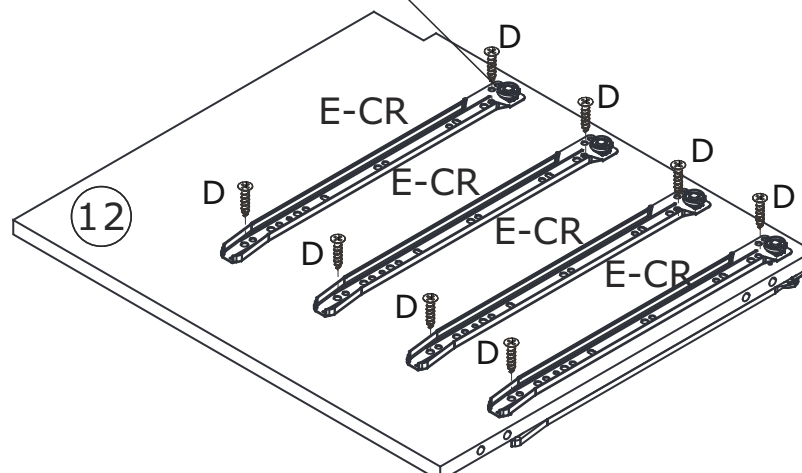 



 
Fix slide rail(E-CL) to plate 12 using screw(D) as shown.  
Flip the plate, fix slide rail(E-CR) using screw(D) as shown.



# 16

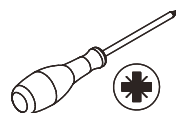
<p>A x 4</p>  <p>Ø 5 x 31 mm</p>	<p>B x 4</p>  <p>Ø 15 x 11 mm</p>	<p>C x 4</p> 	
-------------------------------------------------------------------------------------------------------------------	--------------------------------------------------------------------------------------------------------------------	------------------------------------------------------------------------------------------------	-------------------------------------------------------------------------------------

   
Insert quickfit screw(A) into corresponding holes in plate 13 at first.

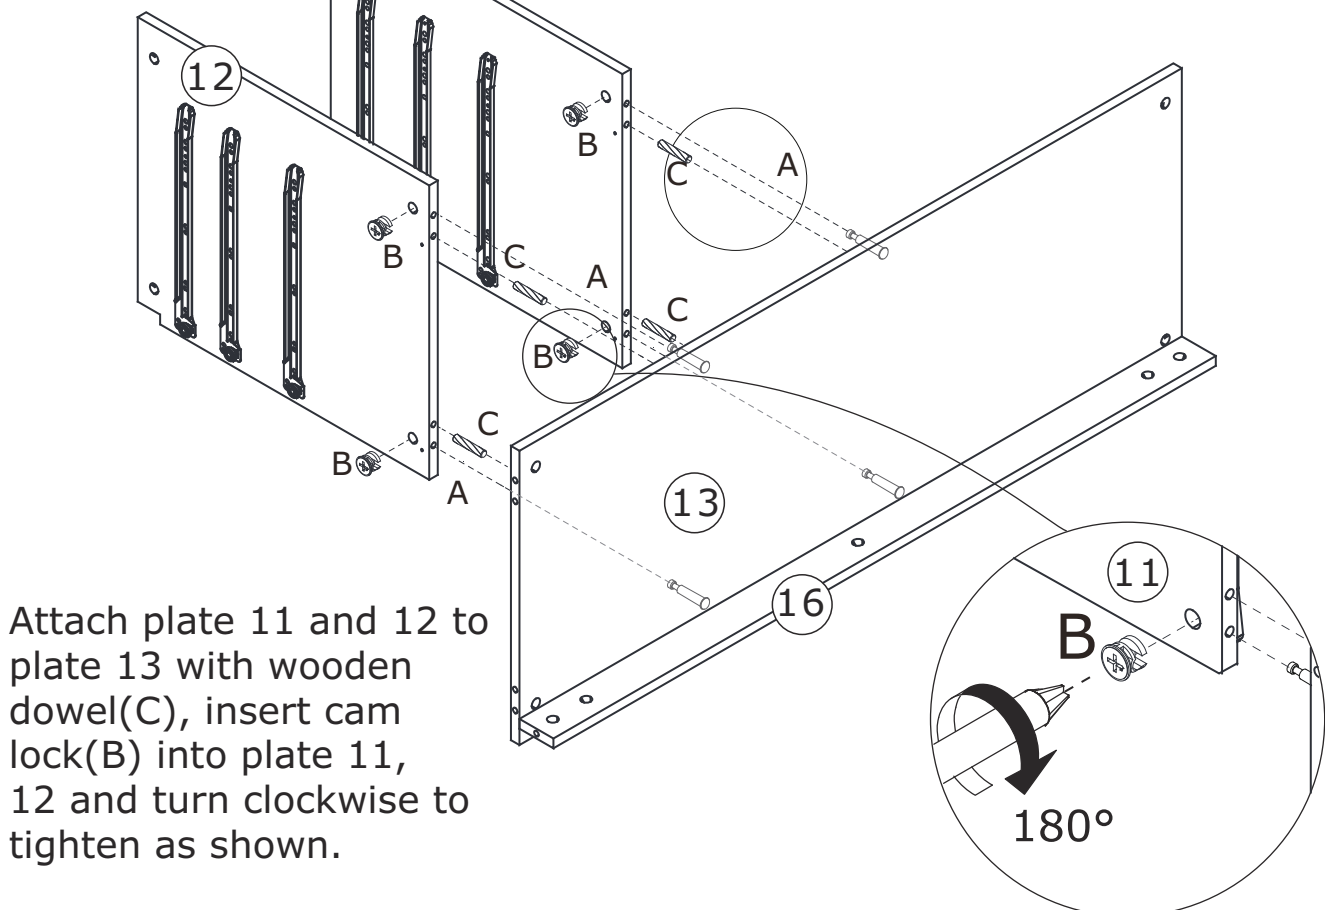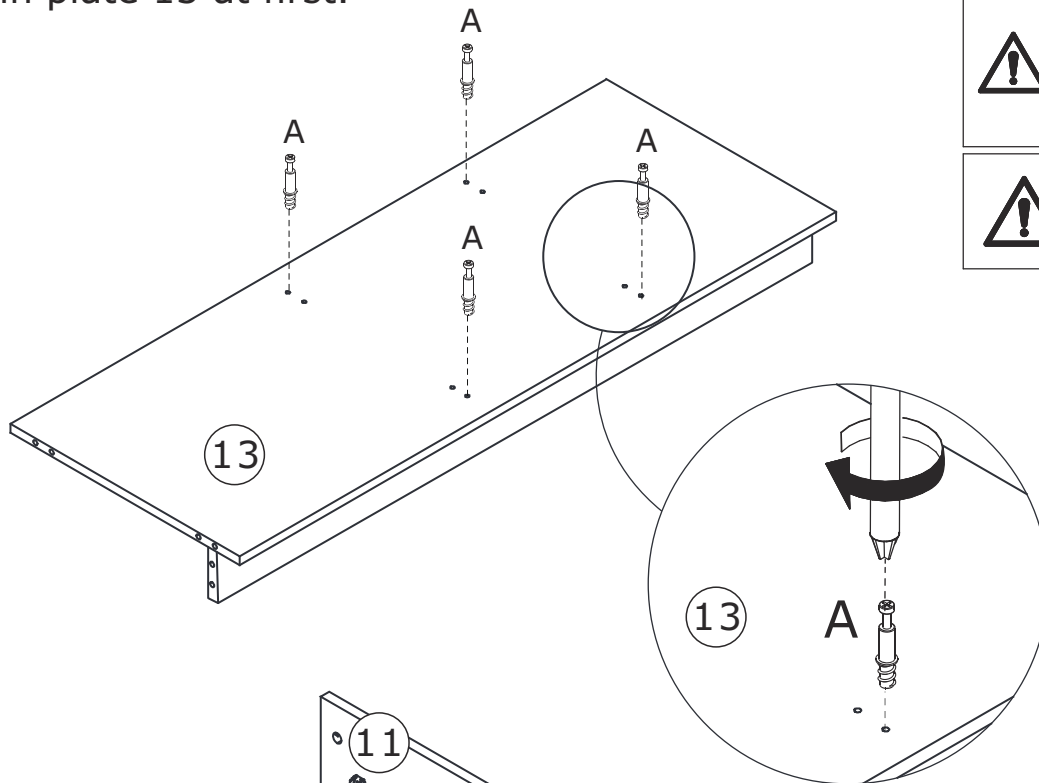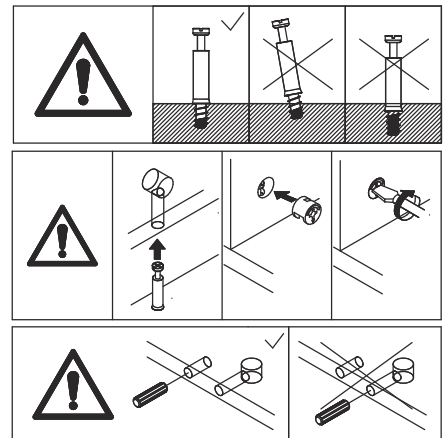




Attach plate 11 and 12 to plate 13 with wooden dowel(C), insert cam lock(B) into plate 11, 12 and turn clockwise to tighten as shown.

# 17

 A x 8  
  
 Ø 5 x 31 mm

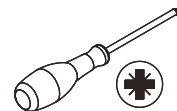 

  
 
Insert quickfit screw(A) into corresponding holes in plate 14 and 17 as shown.

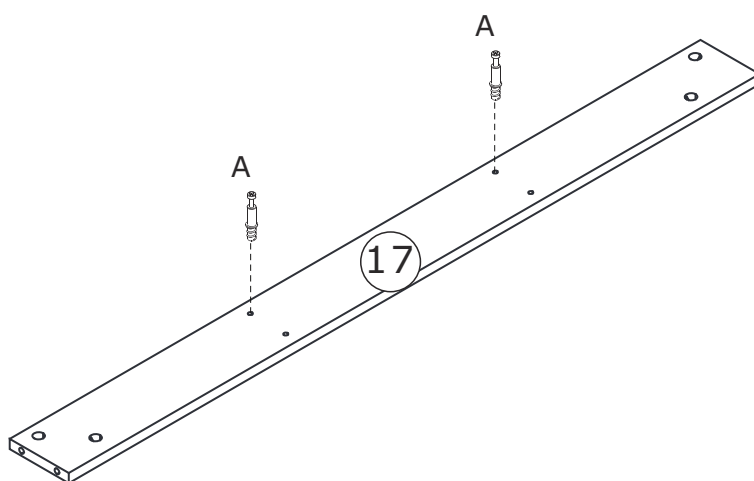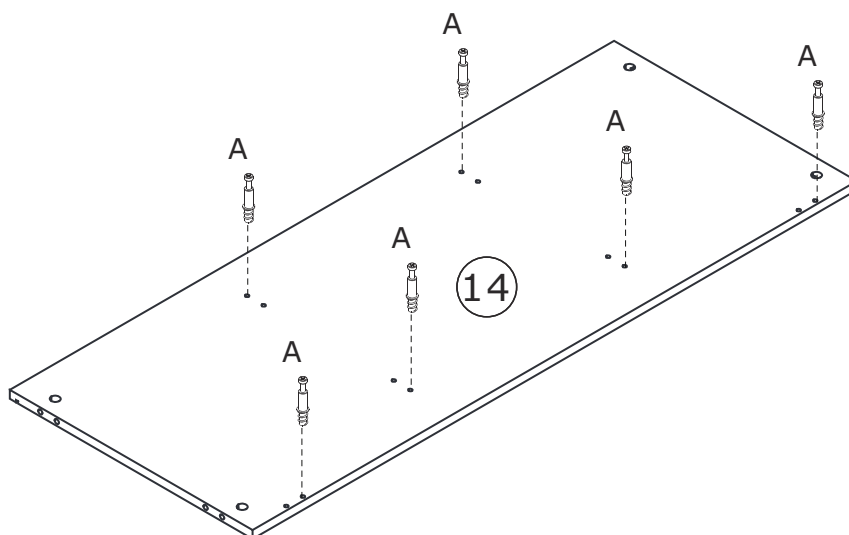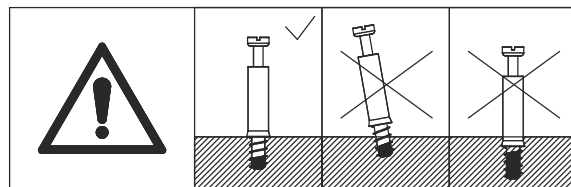

# 18

<p>B x 2</p>  <p>Ø 15 x 11 mm</p>	<p>C x 2</p> 	
--------------------------------------------------------------------------------------------------------------------	------------------------------------------------------------------------------------------------	-------------------------------------------------------------------------------------

  Attach plate 18 to plate 17 with wooden dowel(C), insert cam lock(B) into plate 18 and turn clockwise to tighten as shown.

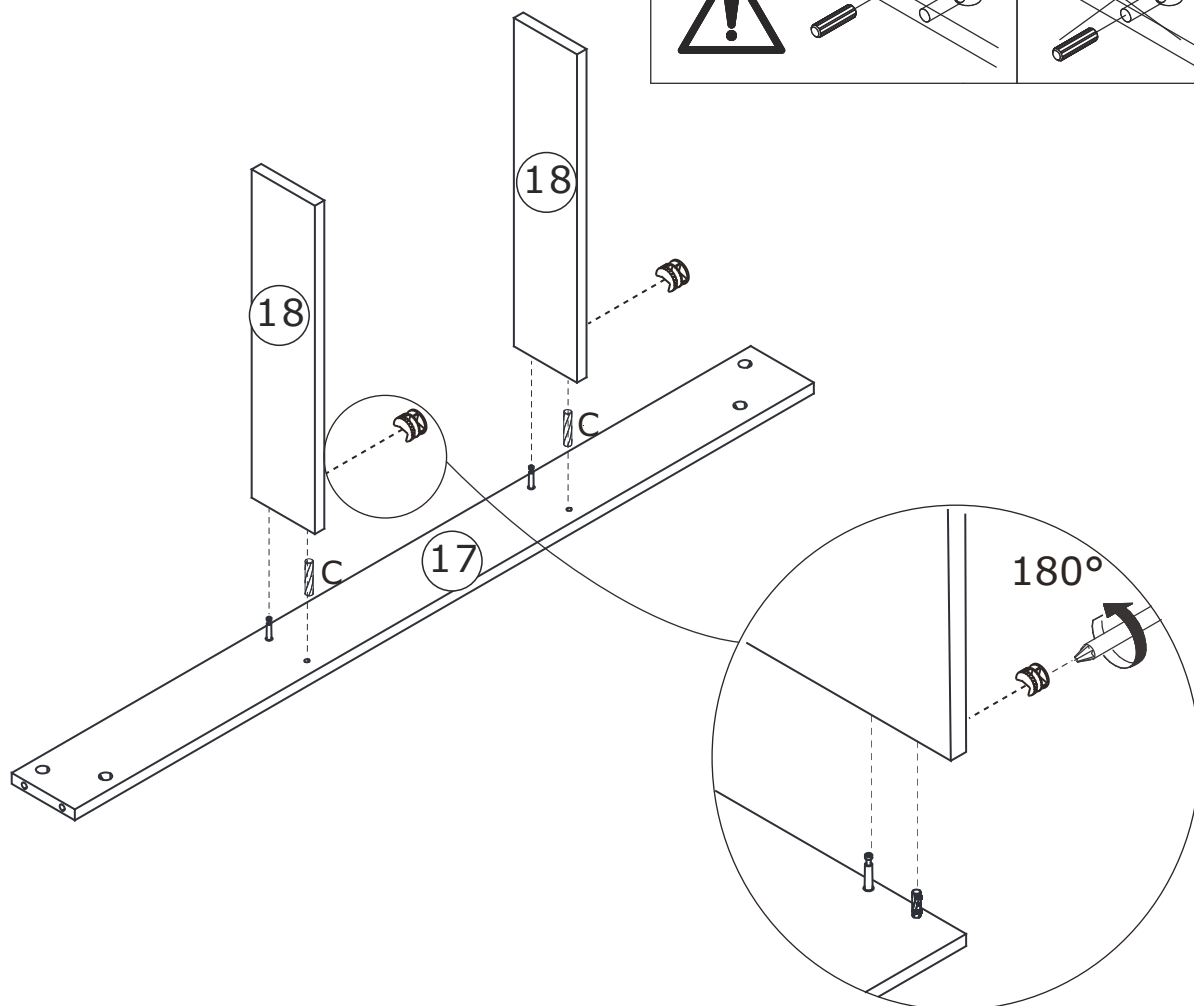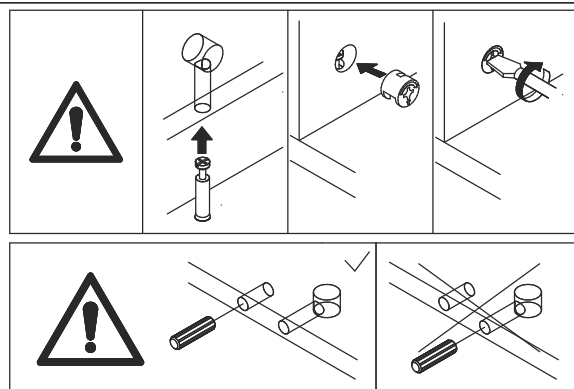


# 19

B x 6





 Ø 15 x 11 mm

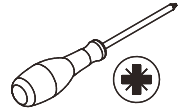




C x 6


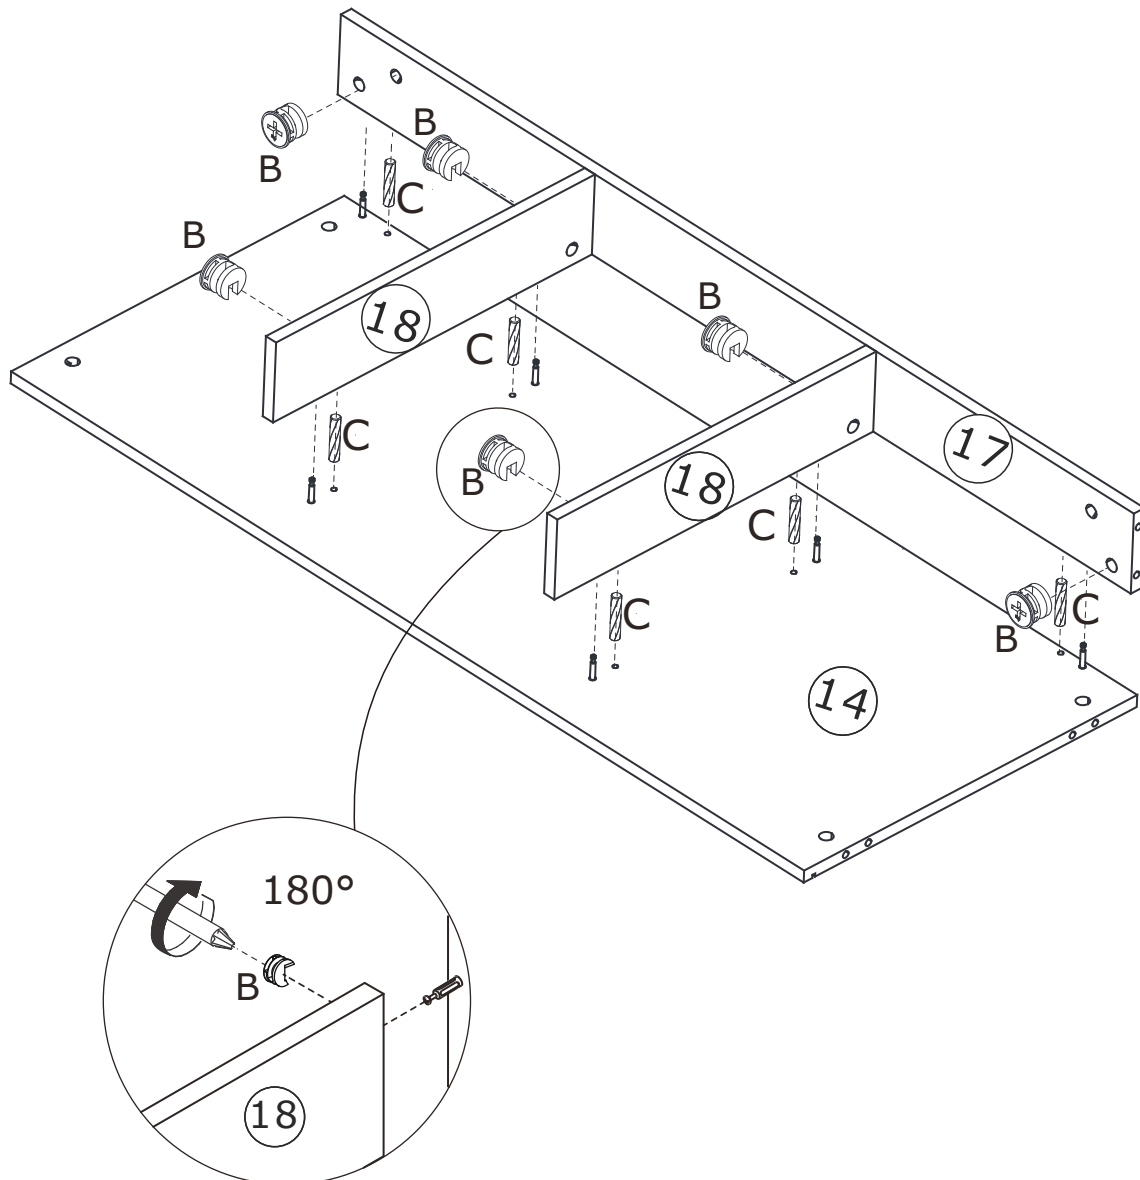 
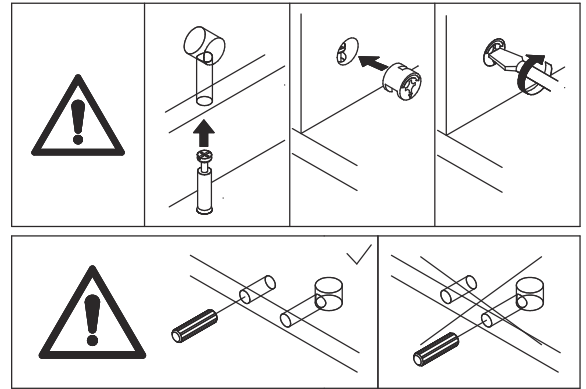 


 Attach plate 14 to plate 18 and 17 with wooden dowel(C), insert cam lock(B) into plate 17,18 and turn clockwise to tighten as shown.



# 20
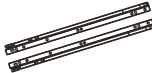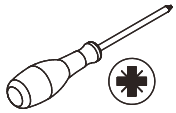
<p>A x 14</p>  <p>Ø 5 x 31 mm</p>	<p>D x 14</p>  <p>Ø 3 x 12 mm</p>	<p>E x 4</p>  <p>L=350 mm</p>	<p>P x 2</p>  <p>L=400 mm</p>	
--------------------------------------------------------------------------------------------------------------------	--------------------------------------------------------------------------------------------------------------------	----------------------------------------------------------------------------------------------------------------	-----------------------------------------------------------------------------------------------------------------	-------------------------------------------------------------------------------------

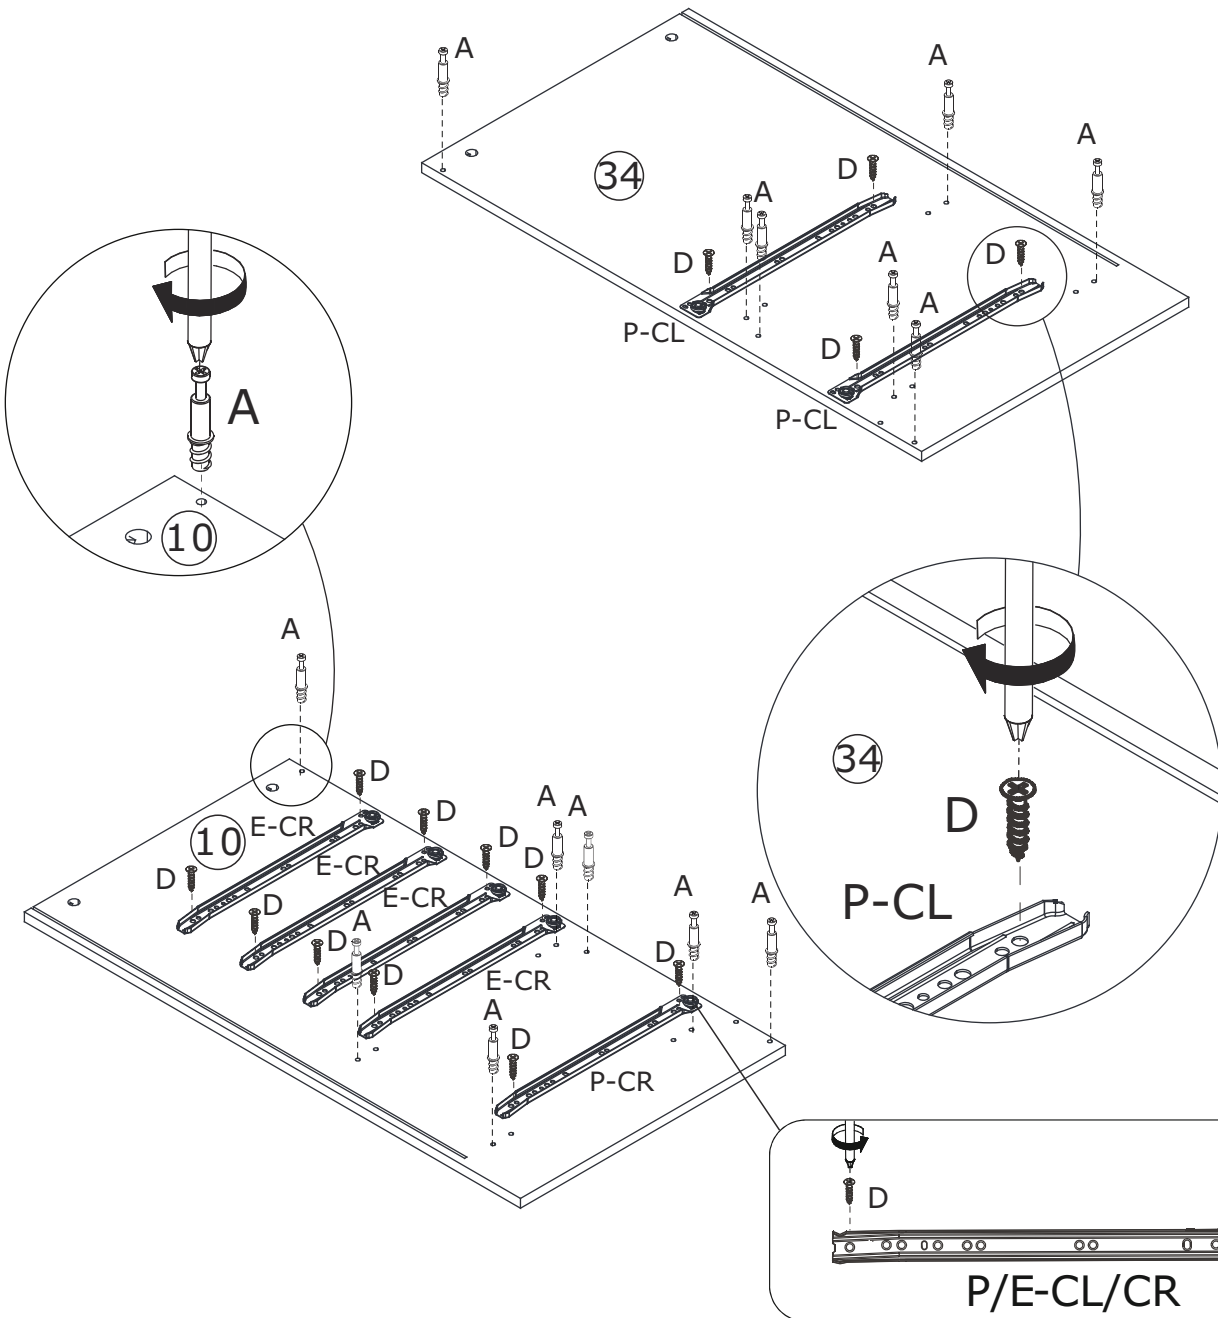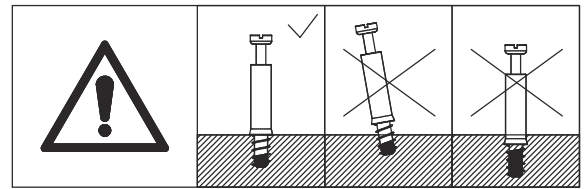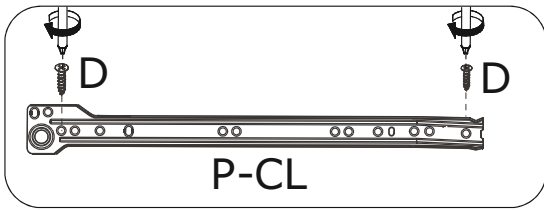   

Fix slide rail(P-CL) to plate 34 using screw(D) as shown.  
 Fix slide rail(E-CR) and (P-CR) to plate 10 using screw(D)  
 as shown.  
 Insert quickfit screw(A) into corresponding holes in plate 10  
 and 34 as shown.


# 21

 B x 6






Ø 15 x 11 mm

C x 5

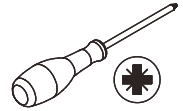

  
 
Attach plate 34 to plate 15,13,14 and 17 with wooden dowel(C), insert cam lock(B) into plate 13,14,15,17 and turn clockwise to tighten as shown.

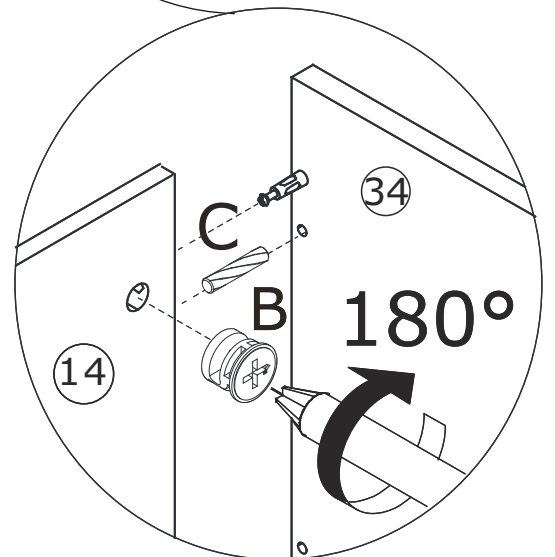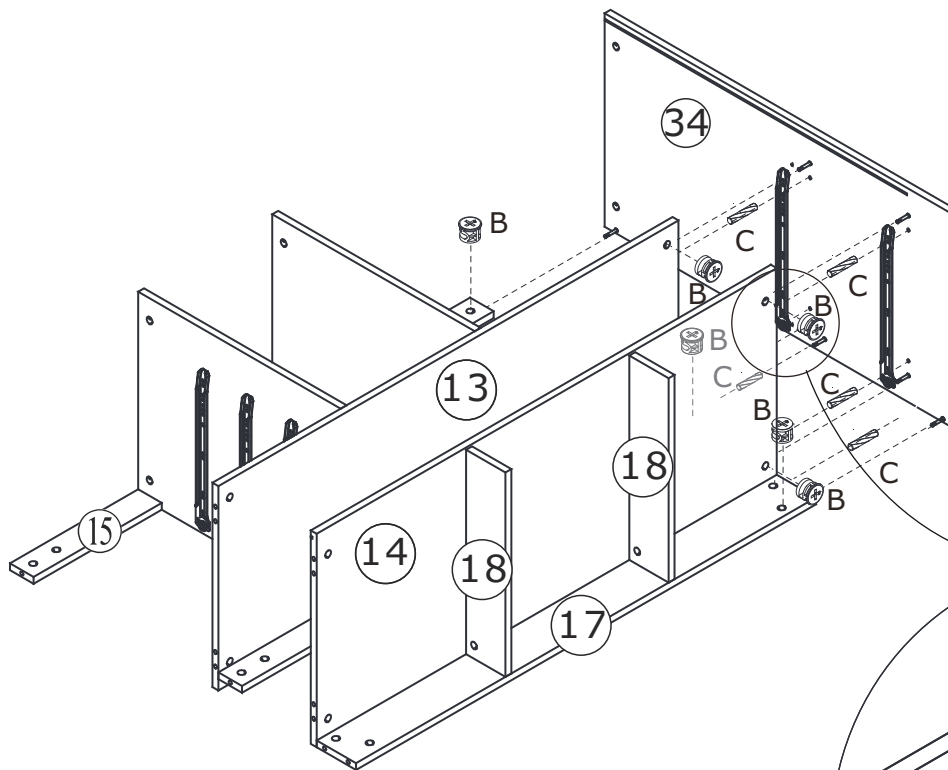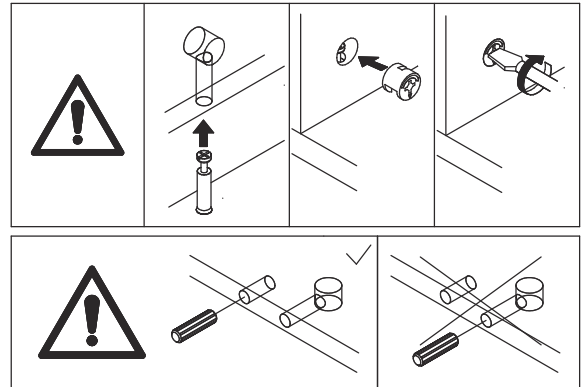

# 22



  Attach plate 10 to another side of plate 15, 13, 14 and 17 with wooden dowel(C), insert cam lock(B) into plate 13, 14, 15, 17 and turn clockwise to tighten as shown.

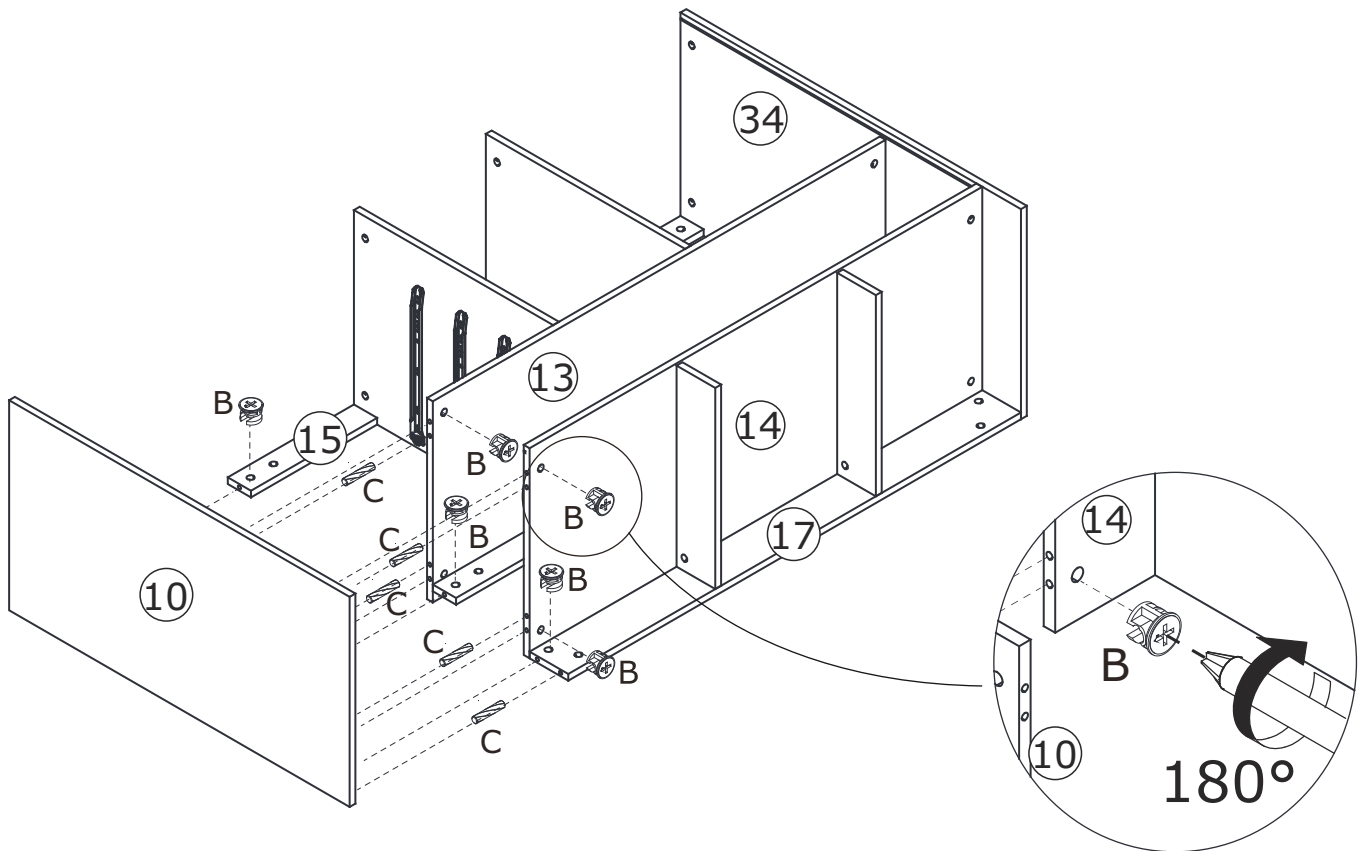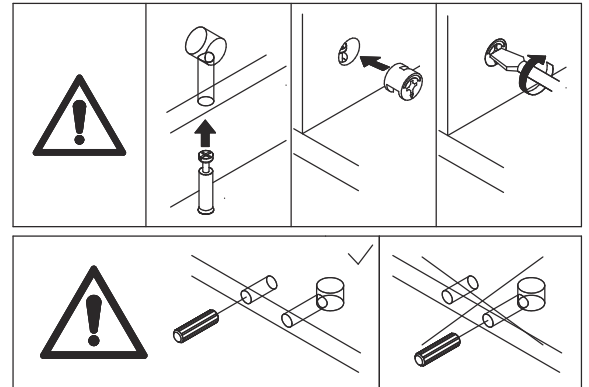




# 23

D x 4






Ø 3 x 12 mm

 E x 2

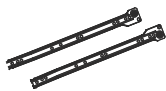

L=350 mm

   L x 1

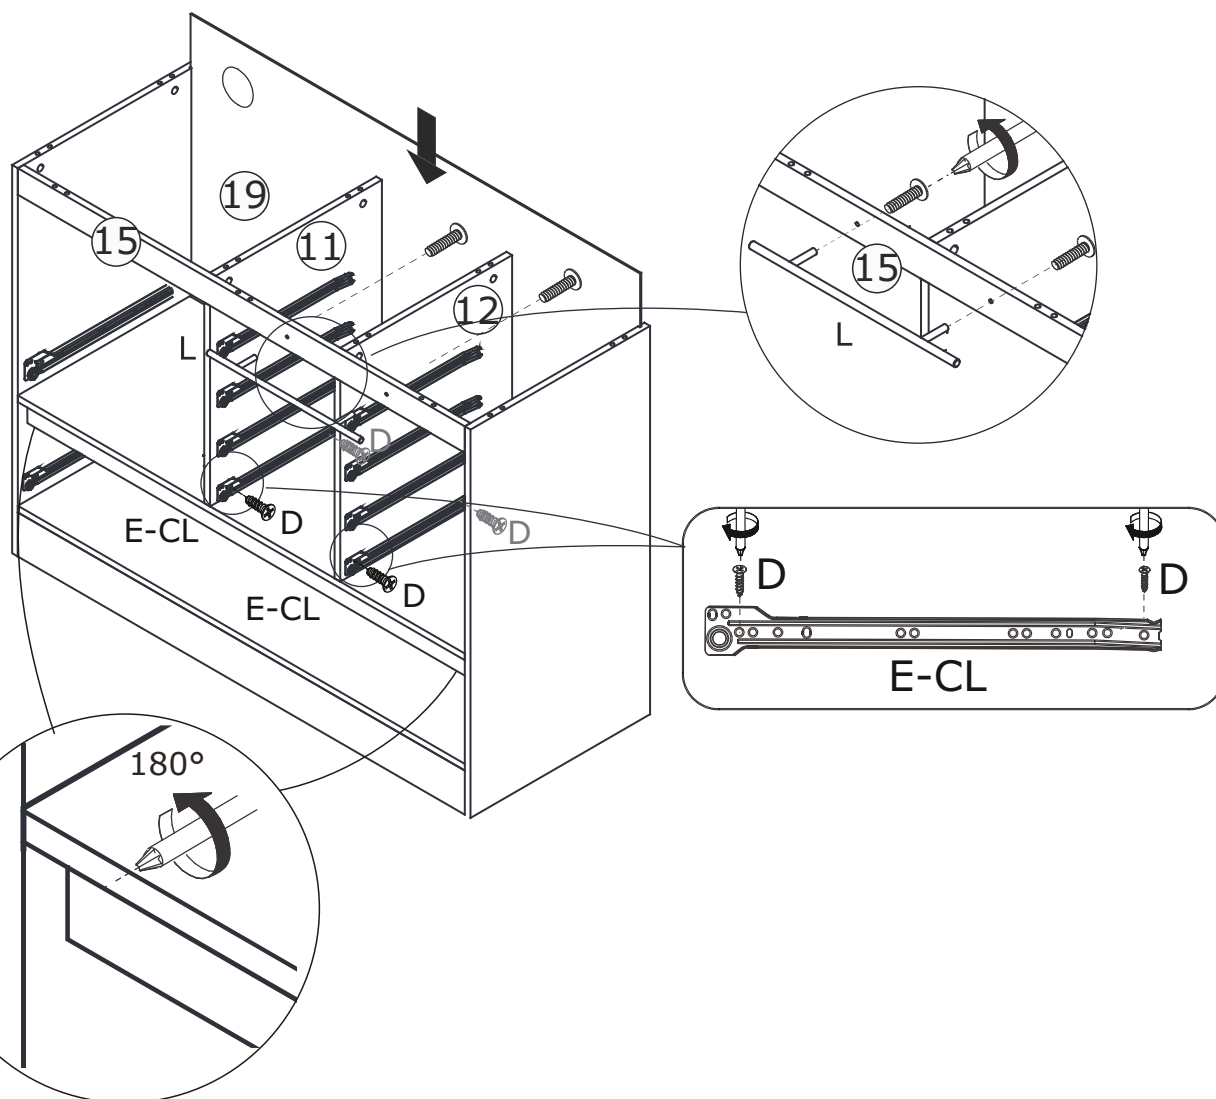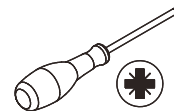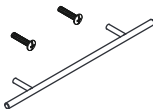


Fix part(L) to plate 15 as shown.


Slide plate 19 along grooves in plate 10 and 34 as shown.

Fix slide rail(E-CL) to the bottom of plate 11 and 12 respectively using screw(D) as shown.

 24

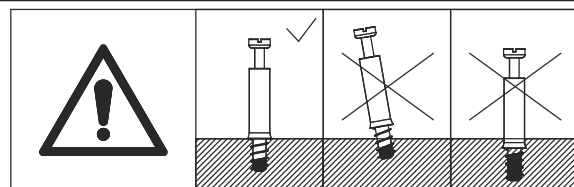

 Insert quickfit screw(A) into corresponding holes in plate 8 as shown.

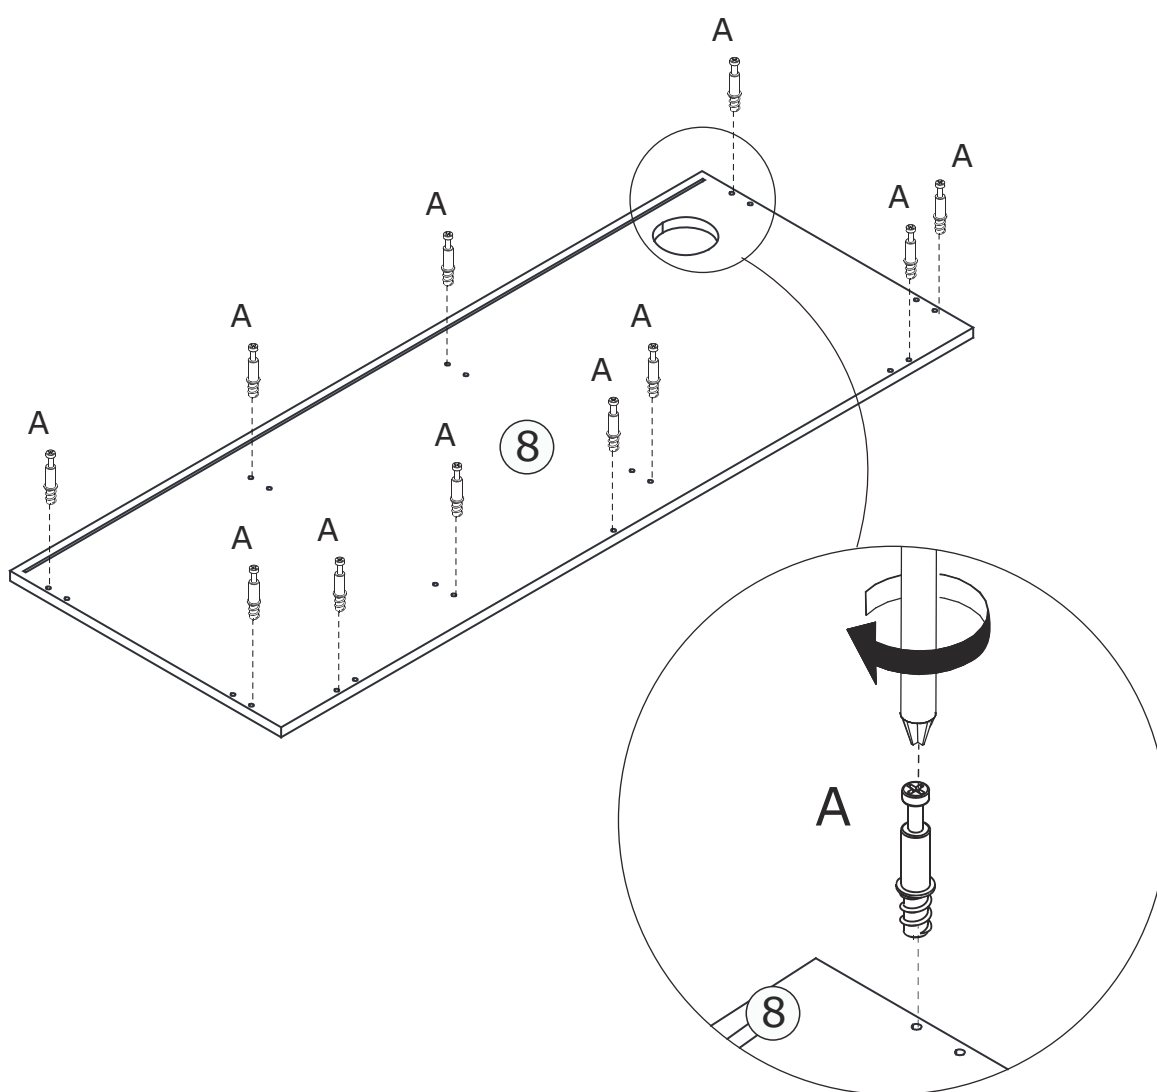

# 25

 
 
 
A x 4






B x 11



C x 10

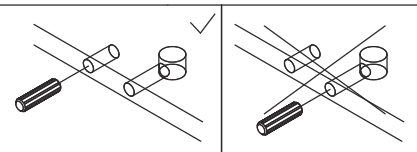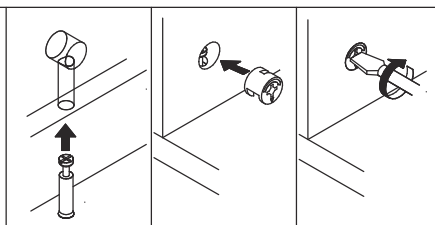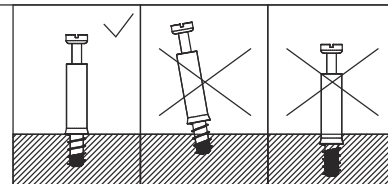

   Cover plate 8 to the top of the unit with wooden dowel(C), insert cam lock(B) into plate 34,11,12,10,15 and turn clockwise to tighten as shown. Insert quickfit screw(A) into corresponding holes in top of plate 8 as shown.

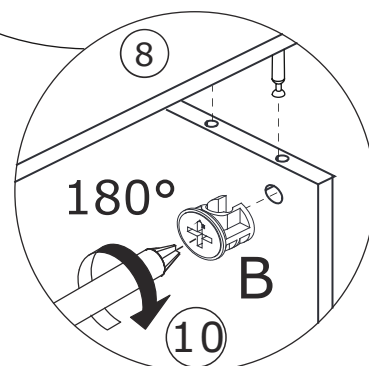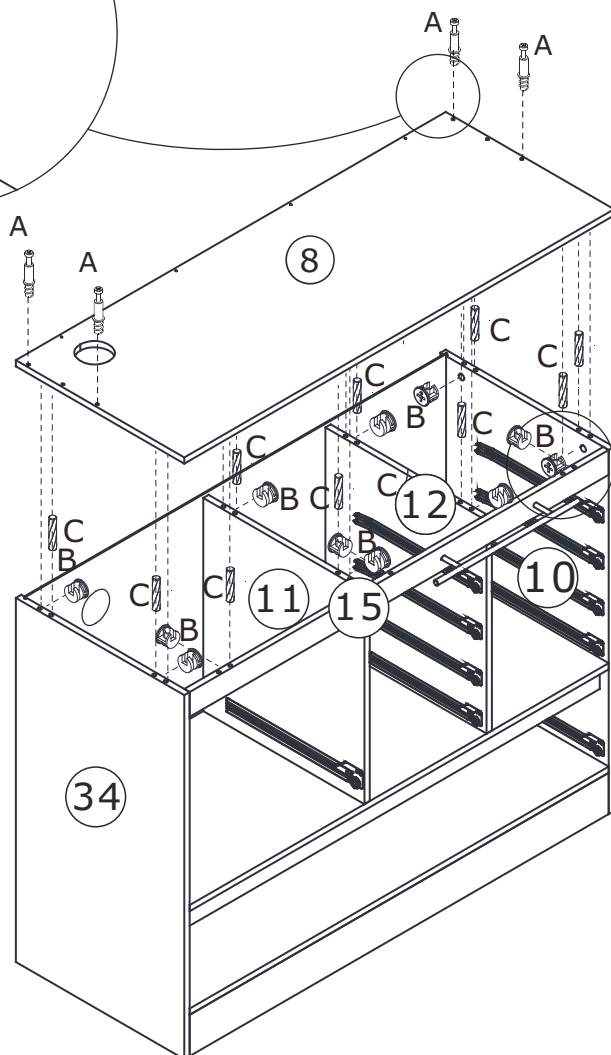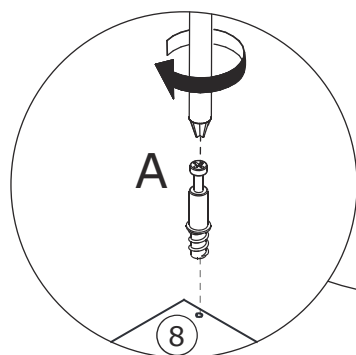


# 26



A x 8



 Ø 5 x 31 mm


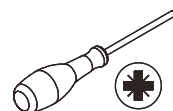


  Insert quickfit screw(A) into corresponding holes in plate 2 and 3 as shown.

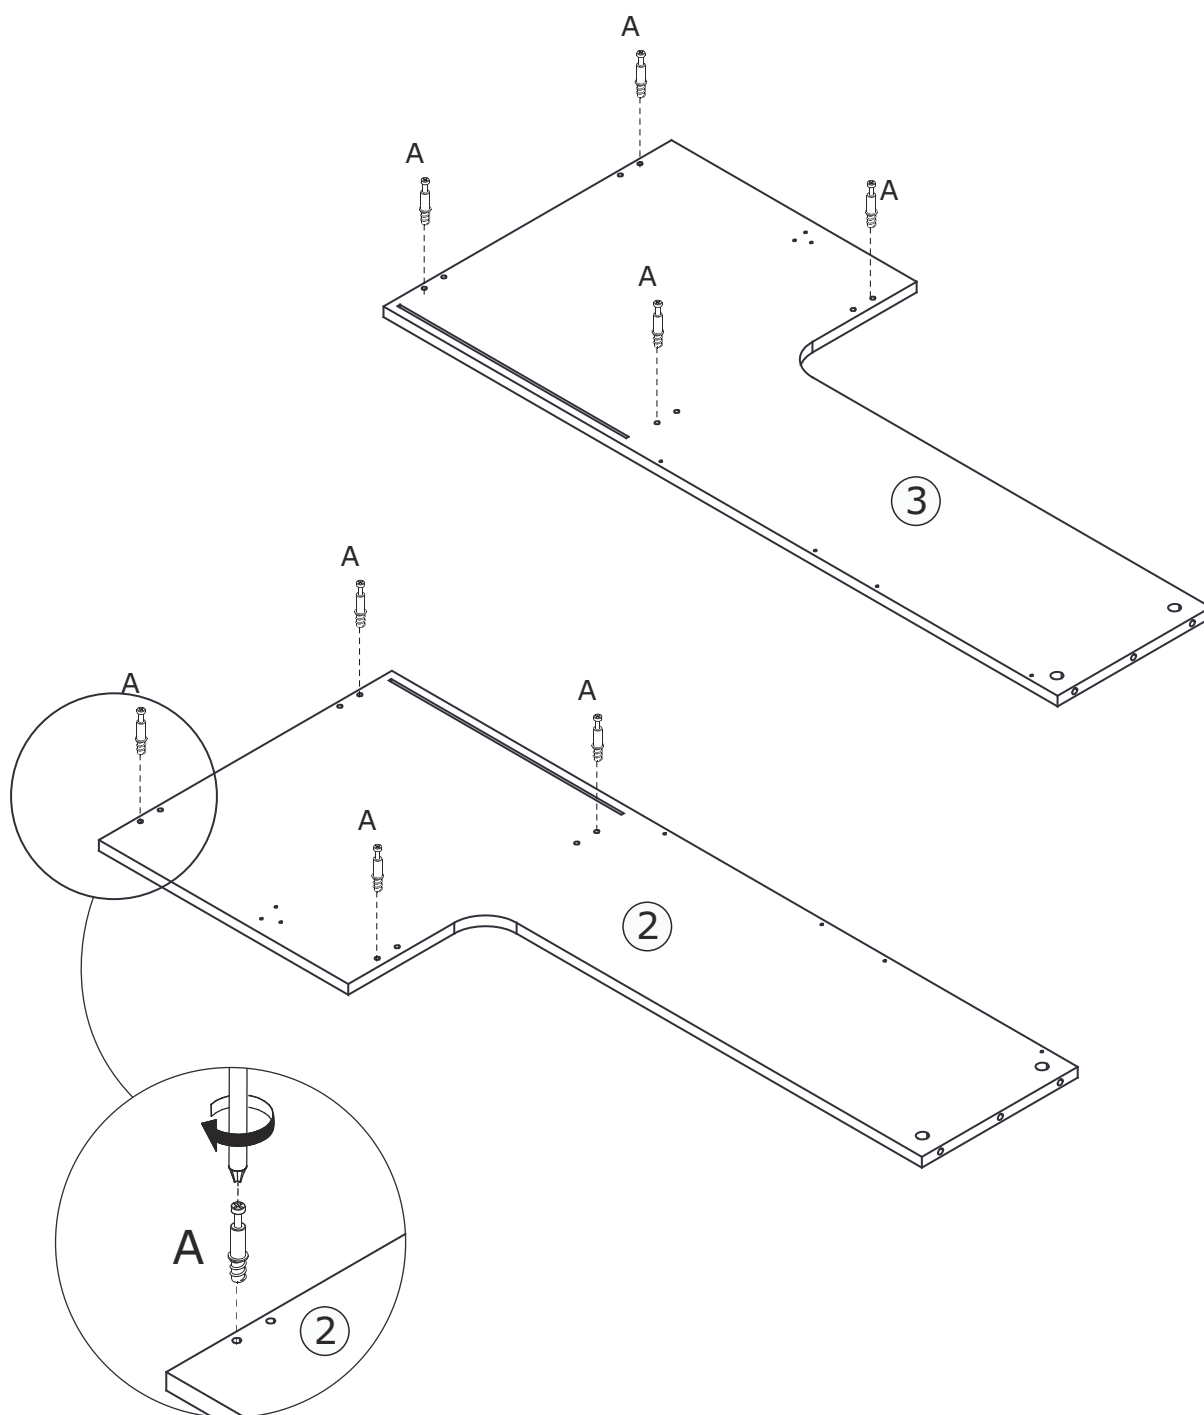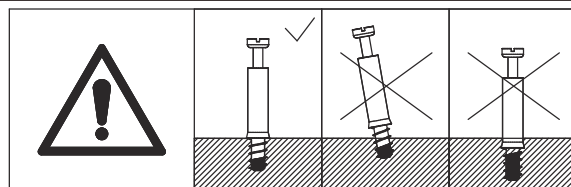


# 27

  Q x 1

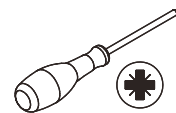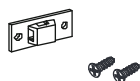

Fix part(Q) to plate 1 as shown.

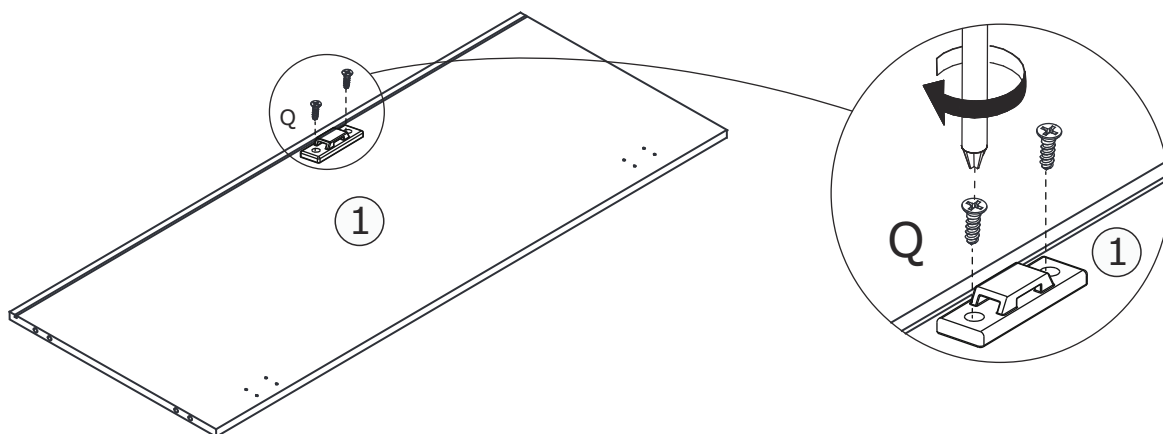 

# 28

B x 4

 
 


Ø 15 x 11 mm

C x 4



Attach plate 2 to plate 1 and 4 with wooden dowel(C), insert cam lock(B) into plate 1,4 and turn clockwise to tighten as shown.

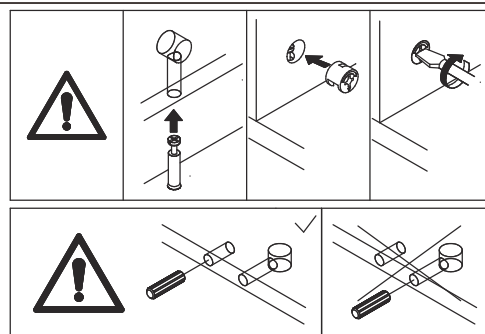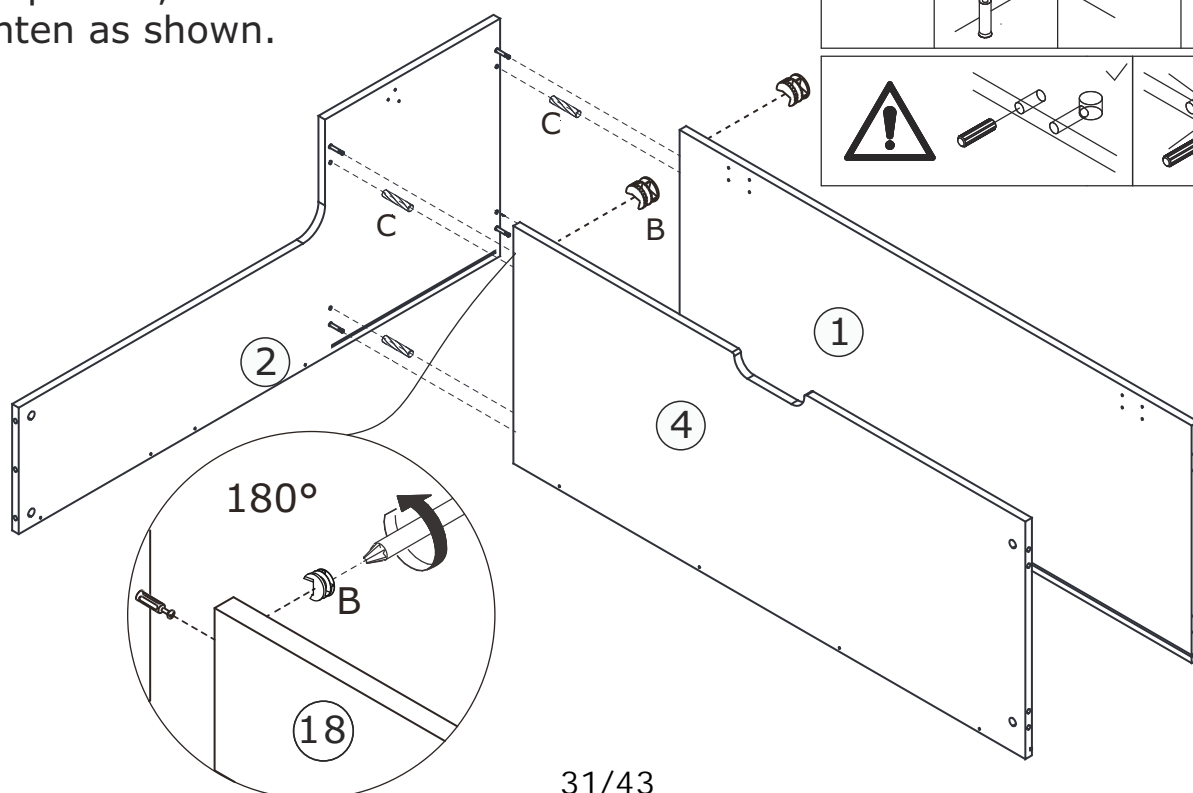


# 29

B x 4





Ø 15 x 11 mm

 C x 4

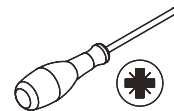

  Slide plate 5 into available slots at first. Attach plate 3 to another side of plate 1 and 4 with wooden dowel(C), insert cam lock(B) into plate 1,4 and turn clockwise to tighten as shown.

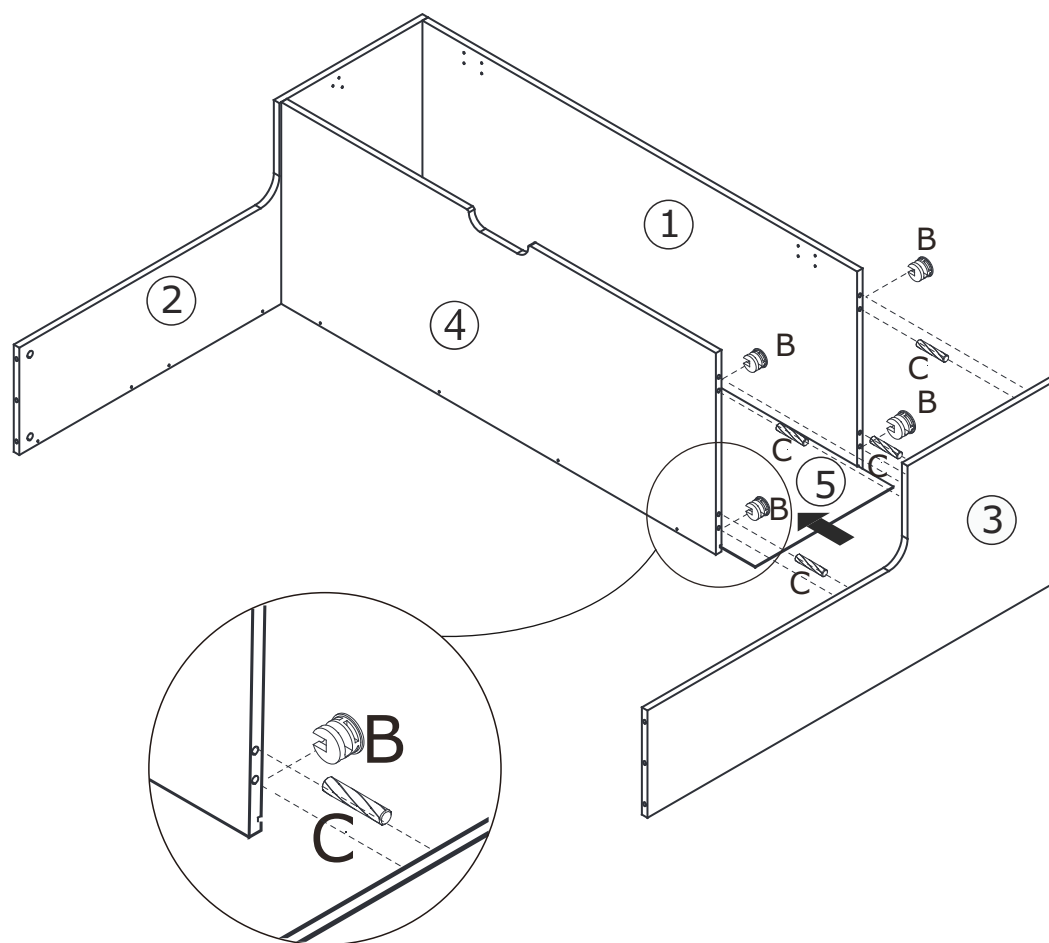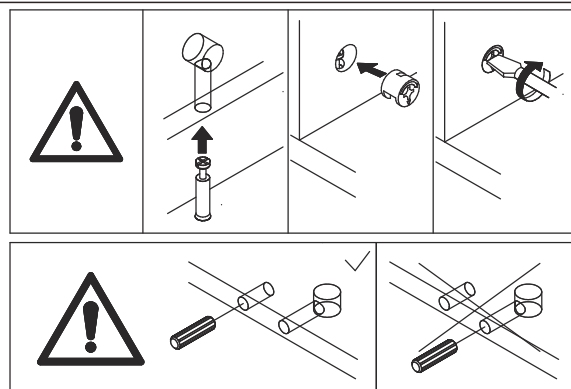


30


K x 12



 Ø 3 x 12 mm

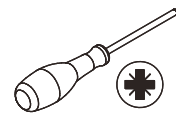

 
Fix iron plate 7 with plate 2,3 and 5 using screw(K) as shown.

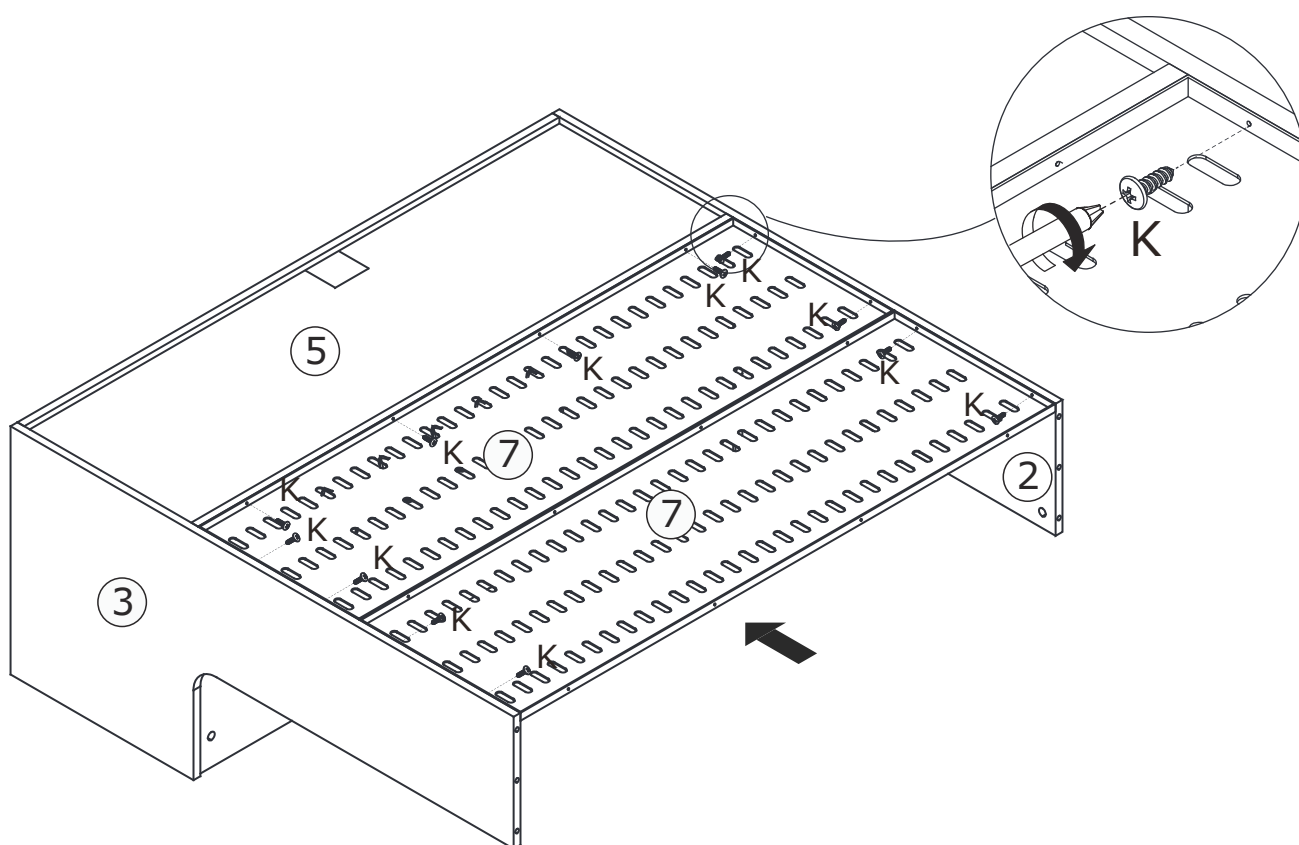

# 31



 Attach door plate 6 to plate 1 by fixing hinge with screw(H) as shown.  
Fix part(J) to plate 2,3 and 6 using screw(H) as shown.

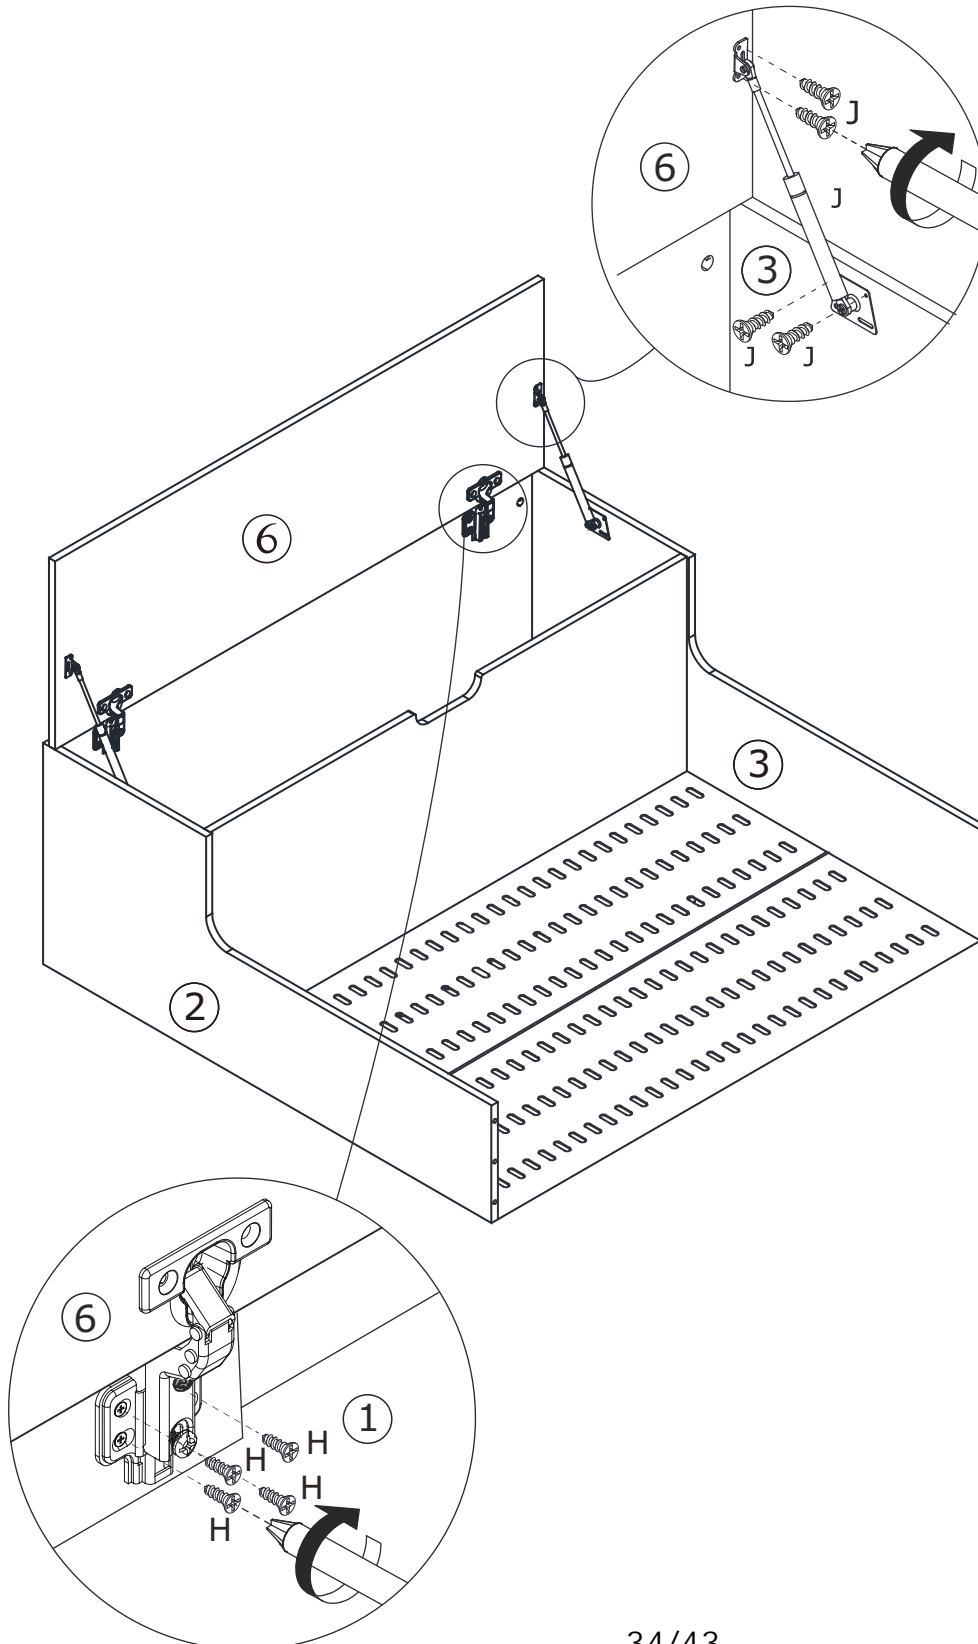




# 32

B x 4






Ø 15 x 11 mm

 C x 2

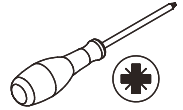


 
 
 
Connect the two assembled components with wooden dowel(C), insert cam lock(B) into plate 2,3 and turn clockwise to tighten as shown.

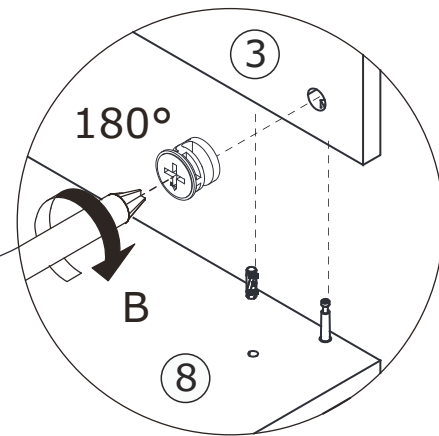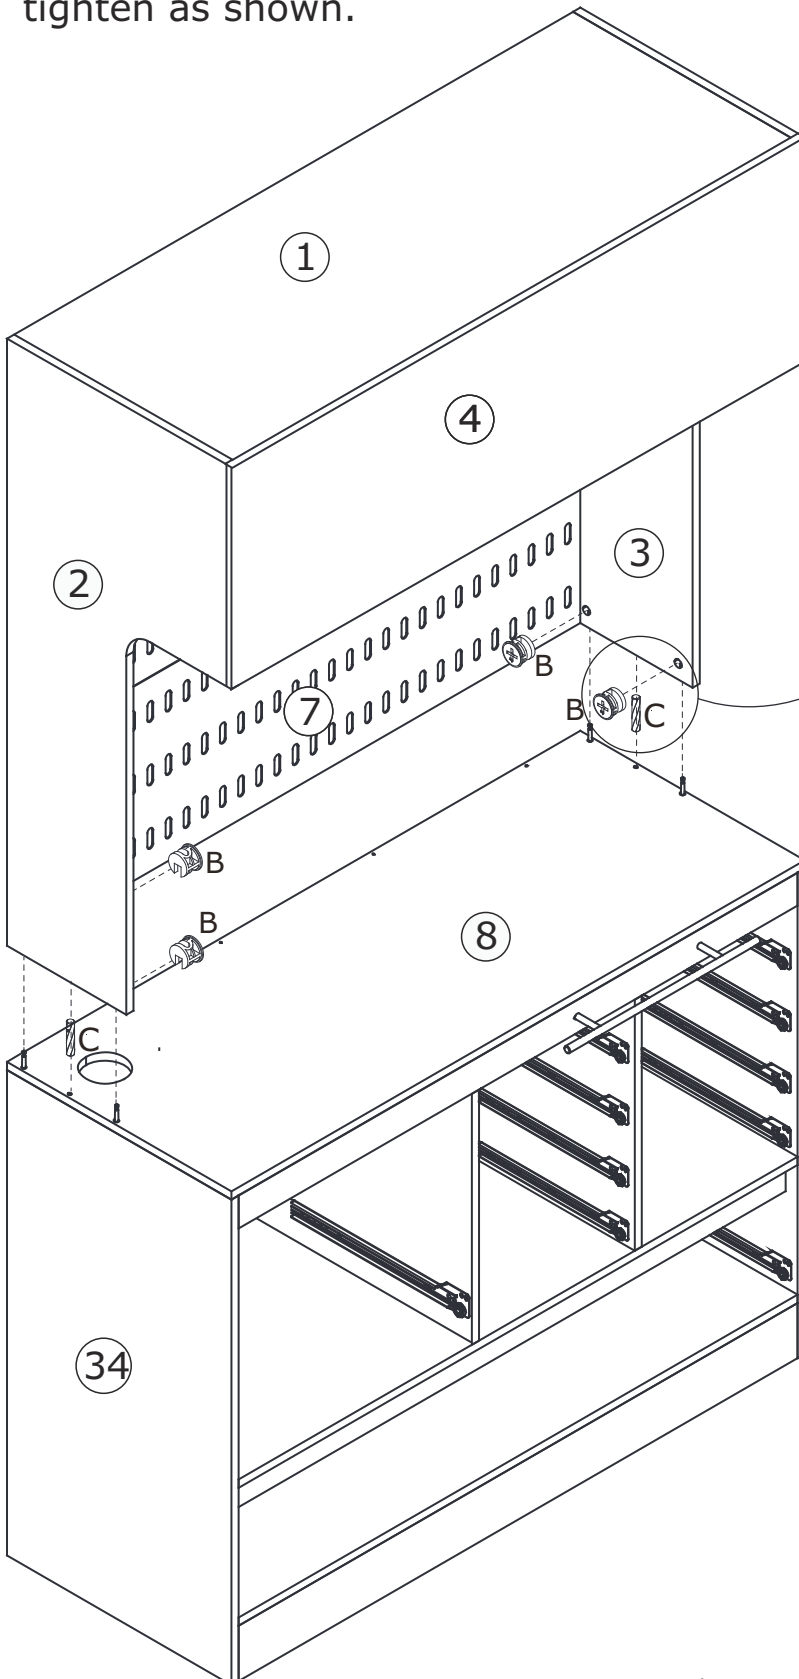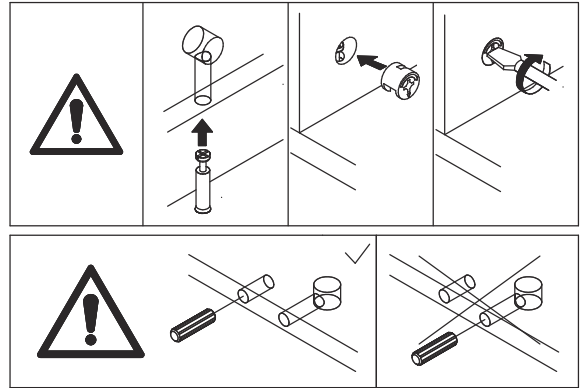

Require more than 2 people!

33

    S x 4

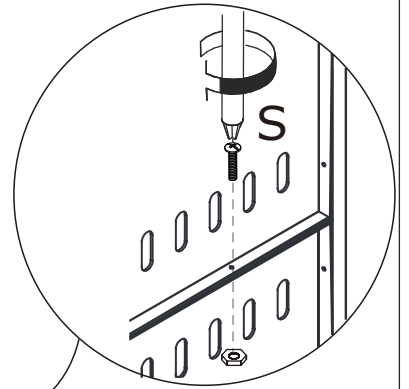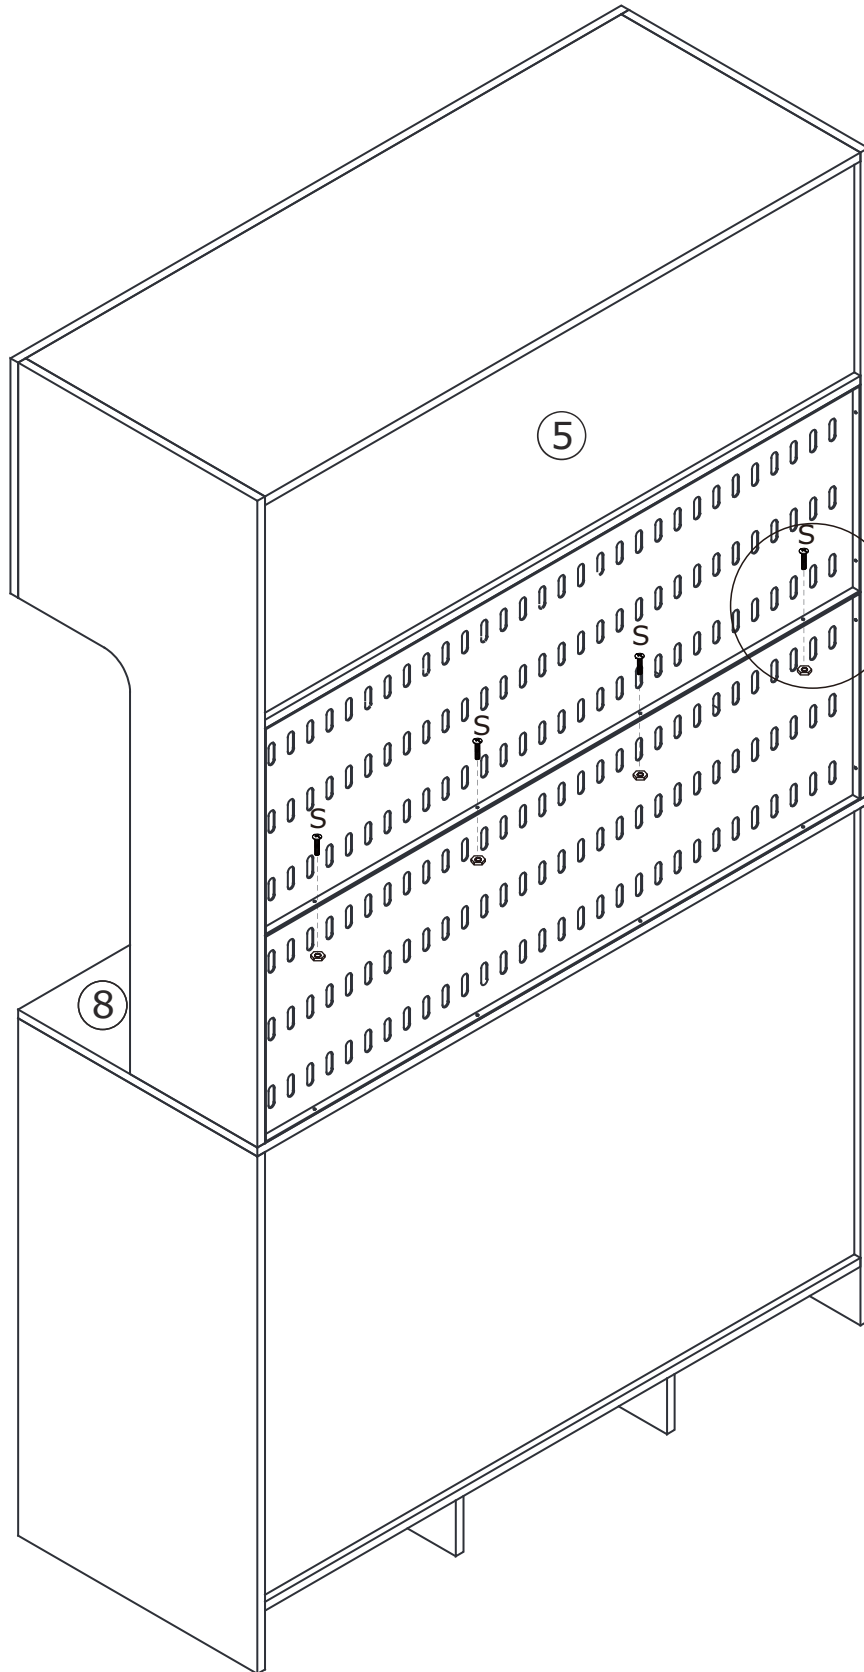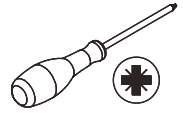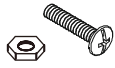

# 34

K x 4

 


Ø3 x 12 mm


M x 14



Ø3 x 10 mm

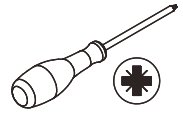

 Fix iron plate 7 with plate 8 using screw(K) as shown.  
Reinforce back plate 5 using part(M) as shown.

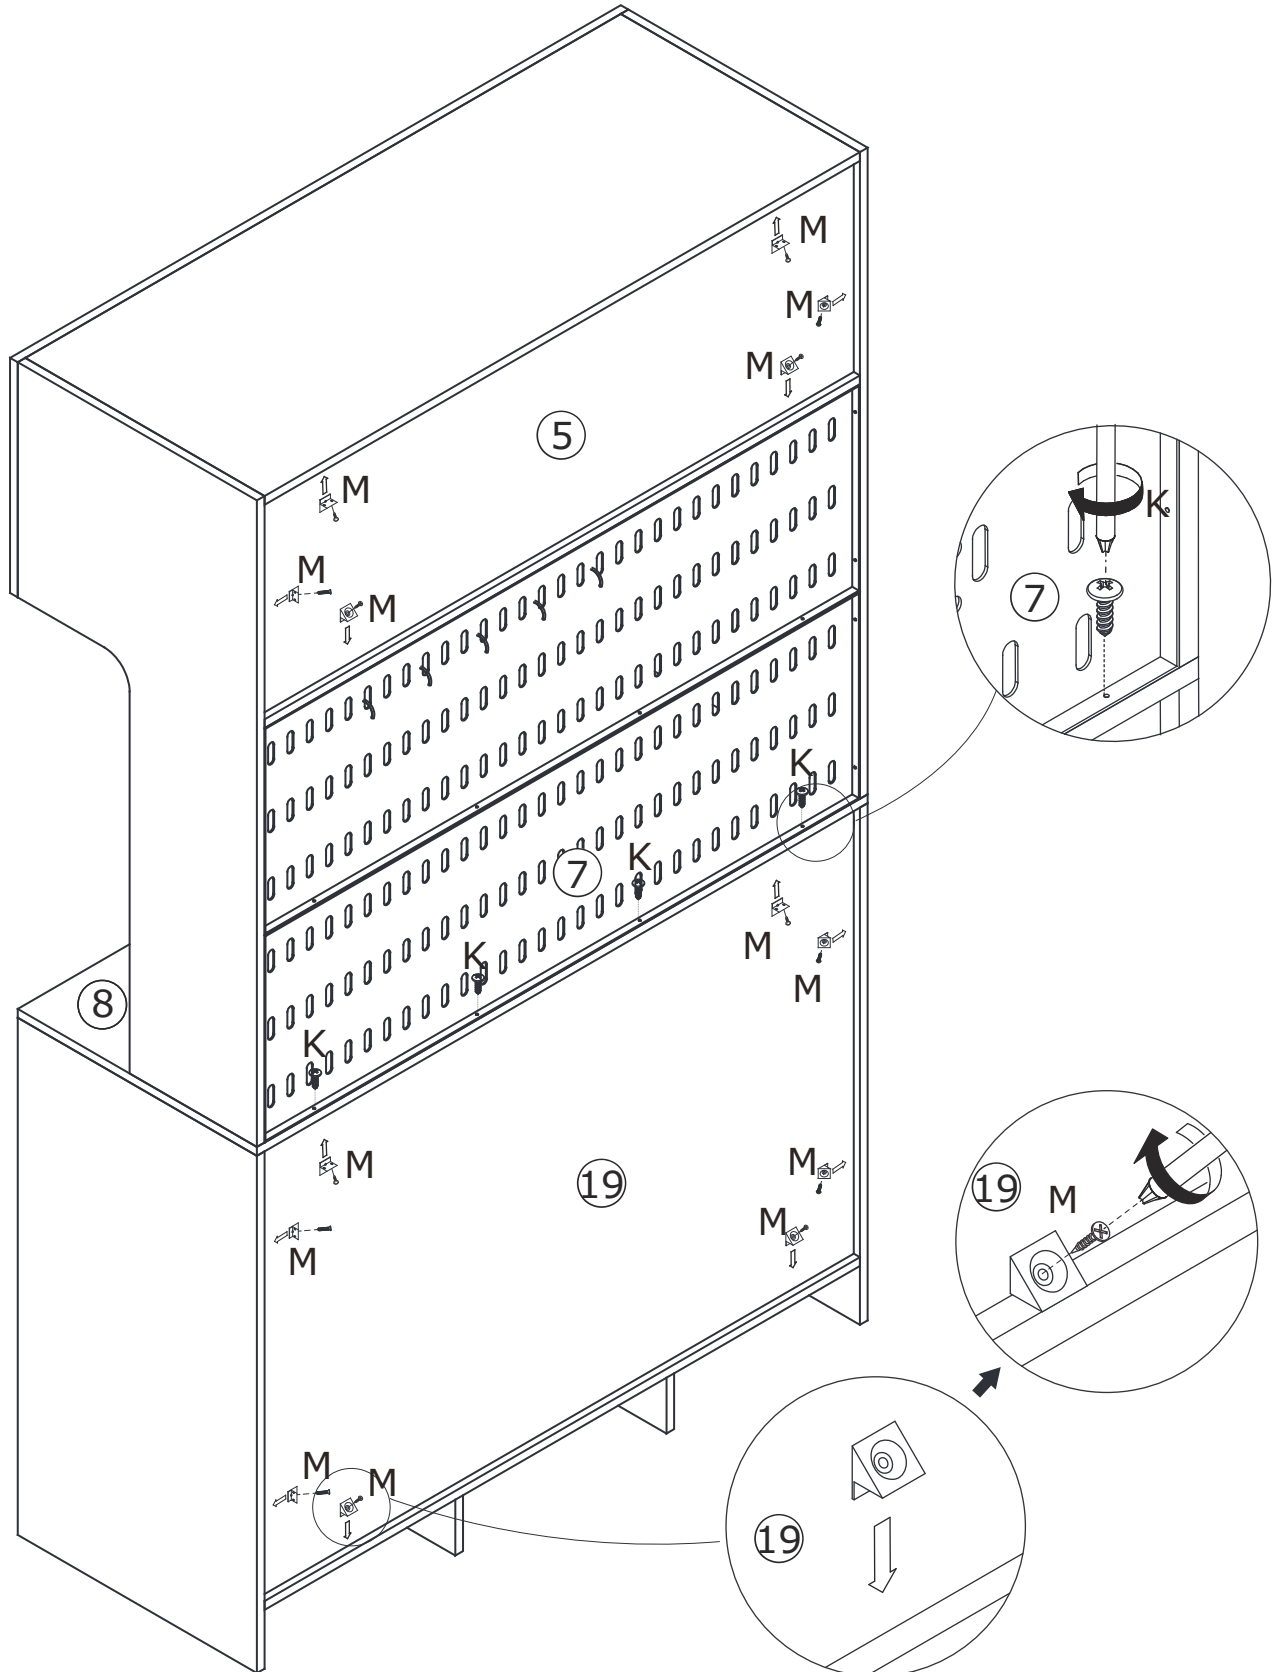



# 35

D x 4




Ø3 x 12 mm

  H x 2

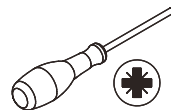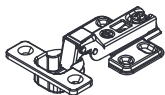

 Fix hinge(H) to plate 6 using screw(D) as shown.

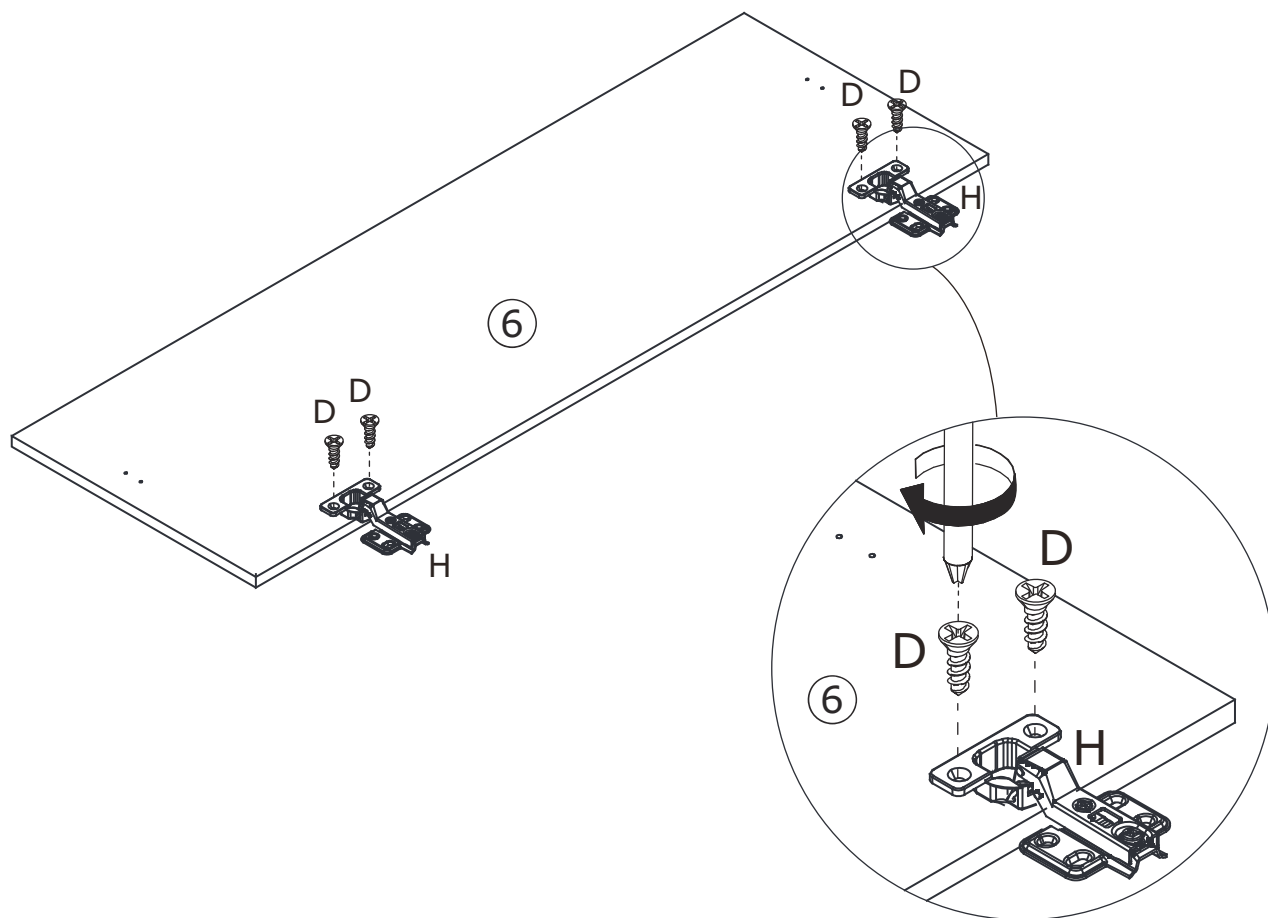


# 36

G x 5



 Place the hook, align rails, slide drawers into corresponding position.

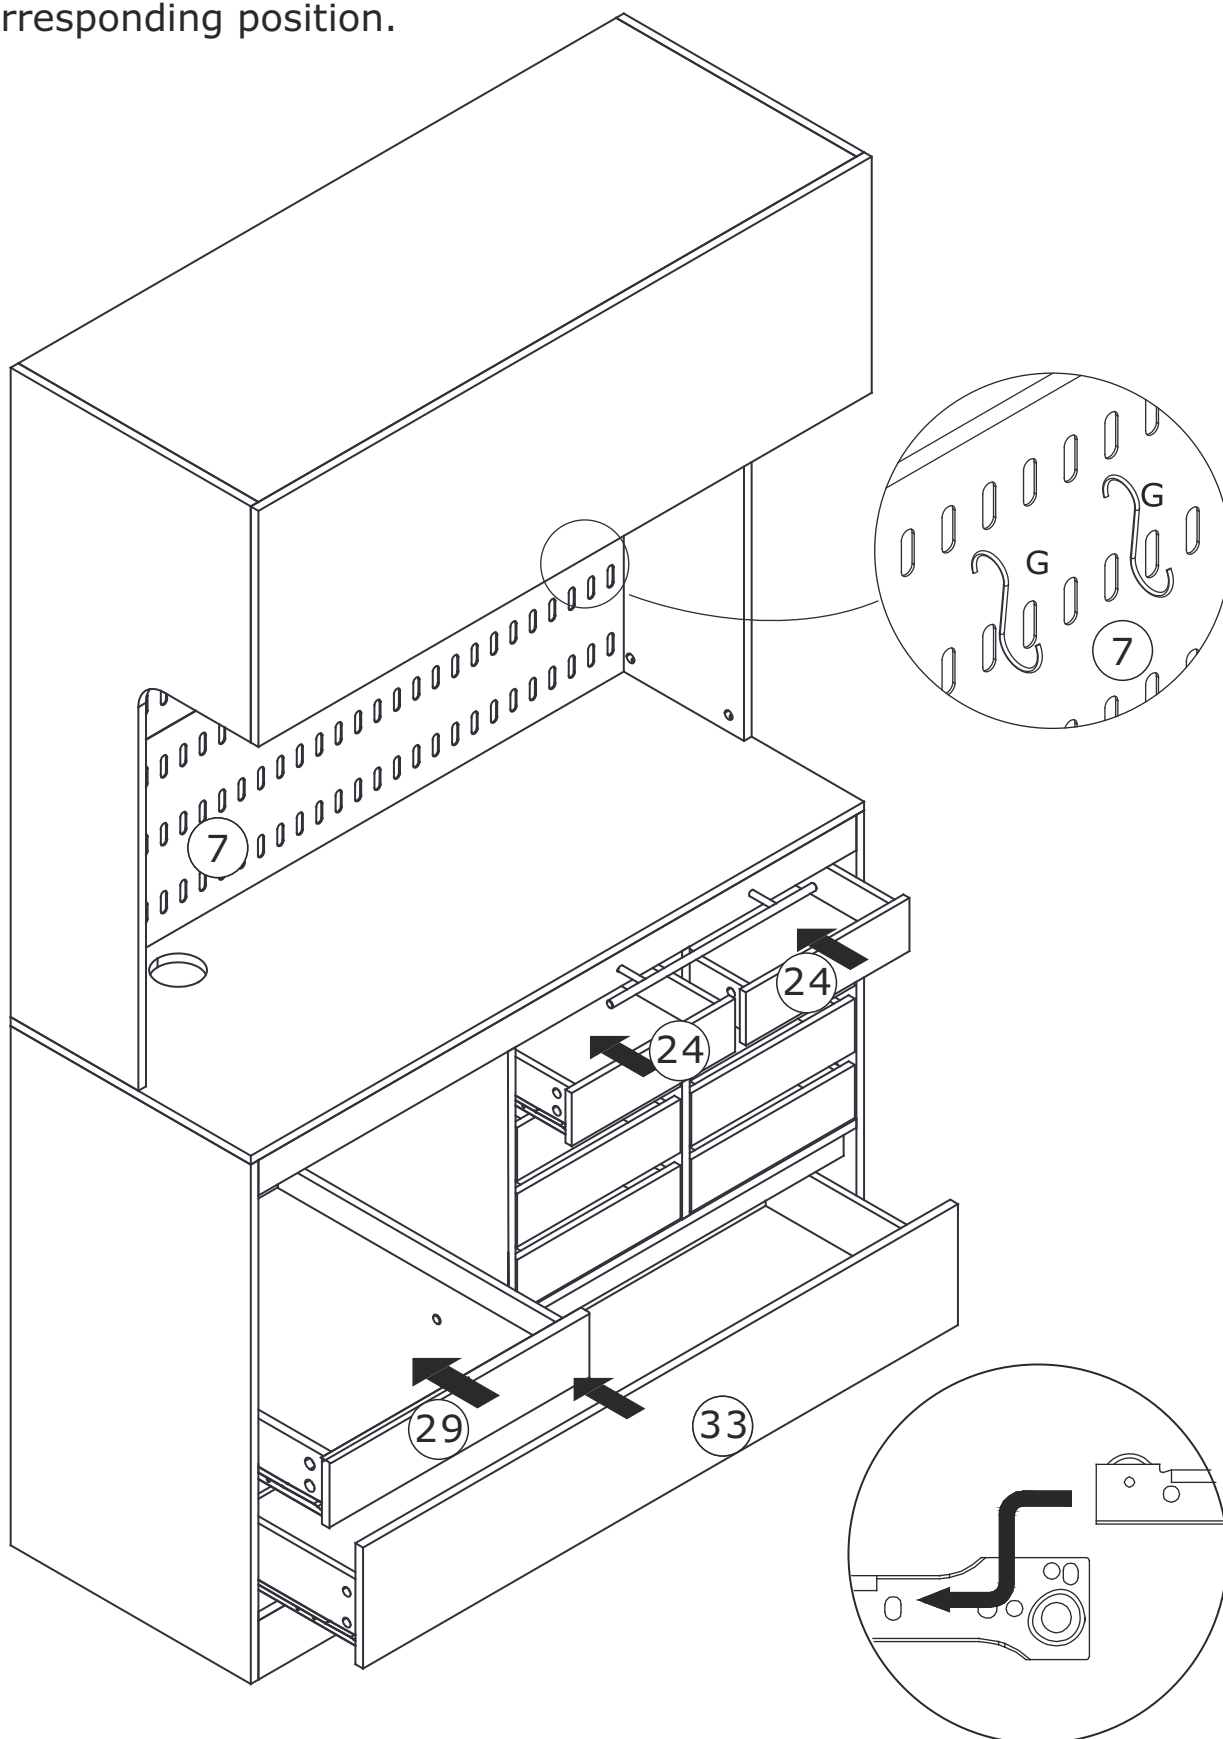


37




N x 140



 R x 1



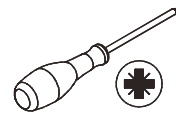


   Cover cam lock using sticker(N) as shown.

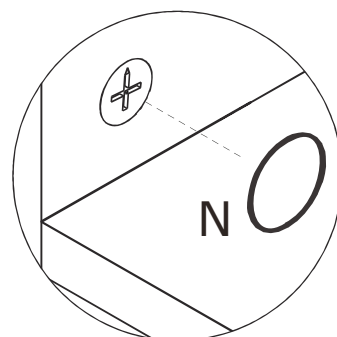
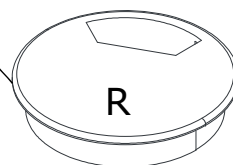
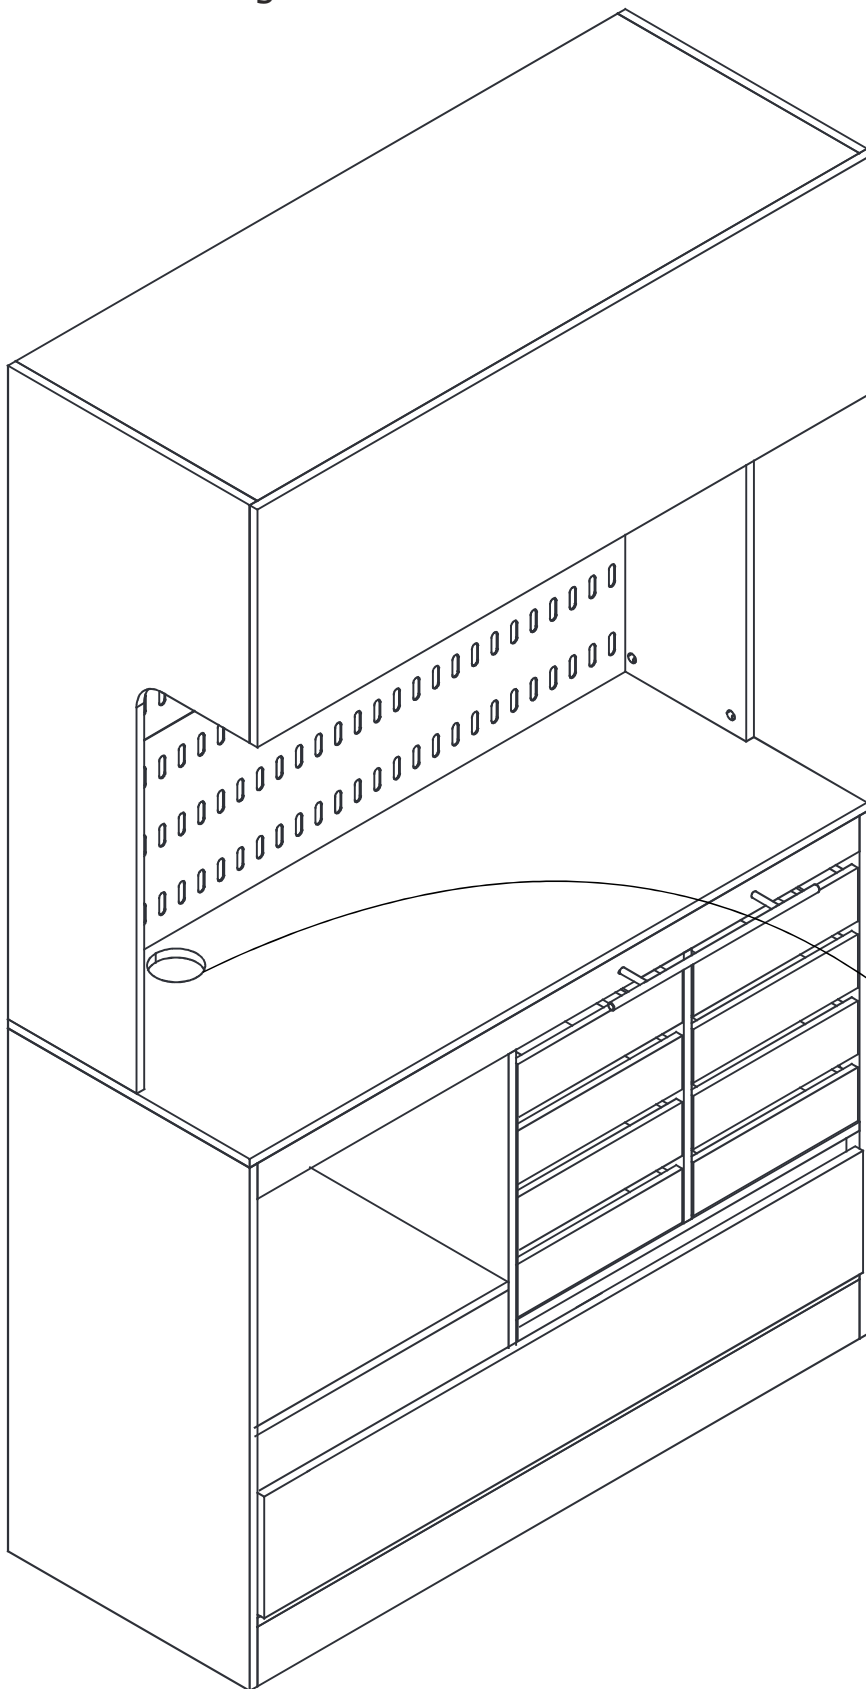




38

   Q x 1








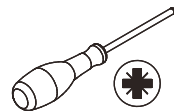
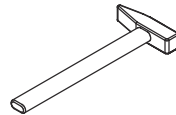
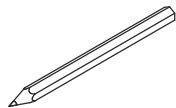


     Install anti-tipping device(Q) as shown.

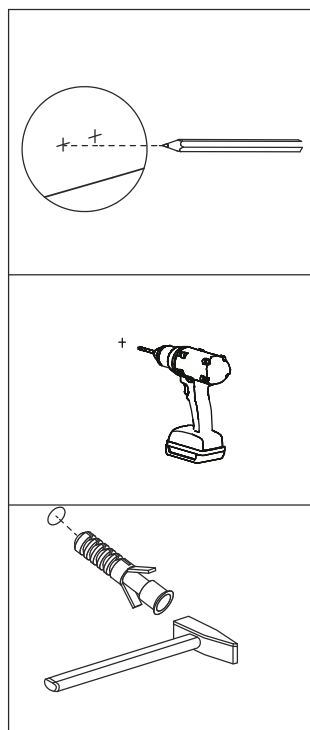
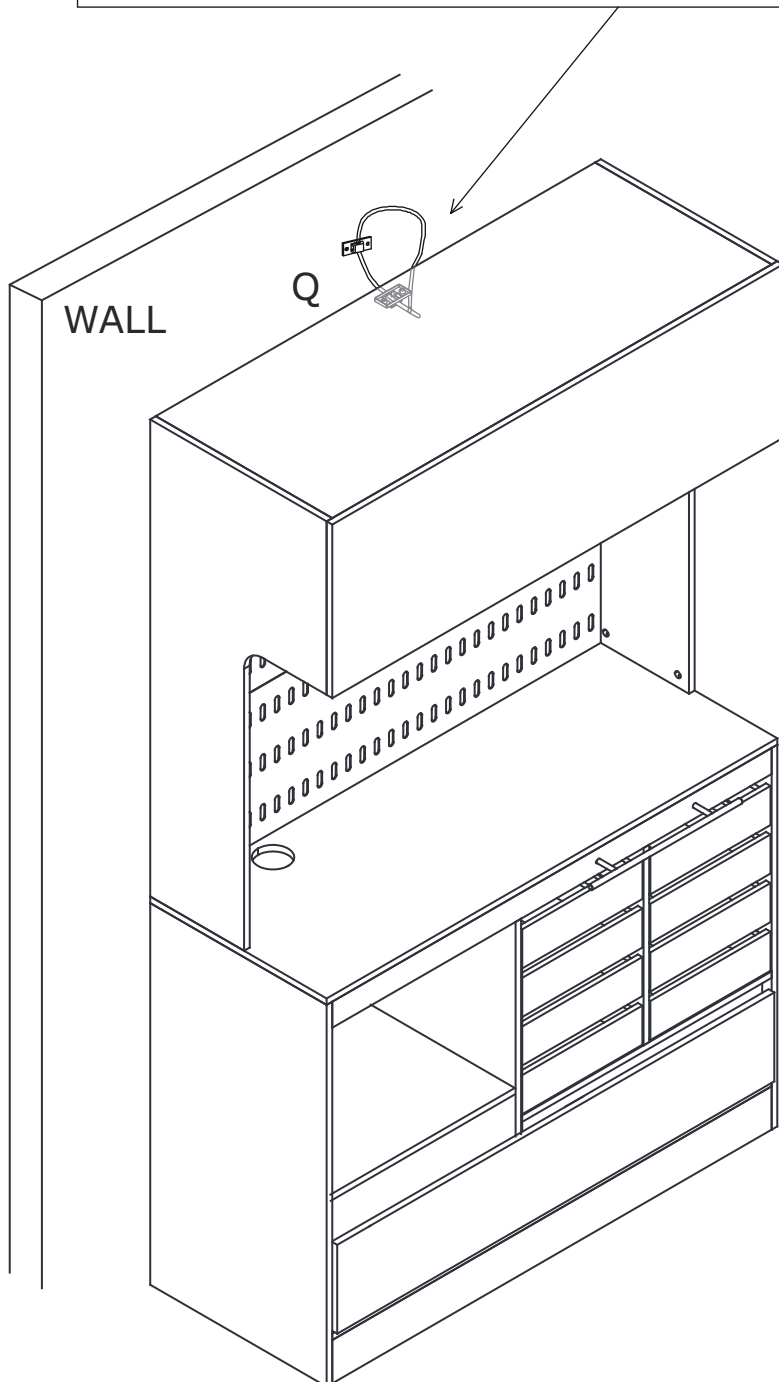
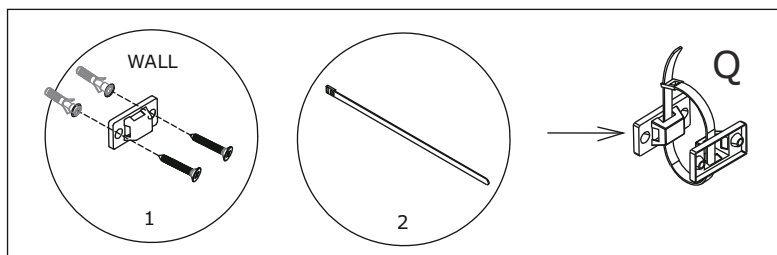


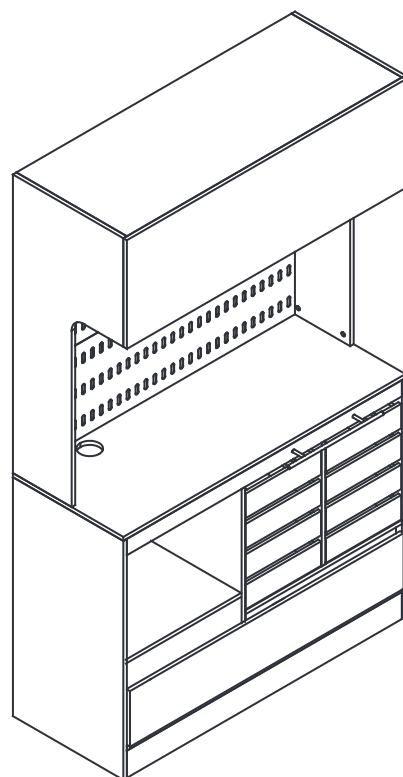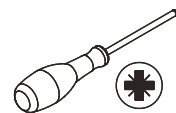

             If there is misalignment after you install,  
adjust the screw to the best condition

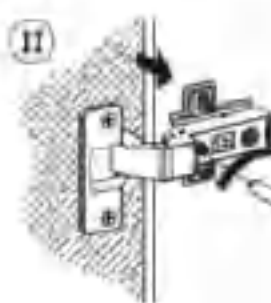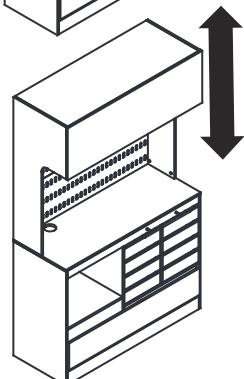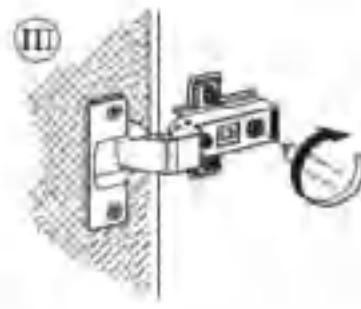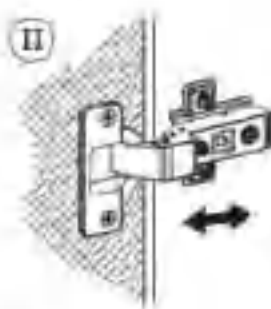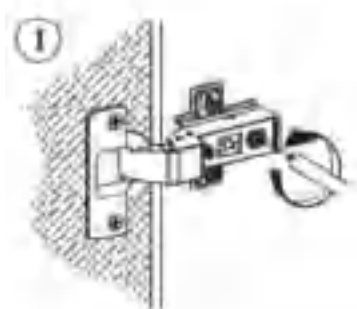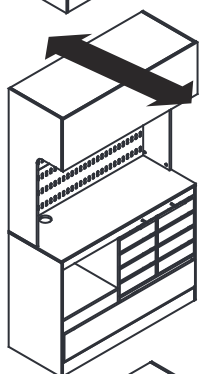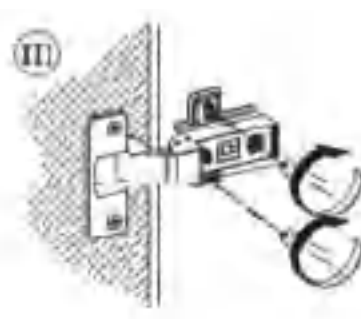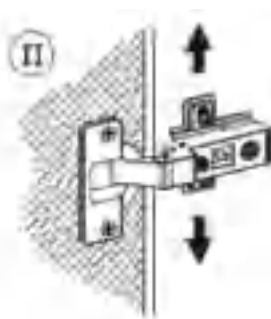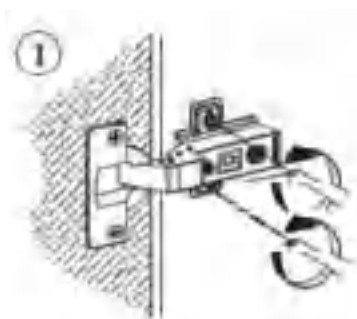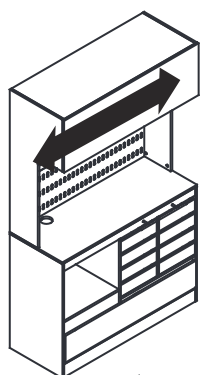



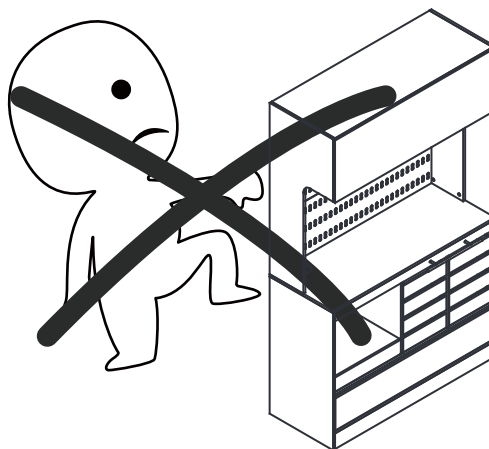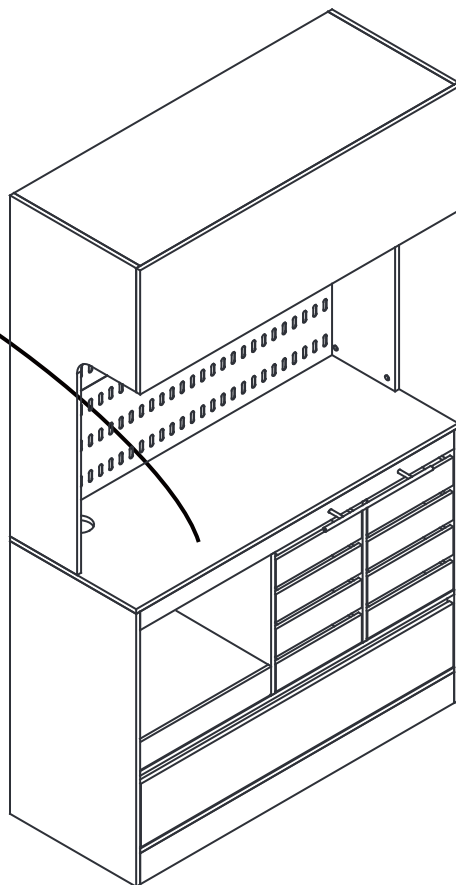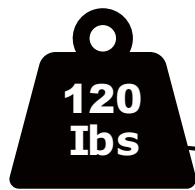

Serious or fatal crushing injuries can occur from furniture tip-over.  
To further reduce the risk of serious injury and death from tip-overs:

Schwere oder tödliche Quetschverletzungen können durch Umkippen von  
Möbeln auftreten.  
Um das Risiko schwerer Verletzungen und Todesfälle durch Umkippungen  
weiter zu reduzieren.

# WARRANTY

## WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

## Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

## Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

## The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

# RETURNS

## CHANGED YOUR MIND AND NEED TO RETURN YOUR ITEM?

### PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

 
### DEFECTIVE ITEMS

 
- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

### DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.  
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.



# Pantry

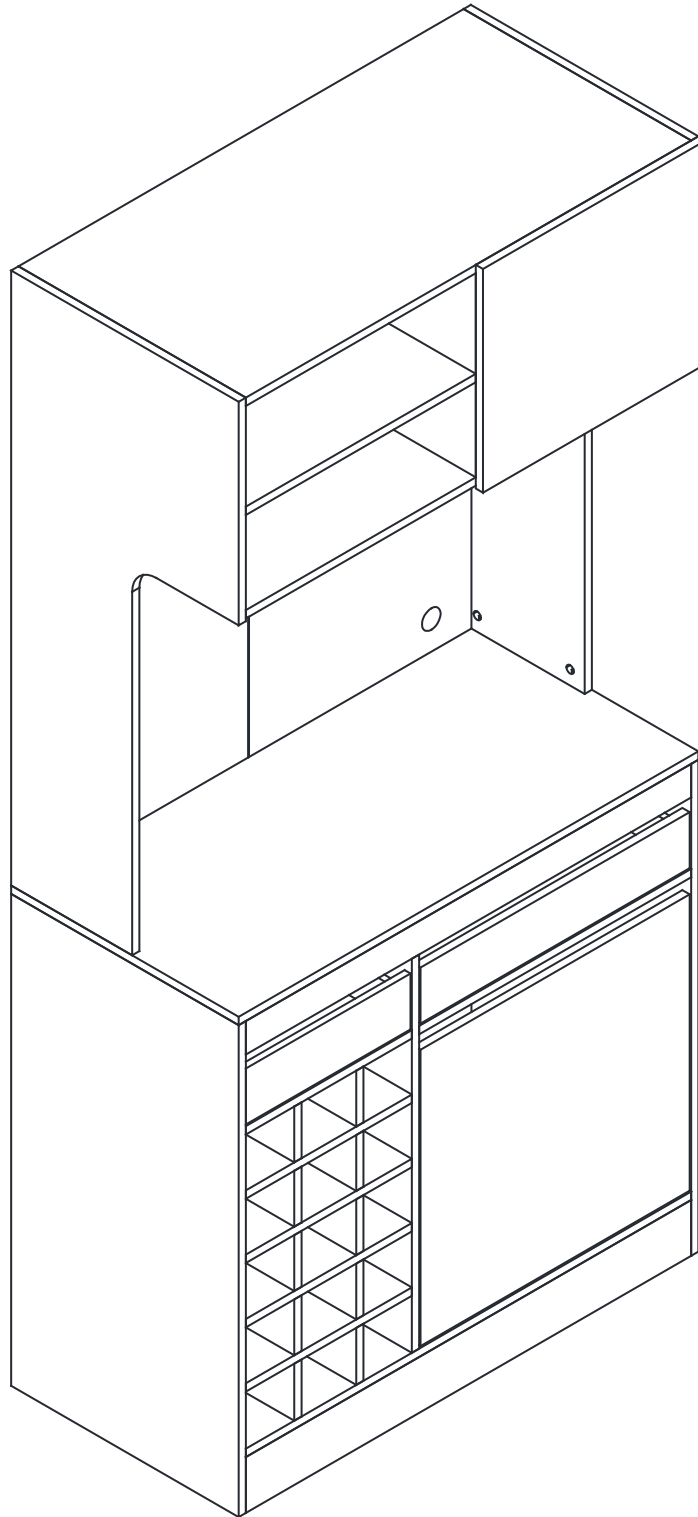

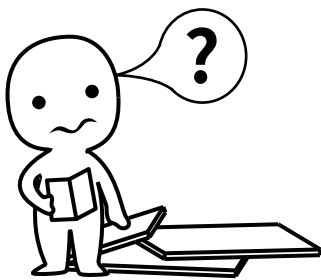


### **IMPORTANT INFORMATION!**

  please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

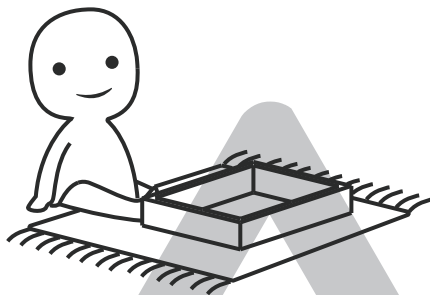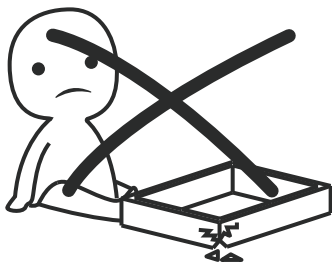



### **AVOID SCRATCHES!**

 In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.

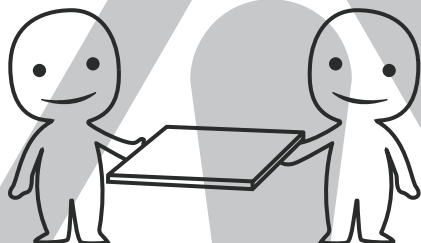

### **IMPROVE EFFICIENCY !**

  Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

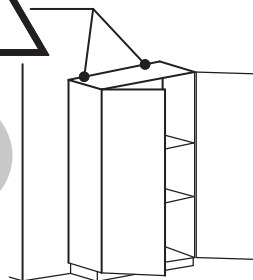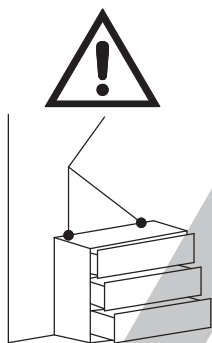

### **ANTI-TOPPLE WARNING !**

 
Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

### **IMPORTANT !**


It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

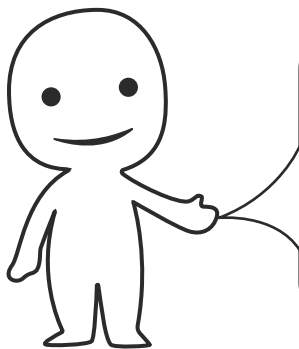


Please prepare the following tools

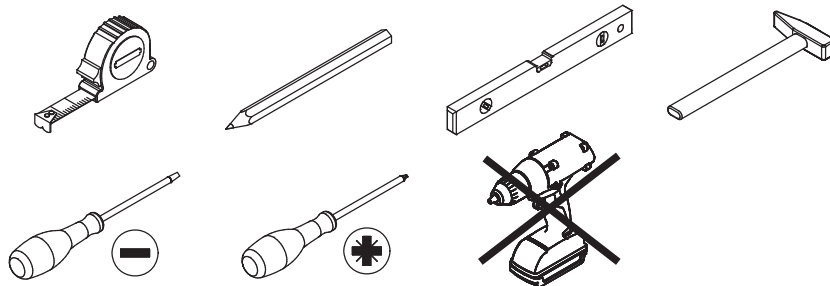 

When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

 A x 76

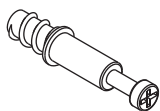

Ø 5 x 31 mm

B x 64



Ø 15 x 9.5 mm

C x 46



Ø 6 x 30 mm

D x 28



 
Ø 3 x 12 mm

E x 2




L=300mm

F x 2

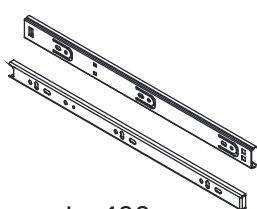

L=400mm

 G x 2

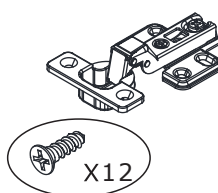

Ø 3 x 12 mm

H x 20



Ø 3 x 10 mm

J x 72

 


 
K x 12



Ø 15 x 11 mm

L x 12

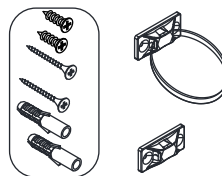


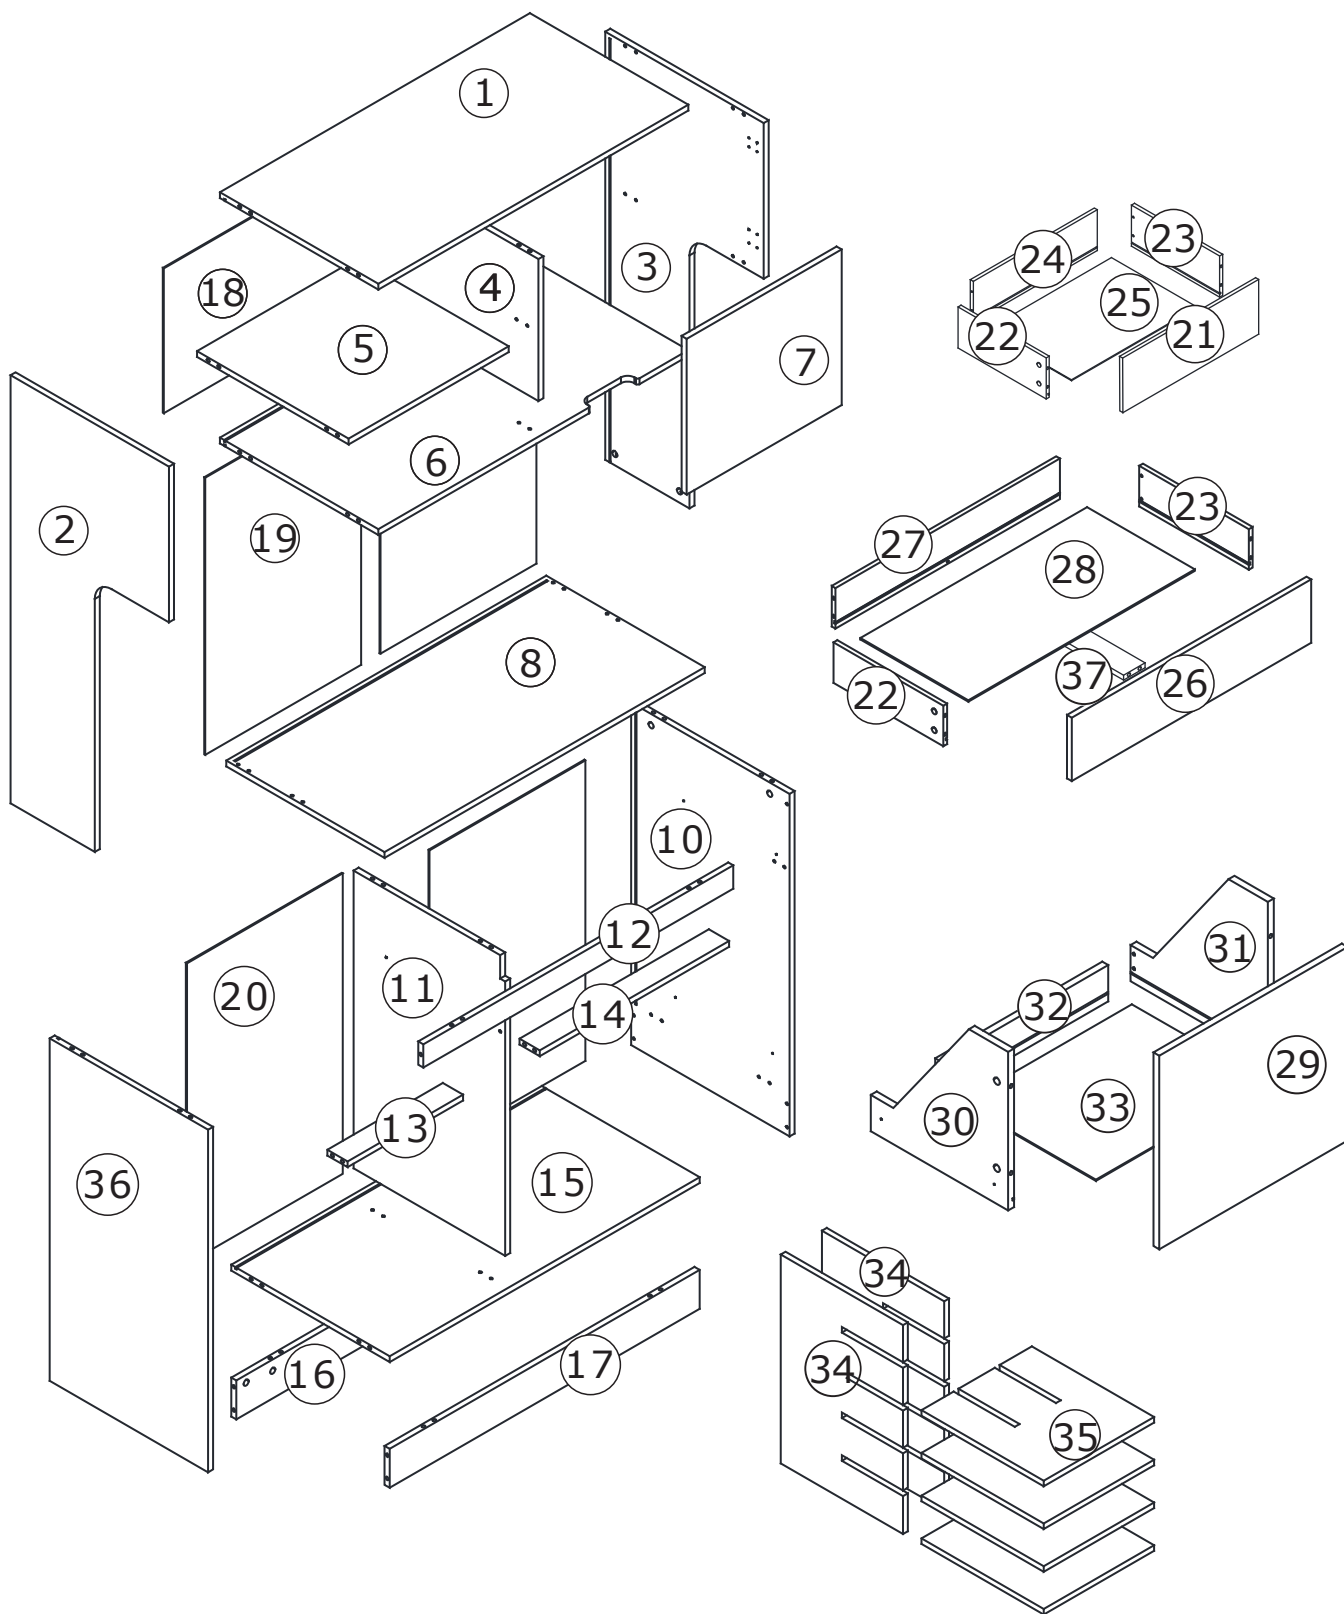

**Slides Must Be Separated Before Assembly.**  
**After Separated, Set Aside Until Needed for Assembly.**


Las diapositivas deben separarse antes del montaje.  
Después de la separación, déjelo a un lado hasta que sea necesario.

 Les glissières doivent être séparées avant l'assemblage.  
Après la séparation, mettez de côté jusqu'au moment de l'assemblage.

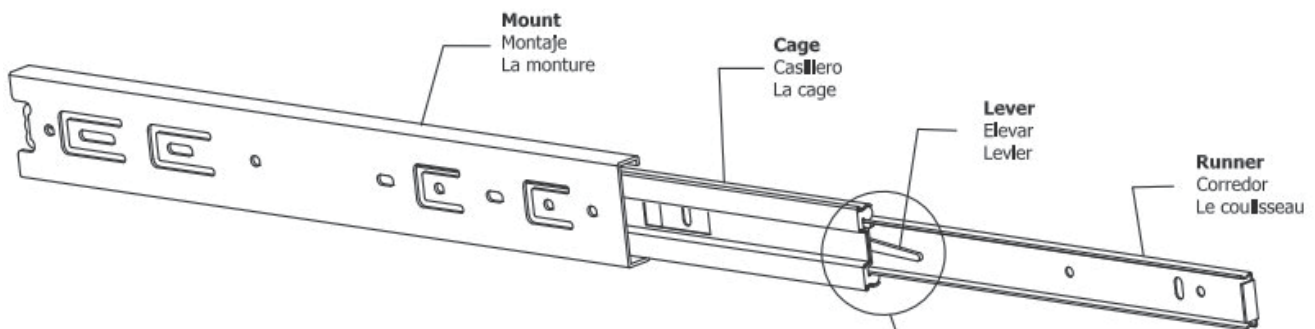


**STEP 1: Extend Slide**

 Extender la diapositiva  
Extendre la diapositive

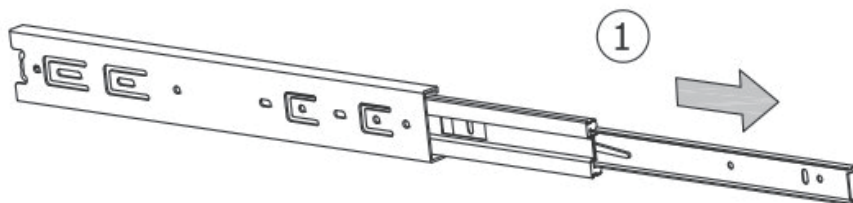


**STEP 2: Push Lever UP**

 Empujar hacia arriba  
Lever le levier

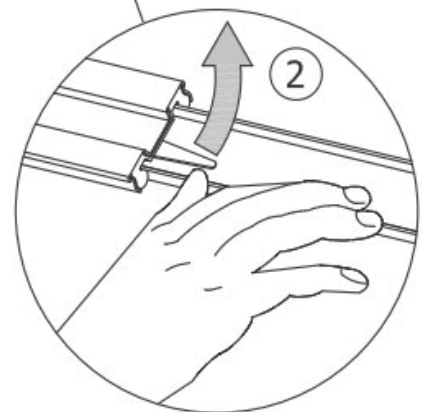




**STEP 3: Remove Runner**

 Quitar el corredor  
Enlever le coureur




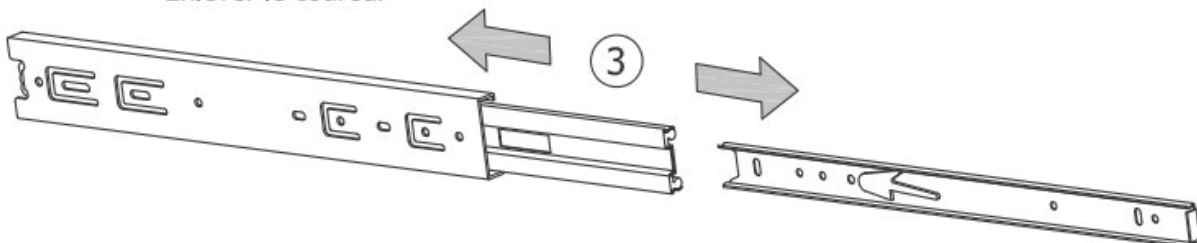




1

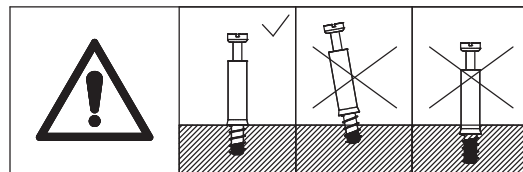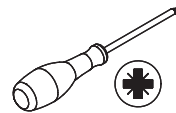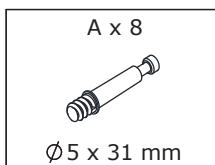   

    Screw quickfit screw(A) into corresponding holes in plate 21, 22 and 23 with a screwdriver as shown.

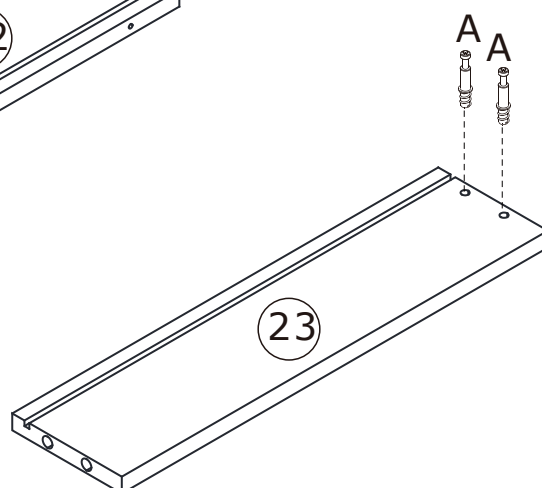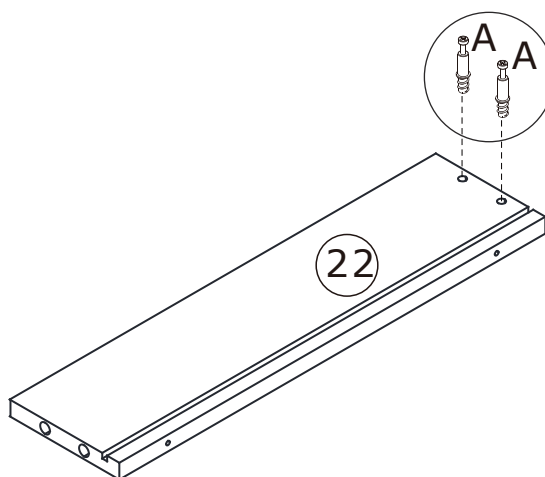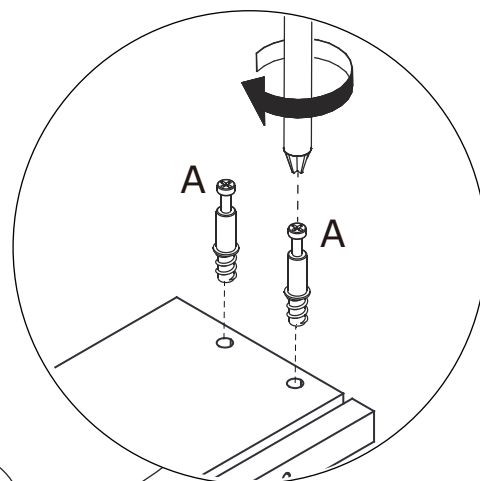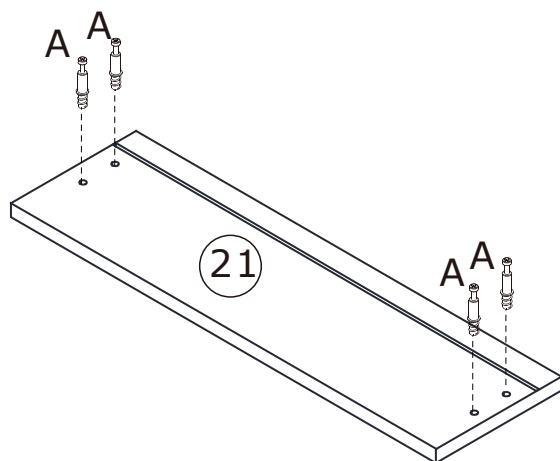


2



B x 4



Ø 15 x 9.5 mm

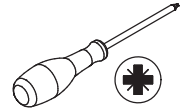

  Connect plate 22 and 23 with plate 24, put cam lock(B) into holes in plate 24 and turn clockwise to tighten as shown.

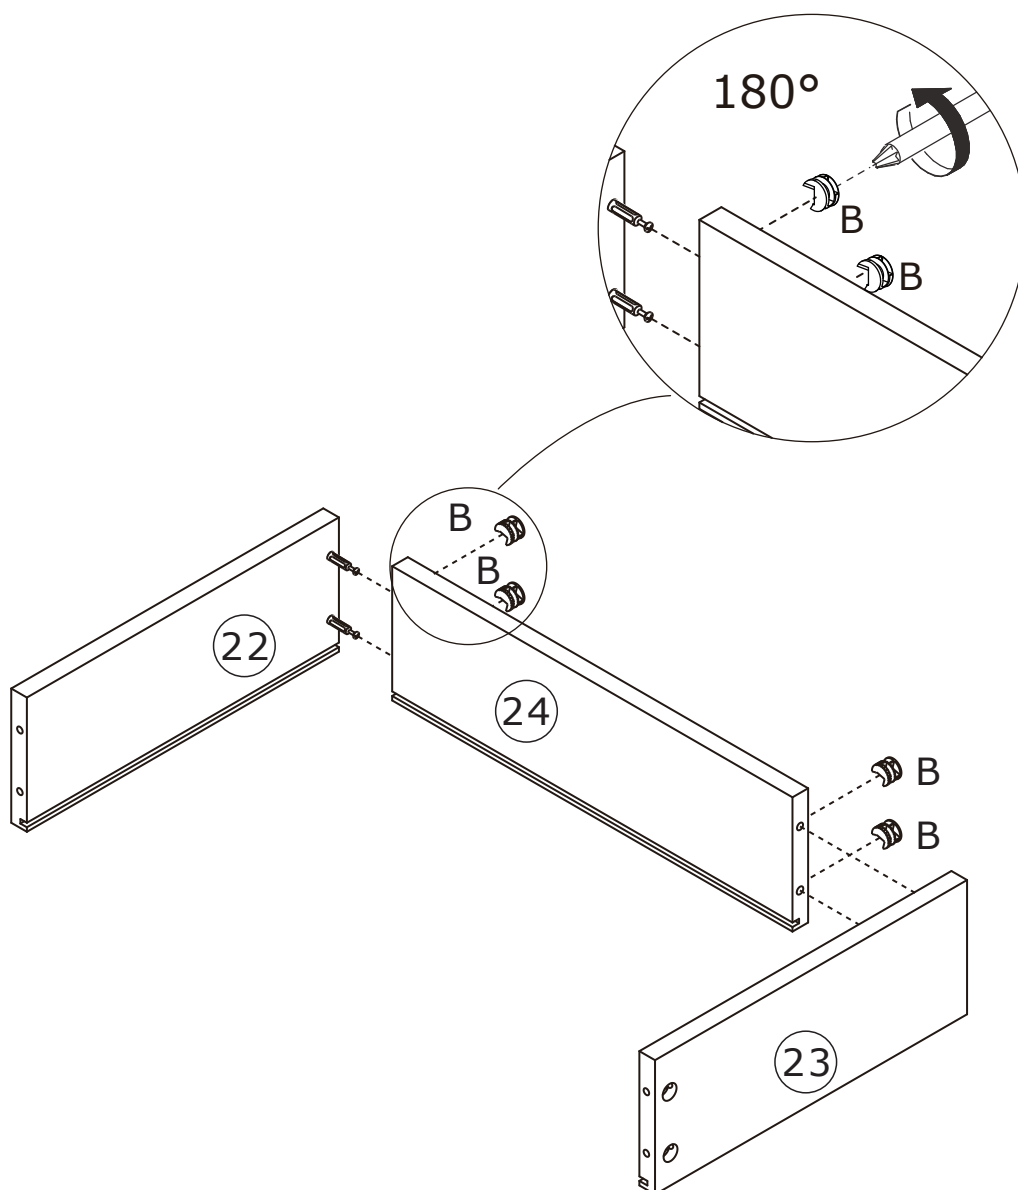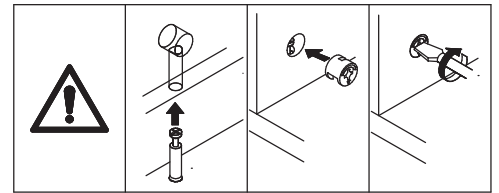


# 3



B x 4



 Ø 15 x 9.5 mm

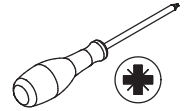

  Slide plate 25 along grooves at first.  
Attach plate 21 to 22 and 23, put cam lock(B) into holes in plate 22,23 and turn clockwise to tighten as shown.

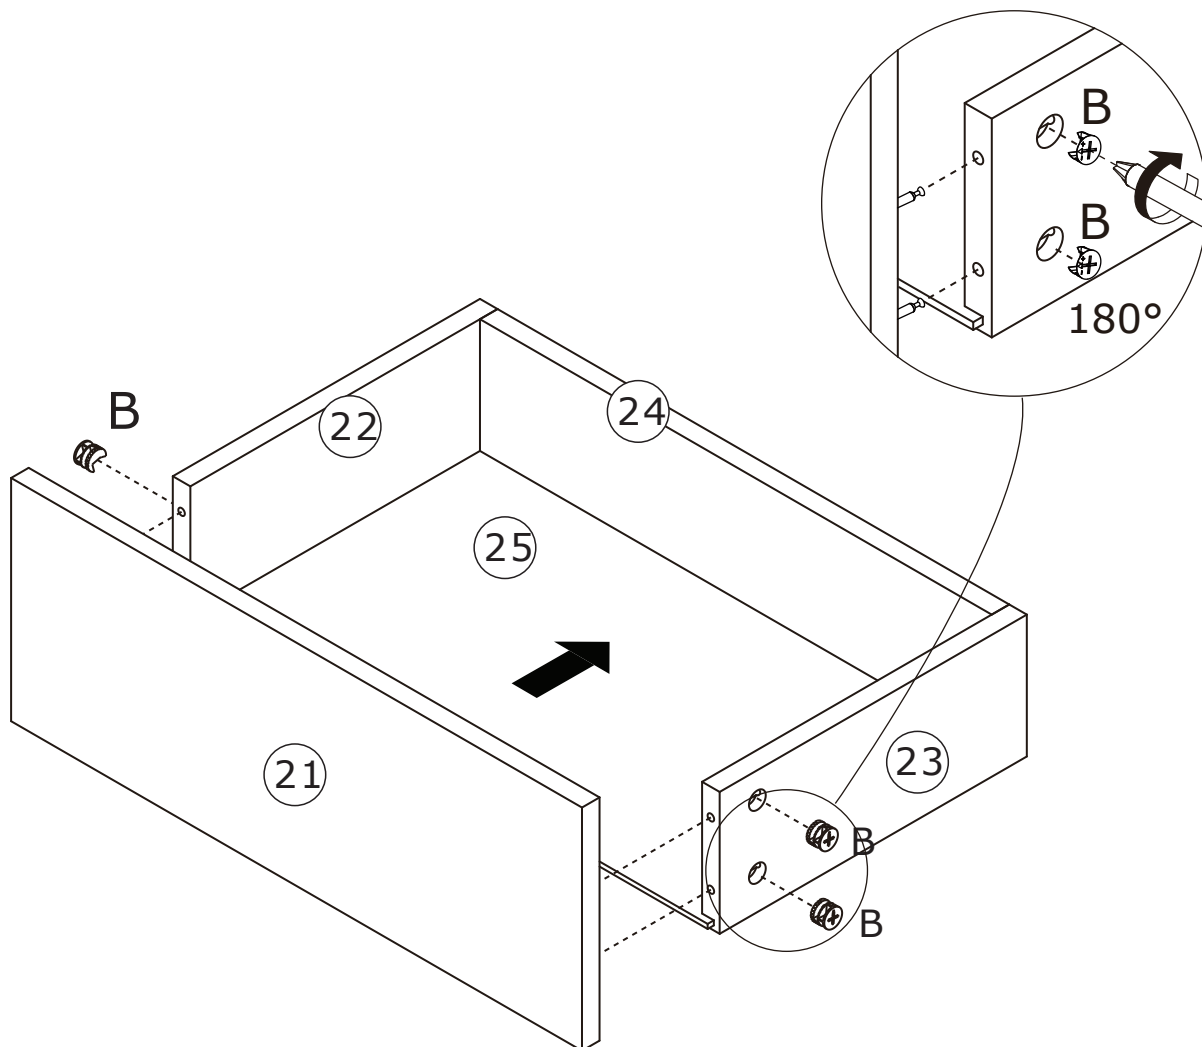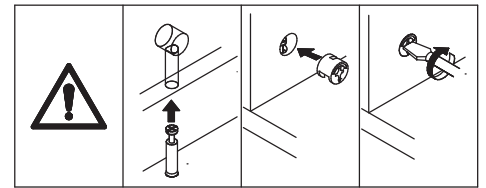


4

D x 4




Ø3 x 12 mm


 
E x 1

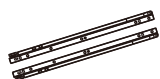








L=300 mm

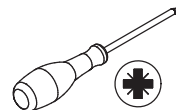 

  Fix runner(E-DL) and (E-DR) to plate 22 and 23 respectively using screw(D) as shown.

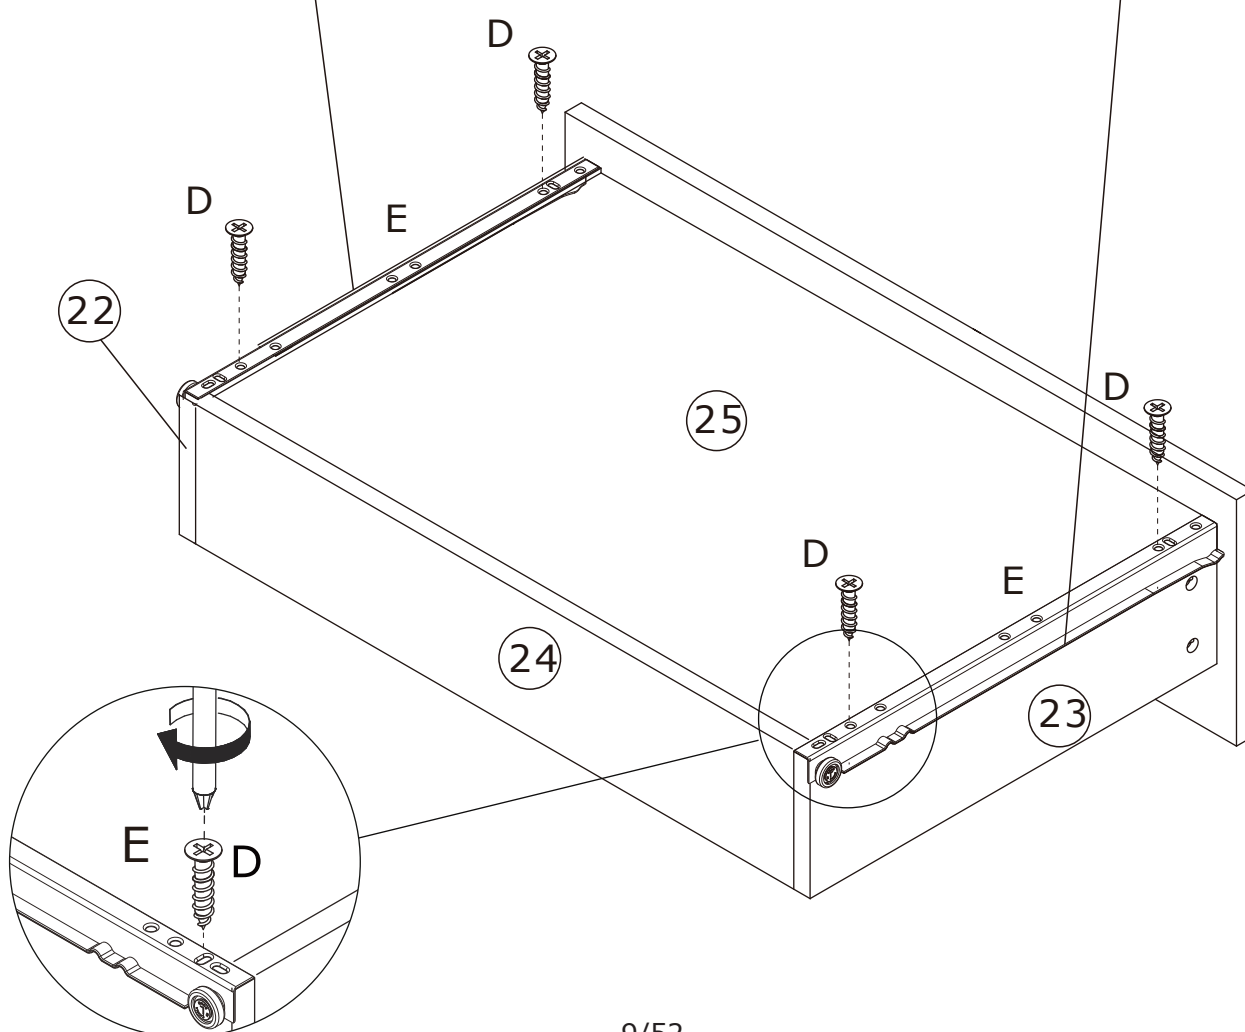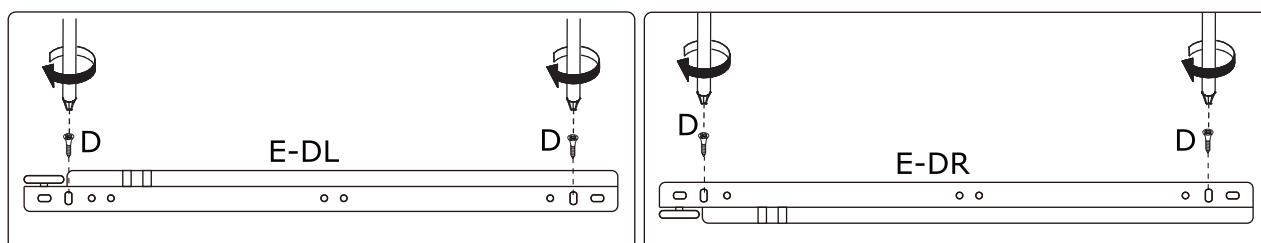

5

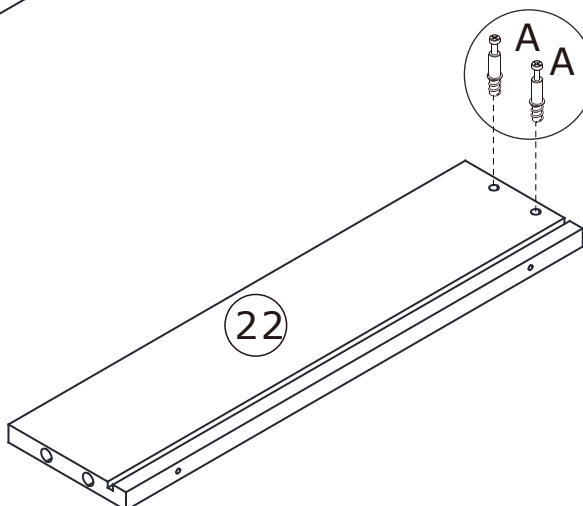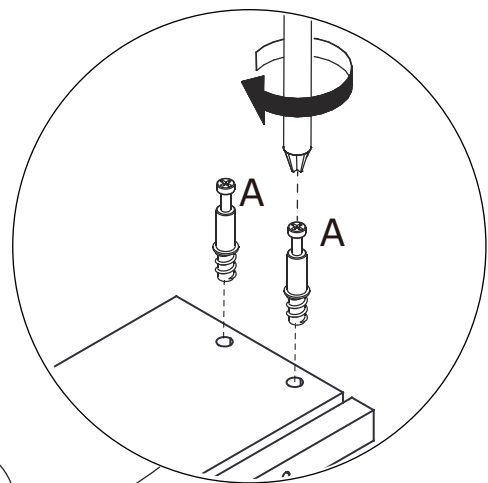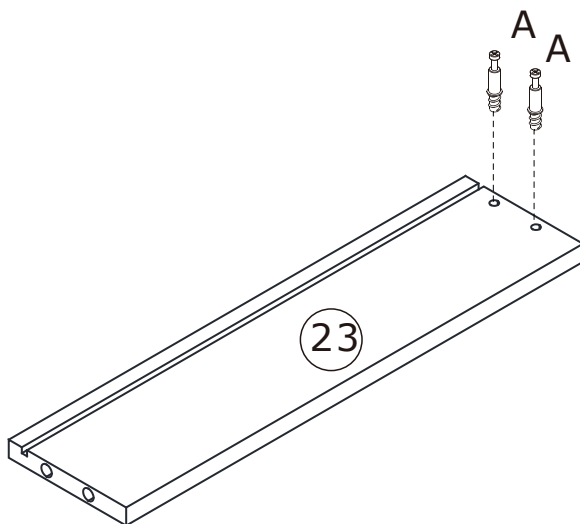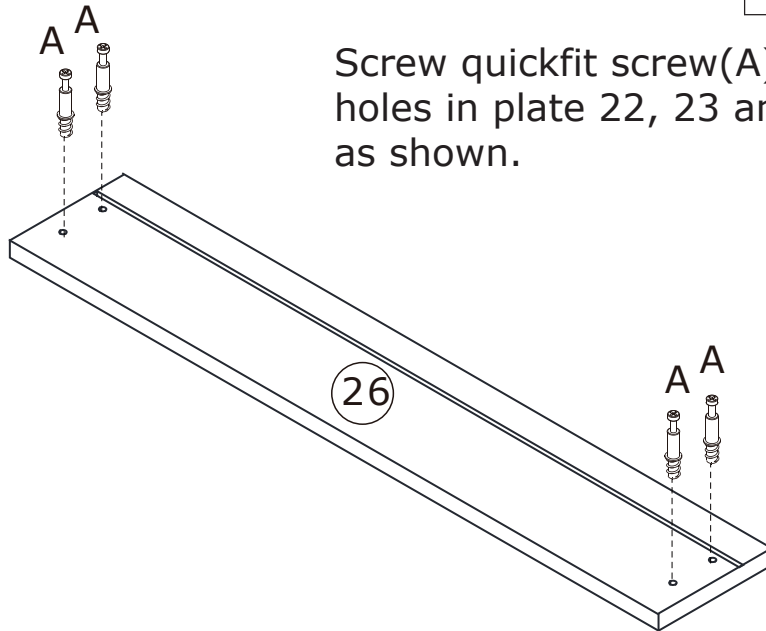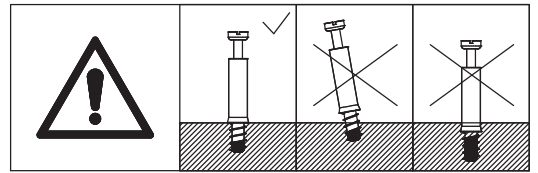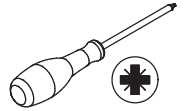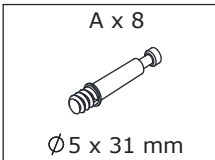       


Screw quickfit screw(A) into corresponding holes in plate 22, 23 and 26 with a screwdriver as shown.

6



B x 4



 Ø 15 x 9.5 mm

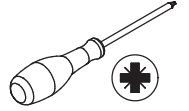

  Connect plate 22 and 23 with plate 27, put cam lock(B) into holes in plate 27 and turn clockwise to tighten as shown.

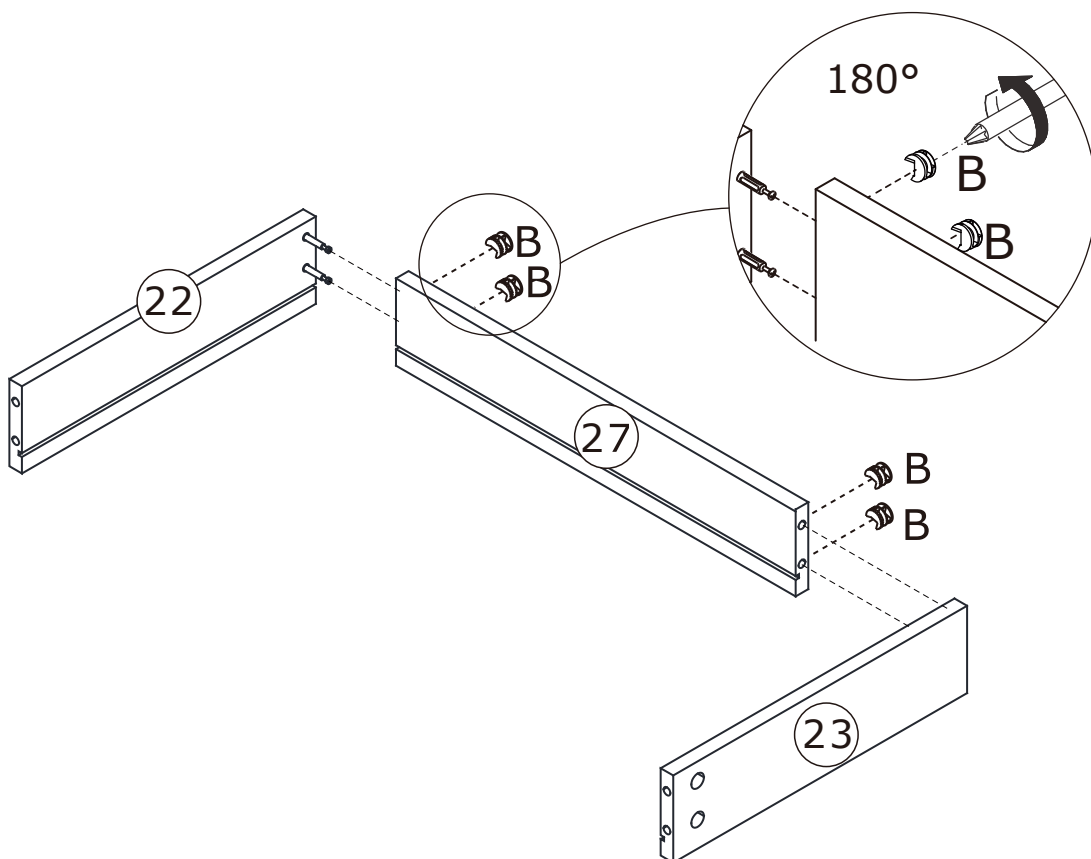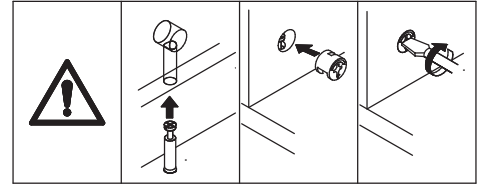


7



B x 4



 Ø 15 x 9.5 mm

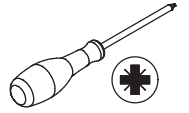


 
 
Slide plate 28 along grooves at first.  
Attach plate 26 to 22 and 23, put cam lock(B)  
into holes in plate 22,23 and turn clockwise to  
tighten as shown.

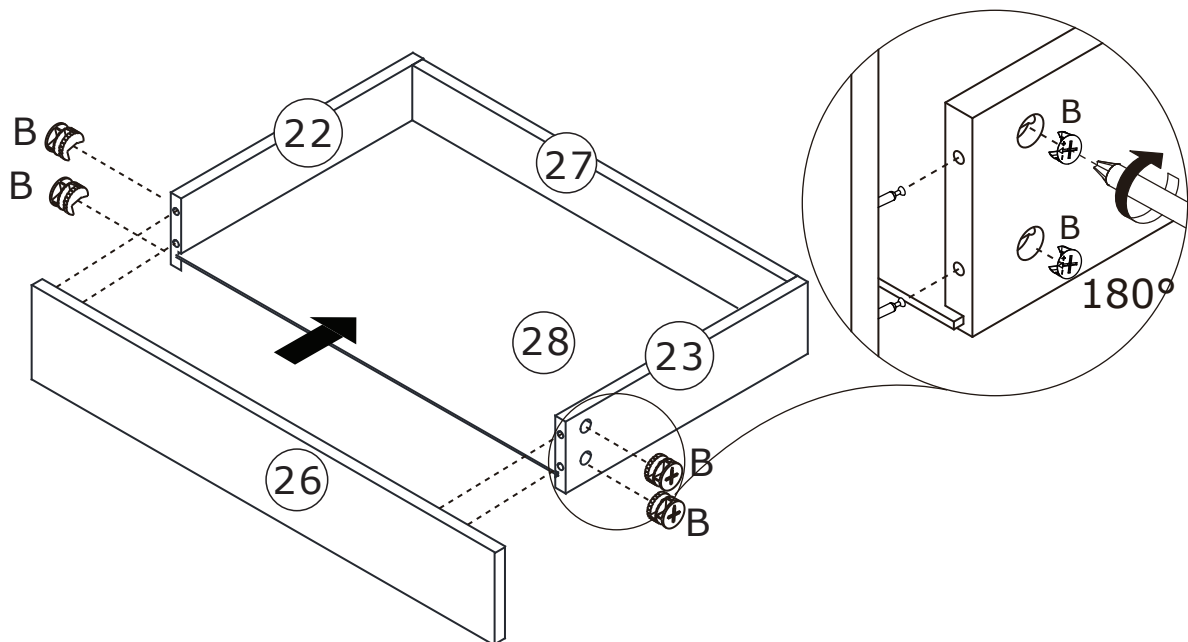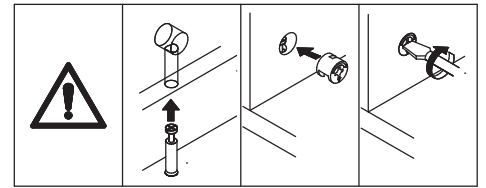

8

   

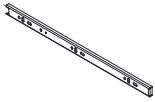
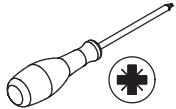
<p>D x 4</p>  <p>Ø3 x 12 mm</p>	<p>E x 1</p>  <p>L=300 mm</p>	
------------------------------------------------------------------------------------------------------------------	----------------------------------------------------------------------------------------------------------------	-------------------------------------------------------------------------------------

Fix runner(E-DL) and (E-DR) to plate 22 and 23 respectively using screw(D) as shown.

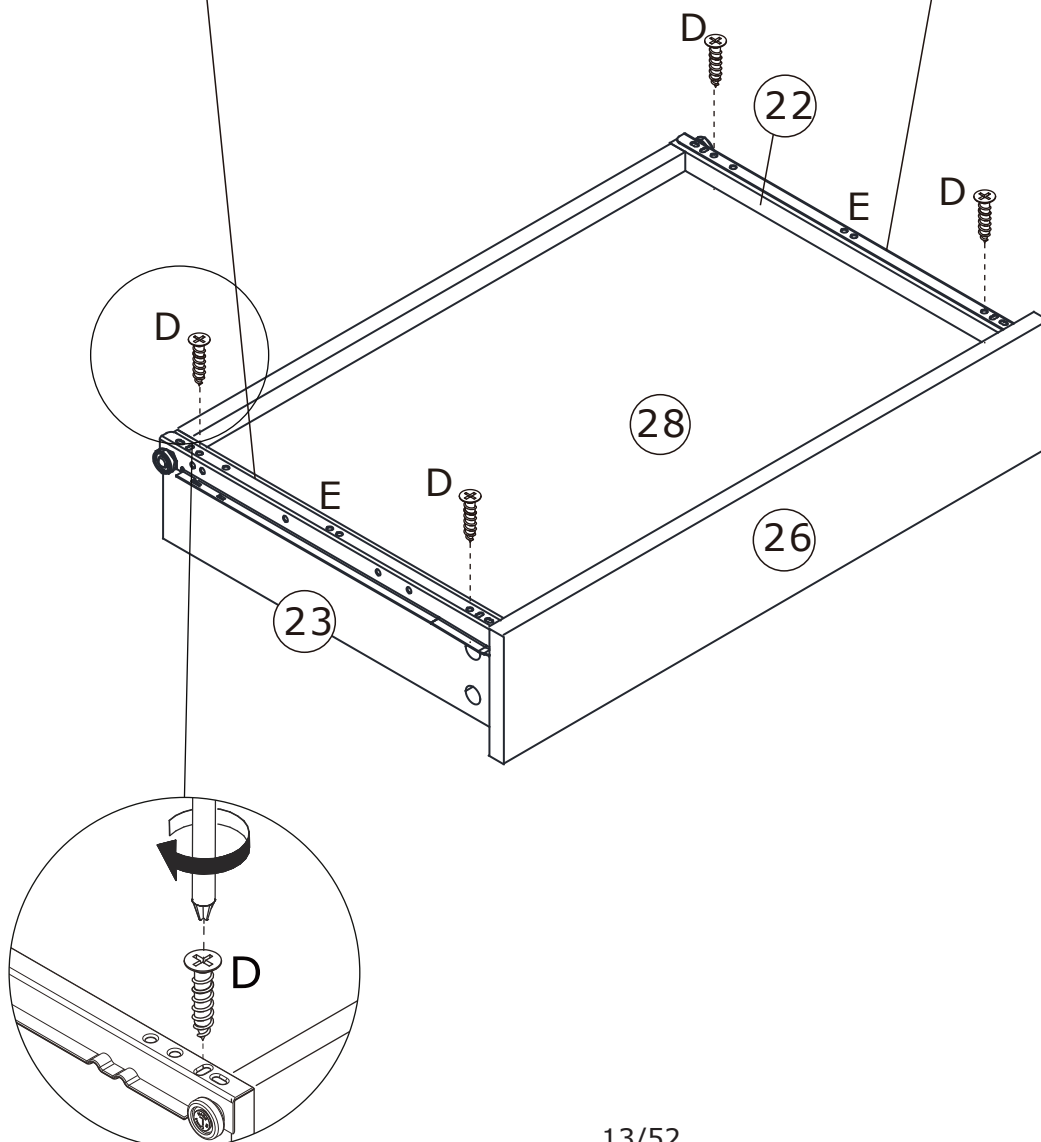 
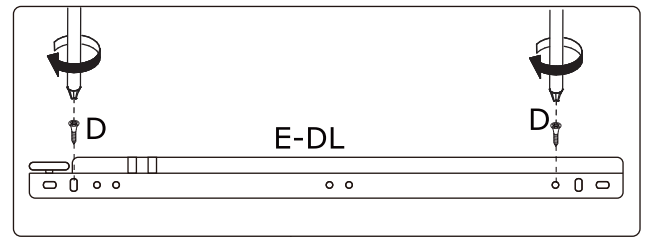 
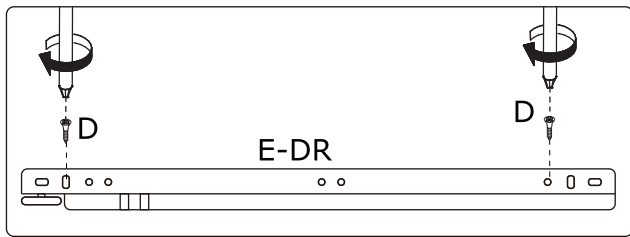 






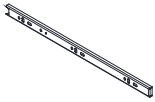
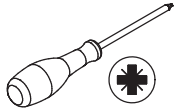
9
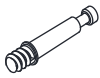
<p>A x 2</p>  <p>Ø5 x 31 mm</p>	<p>D x 3</p>  <p>Ø3 x 12 mm</p>	<p>F x 1</p>  <p>L=400 mm</p>	
------------------------------------------------------------------------------------------------------------------	------------------------------------------------------------------------------------------------------------------	----------------------------------------------------------------------------------------------------------------	-------------------------------------------------------------------------------------



Screw quickfit screw(A) into plate 30 at first.  
Flip the plate, fix slide rail(F) using screw(D)  
as shown.

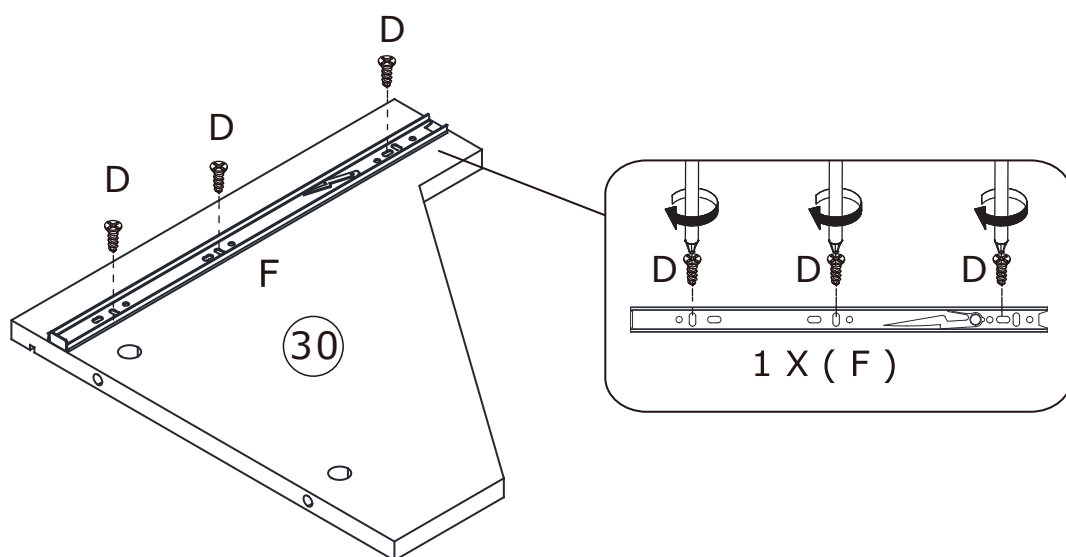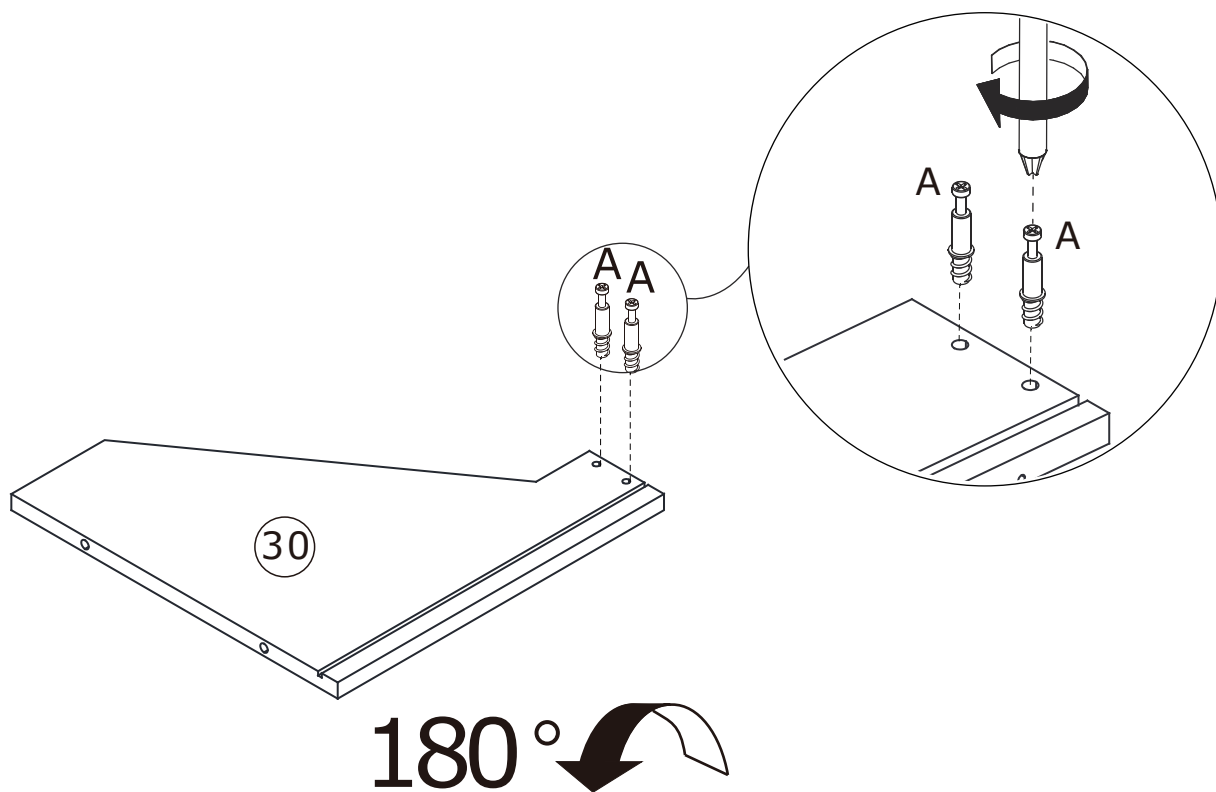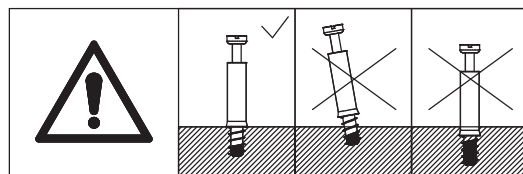



# 10
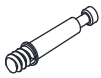  
<p>A x 2</p>  <p>Ø5 x 31 mm</p>	<p>D x 3</p>  <p>Ø3 x 12 mm</p>	<p>F x 1</p>  <p>L=400 mm</p>	
------------------------------------------------------------------------------------------------------------------	------------------------------------------------------------------------------------------------------------------	----------------------------------------------------------------------------------------------------------------	-------------------------------------------------------------------------------------

Screw quickfit screw(A) into plate 31 at first.  
Flip the plate, fix slide rail(F) using screw(D)  
as shown.

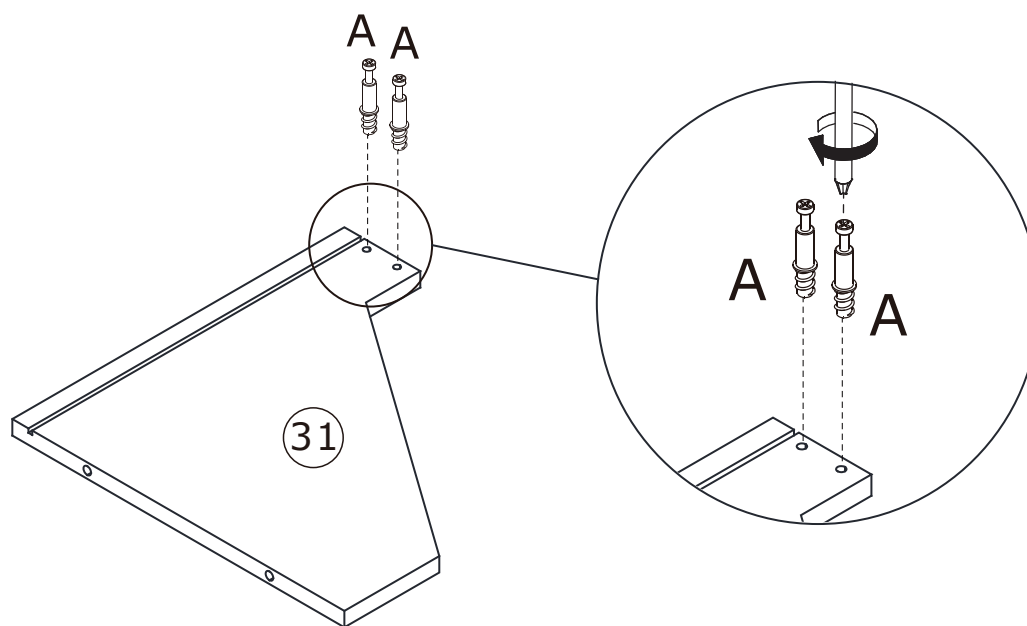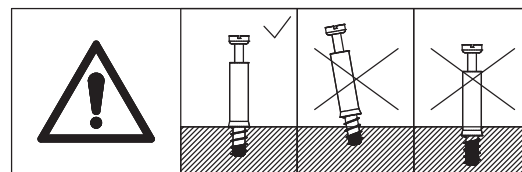

180°

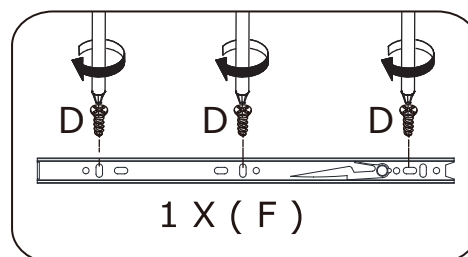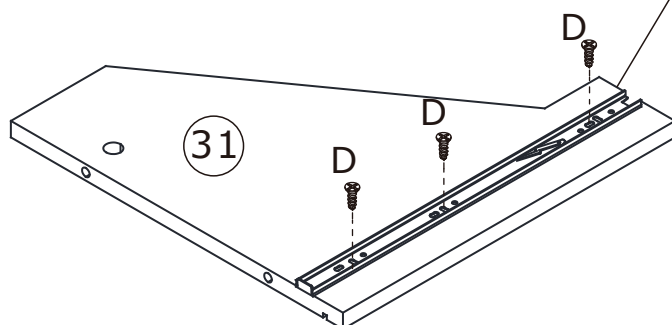  

# 11

A x 4

 


Ø5 x 31 mm



B x 4





Ø15 x 9.5 mm

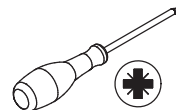

  Screw quickfit screw(A)  
into plate 29 at first.

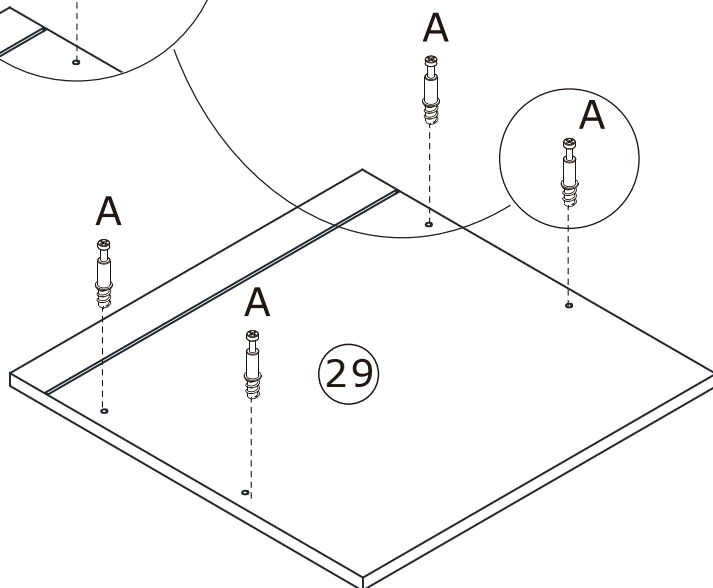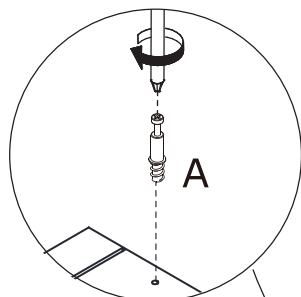

  Connect plate 30 and 31  
with plate 32, put cam  
lock(B) into holes in plate  
32 and turn clockwise to  
tighten as shown.

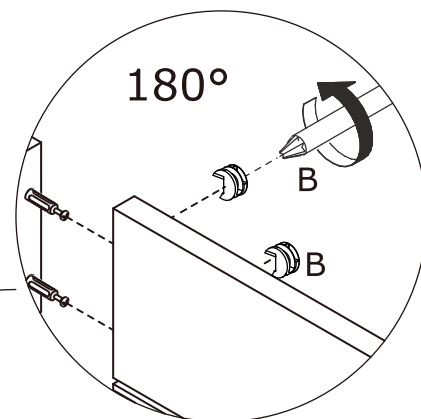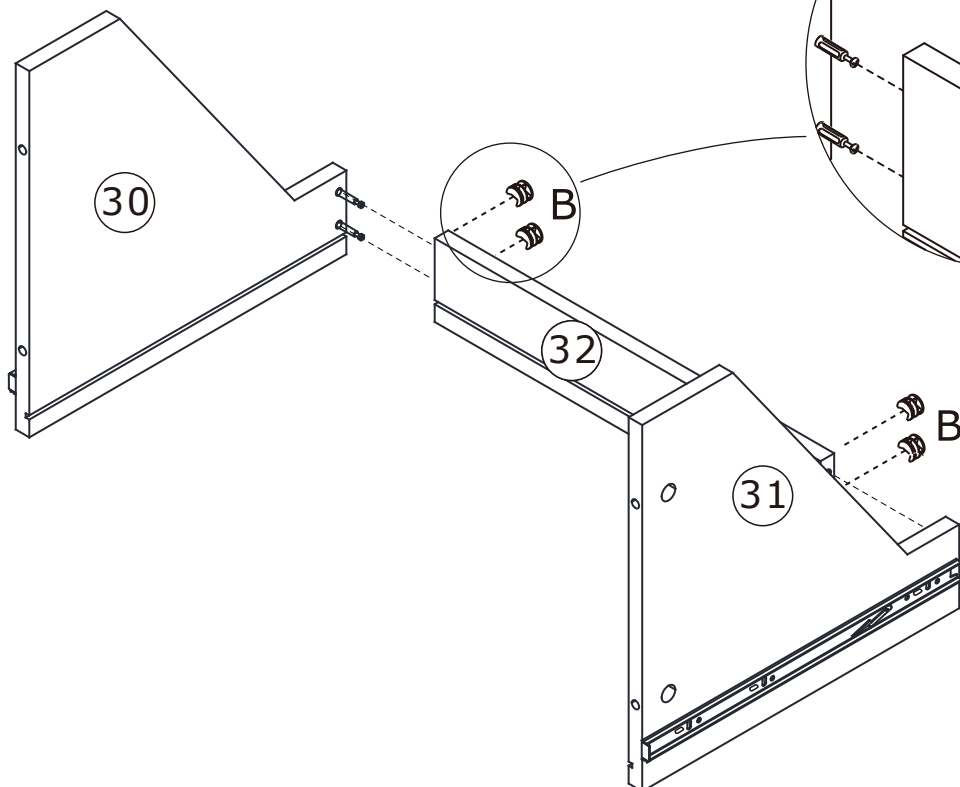


180°

# 12



B x 4



Ø 15 x 9.5 mm

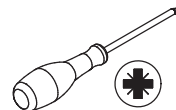

  Slide plate 33 along grooves at first.  
Attach plate 29 to plate 30 and 31, put cam lock(B) into holes in plate 30,31 and turn clockwise to tighten as shown.

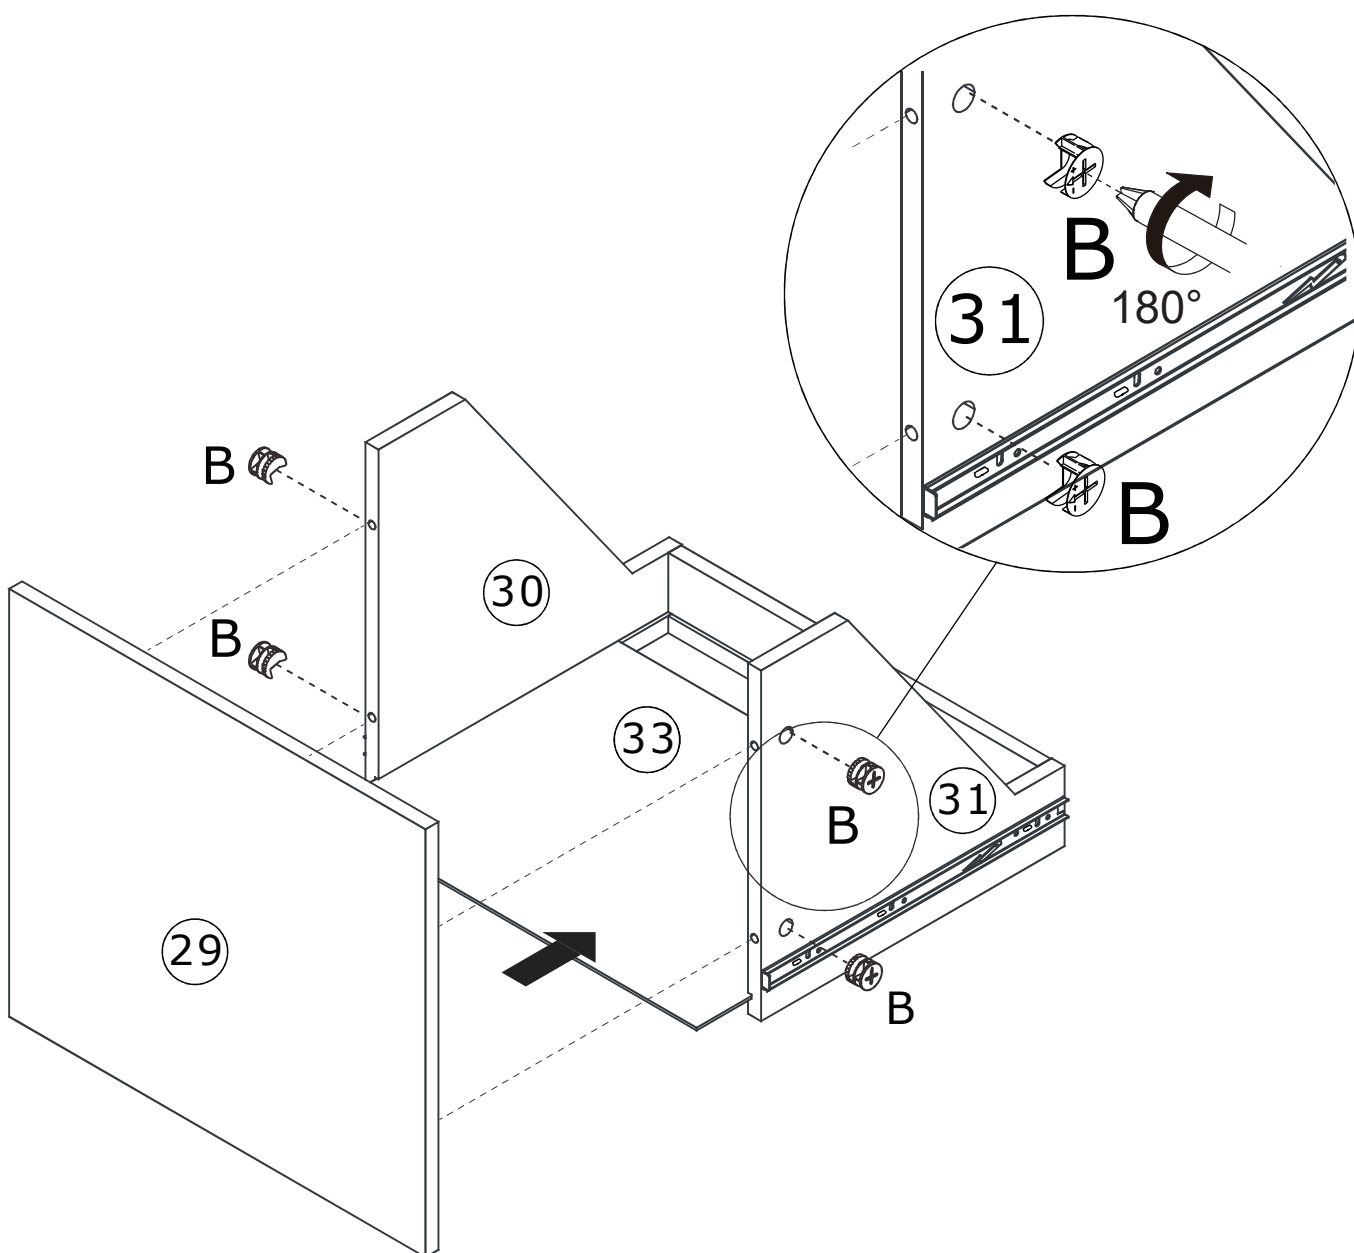
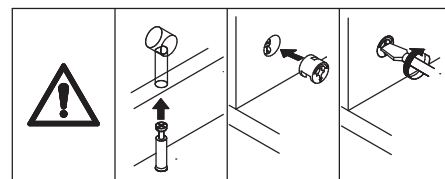


# 13


A x 4



  Ø5 x 31 mm

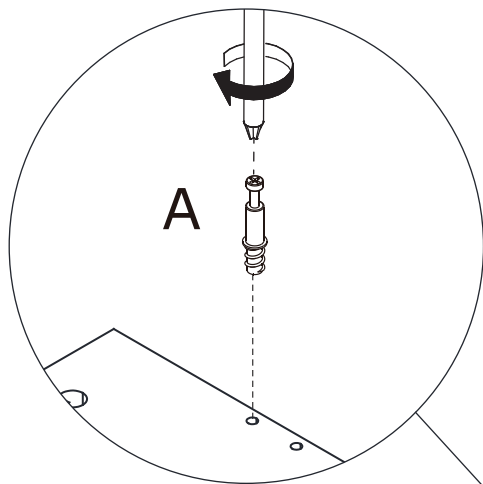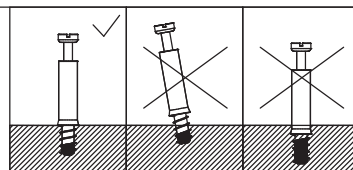

 Screw quickfit screw(A) into corresponding holes in plate 15 as shown.

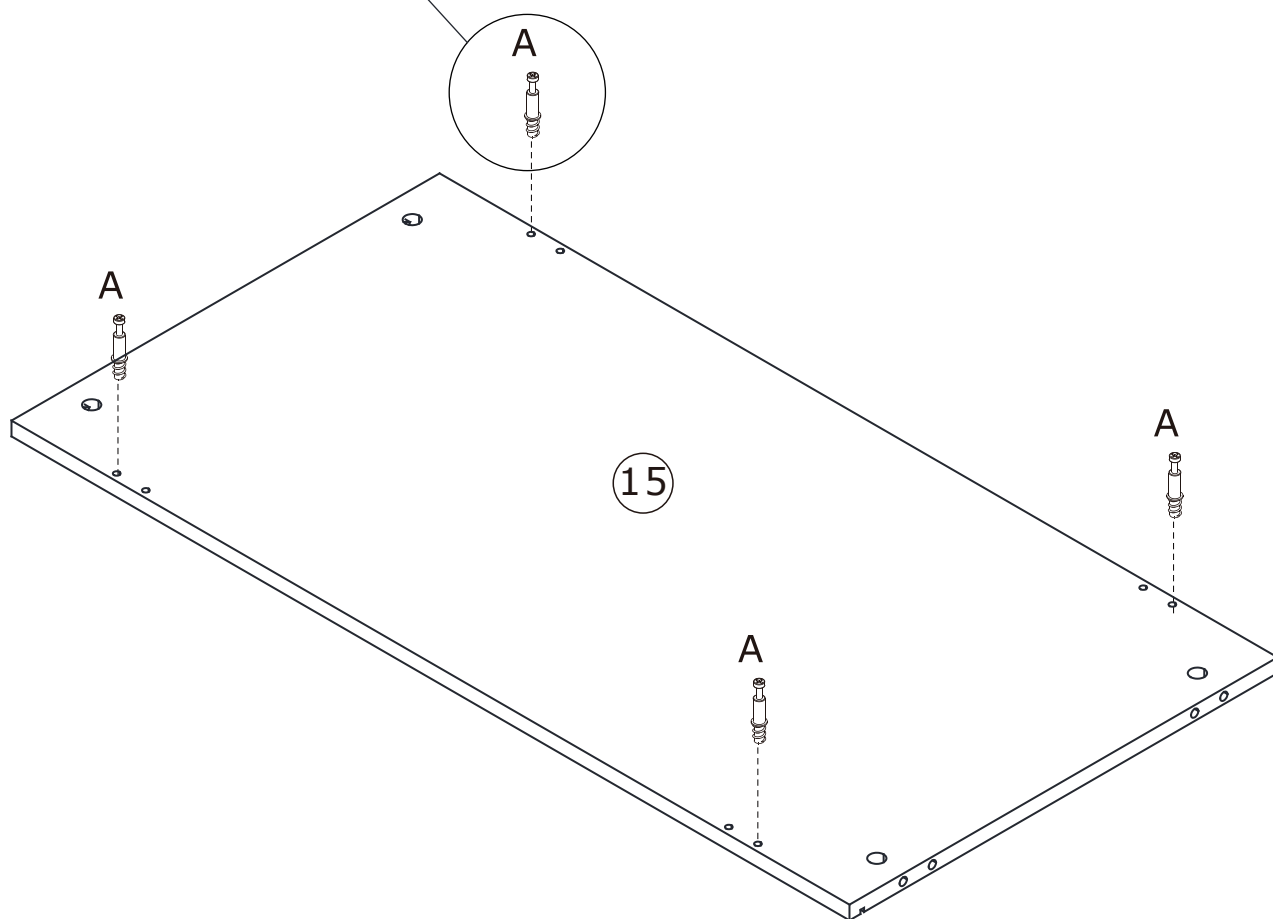

# 14

B x 4

 
 
 


Ø 15 x 9.5 mm


C x 4



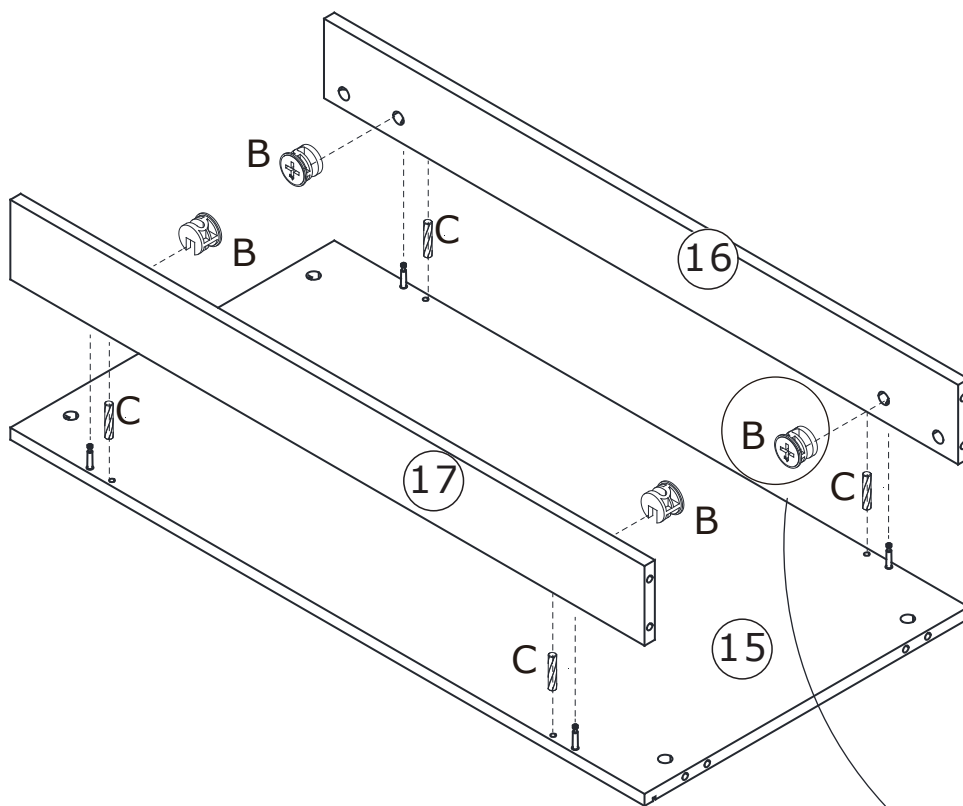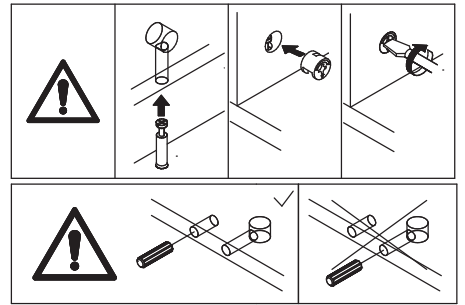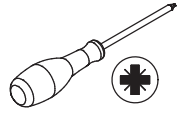



Ø 6 x 30 mm

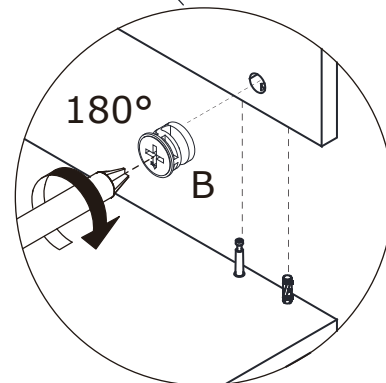 

 
 
Attach plate 16 and 17 to plate 15 with wooden dowel(C), put cam lock(B) into holes in plate 16,17 and turn clockwise to tighten as shown.



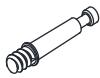

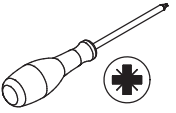
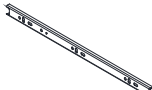
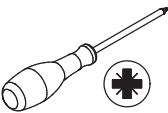
# 15

<p>A x 1</p>  <p>Ø 5 x 31 mm</p>	<p>D x 2</p>  <p>Ø 3 x 12 mm</p>	<p>E x 1</p>  <p>L=300 mm</p>	
-------------------------------------------------------------------------------------------------------------------	-------------------------------------------------------------------------------------------------------------------	----------------------------------------------------------------------------------------------------------------	-------------------------------------------------------------------------------------



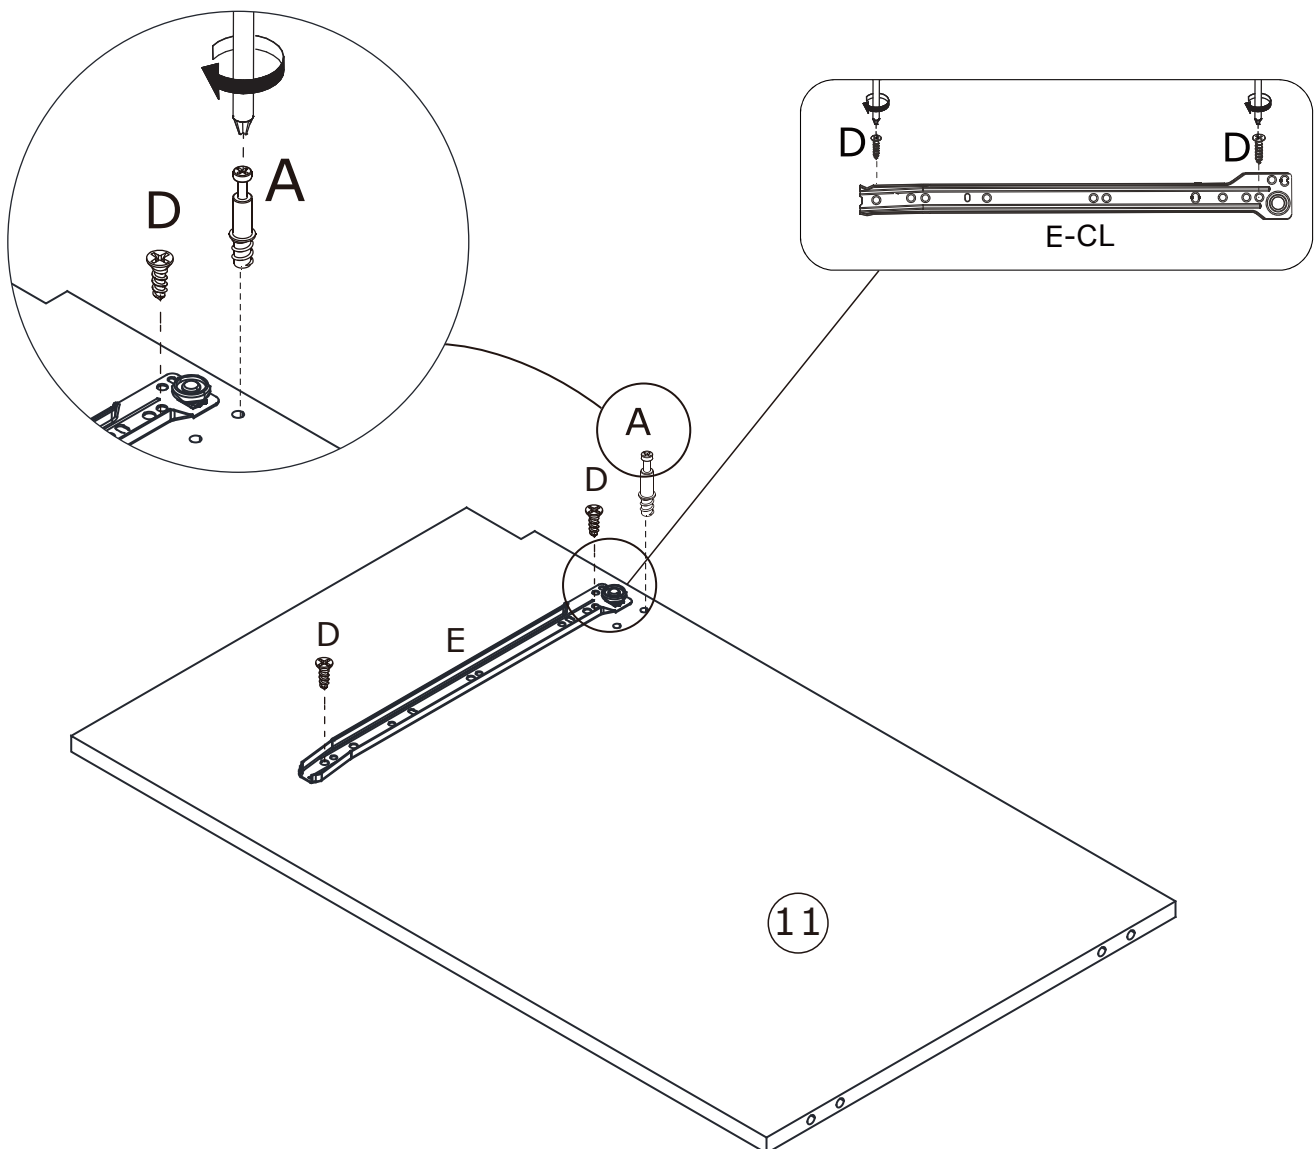
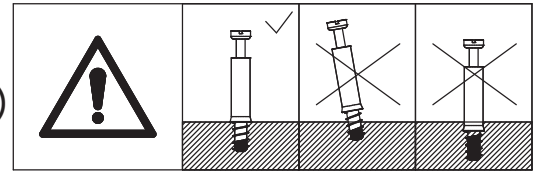
Screw quickfit screw(A) into plate 11 at first.  
Fix slide rail(E-CL) to plate 11 using screw(D)  
as shown.



# 16

   
 
<p>A x 1</p>  <p>Ø5 x 31 mm</p>	<p>D x 5</p>  <p>Ø3 x 12 mm</p>	<p>E x 1</p>  <p>L=300 mm</p>	<p>F x 1</p>  <p>L=400 mm</p>	
------------------------------------------------------------------------------------------------------------------	------------------------------------------------------------------------------------------------------------------	----------------------------------------------------------------------------------------------------------------	-----------------------------------------------------------------------------------------------------------------	-------------------------------------------------------------------------------------

Flip plate 11, screw quickfit screw(A) into at first.  
Fix slide rail(E-CR) and (F) to plate 11 using screw(D) as shown.

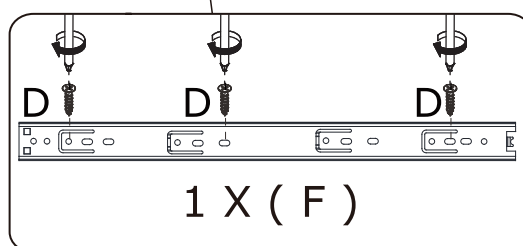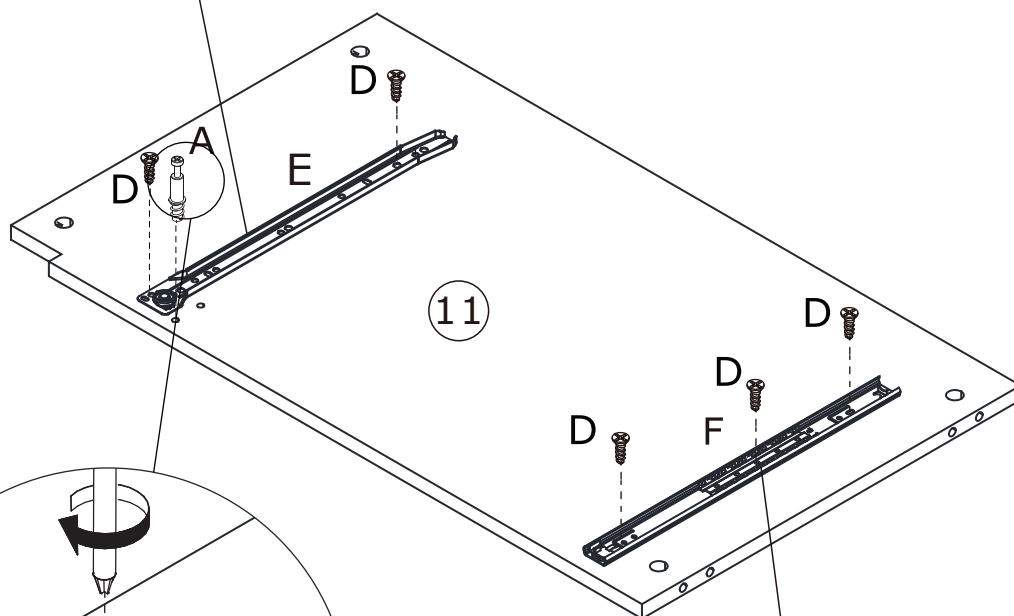
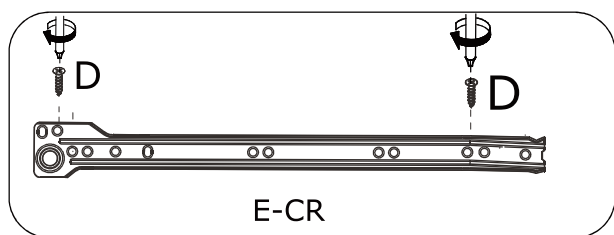
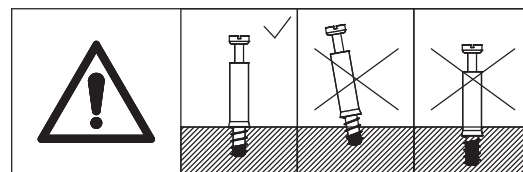




17

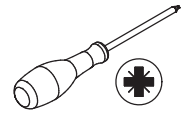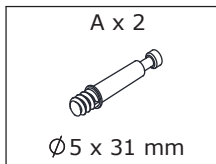  

   Screw quickfit screw(A) into plate 15 at first.

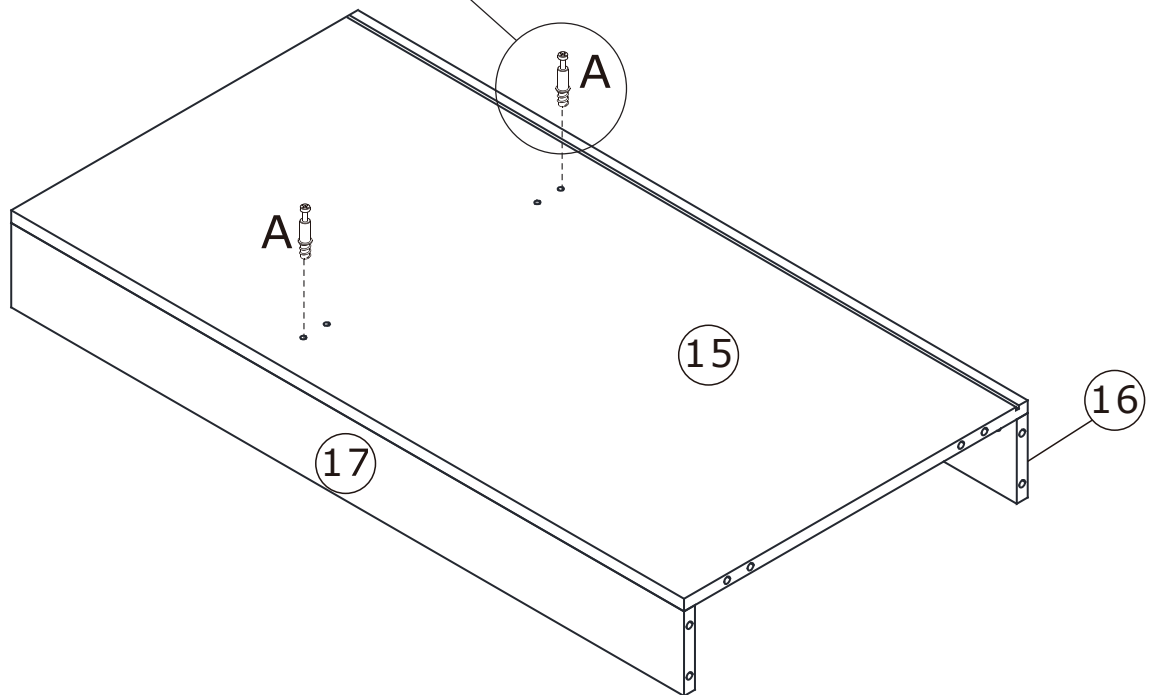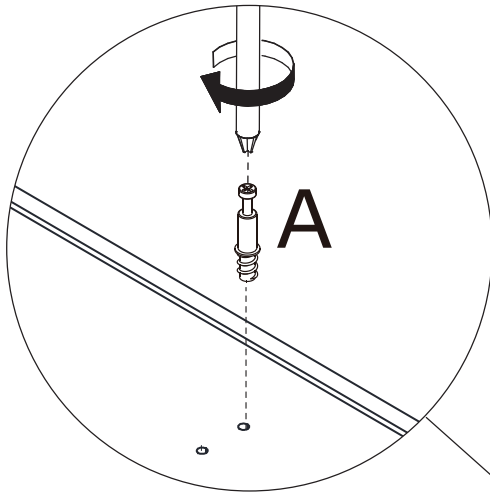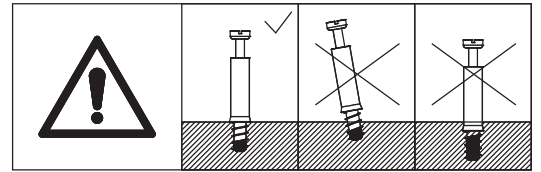

# 18

B x 2

 


Ø15 x 9.5 mm



C x 2



Ø6 x 30 mm

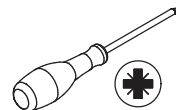

  Attach plate 11 to plate 15 with wooden dowel(C), put cam lock(B) into holes in plate 11 and turn clockwise to tighten as shown.

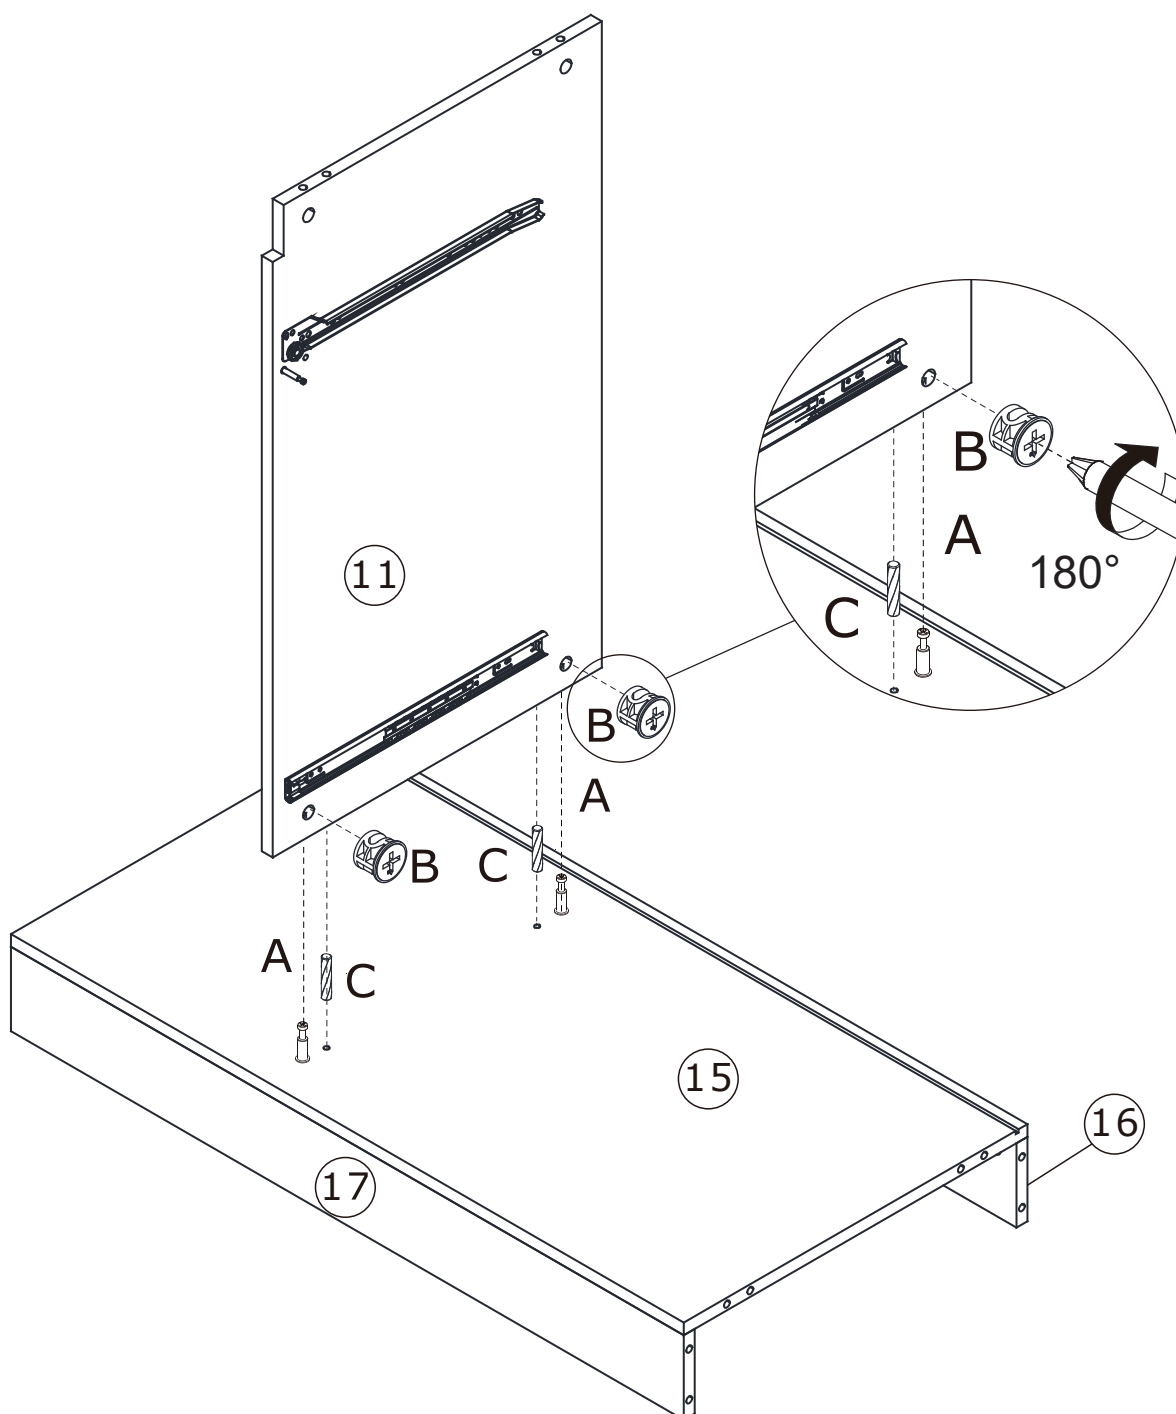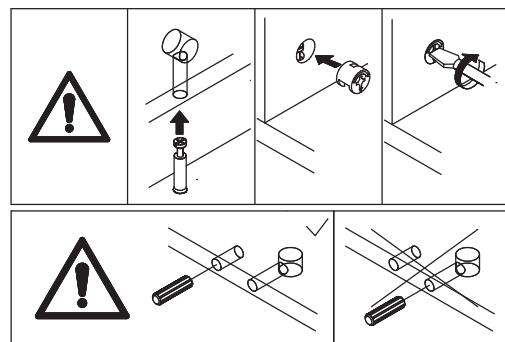

# 19

B x 2

 


Ø 15 x 9.5 mm


C x 2



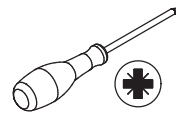



Ø 6 x 30 mm

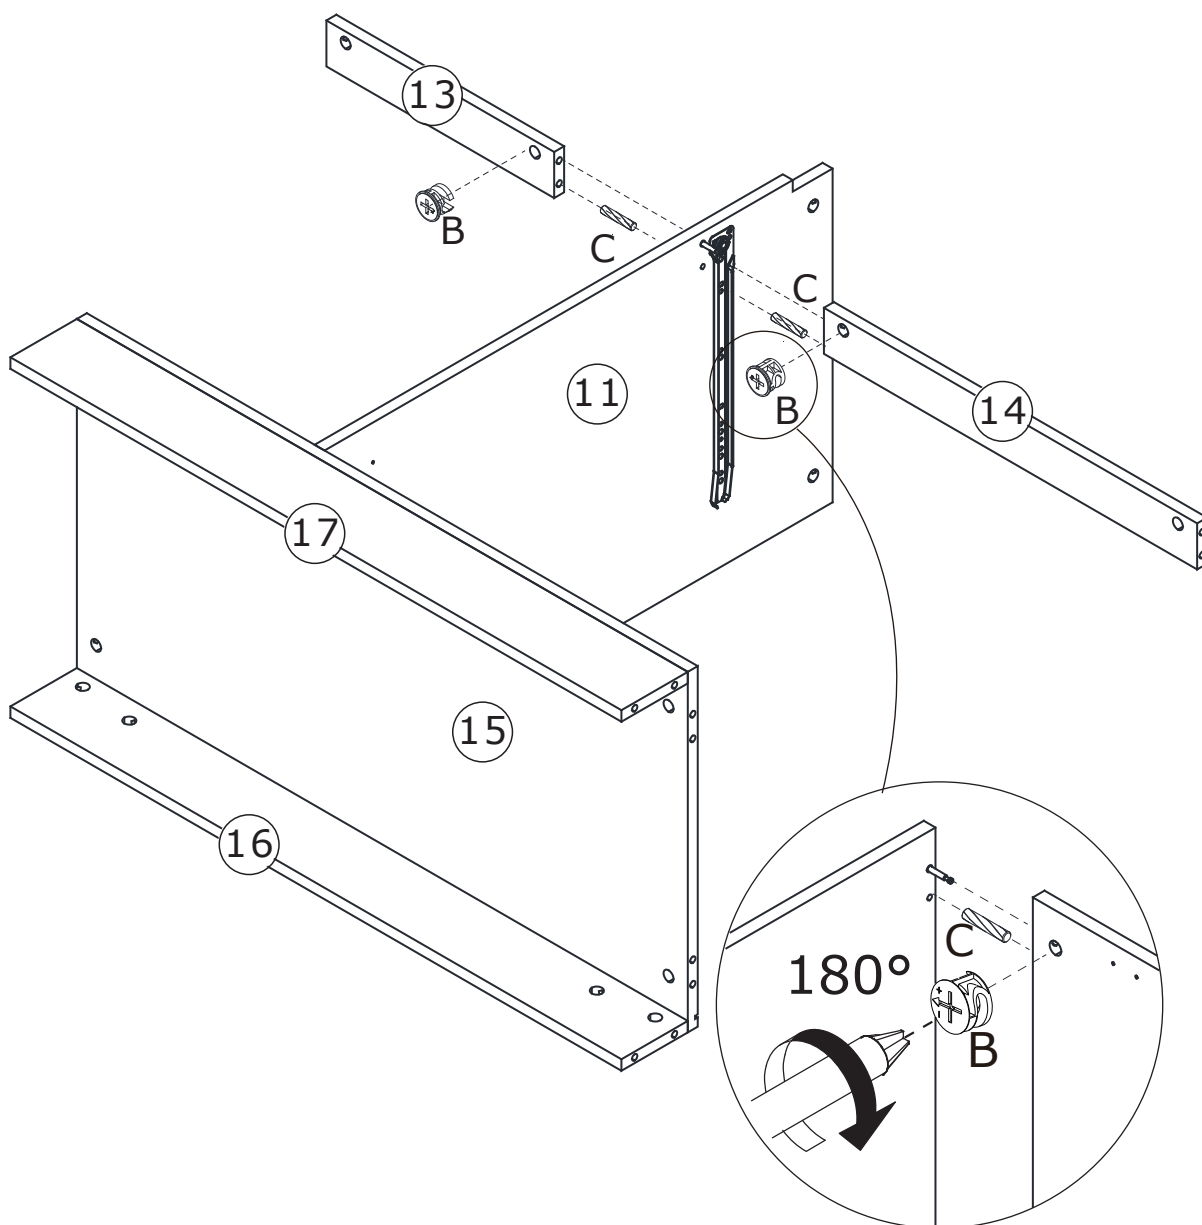 

Connect plate 13 and 14 with plate 11 using wooden dowel(C), put cam lock(B) into holes in plate 13,14 and turn clockwise to tighten as shown.


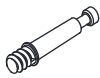


20

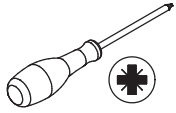  
 

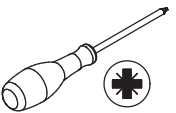
<p>A x 6</p>  <p>Ø 5 x 31 mm</p>	<p>D x 2</p>  <p>Ø 3 x 12 mm</p>	<p>E x 1</p>  <p>L=300 mm</p>	
-------------------------------------------------------------------------------------------------------------------	-------------------------------------------------------------------------------------------------------------------	----------------------------------------------------------------------------------------------------------------	-------------------------------------------------------------------------------------

Screw quickfit screw(A) into plate 36 at first.

 
 
Fix slide rail(E-CR) to plate 36 using screw(D) as shown.

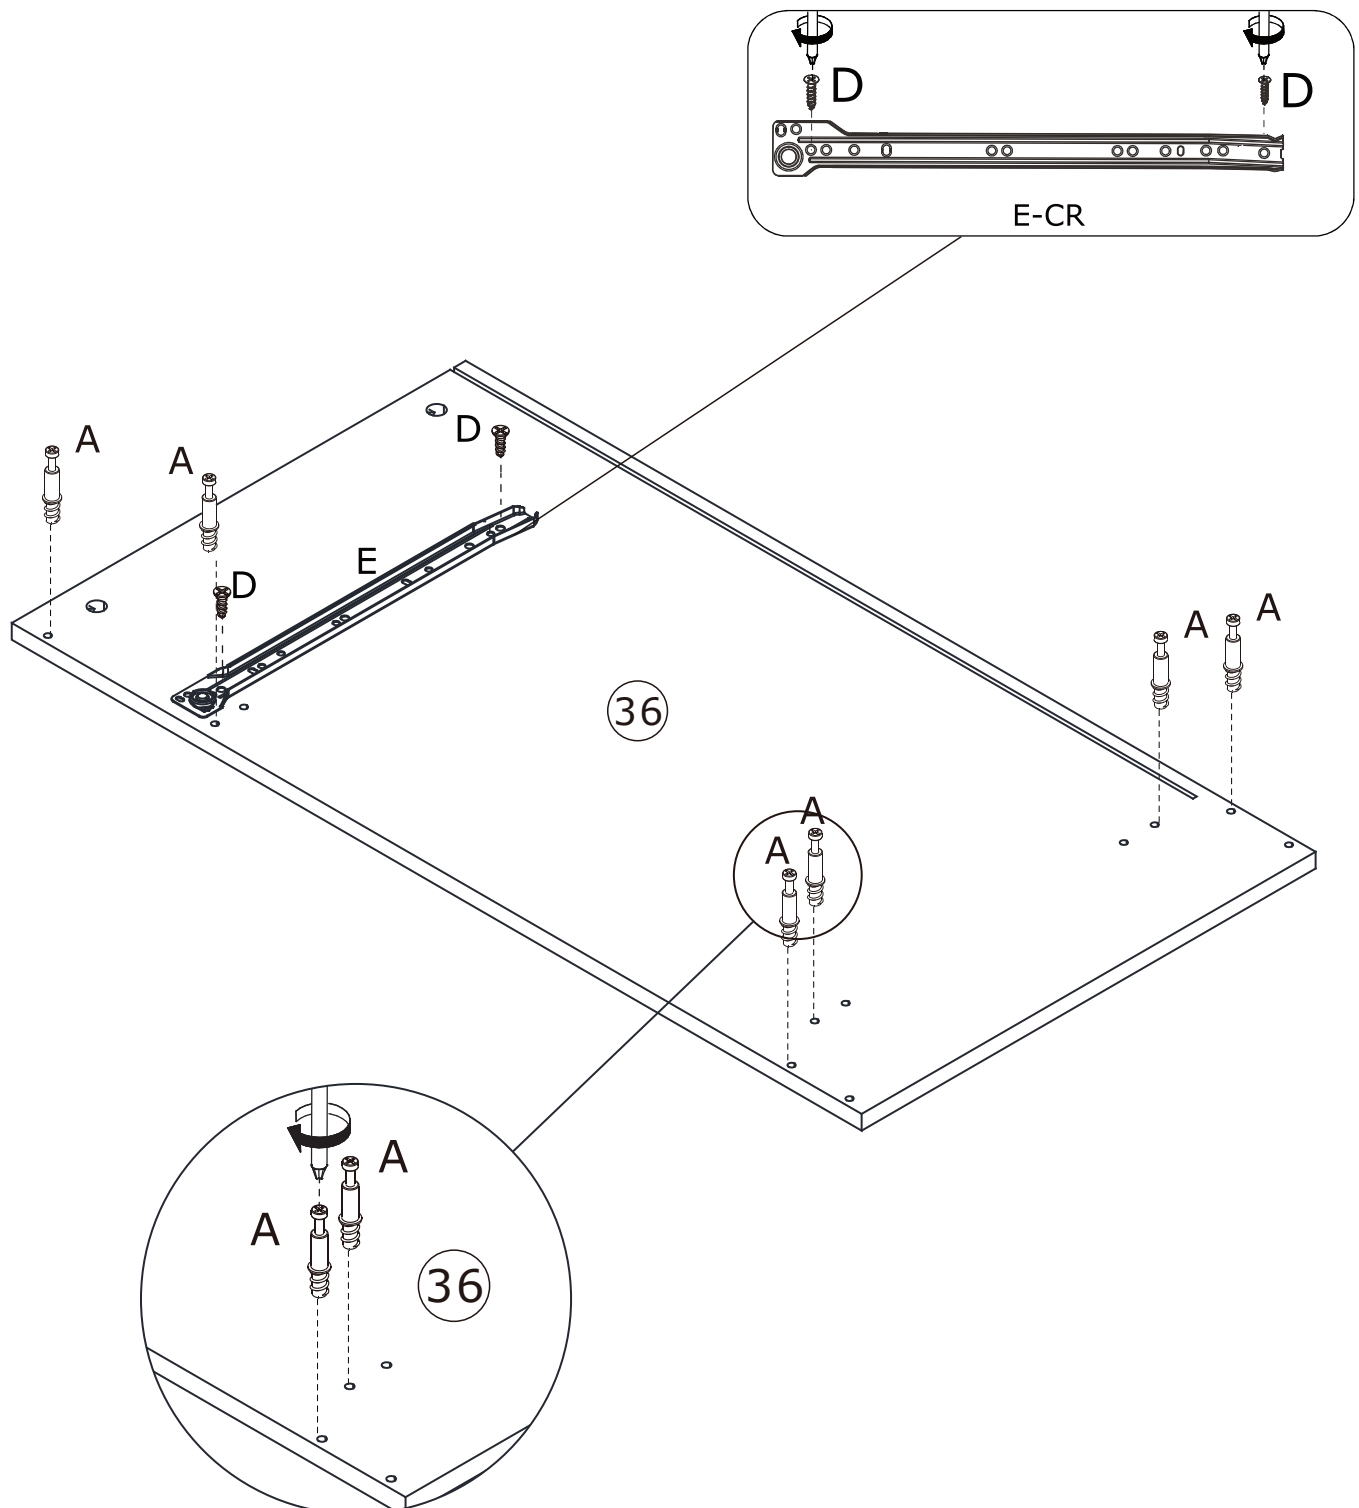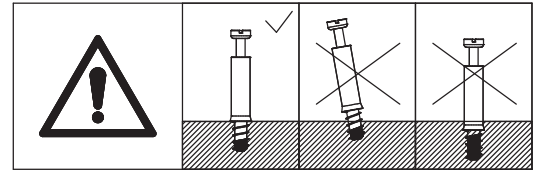




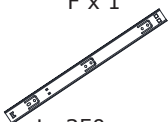
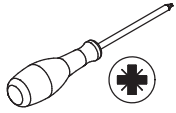
# 21



<p>B x 5</p>  <p>Ø 15 x 9.5 mm</p>	<p>C x 5</p>  <p>Ø 6 x 30 mm</p>	<p>K x 1</p>  <p>Ø 15 x 11 mm</p>	
---------------------------------------------------------------------------------------------------------------------	-------------------------------------------------------------------------------------------------------------------	--------------------------------------------------------------------------------------------------------------------	-------------------------------------------------------------------------------------

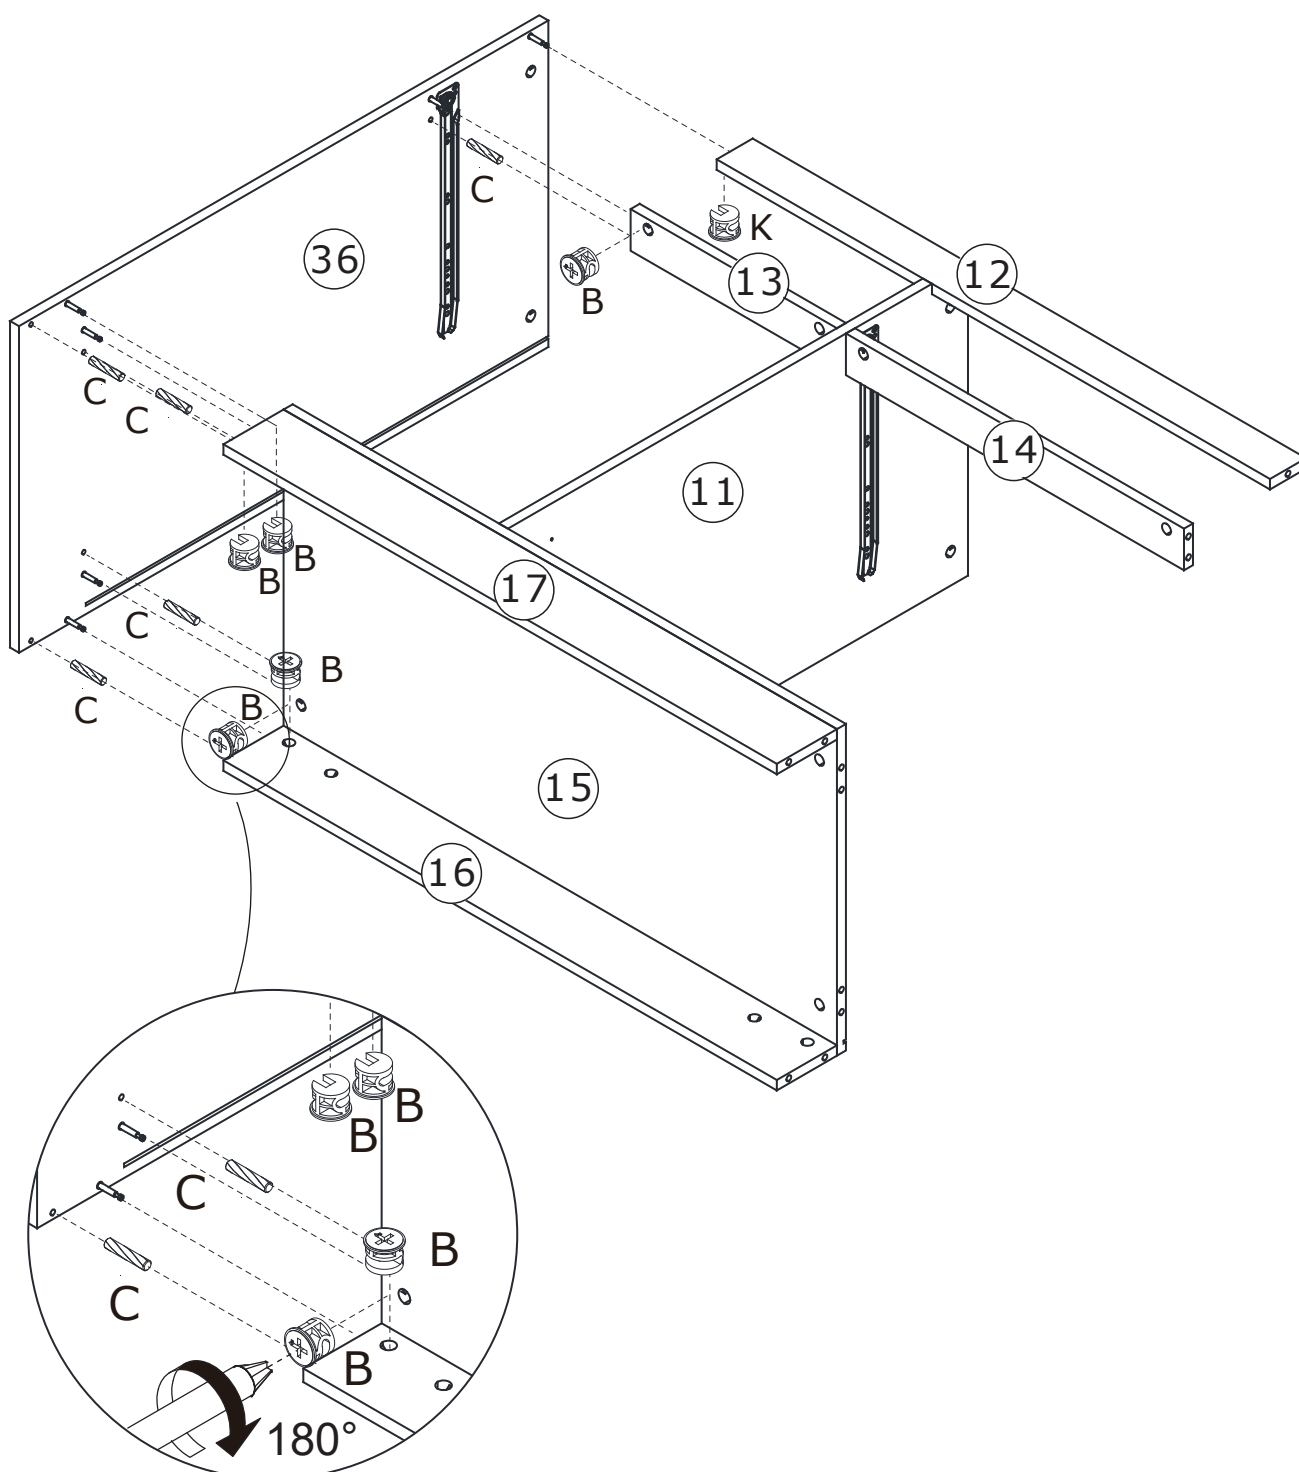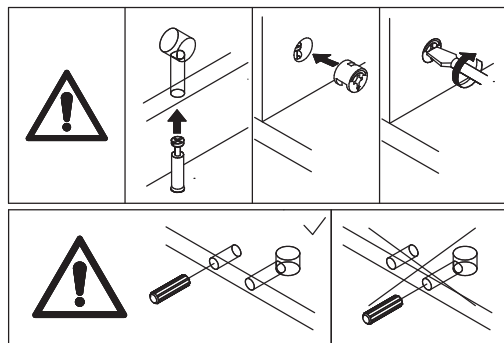Attach plate 36 to plate 12,13,17 and 16 with wooden dowel(C), put cam lock(B) into holes in plate 12,13,17,16 and turn clockwise to tighten as shown.






# 22
  
<p>A x 6</p>  <p>Ø 5 x 31 mm</p>	<p>D x 5</p>  <p>Ø 3 x 12 mm</p>	<p>E x 1</p>  <p>L=300 mm</p>	<p>F x 1</p>  <p>L=350 mm</p>	
-------------------------------------------------------------------------------------------------------------------	-------------------------------------------------------------------------------------------------------------------	----------------------------------------------------------------------------------------------------------------	-----------------------------------------------------------------------------------------------------------------	-------------------------------------------------------------------------------------

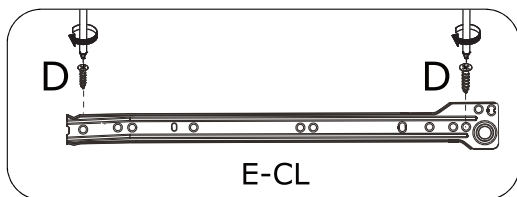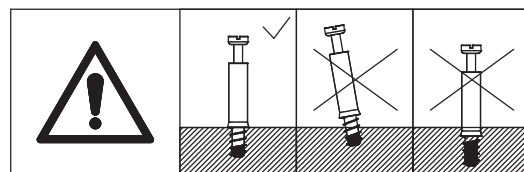

   Screw quickfit screw(A) into plate 10 at first.  
Fix slide rail(E-CL) and (F) to plate 10 using screw(D) as shown.

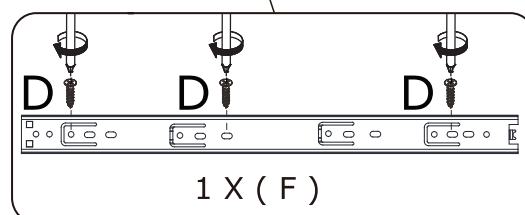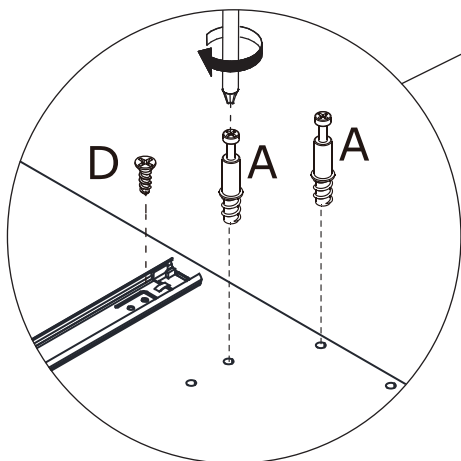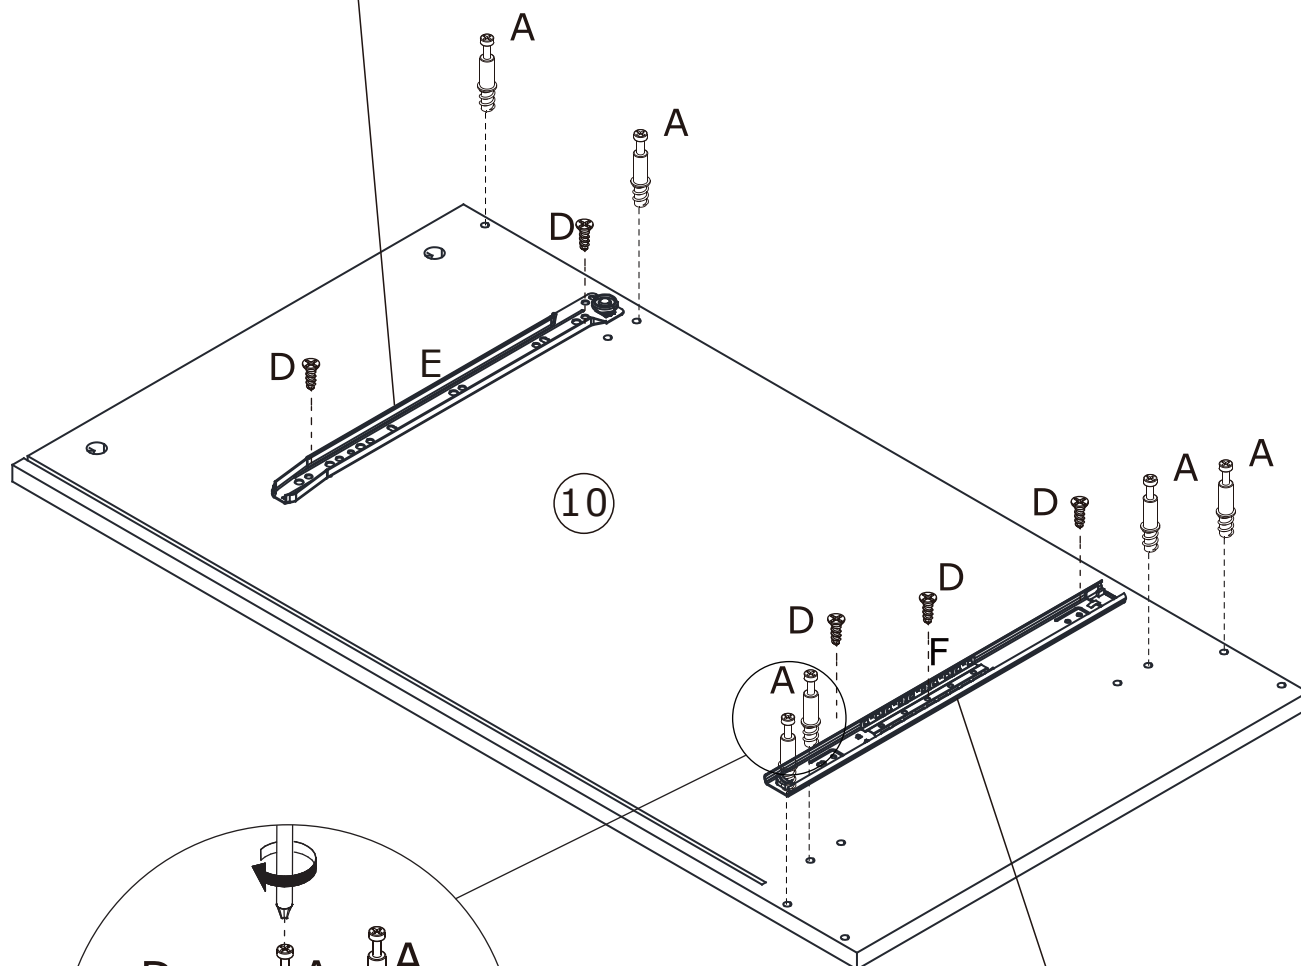

# 23

B x 5



Ø 15 x 9.5 mm

C x 5

 


Ø 6 x 30 mm


K x 1




Ø 15 x 11 mm

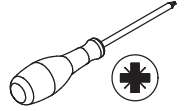

 
Attach plate 10 to plate 12,14,17 and 16 with wooden dowel(C), put cam lock(B) into holes in plate 12,14,17,16 and turn clockwise to tighten as shown.

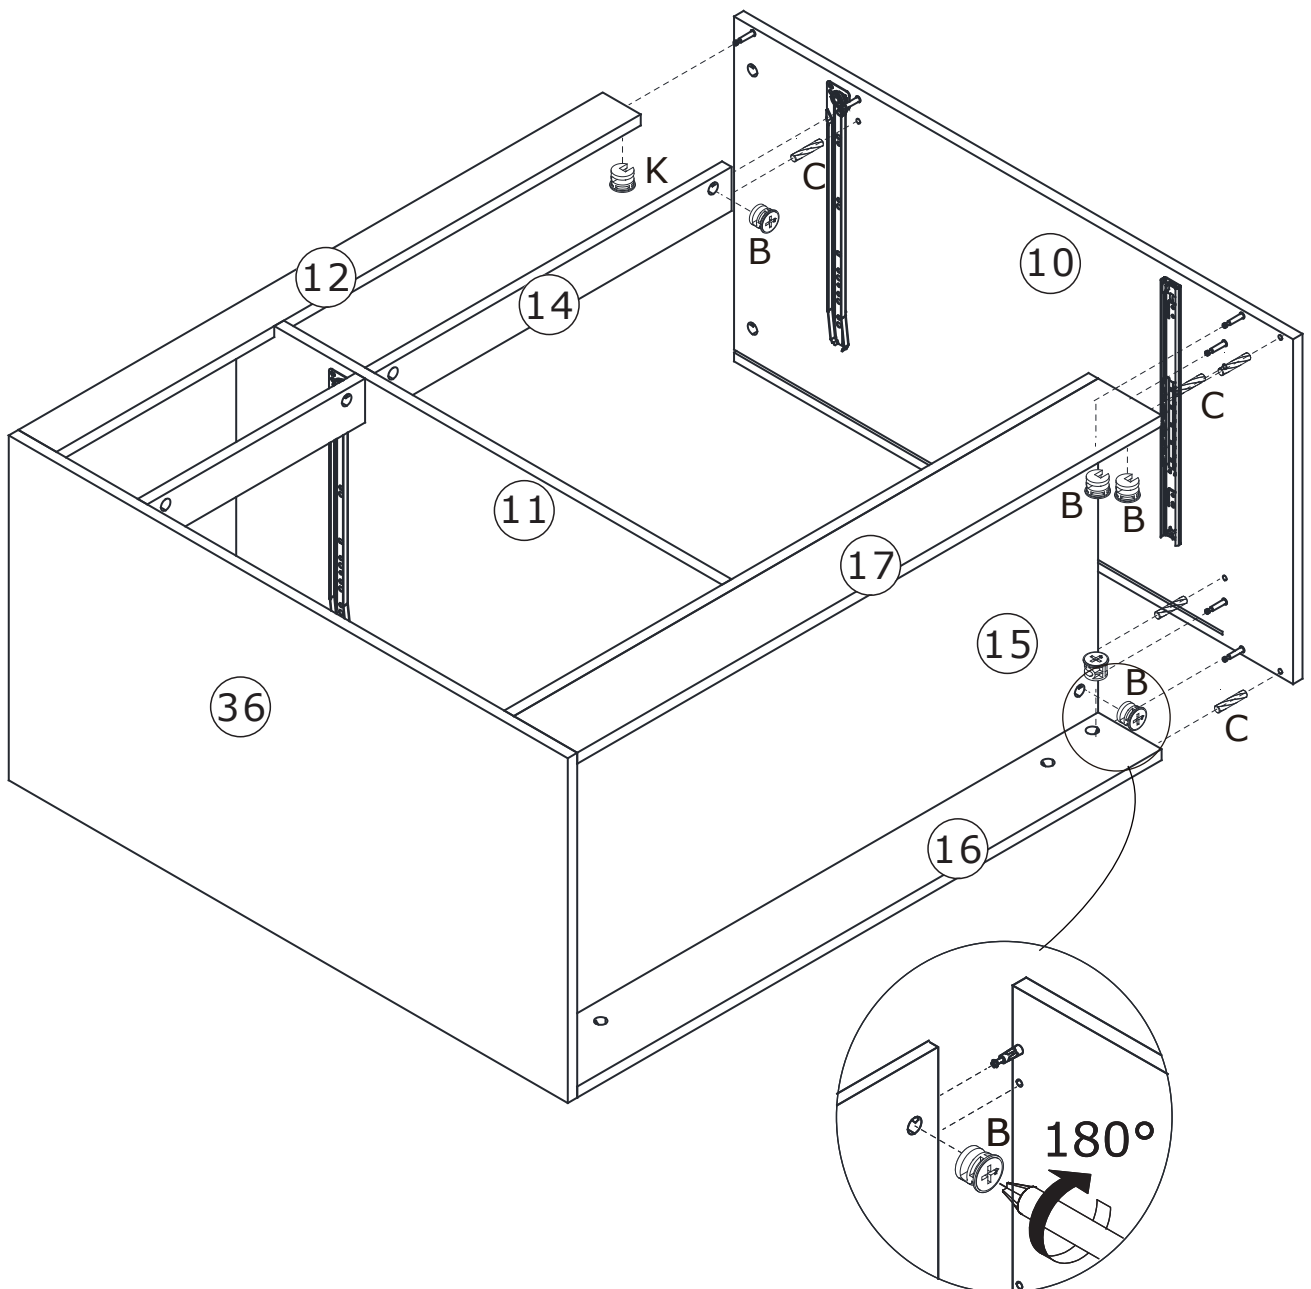

24




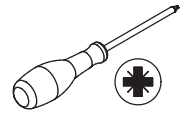 


Slide plate 20 along grooves as shown.

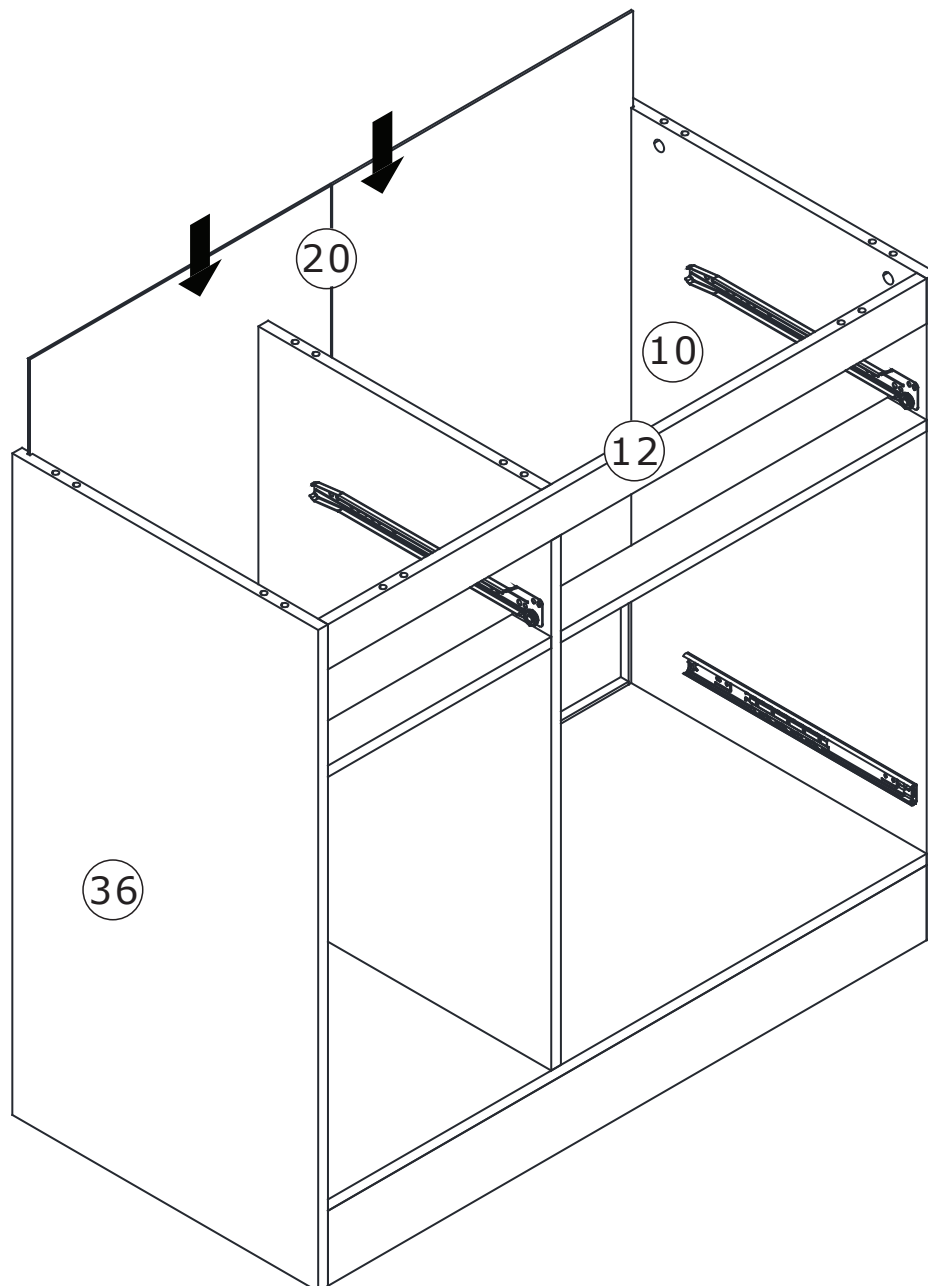 




25

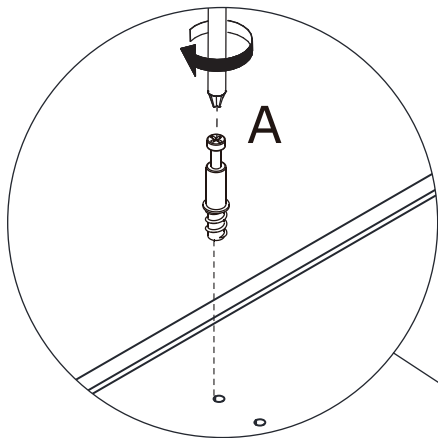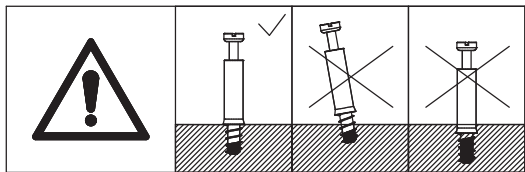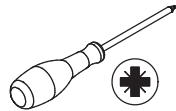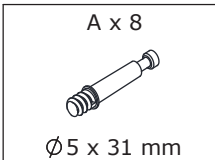    

 Screw quickfit screw(A) into corresponding holes in plate 8 as shown.

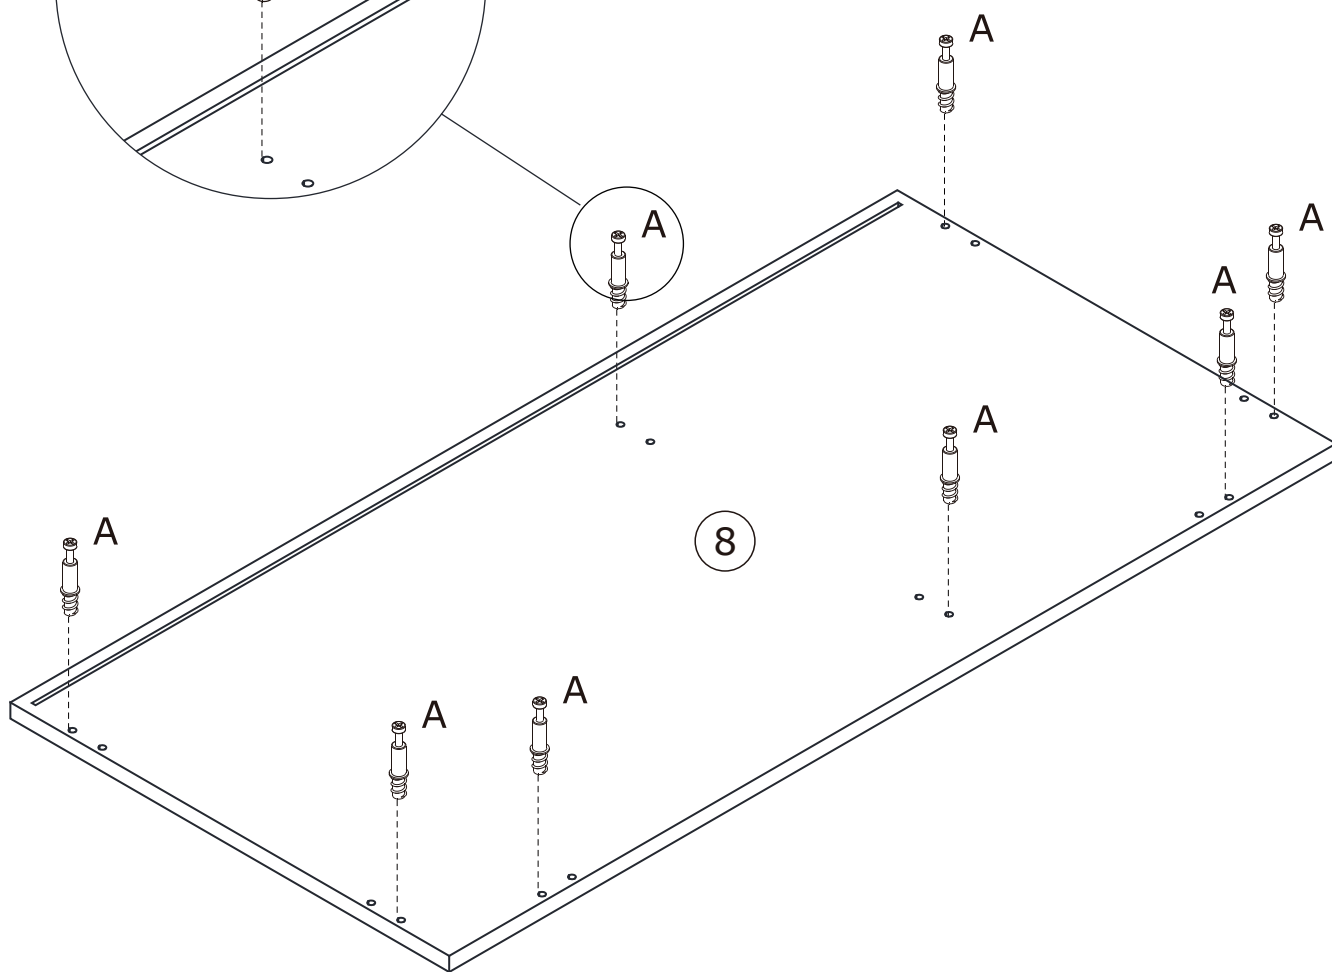

# 26

B x 2



Ø 15 x 9.5 mm

C x 8

 
 
 


Ø 6 x 30 mm

K x 6






Ø 15 x 11 mm

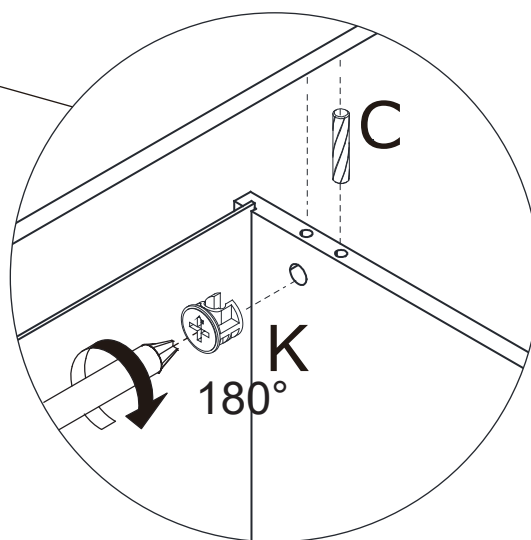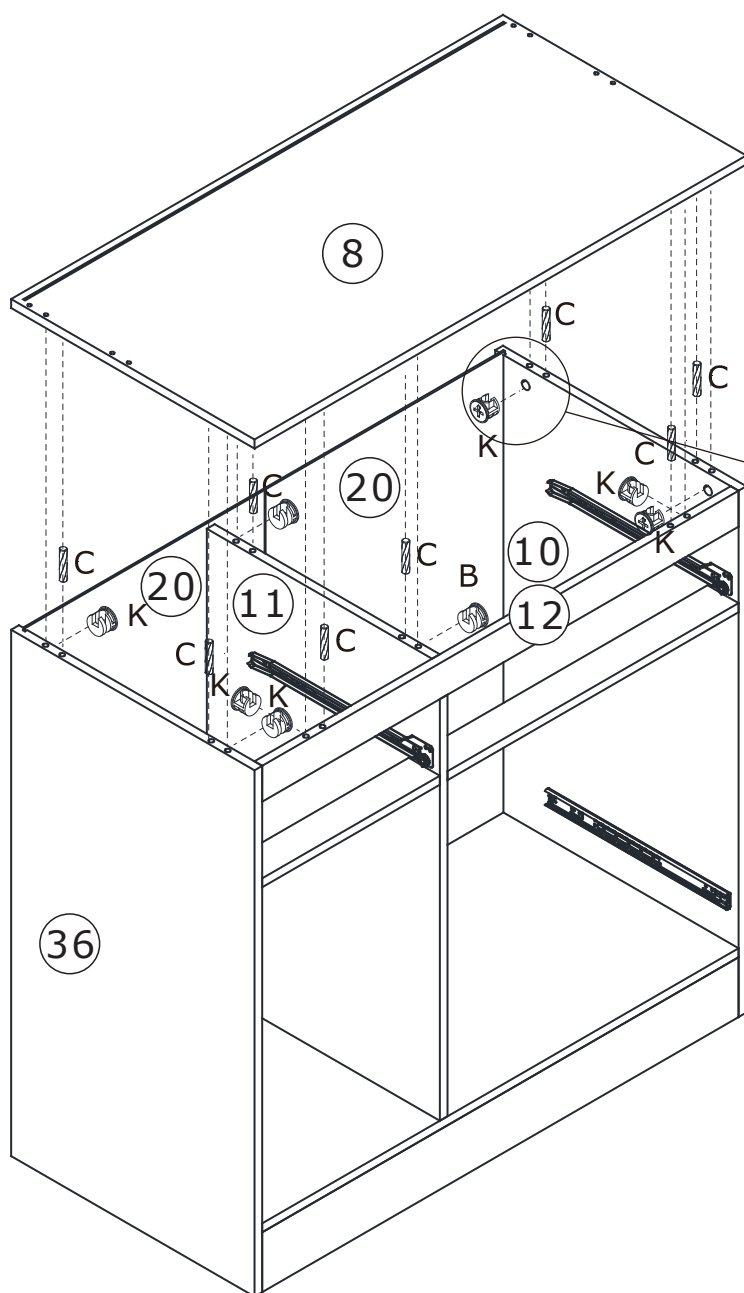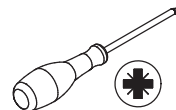


Cover plate 8 to the top with wooden dowel(C), put cam lock(B) into holes in plate 11; put cam lock(K) into holes in plate 36,12,10 and turn clockwise to tighten as shown.

  27

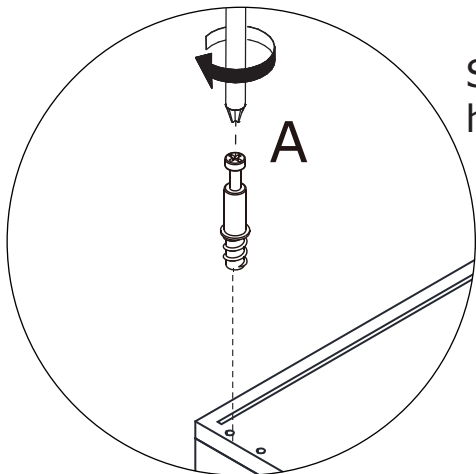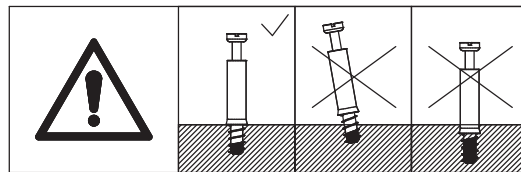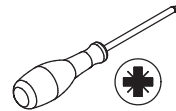

 Screw quickfit screw(A) into corresponding holes in plate 8 as shown.

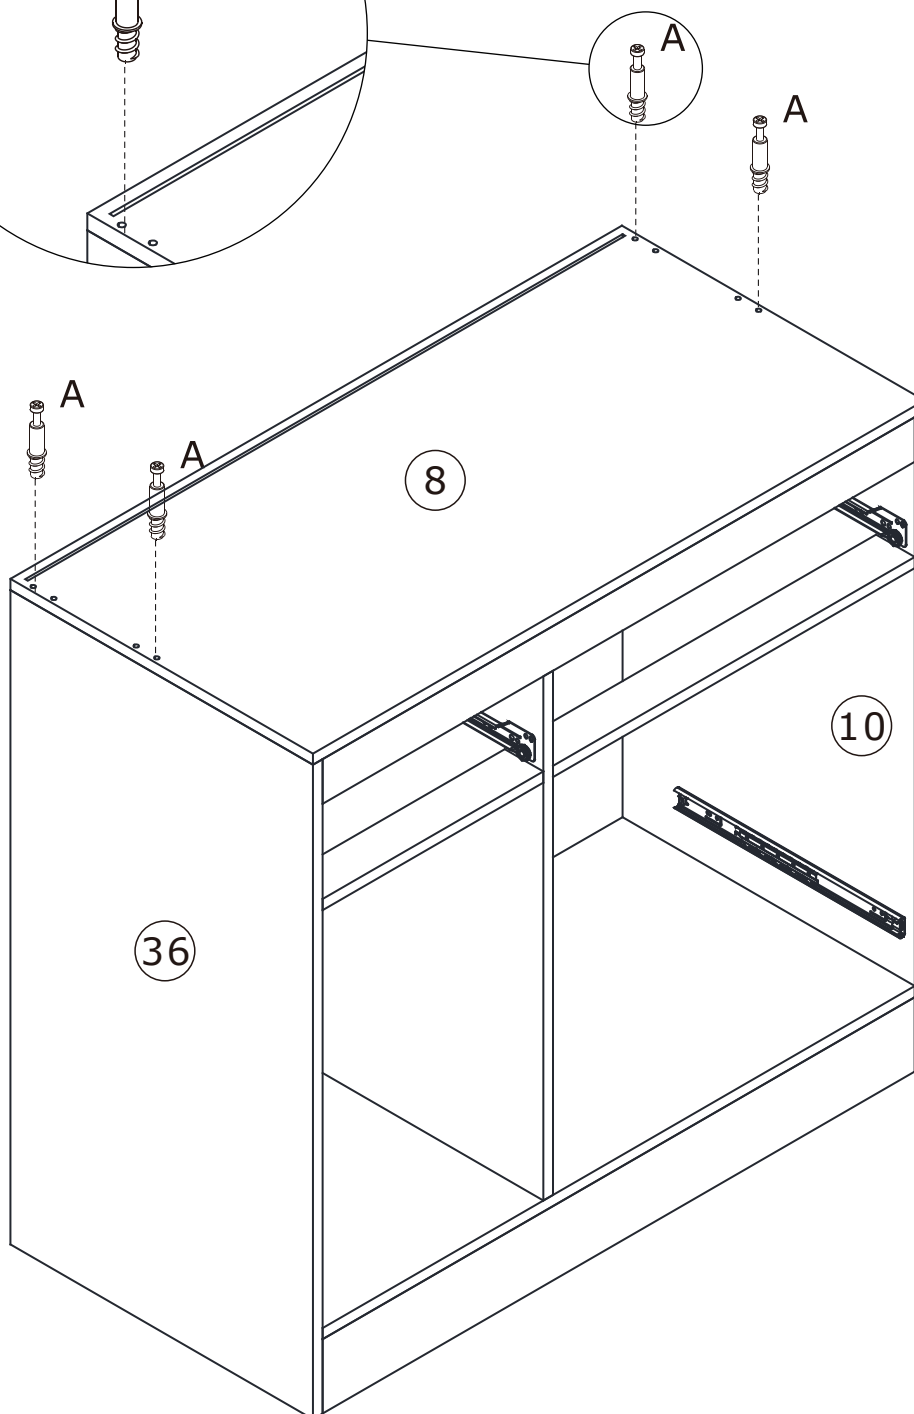

# 28

 
 
 
A x 2



C x 2







K x 2

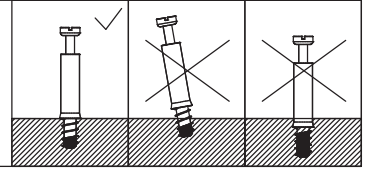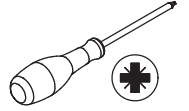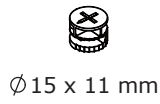

Screw quickfit screw(A) into corresponding holes in plate 4 at first.

   
 
Attach plate 4 to plate 5 with wooden dowel(C), put cam lock(B) into holes in plate 5 and turn clockwise to tighten as shown.

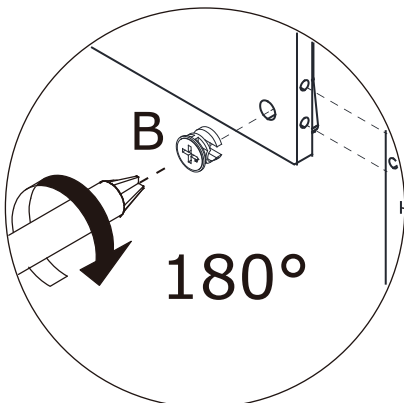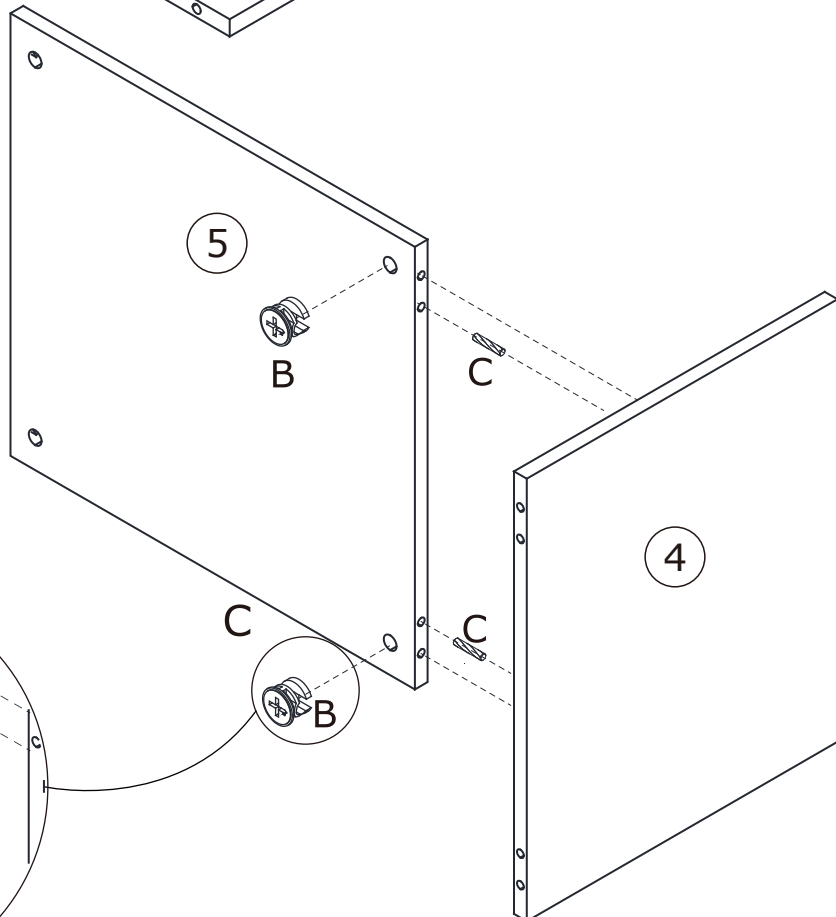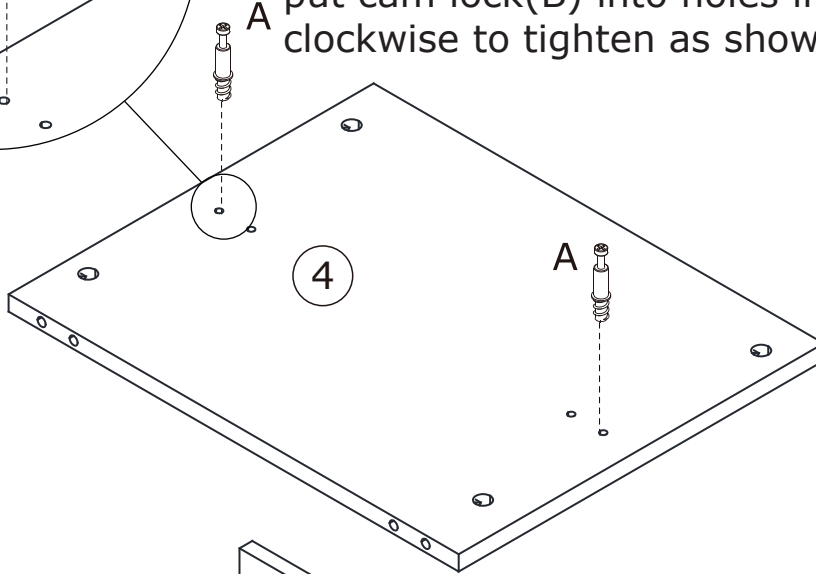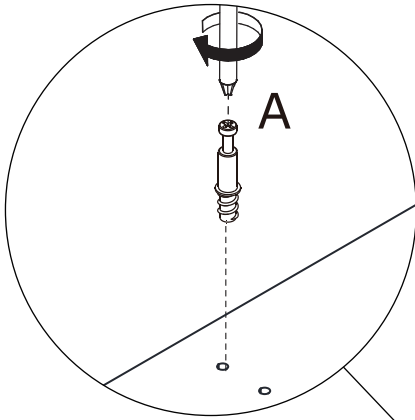





29



  
Screw quickfit screw(A) into corresponding holes in plate 1 as shown.  
Fix part(L) to plate 1 as shown.

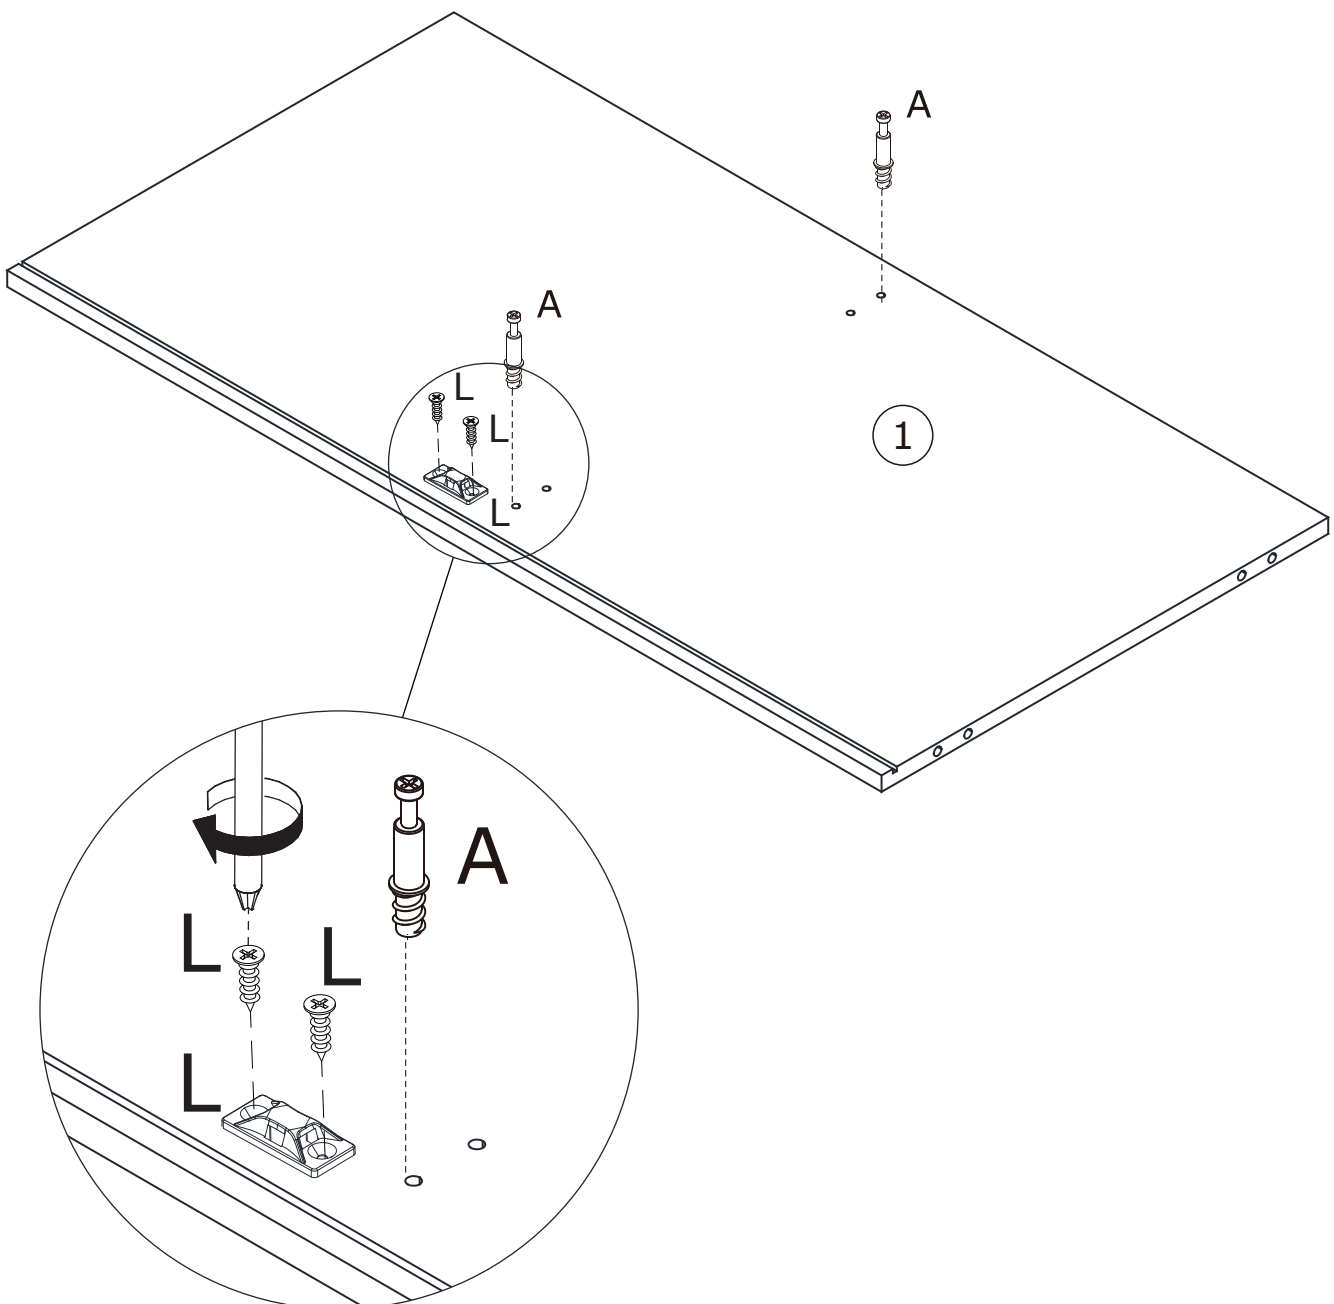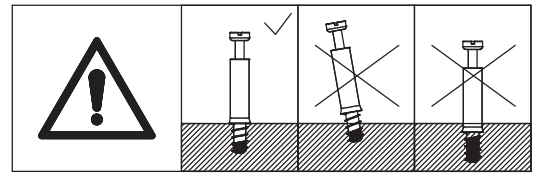

30

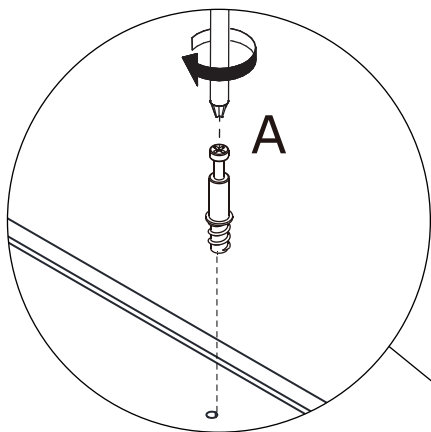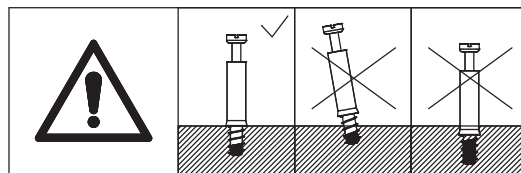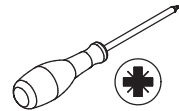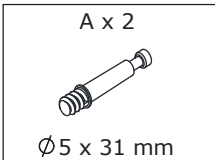    

 Screw quickfit screw(A) into corresponding holes in plate 6 as shown.

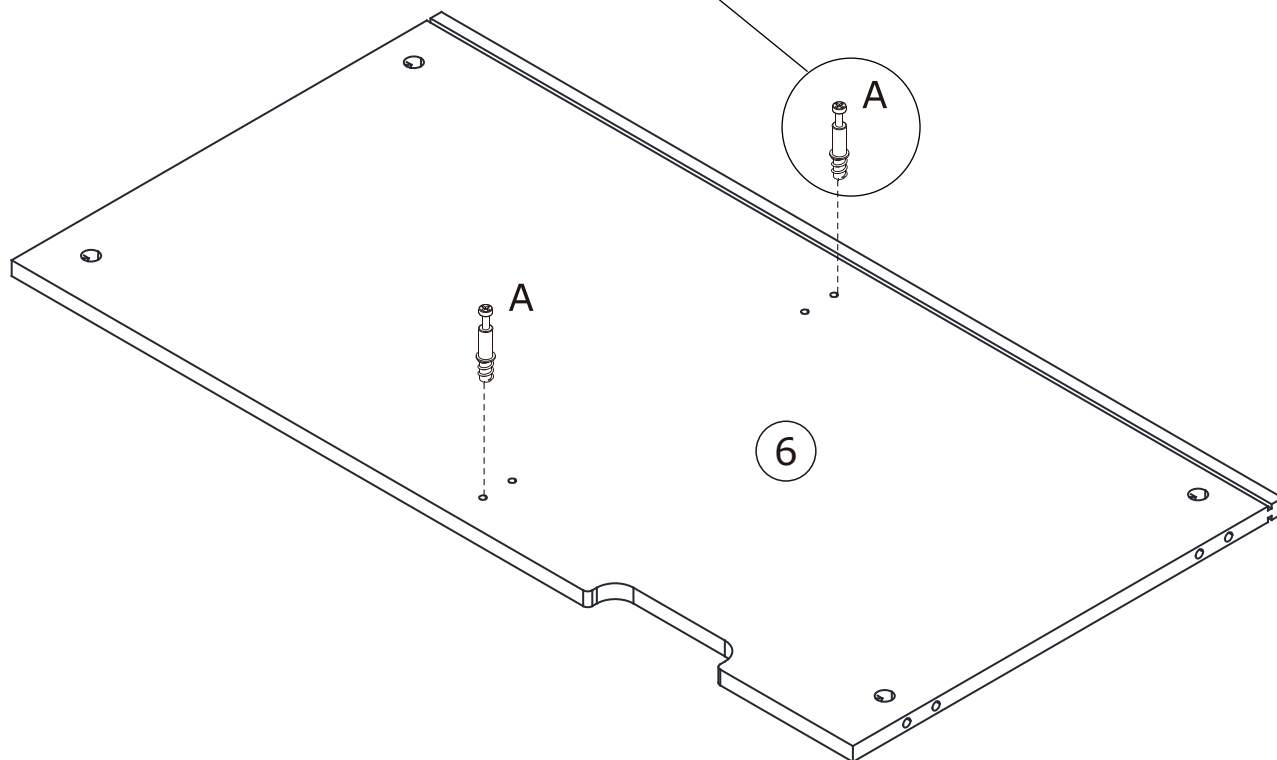

# 31

B x 4




Ø 15 x 9.5 mm



C x 4





Ø 6 x 30 mm

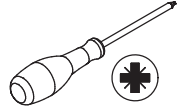

 
 
Connect plate 1 and 6 with plate 4 using wooden dowel(C), put cam lock(B) into holes in plate 4 and turn clockwise to tighten as shown.

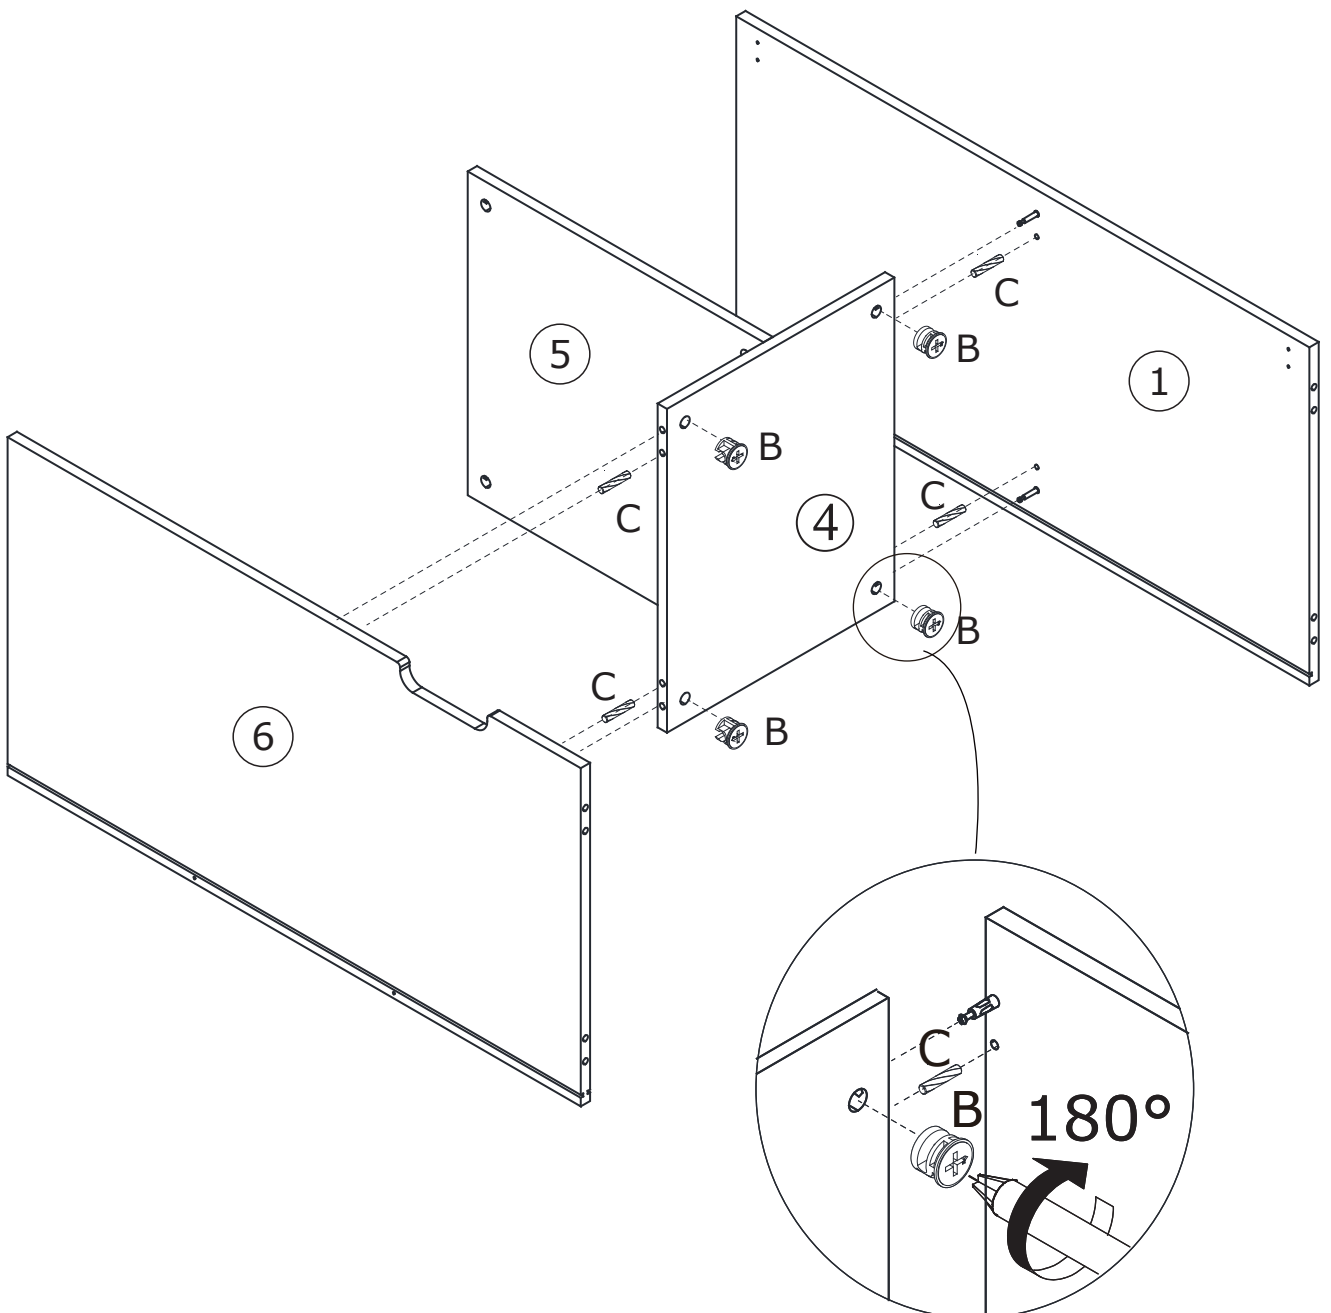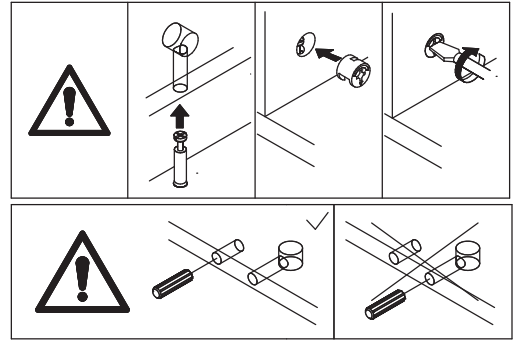

# 32

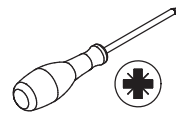
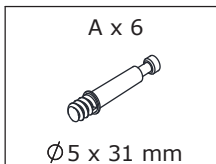 


  Screw quickfit screw(A) into corresponding holes in plate 2 as shown.

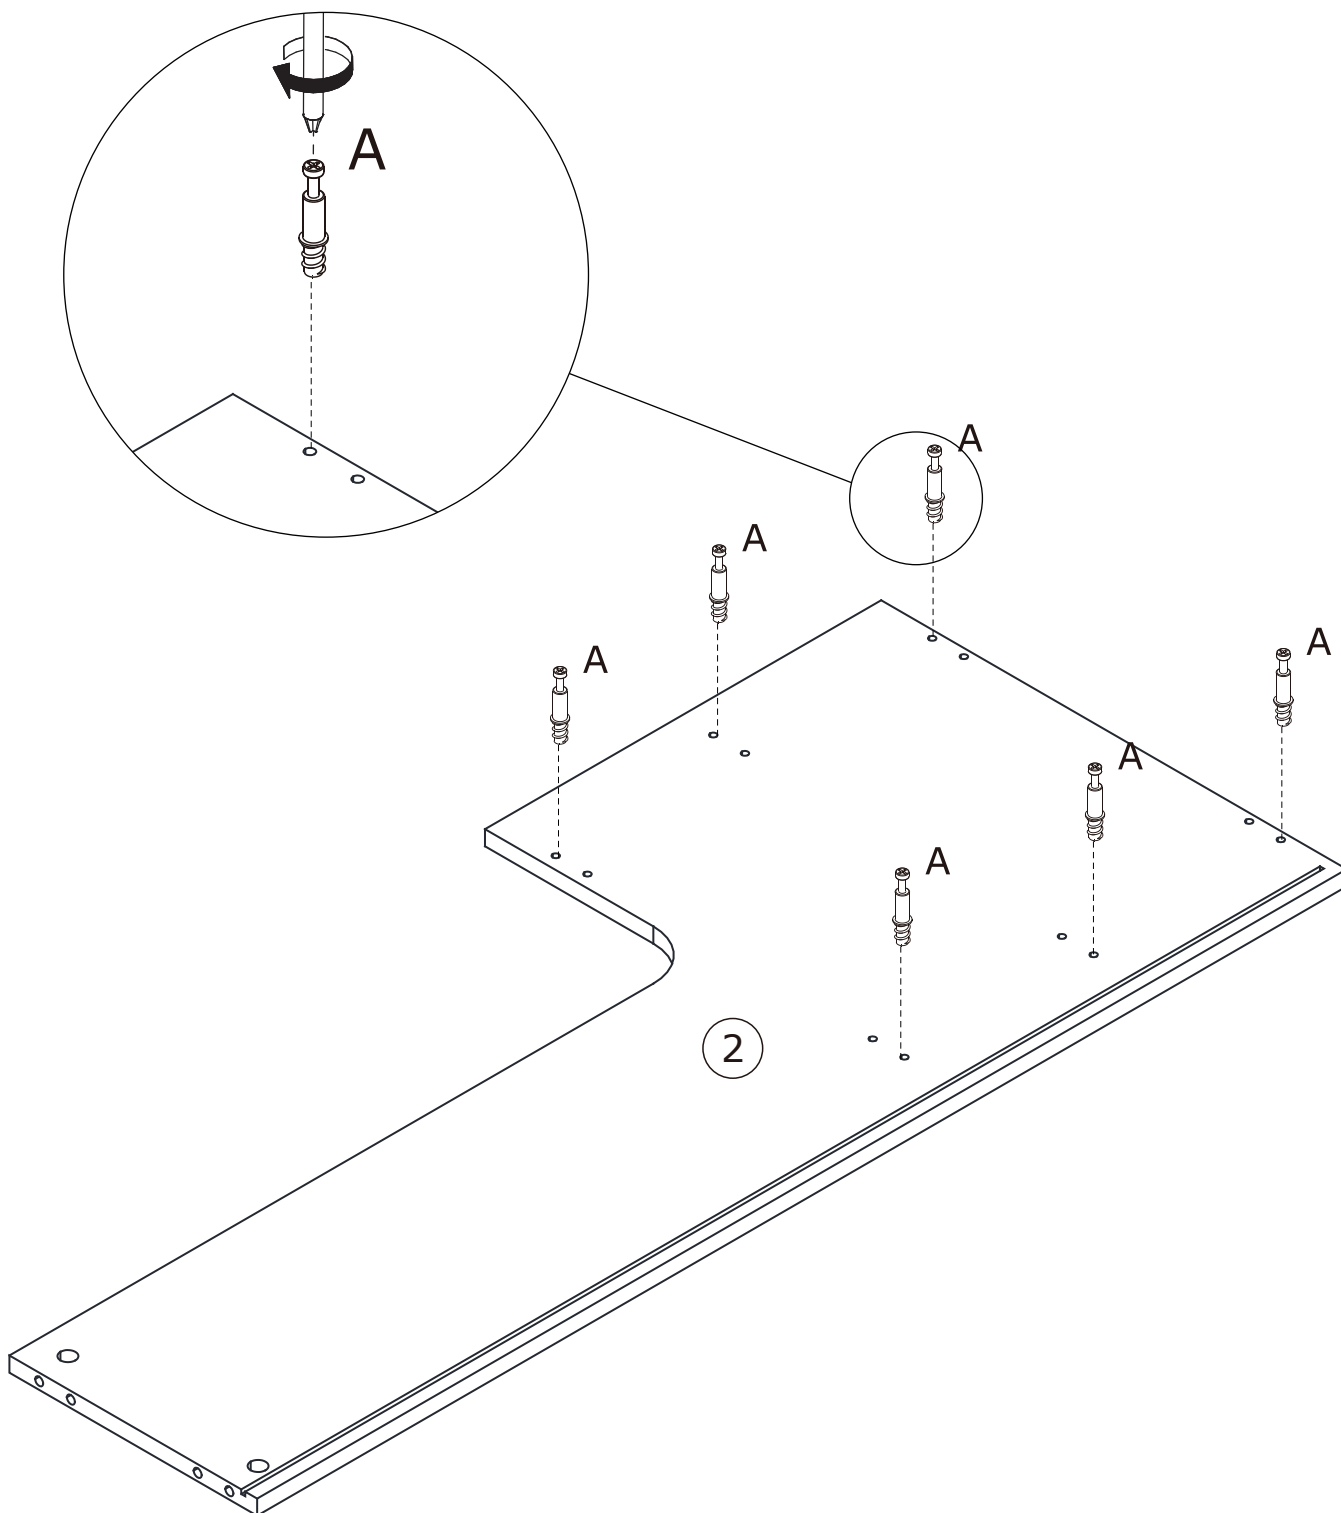
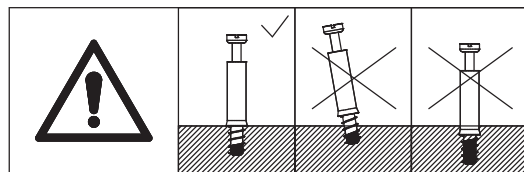




# 33

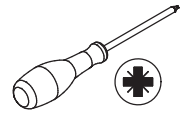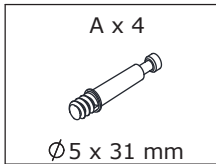  

  Screw quickfit screw(A) into corresponding holes in plate 3 as shown.

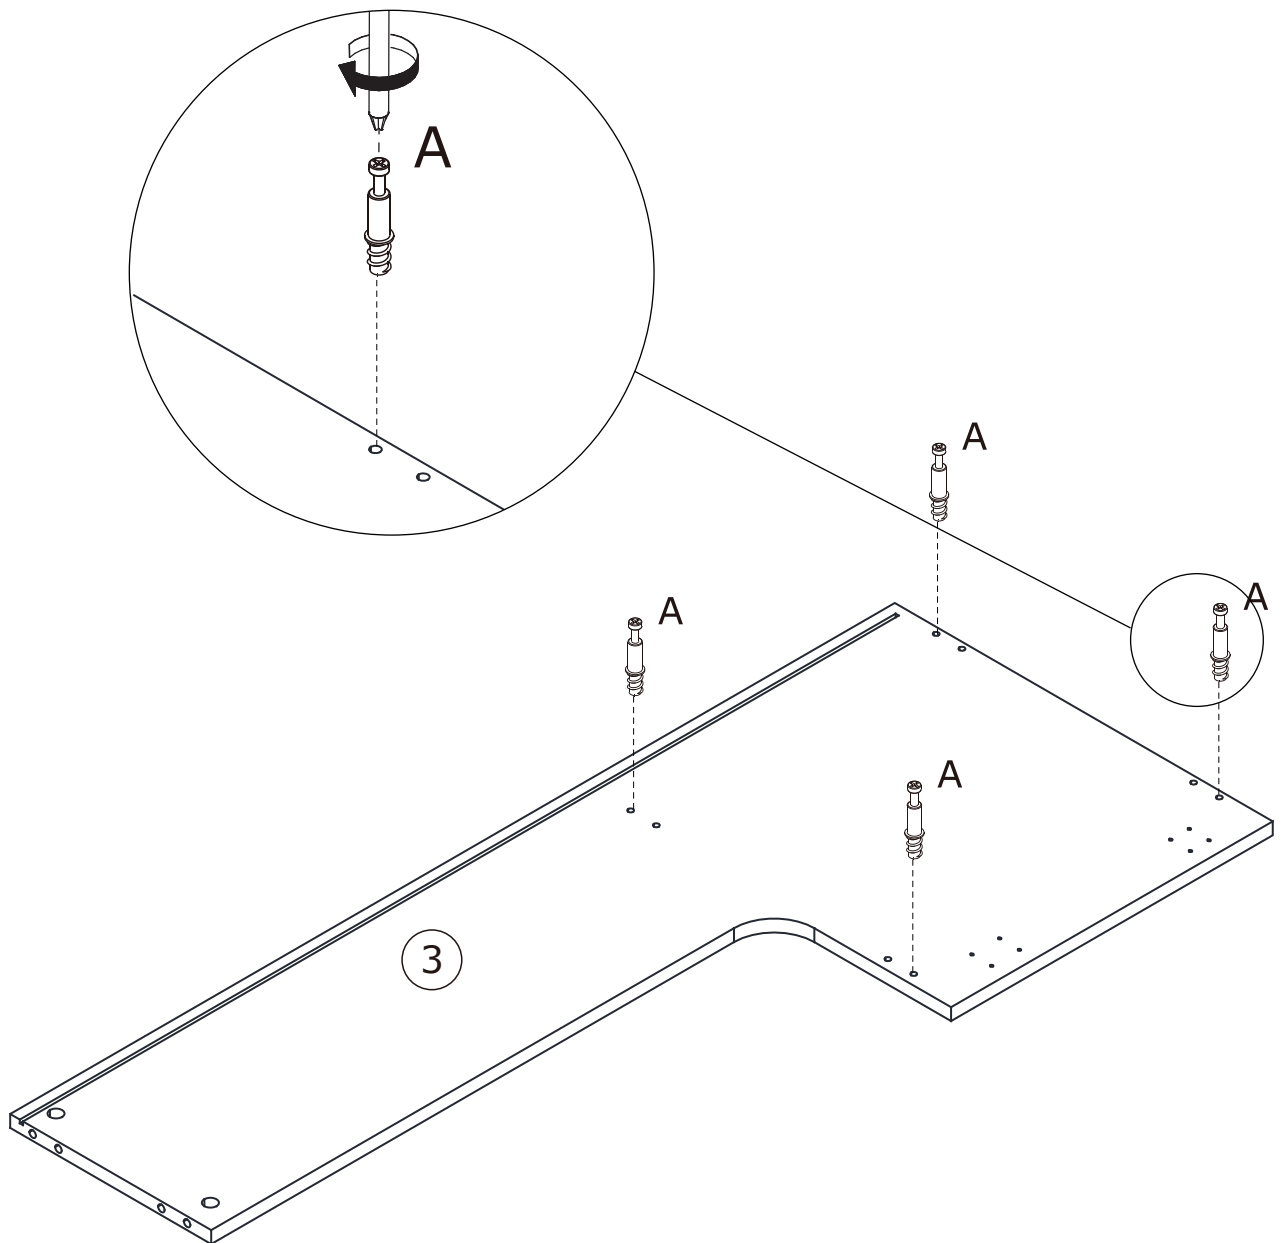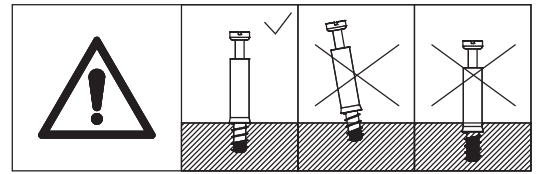

# 34

B x 6

 


Ø 15 x 9.5 mm




C x 6



Ø 6 x 30 mm

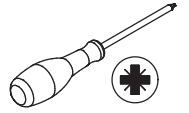

   Attach plate 2 to plate 1,5 and 6 with wooden dowel(C), put cam lock(B) into holes in plate 1,5,6 and turn clockwise to tighten as shown.

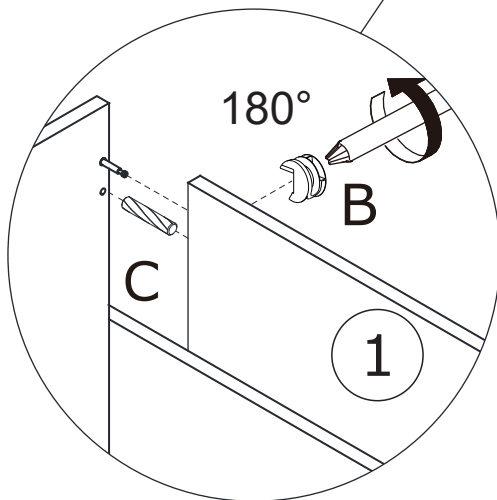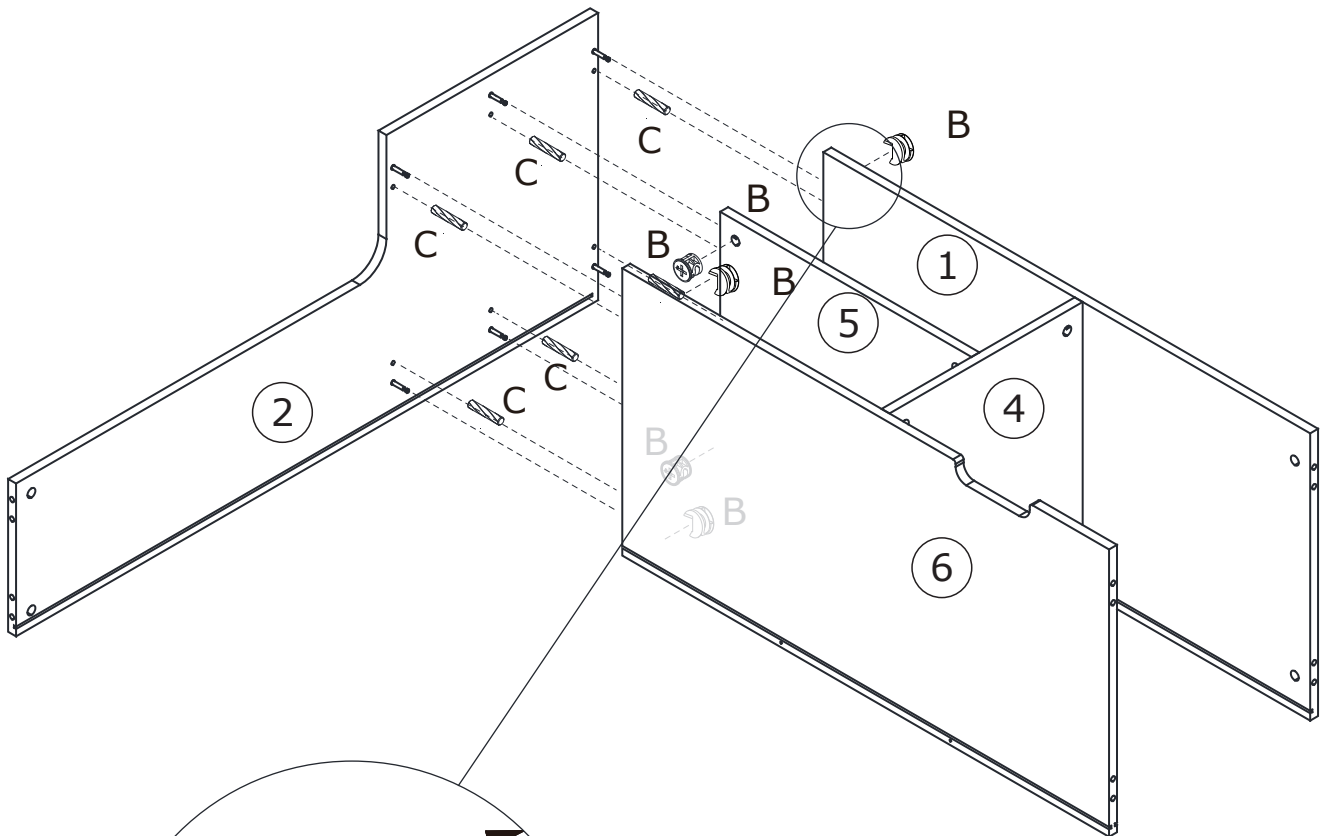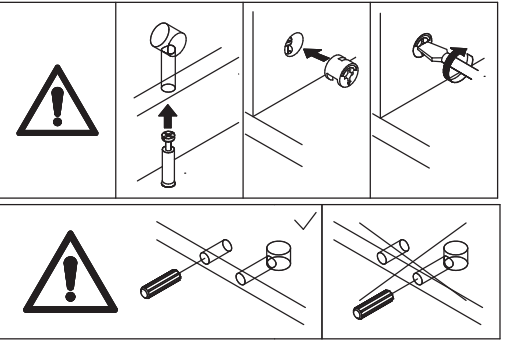

# 35

B x 4

 


Ø 15 x 9.5 mm

C x 4






Ø 6 x 30 mm

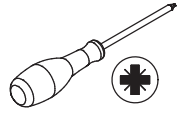


Slide plate 18 along grooves in plate 1 and 6 at first.

   Attach plate 3 to plate 1 and 6 with wooden dowel(C), put cam lock(B) into holes in plate 1,6 and turn clockwise to tighten as shown.

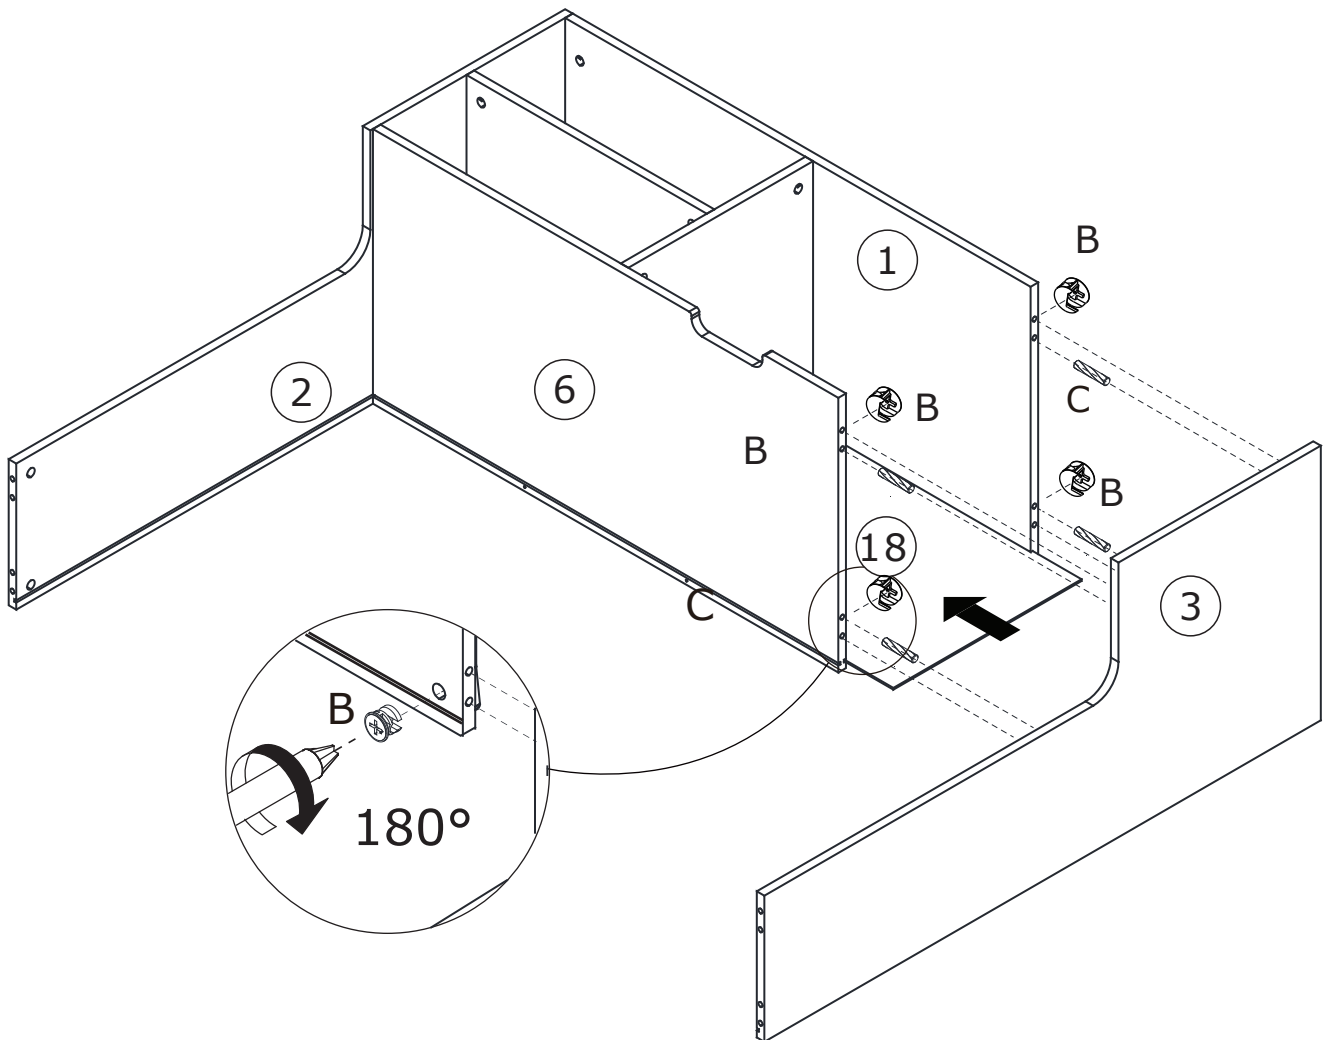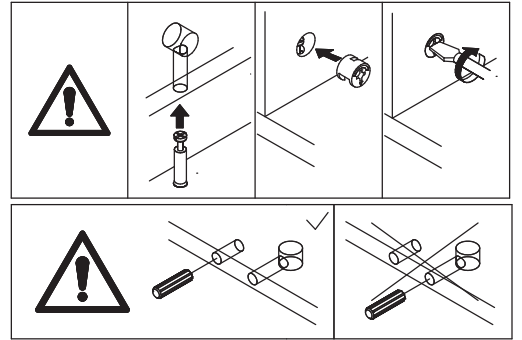

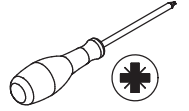

 Slide plate 19 along grooves in plate 2 and 3 at first.

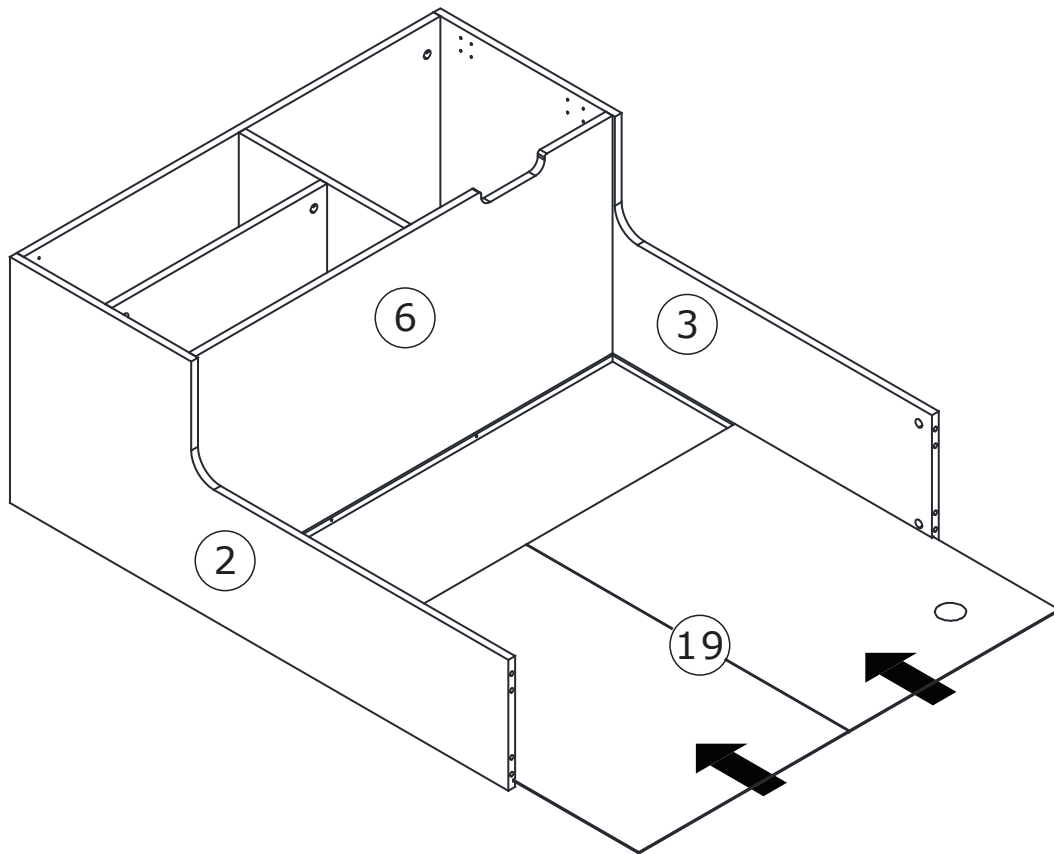

# 37

k x 4

 


Ø 15 x 9.5 mm




C x 4






Ø 6 x 30 mm



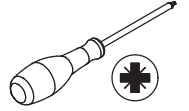


      Connect the two assembled components with wooden dowel(C), put cam lock(K) into holes in plate 2,3 and turn clockwise to tighten as shown.

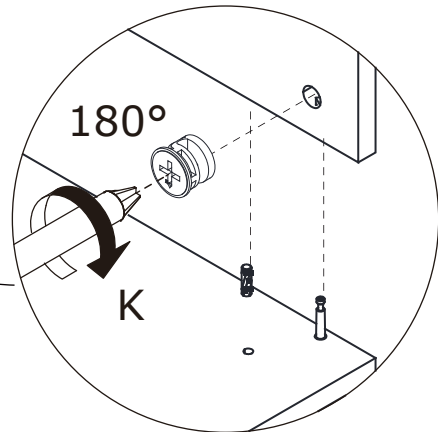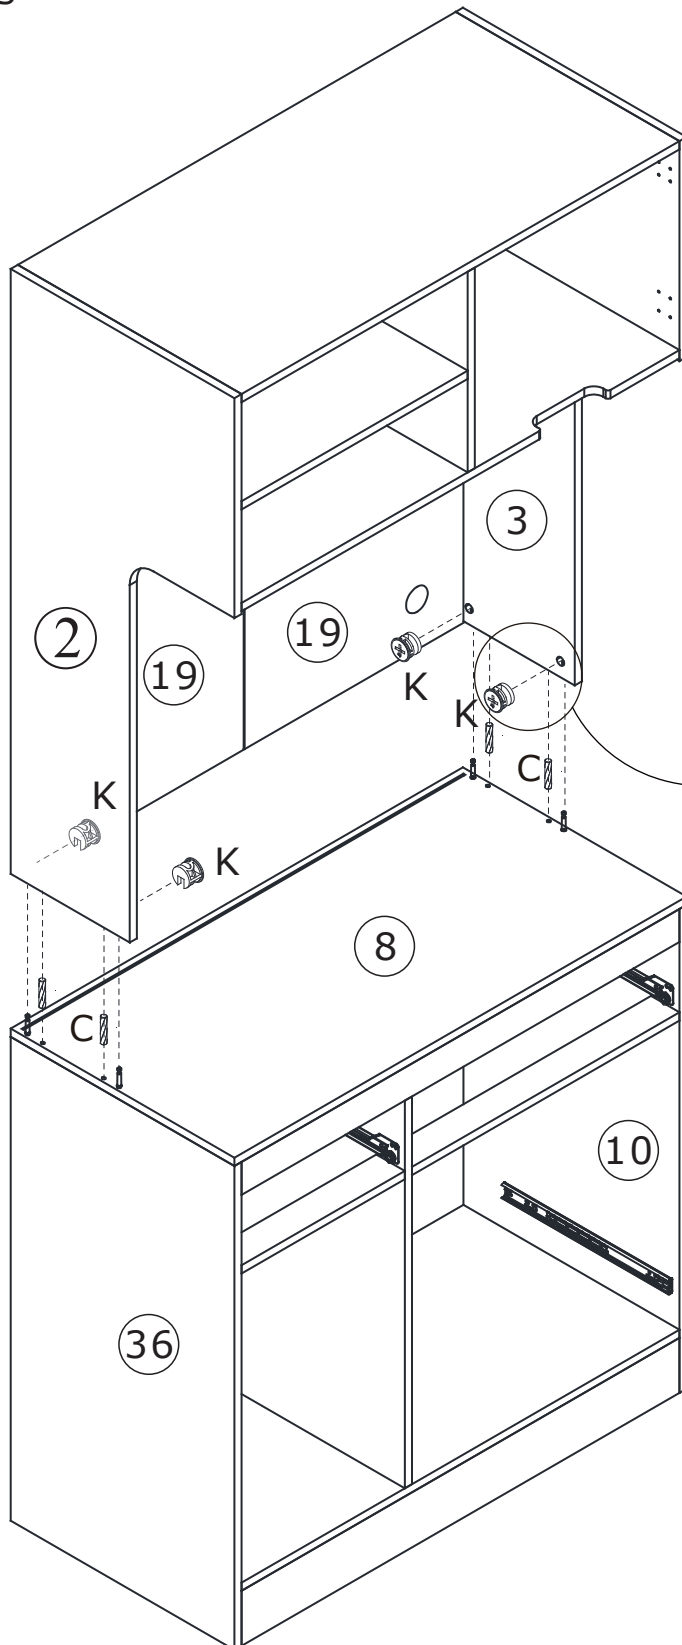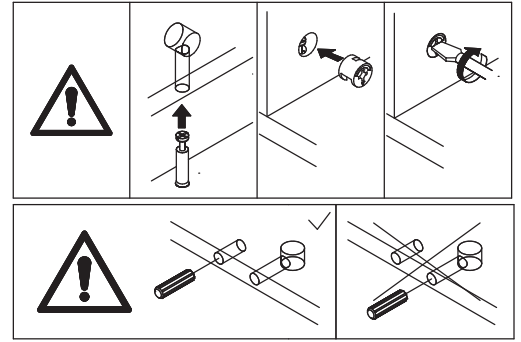

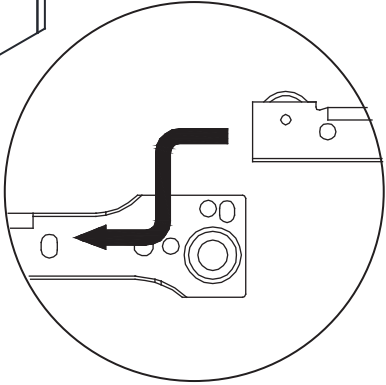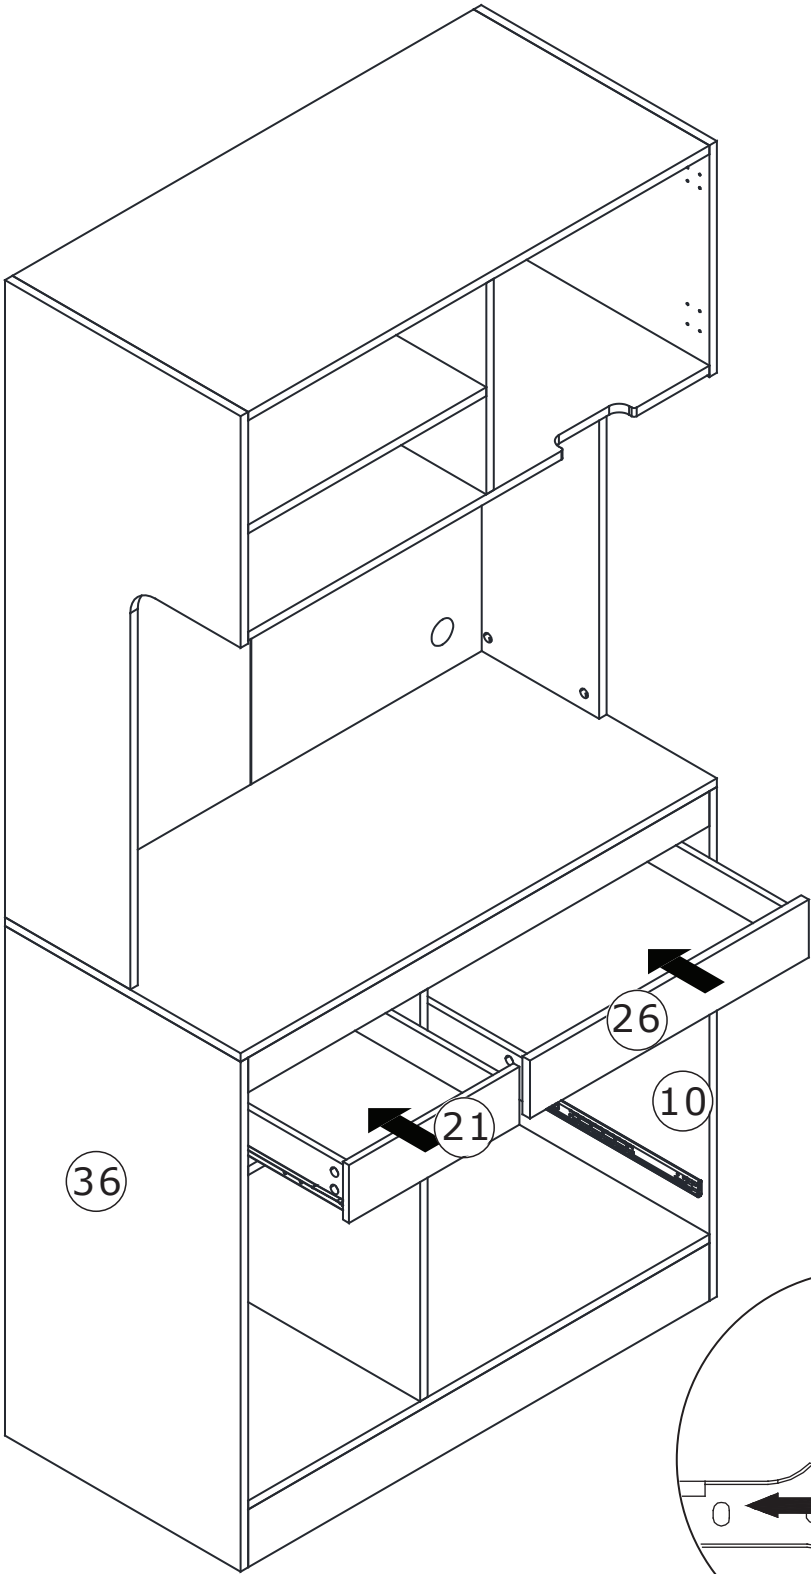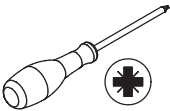


Slide drawers.

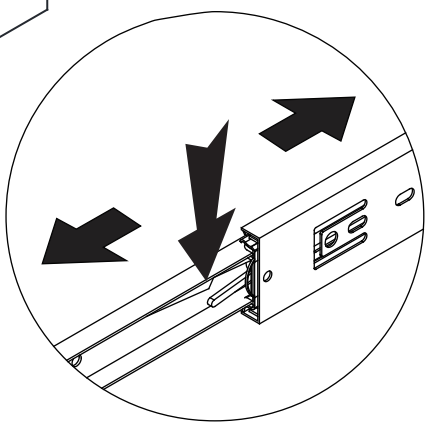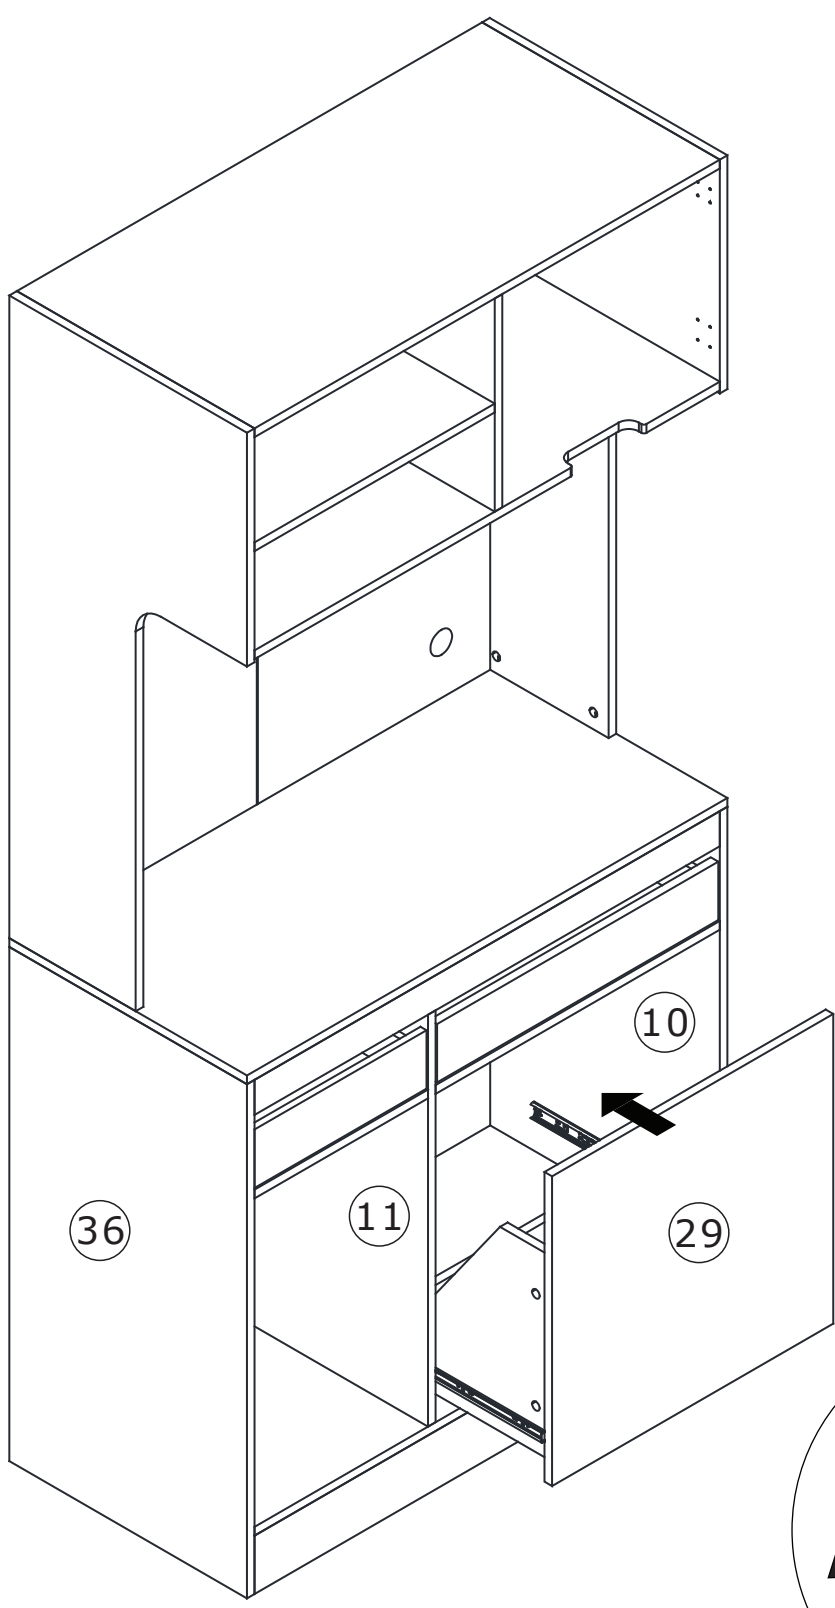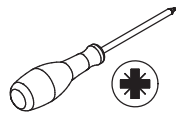   


Slide the big drawer.

 40


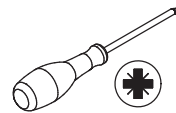


 Connect plate 35 with plate 34 as shown.

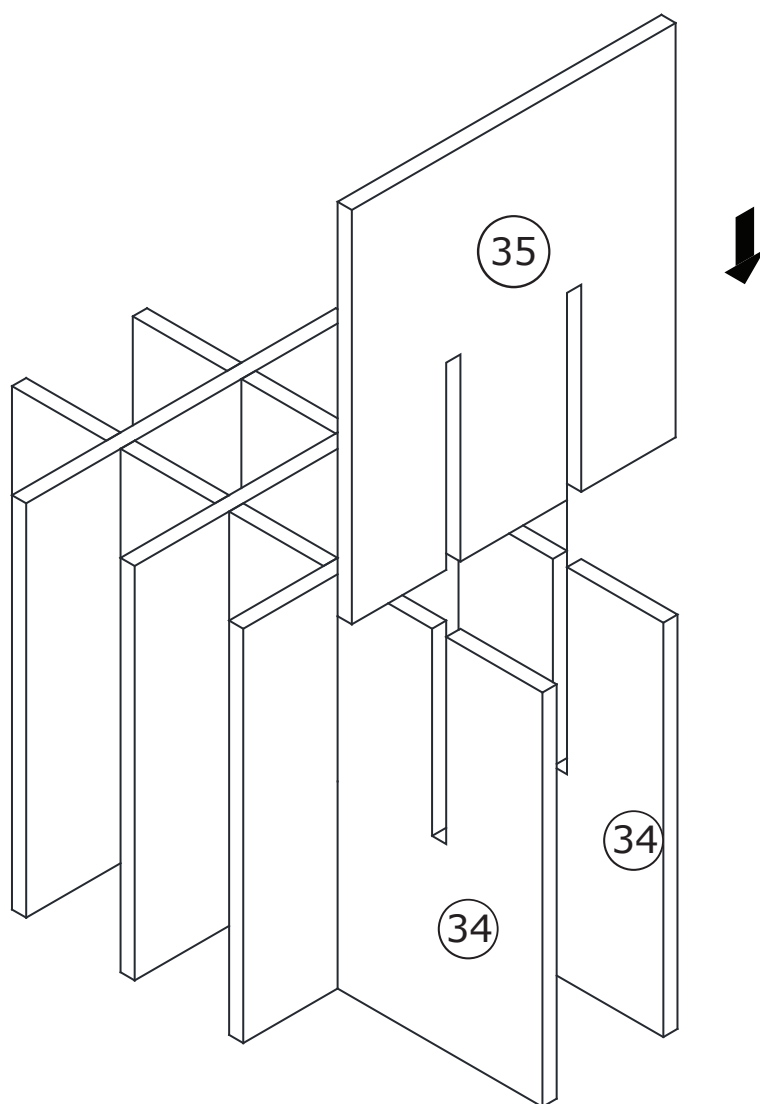



# 41

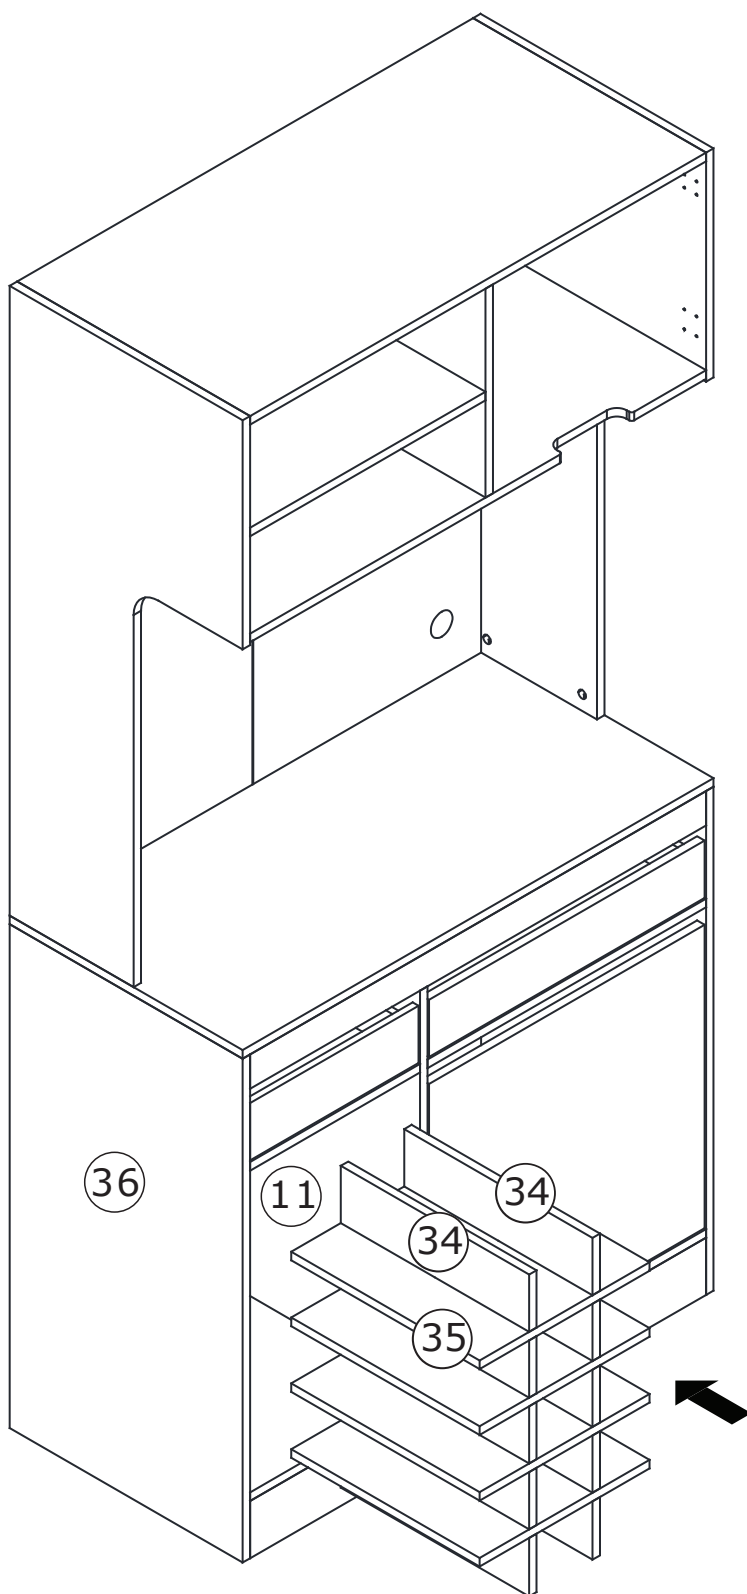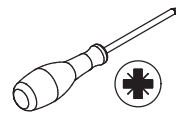  

Place the part to shelf.



# 42

  G x 4




Ø3 x 12 mm

G x 2

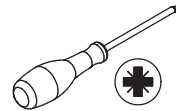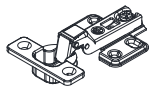

Fix hinge(G) to plate 7 as shown.

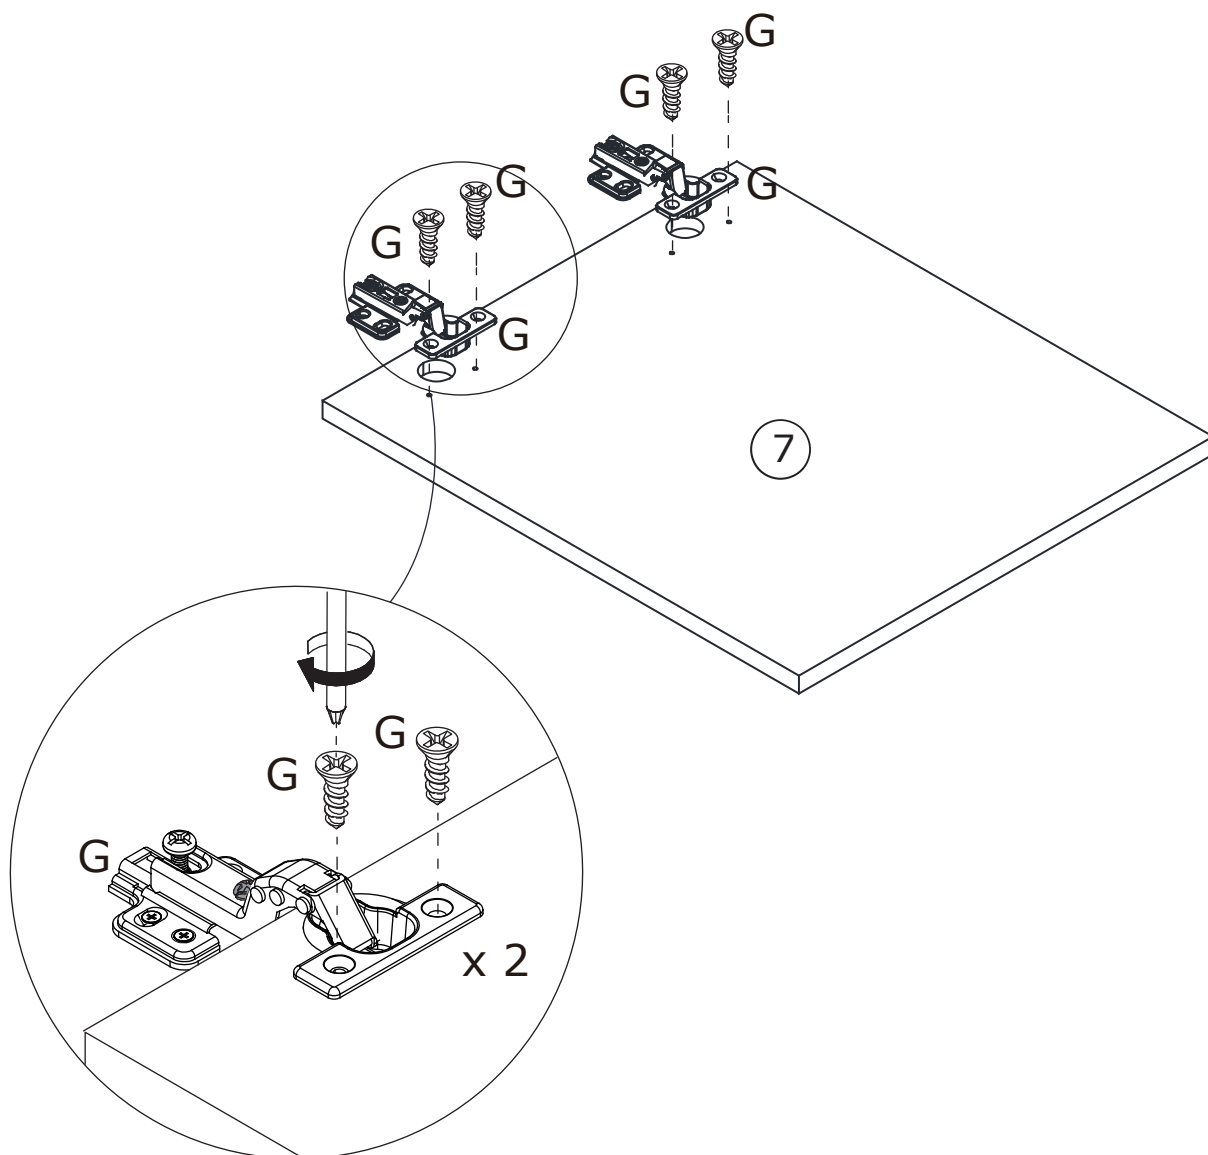 


43


G x 8



 Ø3 x 12 mm

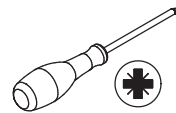

 Attach plate 7 to plate 3 by fixing hinge with screw(G) as shown.


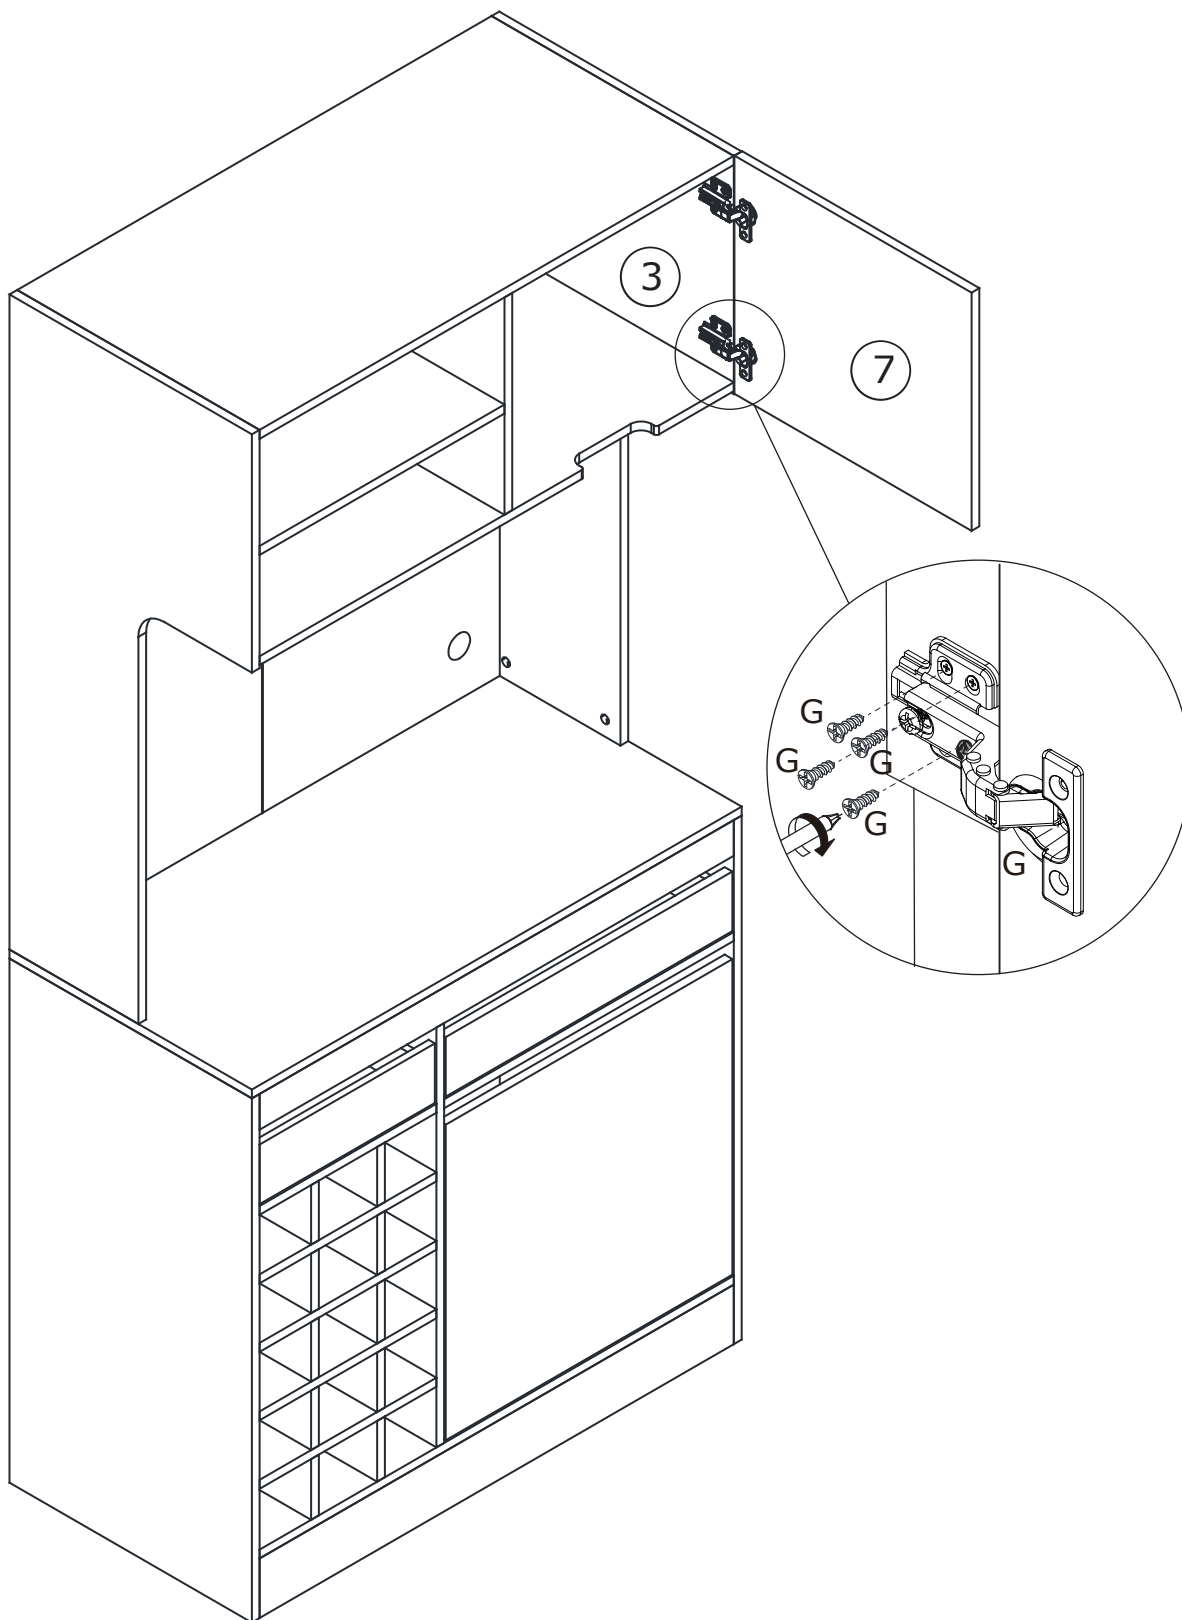


# 44



H x 20



 Ø3 x 10 mm

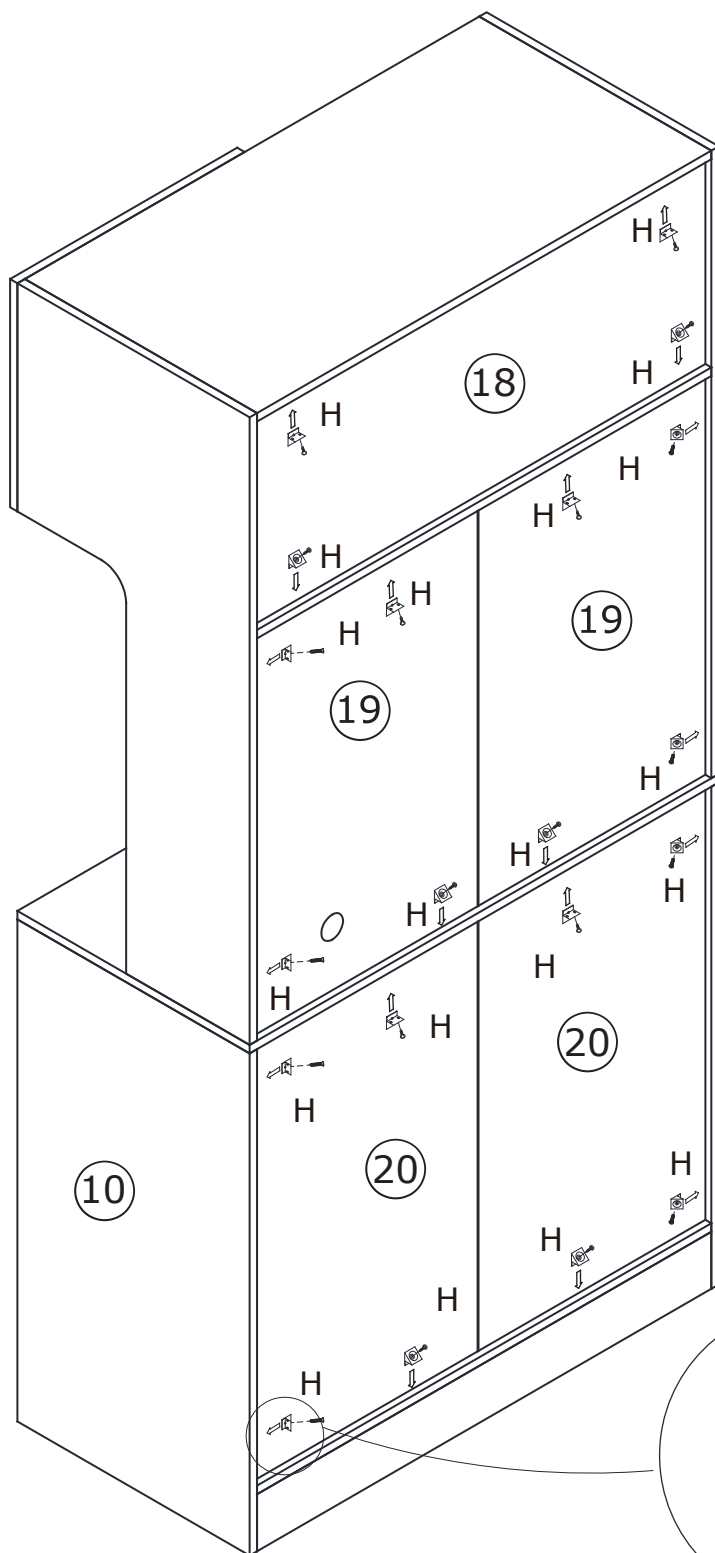
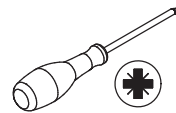


  Reinforce back plate using part(H) as shown.

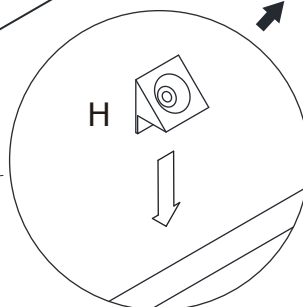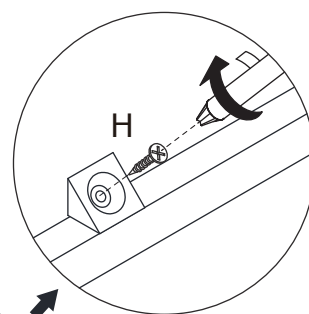


45

  J x 72











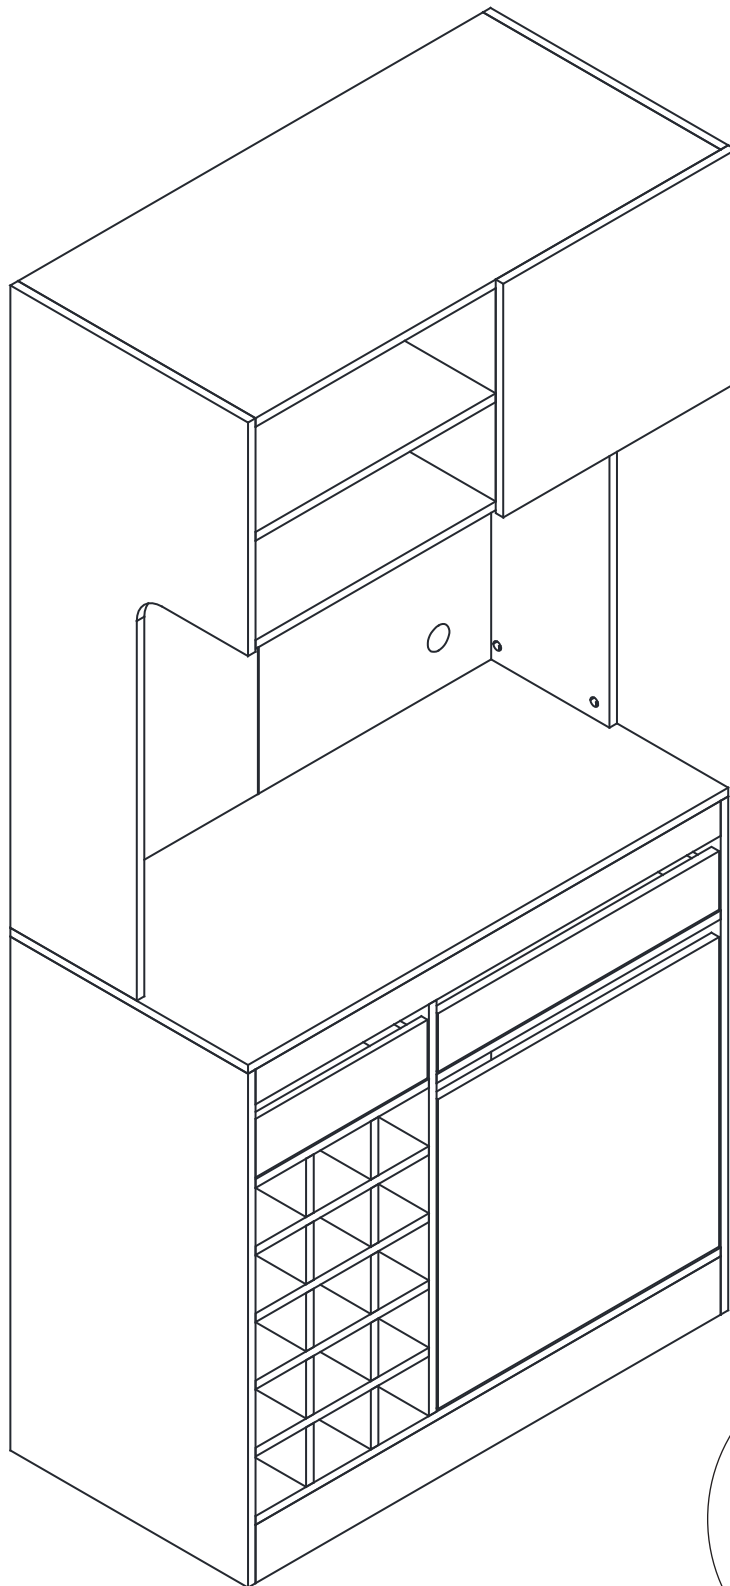
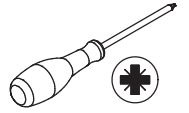


Use part(J) to cover screw holes.

 50/52








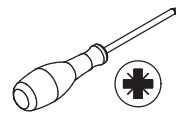


            If there is misalignment after you install,  
adjust the screw to the best condition

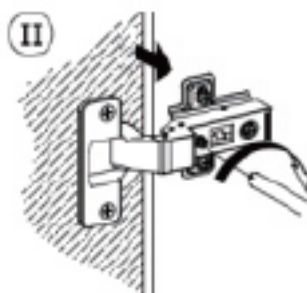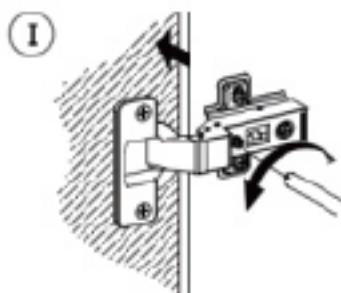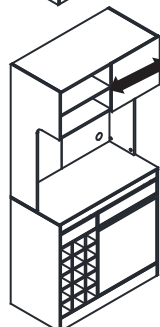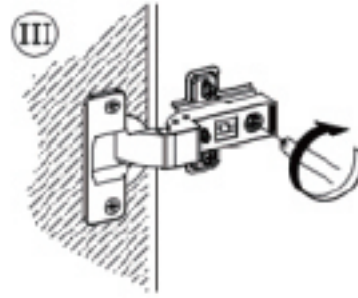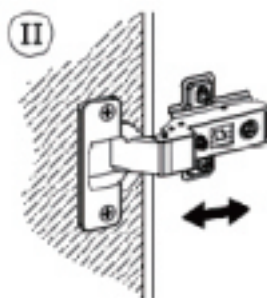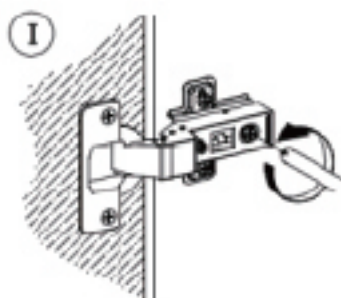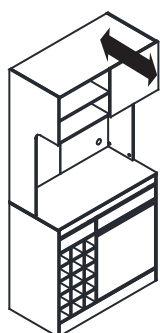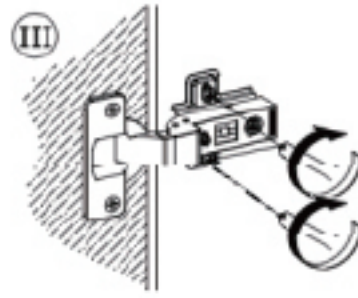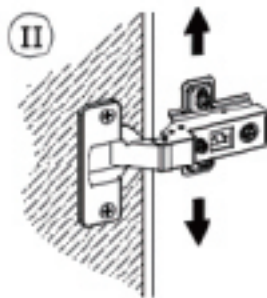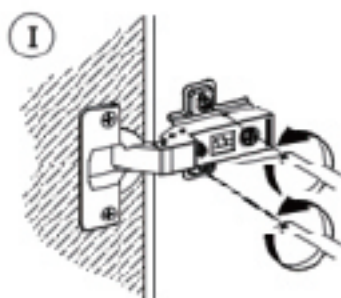
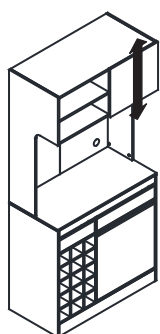
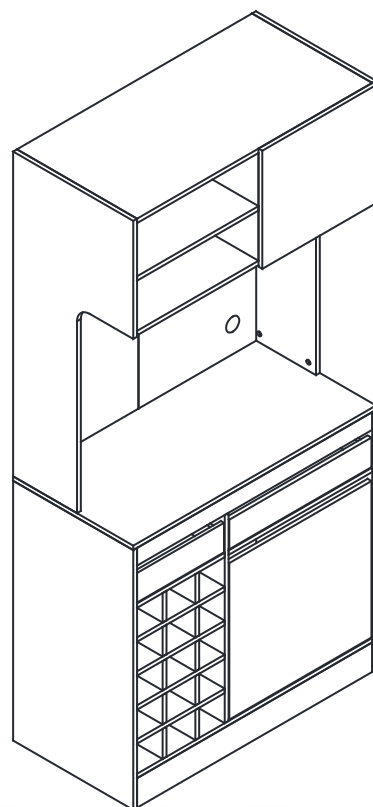


# 47

        L x 1

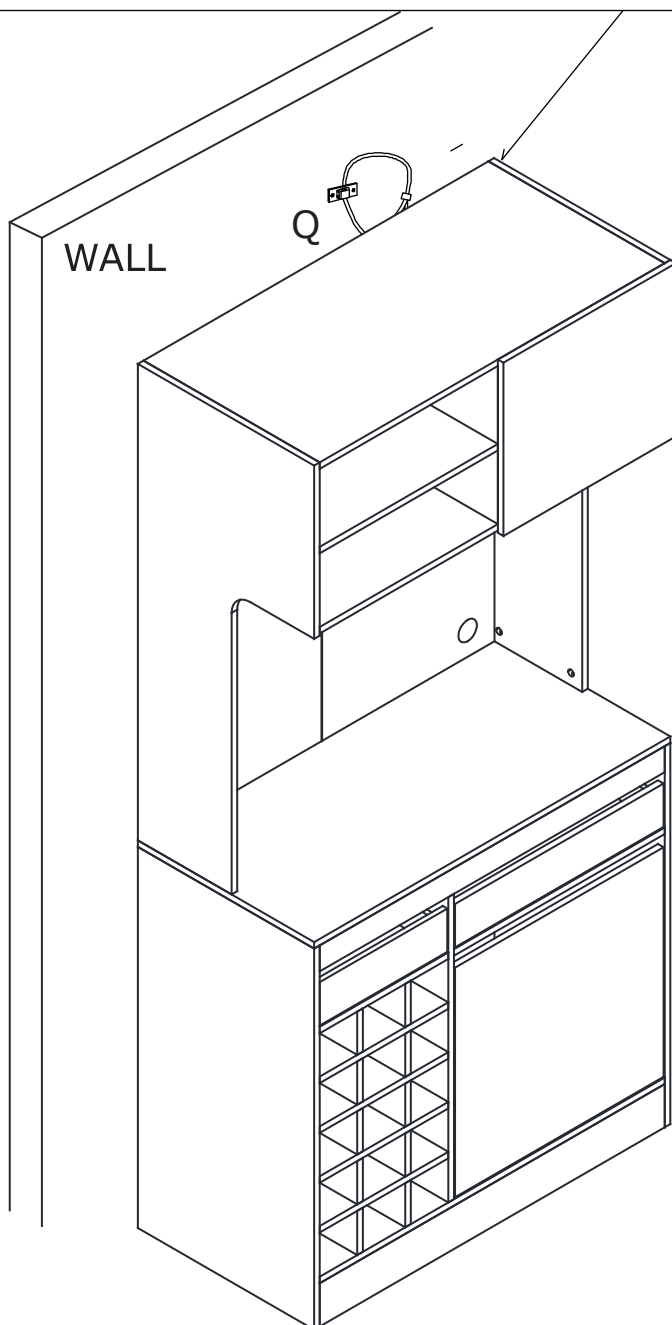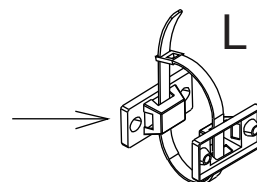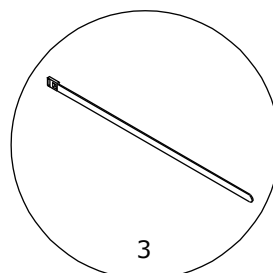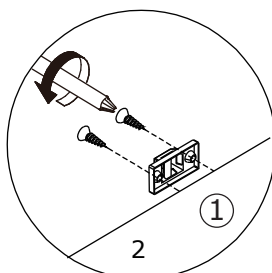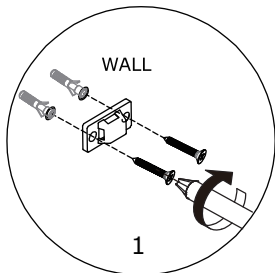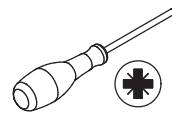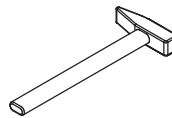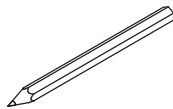

   Install anti-tipping device(L)  
as shown.

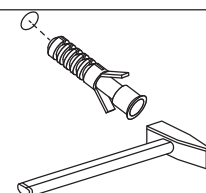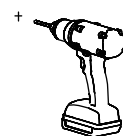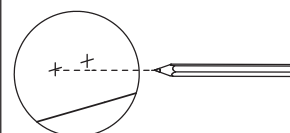

# WARRANTY

## WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

## Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

## Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

## The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.



# RETURNS

## CHANGED YOUR MIND AND NEED TO RETURN YOUR ITEM?

### PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

### DEFECTIVE ITEMS

 
- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

### DAMAGED ITEMS


- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.  
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.

# Pantry

## KF180119-01


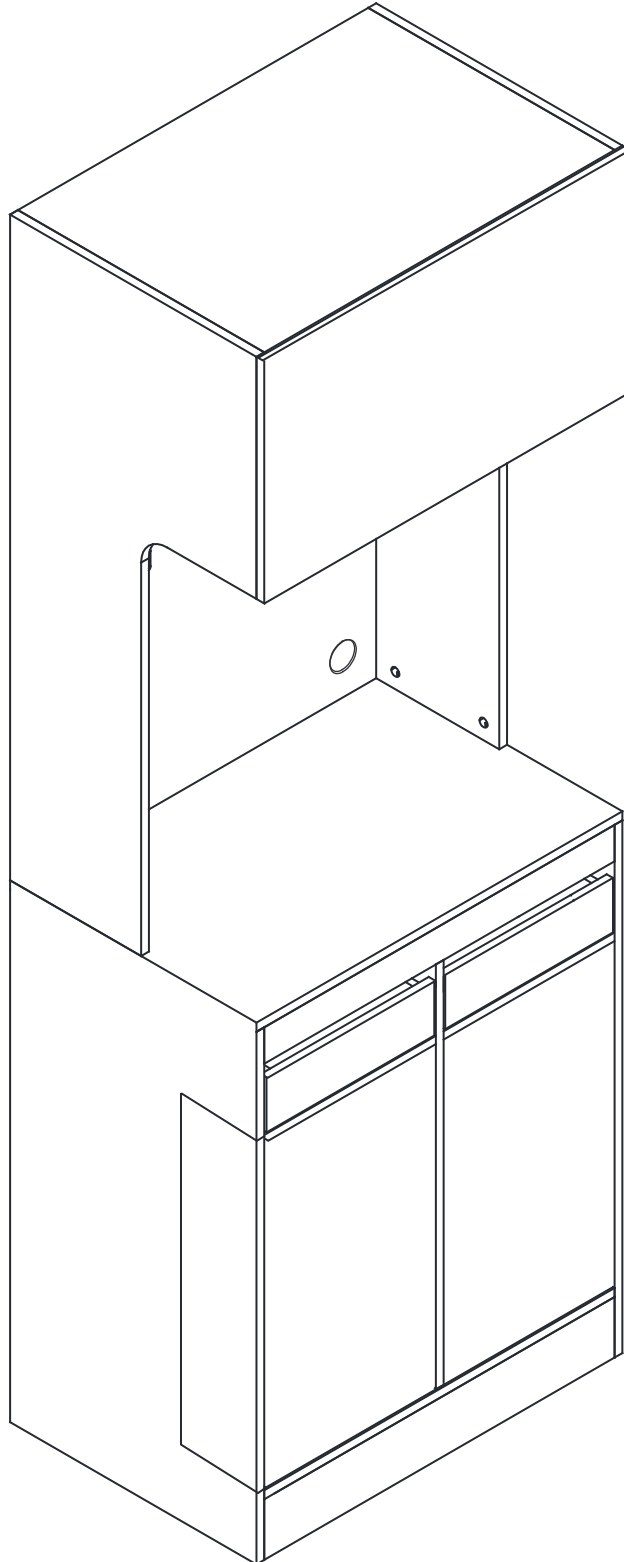


1/42

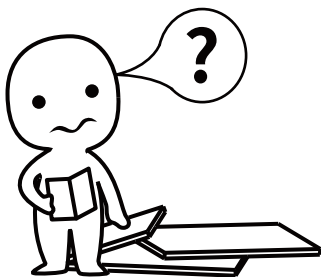 


### **IMPORTANT INFORMATION!**

  please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

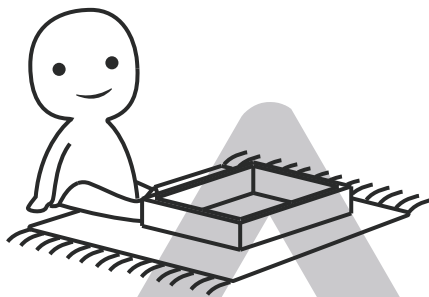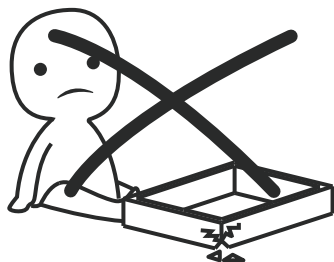



### **AVOID SCRATCHES!**

 In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.

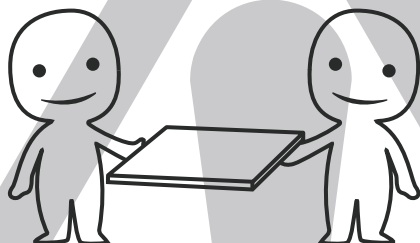

### **IMPROVE EFFICIENCY !**

  Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

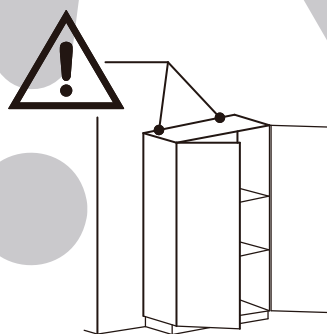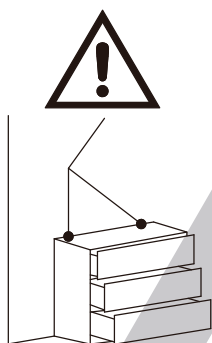

### **ANTI-TOPPLE WARNING !**

 
Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

### **IMPORTANT !**


It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

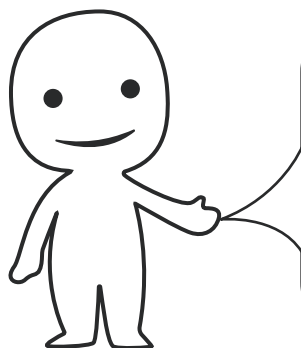


Please prepare the following tools

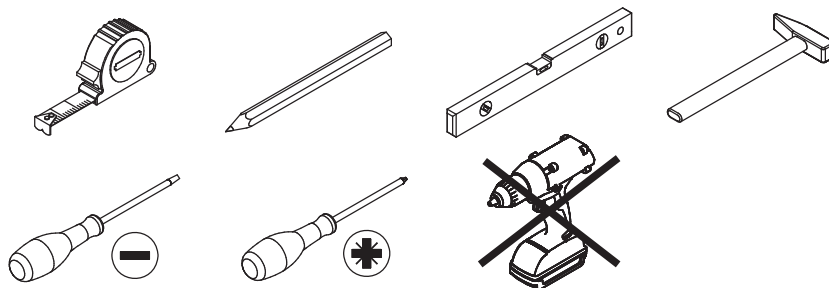 

When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

 A x 72

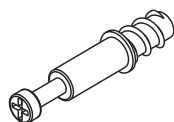

Ø 5 x 31 mm

B x 30



Ø 15 x 11 mm

C x 50



Ø 6 x 30 mm

D x 16



Ø 3 x 12 mm

E x 2



 
L=300mm

F x 42




Ø 15 x 9.5 mm

G x 2

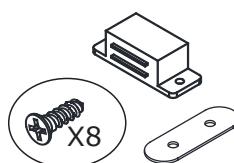


Ø 3.5 x 14 mm

 H x 2

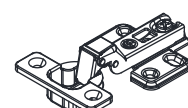


Ø 3.5 x 14 mm

 J x 1

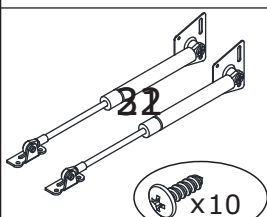


Ø 3.5 x 14 mm

 K x 2

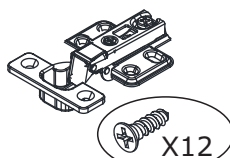

Ø 3.5 x 14 mm

 L x 2

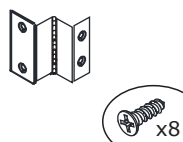

Ø 3 x 10 mm

M x 14

 


Ø 3 x 10 mm


N x 72+2





P x 2

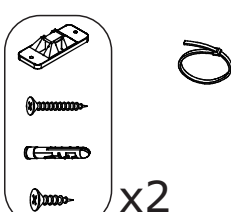



x2

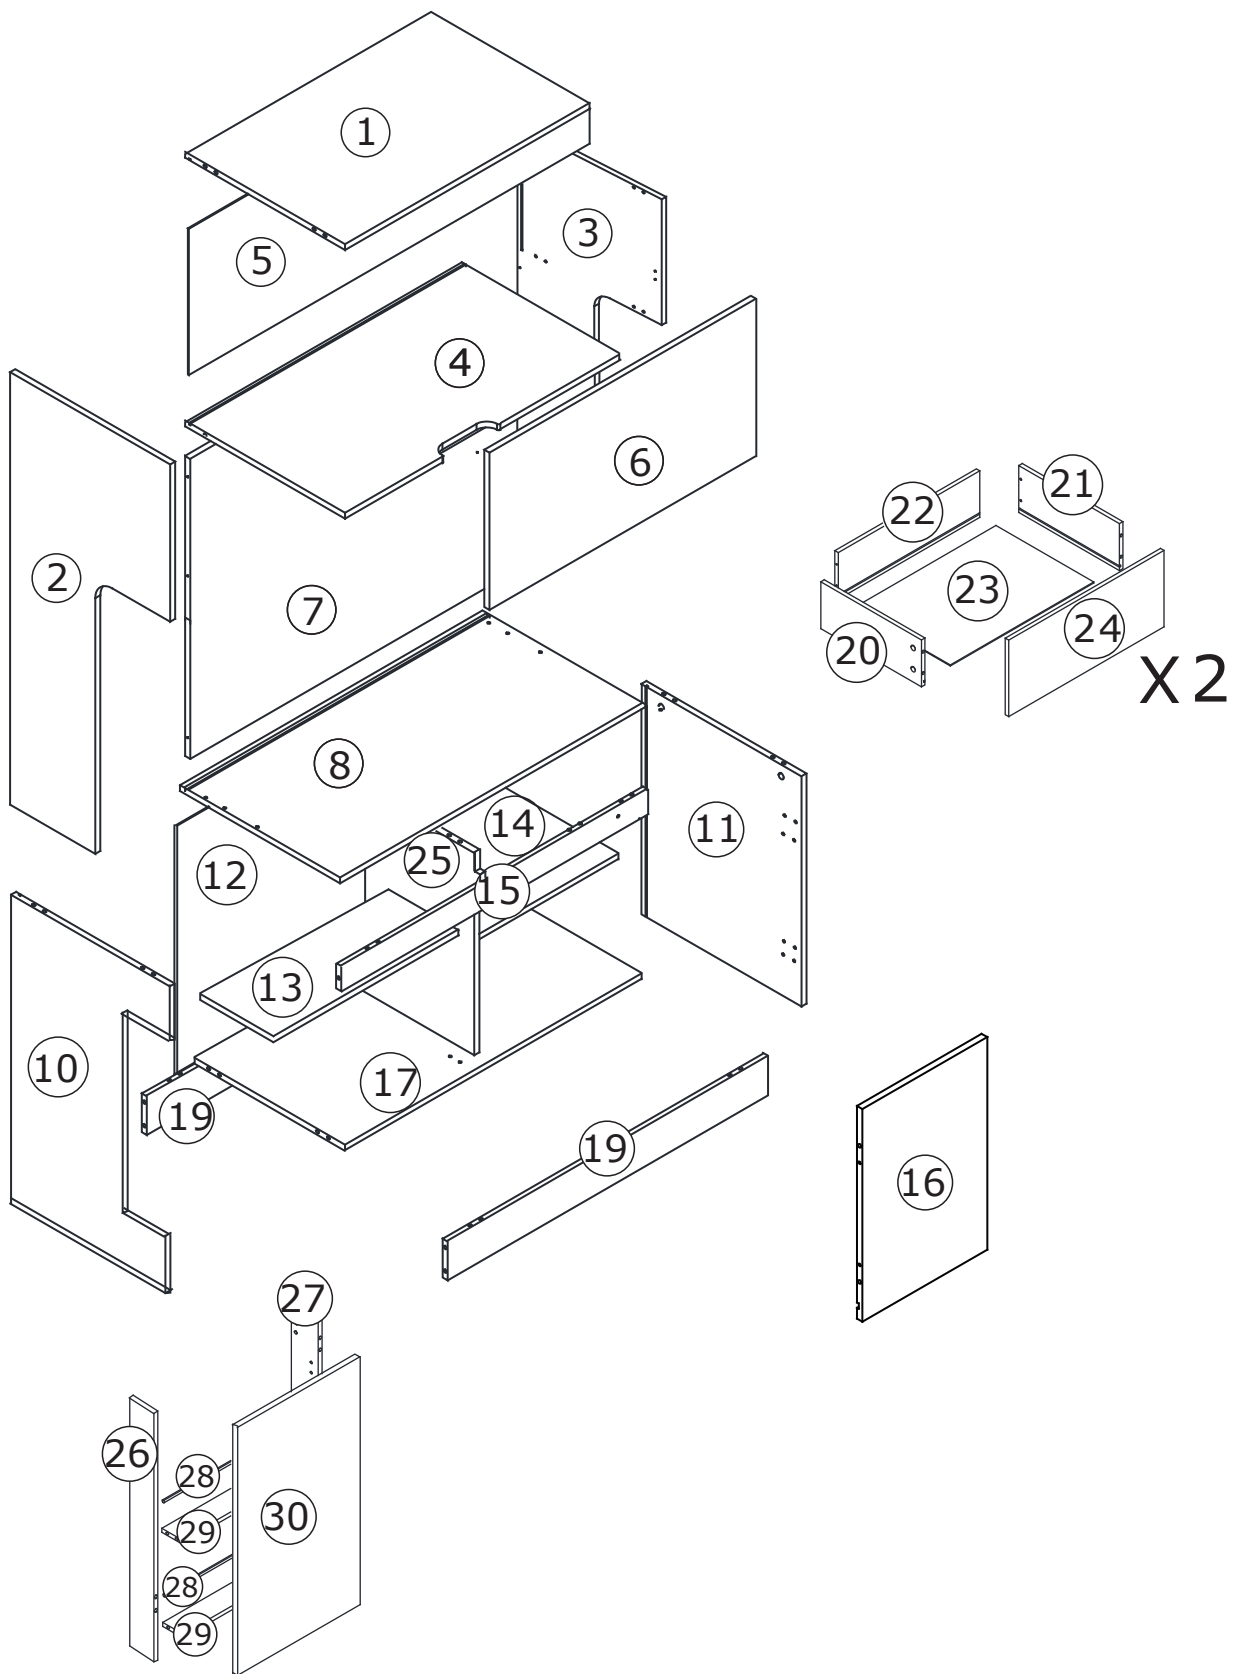 

1

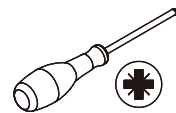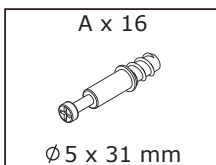  

  Insert quickfit screw(A) into corresponding holes in plate 20,21 and 24 with a screwdriver as shown.

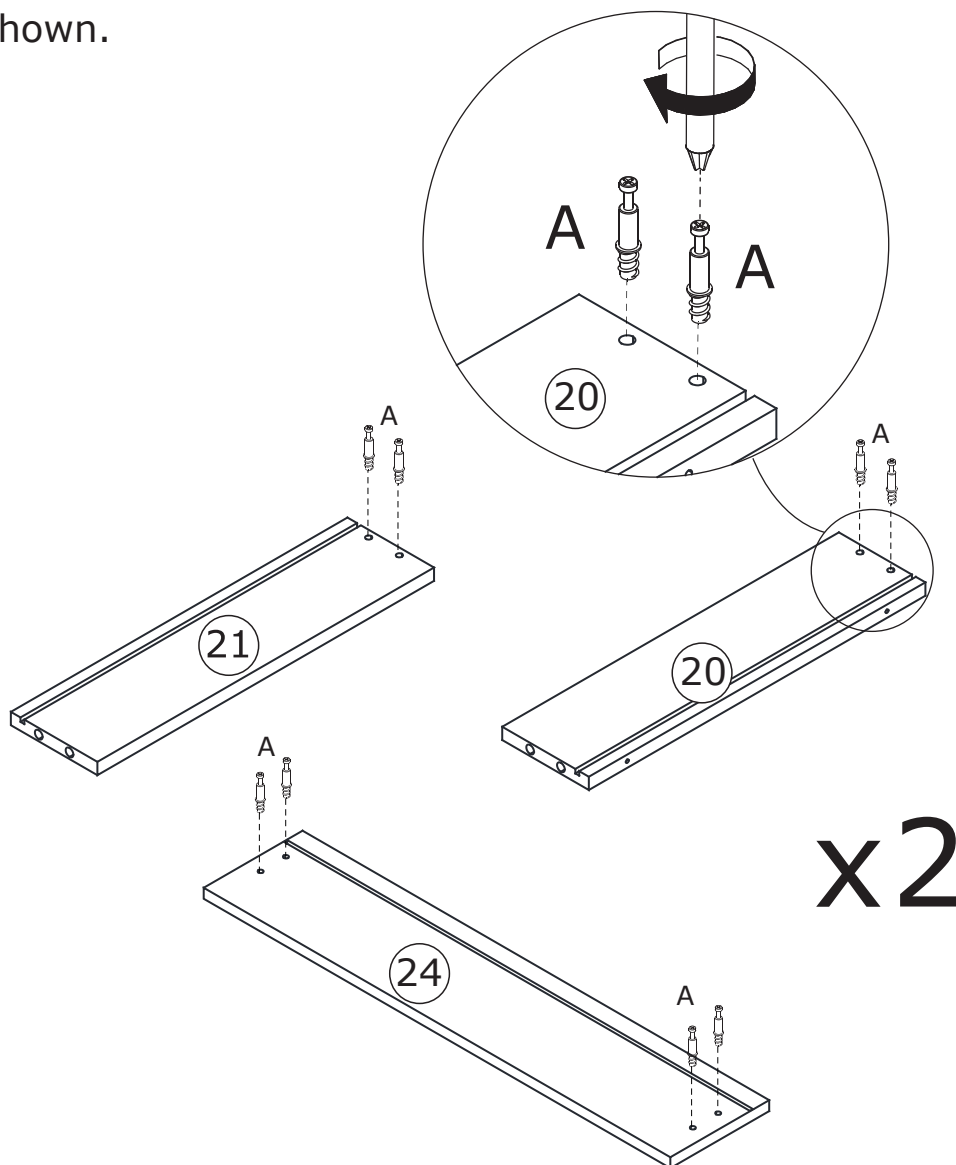
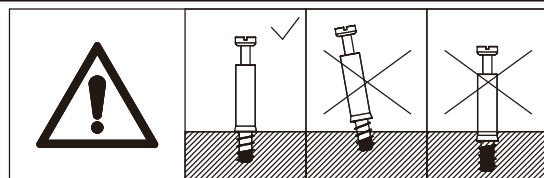


2


F x 8



  Ø 15 x 9.5 mm

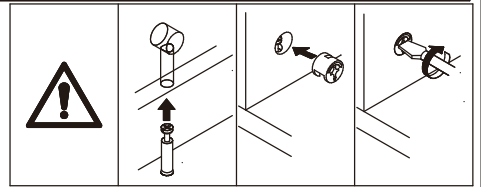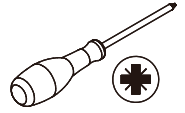

 Connect plate 20 and 21 to plate 22, insert cam lock(F) into plate 22 and turn clockwise to tighten as shown.


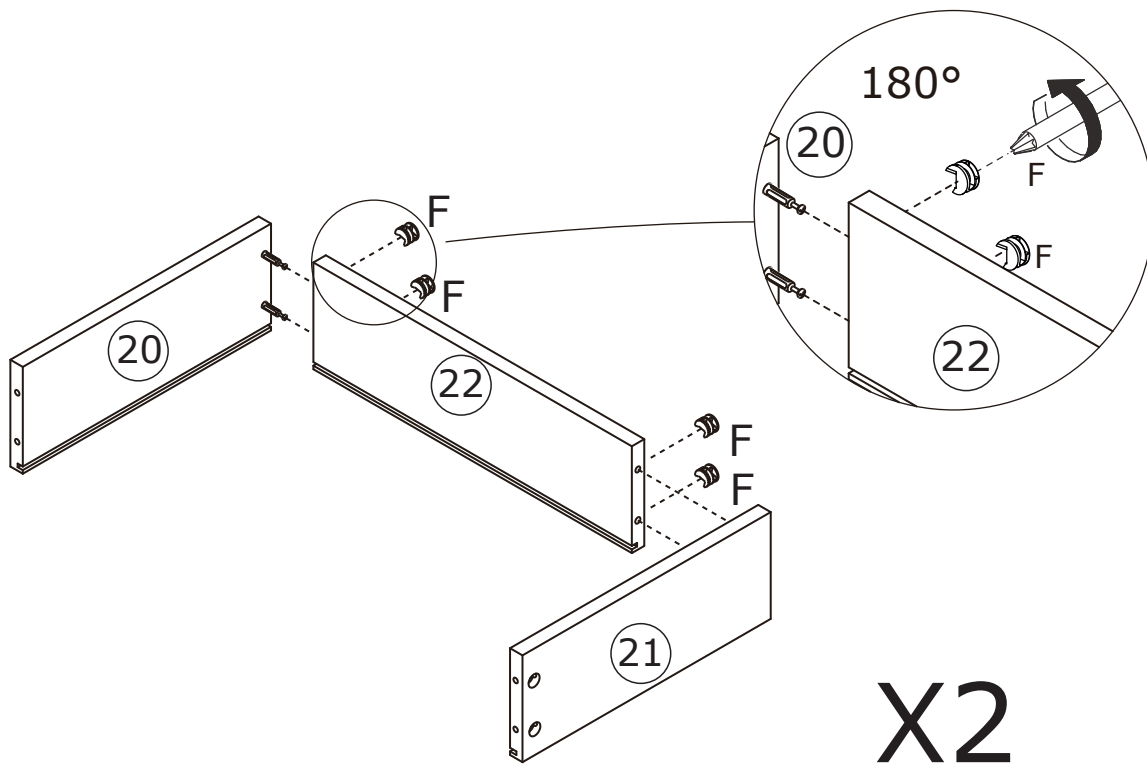


3



F x 8



  Ø 15 x 9.5 mm

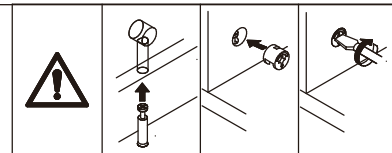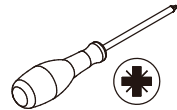

  Slide plate 23 along grooves at first.  
Attach plate 24 to plate 20 and 21,  
insert cam lock(F) into plate 20,21 and  
turn clockwise to tighten as shown.

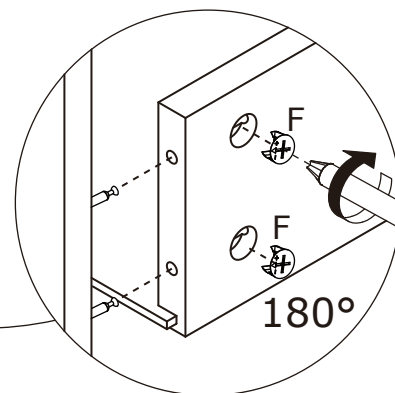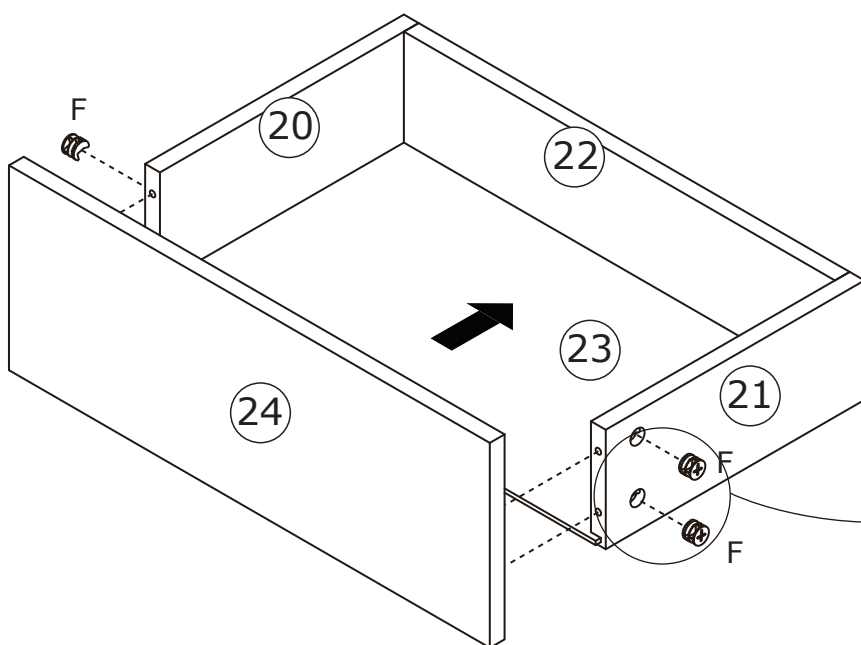

X2



 
4

D x 8




Ø 3 x 12 mm


E x 2

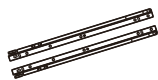

L=300 mm

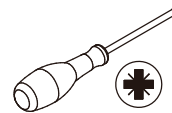 


 Fix runner(E-DL) and (E-DR) to plate 20 and 21 respectively using screw(D) as shown.

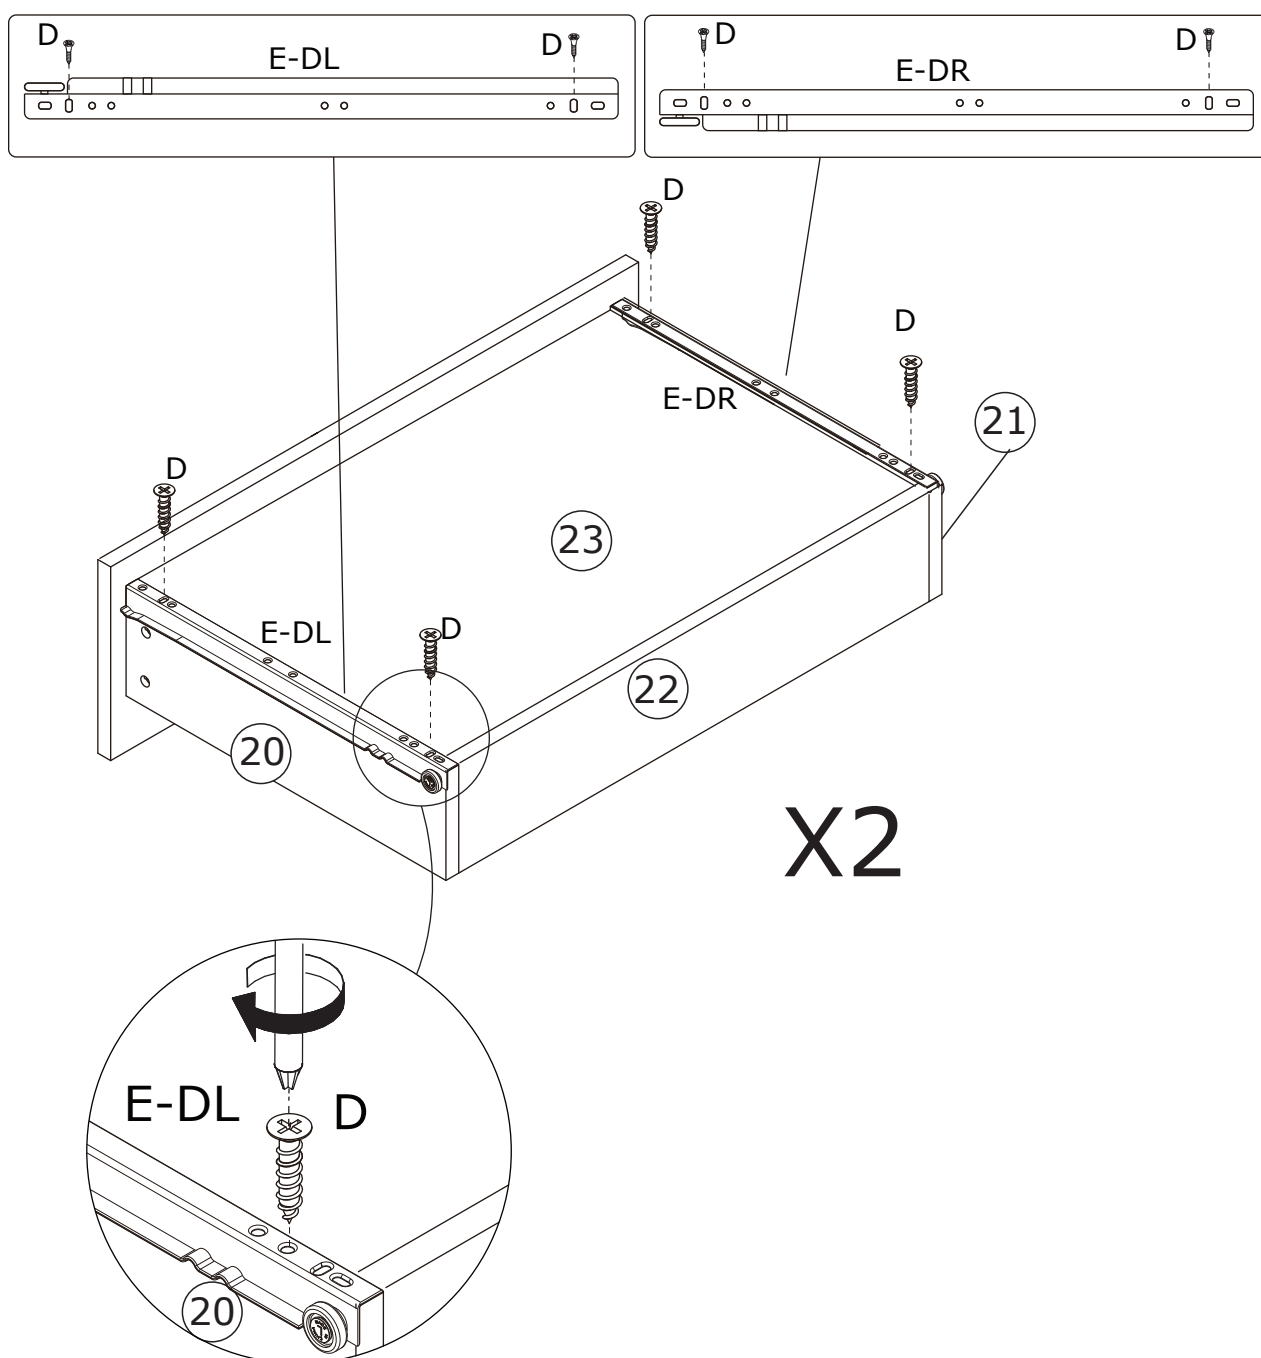

5

 A x 14

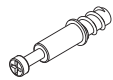

Ø5 x 31 mm

D x 4

 
 
 


Ø3 x 12 mm


E x 2




L=300 mm

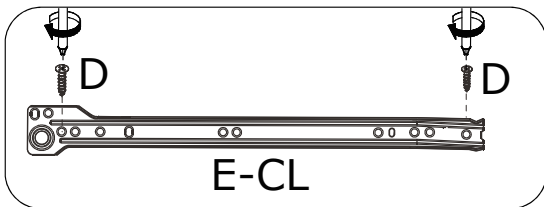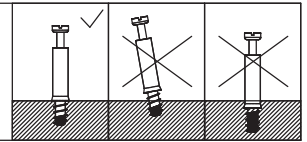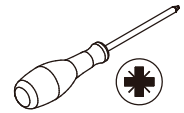

E-CL

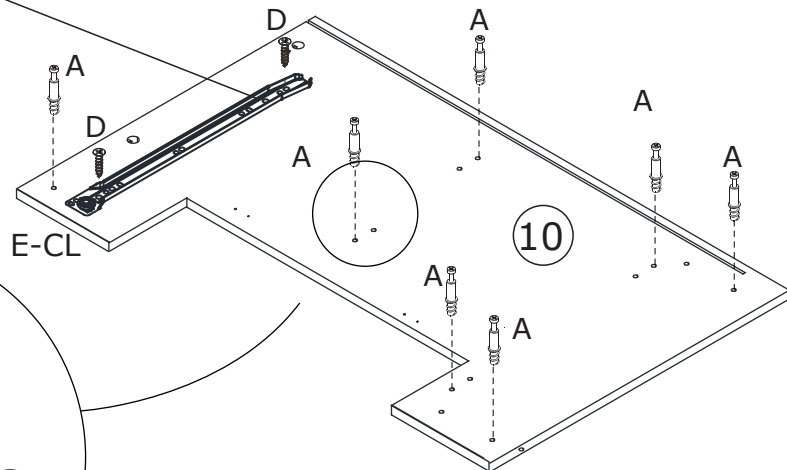 


10

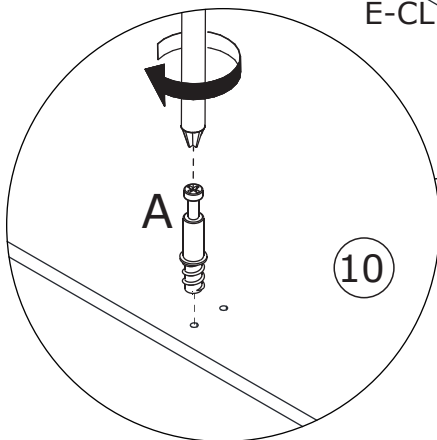 


10

 
Insert quickfit screw(A) into corresponding holes in plate 10 and 11 with a screwdriver as shown. Fix slide rail(E-CL) and (E-CR) to plate 10 and 11 respectively using screw(D) as shown.

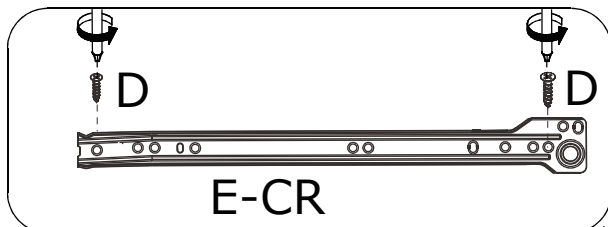

E-CR

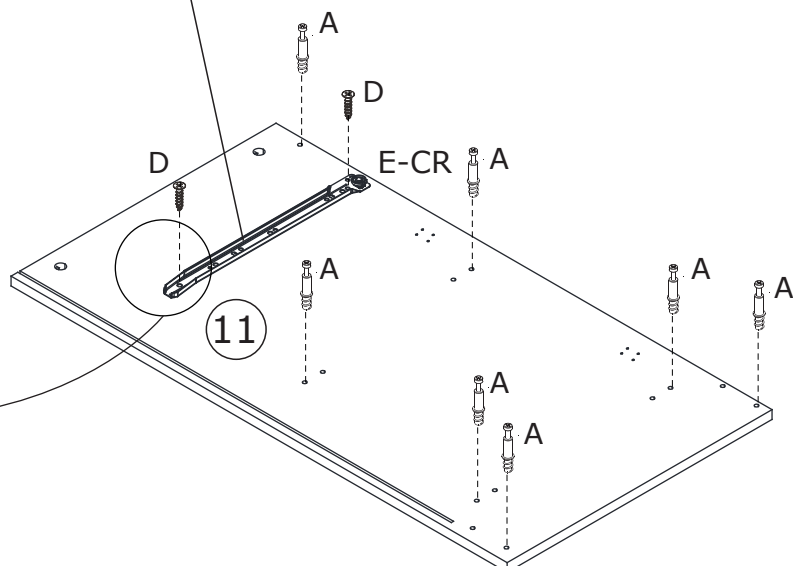 

11

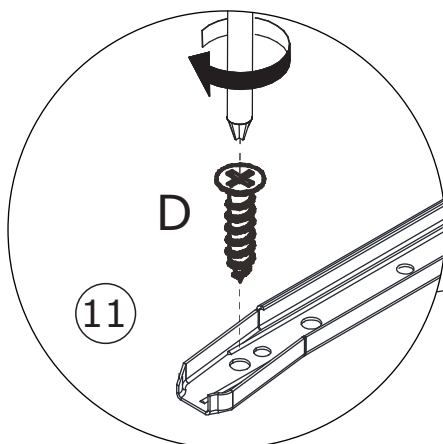 

11

6

D x 4

 
 
 
 
 


Ø3 x 12 mm


E x 2



L=300 mm

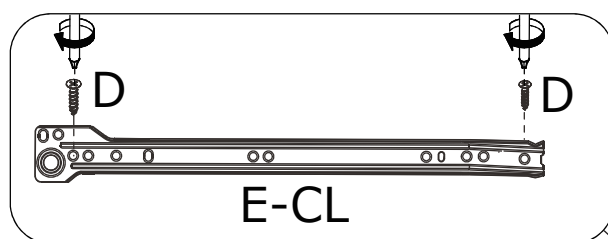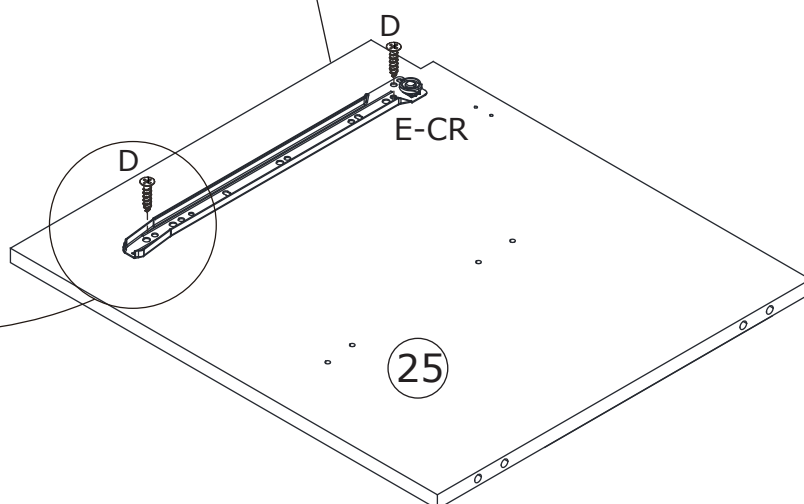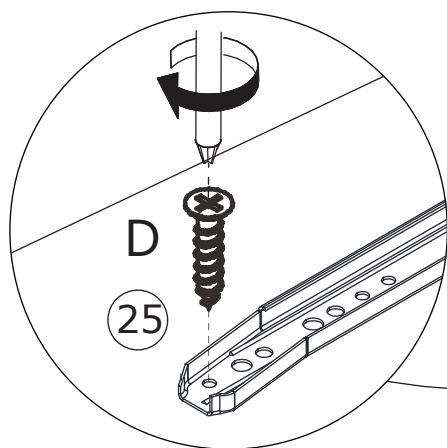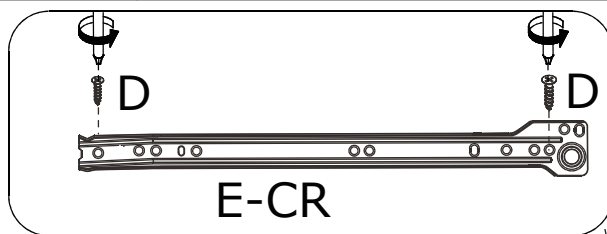
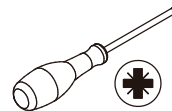


180°



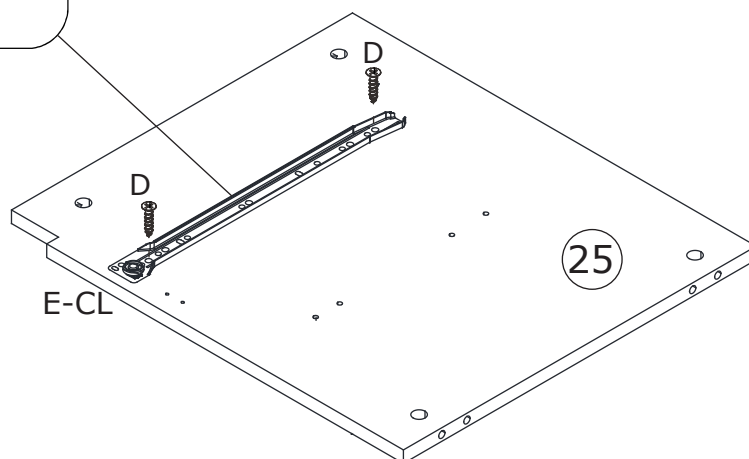 


  Fix slide rail(E-CR) to plate 25  
using screw(D) at first.  
Flip the plate, fix slide rail(E-CL)  
using screw(D) as shown.

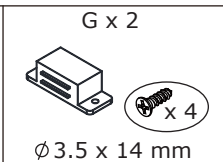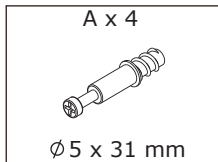


7

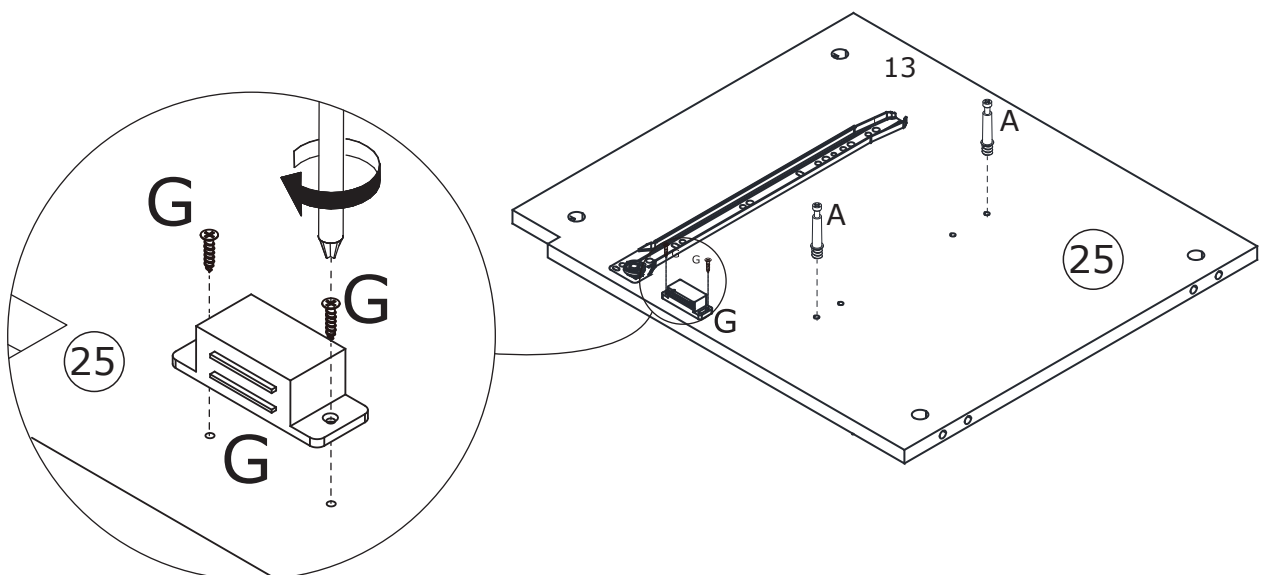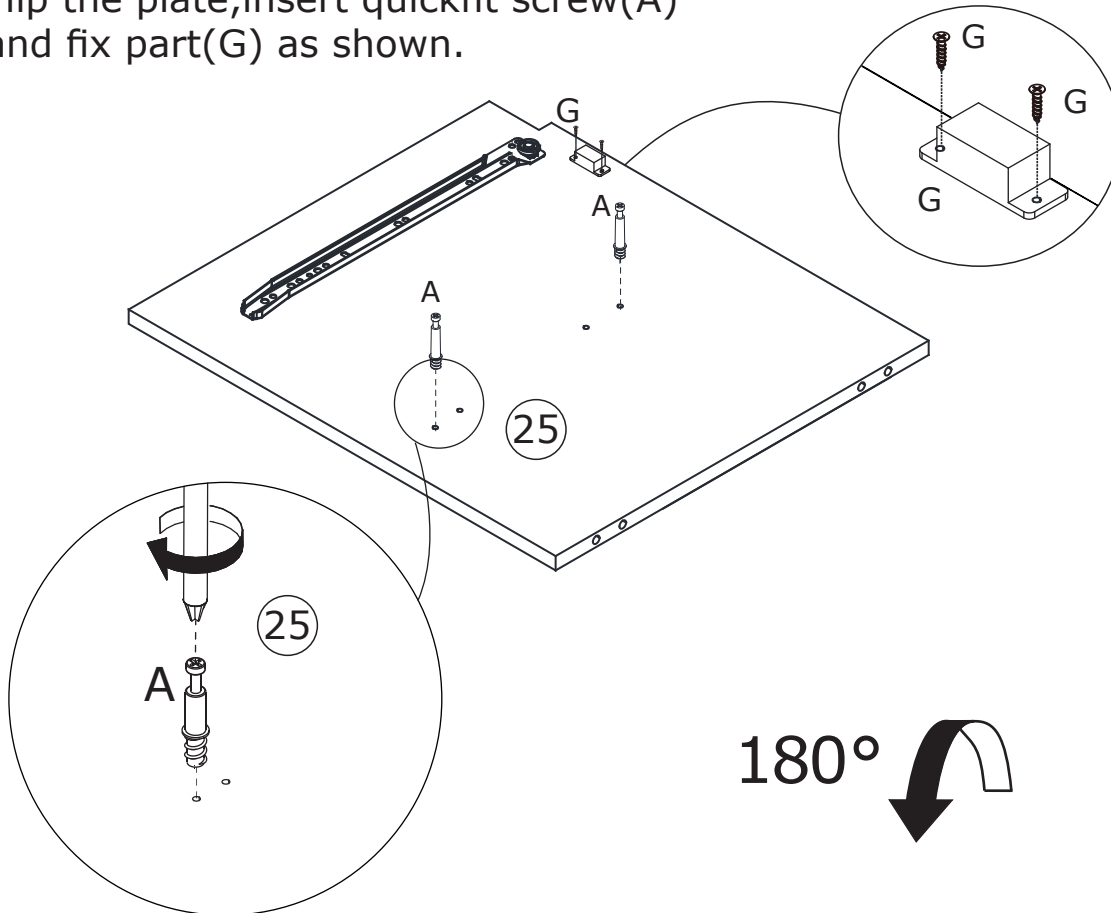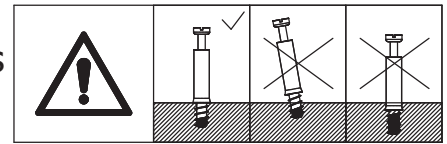   


Insert quickfit screw(A) into corresponding holes in plate 25, and fix part(G) at first. Flip the plate, insert quickfit screw(A) and fix part(G) as shown.






8

<p>A x 4</p>  <p>Ø 5 x 31 mm</p>	<p>B x 4</p>  <p>Ø 15 x 11 mm</p>	<p>C x 4</p>  <p>Ø 6 x 30 mm</p>
-------------------------------------------------------------------------------------------------------------------	--------------------------------------------------------------------------------------------------------------------	-------------------------------------------------------------------------------------------------------------------


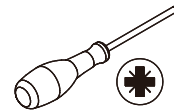 


Insert quickfit screw(A) into corresponding holes in plate 17 as shown.

 
 
 
Attach plate 19(x2) to plate 17 with wooden dowel(C), insert cam lock(B) into plate 19 and turn clockwise to tighten as shown.

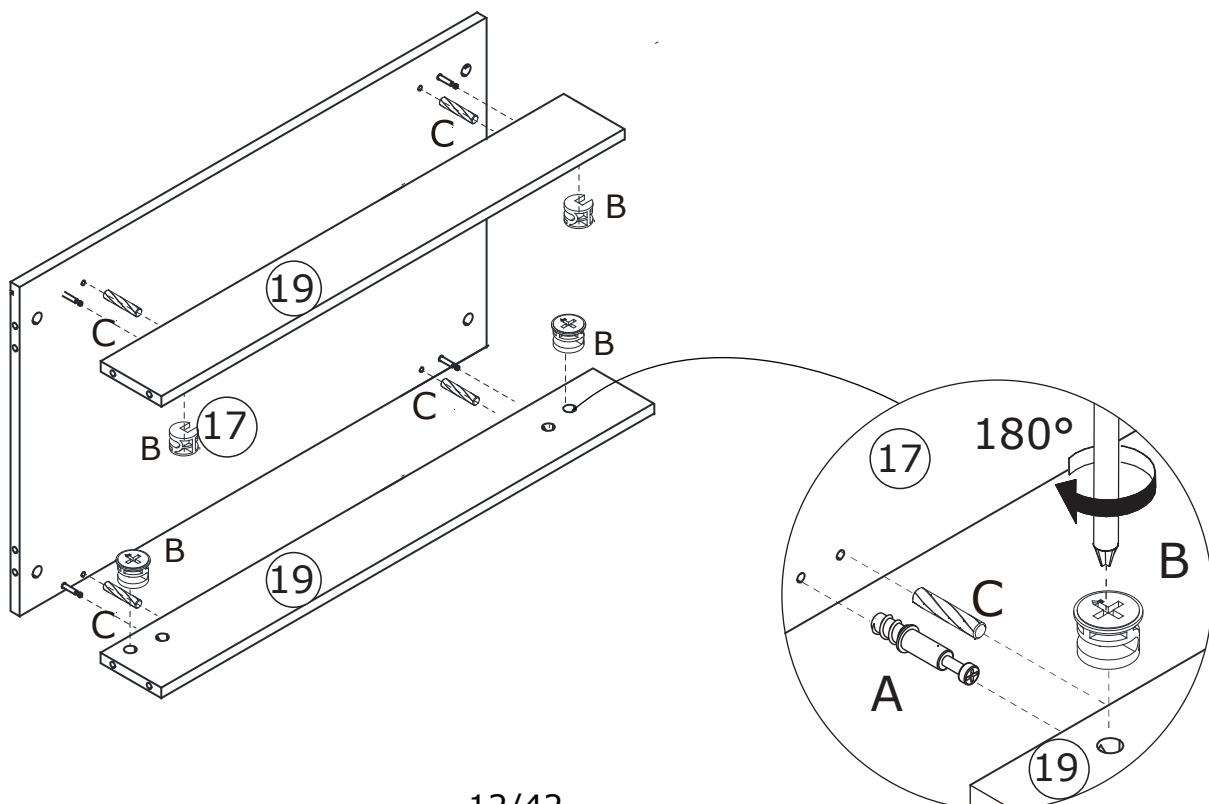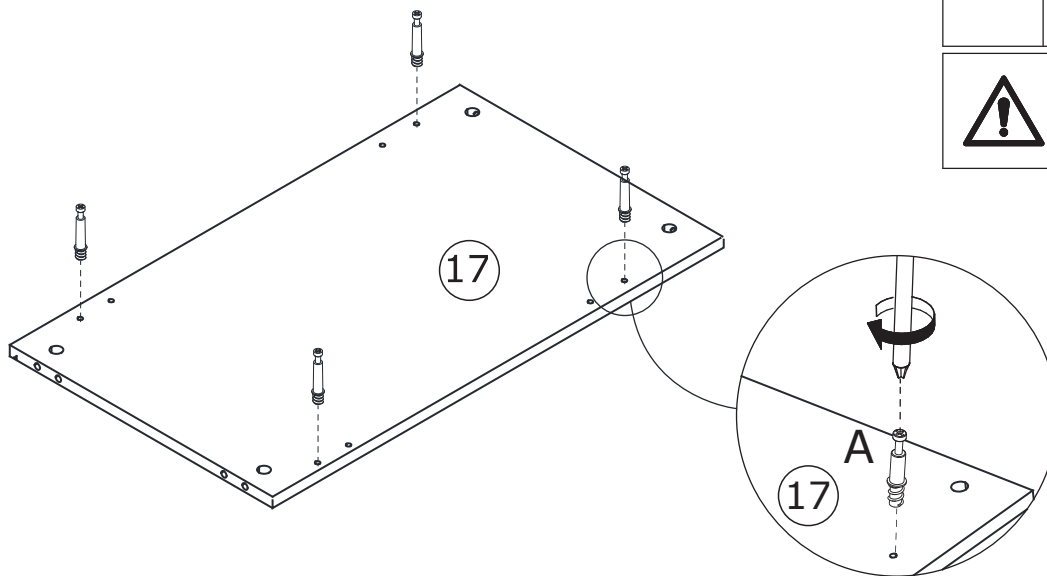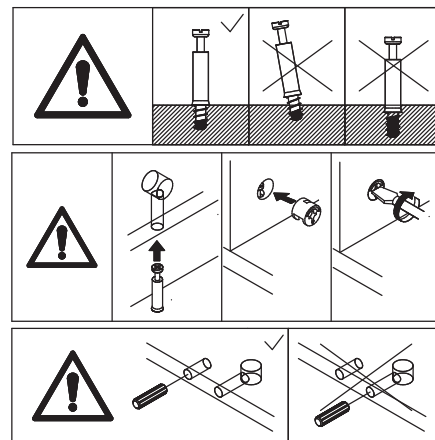

9

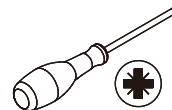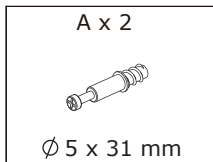  

   Insert quickfit screw(A) into corresponding holes in plate 17 as shown.

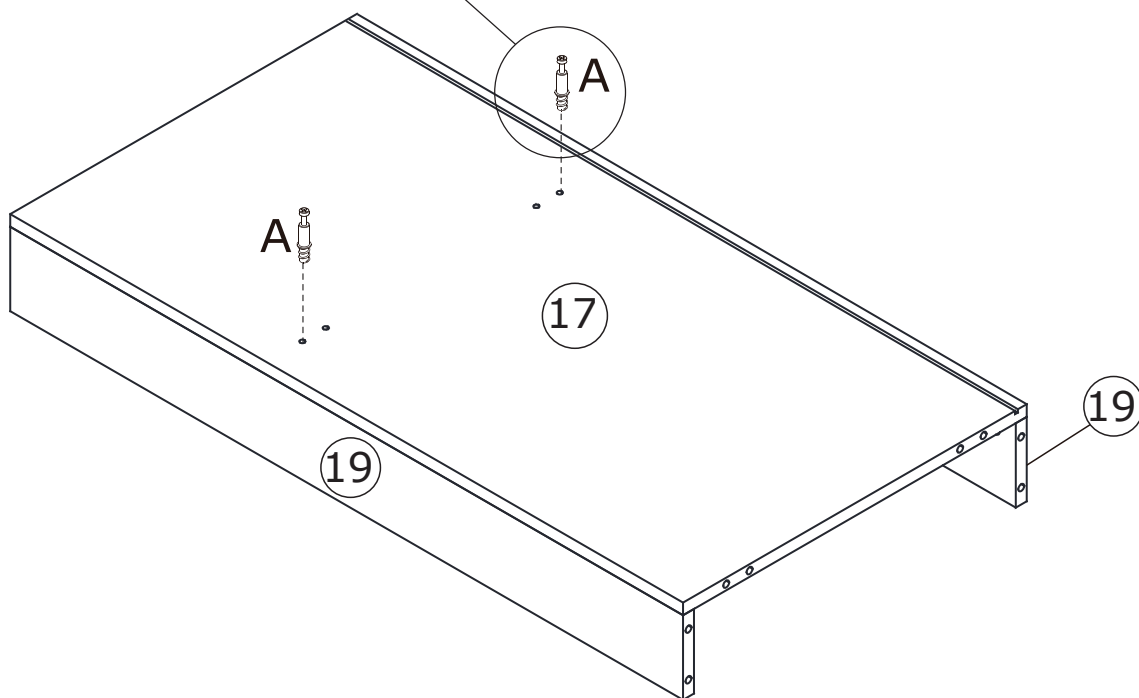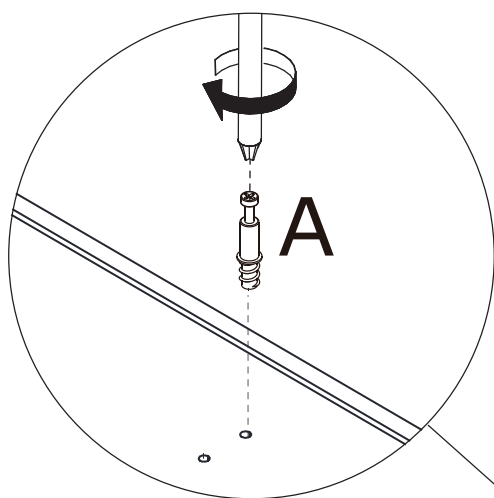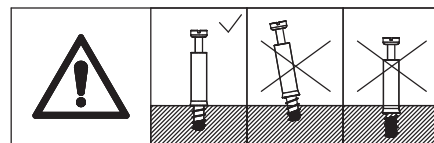

# 10

B x 2



Ø 15 x 11 mm

 
 
 
 
 
C x 2



Ø 6 x 30 mm






Attach plate 25 to plate 17 with wooden dowel(C), insert cam lock(B) into plate 25 and turn clockwise to tighten as shown.

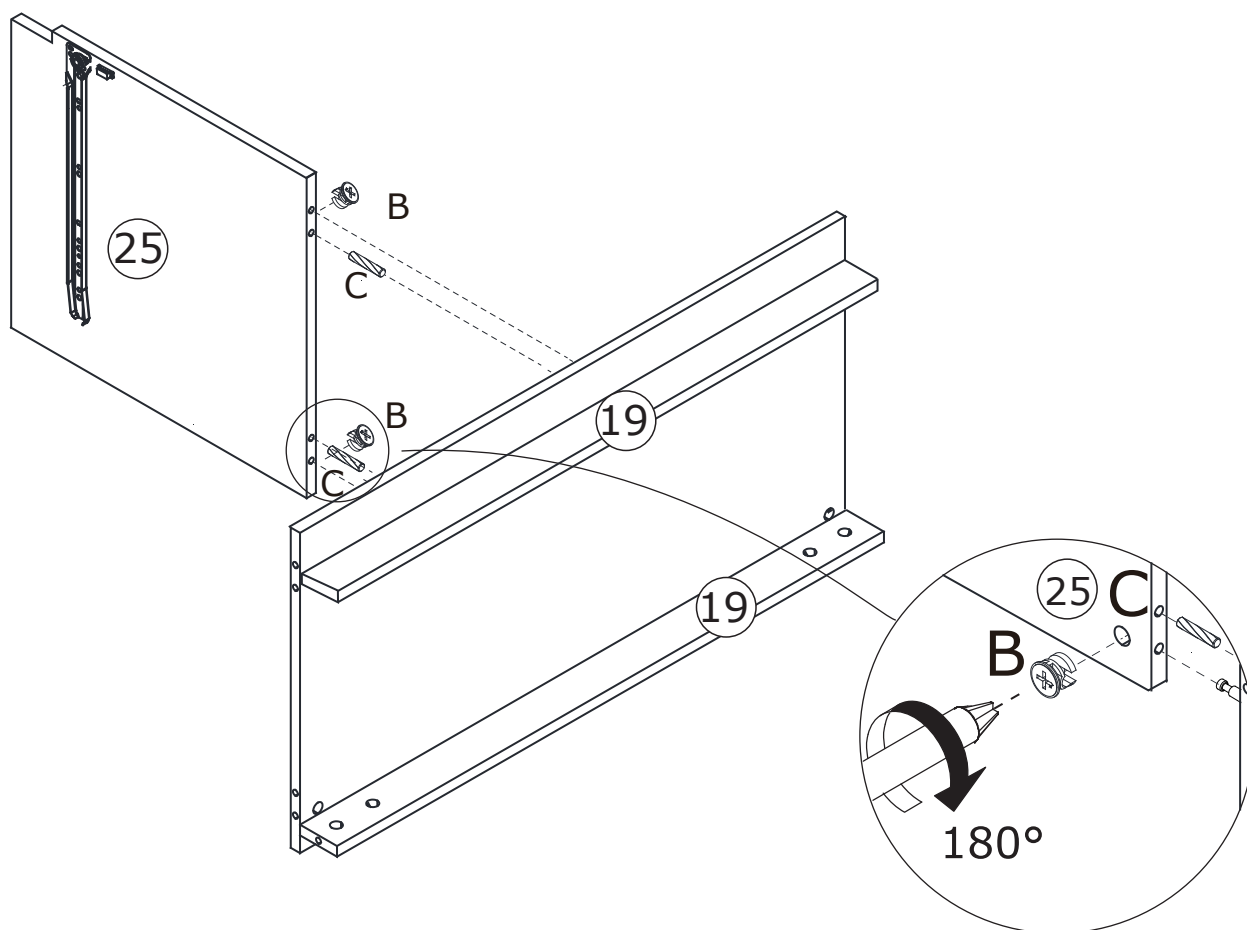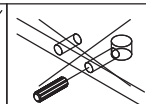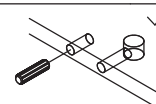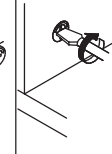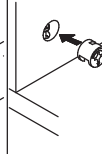

# 11



   
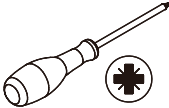
<p>C x 2</p>  <p>Ø 6 x 30 mm</p>	<p>F x 2</p>  <p>Ø 15 x 9.5 mm</p>	 
-------------------------------------------------------------------------------------------------------------------	---------------------------------------------------------------------------------------------------------------------	-------------------------------------------------------------------------------------------------------------------------------------------------------------------------

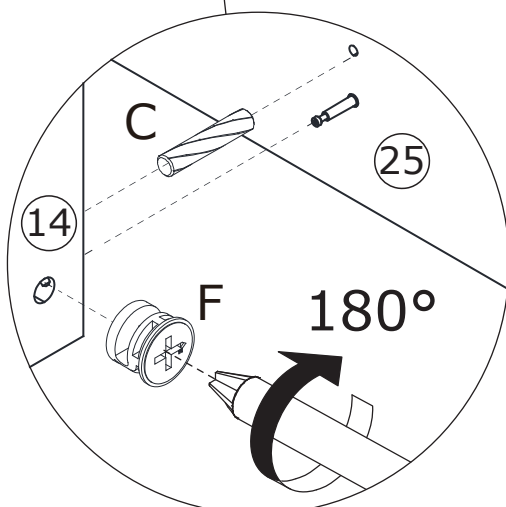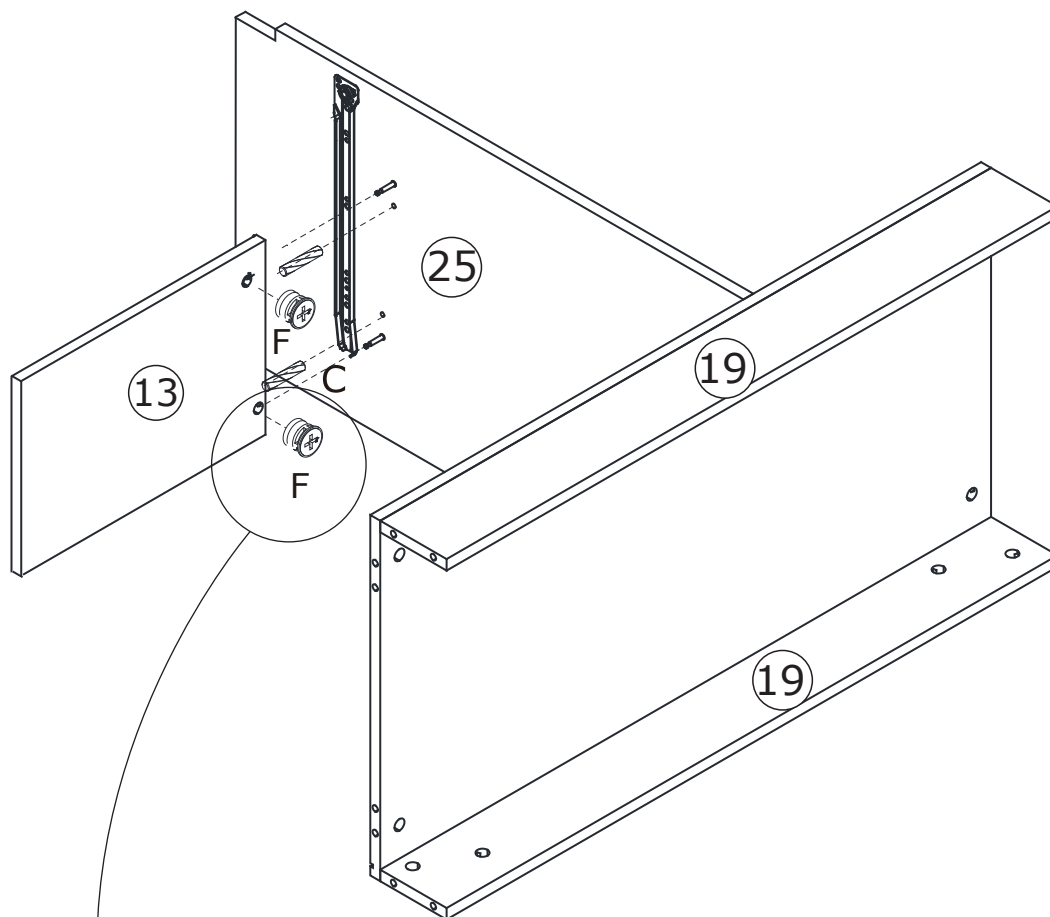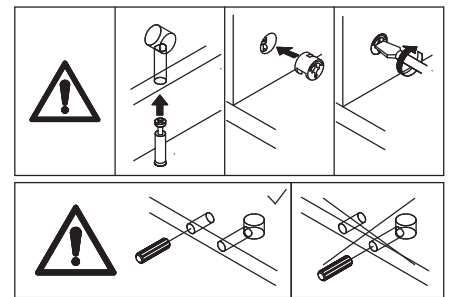Attach plate 13 to plate 25 with wooden dowel(C), insert cam lock(F) into plate 13 and turn clockwise to tighten as shown.







# 12
  
<p>B x 3</p>  <p>Ø 15 x 11 mm</p>	<p>C x 4</p>  <p>Ø 6 x 30 mm</p>	<p>F x 2</p>  <p>Ø 15 x 9.5 mm</p>	
--------------------------------------------------------------------------------------------------------------------	-------------------------------------------------------------------------------------------------------------------	---------------------------------------------------------------------------------------------------------------------	-------------------------------------------------------------------------------------

Insert wooden dowel(C) into plate 13 and 17 at first.



Attach plate 10 to plate 15,13 and 17, insert cam lock(B) into plate 17 and insert cam lock(F) into plate 15,13, then turn clockwise to tighten as shown.

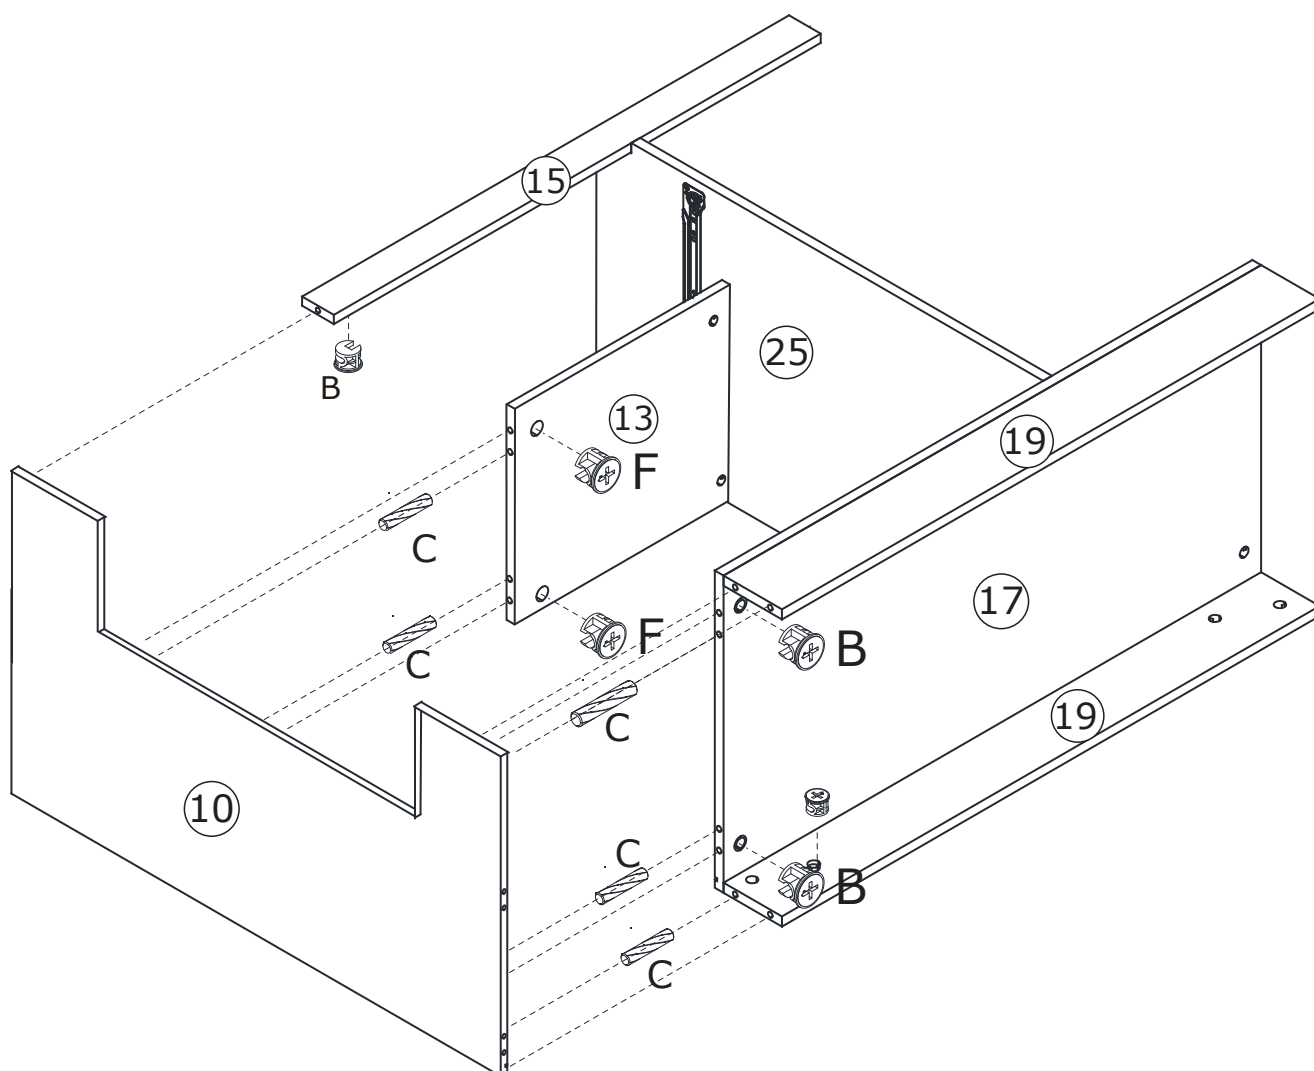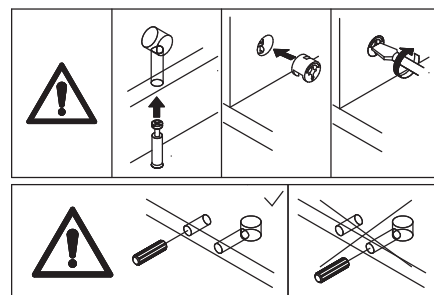

# 13

<p>C x 4</p>  <p>Ø 6 x 30 mm</p>	<p>F x 2</p>  <p>Ø 15 x 9.5 mm</p>	
-------------------------------------------------------------------------------------------------------------------	---------------------------------------------------------------------------------------------------------------------	-------------------------------------------------------------------------------------

  Attach plate 14 to plate 25 with wooden dowel(C), insert cam lock(F) into plate 14 and turn clockwise to tighten as shown.

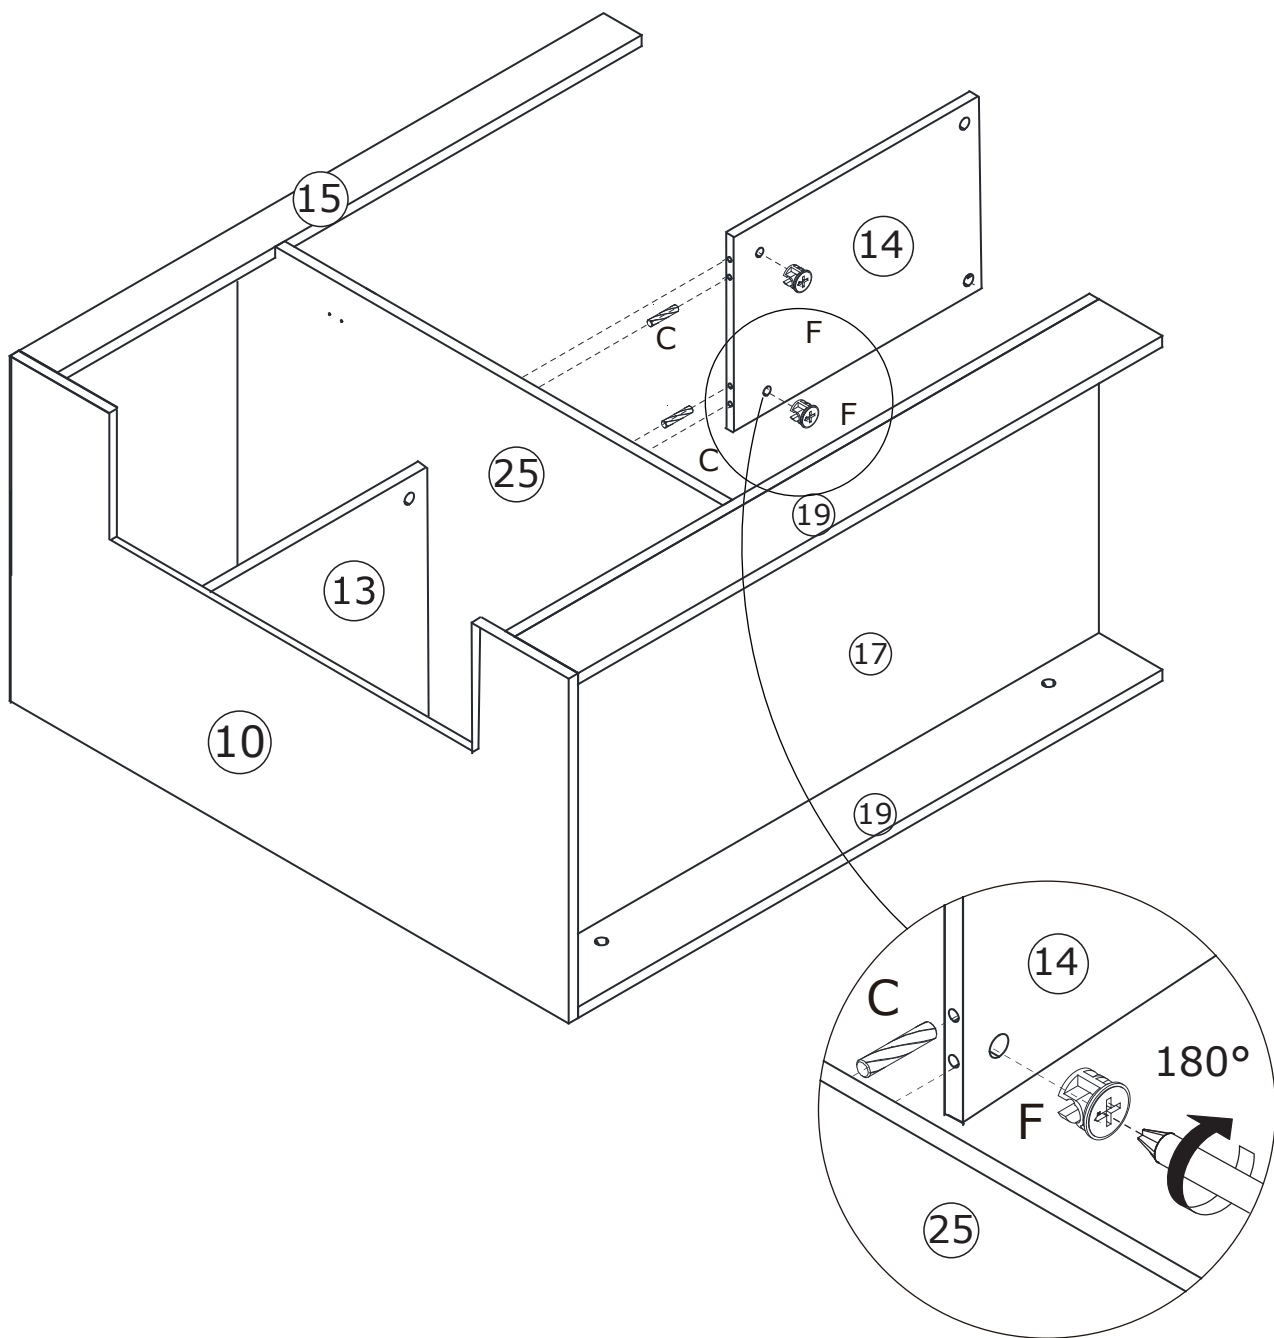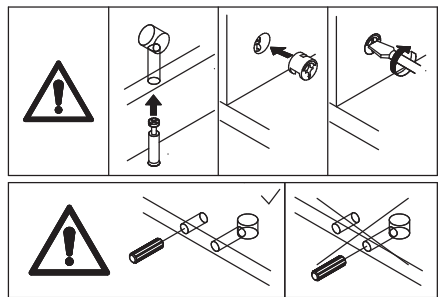

# 14

B x 5



Ø 15 x 11 mm

C x 6

 


Ø 6 x 30 mm

F x 2





Ø 15 x 9.5 mm

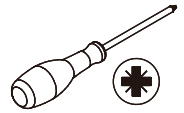


Insert wooden dowel(C) into plate 14 and 17 at first.

  
Attach plate 11 to plate 15,14 and 17, insert cam lock(B) into plate 17 and insert cam lock(F) into plate 15,14,then turn clockwise to tighten as shown.

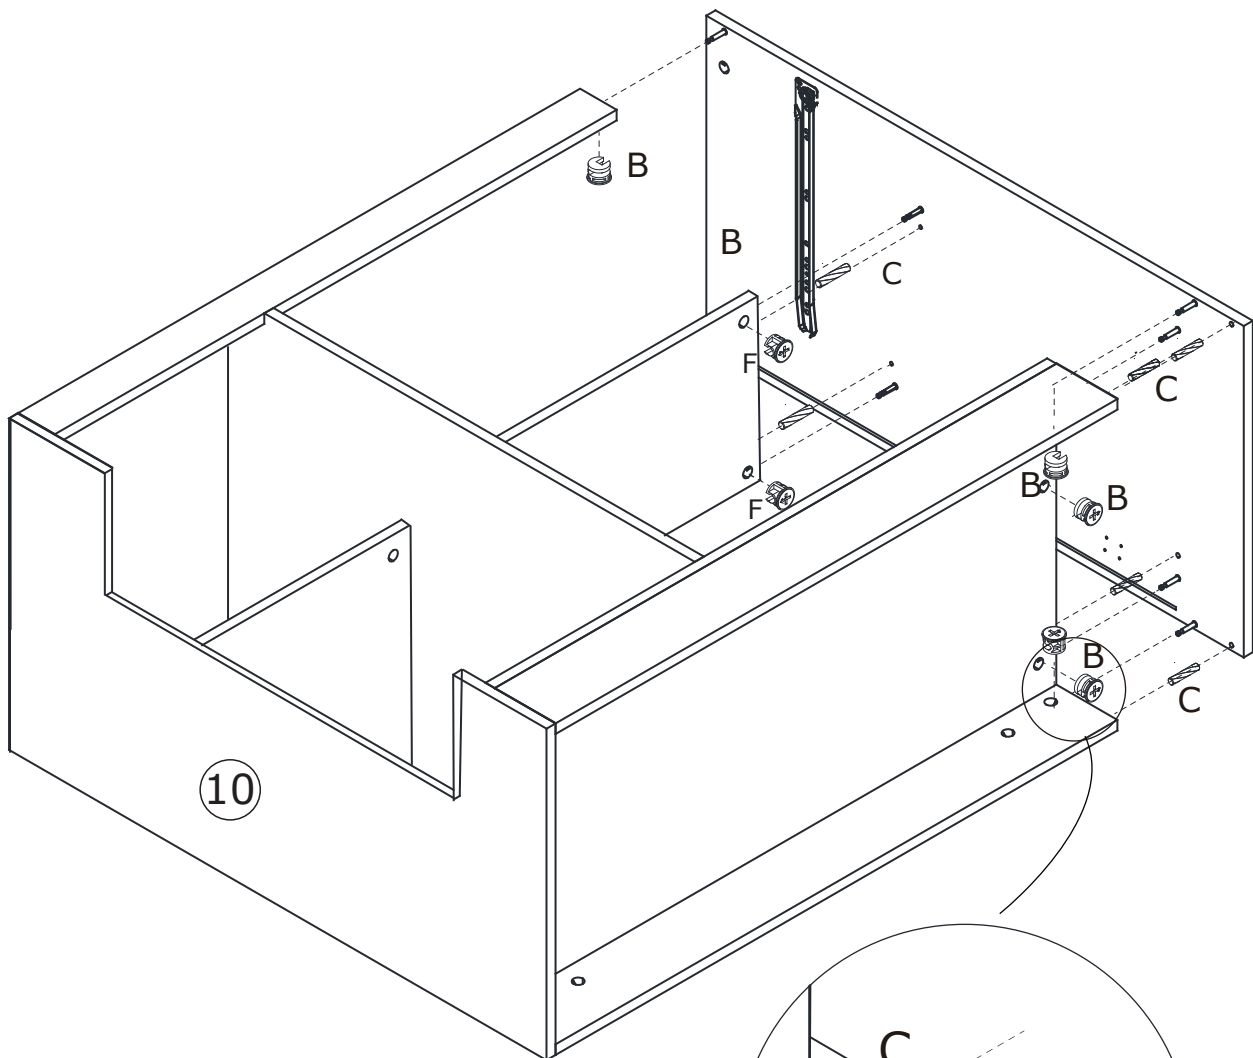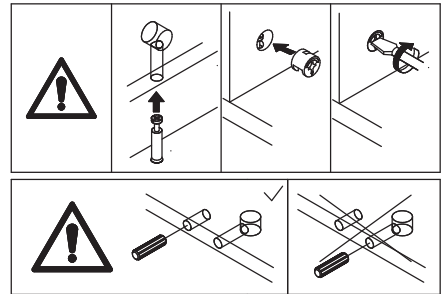


10

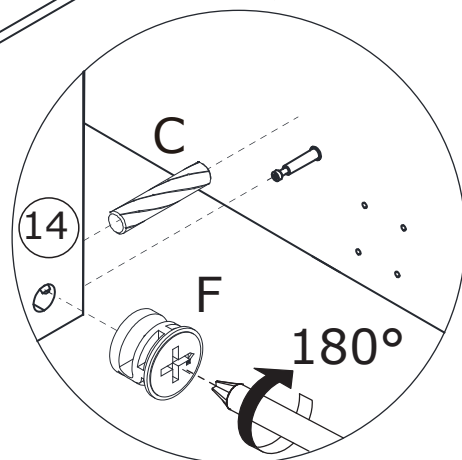 

15

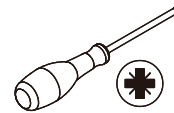 


Slide plate 7 along grooves as shown.

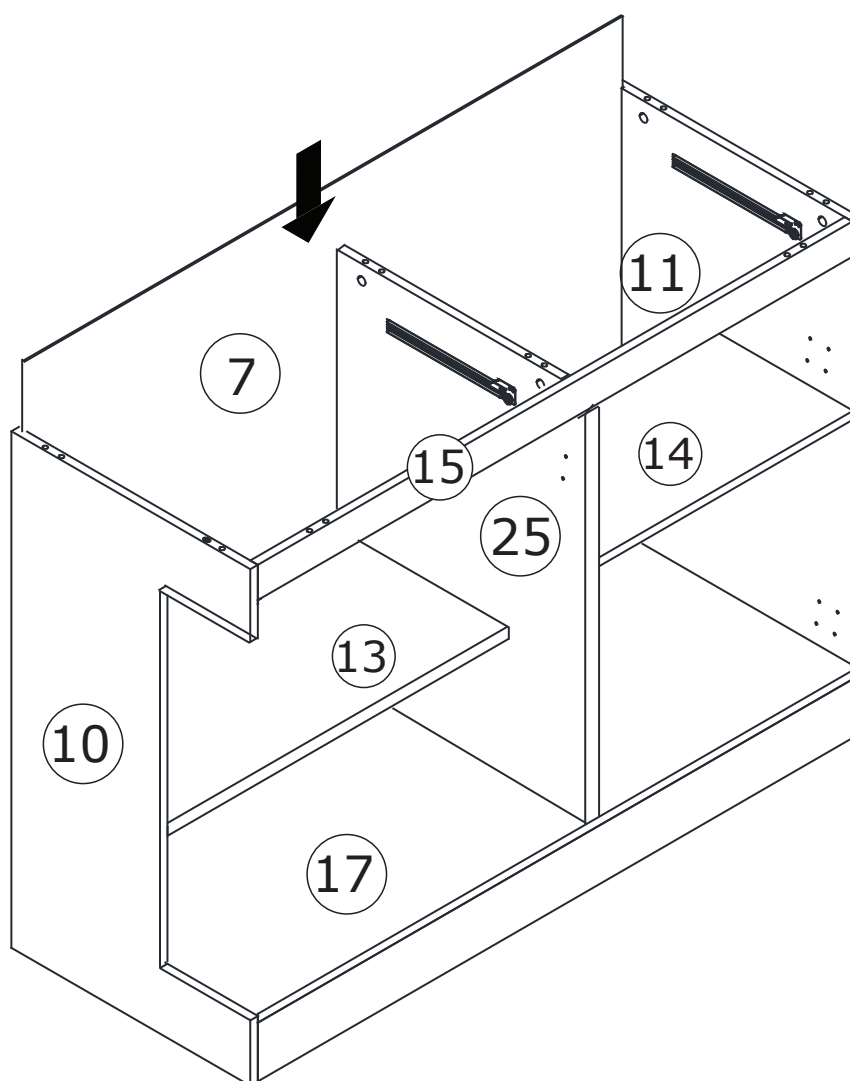 


# 16

 A x 12

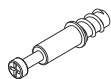


Ø 5 x 31 mm

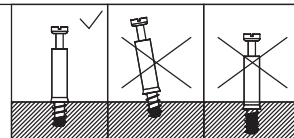 


Insert quickfit screw(A) into corresponding holes in plate 8 at first.

 Flip the plate,insert quickfit screw(A) as shown.

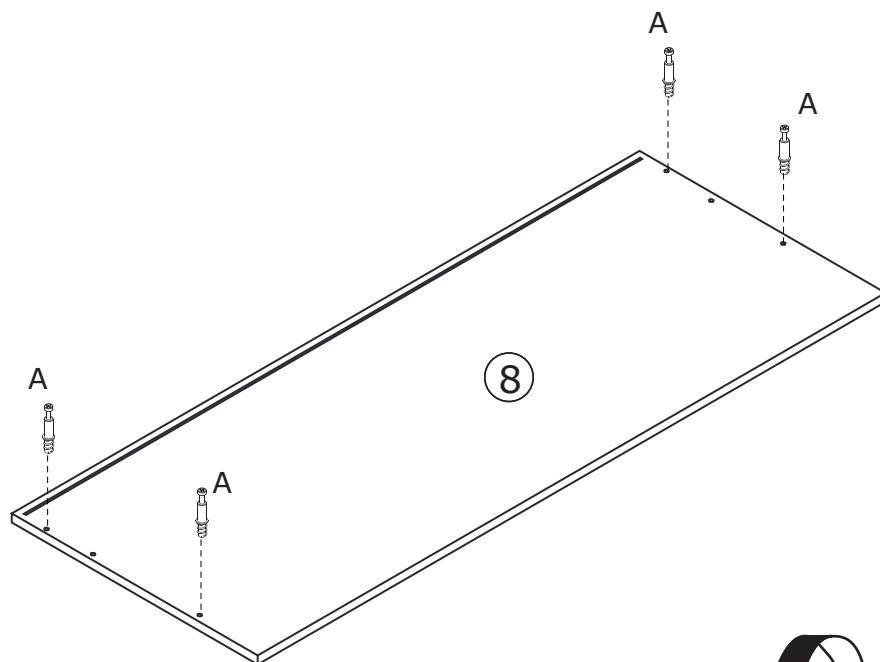




180°

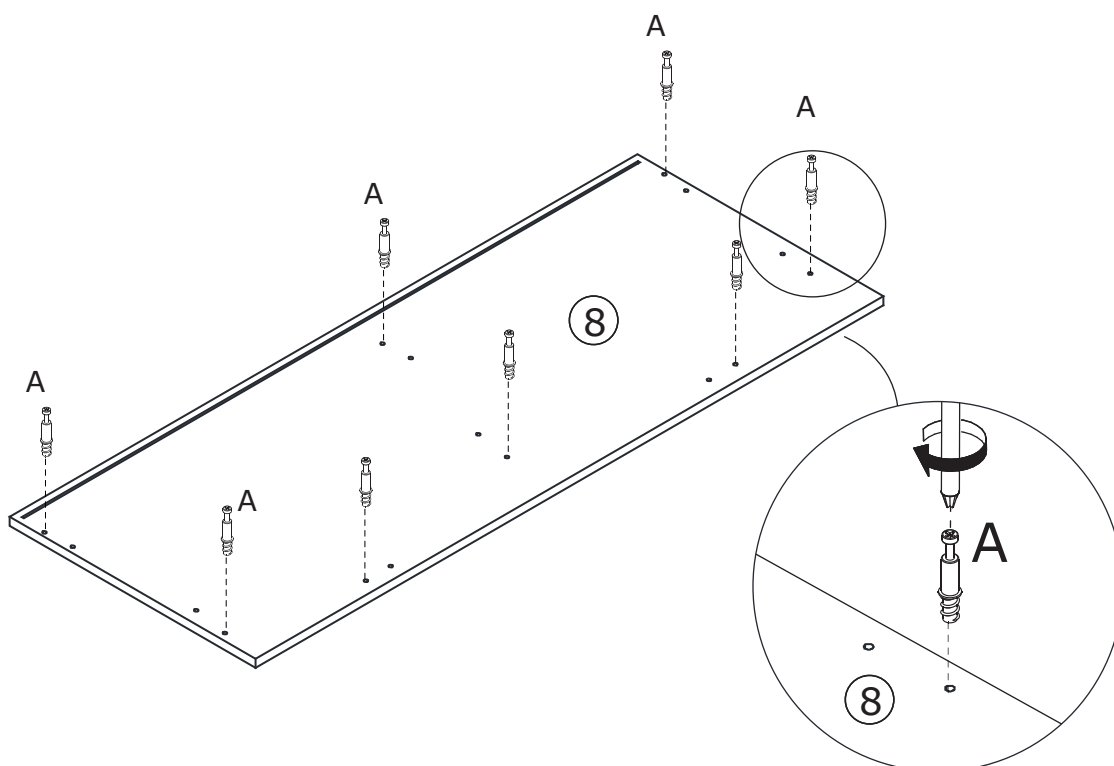 




# 17

<p>B x 8</p>  <p>Ø 15 x 11 mm</p>	<p>C x 8</p>  <p>Ø 6 x 30 mm</p>	
--------------------------------------------------------------------------------------------------------------------	-------------------------------------------------------------------------------------------------------------------	------------------------------------------------------------------------------------

   
Cover plate 8 to plate 10,11 and 25 with wooden dowel(C), insert cam lock(B) into plate 10, 11,25 and insert cam lock(B) into plate 15,14,then turn clockwise to tighten as shown.

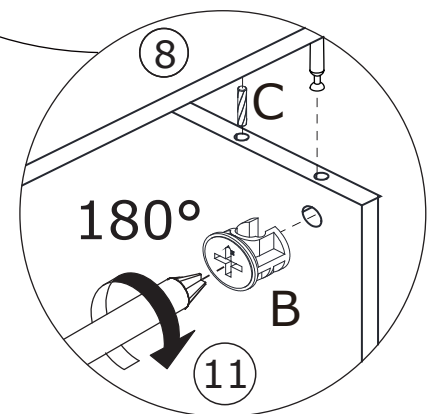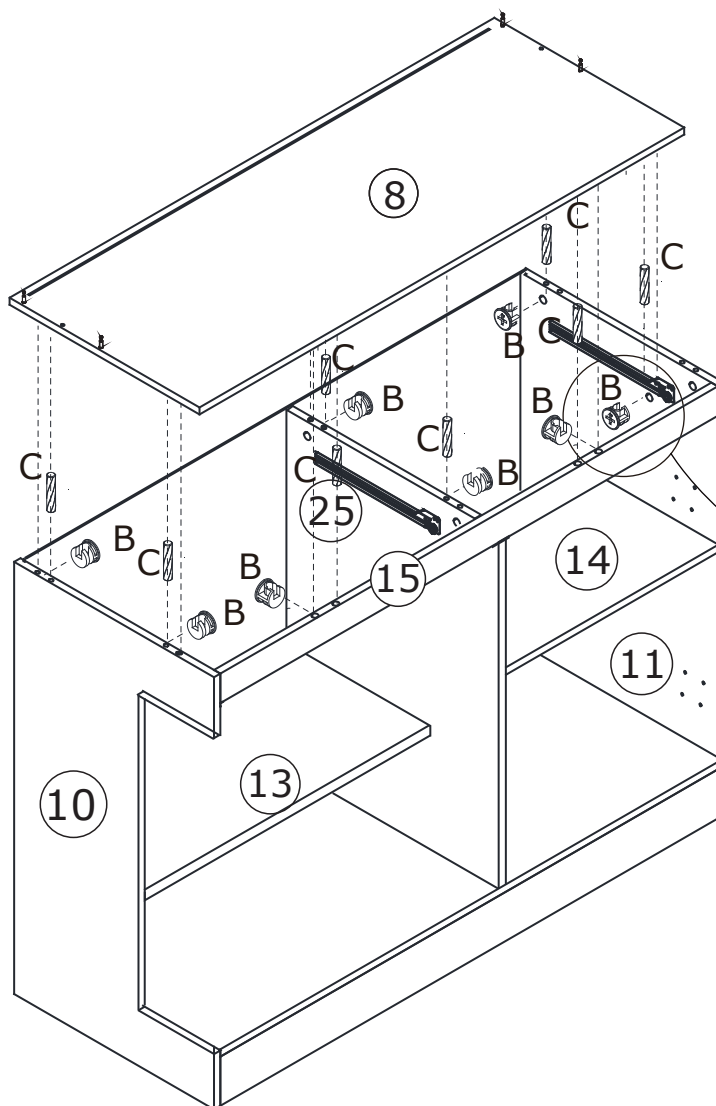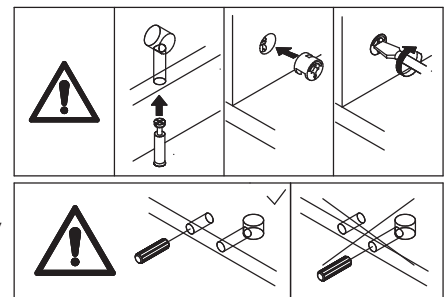



# 18

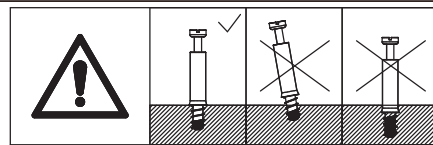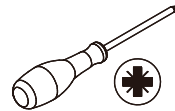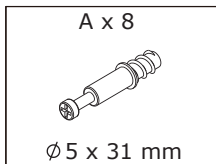   

 
Insert quickfit screw(A) into corresponding holes in plate 2 and 3 as shown.

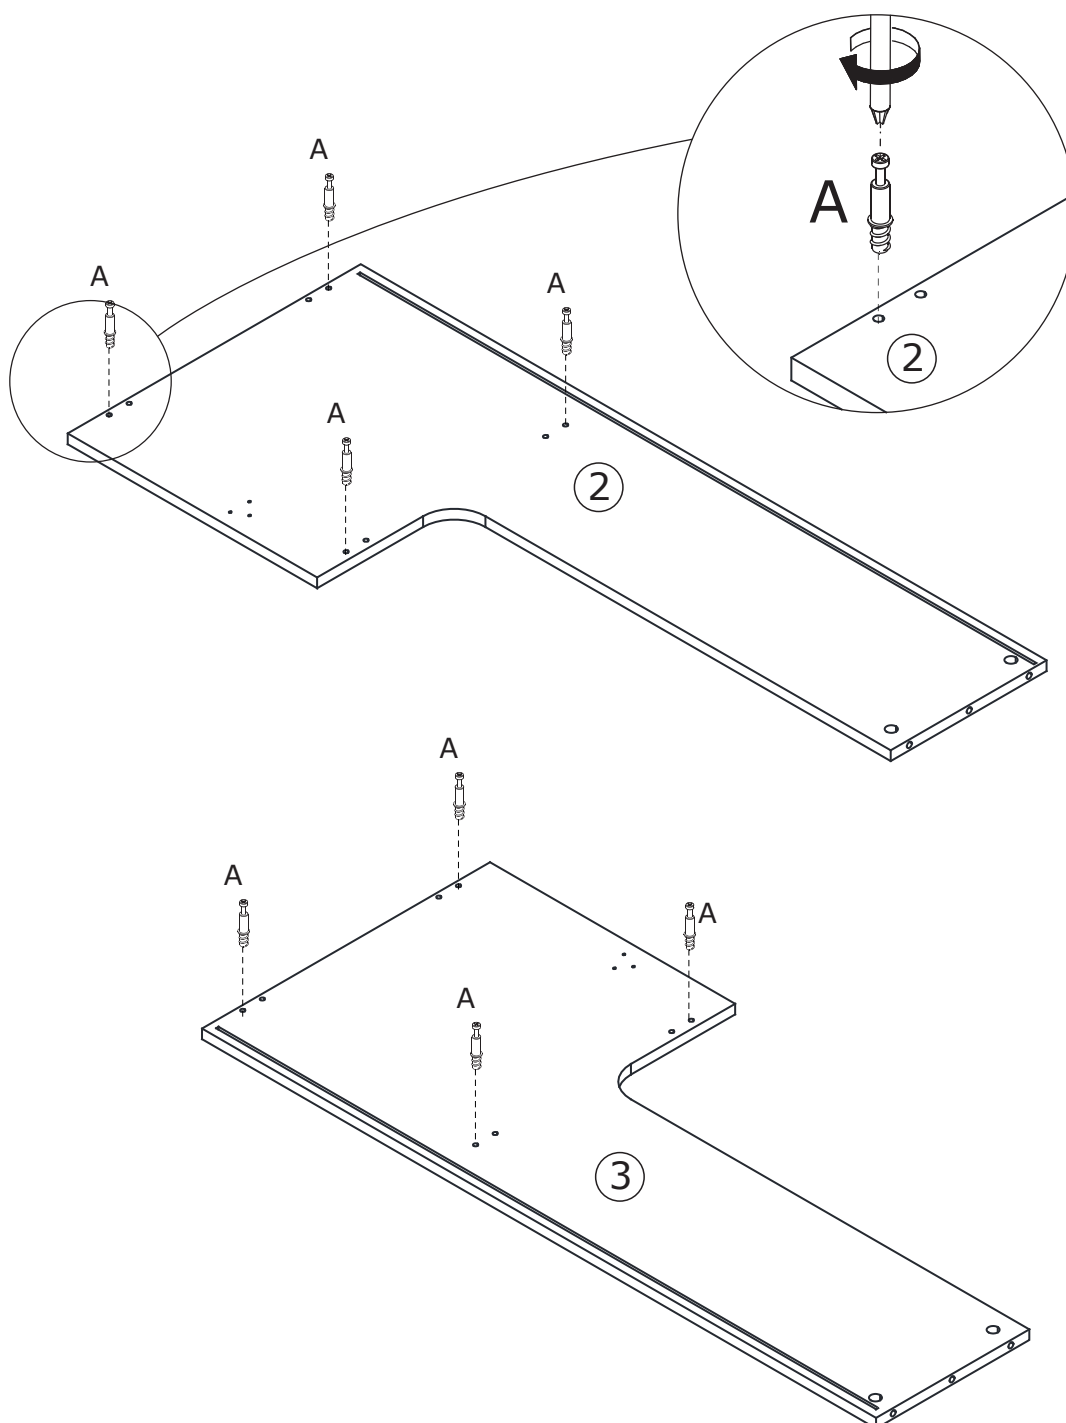

19

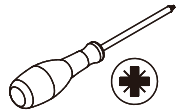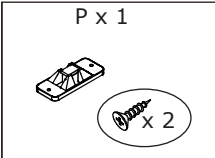  

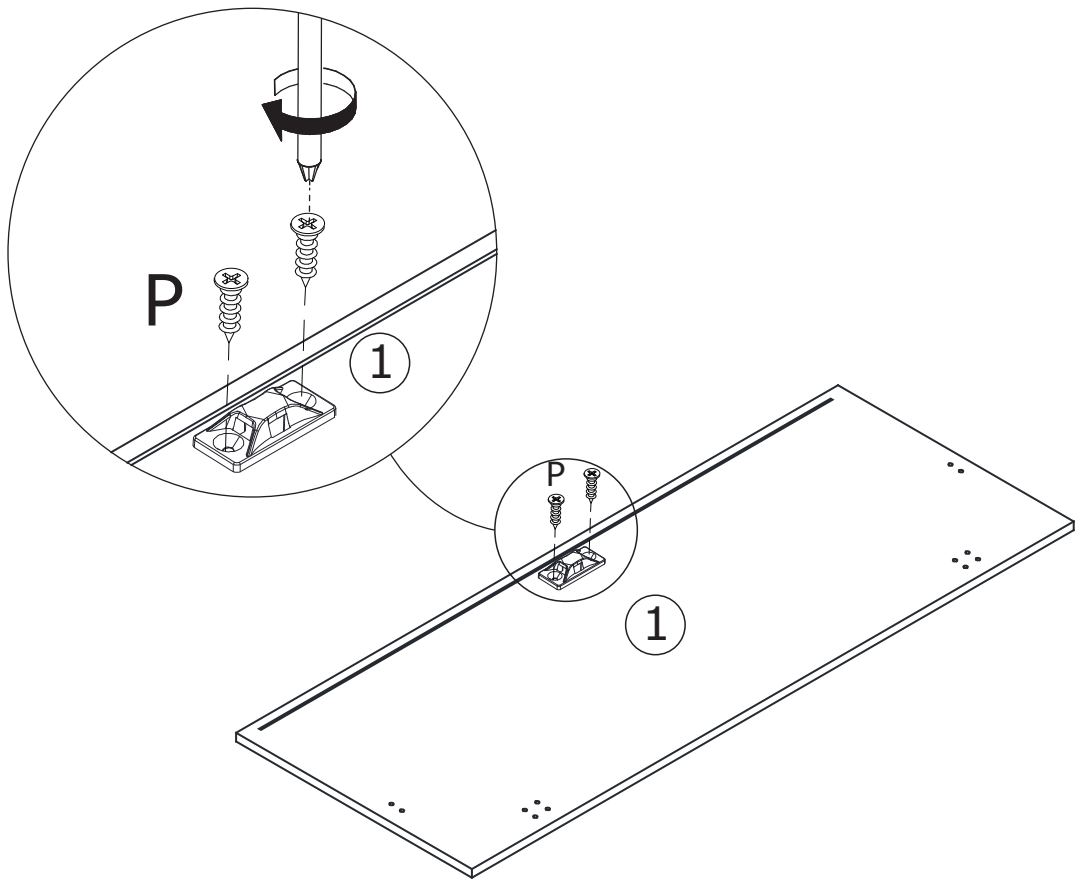 



Fix part(P) to plate 1 as shown.







# 20
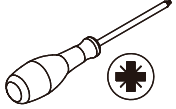
<p>C x 4</p>  <p>Ø 6 x 30 mm</p>	<p>F x 4</p>  <p>Ø 15 x 9.5 mm</p>	
-------------------------------------------------------------------------------------------------------------------	---------------------------------------------------------------------------------------------------------------------	-------------------------------------------------------------------------------------

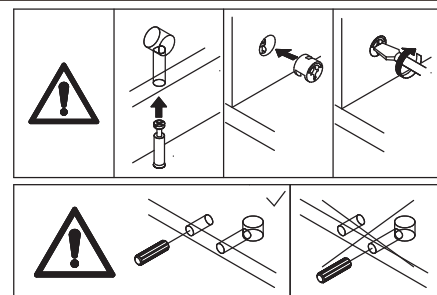 

 
 
Attach plate 1 and 4 to plate 2 with wooden dowel(C), insert cam lock(F) into plate 1,4, then turn clockwise to tighten as shown.

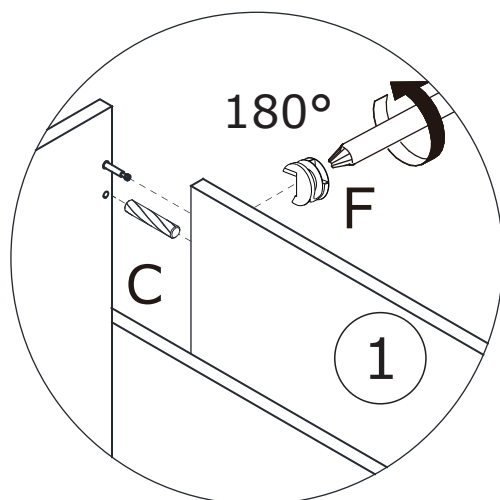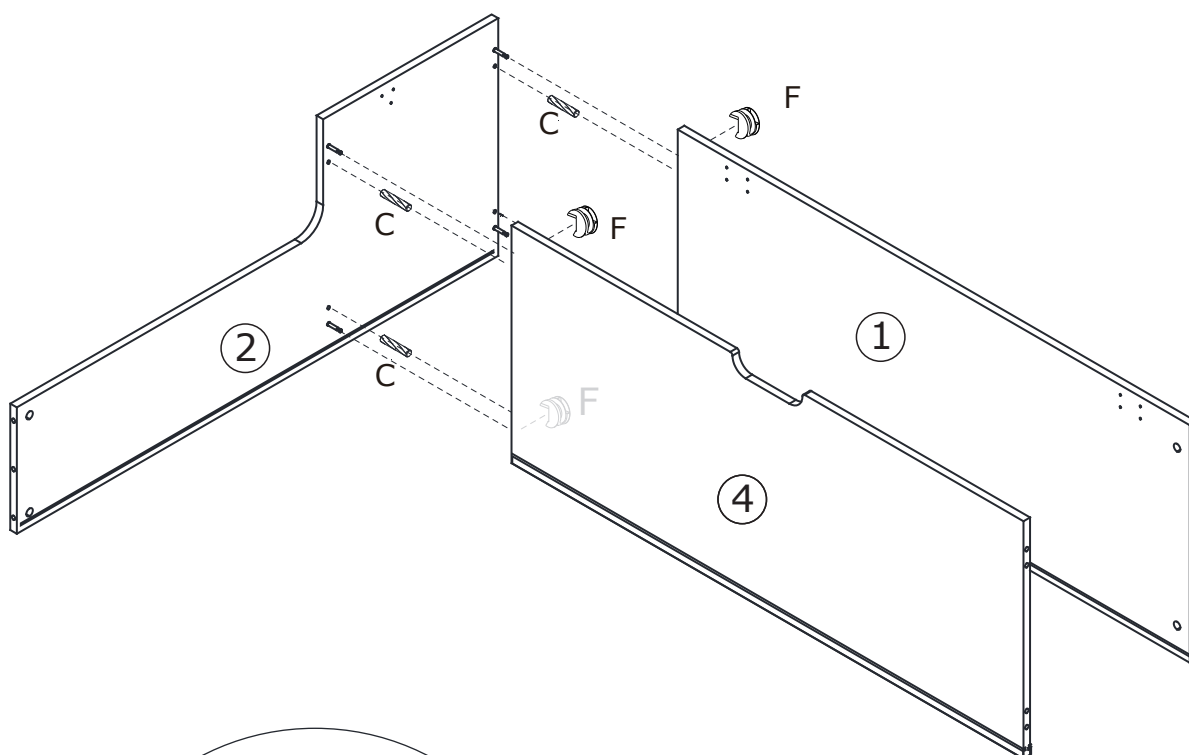

# 21




  Slide plate 5 along grooves at first.  
Attach plate 3 to plate 1 and 4 with wooden  
dowel(C), insert cam lock(F) into plate 1,4, then  
turn clockwise to tighten as shown.

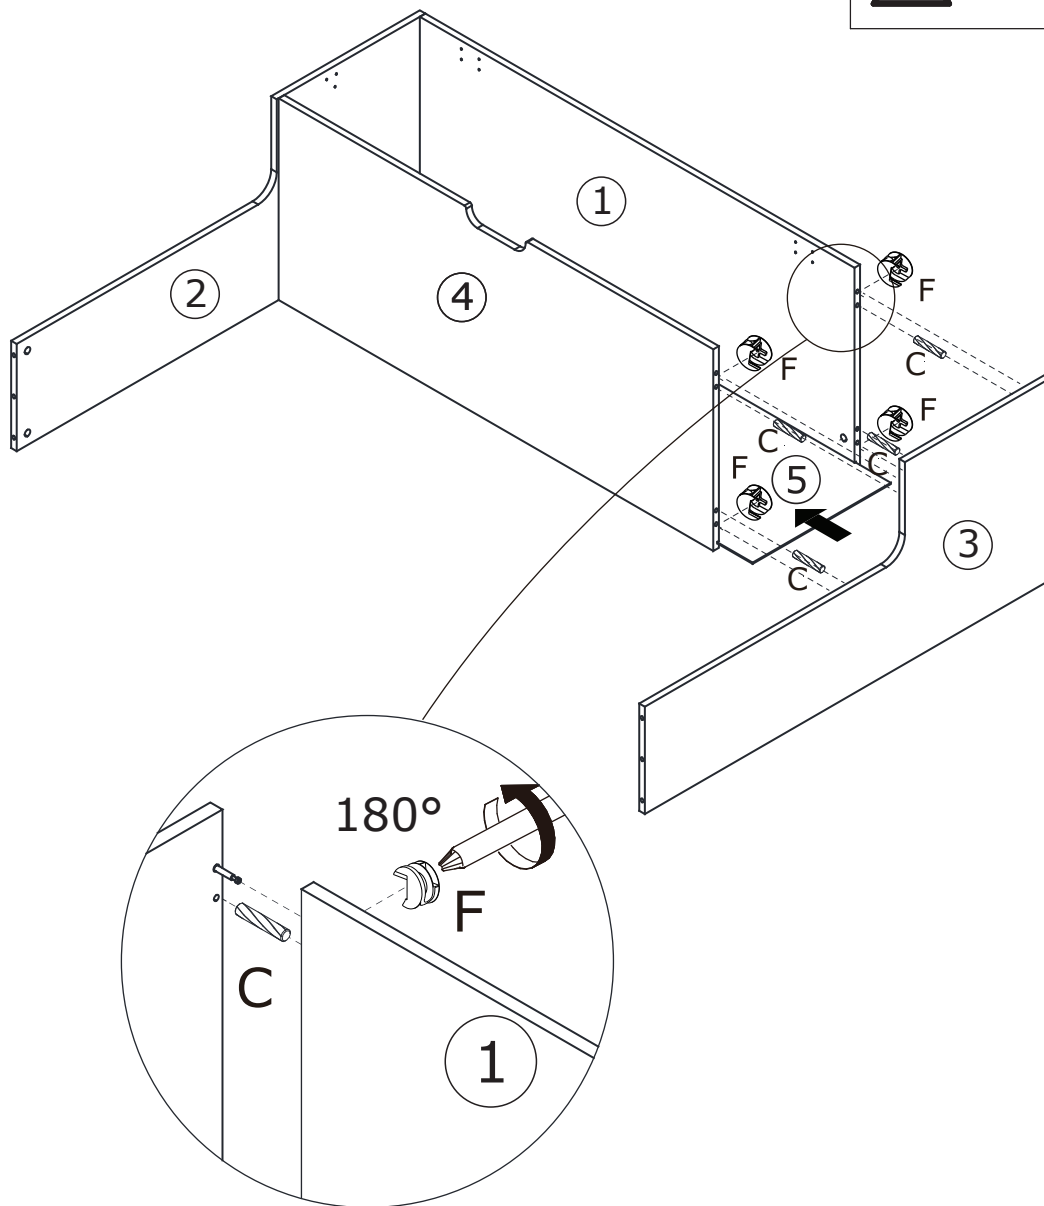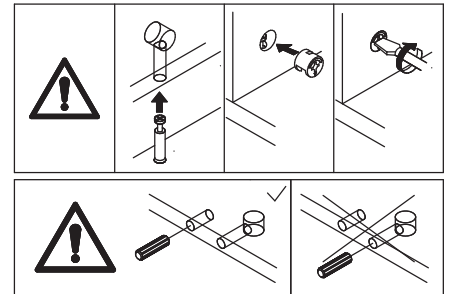


# 22

 
Slide bak plate 7 along grooves in plate 2 and 3 at first.

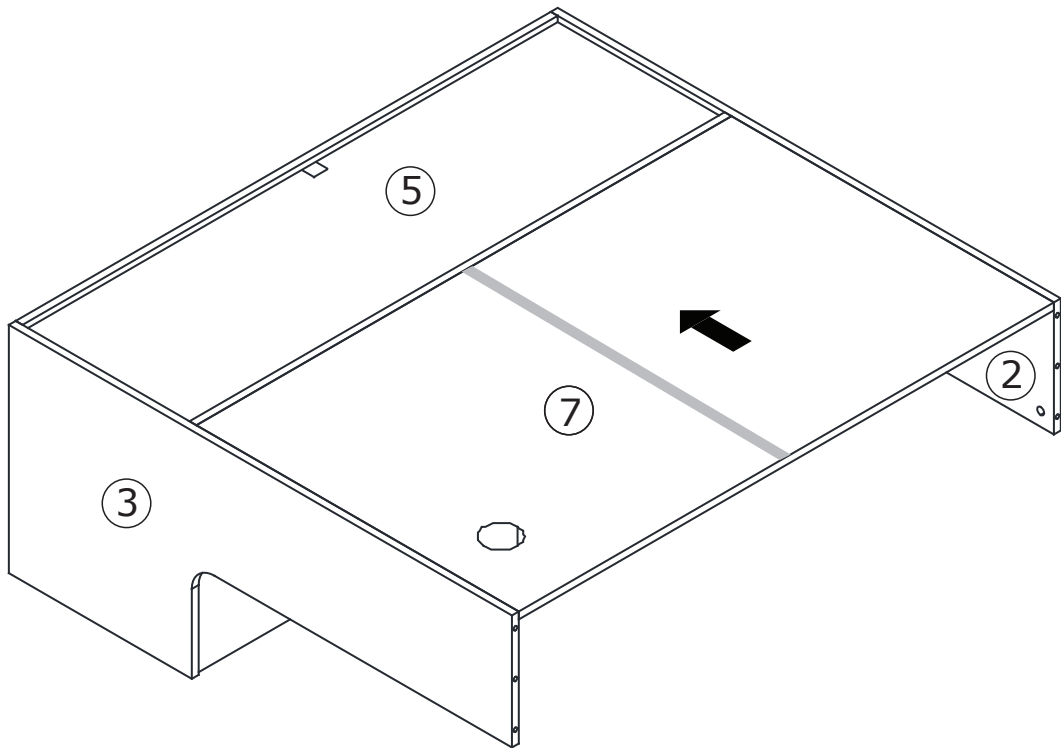

# 23

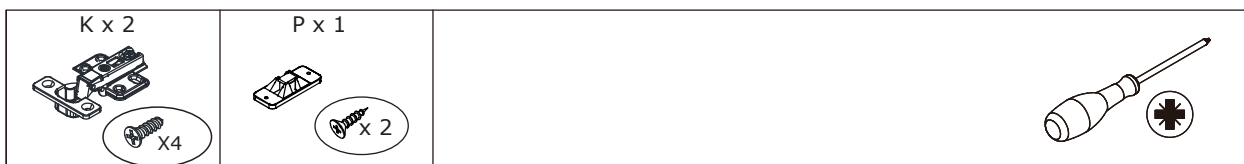 

 
Fix hinge(K) to plate 6 using screw(H) as shown.

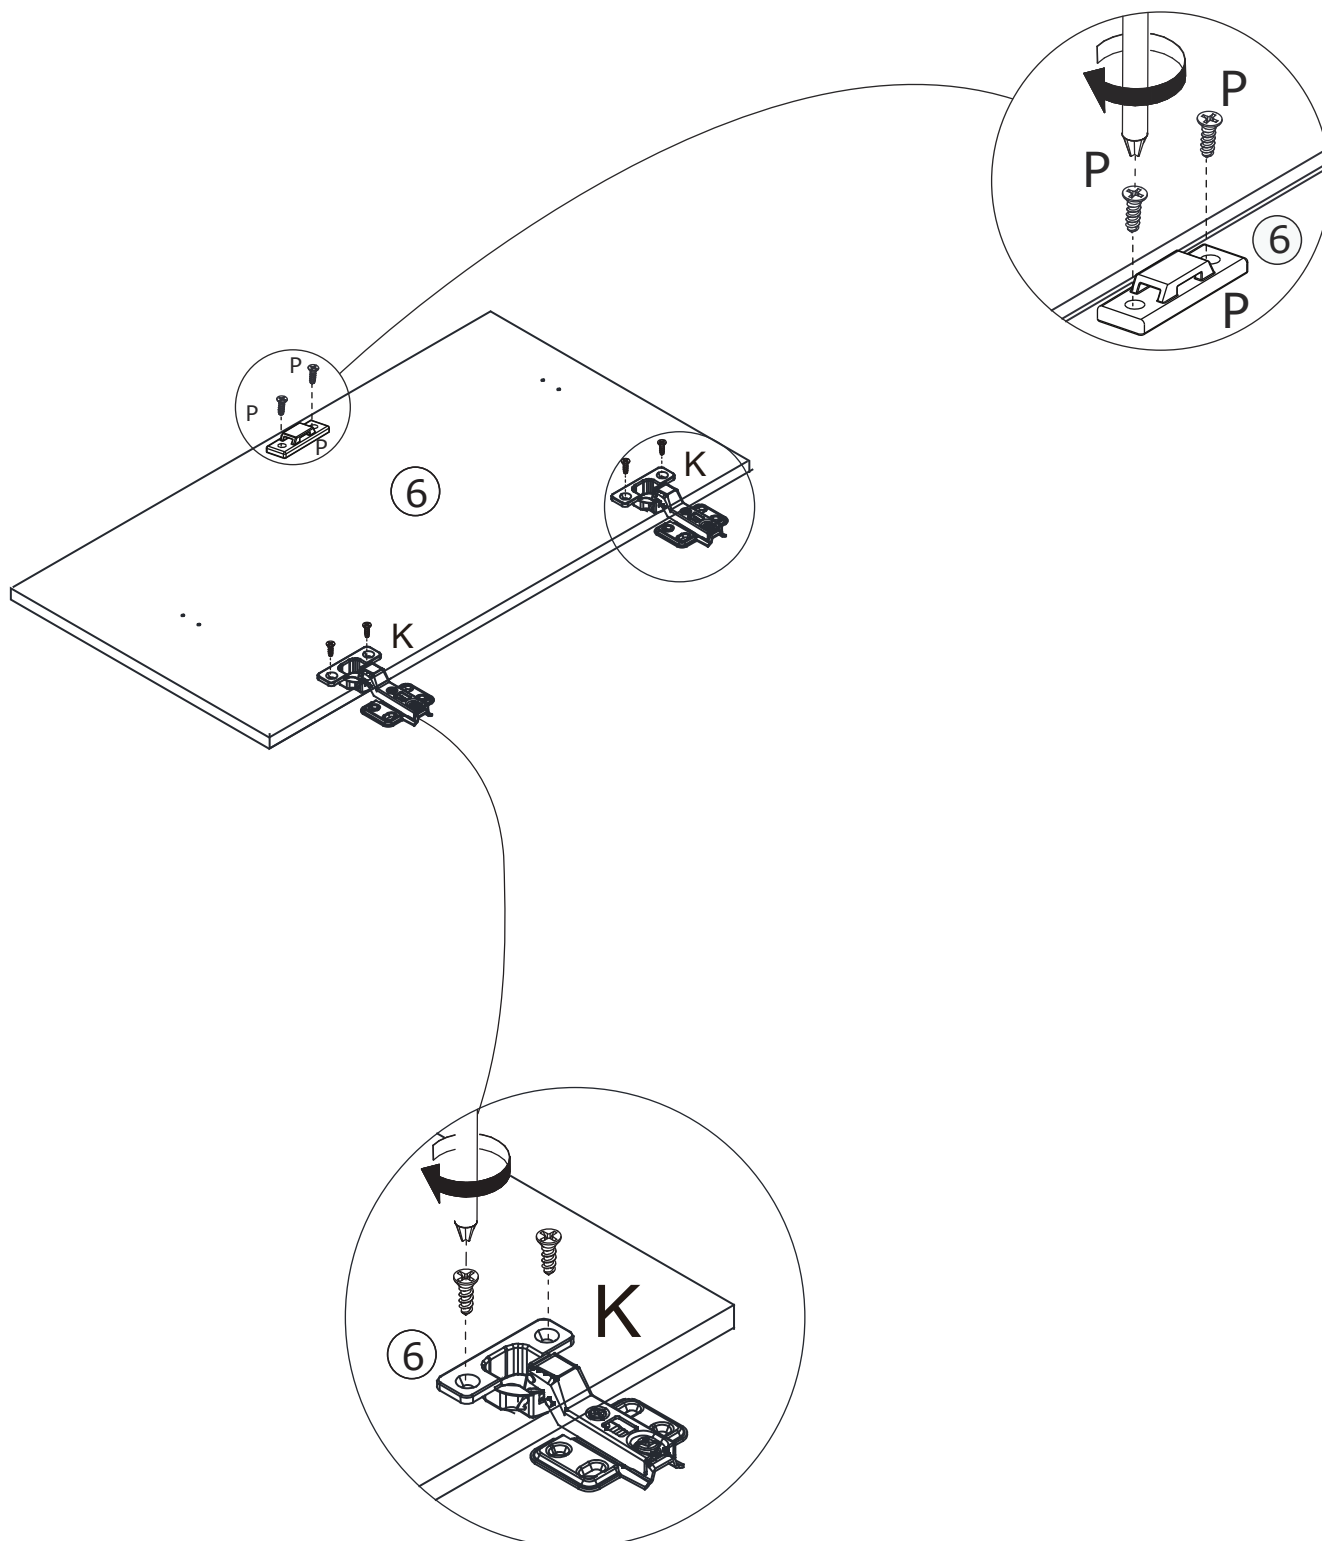

# 24



 Attach door plate 6 to plate 1 by fixing hinge with screw(K) as shown.  
Fix part(J) to plate 2,3 and 6 as shown.

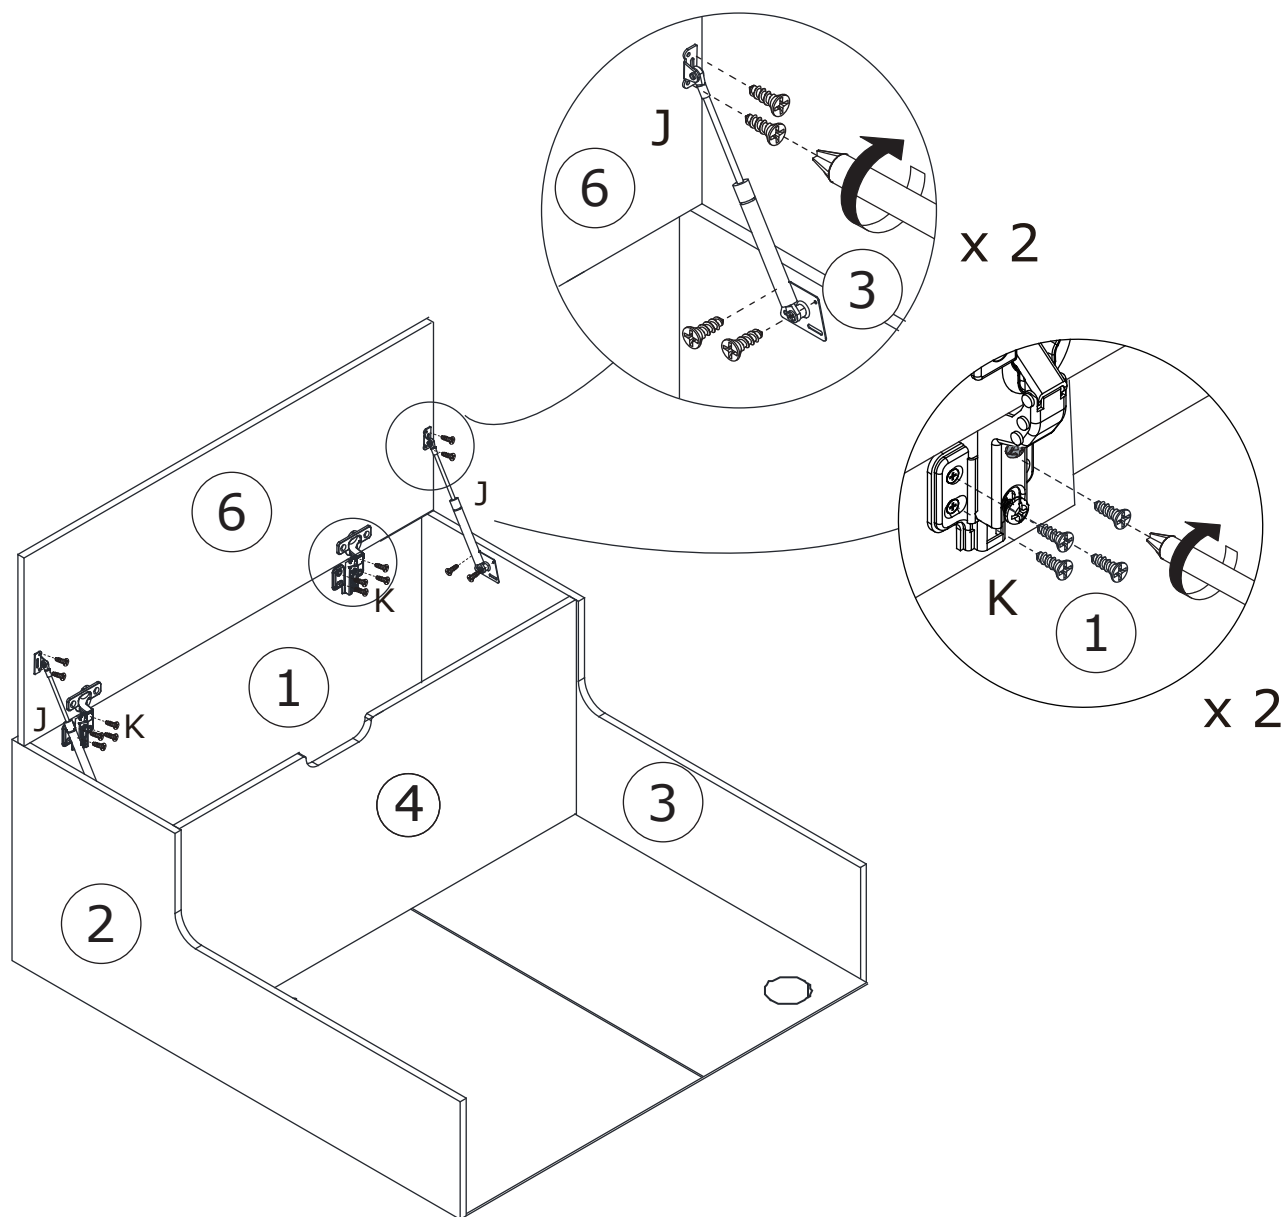

# 25

B x 4

 


Ø 15 x 11 mm




C x 2



Ø 6 x 30 mm

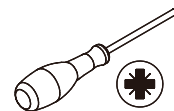

   Connect the two components with wooden dowel(C), insert cam lock(B) into plate 2,3, then turn clockwise to tighten as shown.

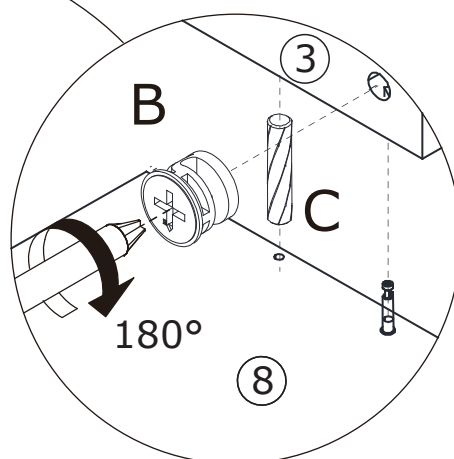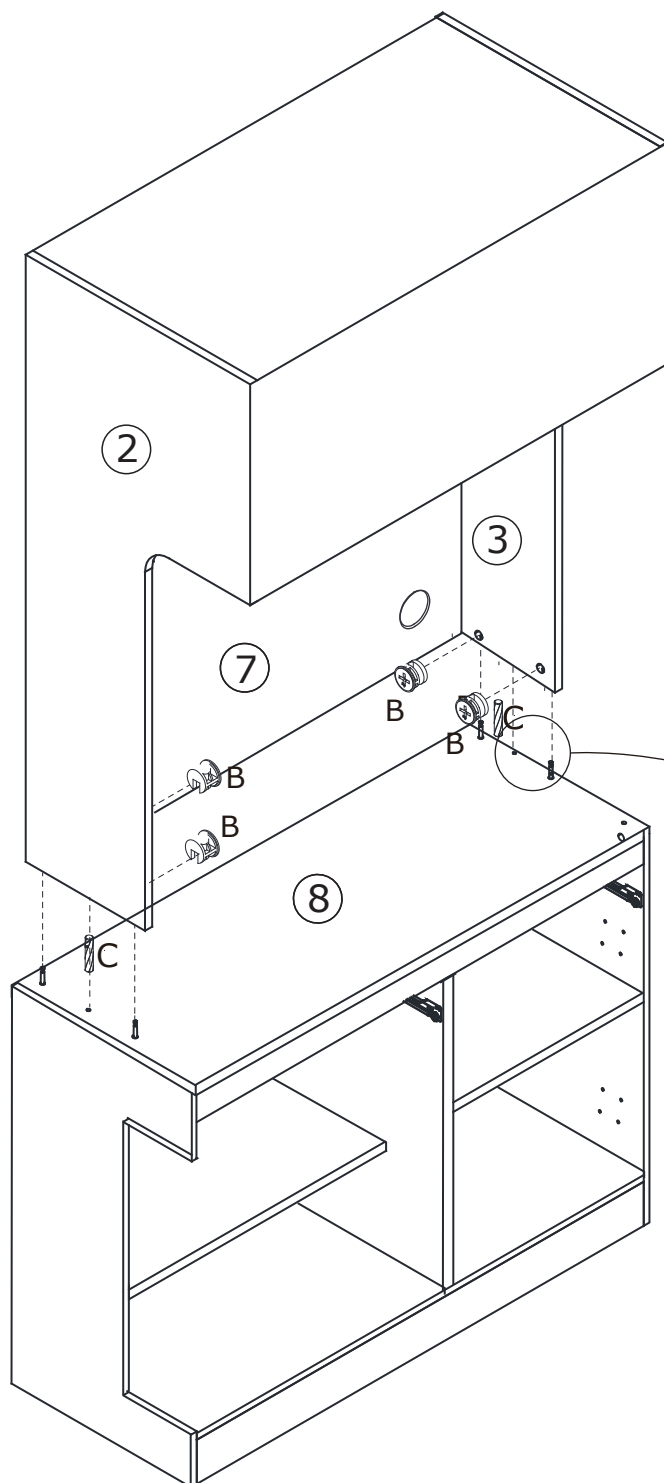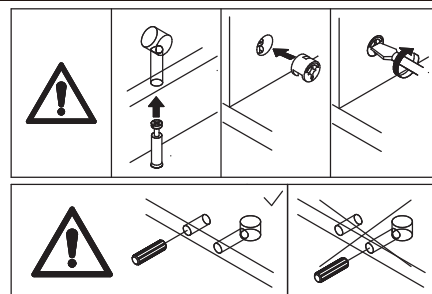


# 26




M x20



 Ø 3 x 10 mm

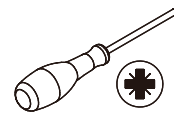


   Reinforce back plate using part(M) as shown.

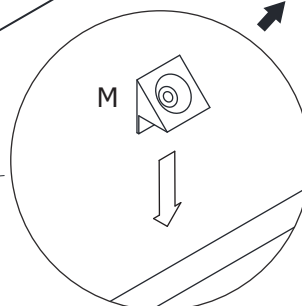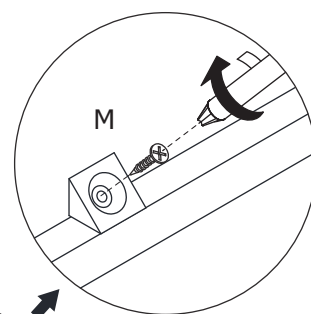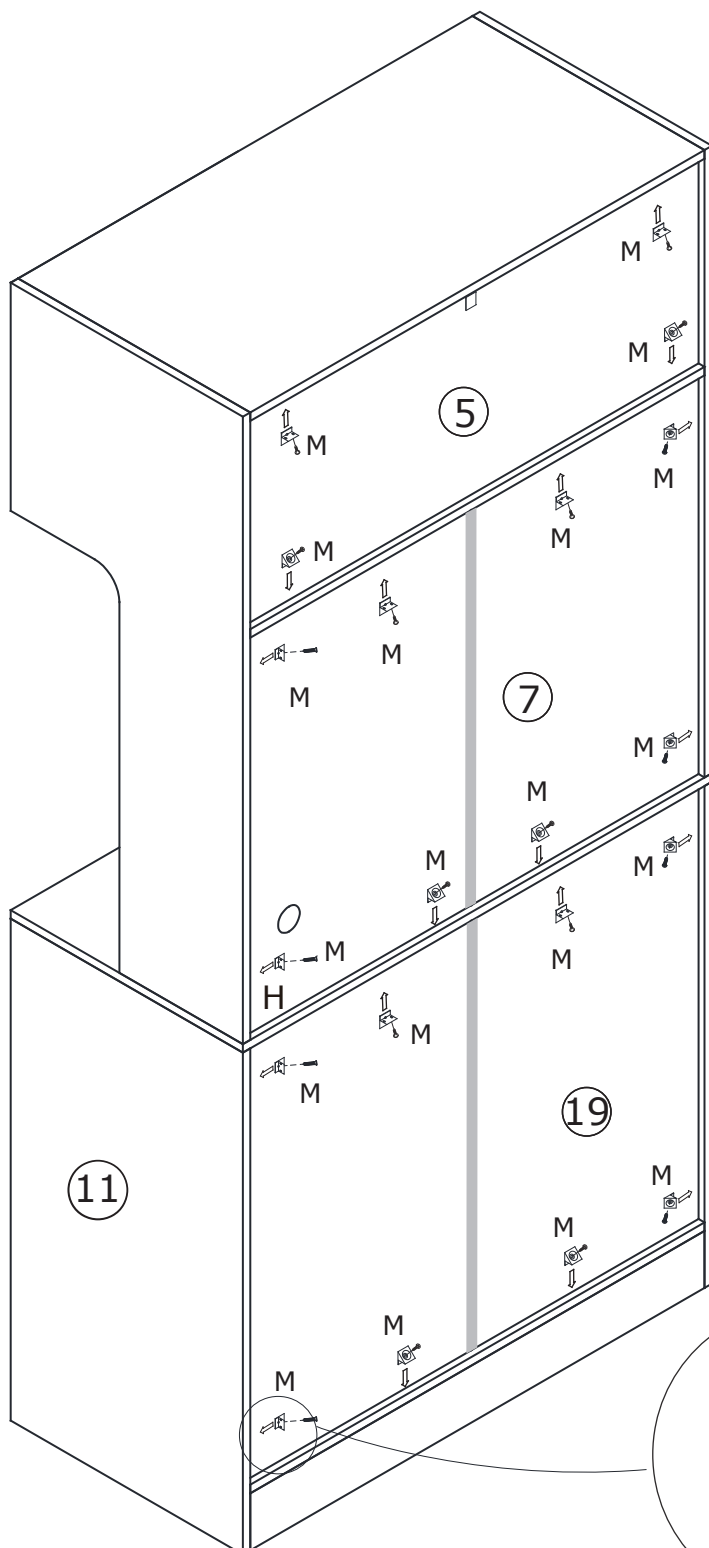

# 27

 A x 12

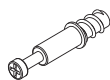

Ø5 x 31 mm

L x 2

 
 


Ø3 x 10 mm

G x 1






Ø3.5 x 14 mm

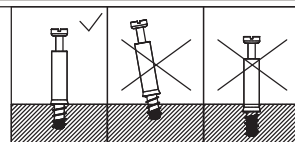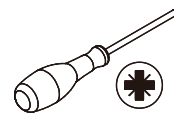

Insert quickfit screw(A) into corresponding holes in plate 26,27 and 30 as shown.

   Fix hinge(L) to plate 26, fix part(G) to plate 30 as shown.

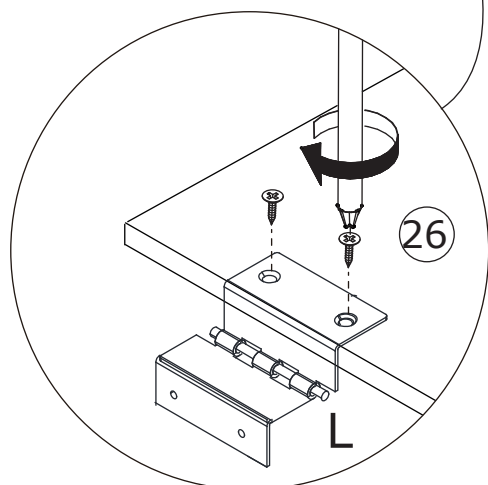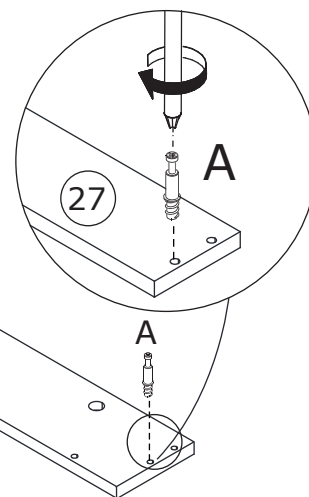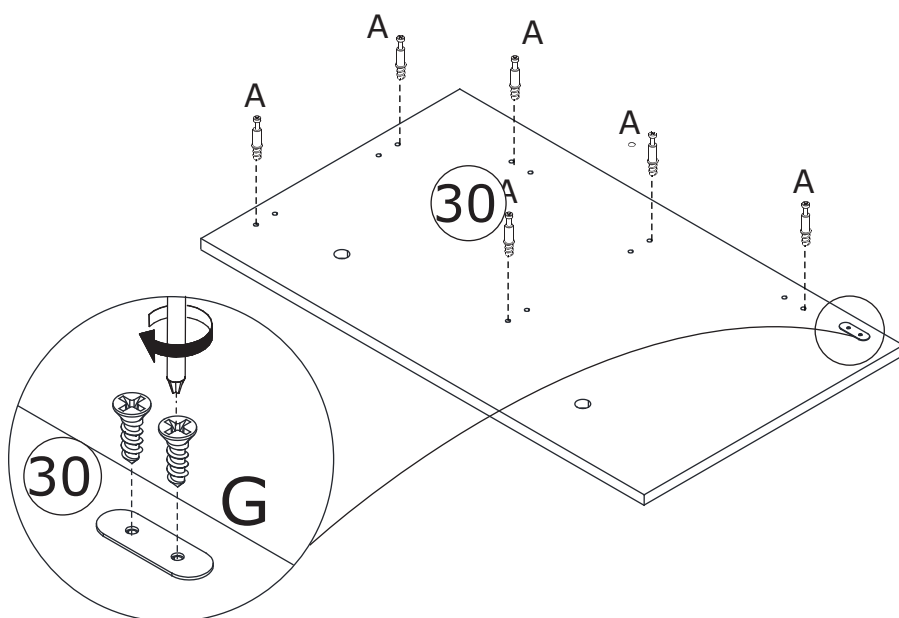



# 28

C x 2

 


Ø 6 x 30 mm

F x 2





Ø 15 x 9.5 mm

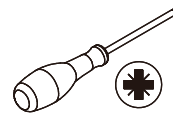

Attach plate 29 to plate 27 with wooden dowel(C), put cam lock(F) into holes in plate 29 and turn clockwise to tighten as shown.

   
 
 
Insert bar 28 into plate 27 as shown.

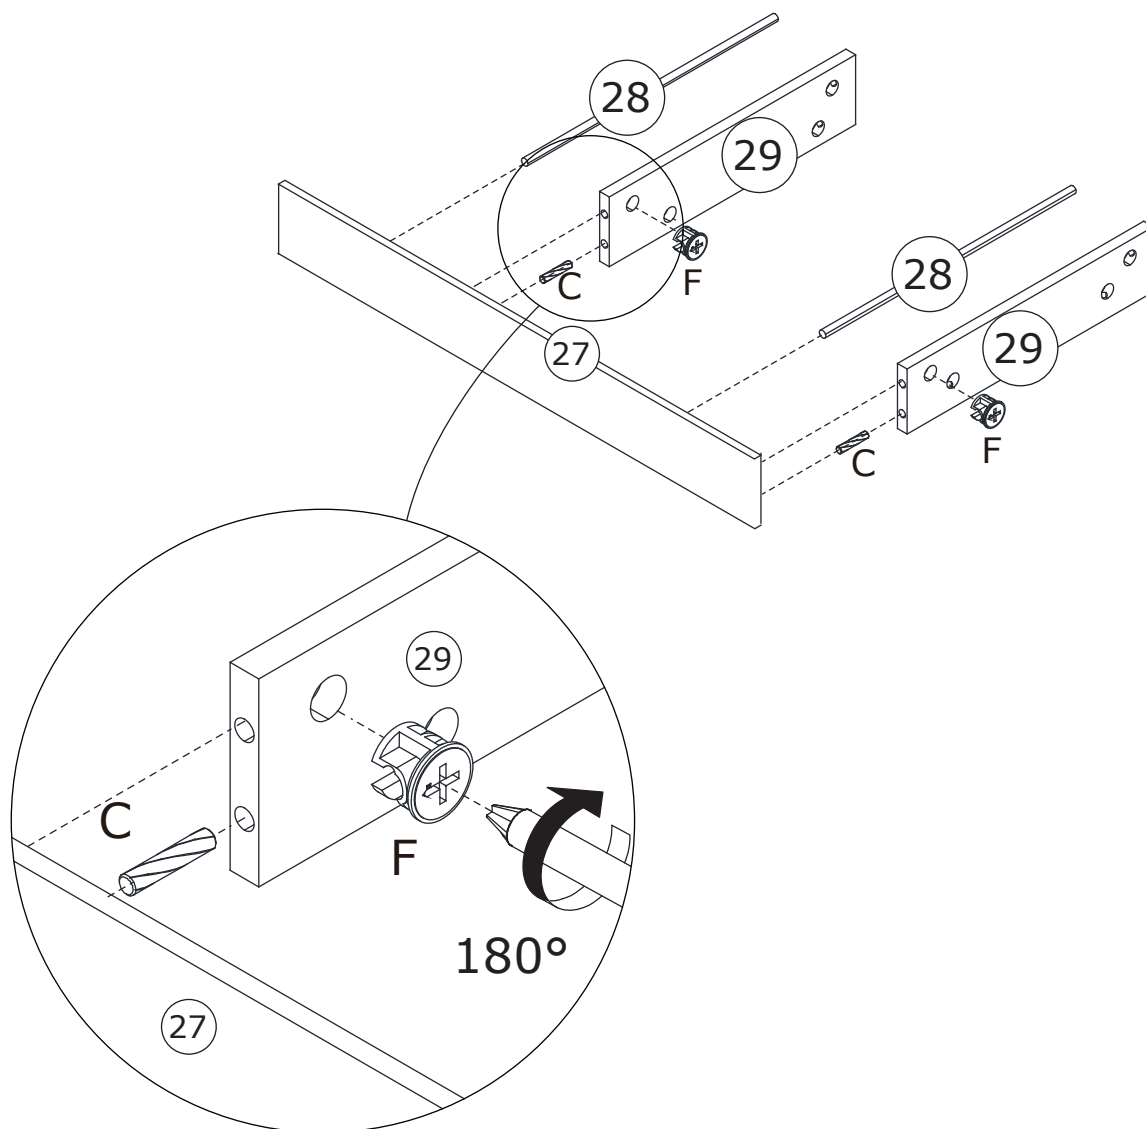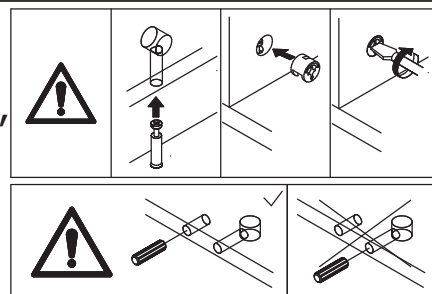




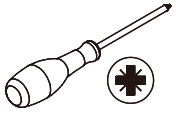
# 29

<p>C x 6</p>  <p>Ø 6 x 30 mm</p>	<p>F x 6</p>  <p>Ø 15 x 9.5 mm</p>	 
-------------------------------------------------------------------------------------------------------------------	---------------------------------------------------------------------------------------------------------------------	-------------------------------------------------------------------------------------------------------------------------------------------------------------------------

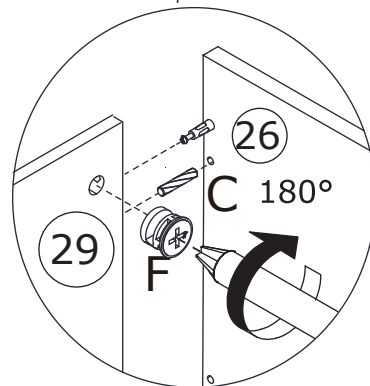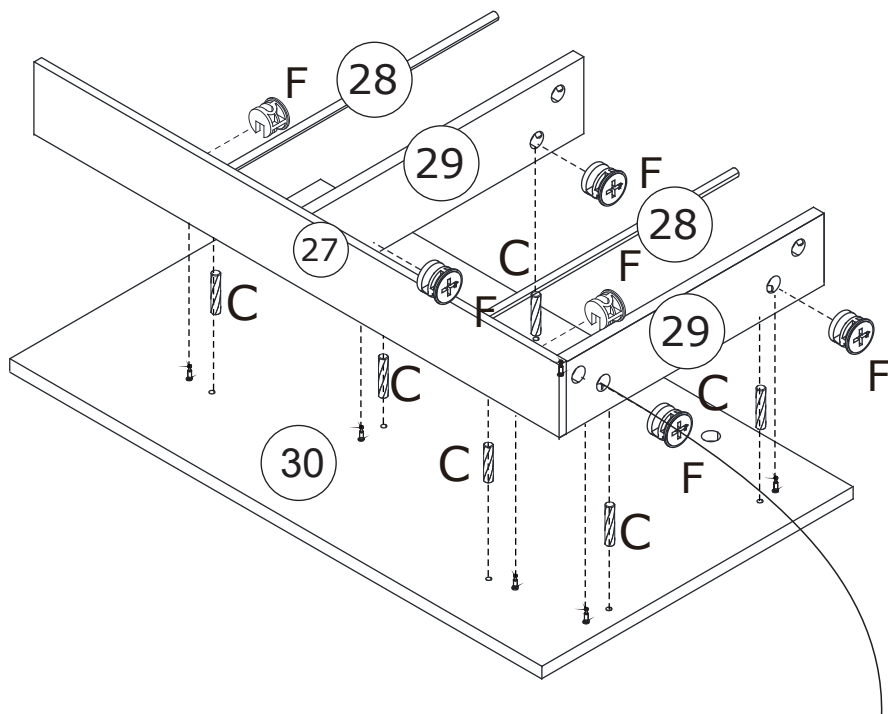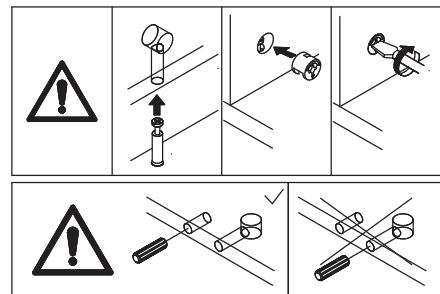Attach the component to plate 30 with wooden dowel(C), put cam lock(F) into holes in plate 27,29 and turn clockwise to tighten as shown.





# 30

  
<p>B x 2</p>  <p>Ø 15 x 11 mm</p>	<p>C x 4</p>  <p>Ø 6 x 30 mm</p>	<p>F x 2</p>  <p>Ø 15 x 9.5 mm</p>	
--------------------------------------------------------------------------------------------------------------------	-------------------------------------------------------------------------------------------------------------------	---------------------------------------------------------------------------------------------------------------------	-------------------------------------------------------------------------------------

Attach plate 26 to plate 30 with wooden dowel(C), put cam lock(B) into holes in plate 30 and turn clockwise to tighten at first.

Connect plate 26 with plate 29 with wooden dowel(C), put cam lock(F) into holes in plate 29 and turn clockwise to tighten a Insert bar 28 into plate 26 as shown.

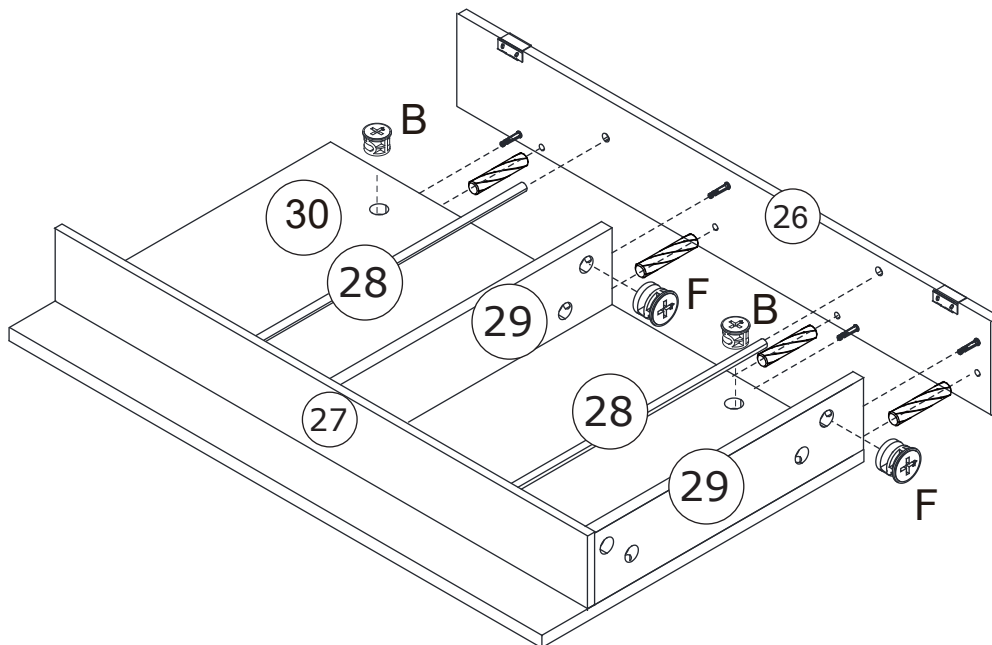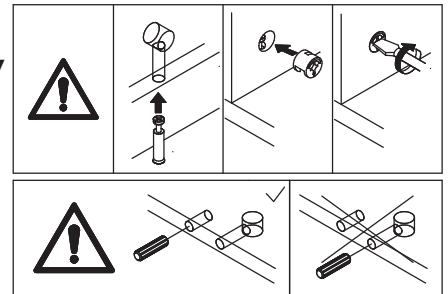


# 31

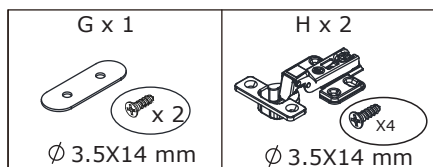 

Fix hinge(H) to plate 16 and fix part(G) as shown.

 ails, slide all drawers.

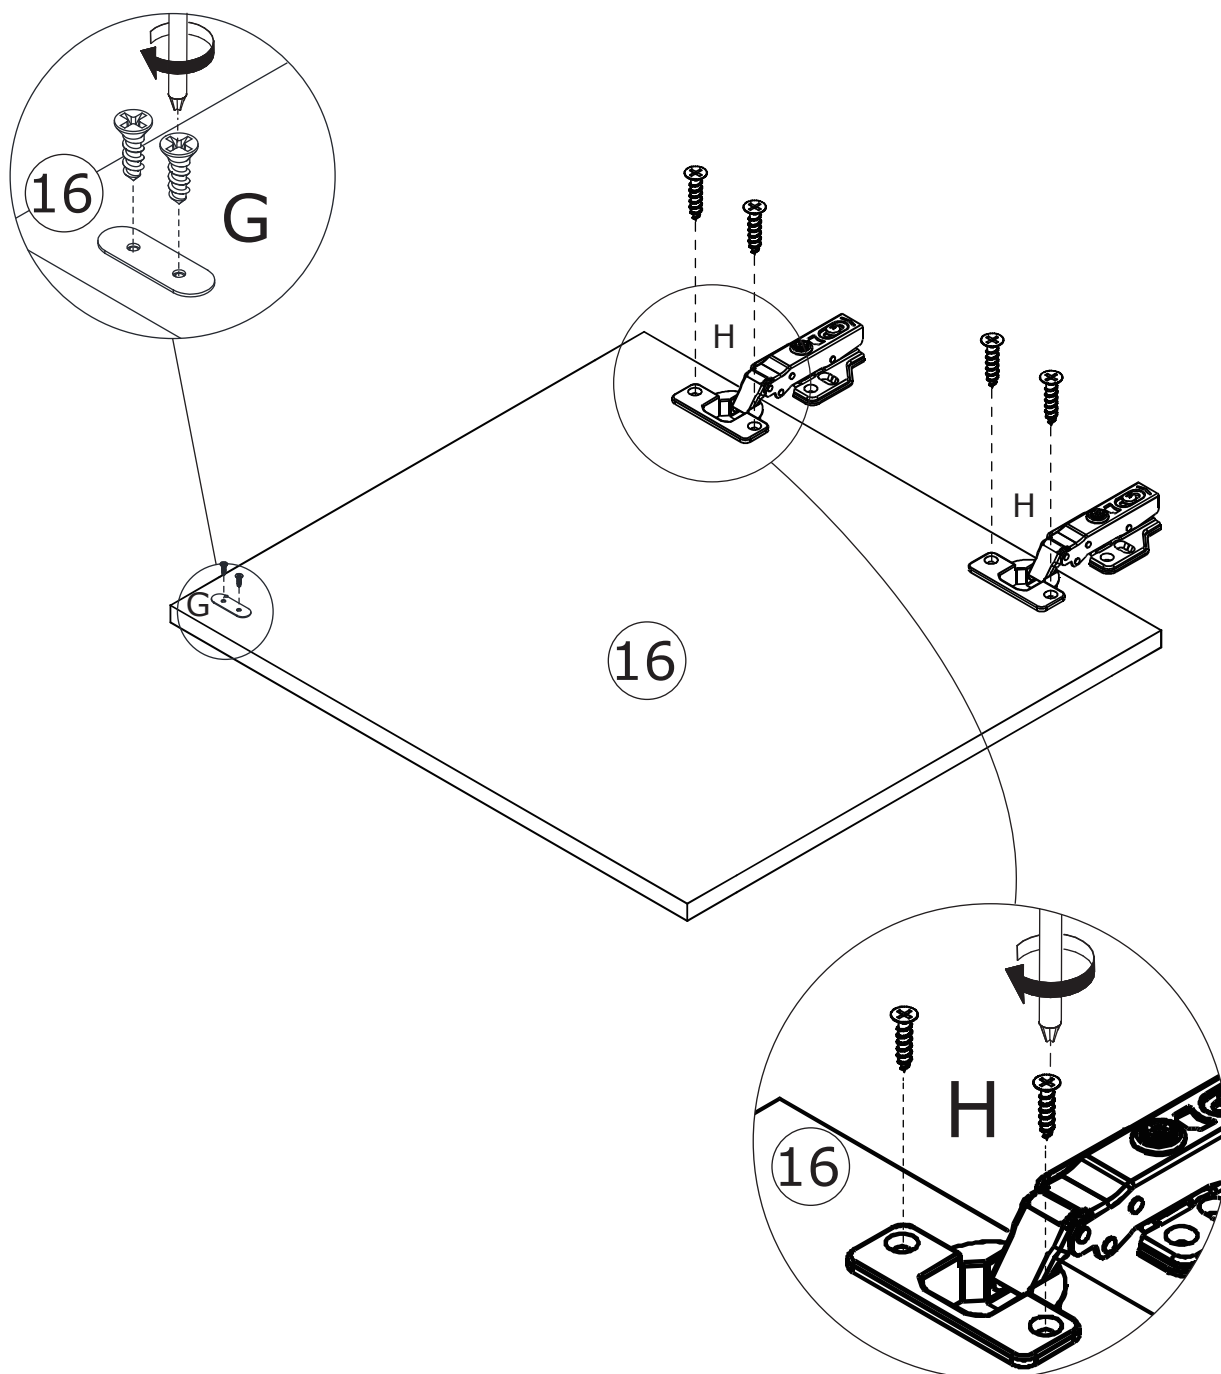


# 32



H x 8



   Ø 3.5X14 mm

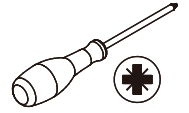


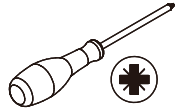 
Attach door plate 16 to plate 11  
by fixing hinge with screw(H) as shown.

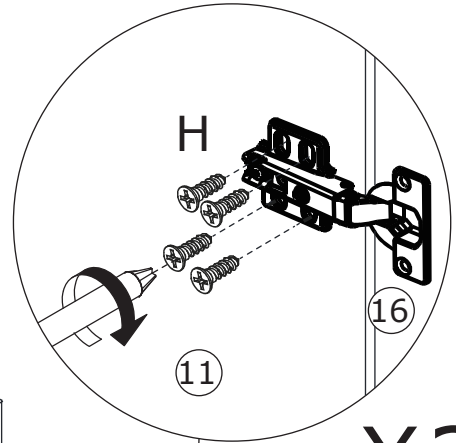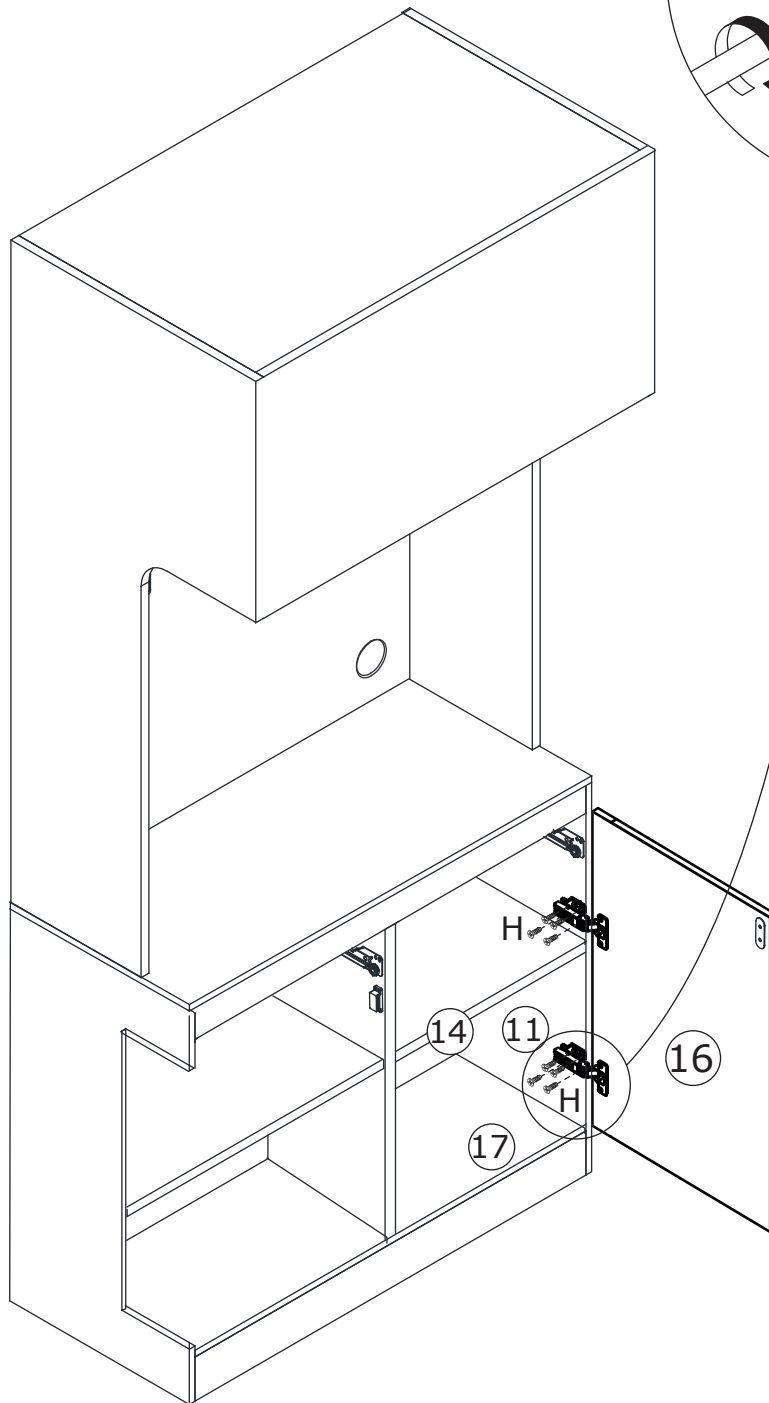


X2

# 33

 L x 4  
  
 Ø3X10 mm



Attach the component to plate 10  
 by fixing hinge using screw(L) as shown.



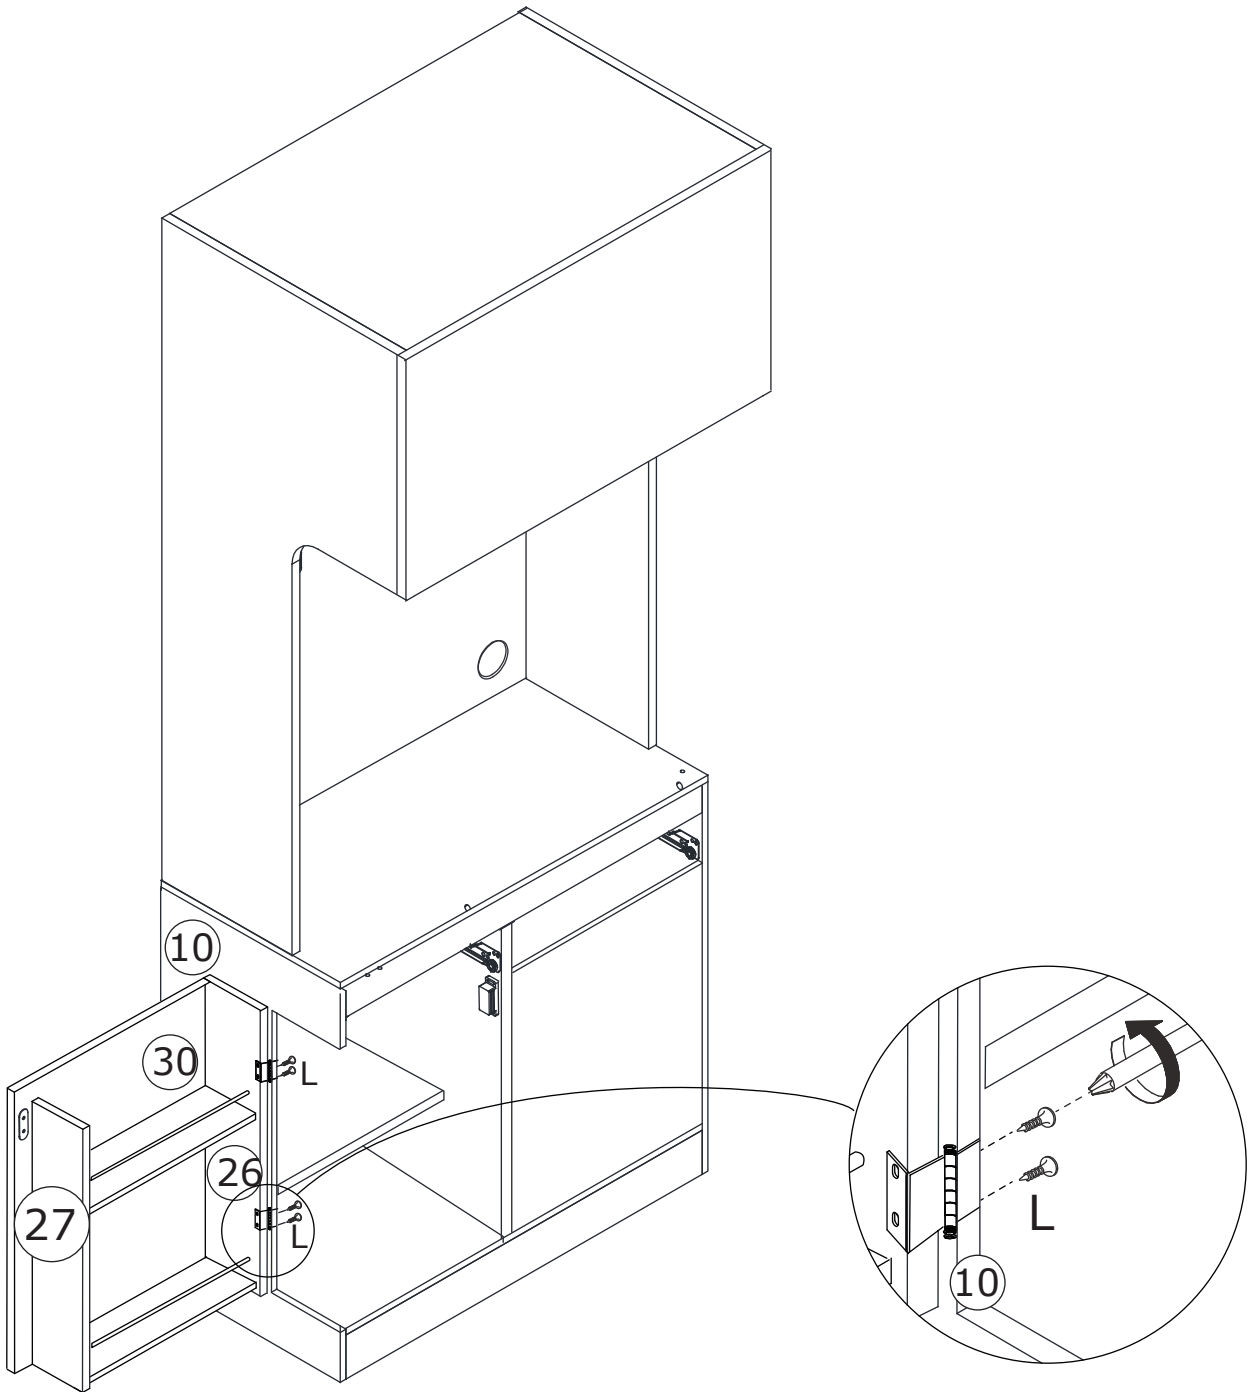


# 34


N x 72



  
 
Align rails, slide drawers.  
Cover cam lock using sticker(N).

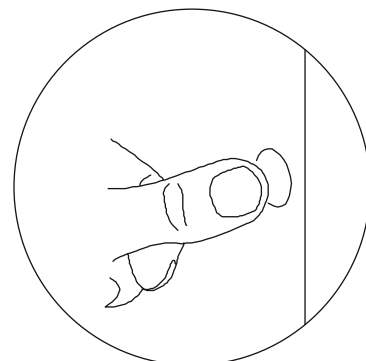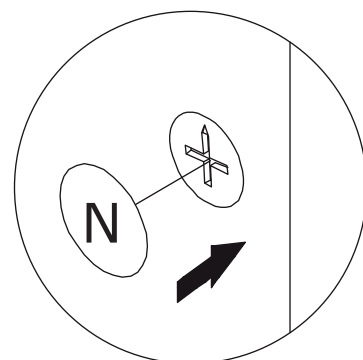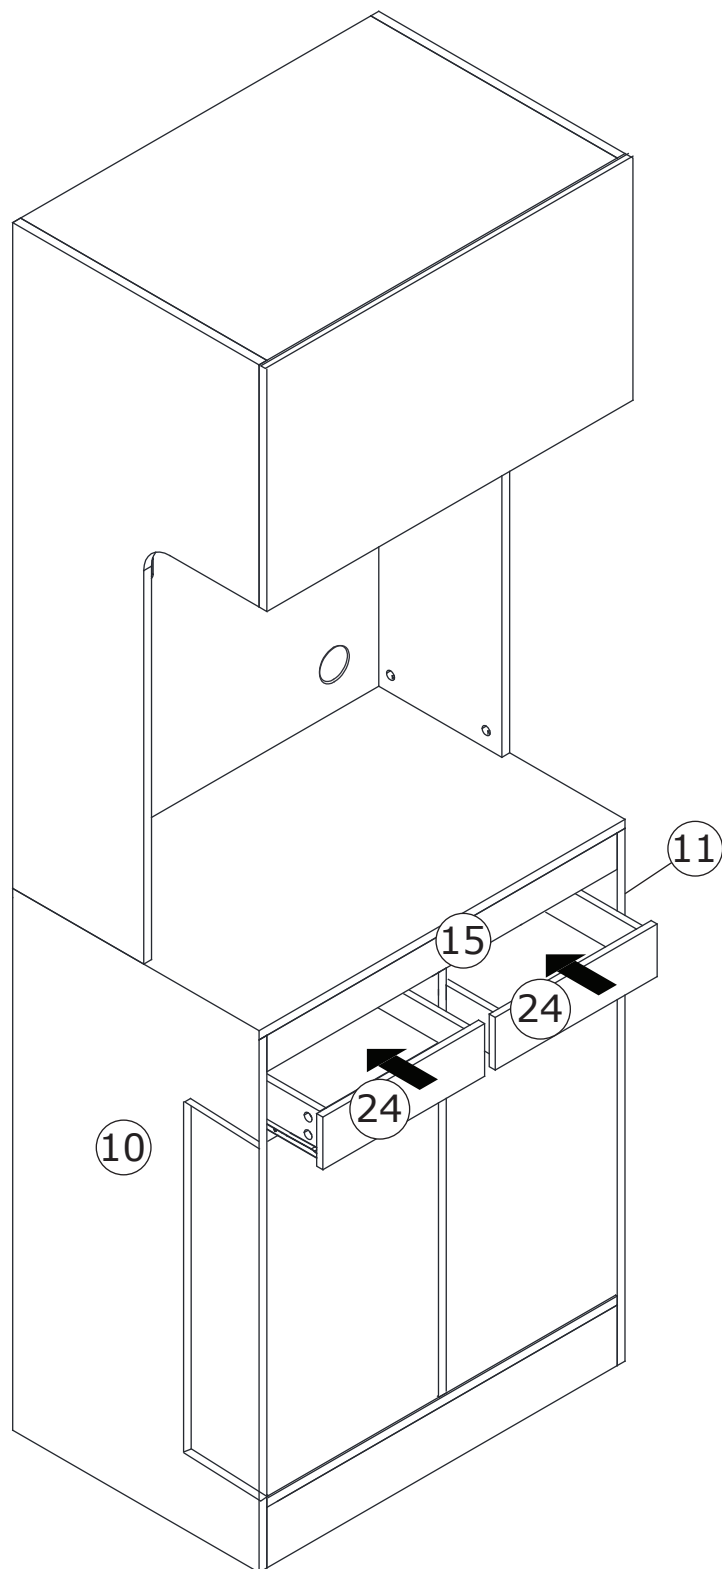

# 35

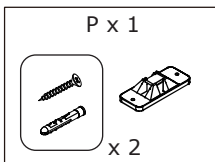 

  Drill holes on your wall, and knock part(P) into.

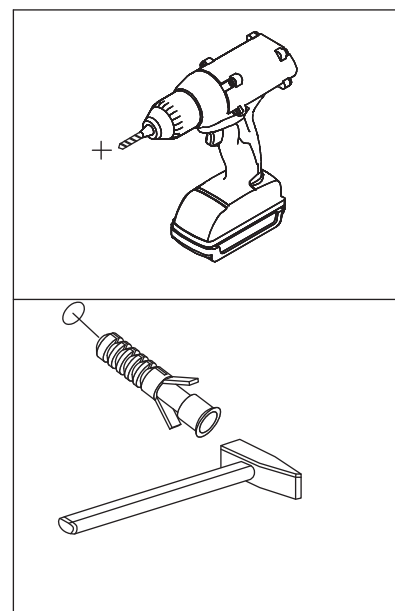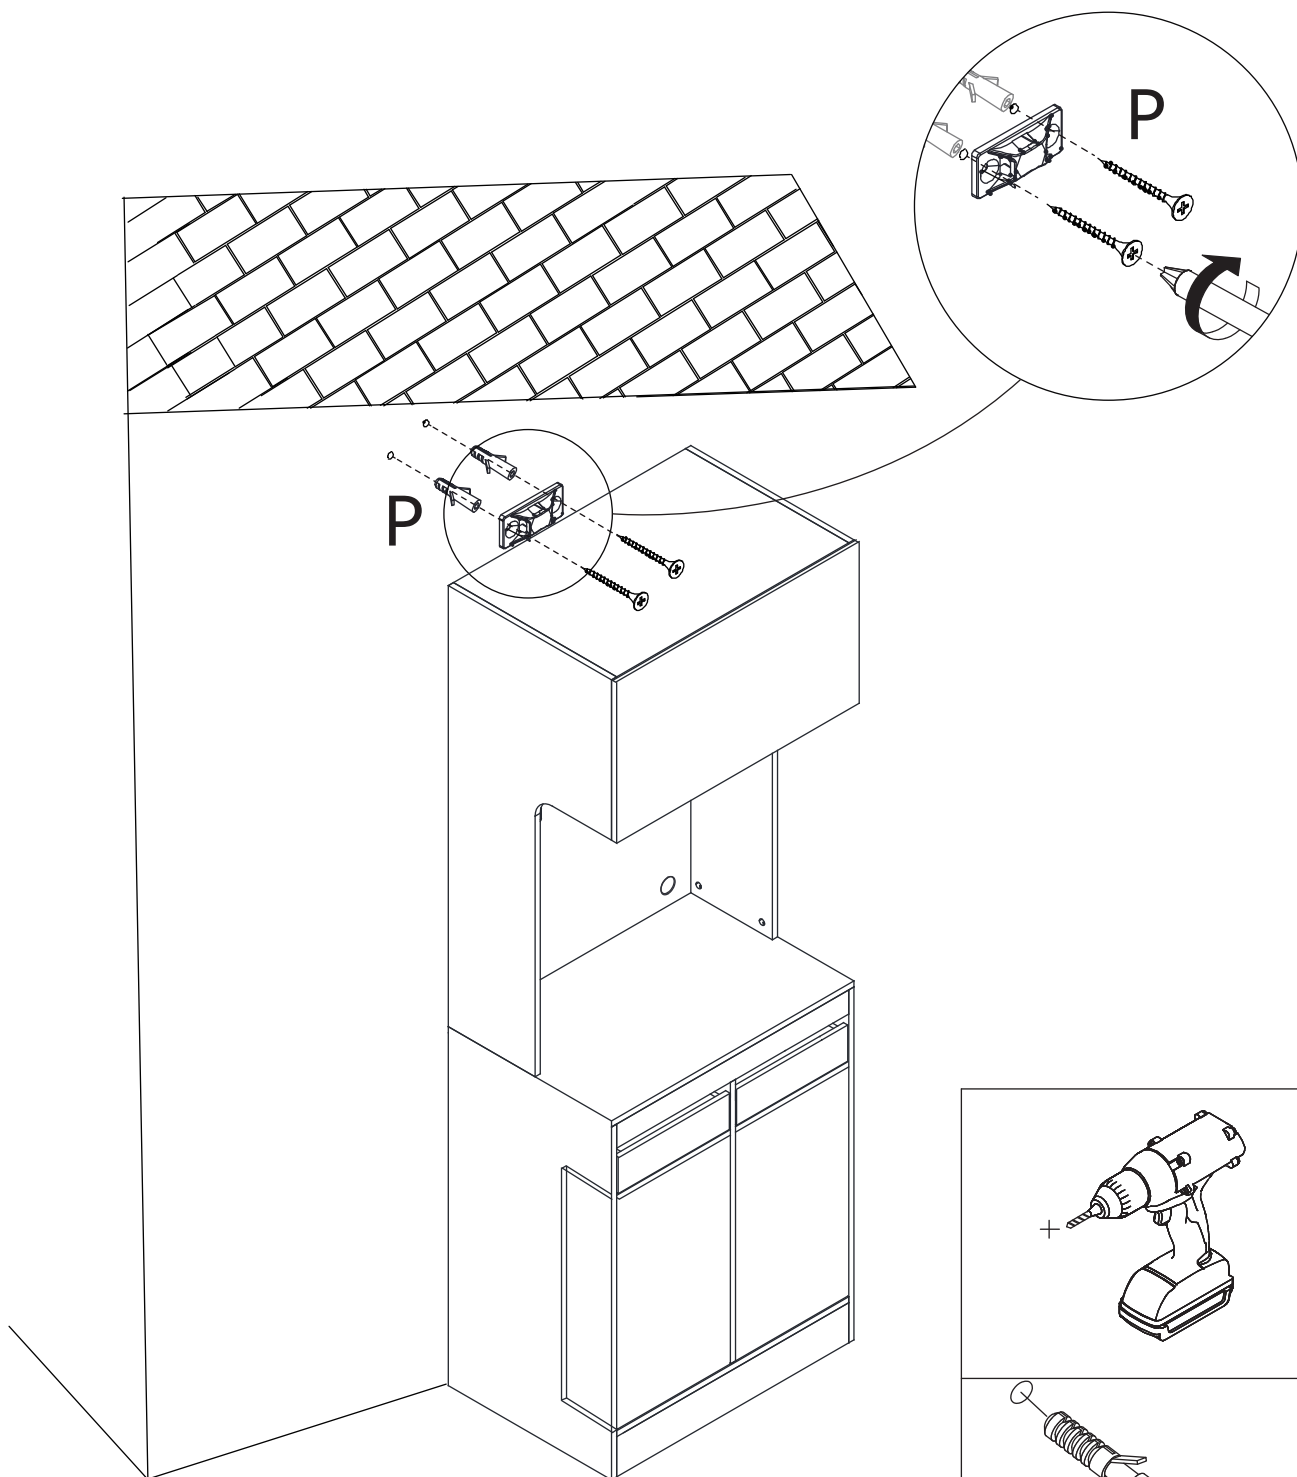









# 36

P x 1















     
 
Install anti-tipping device as shown.

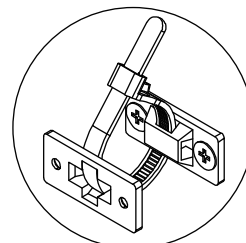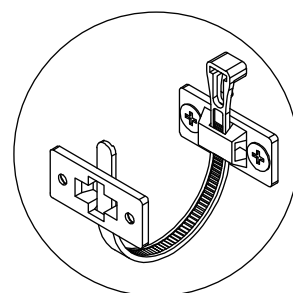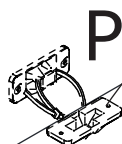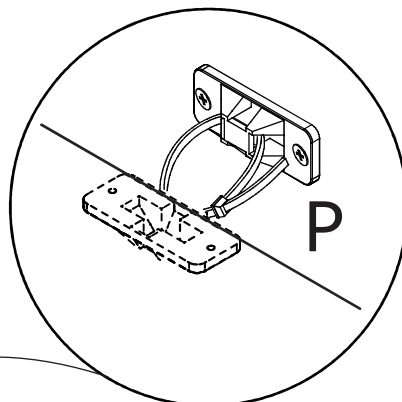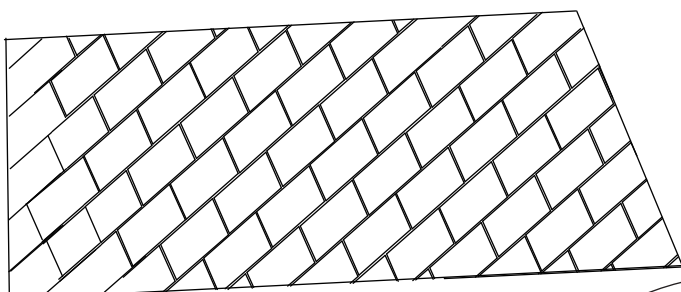

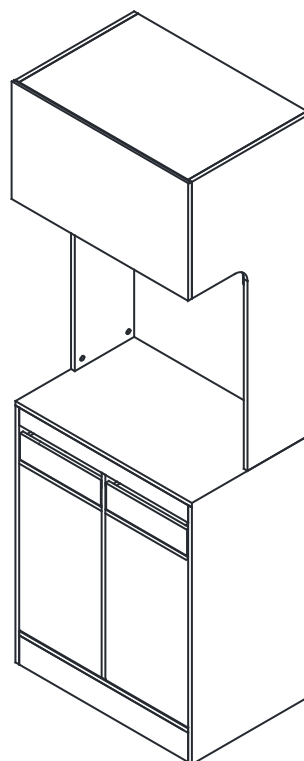

              If there is misalignment after you install,  
adjust the screw to the best condition

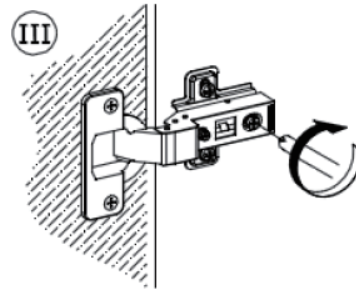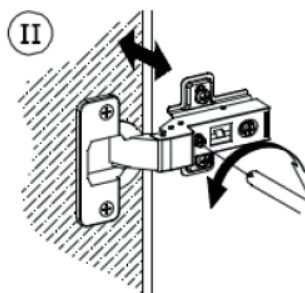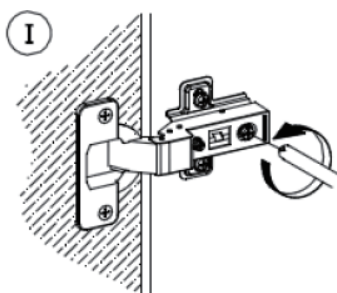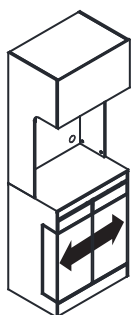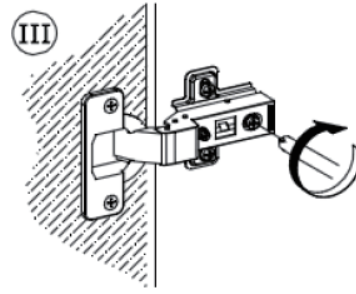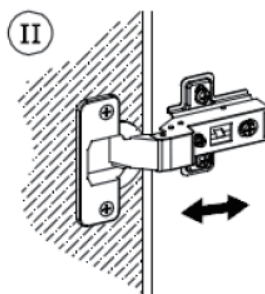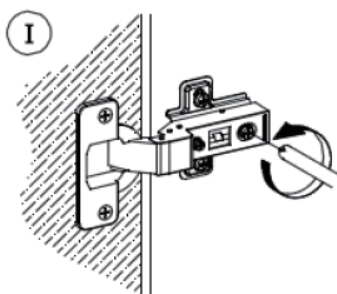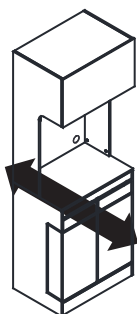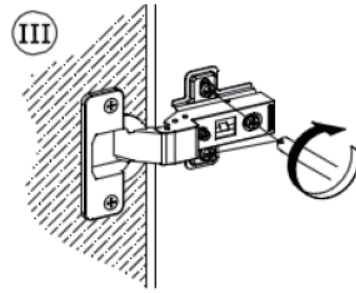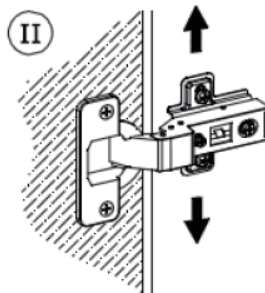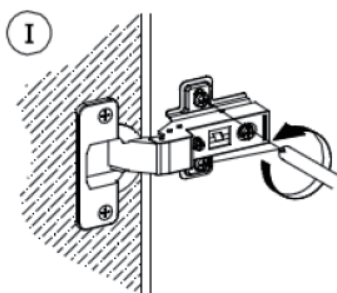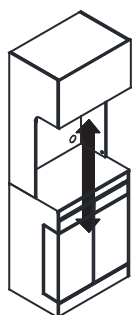

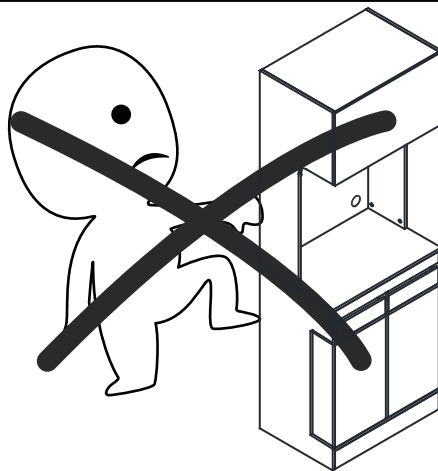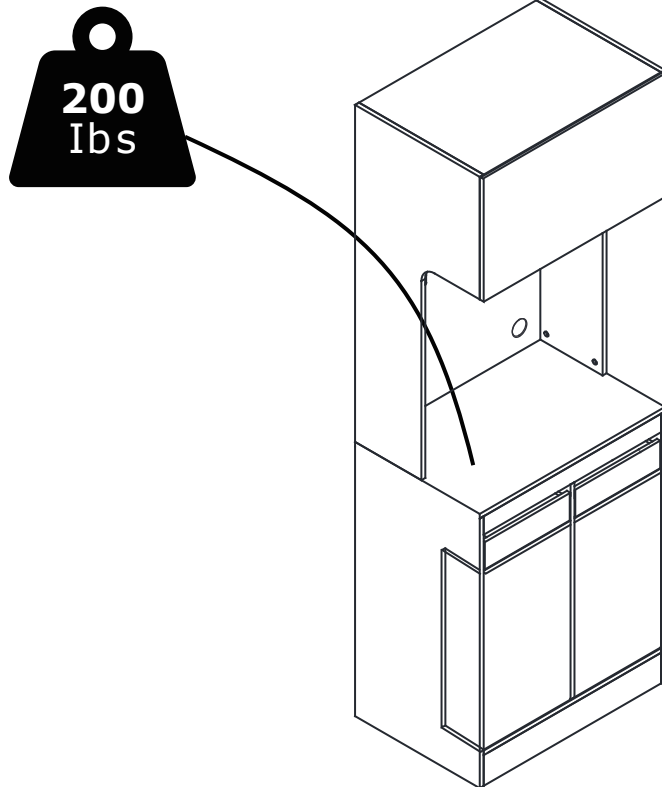

Serious or fatal crushing injuries can occur from furniture tip-over.  
To further reduce the risk of serious injury and death from tip-overs:

Schwere oder tödliche Quetschverletzungen können durch Umkippen von  
Möbeln auftreten.  
Um das Risiko schwerer Verletzungen und Todesfälle durch Umkippen  
weiter zu reduzieren.

# WARRANTY

## WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

## Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

## Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

## The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

# RETURNS

## CHANGED YOUR MIND AND NEED TO RETURN YOUR ITEM?

### PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

### DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

### DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.  
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.

