

User Instructions for Permanent Use Mode

Unlock

- Input password and press “OK”.
- Buzzer gives out a long beep sound and the green indicator light turns on.
- Rotate the knob 90 degrees within 3 seconds to open the lock.
- **Notes:** When the password is wrong, the buzzer beeps 3 times.

Lock

- Rotate the knob back 90 degrees to the lock position.

Change User Password

- Input factory default user password "1234+OK". Press and hold “OK” for 2 seconds until the green indicator light blinks.
- Input new user password + press “OK”. When you hear a long beep sound it means the password has been changed.
- **Note:** The password can consist of 4-15 digits.