


Assembly Instructions

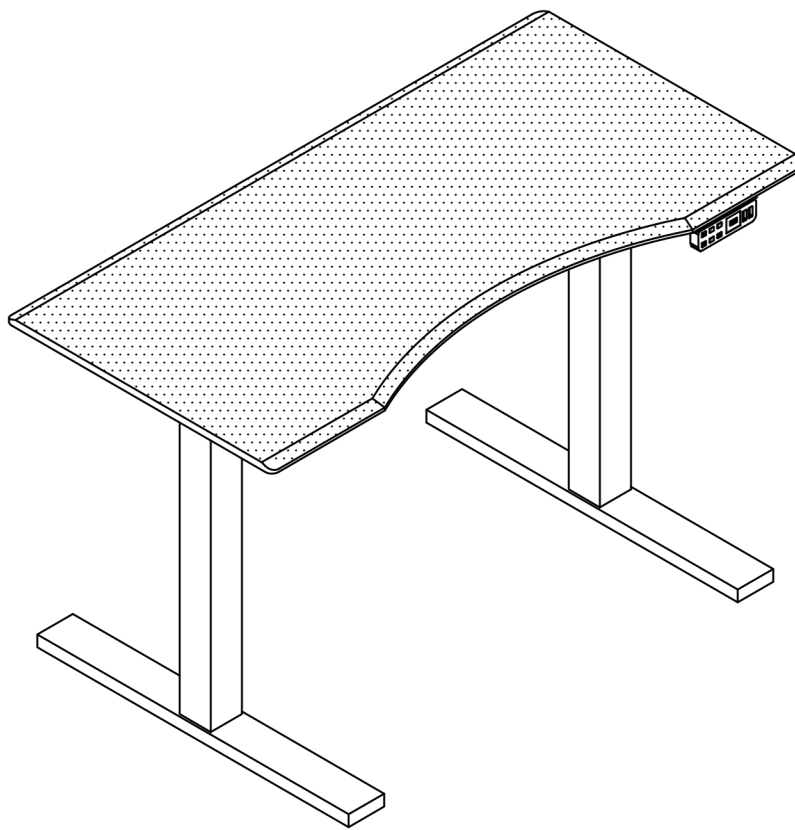

ASSEMBLY RATING

The Assembly Rating is a 5-point system that shows the degree of effort needed in assembling a specific product (with 1 being easy and 5 being difficult). For some products, two persons are recommended.

 
EASY



DIFFICULT

Tools Required For Assembly:

Allen Wrench



(Included)

Wrench



(Included)

Phillips Screwdriver



(Not Included)




2 PERSONS RECOMMENDED


ASSEMBLY & CARE ADVICE

FOR YOUR FURNITURE TO LAST, CORRECT ASSEMBLY AND PROPER MAINTENANCE ARE NECESSARY. PLEASE FOLLOW THE INFORMATION PROVIDED BELOW TO FULLY ENJOY YOUR FURNITURE.


BASIC ASSEMBLY TECHNIQUES

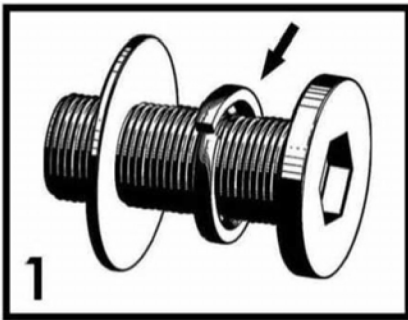


When lock or spring washer is used in an assembly, please make sure the lock or spring washer is placed between the larger flat washer and the head of the screw or bolt.

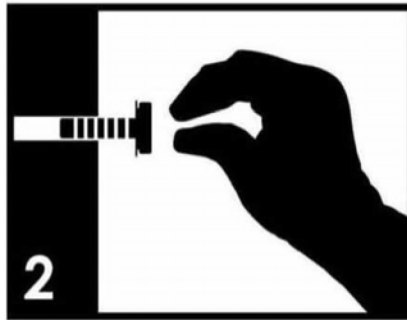


Position each part correctly and insert screws or bolts into their respective holes by hand tighten or using the proper hand tool. Only tighten when step is completed or when instructed to do so.

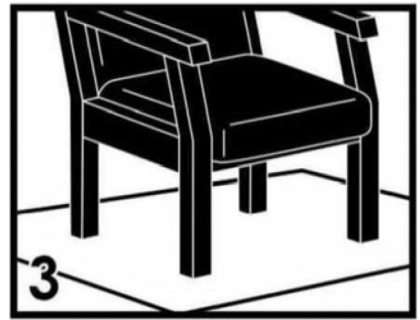


Use cardboard or carpet area when assembling furniture to prevent scratches. Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

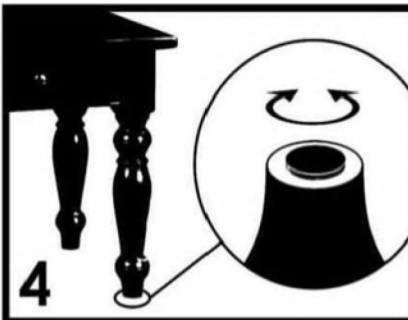

Some furniture comes with height adjustment knobs underneath each leg. To lower or to raise each leg, you need to turn clockwise or counterclockwise, respectively.

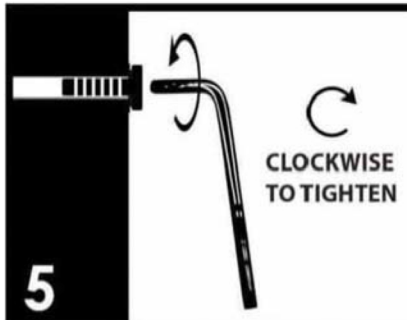

Make sure all parts are properly aligned, then use the appropriate hand tool to completely tighten the bolts or screws. Do not use power tools and do not overtighten.

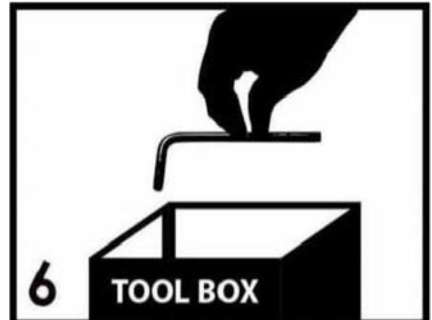


Save the instructions and store the Allen wrench or any supplied tool for later maintenance. After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.



FAILURE TO FOLLOW THE GUIDELINES ABOVE MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.

Weight capacity 150 LBS

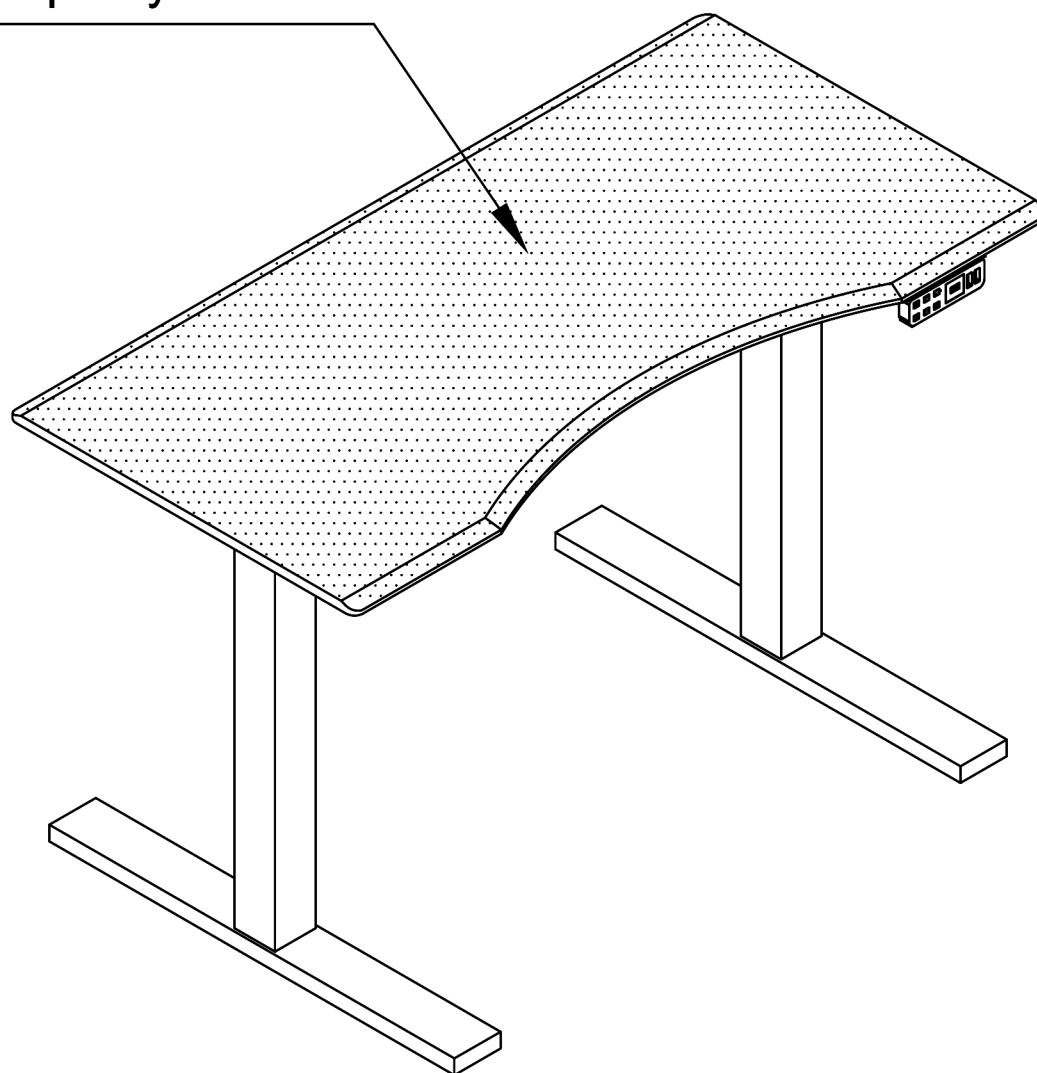

GL2 Series

Assembly Instruction:



Warning

Please read the assembly Instructions carefully before starting to assemble.


Tighten all screws before use. Ensure cables move smoothly.

Properly connect the electrical plug to the socket.

Inappropriate use can cause damage to the products.


Don't lay beneath the table, sit or stand on the table top.

E806 operate instruction:

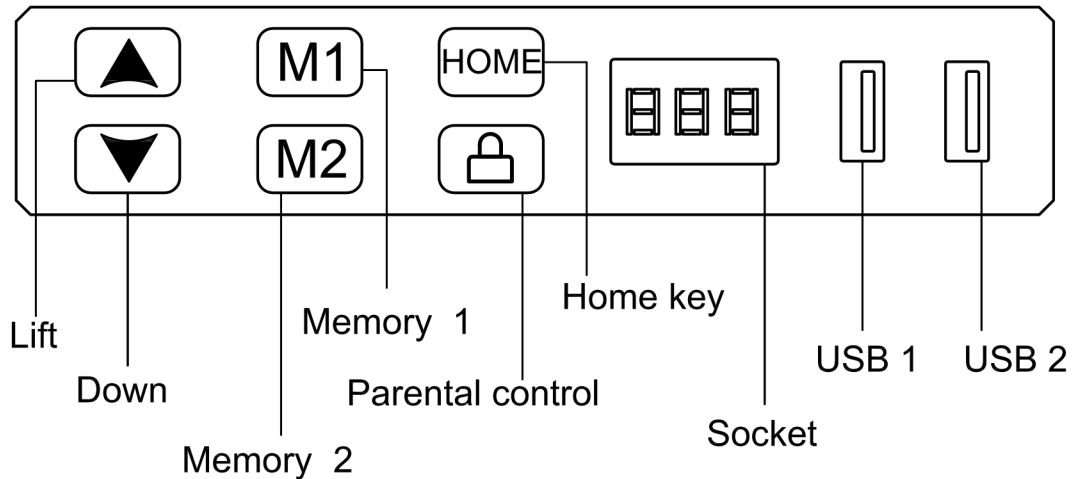

Plug in the power that shows the current location of 10 seconds, then screen turn black. Press any key to arouse the screen for 10 seconds. In the black screen state, press any key to arouse the screen and extend it for 10s.


1. Press the key show up to run
2. Press the key show down to run;
3. Press the key in short time (1s), the screen shows flashing, at the time, press the key or can keep the current position to the fixed key .
4.
 - ◇ Press the key first once for short time (1s) , after the screen turn black about 0.1s then show the remember position. Press the key for long time about 1s then run up follow the setting position.
 - ◇ When the product at the memory mode (the display flashes) press 1 key, then the current location can remember the position, At the same time the buzzer drips.
5.
 - Press the key first once for short time (1s), after the screen turn black about 0.1s then show the remember position. Press the key for long time about 1s then run up follow the setting position.
 - When the product is already in memory mode (the display flashes).Press the 2 key , can remember the current position to position 1, at the same time the buzzer drips.
6.
 - Press the key above 1s, the motor turns to the bottom of the position, and the program displays initialization .
 - When the exception occurs, and the key can't operate normally, the buzzer display two drips.
7. 2 USB can provide 2.1A
- NOTE:
 1. After use the desk , the children should cut off the power in case for the rain day
 2. Electric hardware frame can adjust accord different height;
 3. The desk is painted, in case of children to use the metal damage the desk's painting

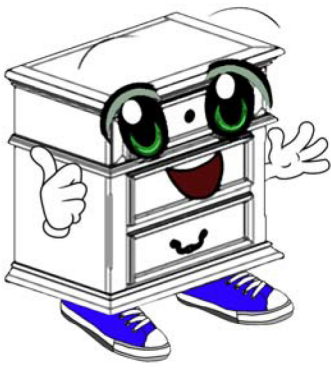


Before you begin, please read Page 2 of "Assembly and Care Advice".

And remember, do not tighten until each step is completed or instructed.


Parts List

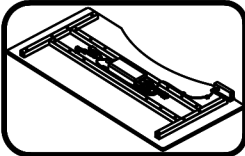


#1 x 1pc
Desk top

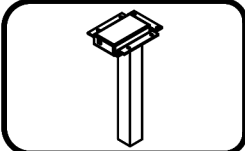

#2 x 2pcs
Support leg

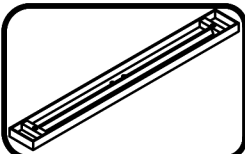


#3 x 2pcs
Bottom tube

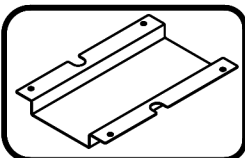

#4 x 2pcs
Metal plate cover

 Hardware List



#A x 12pcs
BOLT 1/4"x 3/4"



#B x 8pcs
BOLT 5/16"x7/8"



#C x 8pcs
BOLT 3/16"x1/2"



#D x 12pcs
WASHER ϕ 16mm



#E x 8pcs
WASHER ϕ 18mm



#F x 1pc
ALLEN WRENCH 4 X 4mm



#G x 1pc
ALLEN WRENCH 5 X 5mm





ASSEMBLY




Do not fully tighten all bolts until assembly is complete. This will help all parts to assemble properly.


#A		12pcs
#D		12pcs
#F		

Prepare 12 bolts assembly by inserting washer (#D) onto bolts (#A). Align support legs (#2) to the holes of the desk top (#1). Secure with bolts (#A).

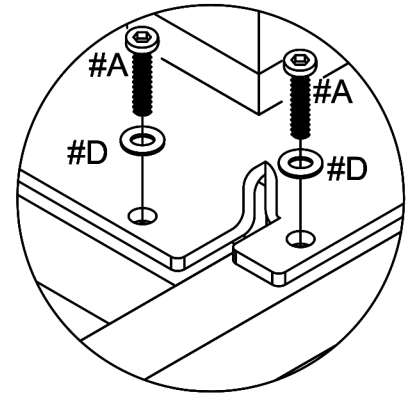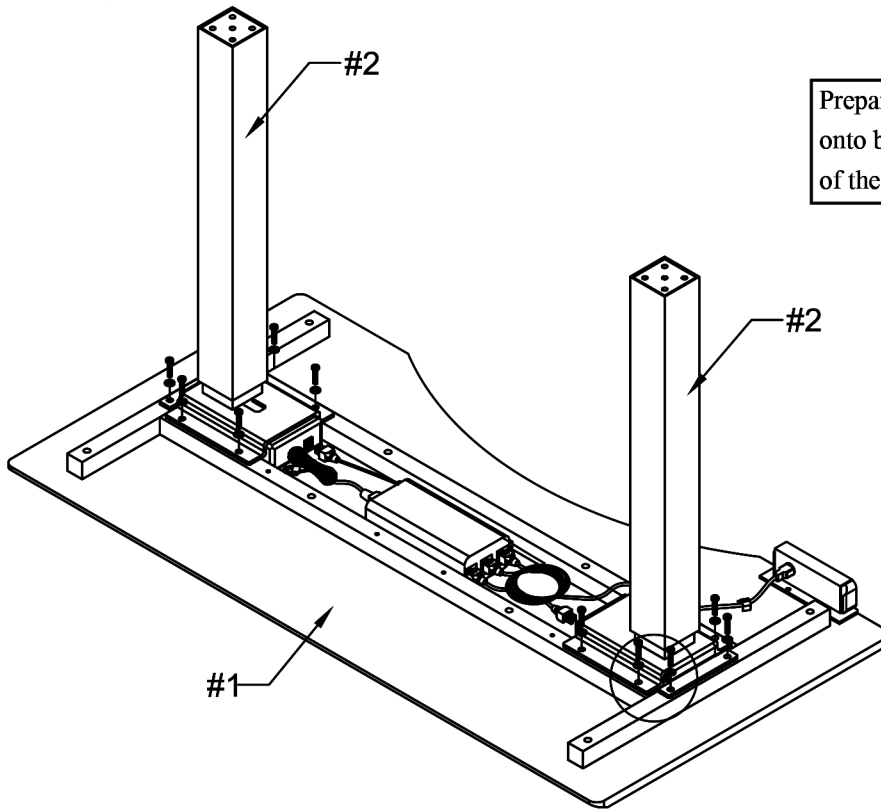


Connect the power cords to the legs (#2).

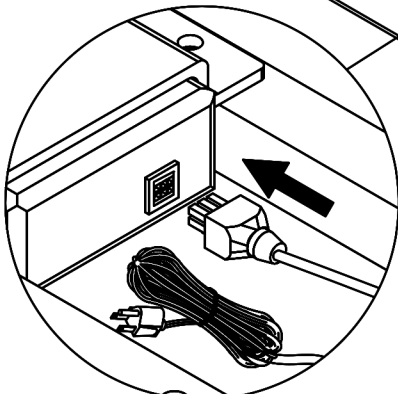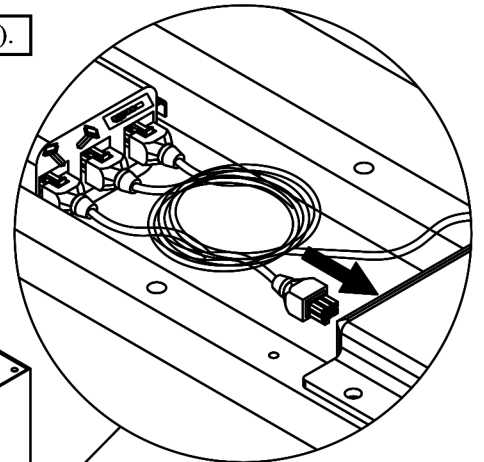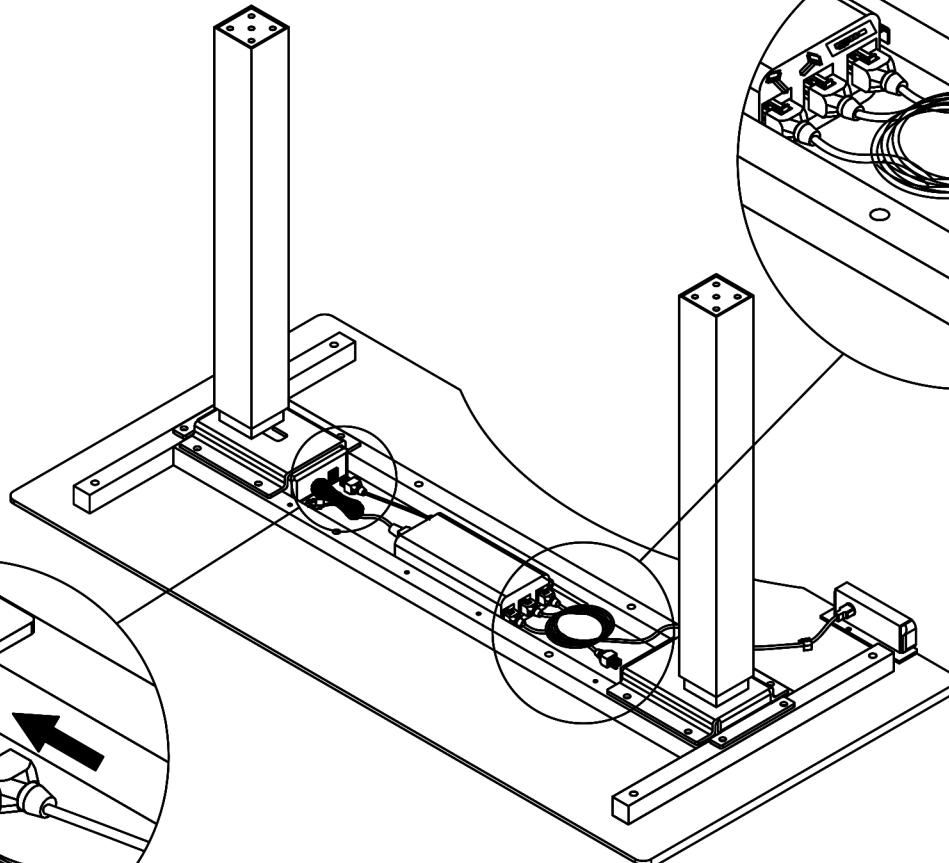

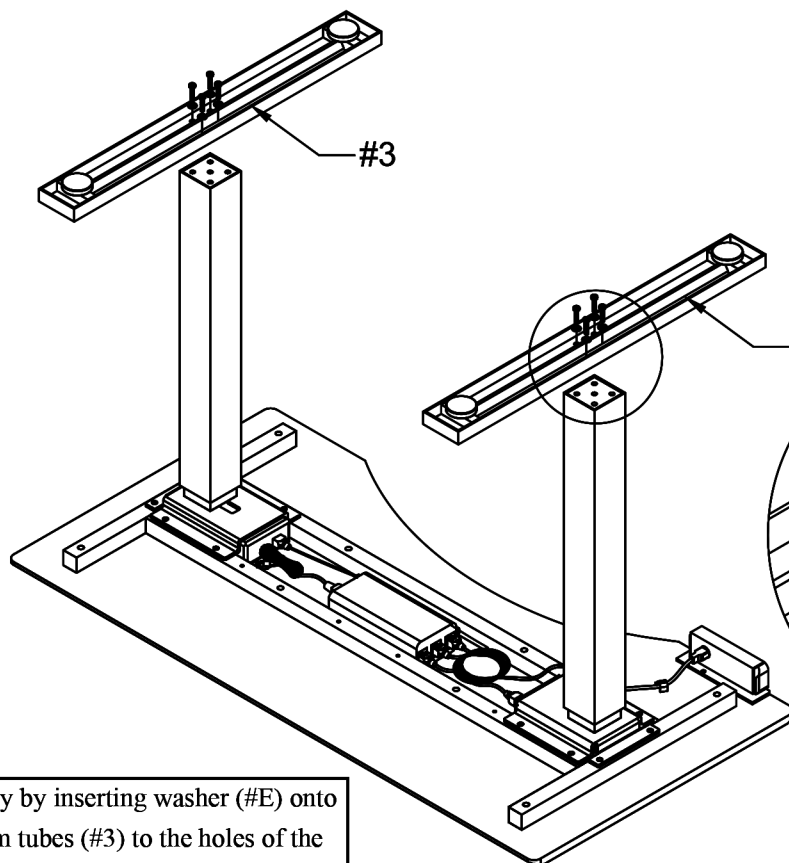

- | | | |
|----|--|------|
| #B | | 8pcs |
| #E | | 8pcs |
| #G | | |

Prepare 8 bolts assembly by inserting washer (#E) onto bolts (#B). Align bottom tubes (#3) to the holes of the support legs (#2). Secure with bolts (#B).

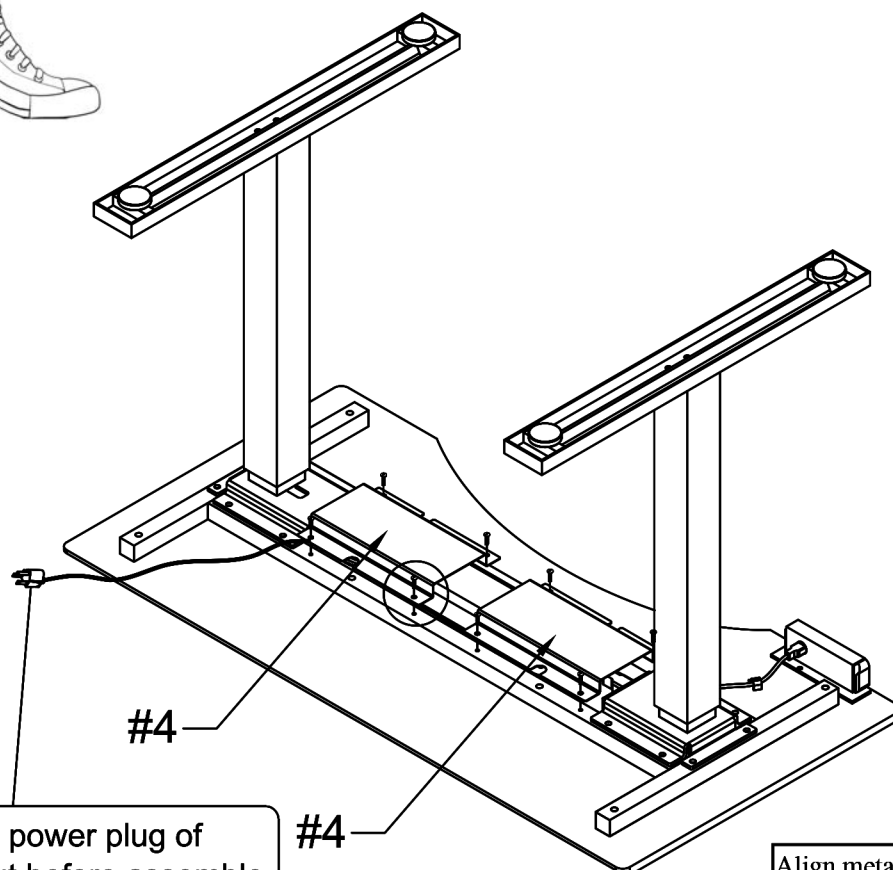



- | | | |
|----|--|------|
| #C | | 8pcs |
|----|--|------|

Get the power plug of outlet out before assemble the Metal plate cover

Align metal plate covers (#4) to the holes of the desk top (#1). Secure with bolts (#C).




Up and down arrow to lift or decline the height of the desk.

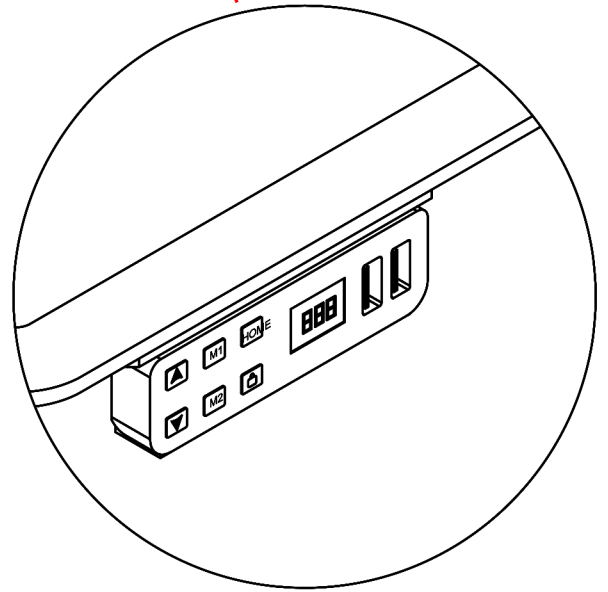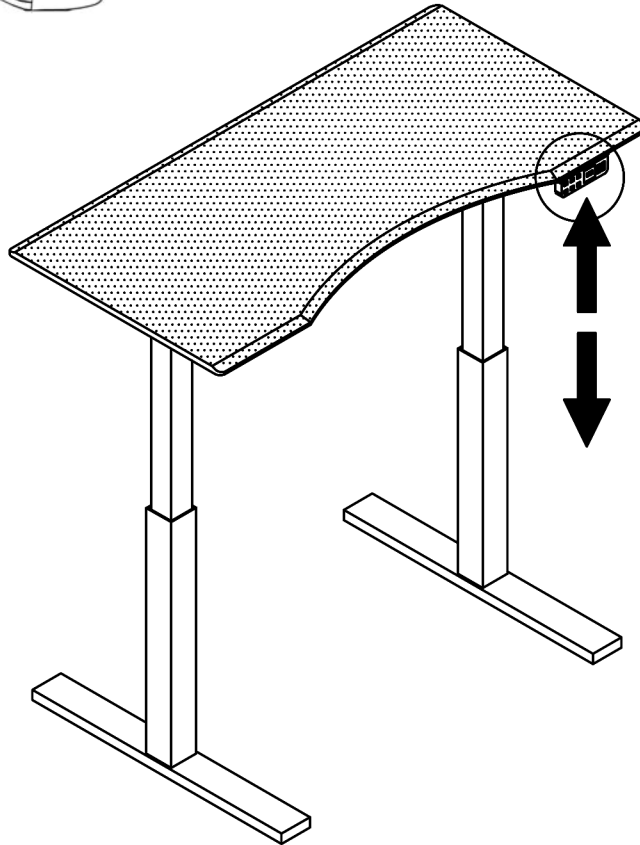

NOTE:

Power supply plug has locking structure, can't forcibly pull out. Please press the button, then pull out the plug.

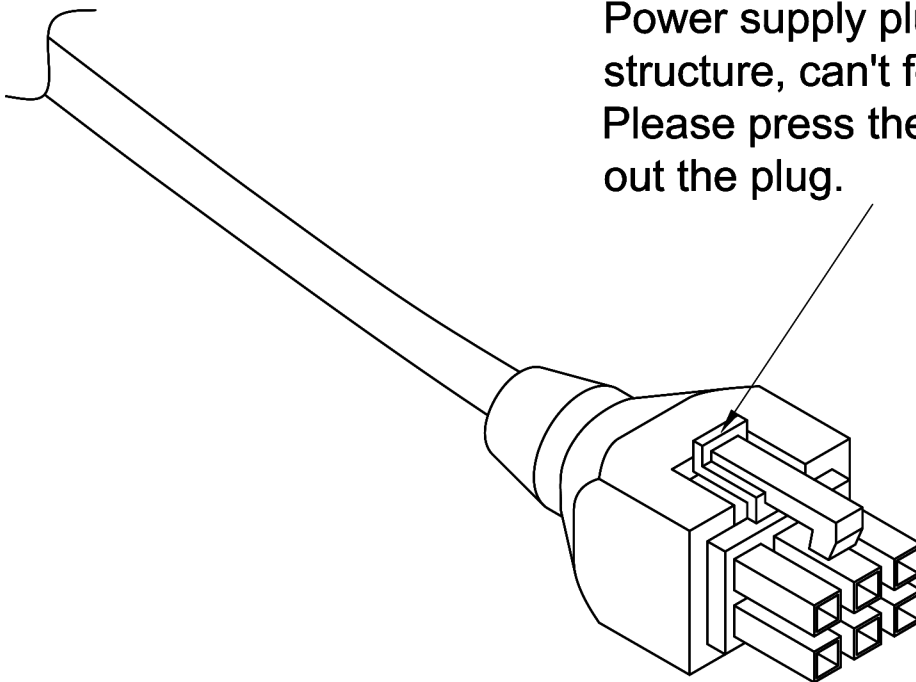

GL2 Parameter elucidation

Electrical control system:

- Input : 100-240V AC 50/60Hz
- Output : DC 29V
- Rated working time: S2 /18 2min ON 18min

Technical parameters

- Drive form : DC Drive.
- Push force: 850N
- Stroke : 665mm~1165mm
- Speed : $18 \pm 10\%$ mm/s.

Work environment

- ★ Temperature : $-25 \sim +40^{\circ}$.
- ★ Relative humidity : 20% ~ 80%.
- ★ Protection grade : IP44.
- ★ Mode of operation: Discontinuous working,
Work In Intervals of 2 minutes or more.

Security Warning



Adult operate only. Children should be carefully supervised by Adult.