 
 
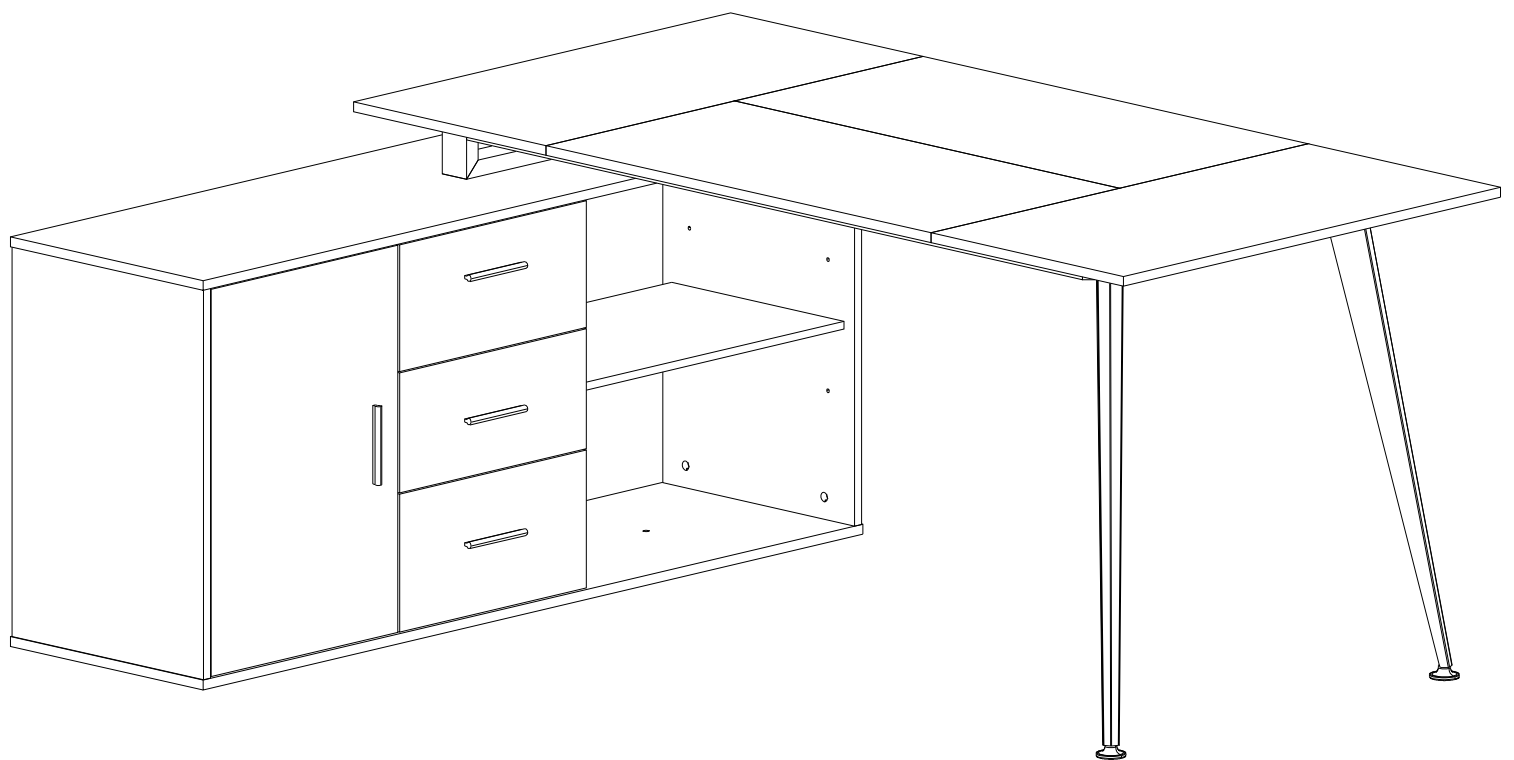 


 
 
L-Shaped Desk

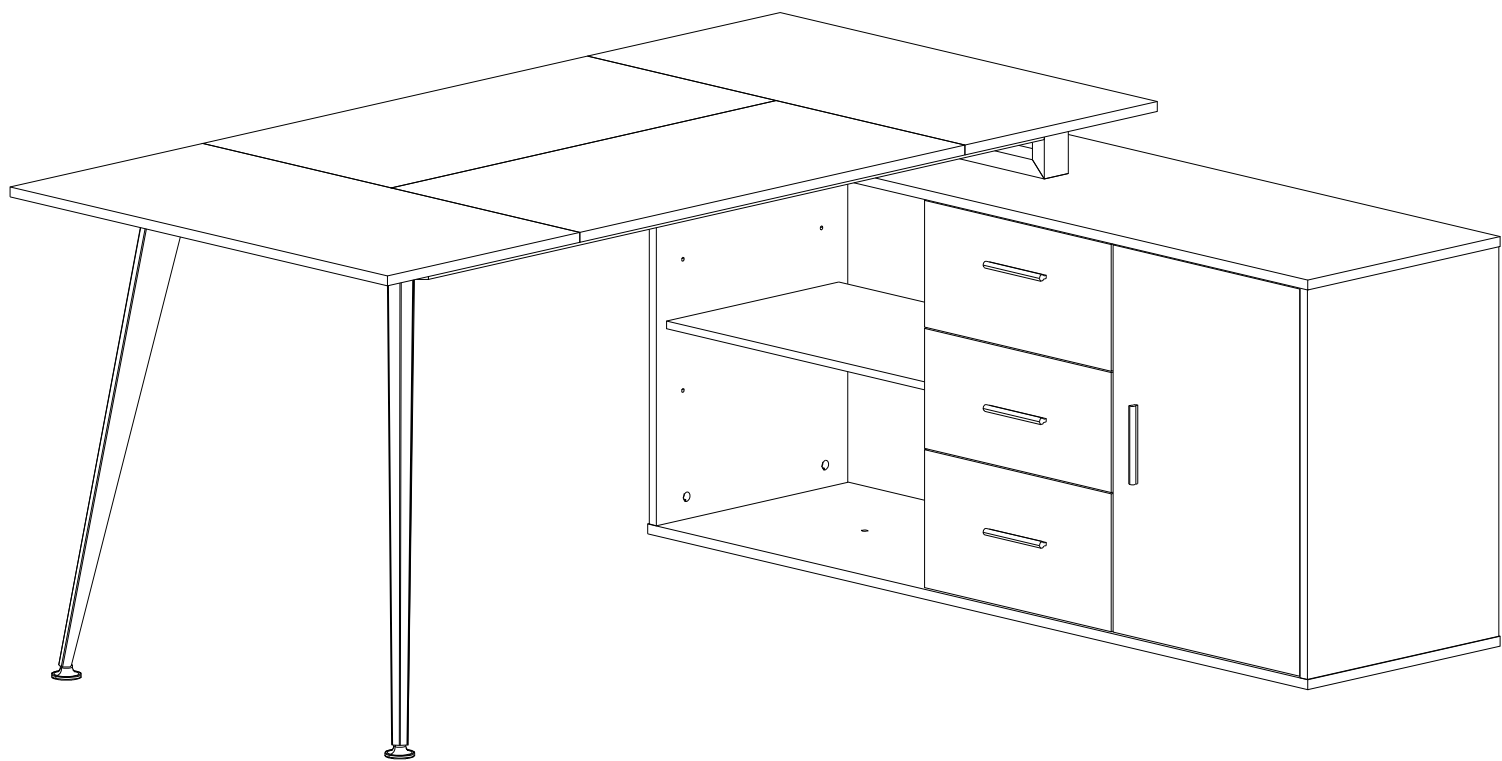

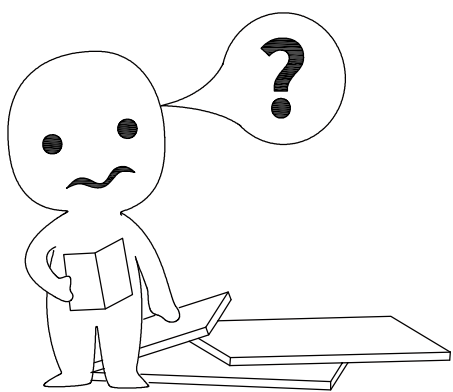

 
 
IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

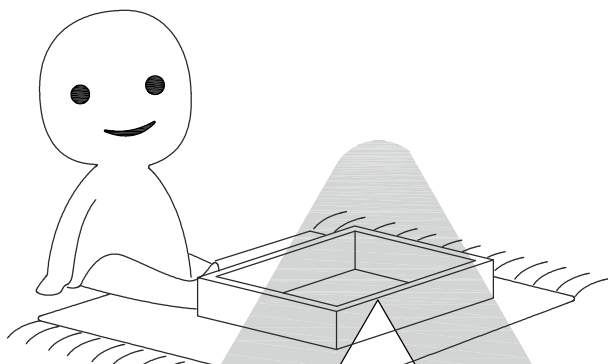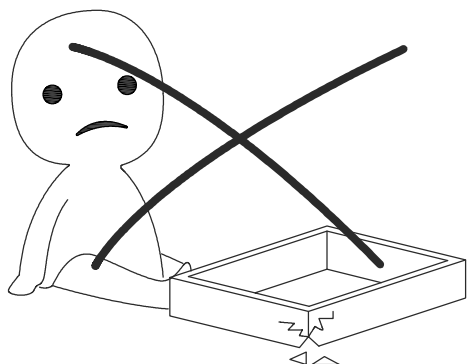

 
 
 
 
 
AVOID SCRATCHES!

In order to avoid scratching this furniture should be assembled on a soft layer—could be a rug.

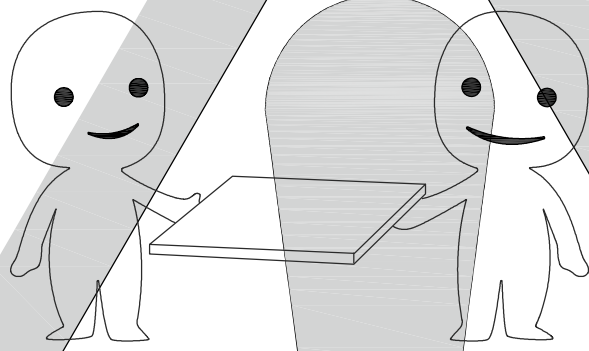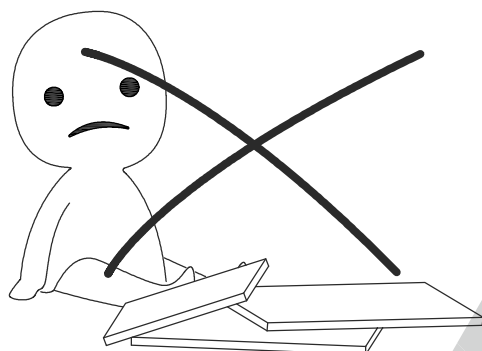

IMPROVE EFFICIENCY !

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

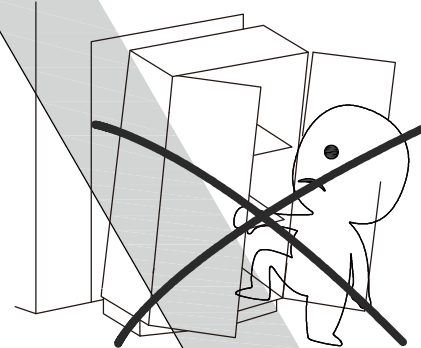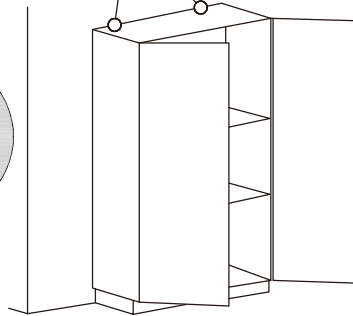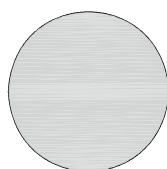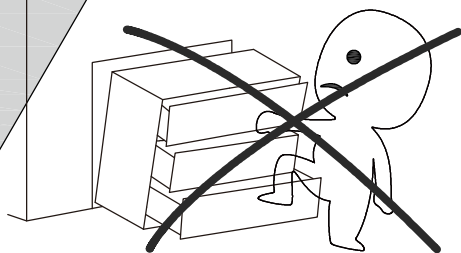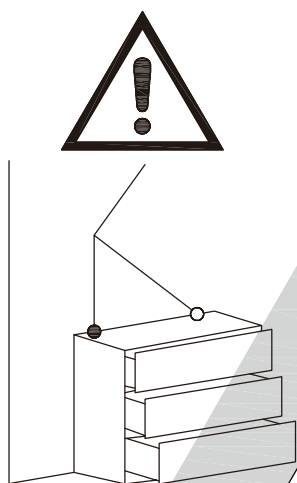

ANTI-TOPPLE WARNING !

 
Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !

 
 
 
 
It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

 

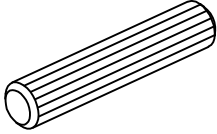 


 
 
 
 
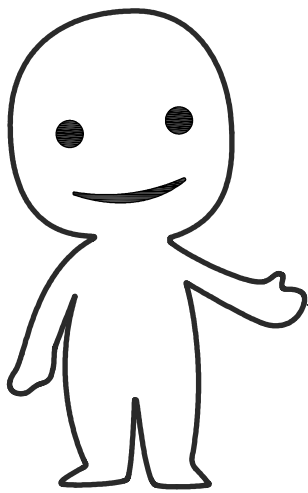 

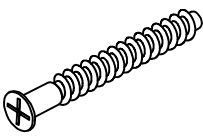 
 
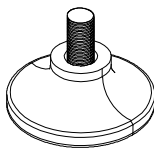 
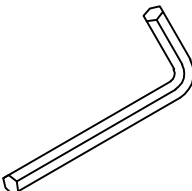 
 
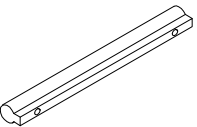 
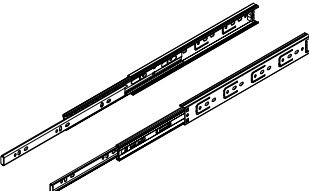 
Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

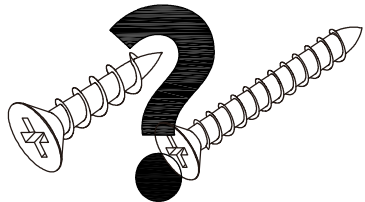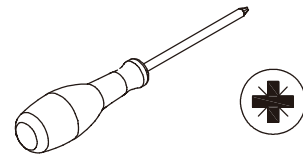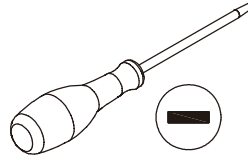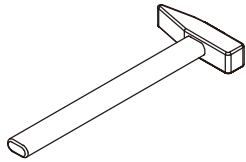 


Please prepare the following tools

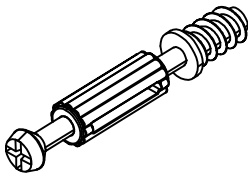

When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

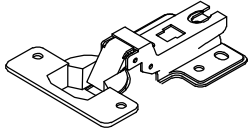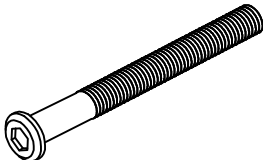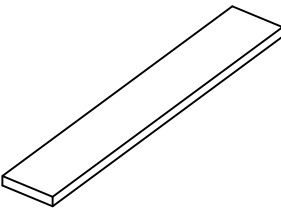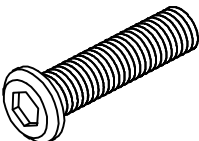 
A x 36  M5 x 42 mm	B x 36  Ø 15 x 10 mm	C x 24  Ø 8 x 40 mm	D x 24  M3.5 x 14 mm	E x 8  M4 x 18 mm
F x 2  DW	G x 4  Ø 5 mm	H x 10  M6 x 60 mm	I x 1  L = 500 x 40 mm	J x 10  M6 x 35 mm
K x 24  M6 x 12 mm	L x 12  M5 x 40 mm	M x 12  M3.5 x 12 mm	N x 2  M8 x 44 mm	O x 1  #4
P x 6  Ø 30 x 3 mm	Q x 4  220-96	③ x3  3508 12"		

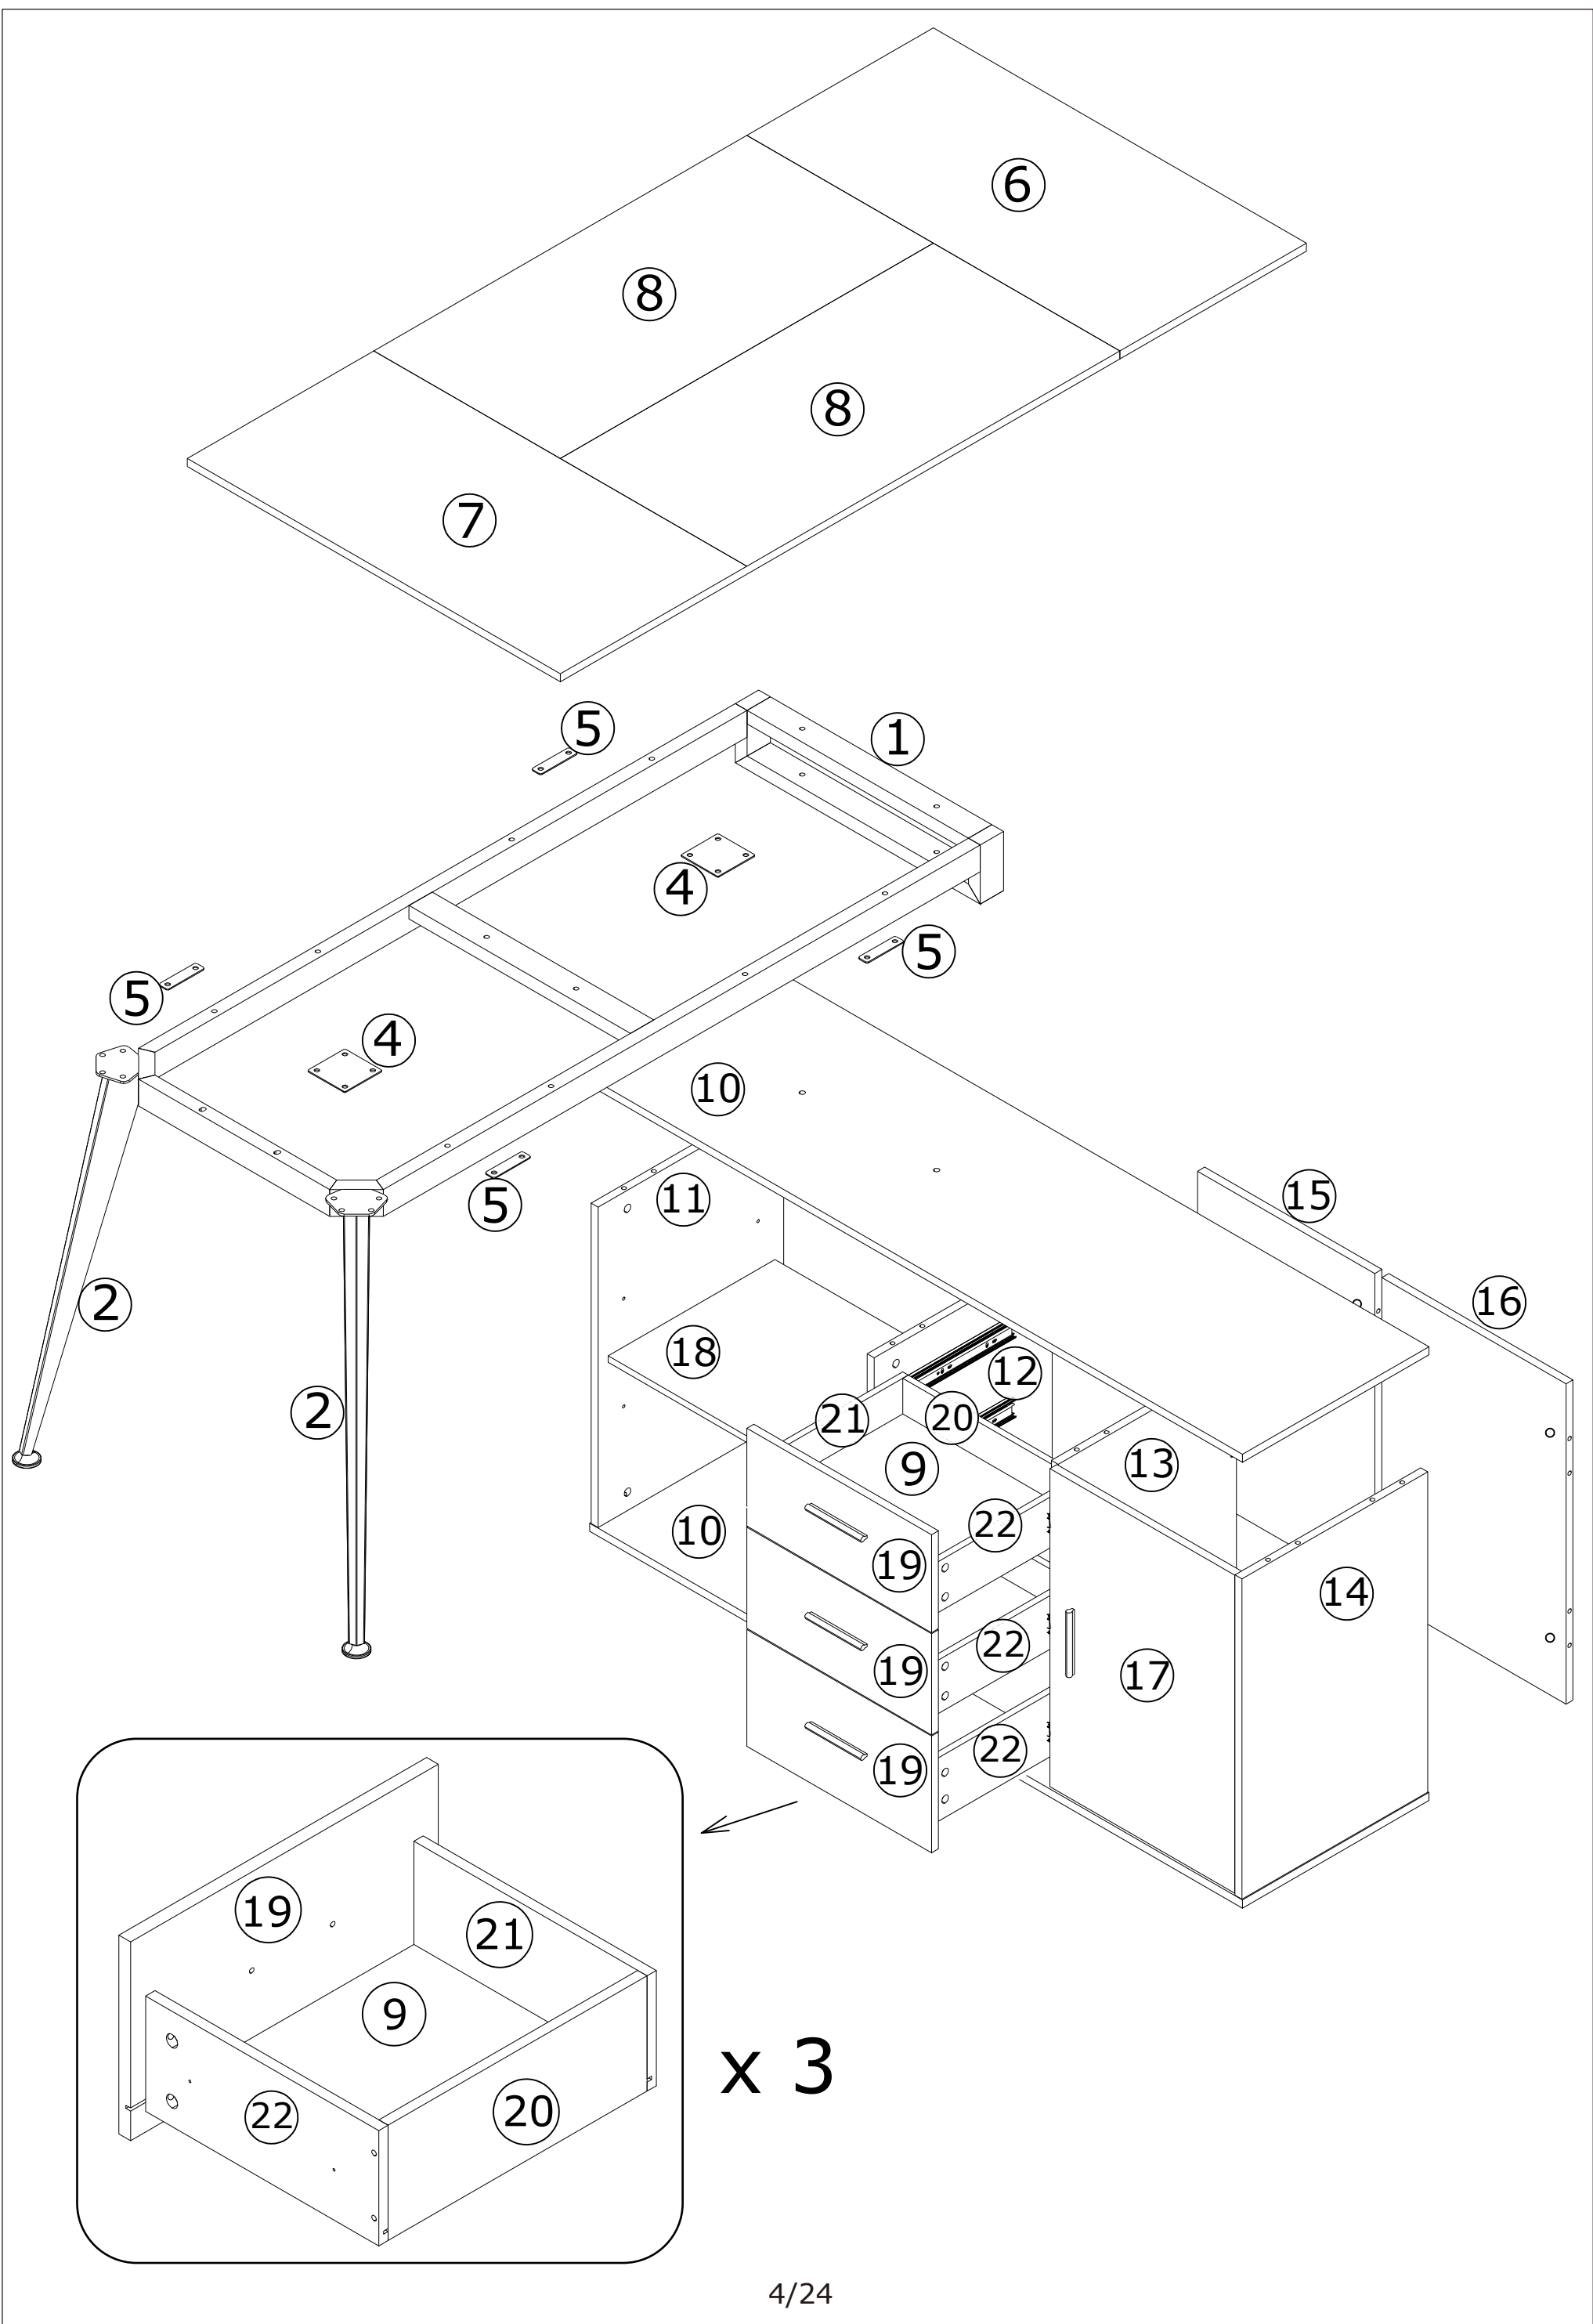

 
**Slides Must Be Separated Before Assembly.
After Separated, Set Aside Until Needed for Assembly.**

Las diapositivas deben separarse antes del montaje.
Después de la separación, déjelo a un lado hasta que sea necesario.

 
Les glissières doivent être séparées avant l'assemblage.
Après la séparation, mettez de côté jusqu'au moment de l'assemblage.

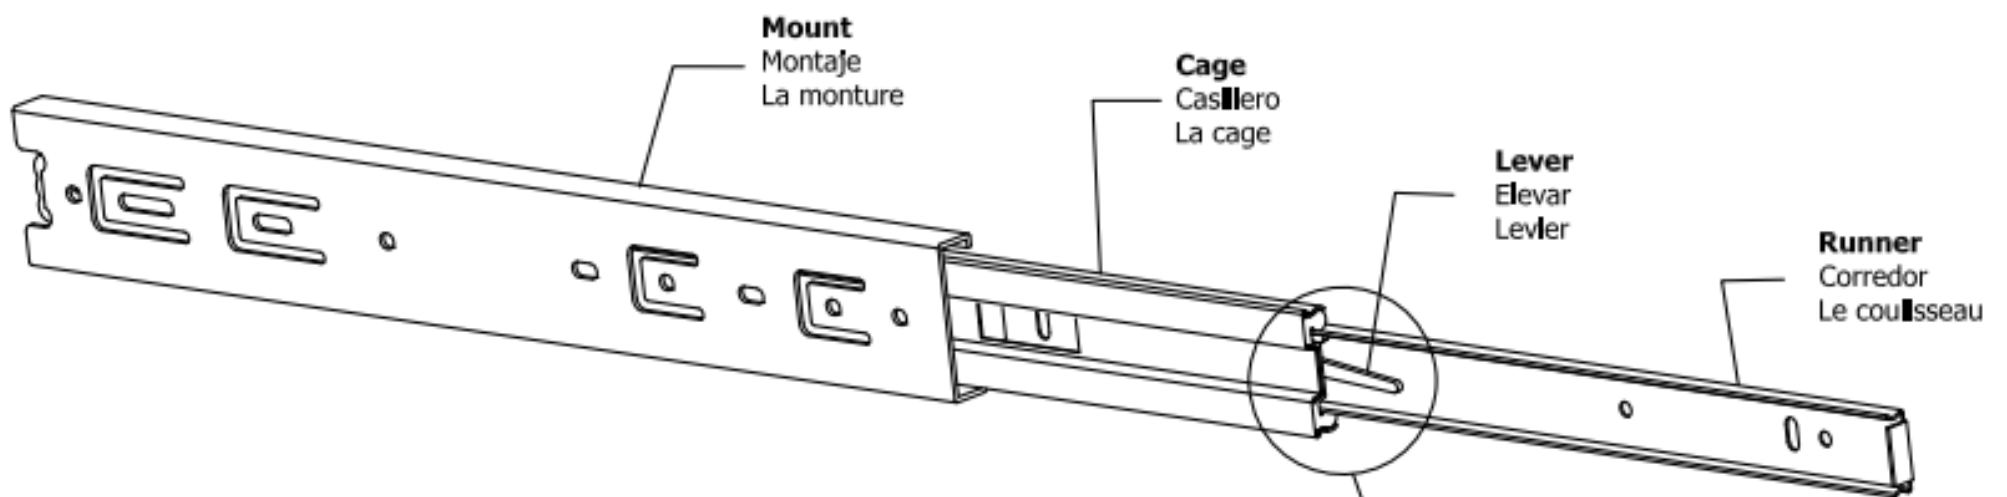

 
STEP 1: Extend Slide
Extender la diapositiva
Extendre la diapositive

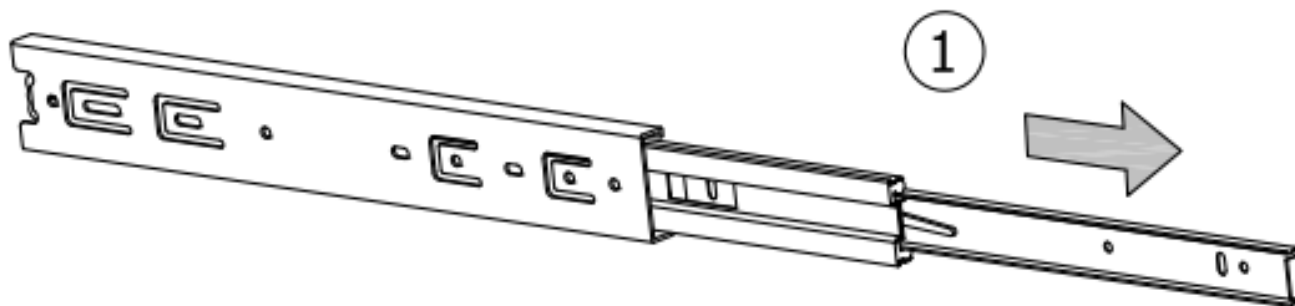


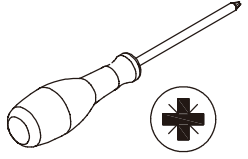 
STEP 2: Push Lever UP
Empujar hacia arriba
Lever le levier

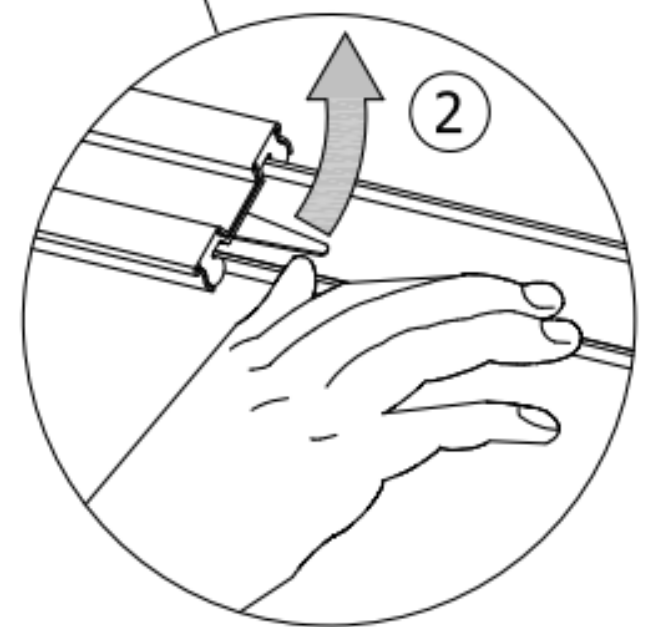 


STEP 3: Remove Runner
Quitar el corredor
Enlever le coureur

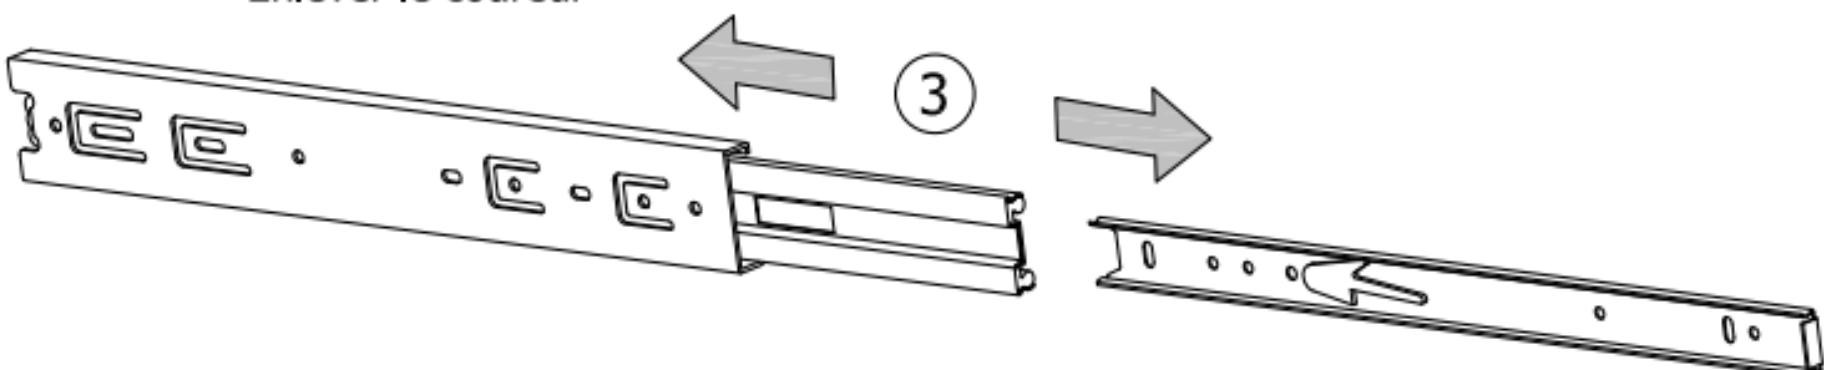 


1

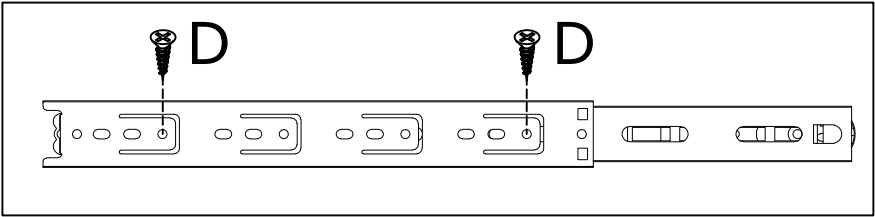 


 
 
 
<p>D x 12</p>  <p>M3.5 x 14mm</p>	
--	---

 
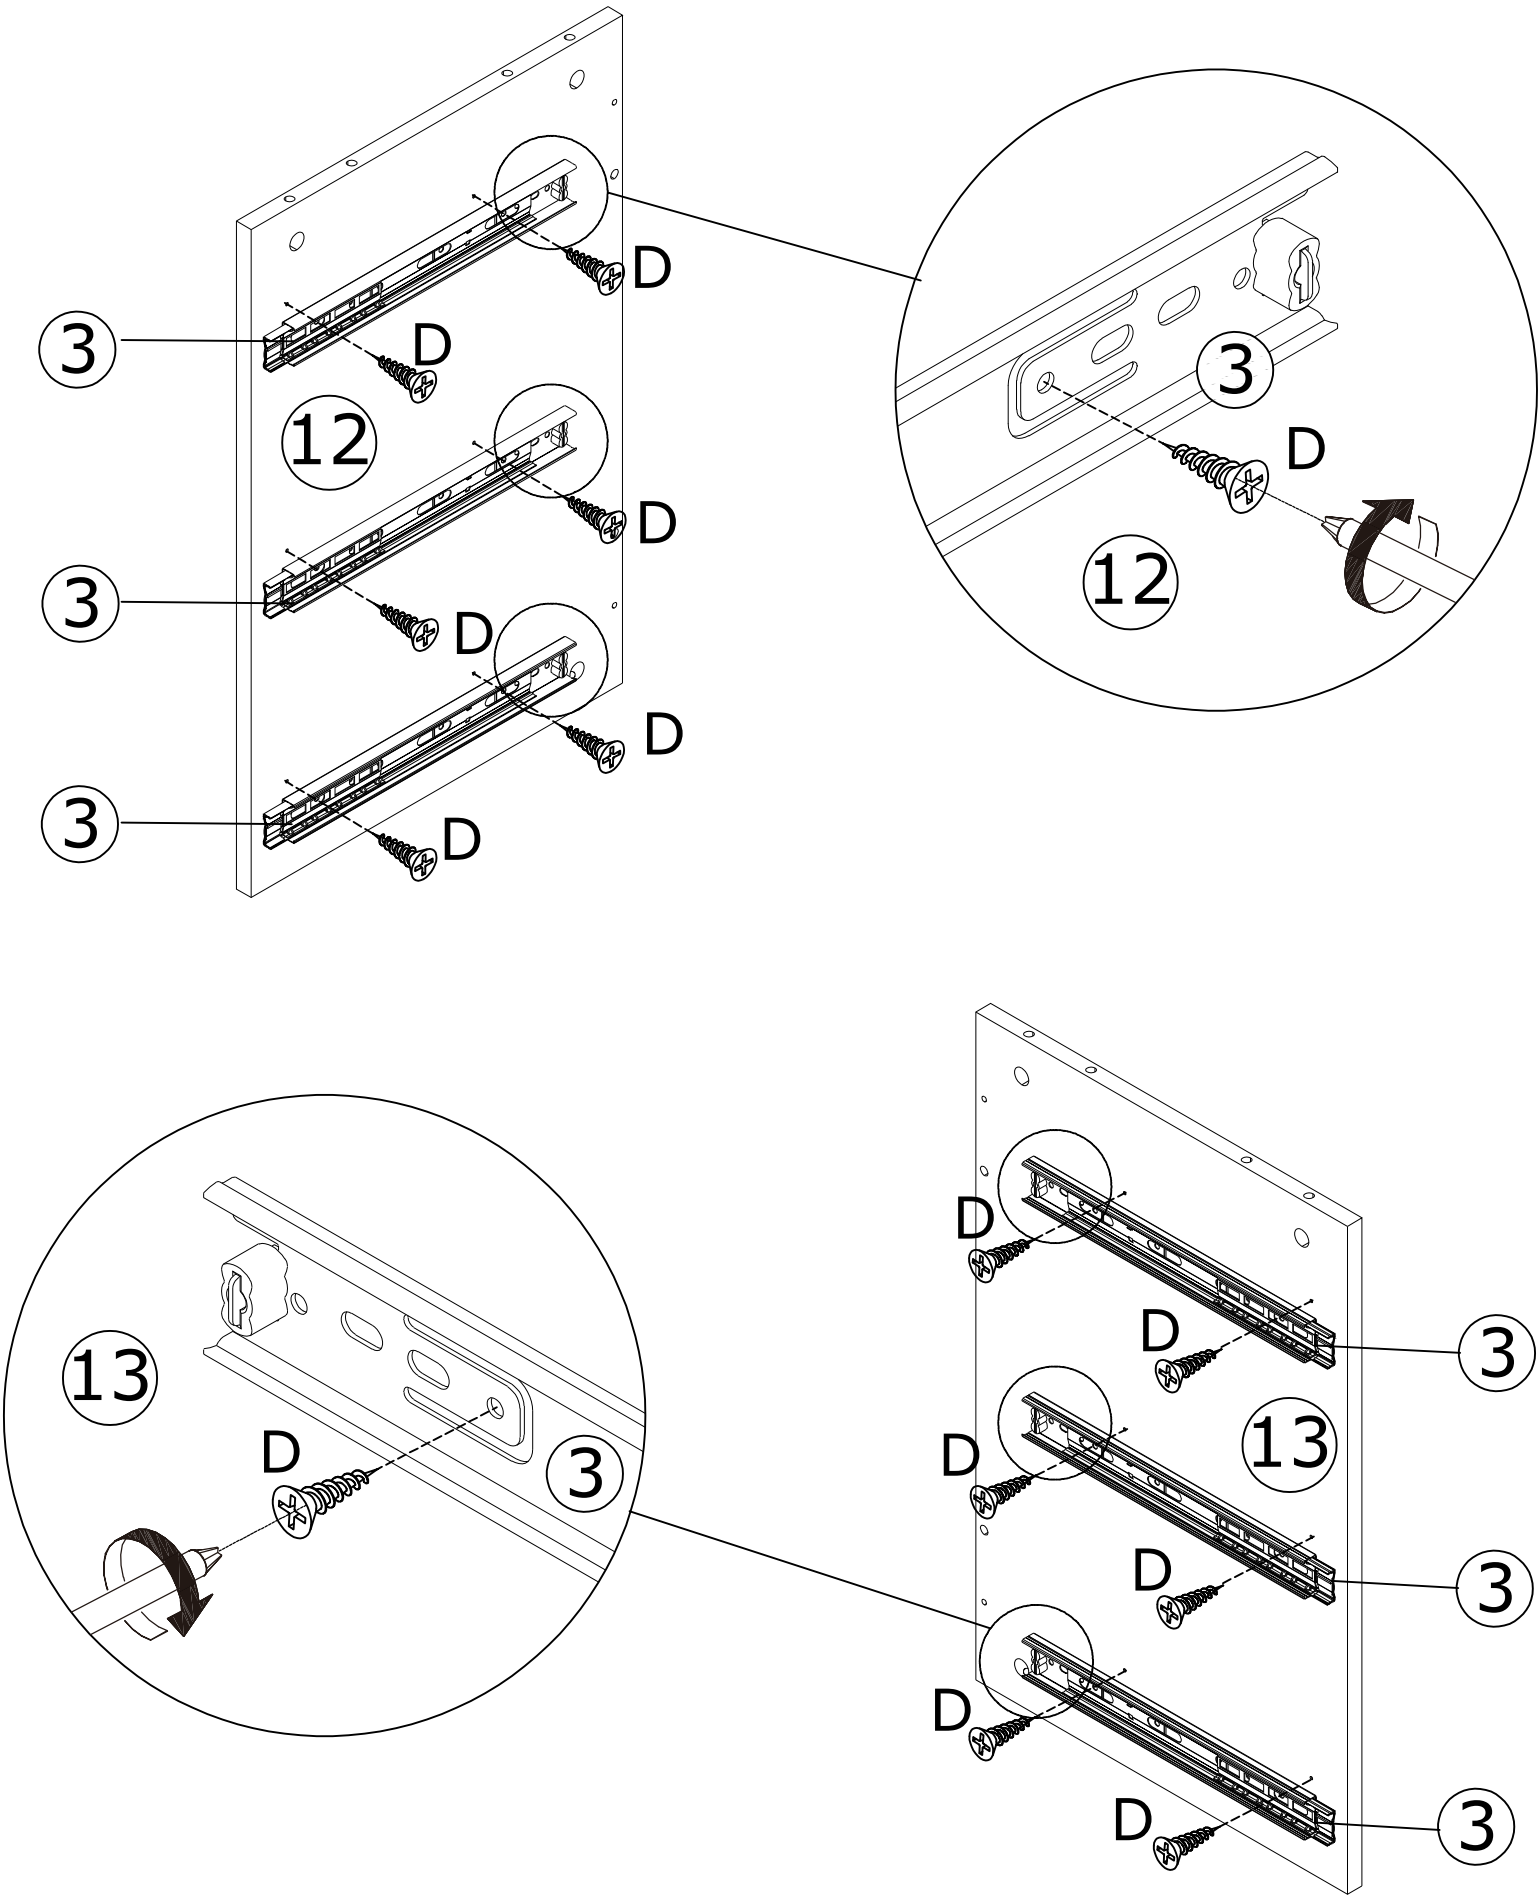 


Separate glide into two parts.
 Fix No.3 slide rail to No.12 and No.13 plate with screw(D) as shown.



 
2
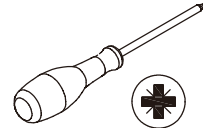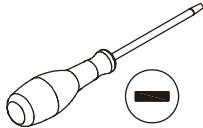
<p>A x 4</p>  <p>M5 x 42mm</p>	<p>B x 4</p>  <p>Ø 15 x 10mm</p>	<p>C x 4</p>  <p>Ø 8 x 40mm</p>	  
---	---	---	---

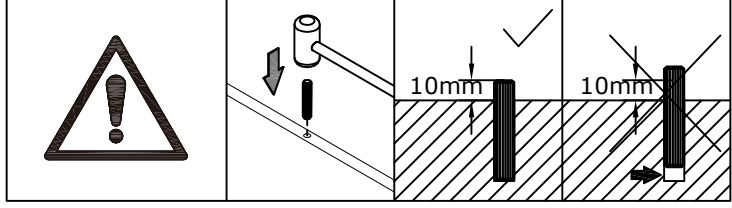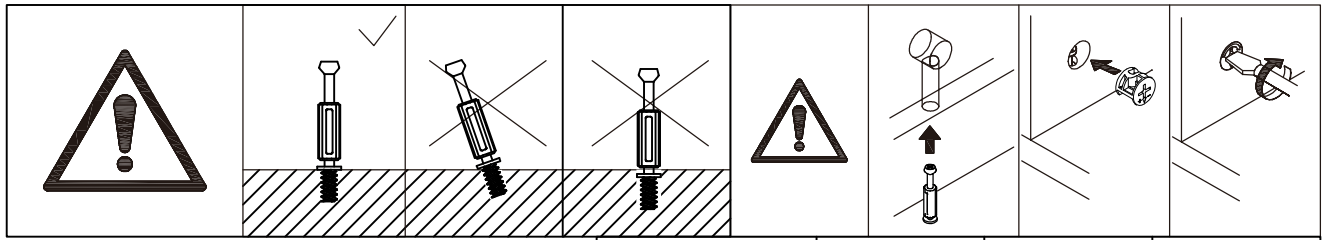 


 


 
Insert quickfit screw(A) into corresponding holes in No.13 and No.14 plate with a screwdriver as shown.

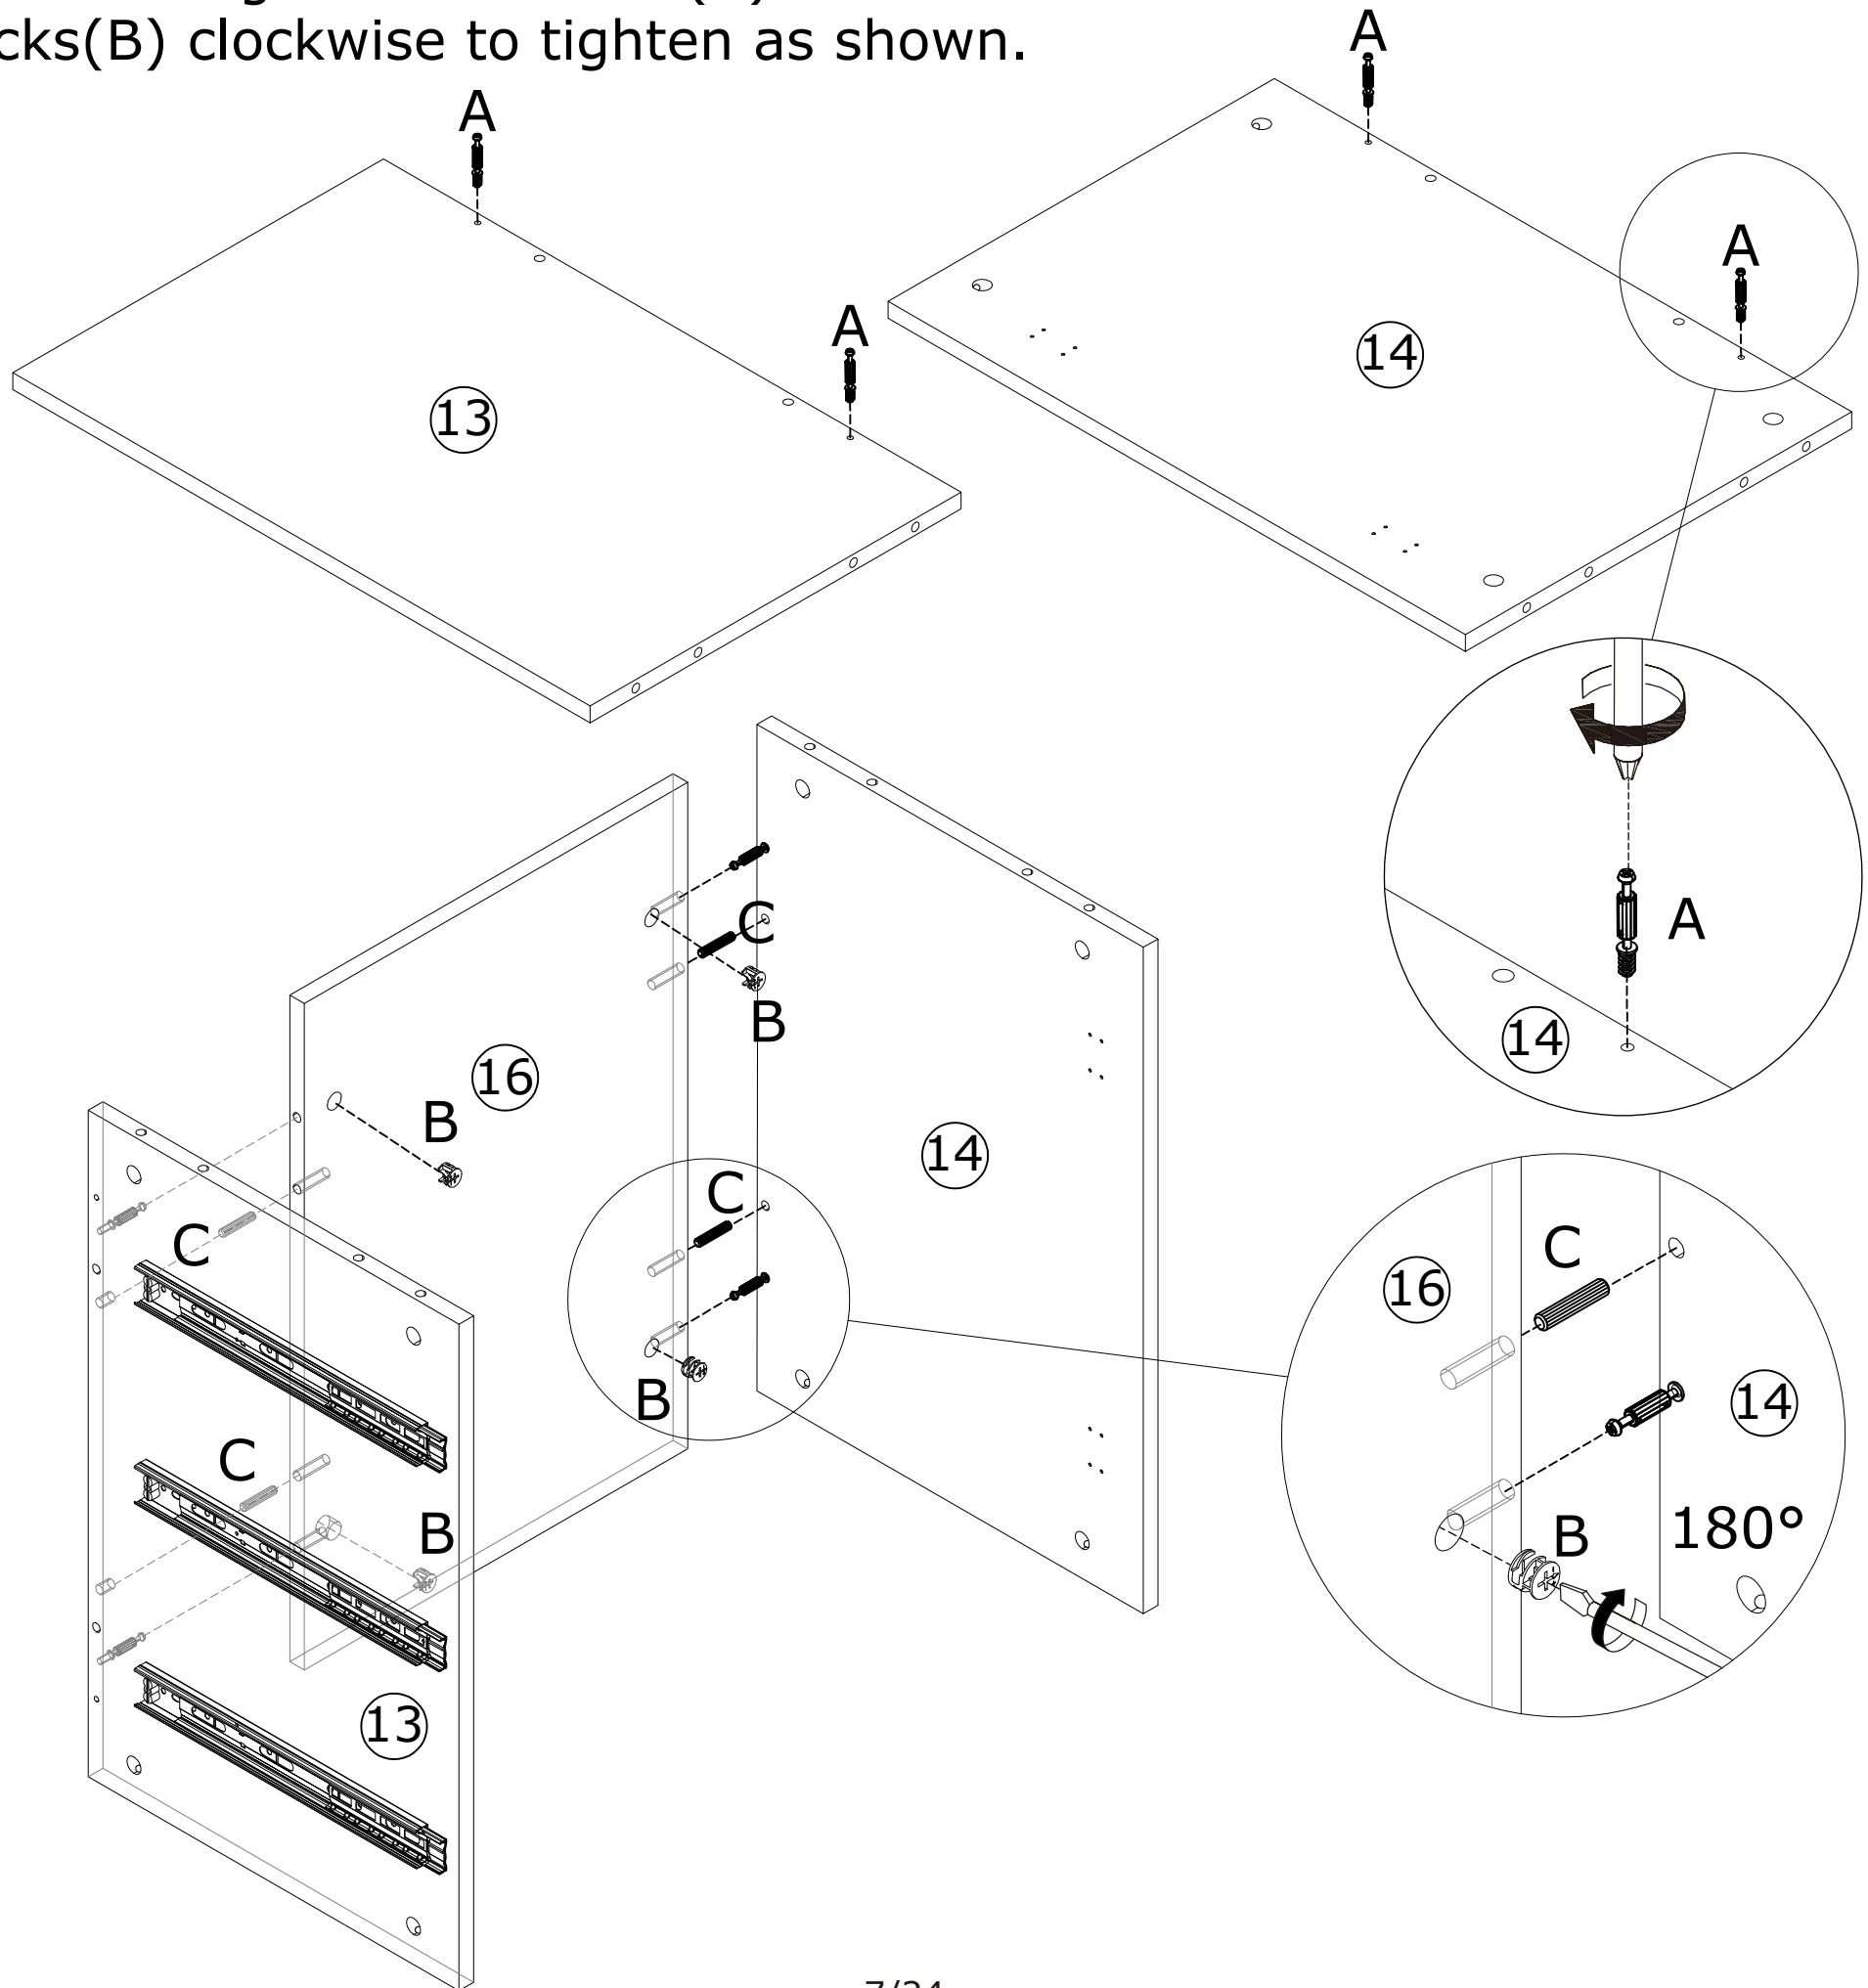Connect No.13 and No.14 plate with No.16 using wooden dowel(C) and turn cam locks(B) clockwise to tighten as shown.

 


3

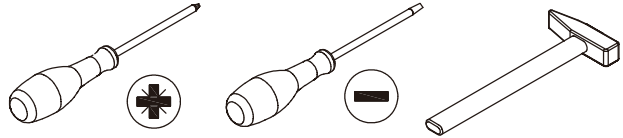 


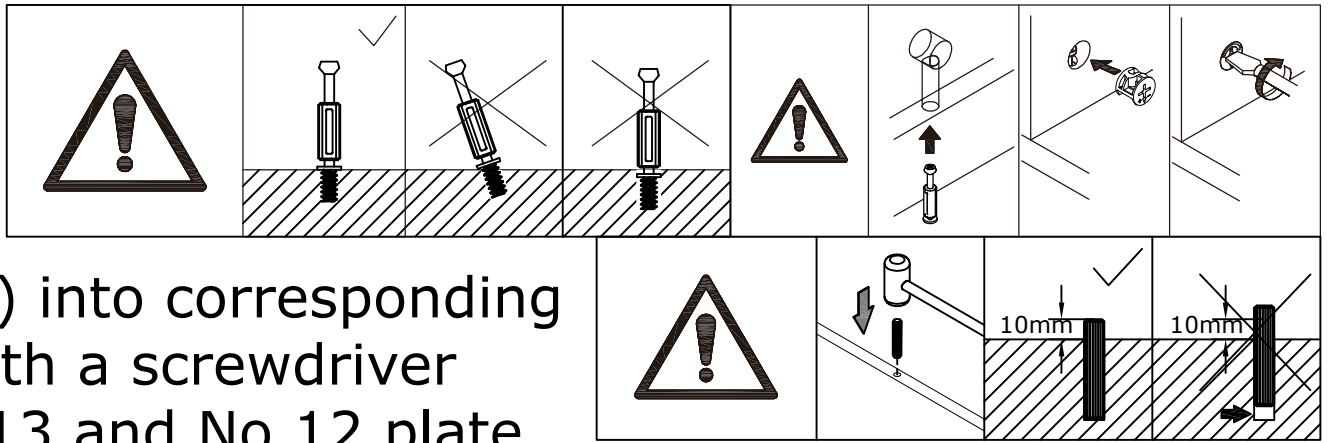 
<p>A x 4</p>  <p>M5 x 42mm</p>	<p>B x 4</p>  <p>Ø15 x 10mm</p>	<p>C x 4</p>  <p>Ø8 x 40mm</p>	
---	--	--	---

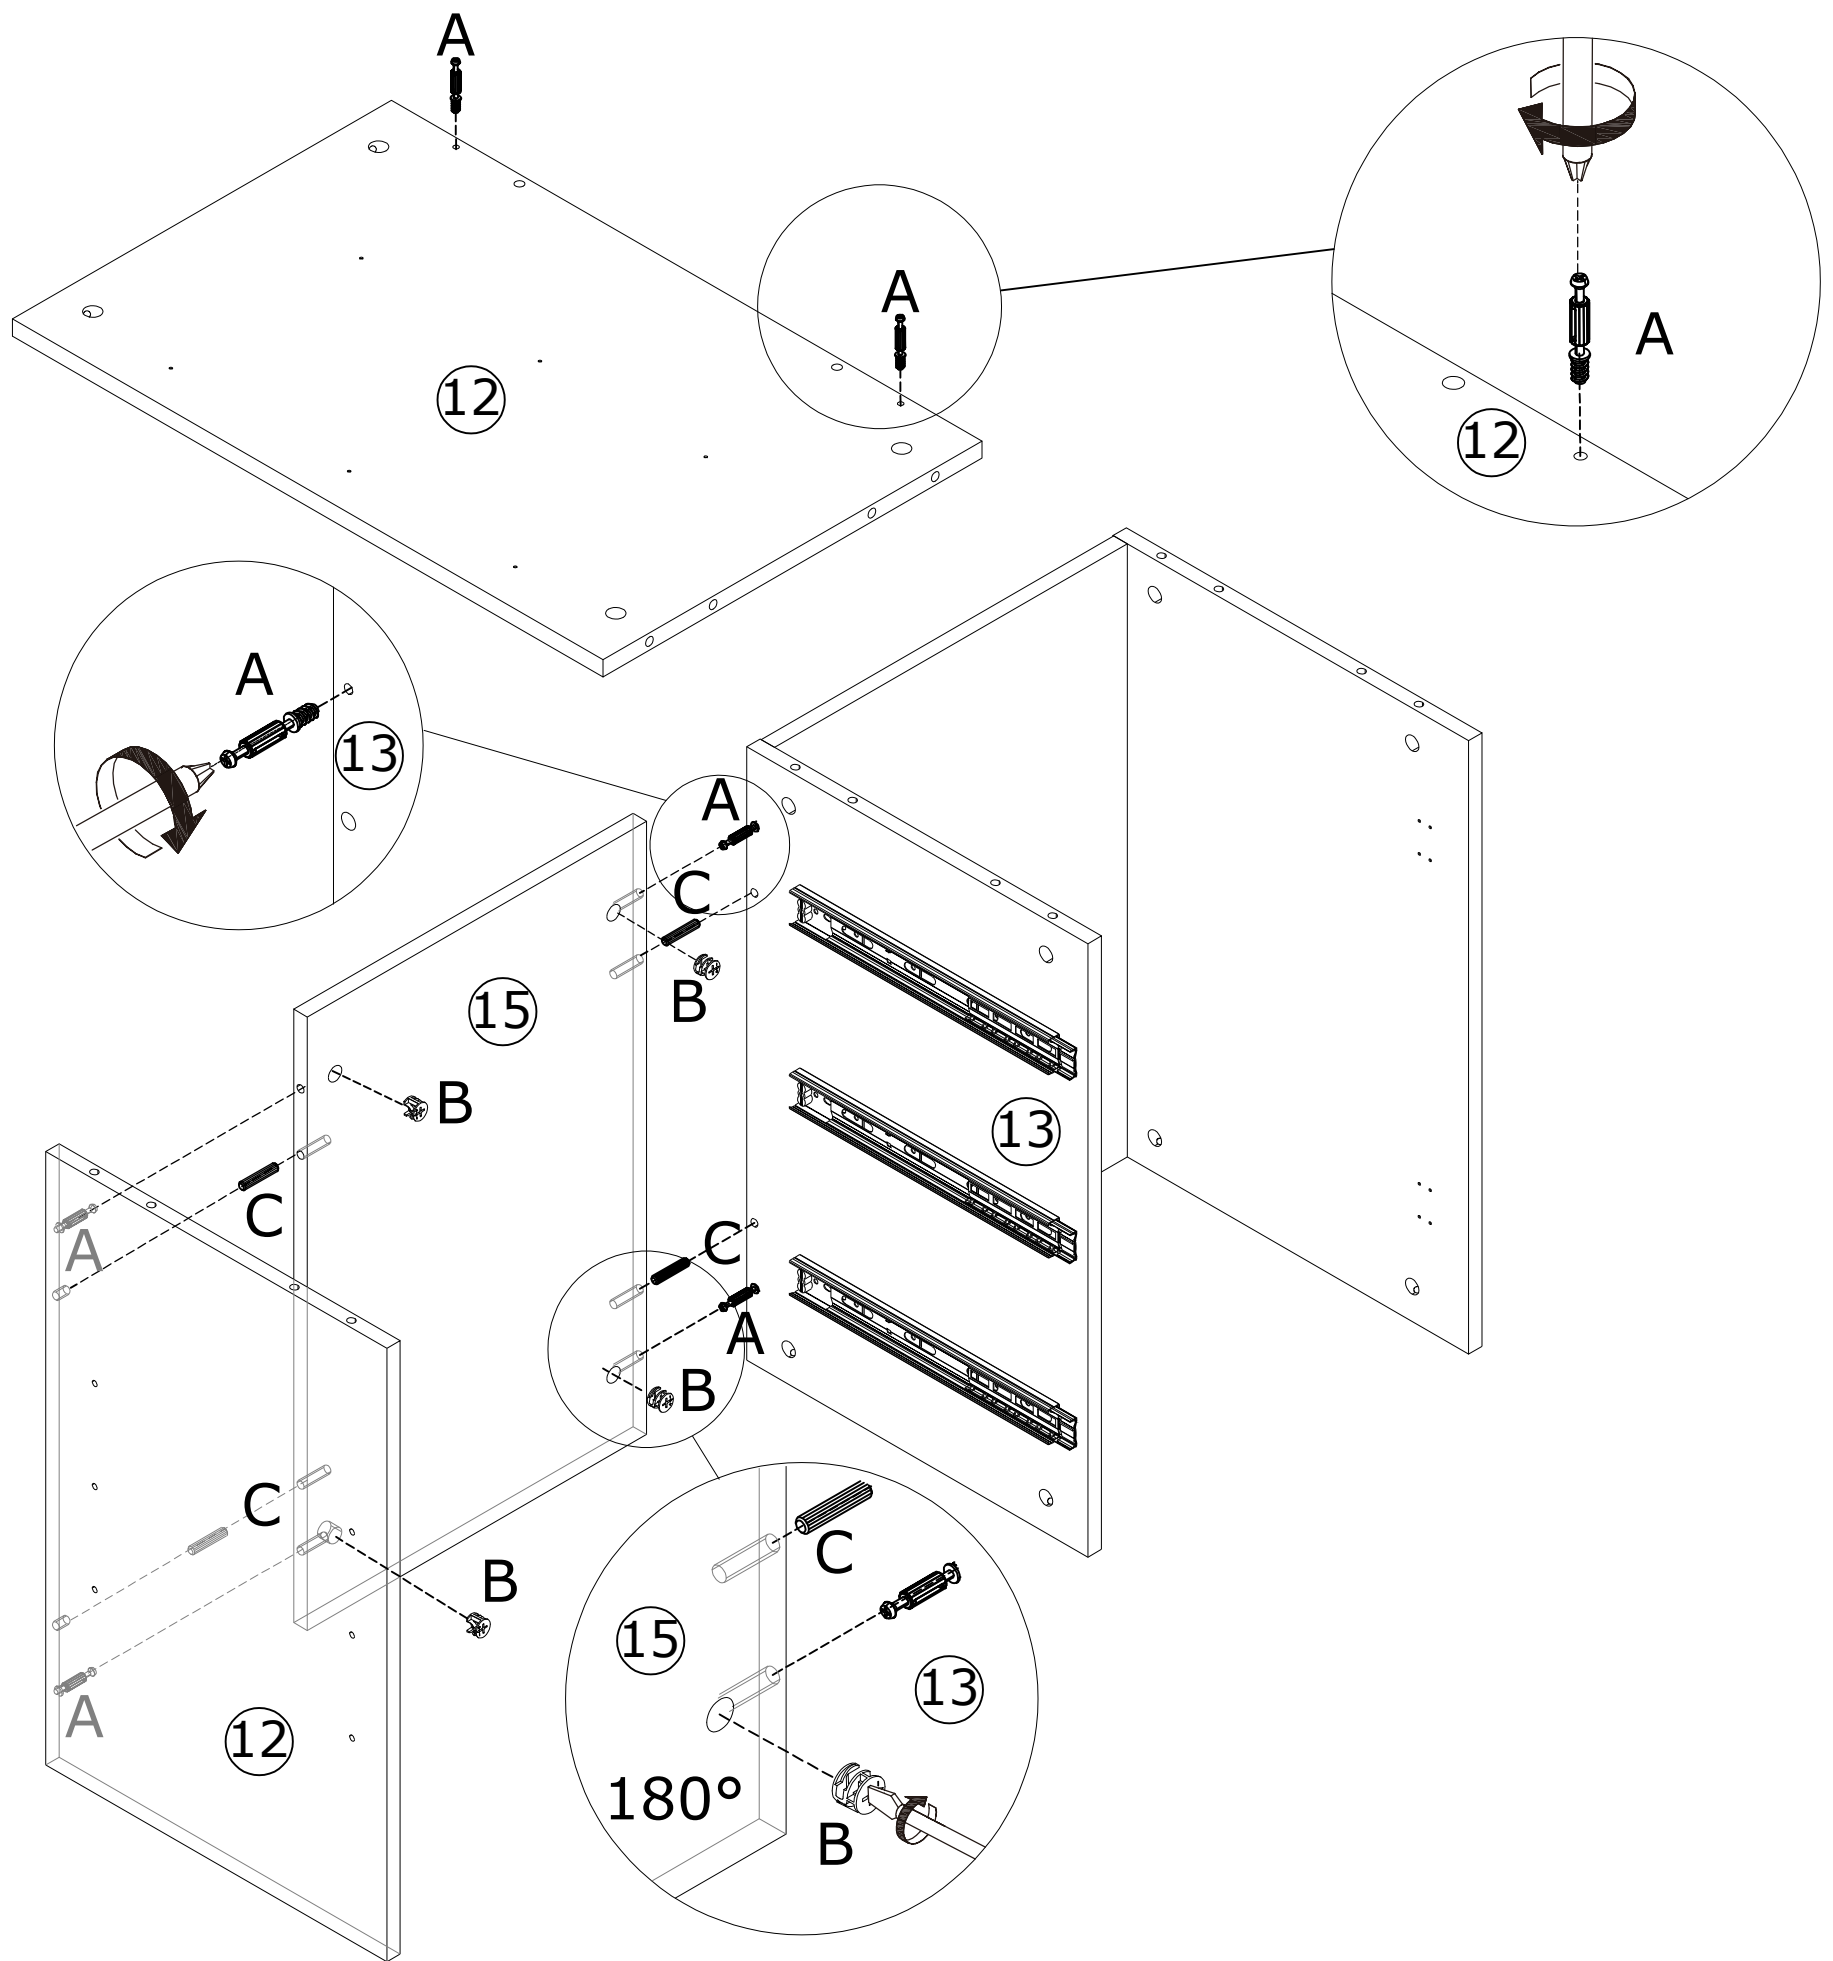 


Insert quickfit screw(A) into corresponding holes in No.12 plate with a screwdriver as shown. Connect No.13 and No.12 plate with No.15 using wooden dowel(C) and turn cam locks(B) clockwise to tighten as shown.

 


4

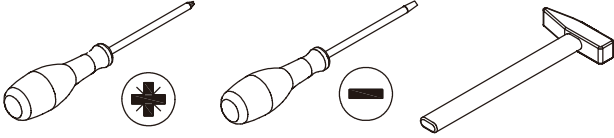 

 
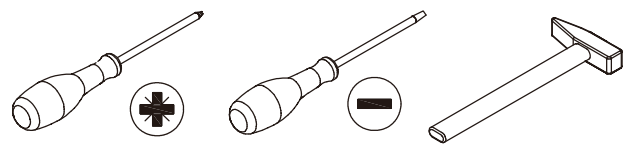 
<p>A x 8</p>  <p>M5 x 42mm</p>	<p>B x 8</p>  <p>Ø15 x 10mm</p>	<p>C x 8</p>  <p>Ø8 x 40mm</p>	
---	--	--	---

 
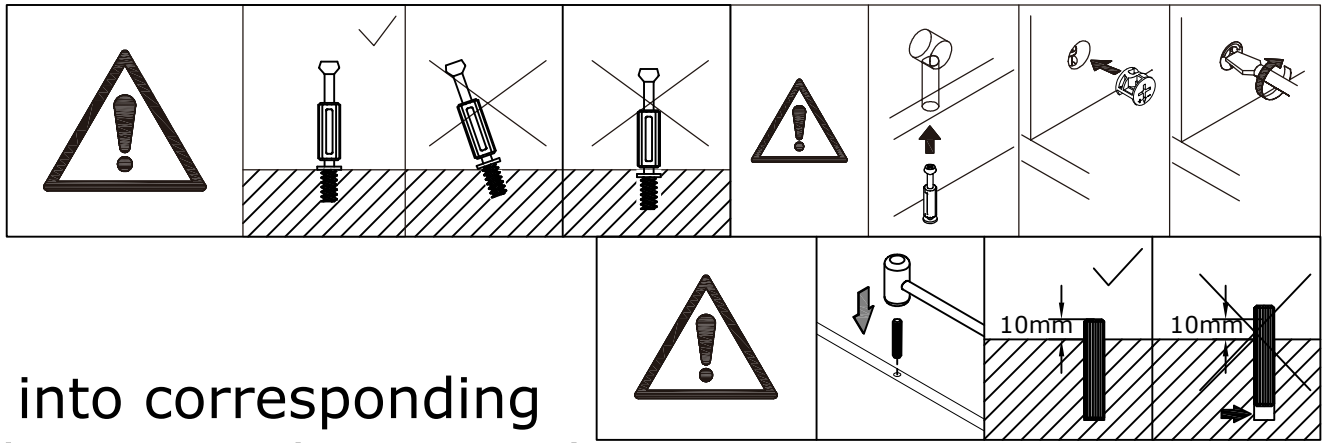 


Insert quickfit screw(A) into corresponding holes in No.10 plate with a screwdriver as shown. Attach No.10 plate to No.11, No.12, No.13 and No.14 using wooden dowel(C) and turn cam locks(B) clockwise to tighten as shown.

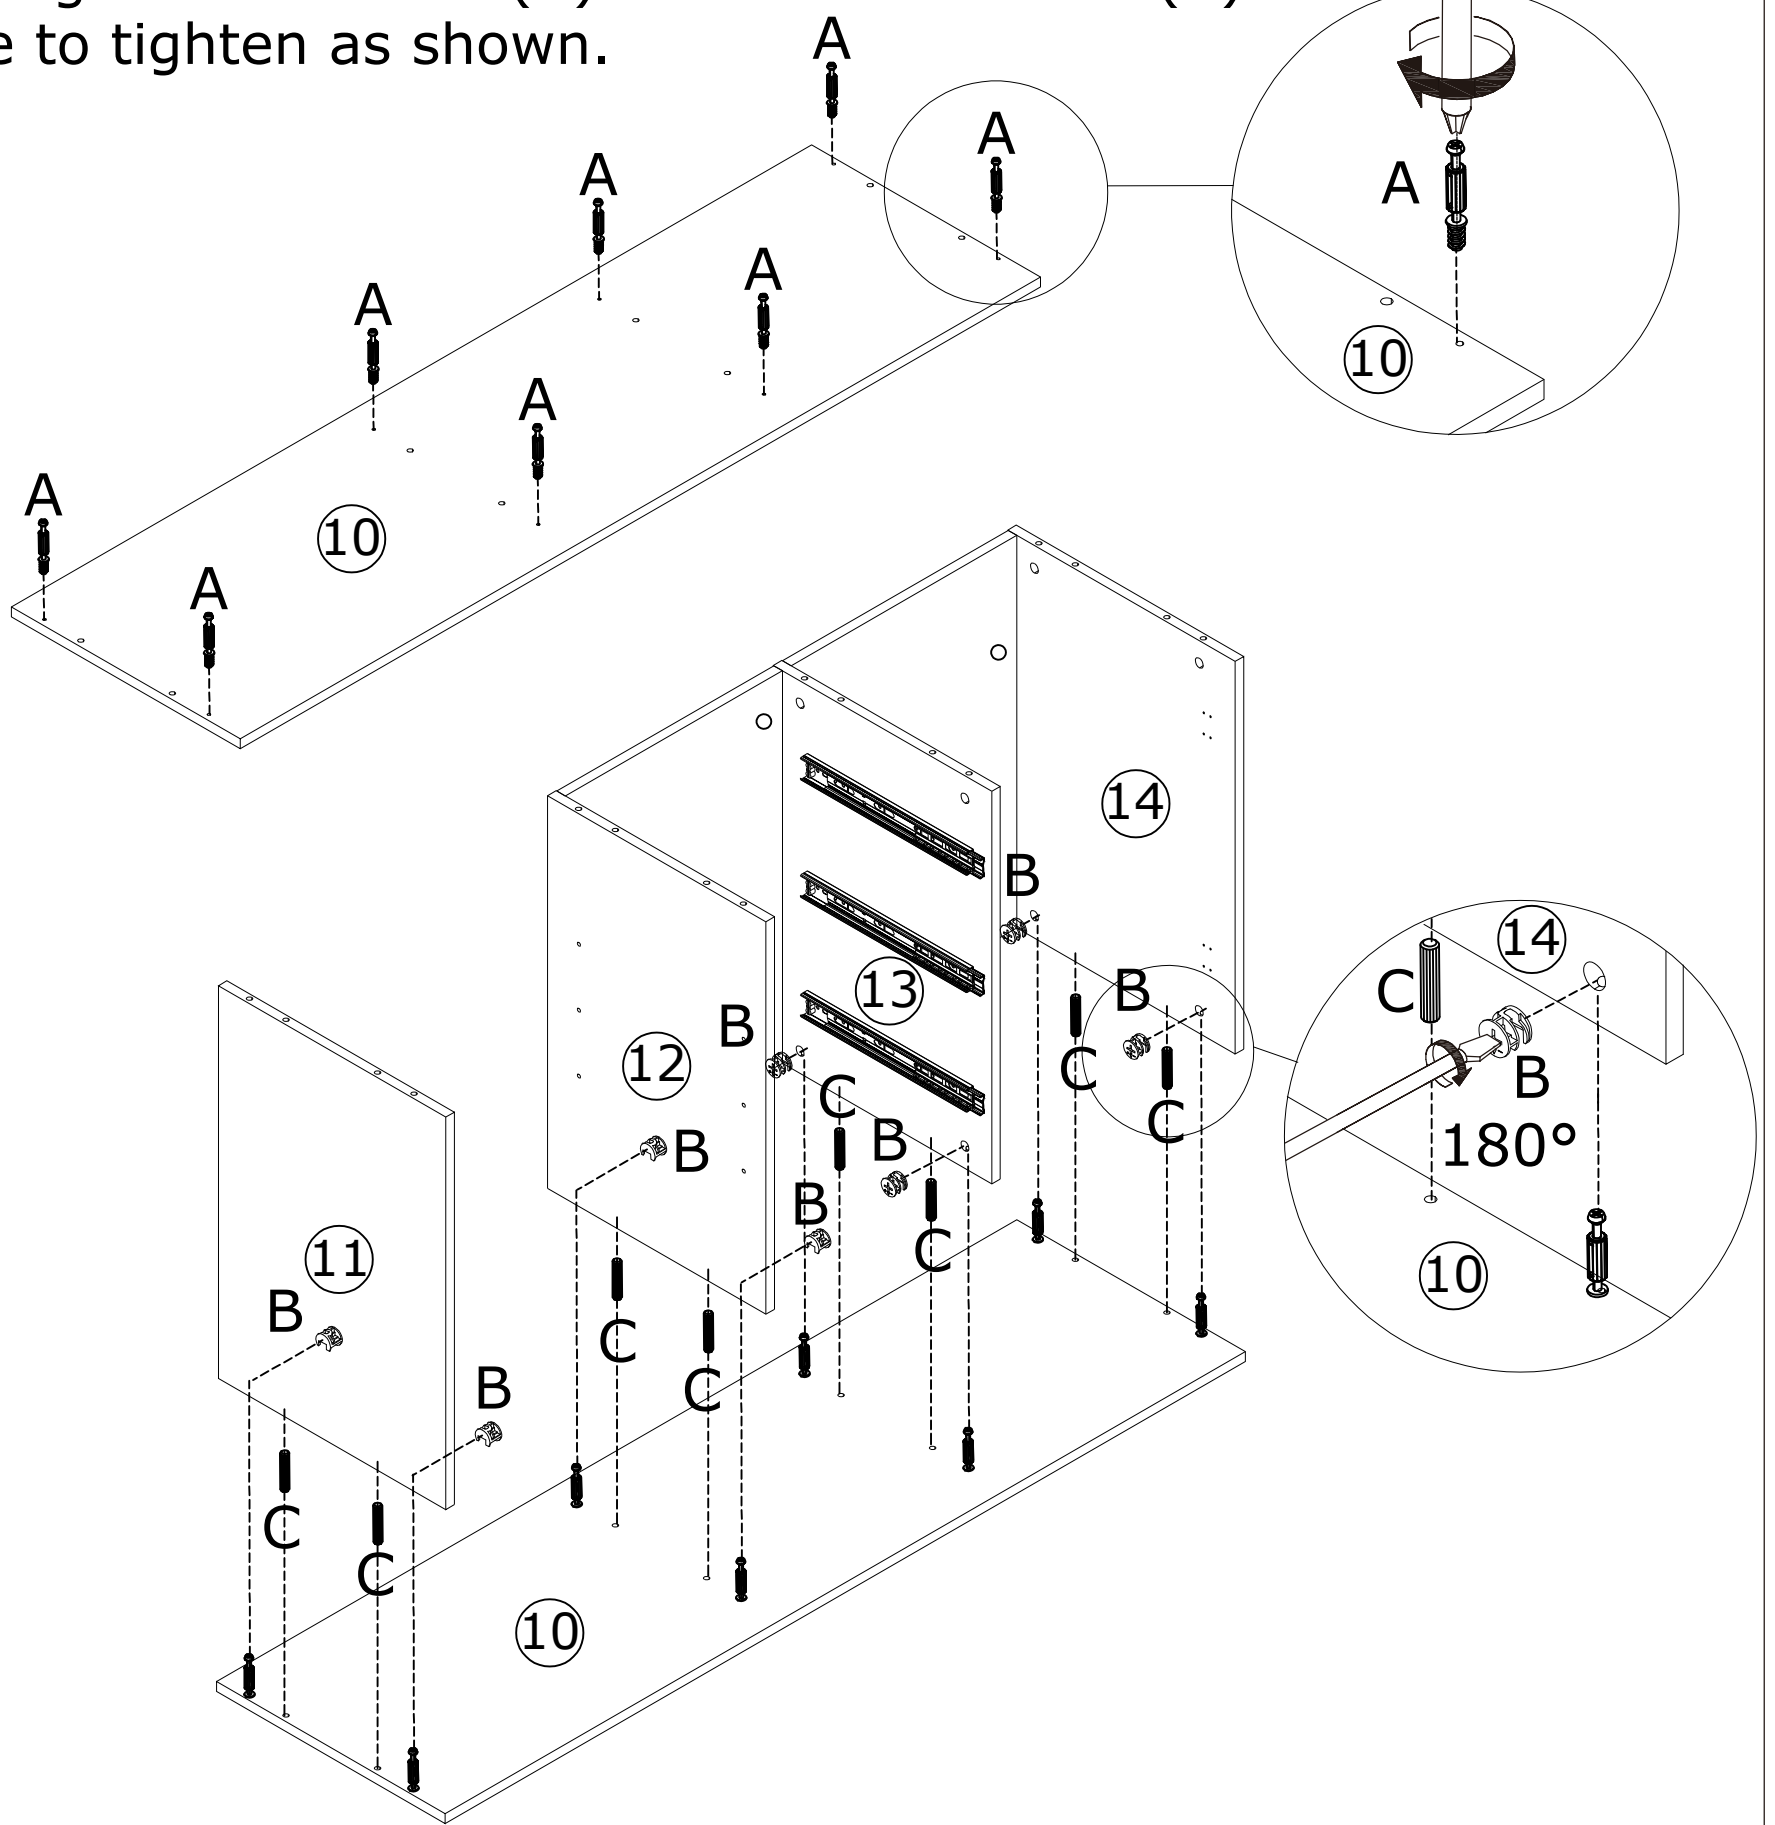

 
5
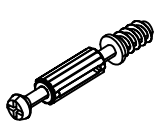
<p>A x 8</p>  <p>M5 x 42mm</p>	<p>B x 8</p>  <p>Ø 15 x 10mm</p>	<p>C x 8</p>  <p>Ø 8 x 40mm</p>	
---	---	---	---

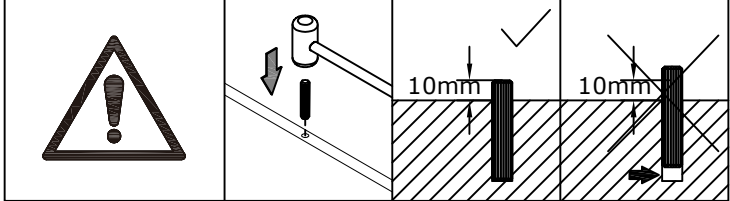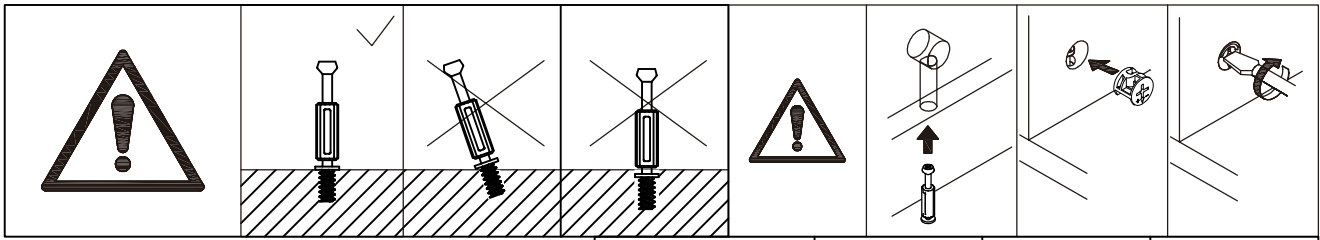 

 
 
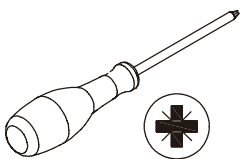 


Insert quickfit screw(A) into corresponding holes in another No.10 plate with a screwdriver as shown.

 
 
Cover No.10 plate to No.11, No.12, No.13 and No.14 using wooden dowel(C) and turn cam locks(B) clockwise to tighten as shown.

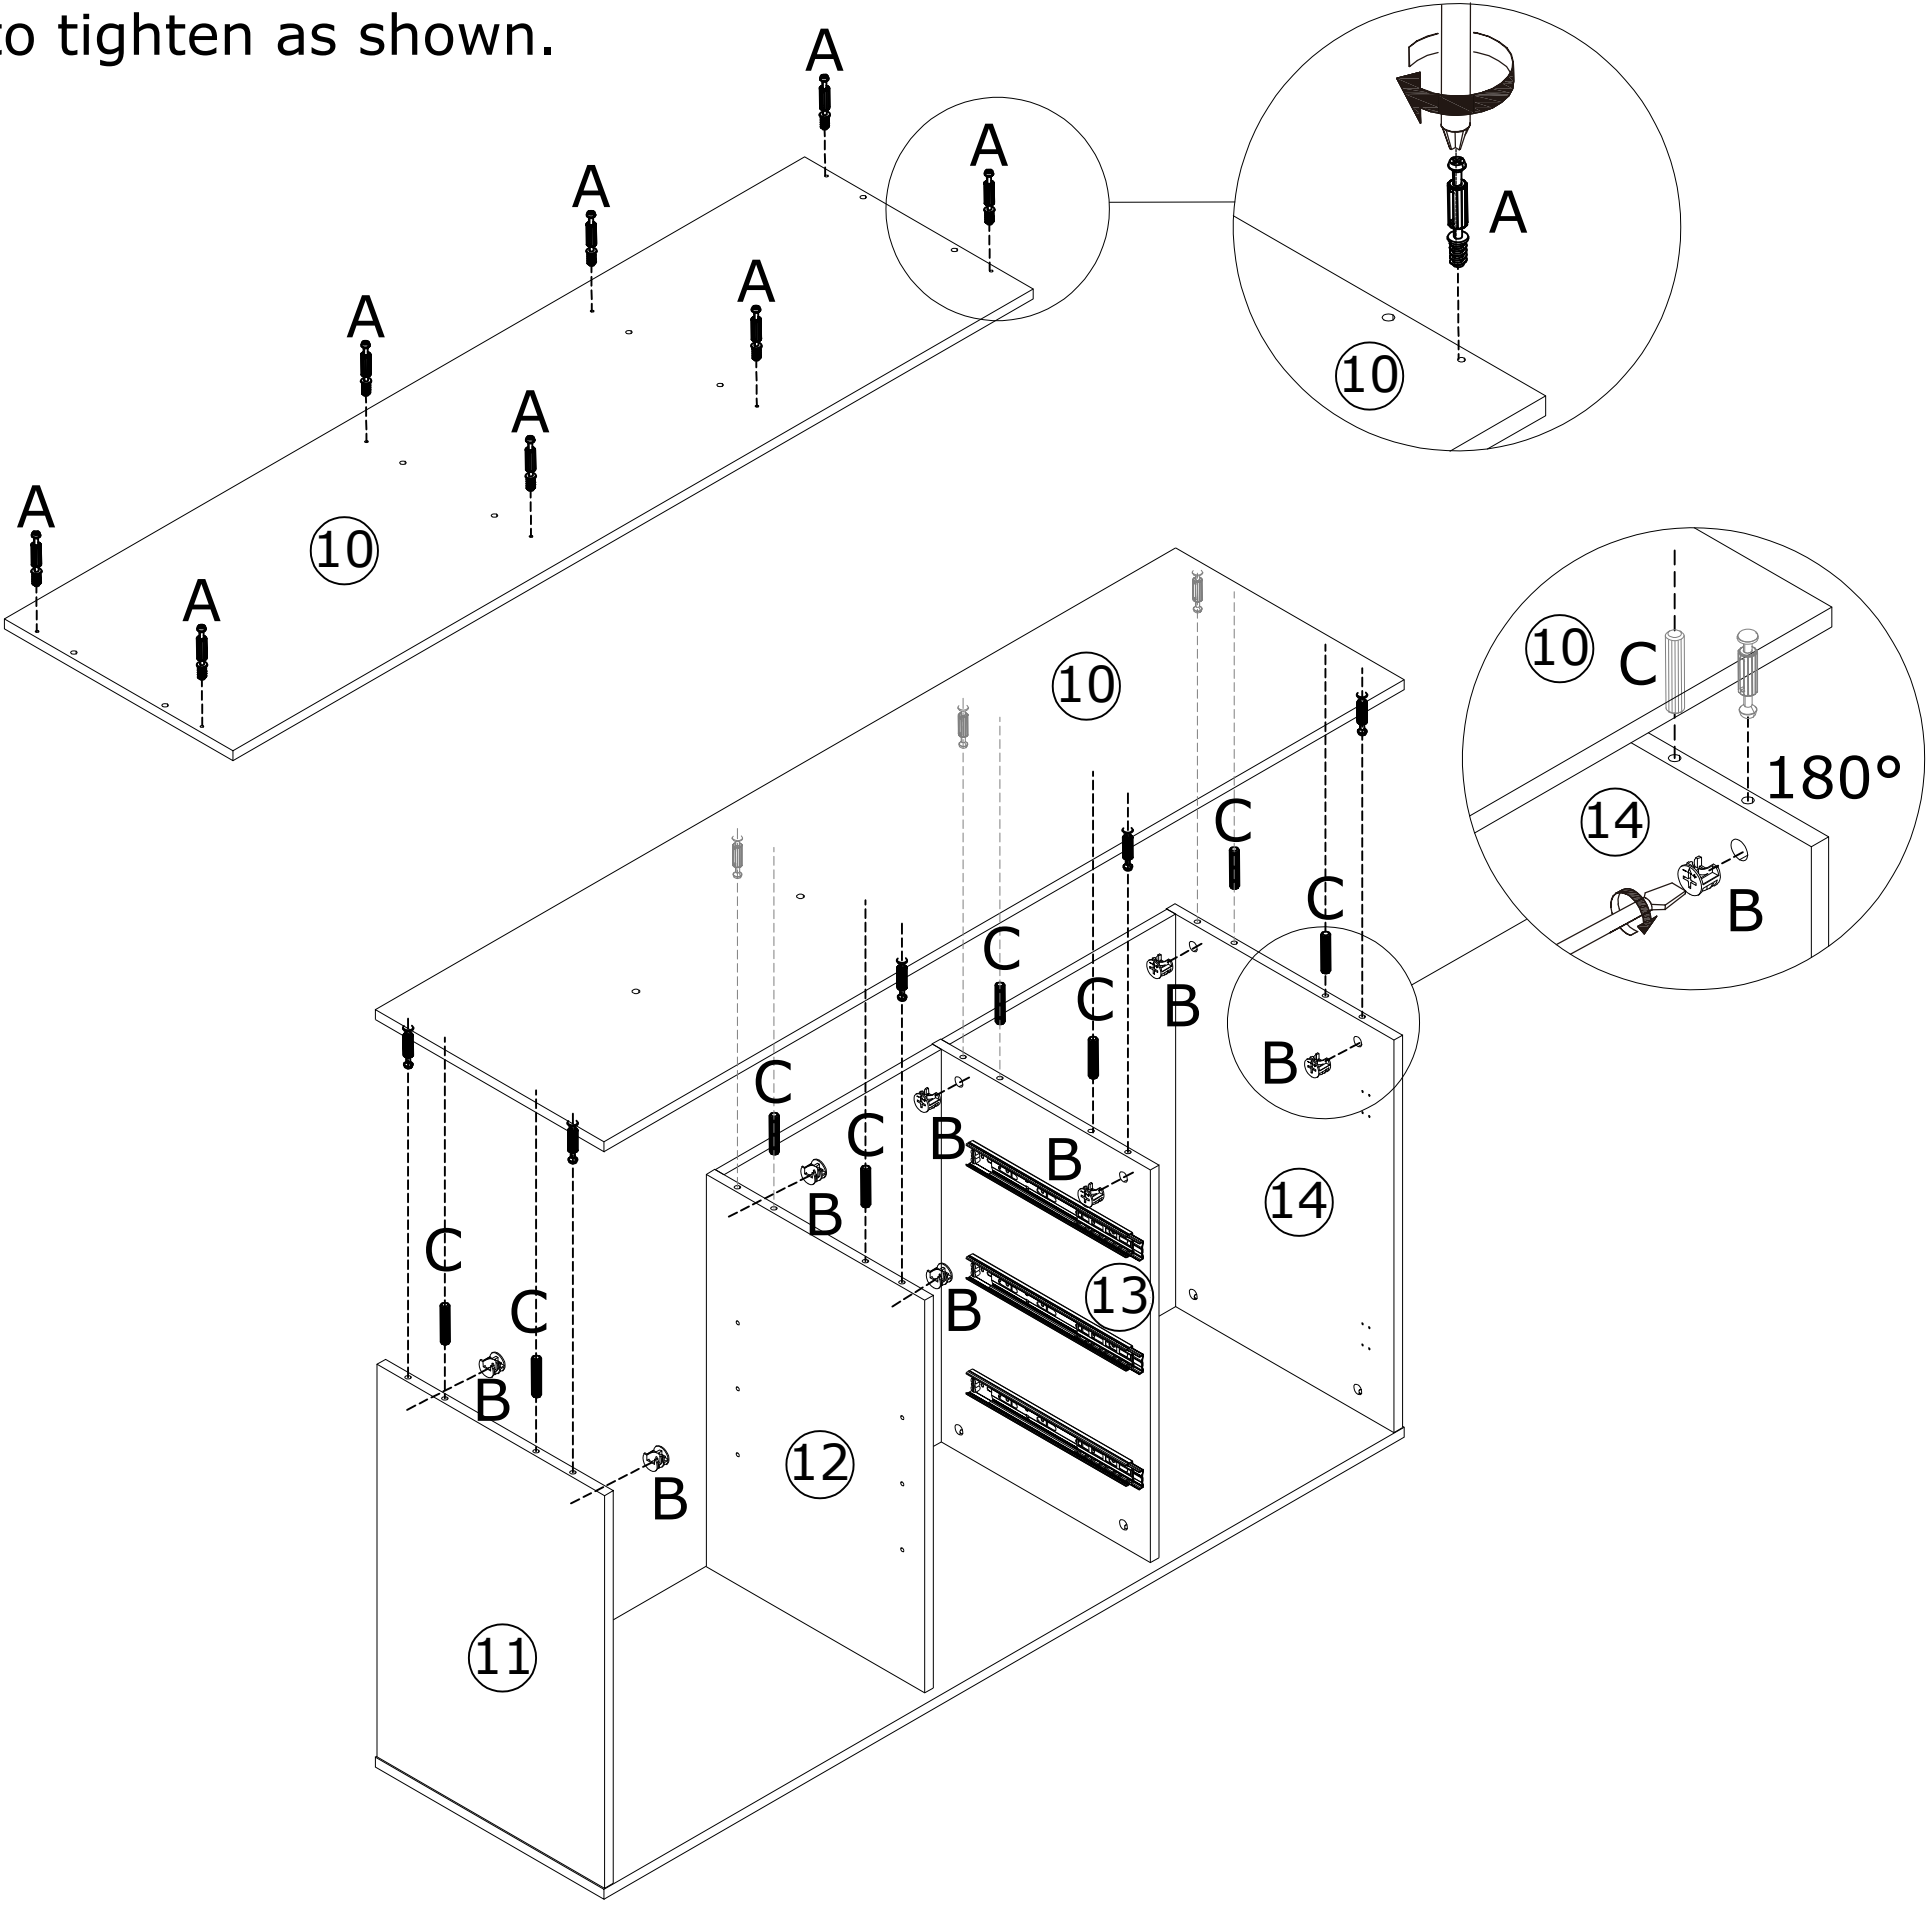

6


<p>D x 12</p>  <p>M3.5 x 14mm</p>	<p>E x 2</p>  <p>M4 x 18mm</p>	<p>F x 2</p>  <p>DW</p>	<p>Q x 1</p>  <p>220-96</p>	
--	---	---	--	---

Please don't use an electric drill or use force to rotate, may cause crack.
 Fix hinge(F) to No.17 plate with screw(D) as shown.
 Attach No.17 plate to No.14 by fixing hinge with screw(D).
 Fix handle(Q) with screw(E).

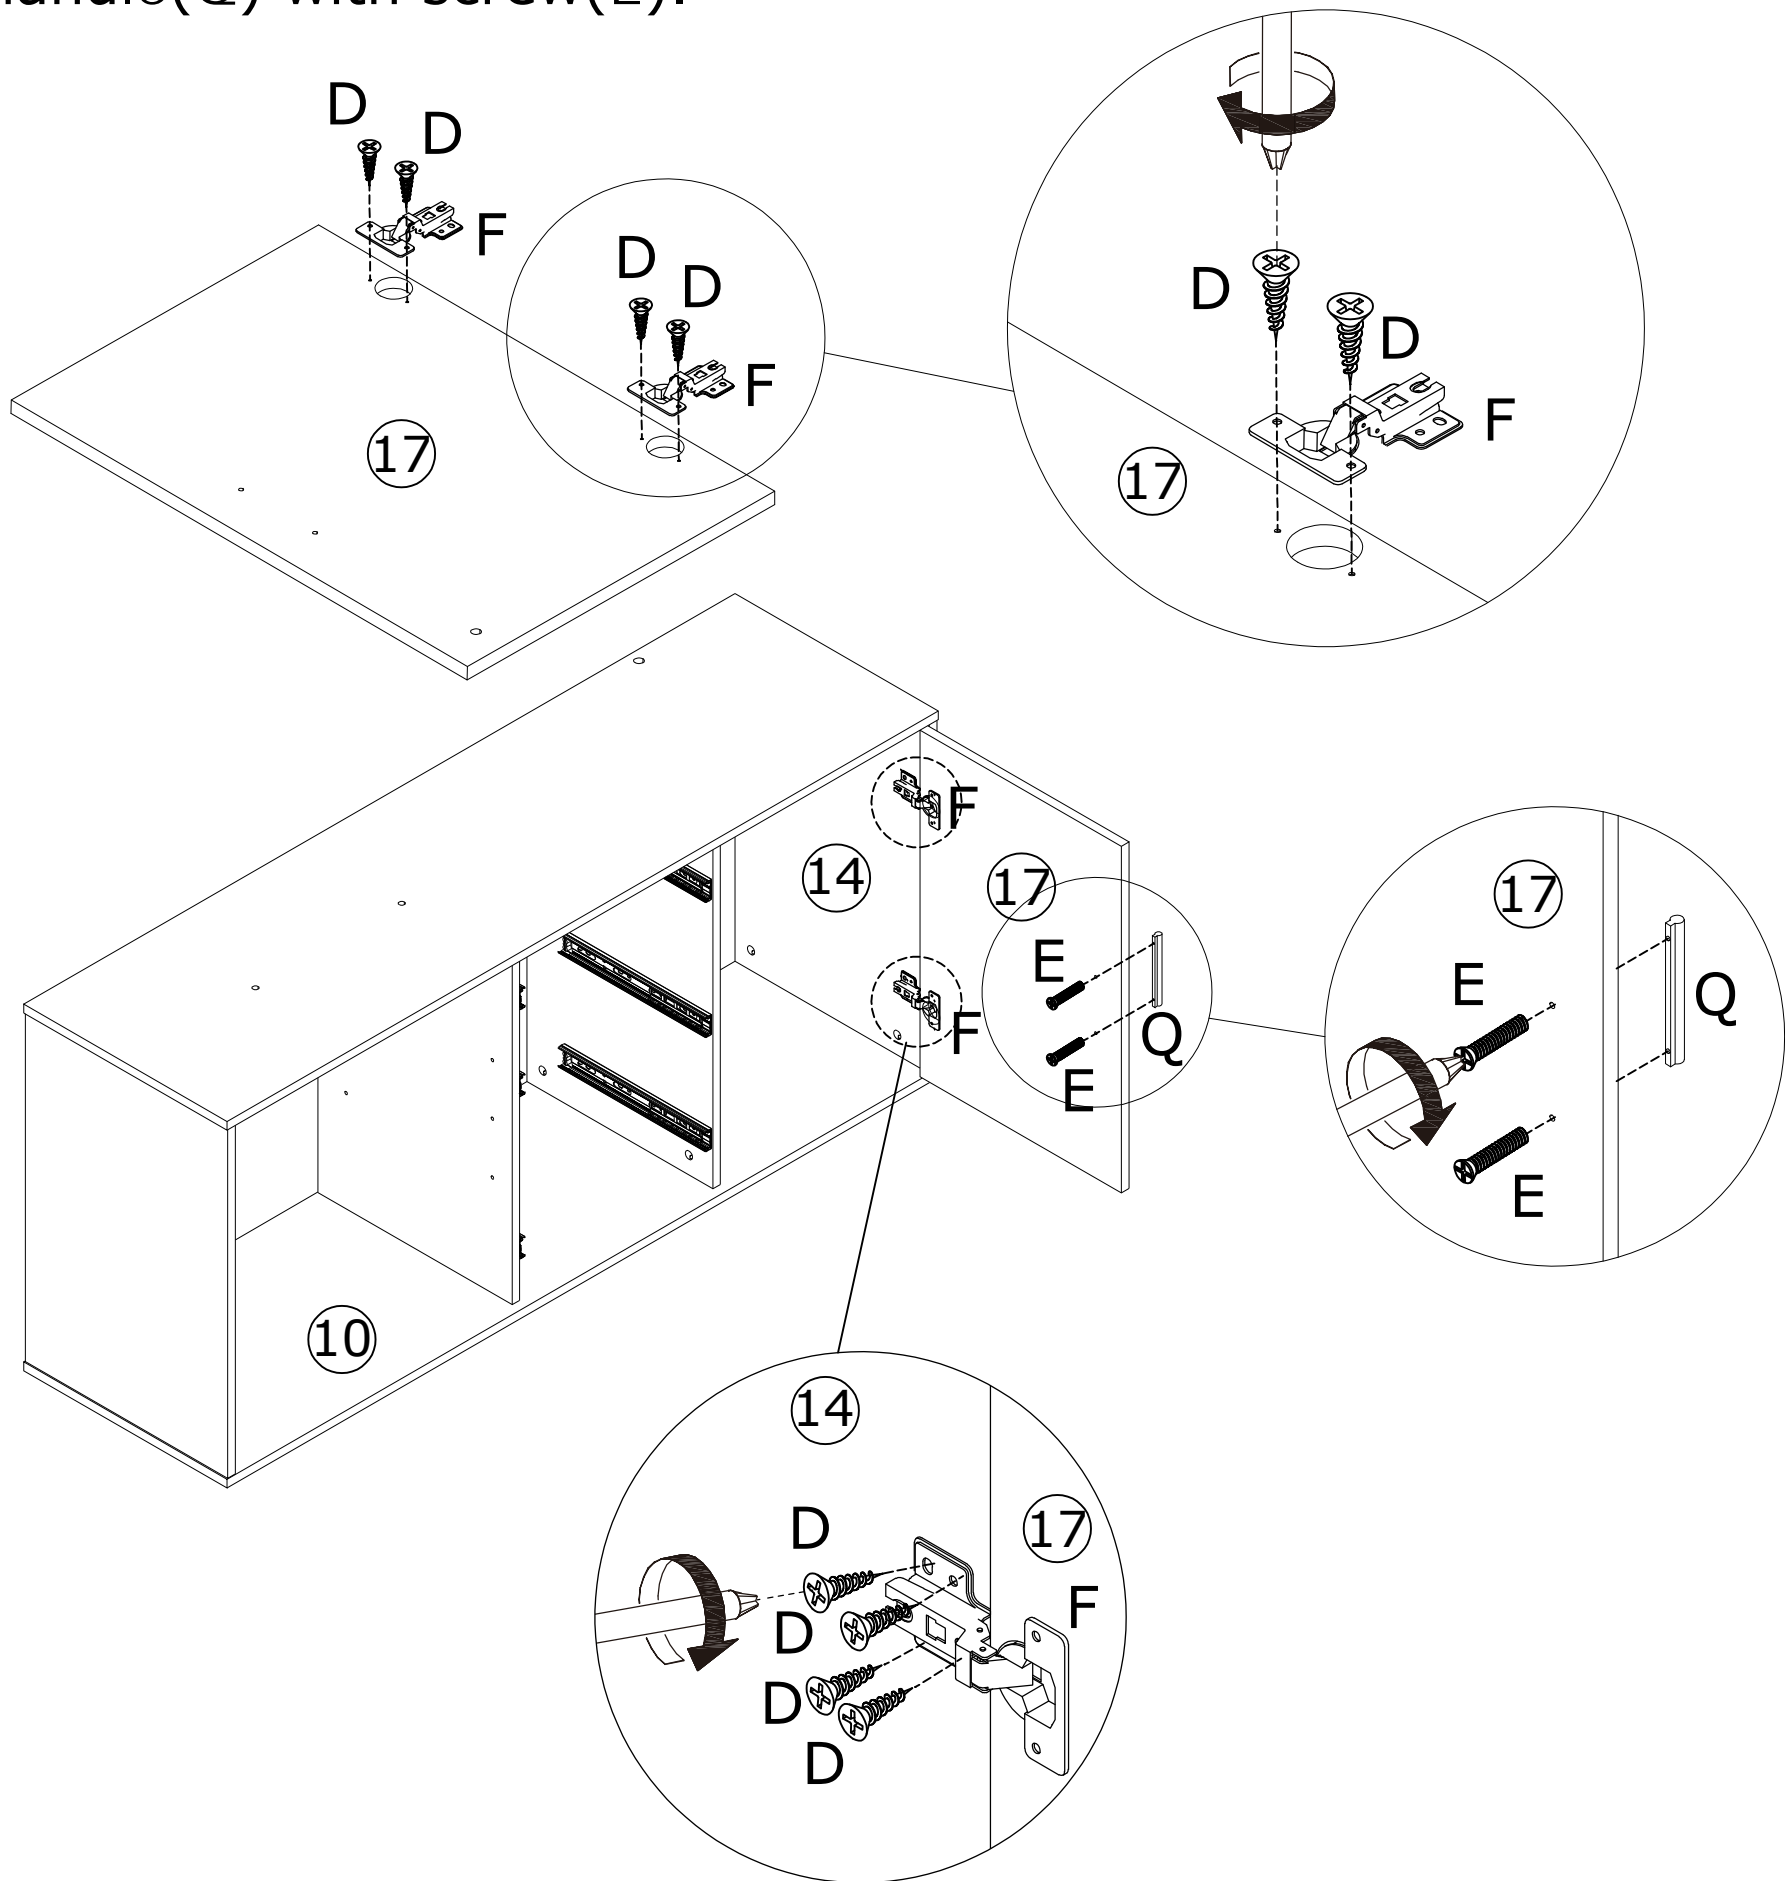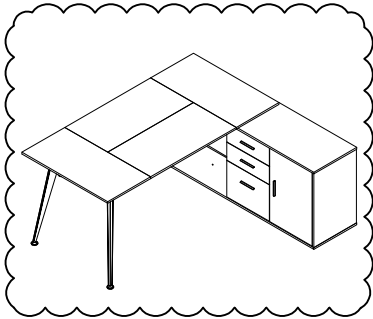

 
 
7

P x 6

 
 
 


Ø 30 x 3mm


Stick foot pad(P) to the bottom as shown.

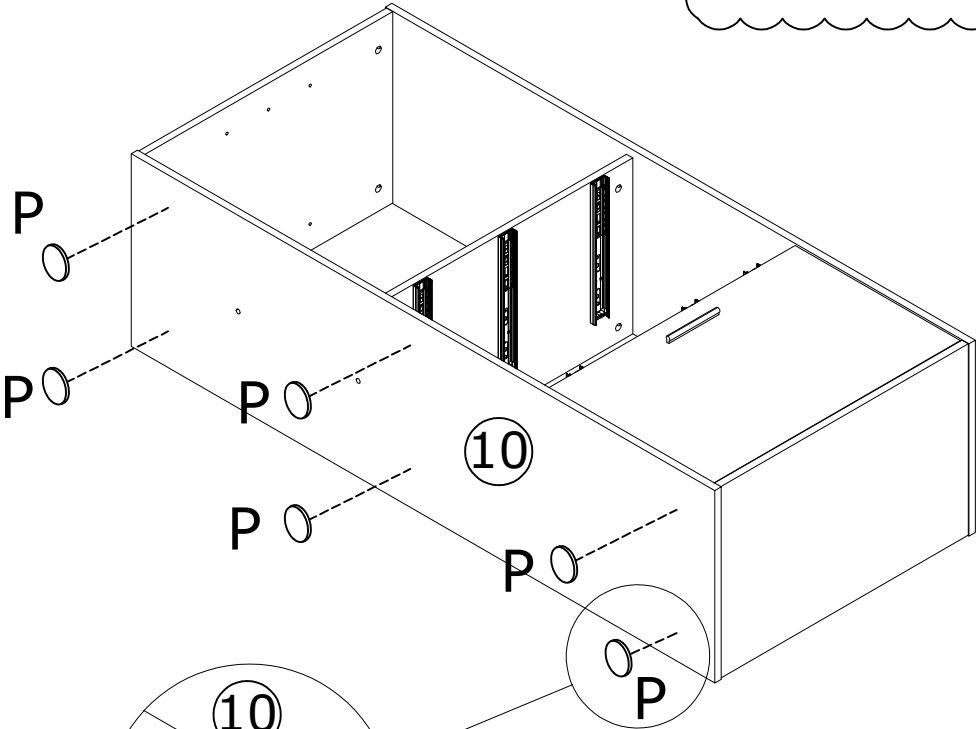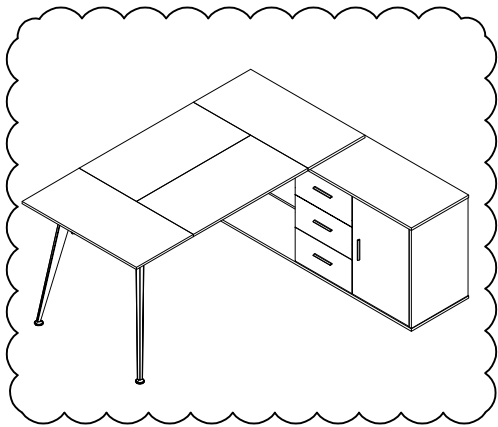 


OR

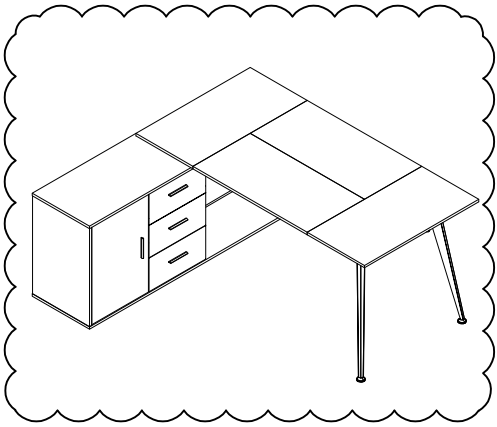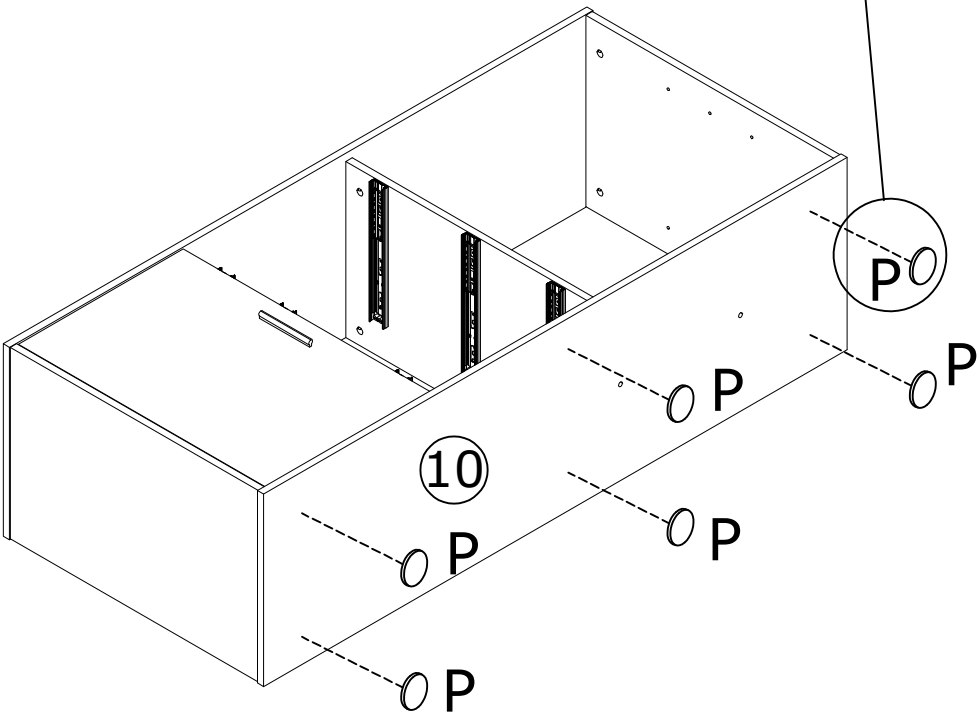 
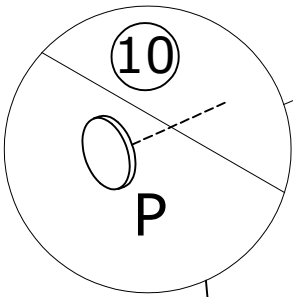 


8

 
 
<p>G x 4</p>  <p>Ø 5mm</p>	
---	--

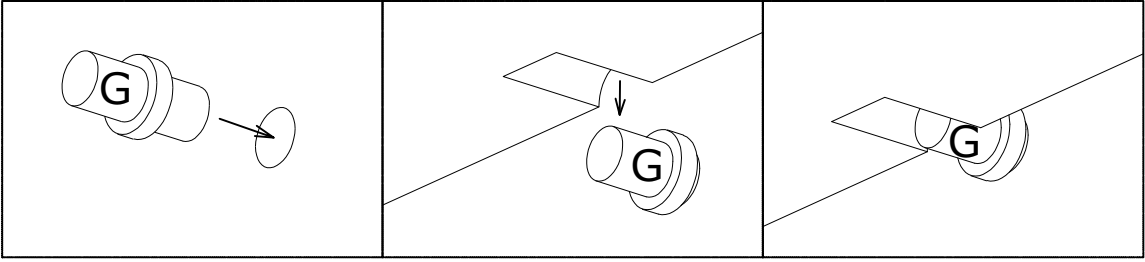

 
Insert part(G) into No.11 and No.12 plate,
place No.18 shelf in as shown.

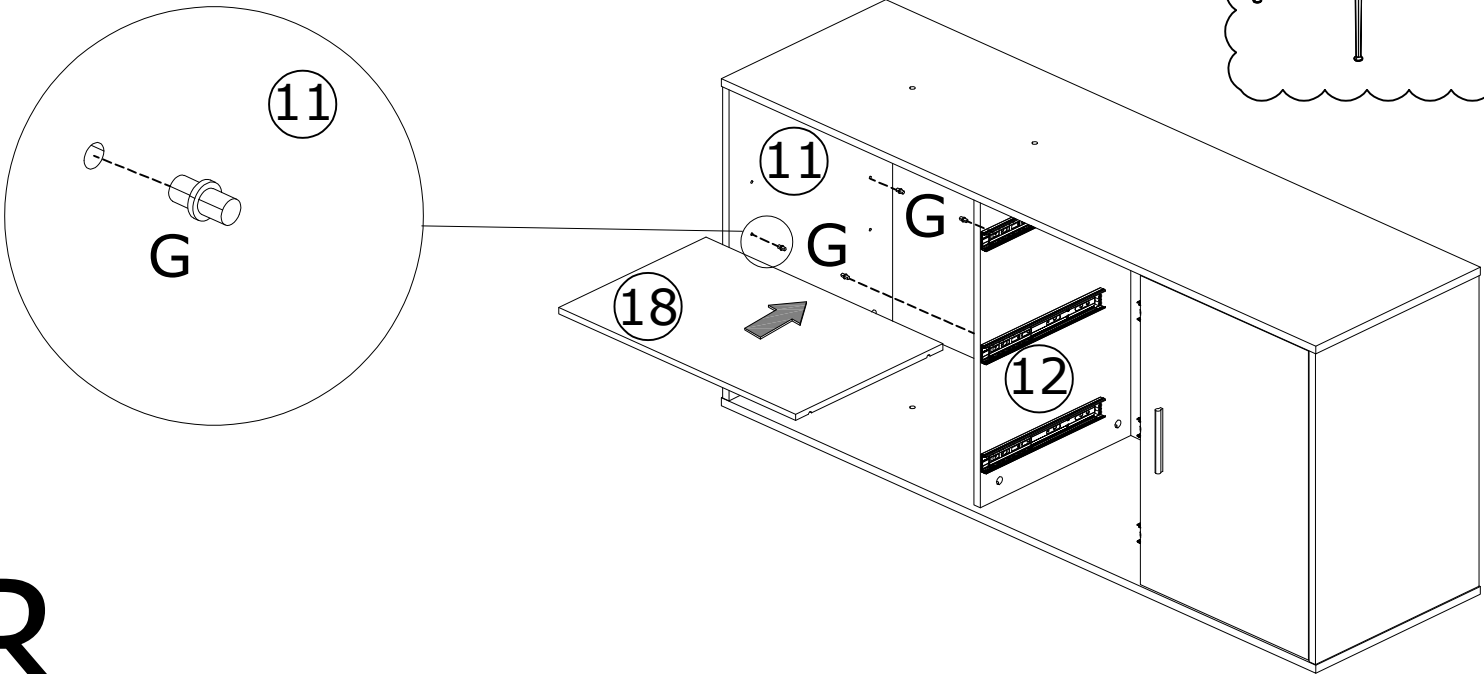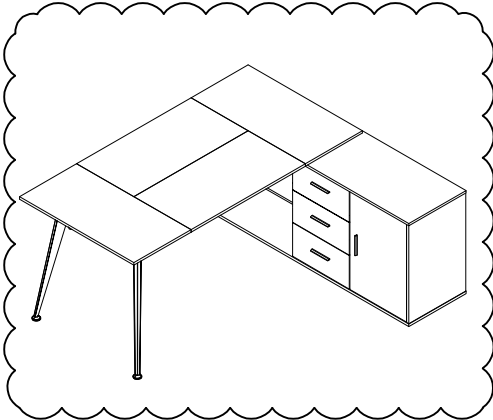

 
OR

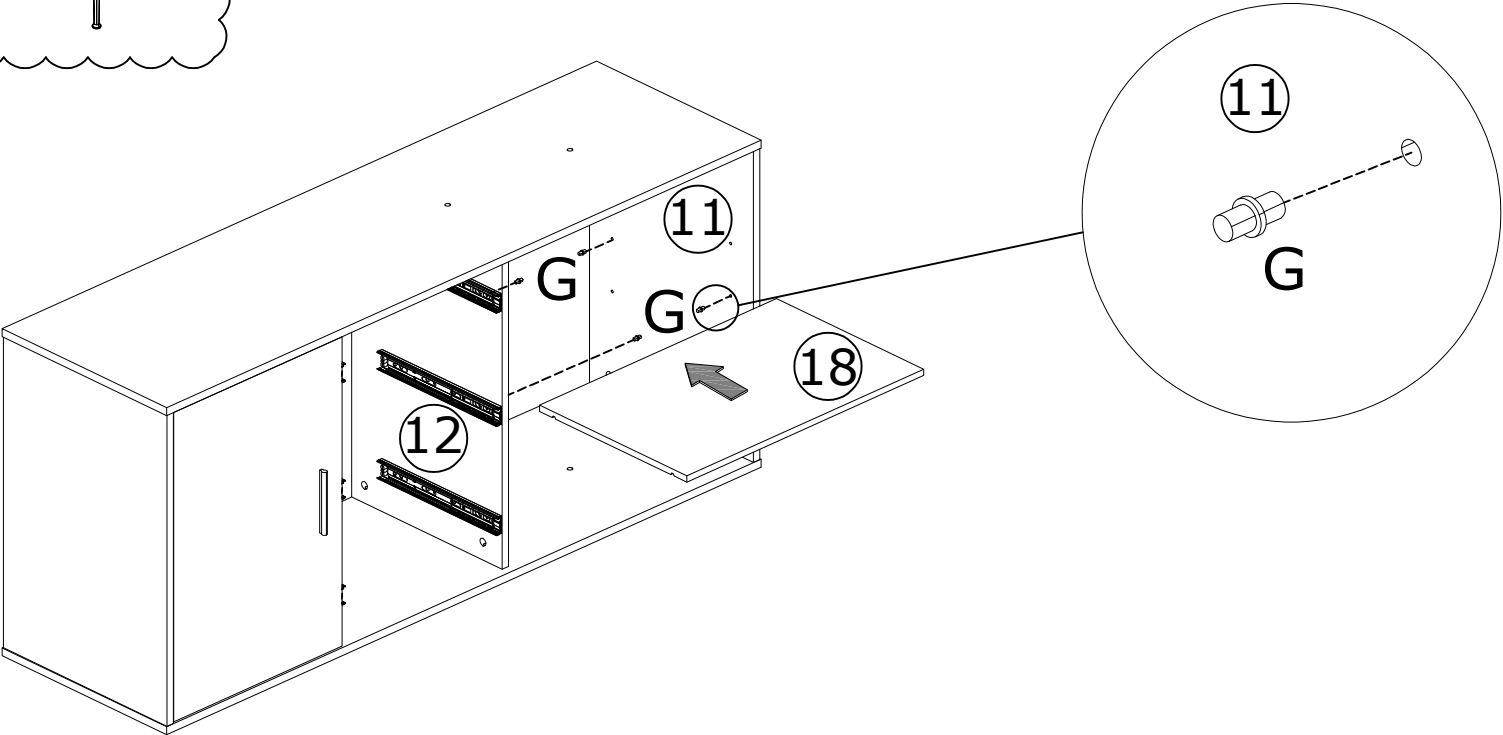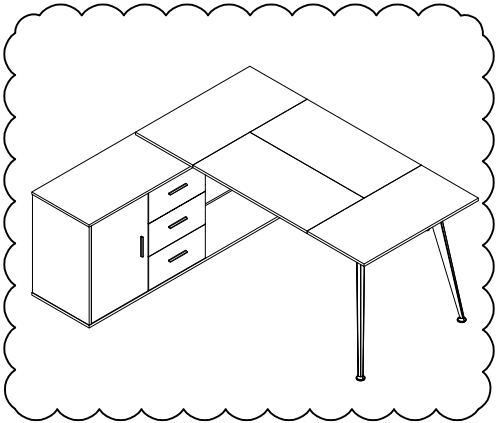



 
9

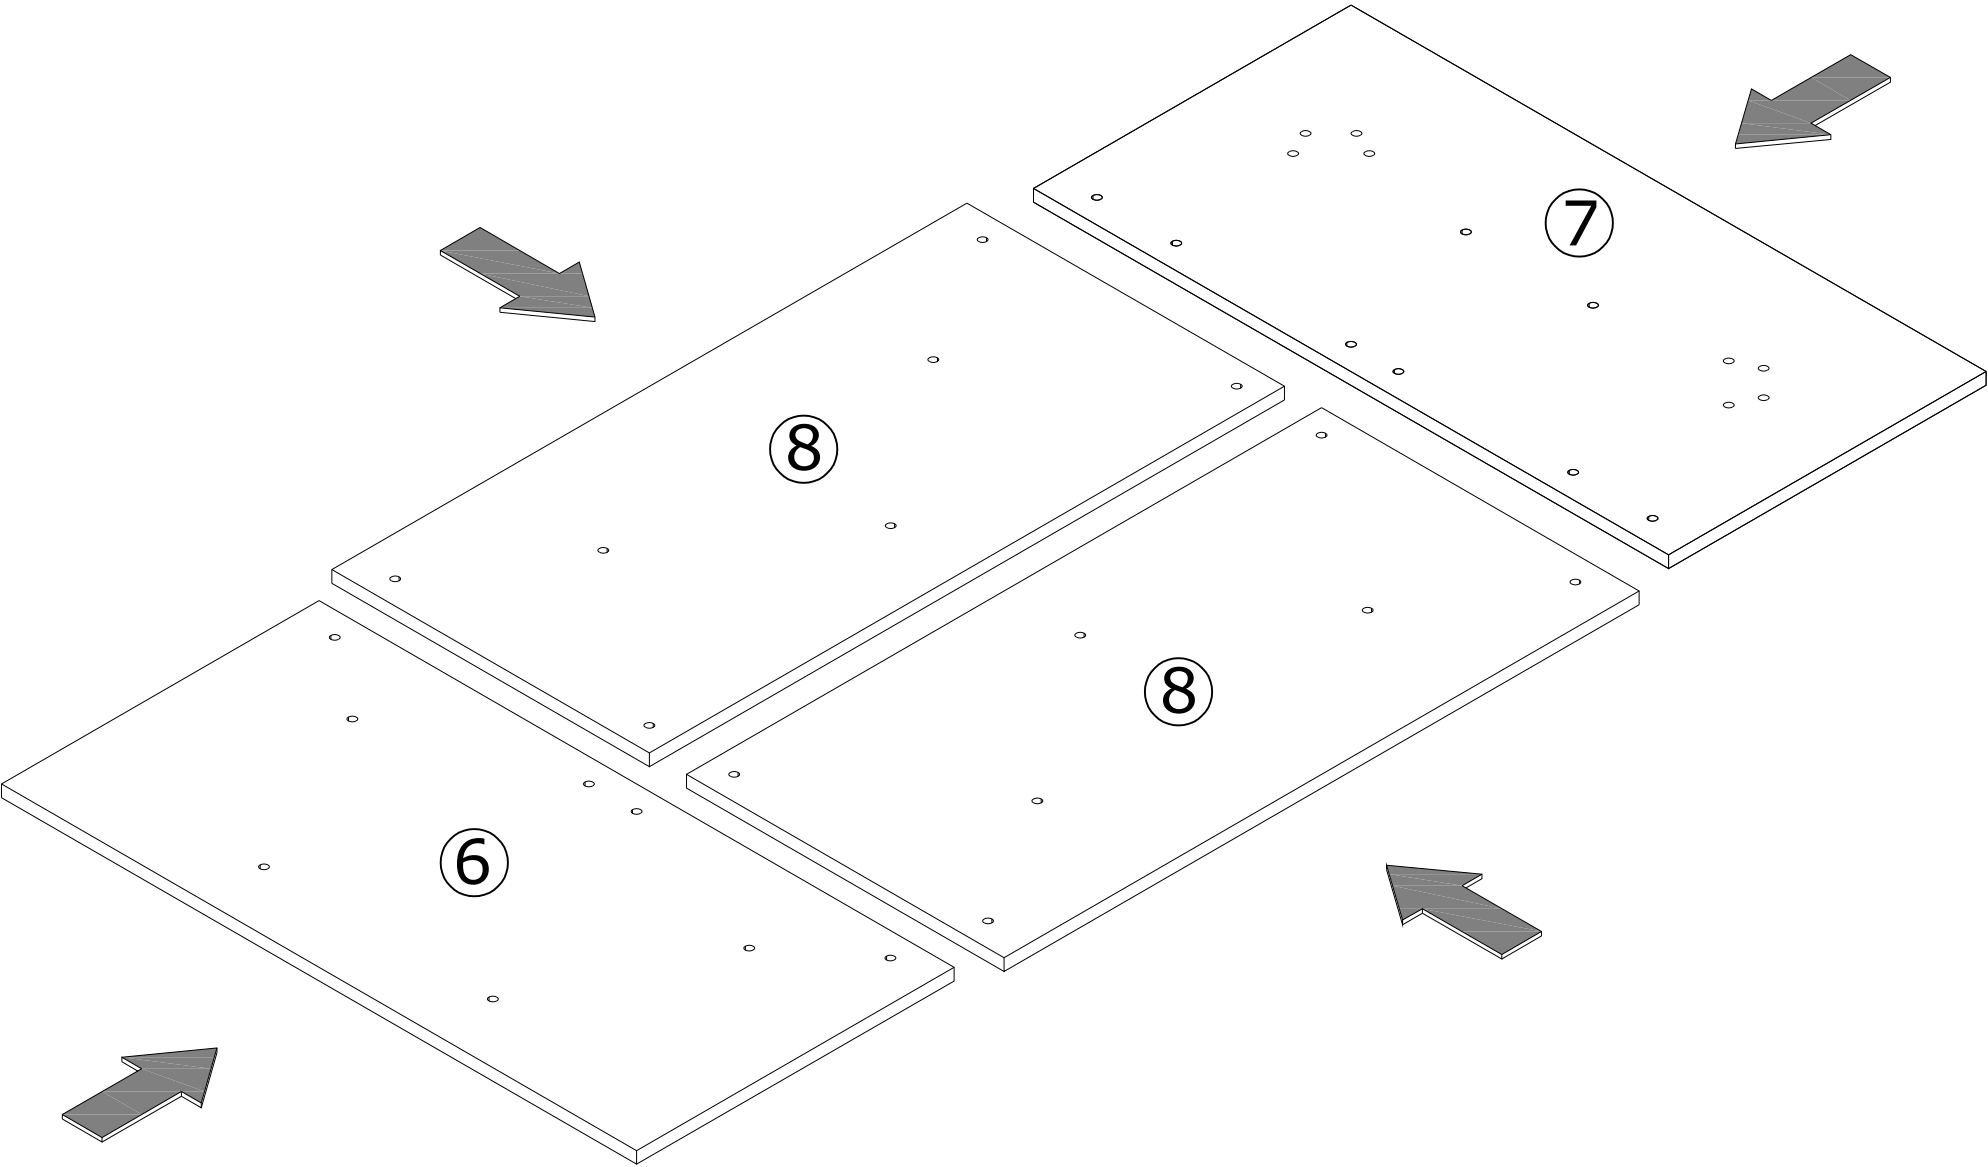

 
Assemble No.6, No.7 and No.8 plate together as shown.



10
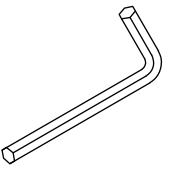
<p>H x 10</p>  <p>M6 x 60mm</p>	<p>J x 4</p>  <p>M6 x 35mm</p>	
--	---	---

Attach No.1 iron frame to these plates and fix with screw(H) and (J) as shown.

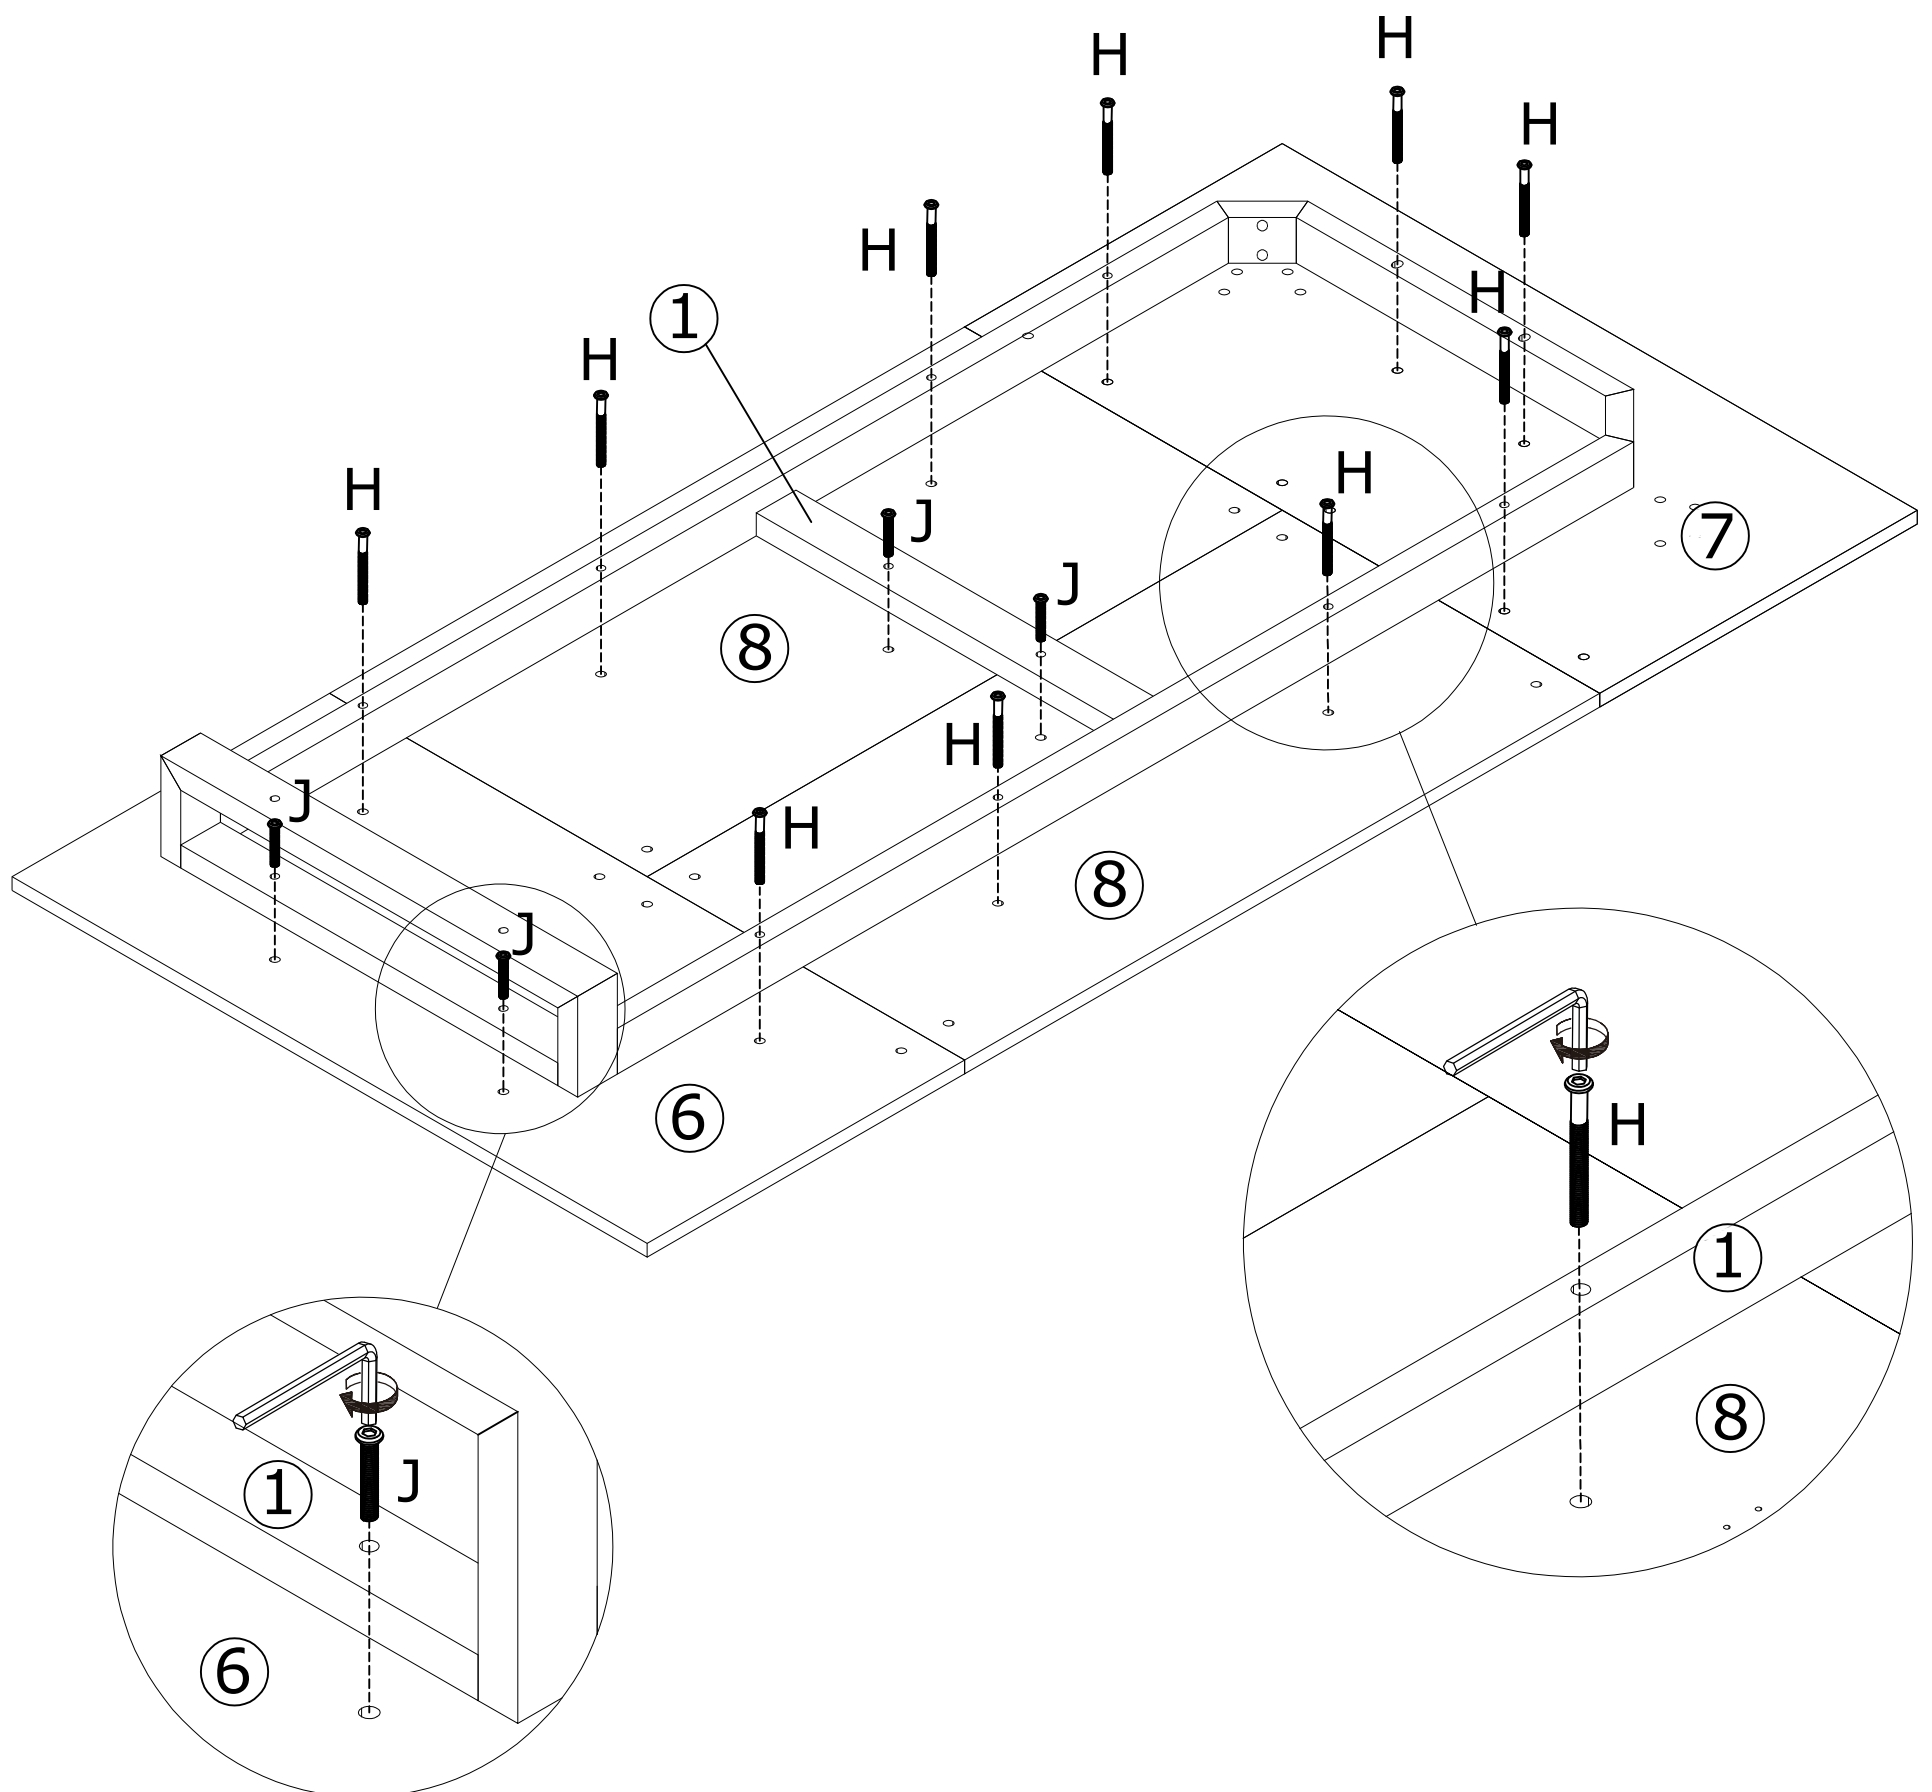 


11

 
K x 16



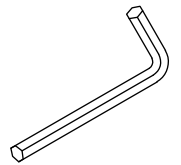

 
M6 x 12mm

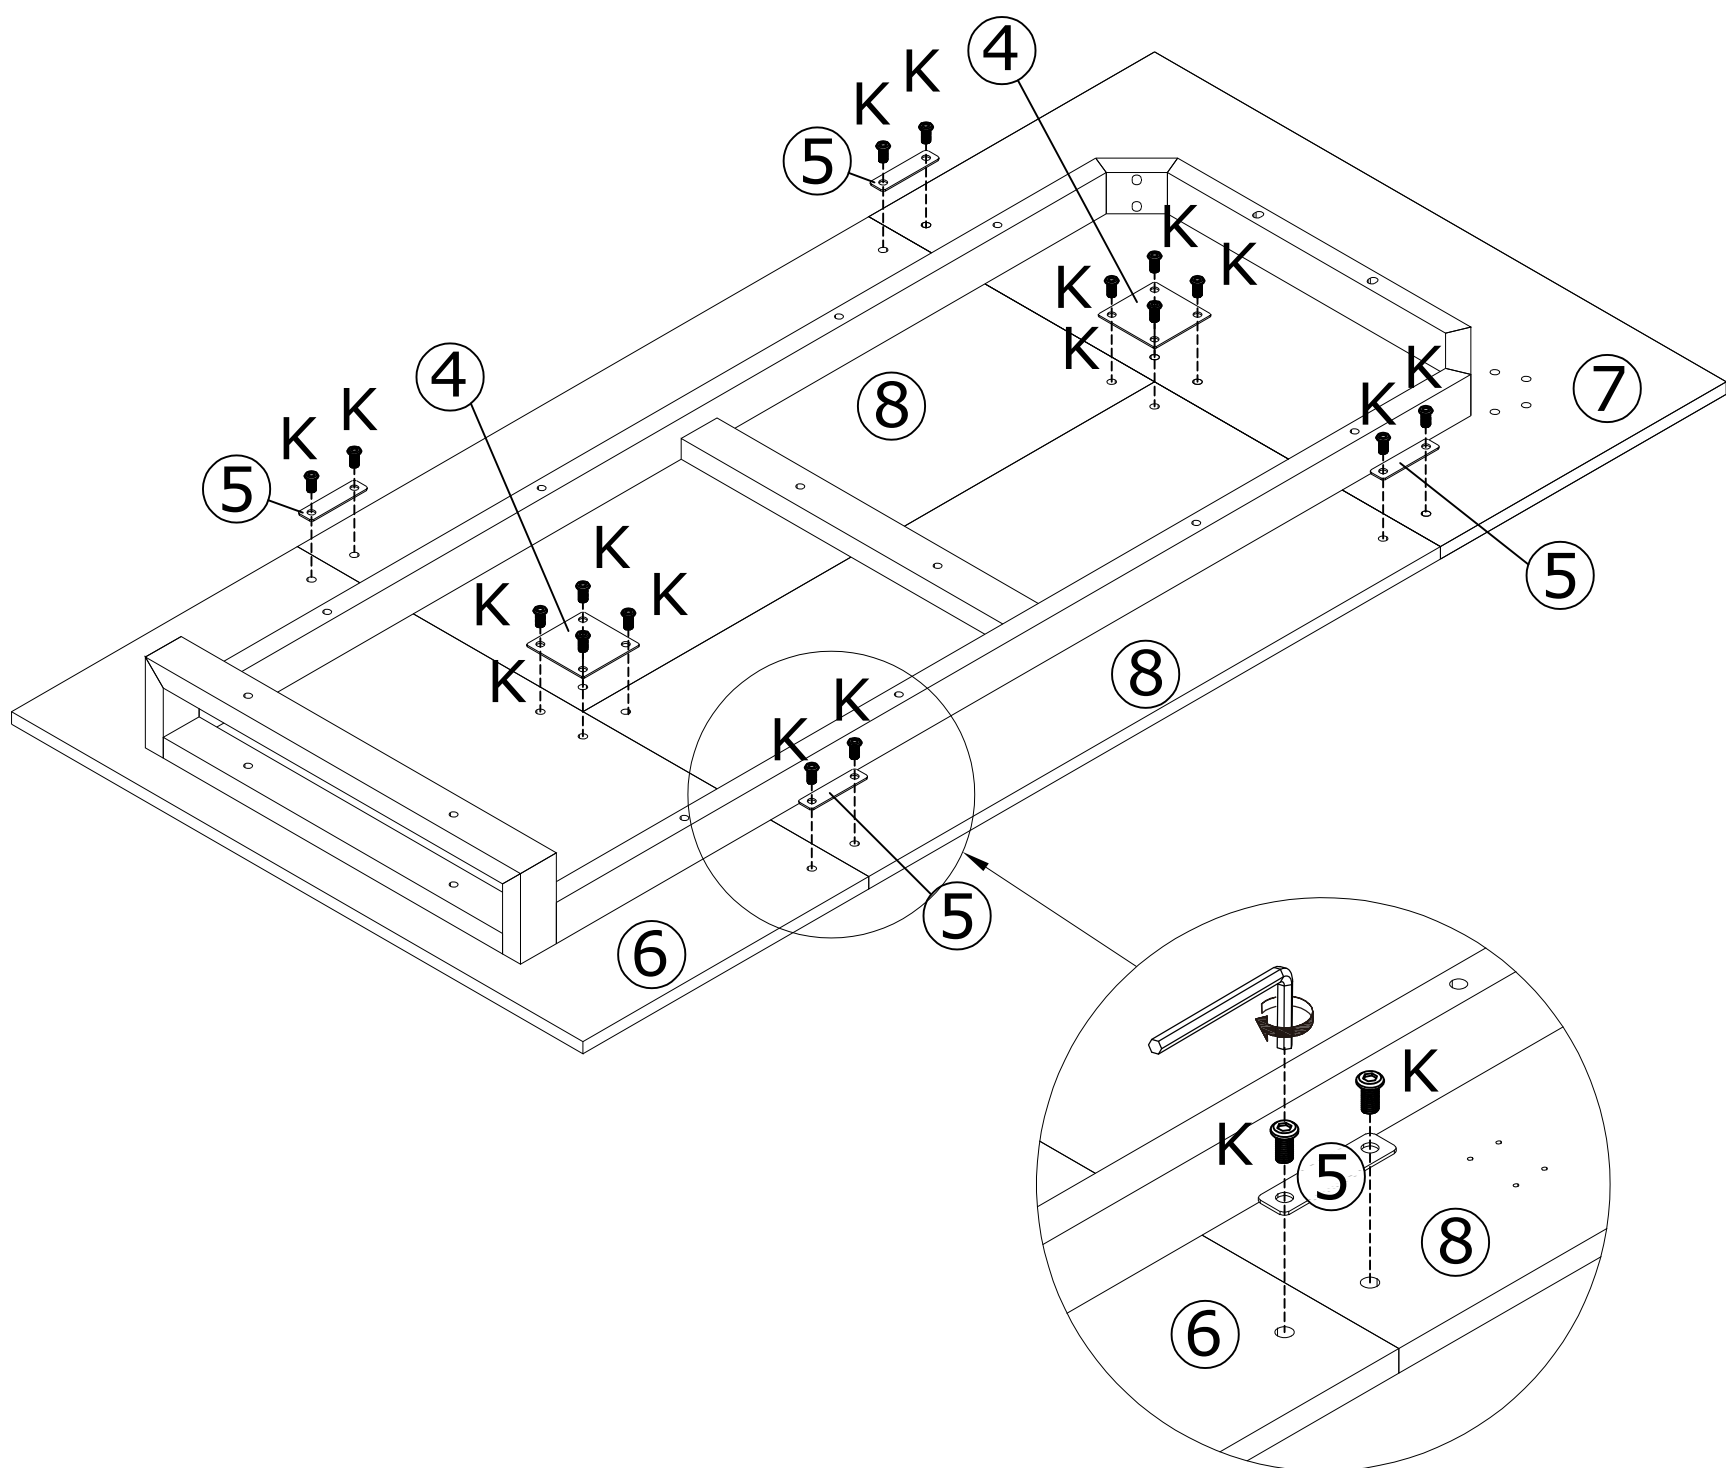

 
Fix No.4 and No.5 iron sheet to the component with screw(K) as shown.



12
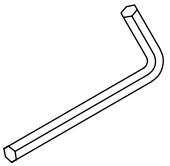
<p>N x 2</p>  <p>M8 x 44mm</p>	<p>J x 4</p>  <p>M6 x 35mm</p>	
---	---	---

Rotate foot pegs(N) into No.2 leg at first.
Assemble No.2 leg to the iron frame with screw(J) as shown.

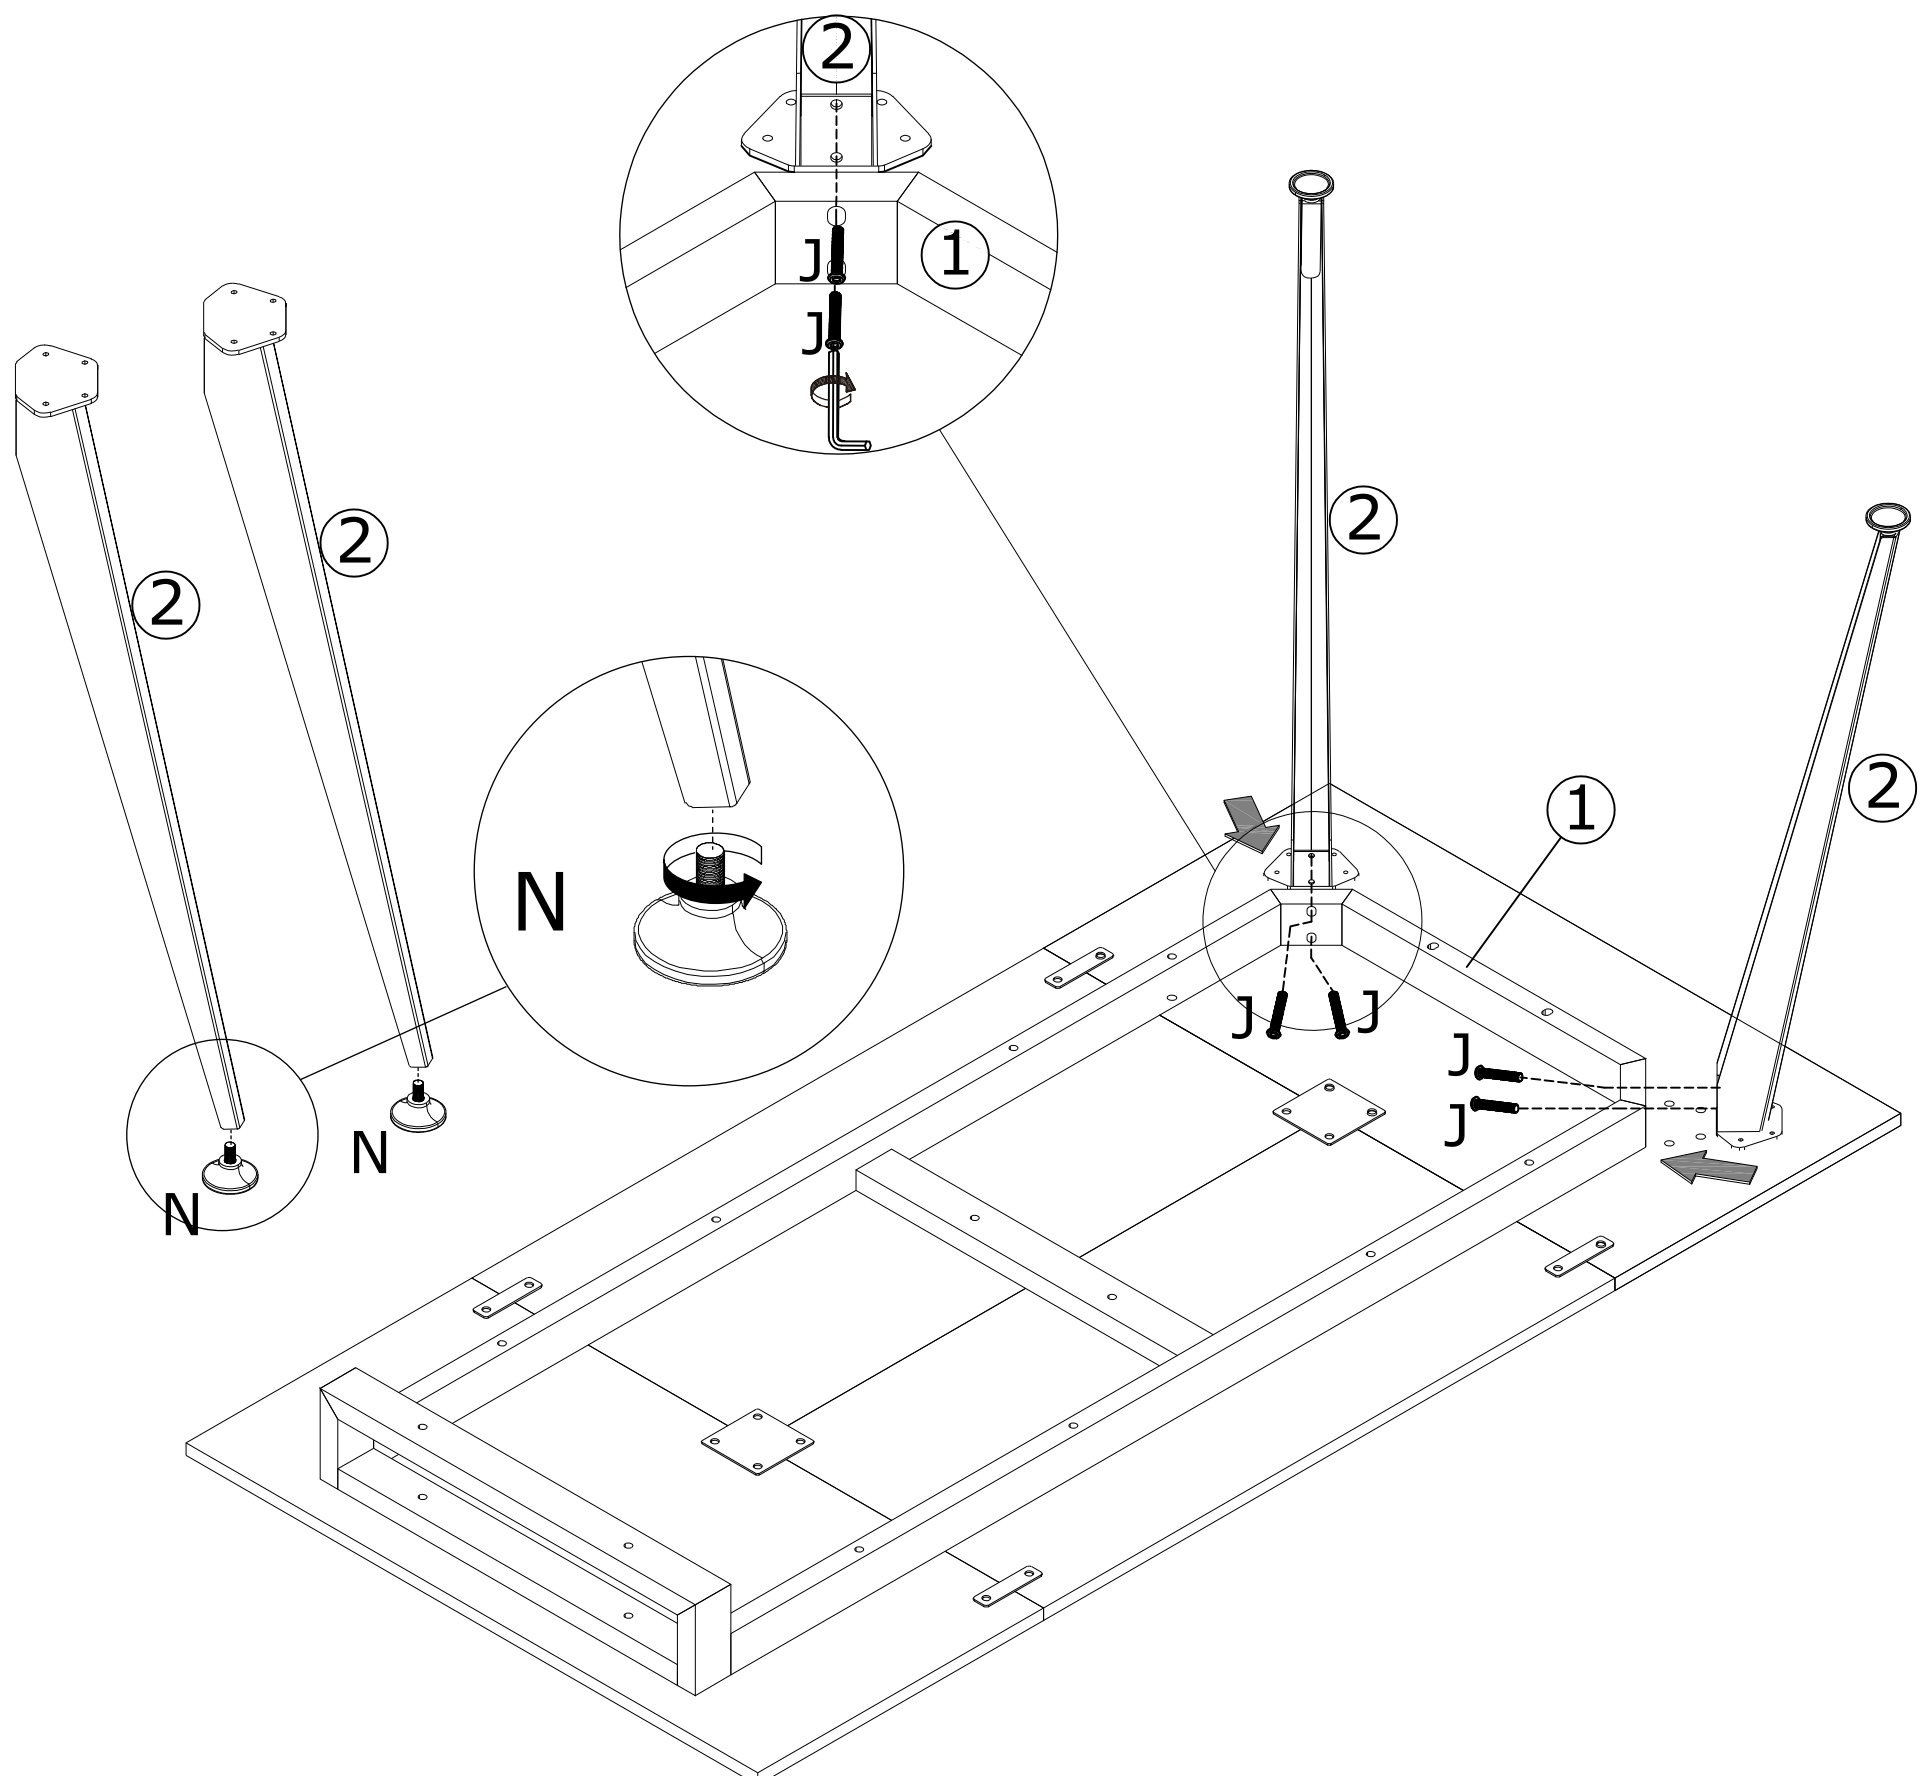 


13

 
K x 8



M6 x 12mm

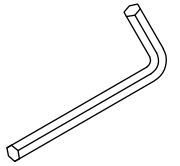 


Fix No.2 leg with No.7 plate together using screw(K) as shown.

 
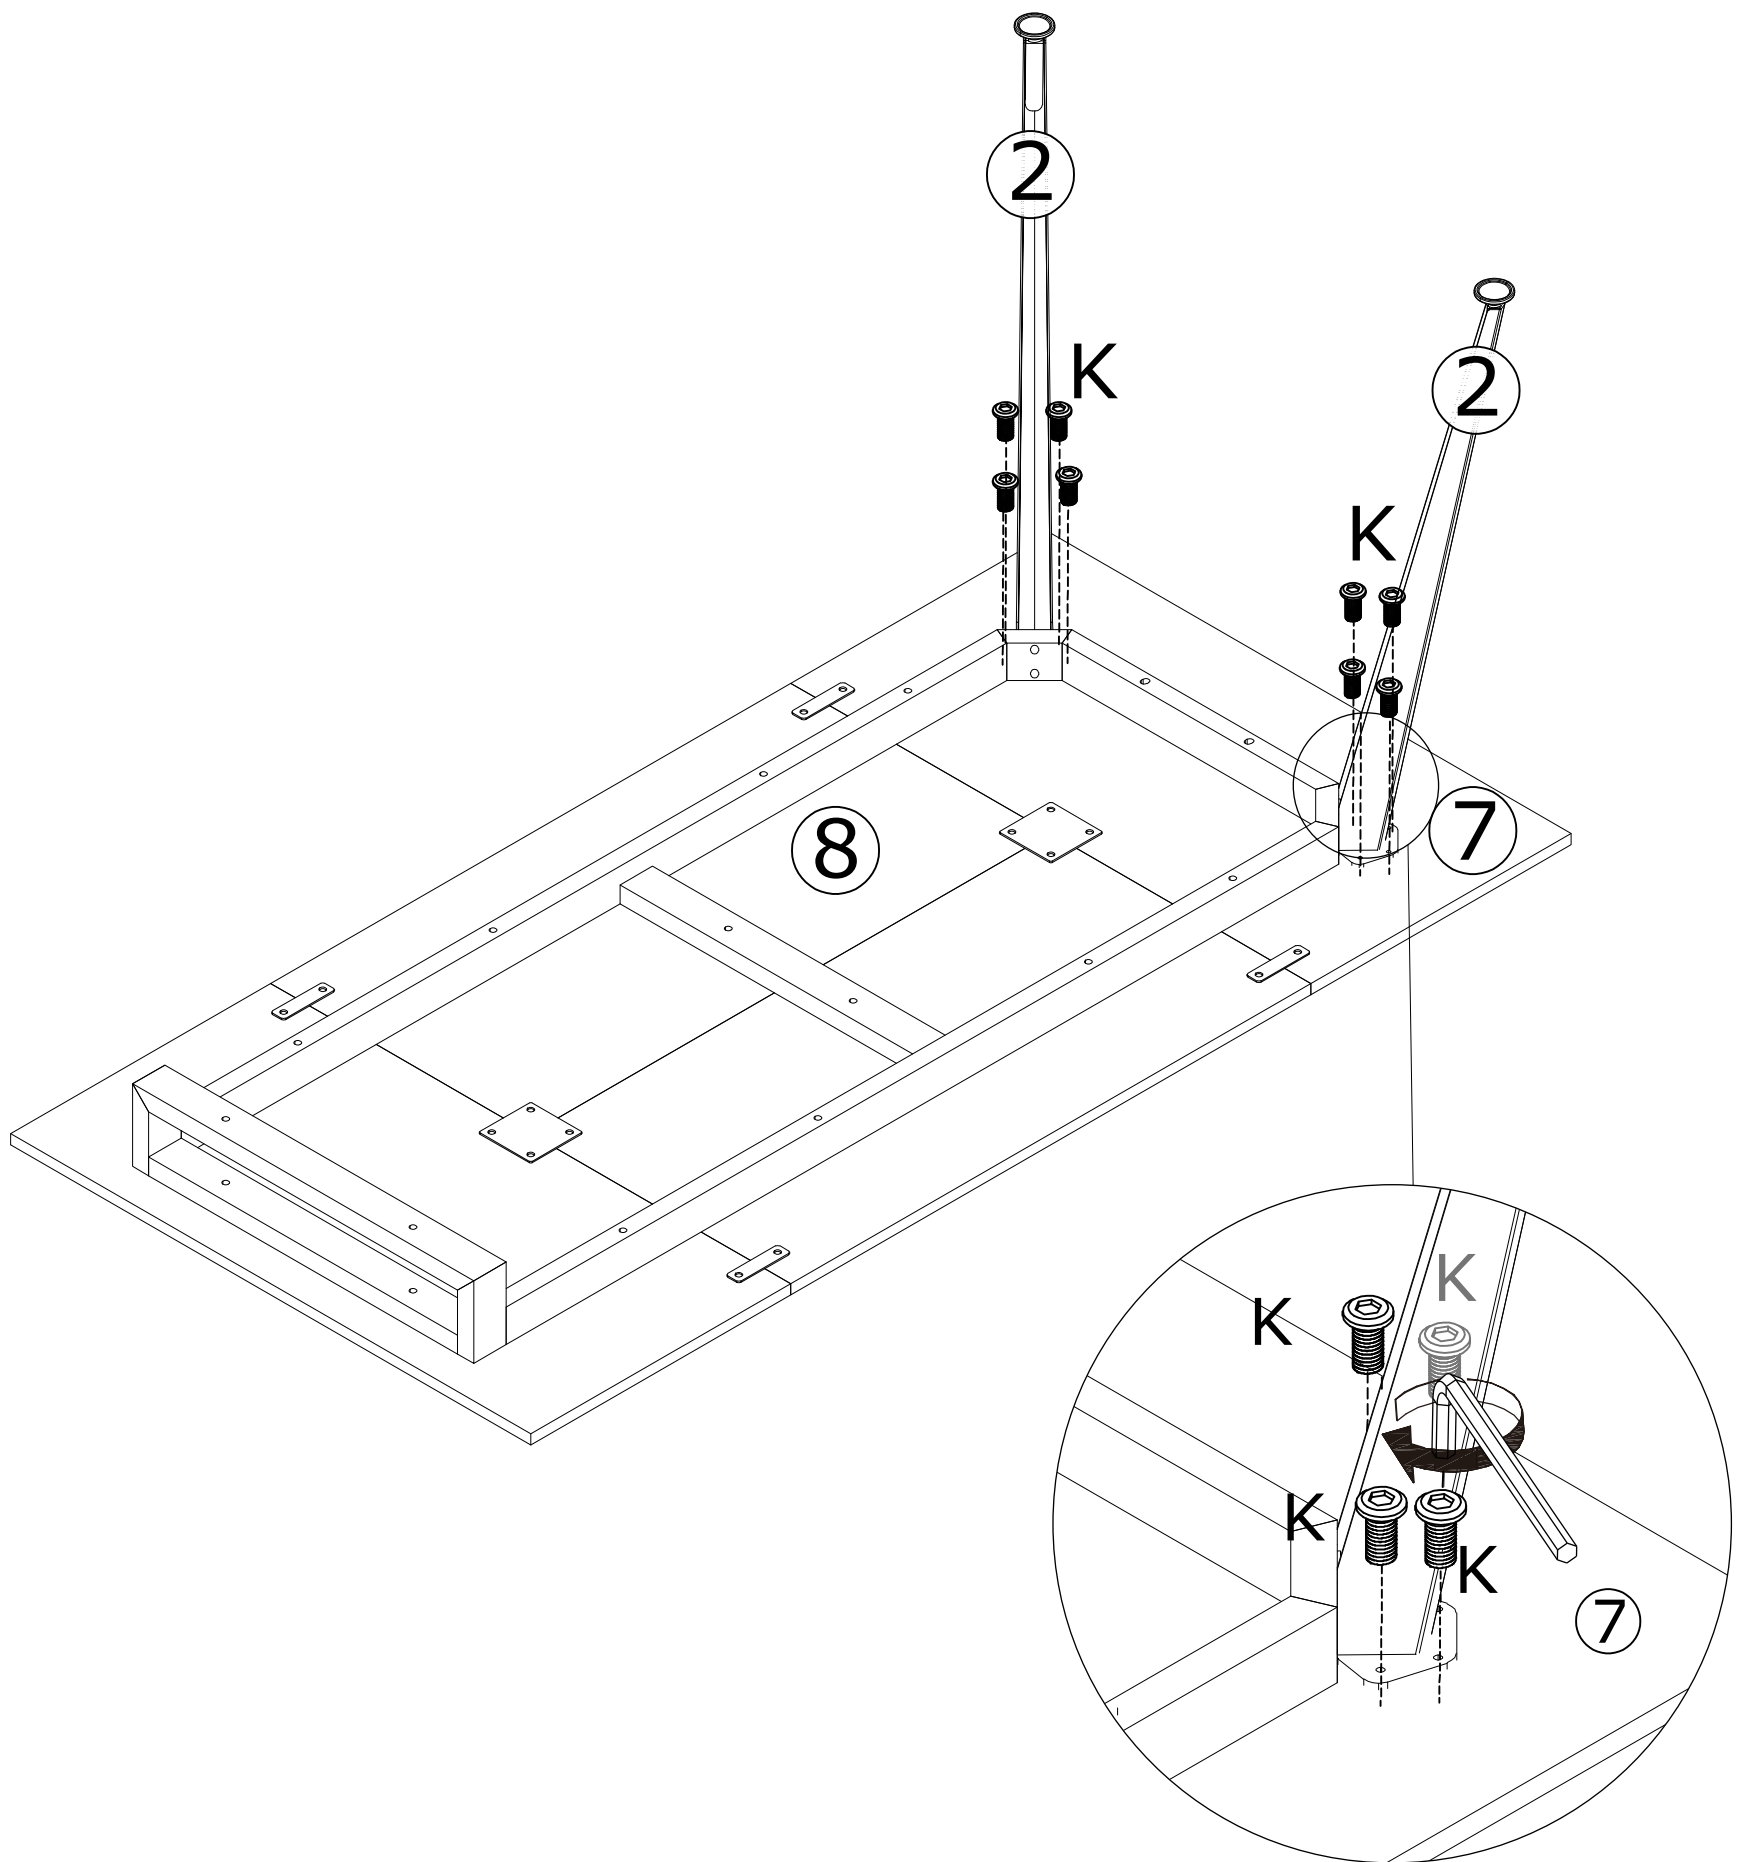 


14

 
 
J x 2
M6 x 35mm

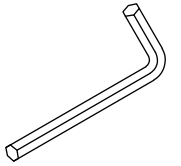

 
Fix the desk to sideboard using screw(J) as shown.

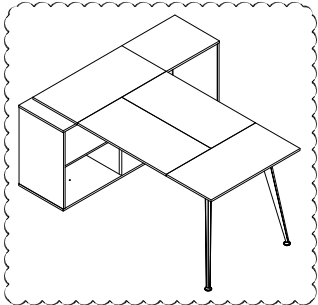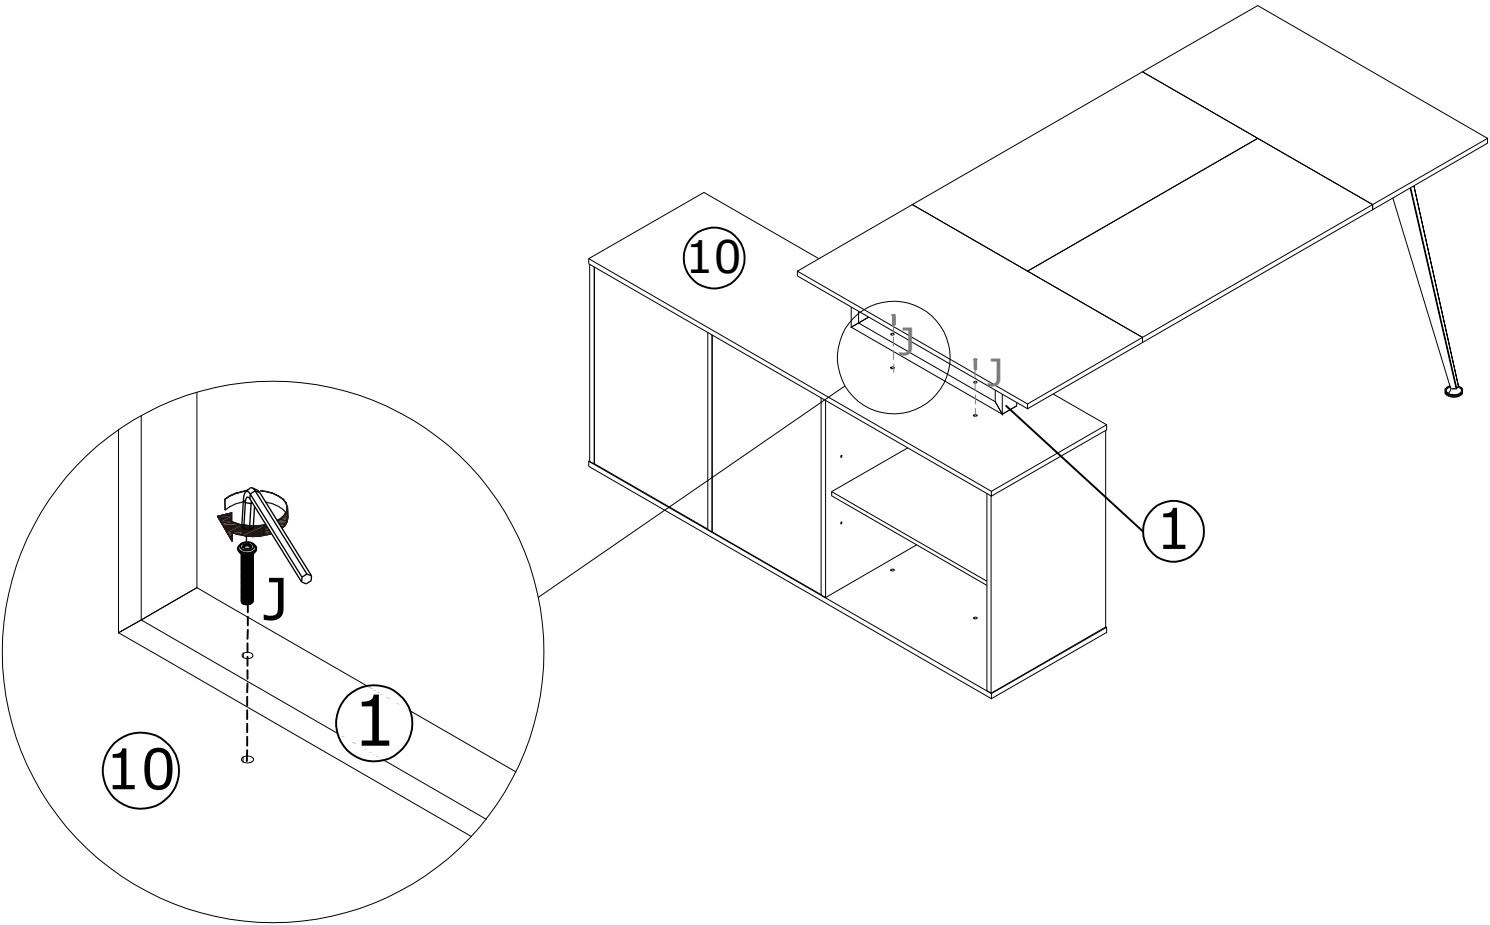

 
 
OR

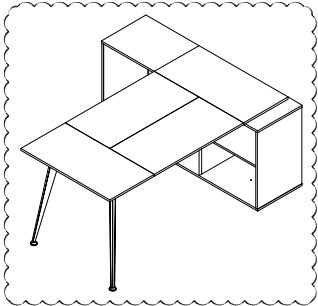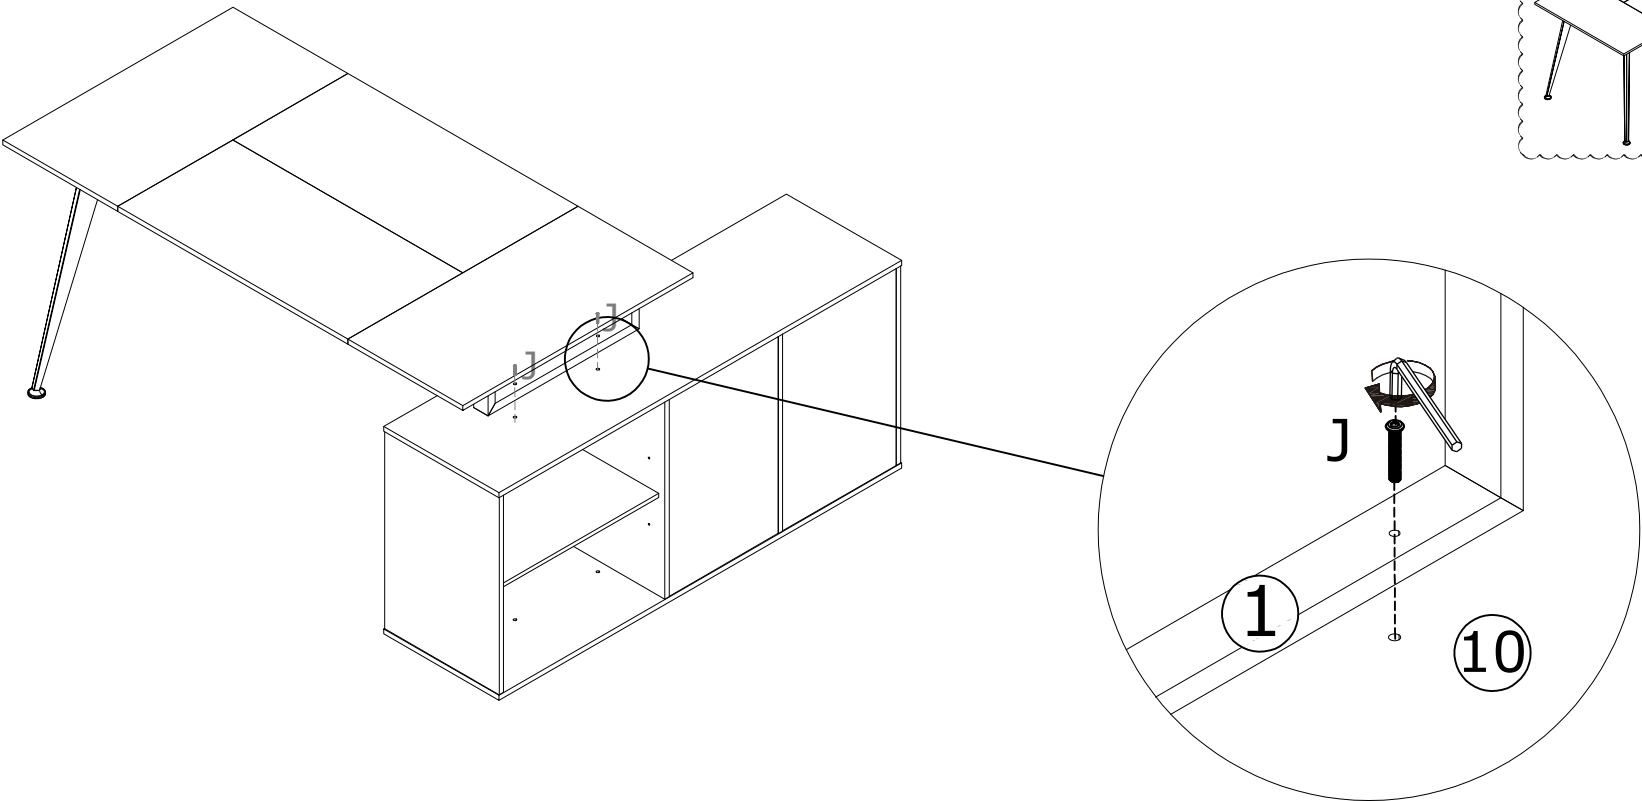

 
 
15

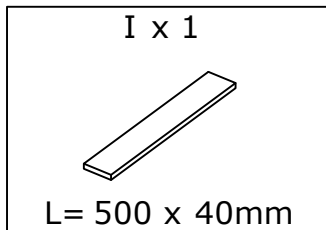

Or if you wanna the item is flexible, just stick non-slip mat(I) to corresponding position, then attach the desk to sideboard.

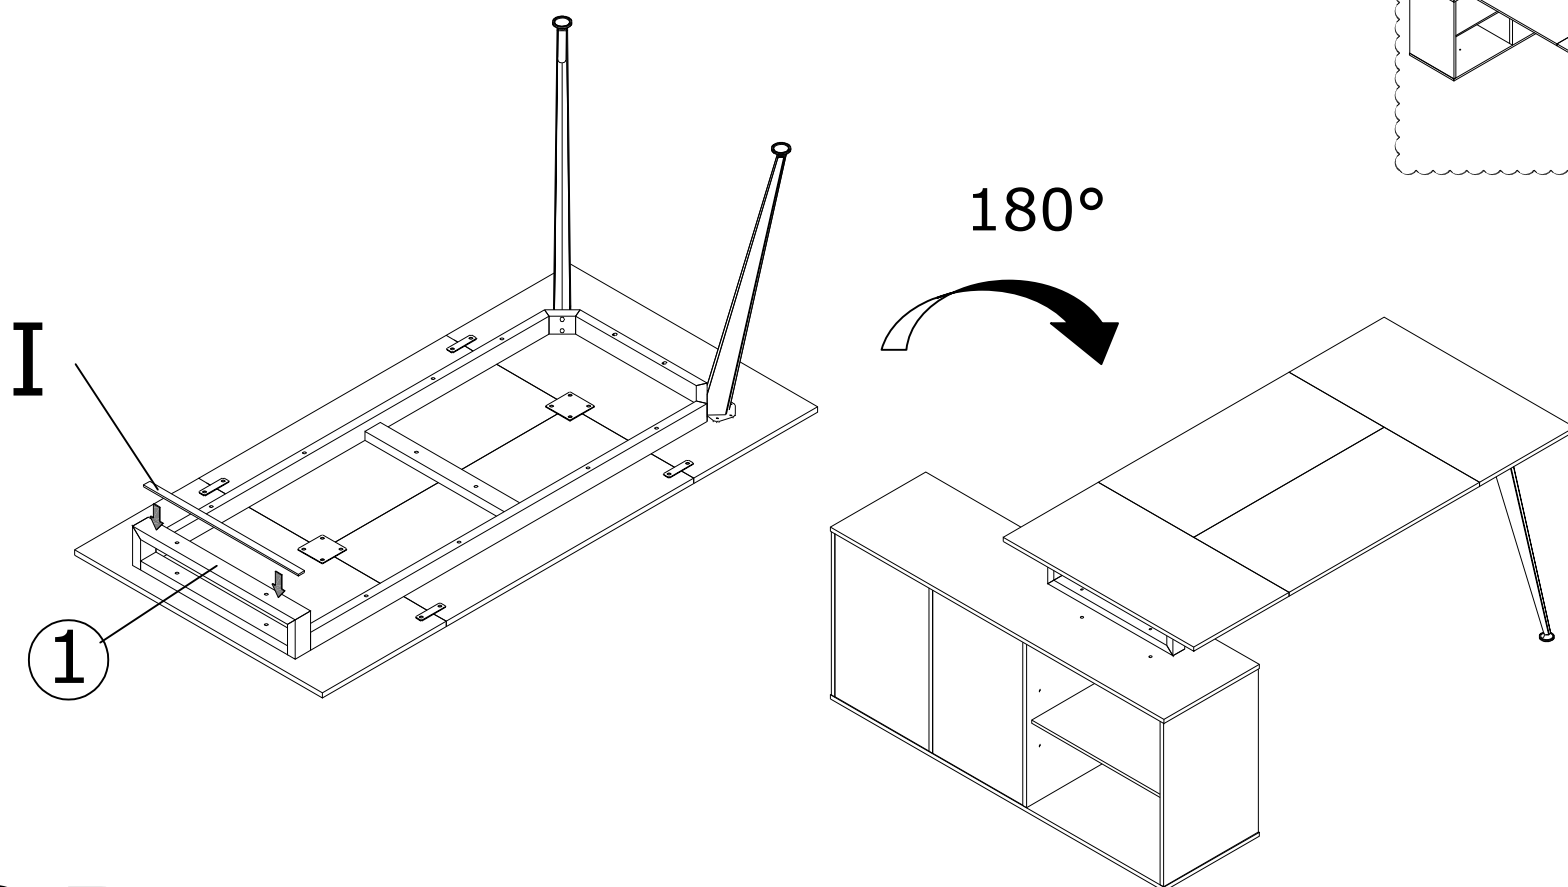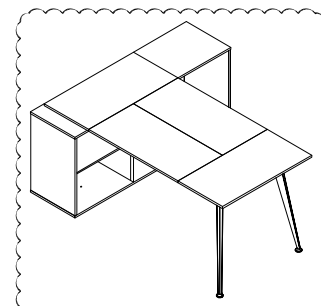


OR

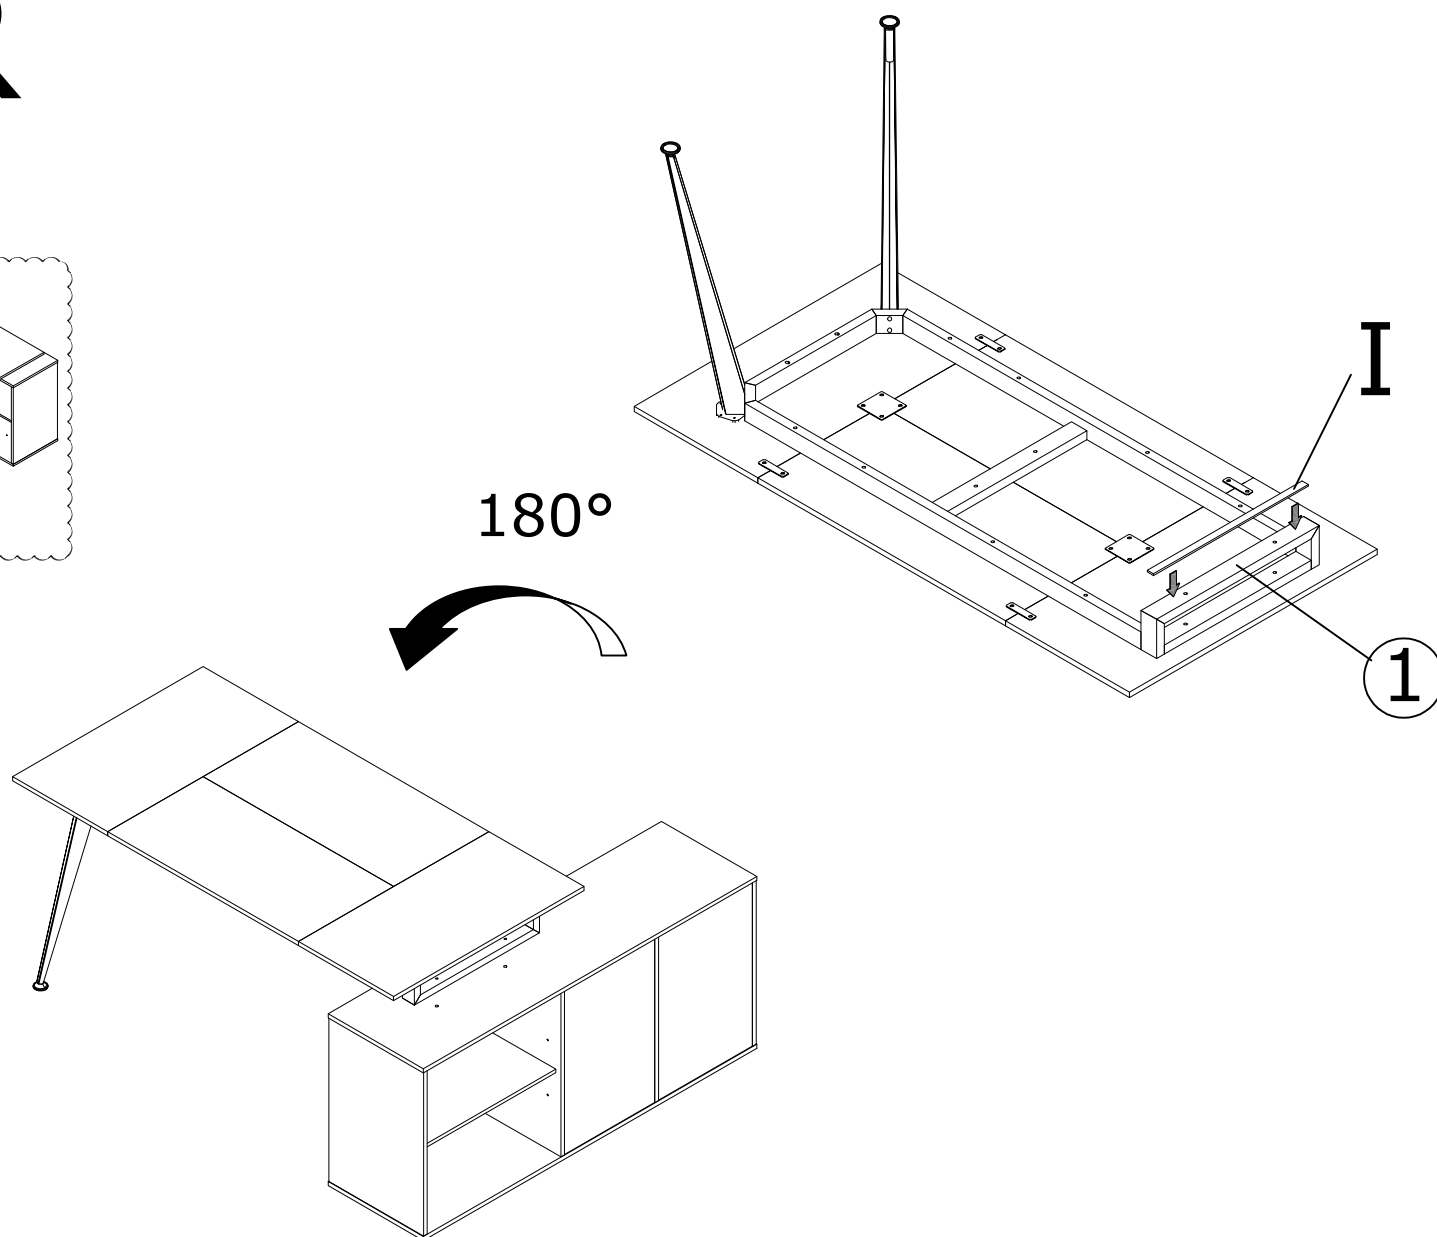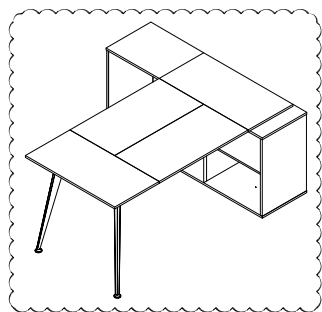 


16

 
L x 12



 
M5 x 40mm

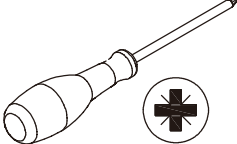

 
Connect No.21 and No.22 plate with No.20 using screw(L) as shown.

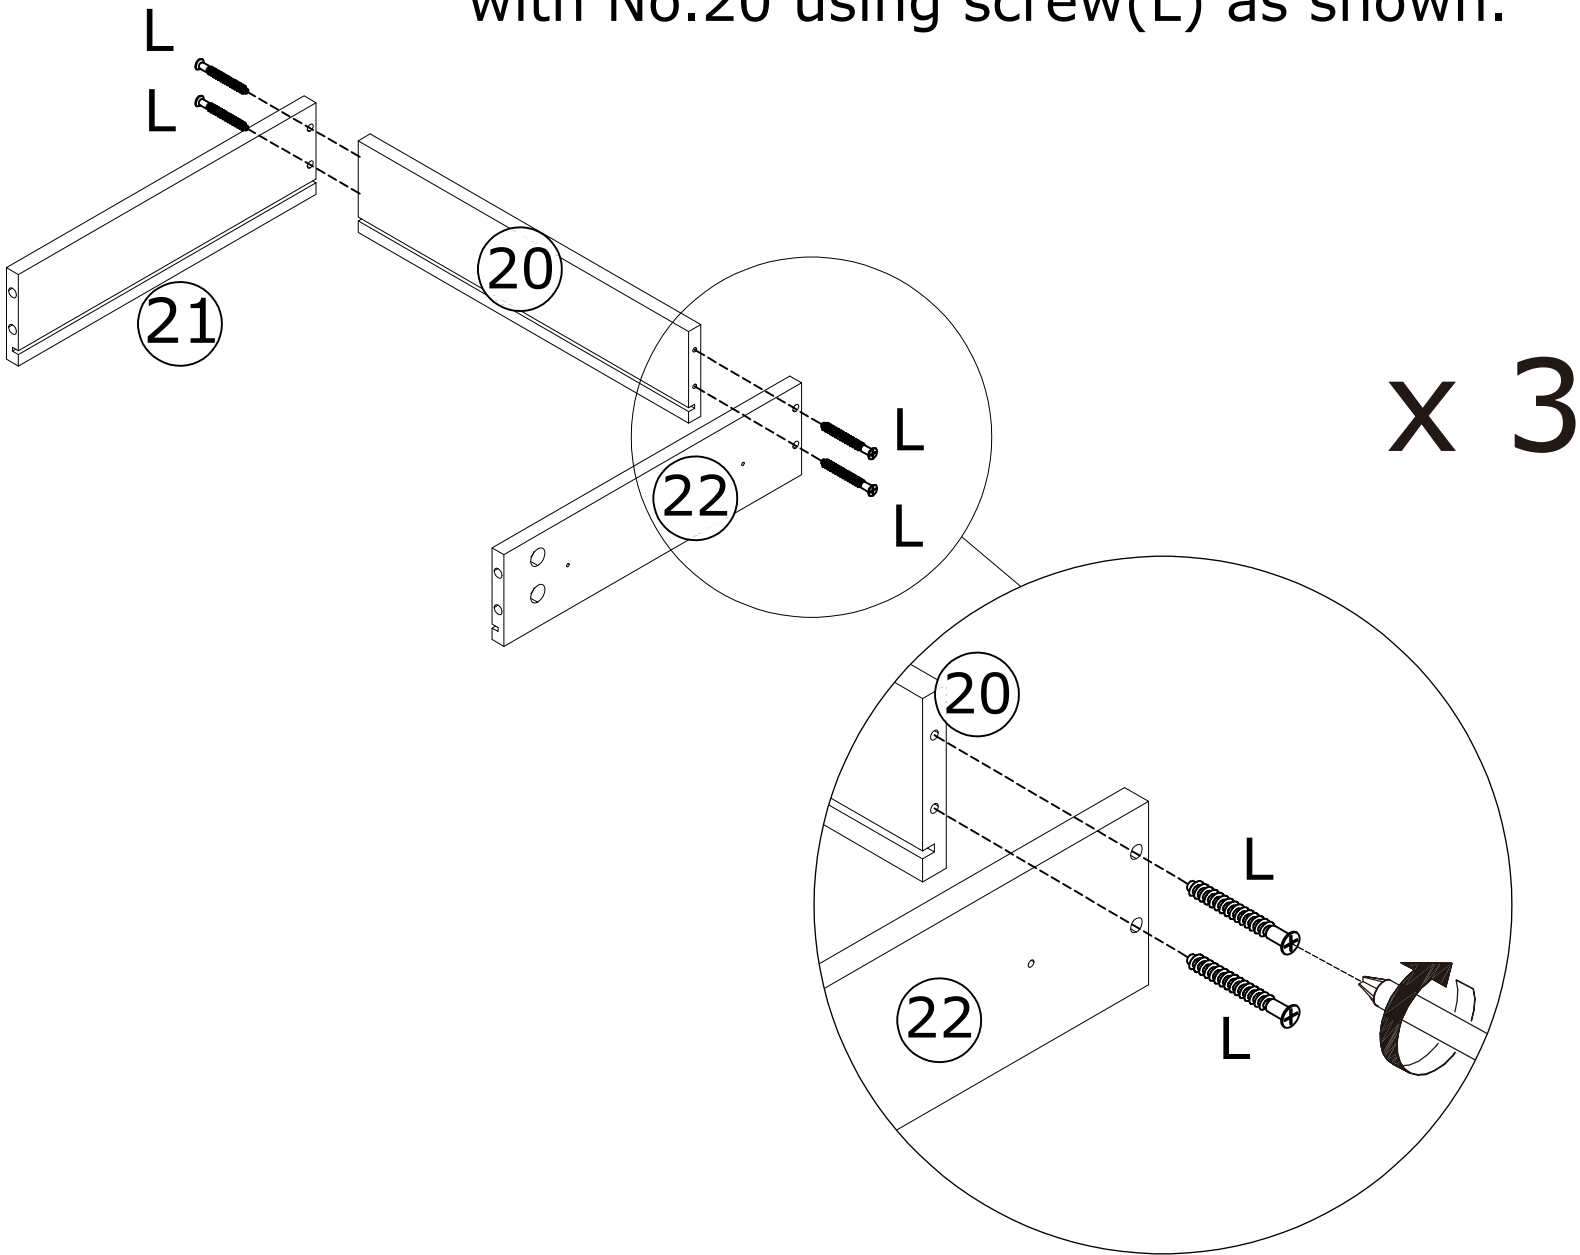

 
17



 
 
Slide No.9 plate into available slots as shown.

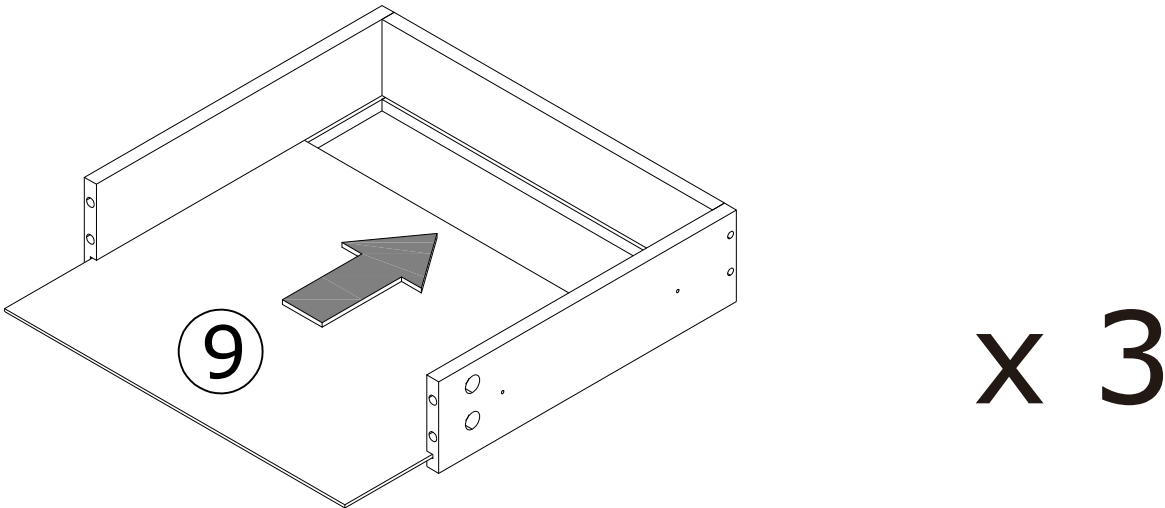

18

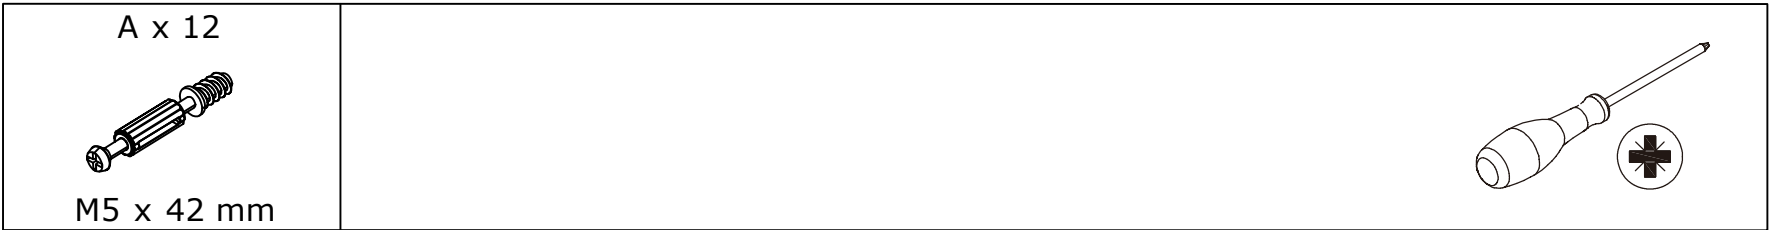 


Insert quickfit screw(A) into No.19 plate as shown.

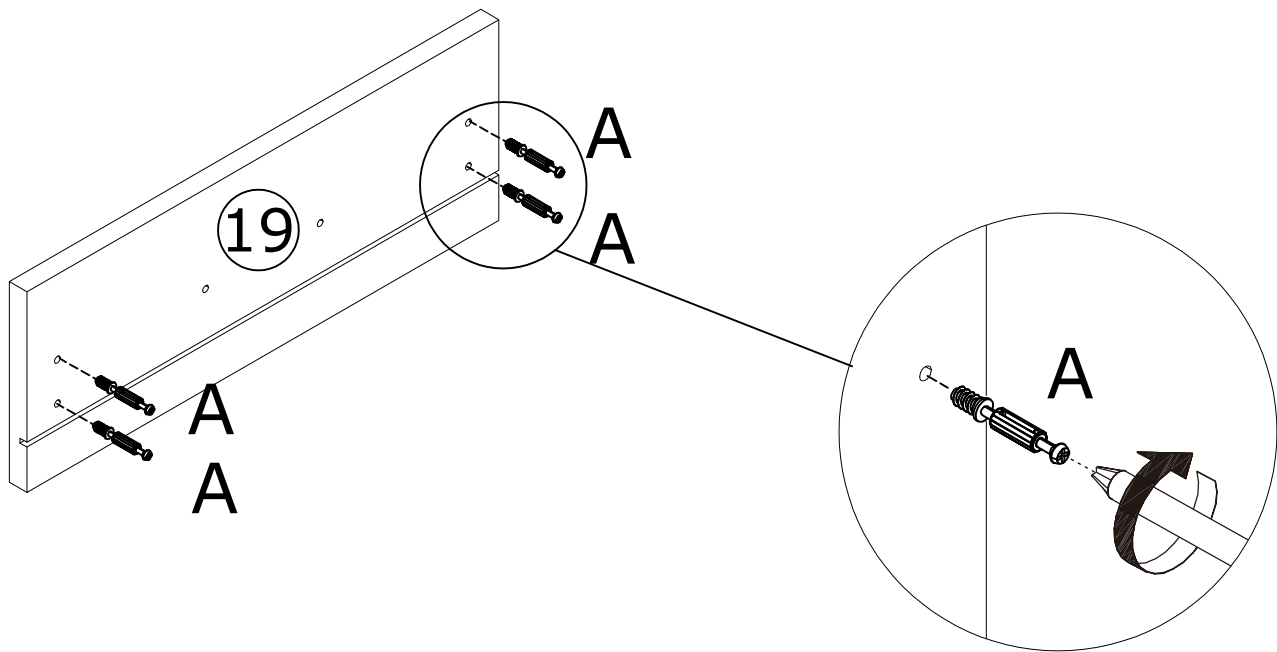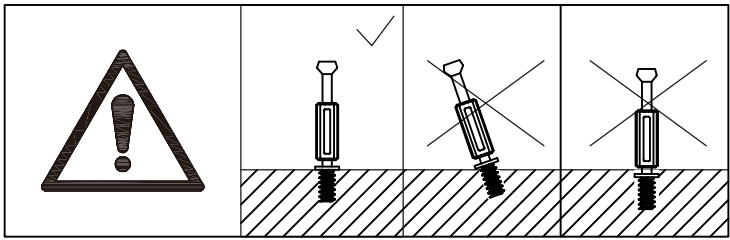 


x 3

 
19

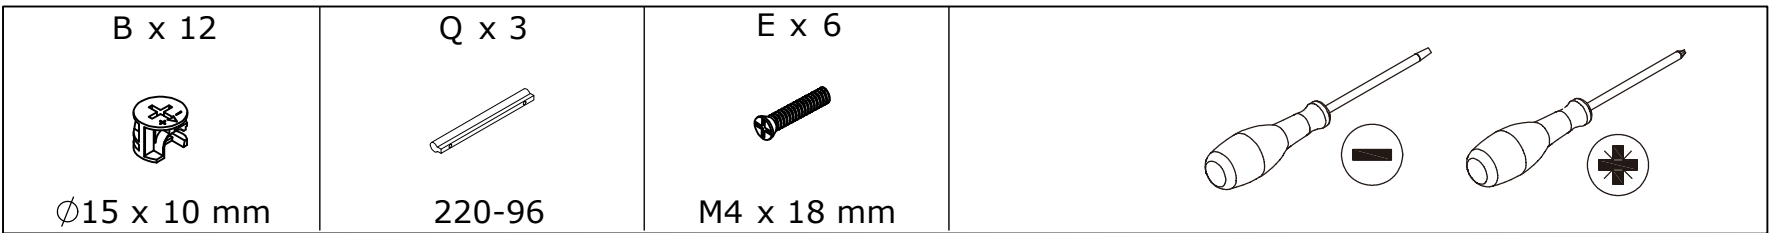

Attach No.19 plate to the component and turn cam lock(B) clockwise to tighten as shown.

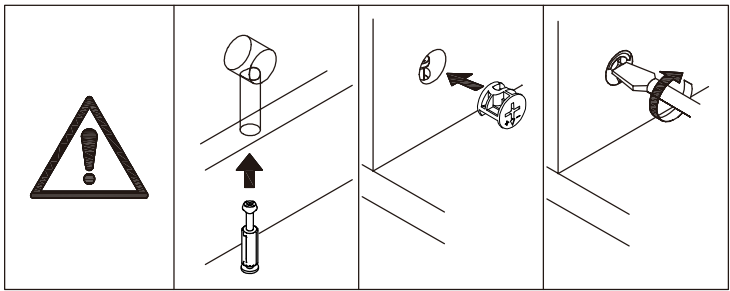
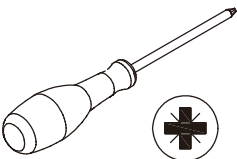 


Fix handle(Q) to No.19 plate with screw(E).

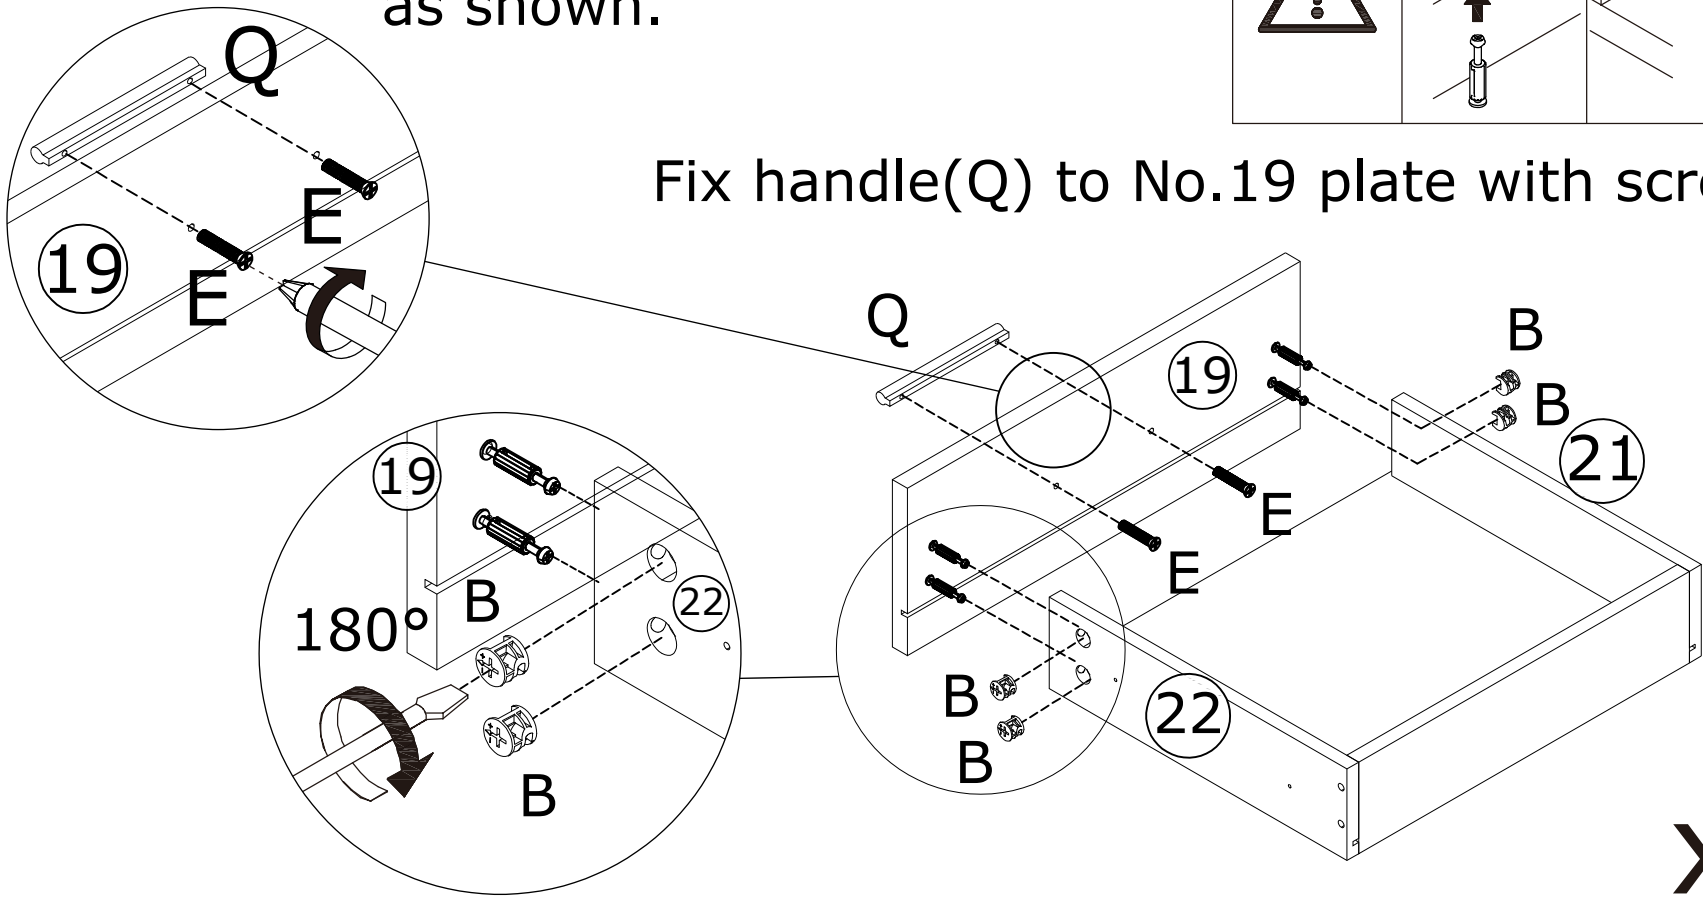 


x 3

20

<p>M x 12</p>  <p>M3.5 x 12 mm</p>	
---	---

Fix No.3 runner to No.21 and No.22 plate with screw(M) as shown.

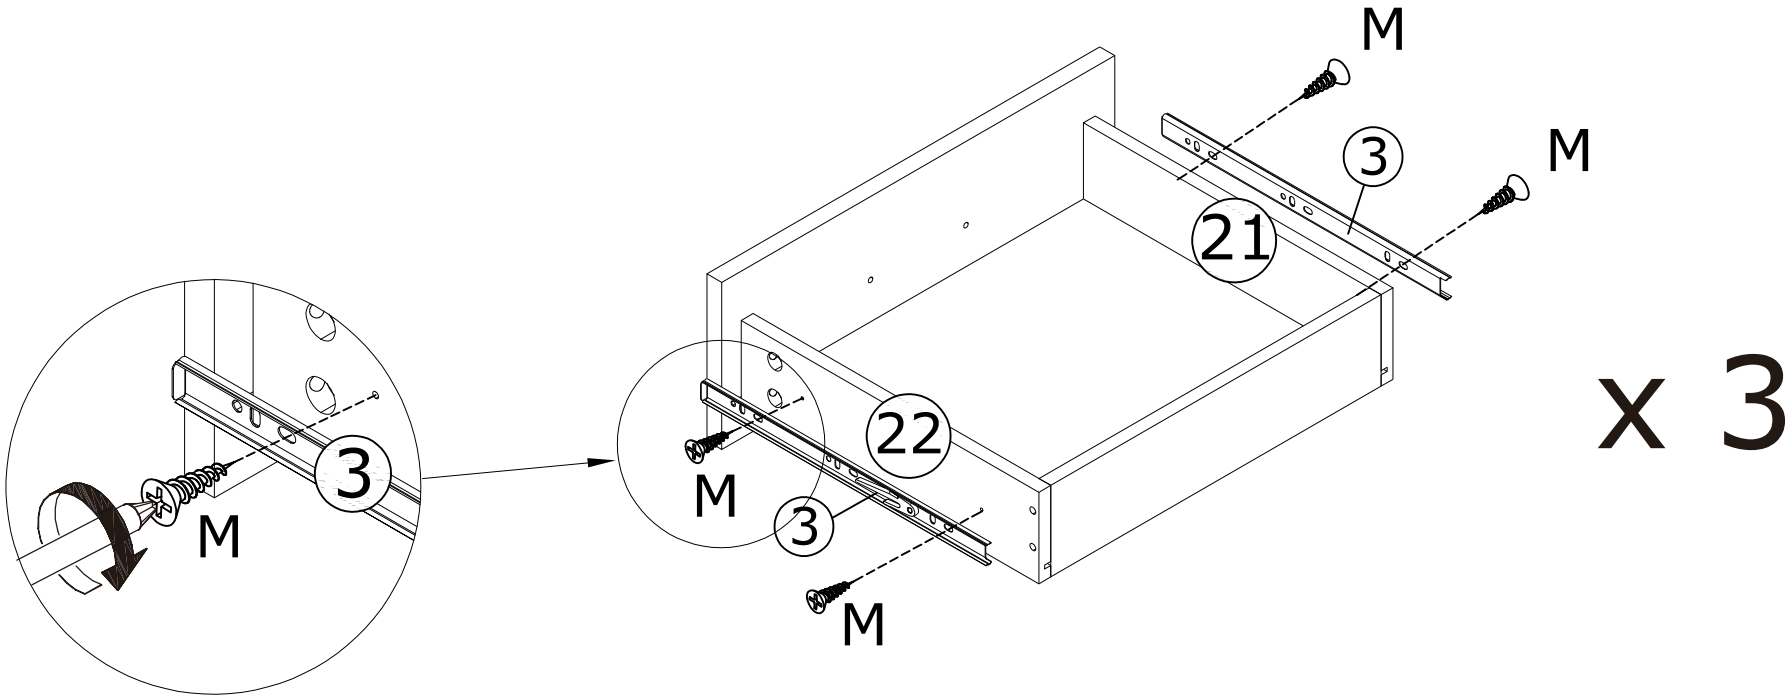 


21

 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 


Align rails, slide all drawers.

OR

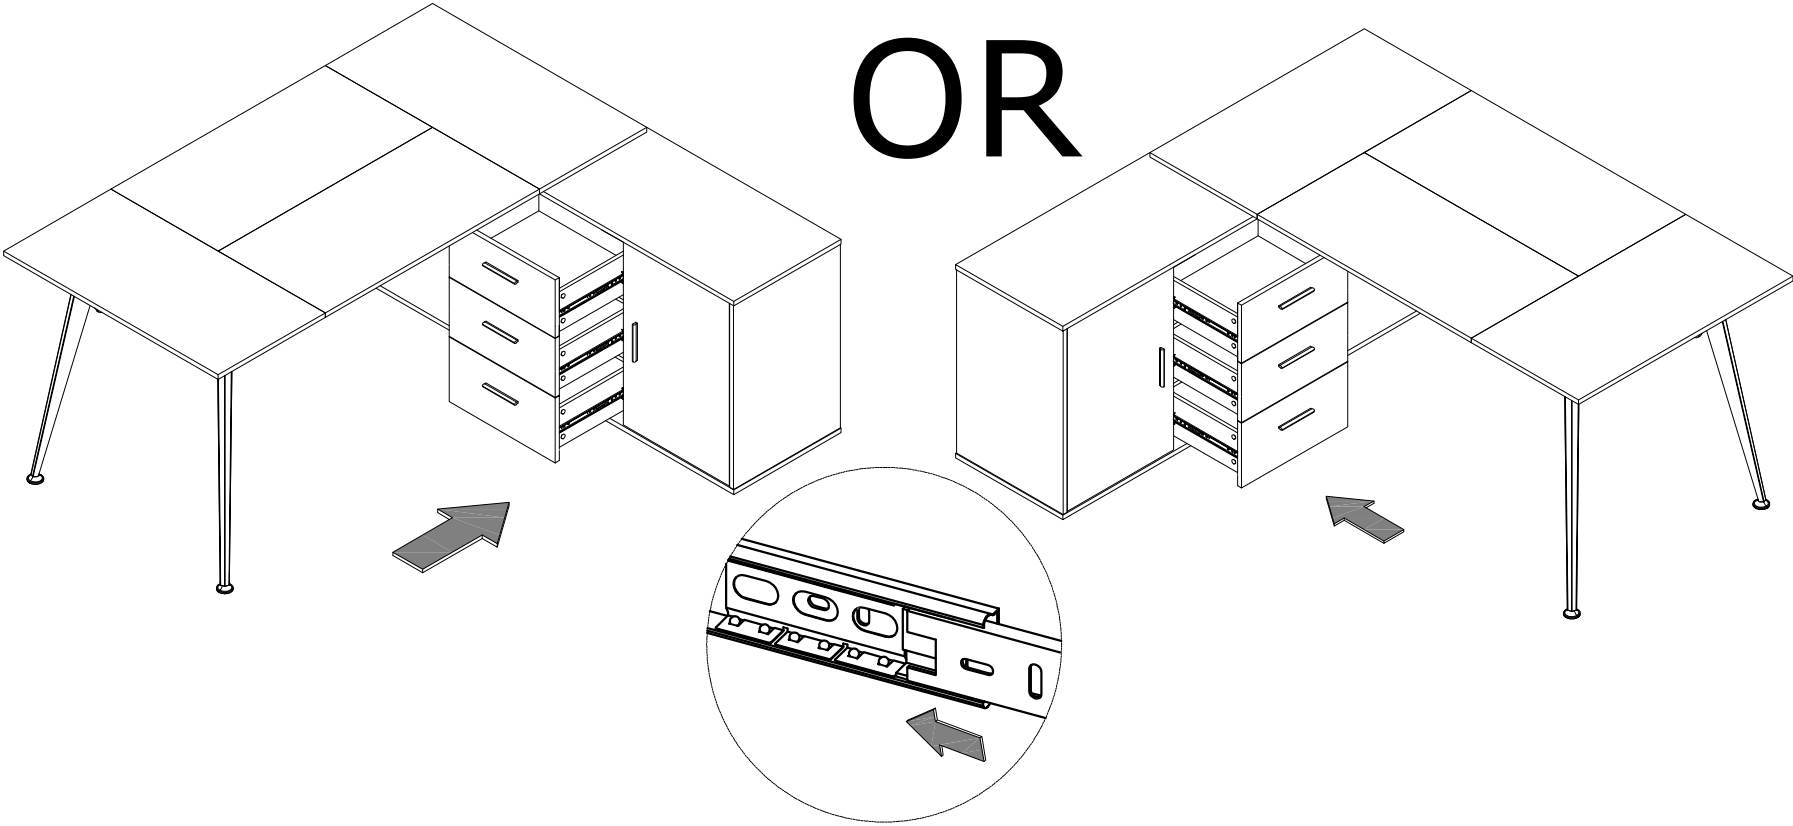

If there is misalignment after you install,
adjust the screw to the best condition

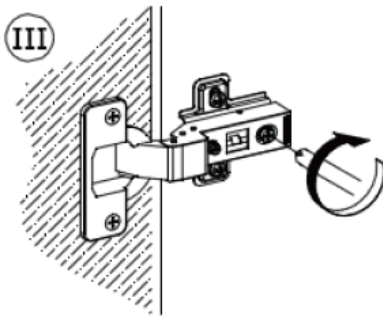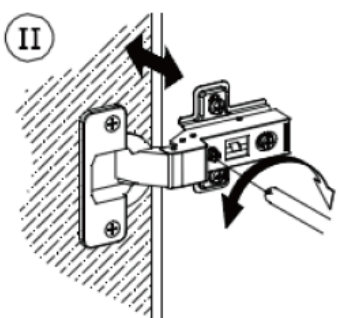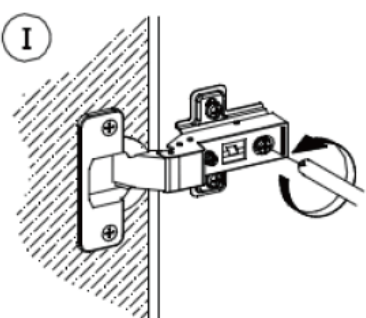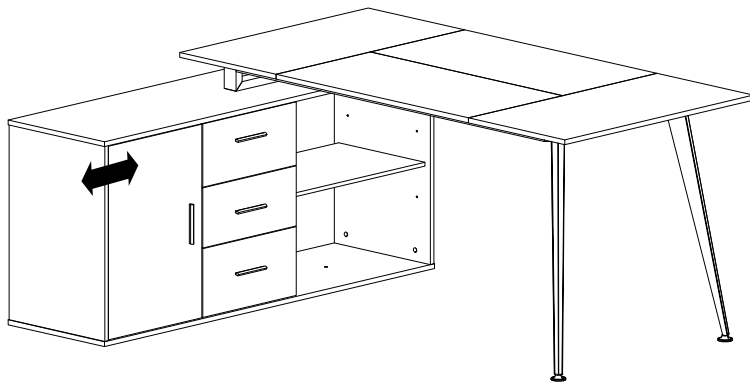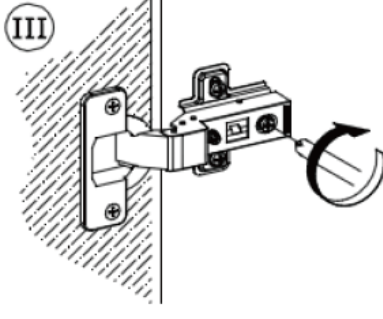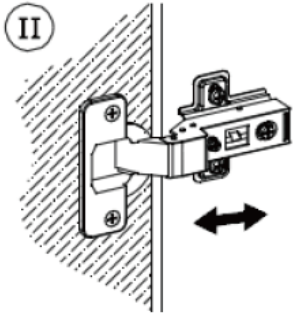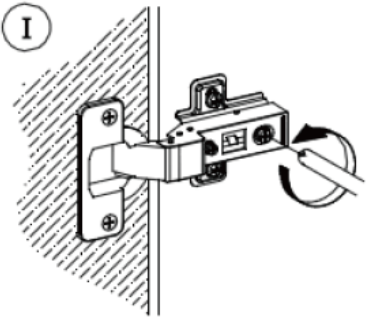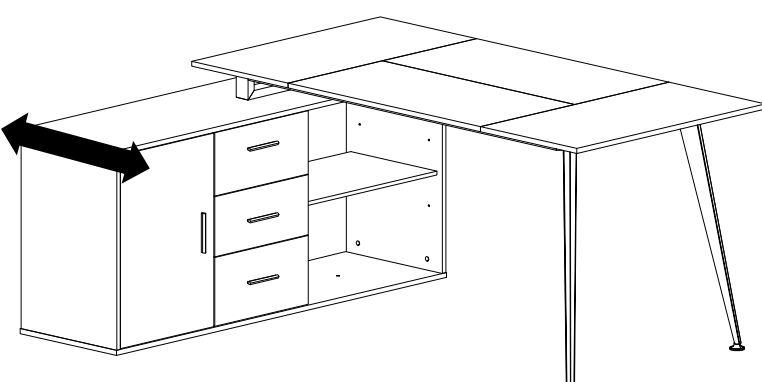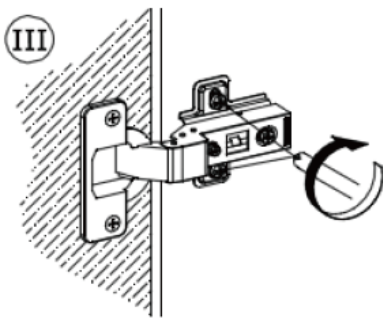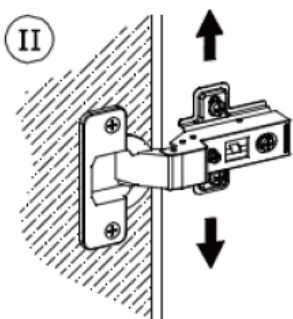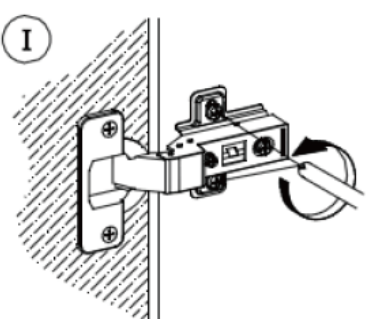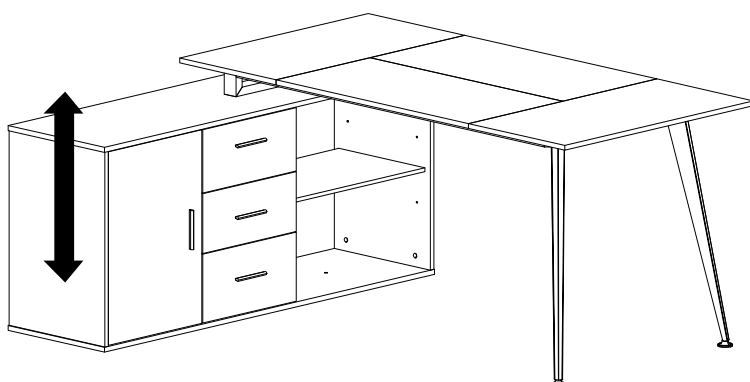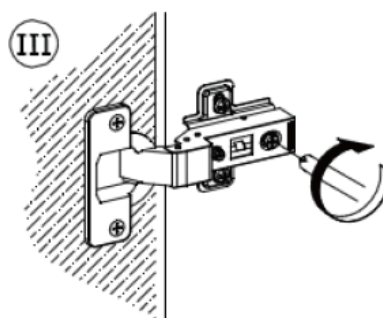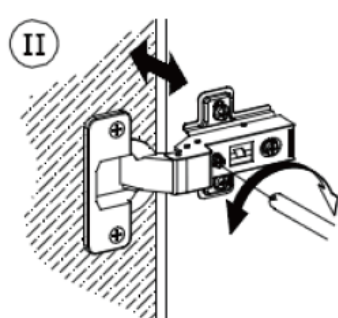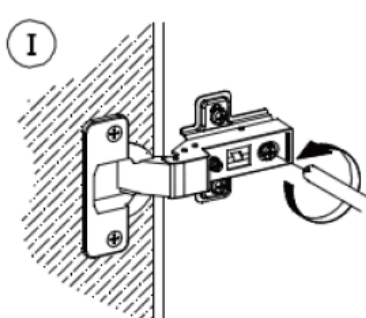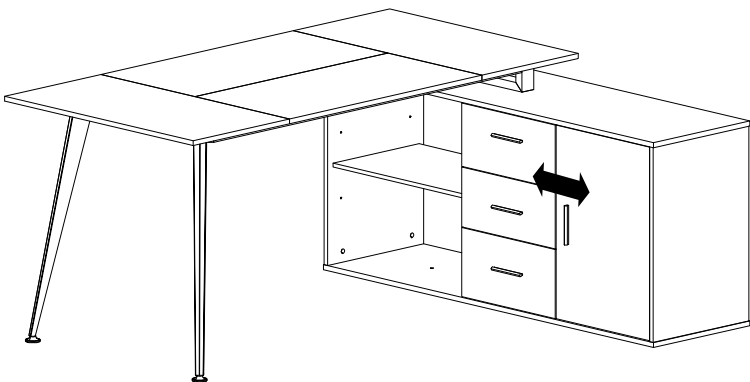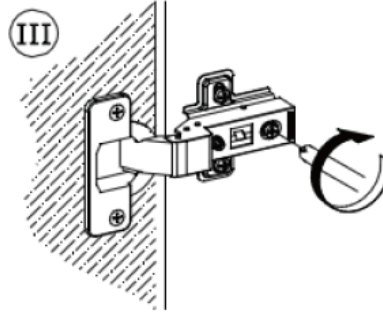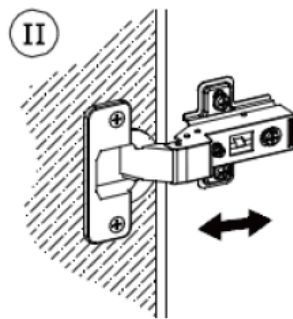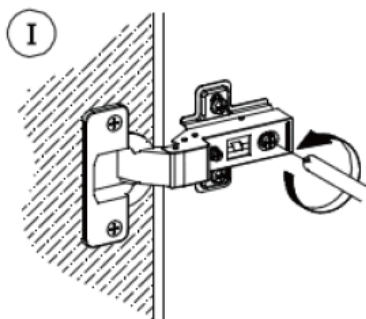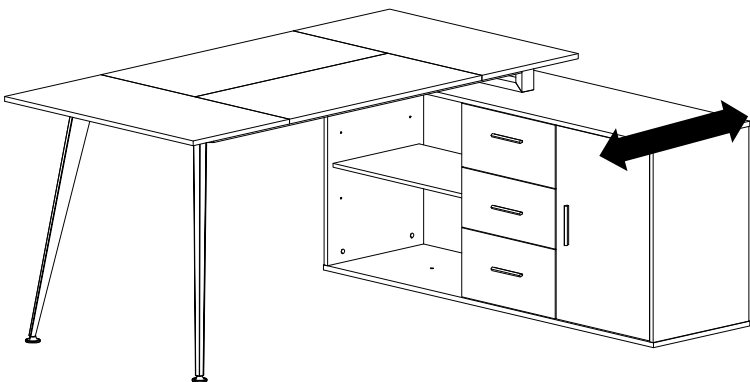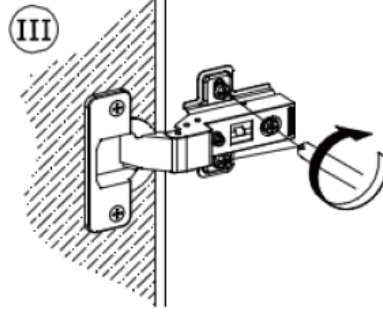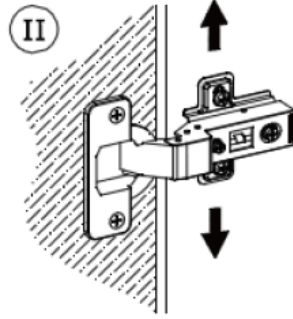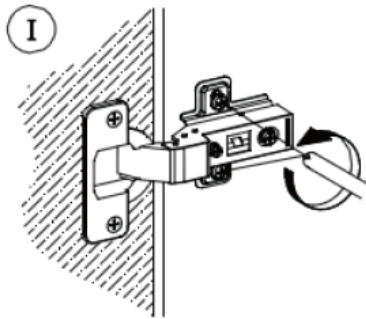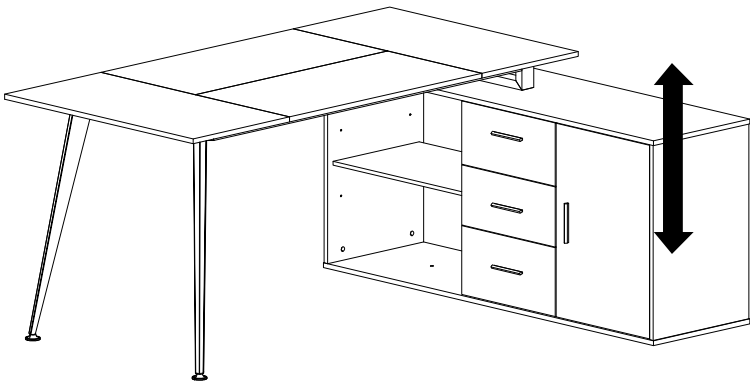

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOU ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer. In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.