


Assembly Instructions

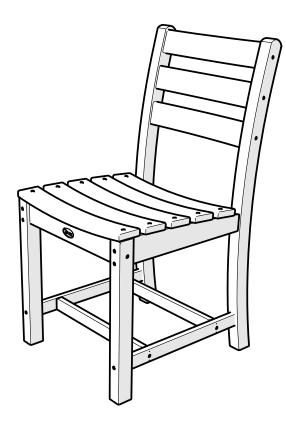

NO ASSEMBLY REQUIRED

TXD100 Monterey Bay Dining Side Chair

trexfurniture.com

06/09/2017

20-Year Warranty

To view our full warranty, please visit trexfurniture.com/warranty

Having Trouble?

If you have questions or concerns regarding assembly instructions or missing parts, please contact us at **(877) 907-TREX** (8739) or email **support@trexfurniture.com**

Share your space

We love to see where our furniture ends up — snap a pic and share it with us on Facebook! facebook.com/trexfurniture

Cleaning Tips

Keep your Trex Outdoor Furniture looking brand new:

For a quick clean:

Simply wipe down with soap and water.

For a deeper clean:


You'll need:

- » $\frac{1}{3}$ bleach and $\frac{2}{3}$ water solution
- » clean cloth
- » soft bristle brush

Wipe on solution with your cloth and let it sit on the lumber for a few minutes (this will not affect the color). Then, loosen any dirt and debris that may catch in surface grooves with a soft bristle brush; hose down to rinse.



Assembly Instructions

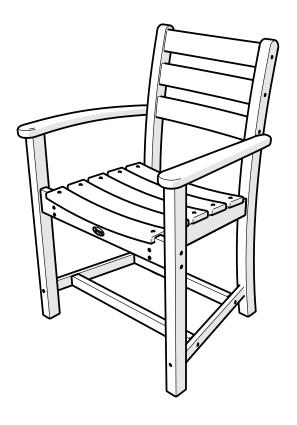

NO ASSEMBLY REQUIRED

TXD200 Monterey Bay Dining Arm Chair

trexfurniture.com

06/09/2017

20-Year Warranty

To view our full warranty, please visit trexfurniture.com/warranty

Having Trouble?

If you have questions or concerns regarding assembly instructions or missing parts, please contact us at **(877) 907-TREX** (8739) or email **support@trexfurniture.com**

Share your space

We love to see where our furniture ends up — snap a pic and share it with us on Facebook! facebook.com/trexfurniture

Cleaning Tips

Keep your Trex Outdoor Furniture looking brand new:

For a quick clean:

Simply wipe down with soap and water.

For a deeper clean:

You'll need:

- » $\frac{1}{3}$ bleach and $\frac{2}{3}$ water solution
- » clean cloth
- » soft bristle brush

Wipe on solution with your cloth and let it sit on the lumber for a few minutes (this will not affect the color). Then, loosen any dirt and debris that may catch in surface grooves with a soft bristle brush; hose down to rinse.



Assembly Instructions

20-Year Warranty

To view our full warranty, please visit trexfurniture.com/warranty

Share your space

We love to see where our furniture ends up — snap a pic and share it with us on Facebook! facebook.com/trexfurniture

Having Trouble?

If you have questions or concerns regarding assembly instructions or missing parts, please contact us at (877) 907-TREX (8739) or email support@trexfurniture.com

TXNCT3772 Yacht Club 37" x 72" Dining Table

Cleaning Tips

Keep your Trex Outdoor Furniture™ looking brand new:

For a quick clean:

Simply wipe down with soap and water.

For a deeper clean:

You'll need:

- » $^{1\!\!/}_{3}$ bleach and $^{2\!\!/}_{3}$ water solution
- » clean cloth
- » soft bristle brush

Wipe on solution with your cloth and let it sit on the lumber for a few minutes (this will not affect the color). Then, loosen any dirt and debris that may catch in surface grooves with a soft bristle brush; hose down to rinse.

