

# CRAFTSMAN®

INSTRUCTION MANUAL

## LED Digital Clock



**VERSATRACK™**  
COMPATIBLE

**CMXWDCR75095**  
**CMXWDCR75095M**



IF YOU HAVE QUESTIONS OR COMMENTS, CONTACT US.

**1-888-331-4569**

**WWW.CRAFTSMAN.COM**

---

## Definitions: Safety Alert Symbols and Words

This instruction manual uses the following safety alert symbols and words to alert you to hazardous situations and your risk of personal injury or property damage.

 **DANGER:** Indicates an imminently hazardous situation which, if not avoided, **will** result in **death or serious injury**.

 **WARNING:** Indicates a potentially hazardous situation which, if not avoided, **could** result in **death or serious injury**.

 **CAUTION:** Indicates a potentially hazardous situation which, if not avoided, **may** result in **minor or moderate injury**.

 (Used without word) Indicates a safety related message.

**NOTICE:** Indicates a practice **not related to personal injury** which, if not avoided, **may** result in **property damage**.

---



**Read all safety warnings and all instructions before operating devices.**

Compare the illustrations with the devices to familiarize yourself with the supplied components and setup instructions.

## SAVE ALL WARNINGS AND INSTRUCTIONS FOR FUTURE REFERENCE

---


### **WARNING: GENERAL SAFETY**

- Do not immerse device in water. This can cause electrical shock and damage the product.
  - Intended for indoor use only.
  - Do not disassemble device or tamper with internal components. Damage caused by disassembly is not covered by the warranty. No user-serviceable parts are inside these devices.
  - Avoid dropping device; this may damage internal components.
  - Keep all parts and batteries out of the reach of children.
- 

### **WARNING: BATTERY SAFETY AND DISPOSAL BATTERY SAFETY**


#### **BATTERY SAFETY**

Clean the battery contacts and also those of the device prior to battery installation. Remove batteries from device which is not to be used for an extended period of time. Replace all batteries of a set at the same time. Only batteries of the same or equivalent type as recommended are to be used. Ensure the batteries are installed with correct polarity (+ and -). Promptly remove dead or expired batteries.

 **CAUTION:** DO NOT mix old and new batteries or batteries of different types. DO NOT use rechargeable batteries. DO NOT recharge non-rechargeable batteries. DO NOT short-circuit the supply terminals.

#### **BATTERY DISPOSAL**

Dispose of old or defective batteries in an environmentally safe way and in accordance with your local laws and regulations.

 **WARNING:** DO NOT incinerate used batteries. DO NOT dispose of batteries in fire, because they could explode or leak.

---

### **WARNING: MAINTENANCE AND CARE**

- Clean device with a soft, damp cloth. Do not use caustic cleaners or abrasives.
- Keep device away from dust, dirt, and moisture. Clean ventilation ports regularly with a gentle puff of air.
- Follow all battery recommendations, disposal, and safety information detailed in this guide.

**LED Digital Clock**  
**CMXWDCR75095/CMXWDCR75095M**

**KNOW YOUR LED DIGITAL CLOCK**


*Congratulations on your new CRAFTSMAN product. To ensure the best possible product performance, please read this manual in its entirety and retain it for future reference.*

**FRONT OF DISPLAY**



- 1 **Clock**
- 2 **AM/PM Indicator**
- 3 **Auto Indicator**
  - Indicates display is in auto-dimming brightness mode
- 4 **☼ – Button**
  - For setup preferences and decreasing display brightness
- 5 **SET Button**
  - For setup preferences
- 6 **+ ☼ Button**
  - For setup preferences and increasing display brightness

**BACK OF DISPLAY**

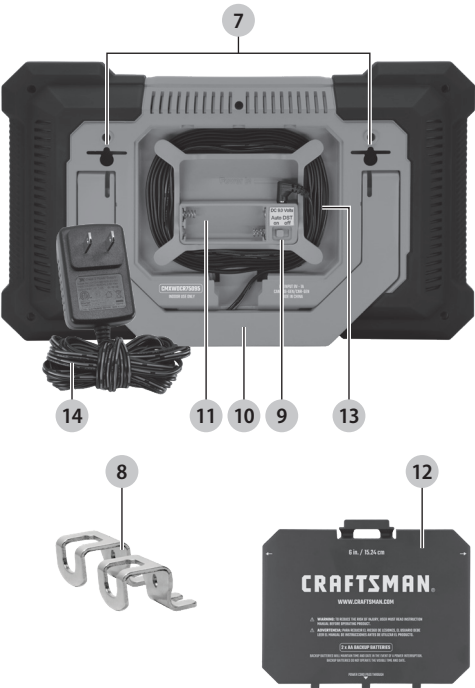

- 7 **Integrated Keyhole Hangers**
  - For easy wall mounting
- 8 **VERSATRACK™ Hang Hooks**
  - Compatible with CRAFTSMAN VERSATRACK Trackwall system
- 9 **Auto DST Switch**
  - Switch to ON if you live in an area that observes DST, even if it's currently not Daylight Saving Time
- 10 **Fold-Out Stand**
- 11 **Battery Compartment**
- 12 **Battery Compartment Cover**
- 13 **Built-In Cord Storage**
  - Secures excess cord
- 14 **Power Adapter**

# HOW TO SET UP YOUR LED DIGITAL CLOCK

## Setup Requires:

- LED Digital Clock
- Power Adapter
- VERSATRACK™ Hang Hooks (2)
- Instruction Manual

## Optional (Not Included)

- (2) AAA batteries

Be sure to use high-quality alkaline or lithium batteries.

### STEP 1

**Insert batteries and plug in the power adapter.**

### NOTICE:

Batteries are a backup power source to preserve settings in the event of a power outage. Power adapter is required as the power source of this product.

### STEP 2

## Set the Time, Date & Units

Press and hold the "SET" button to enter SET MODE. Once in SET MODE the preference you are currently setting will blink on the LED Digital Clock.

To adjust the currently selected (flashing) item, press and release the "+" or "-" buttons (press and HOLD to fast adjust).

To save your adjustments, press and release the "SET" button to adjust the next preference. The preference set order is as follows:

- CLOCK HOUR
- CLOCK MINUTE
- CALENDAR MONTH
- CALENDAR DAY
- CALENDAR YEAR

You will automatically exit SET MODE if no buttons are pressed for 5 seconds. Enter SET MODE at any time by pressing and releasing the "SET" button.

### NOTE:


Date setup is for Daylight Saving Time recognition only and will not be displayed on the clock.


### STEP 3

## Backlight Settings

This digital clock's color display features 5 different lighting settings: 100%, 75%, 50%, 25%, 10%.

When the display is powered with the power adapter, the backlight remains on at 100% brightness by default. Manually adjust the backlight brightness by pressing and releasing the "+" or "-" buttons when not in SET MODE.

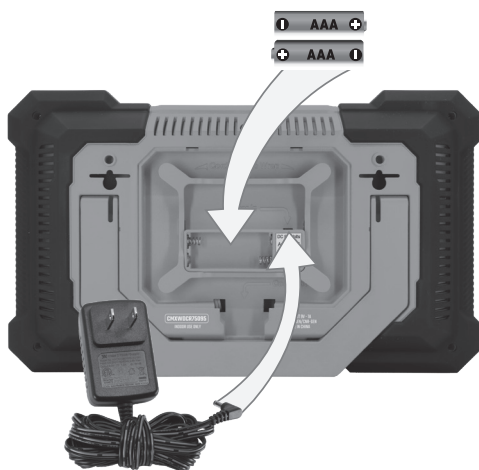

To enter Auto Dim mode, press the "-" button until  is shown on the display.

## Auto Dim Mode

Automatically adjusts display brightness based on time of day.

6:00 PM - 5:29 AM = transitions down to 10% brightness

5:30 AM - 5:59 PM = transitions up to 100% brightness

#### STEP 4

### VERSATRACK™

CRAFTSMAN LED digital clocks can be mounted to the wall using the CRAFTSMAN VERSATRACK Trackwall System. Use the included hang hooks and screws to attach to the back of the clock, as shown. The clock is now ready to be mounted to the Trackwall.

**! WARNING:** *If rearranging other tools that may already be utilizing the VERSATRACK Trackwall, ensure switches are off and that any battery packs have been removed. An accidental startup could cause injury.*

**! WARNING:** *To reduce the risk of serious personal injury, do not use a damaged VERSATRACK integral hang hook or VERSATRACK Trackwall. A damaged VERSATRACK integral hang hook or VERSATRACK Trackwall will not support the weight of the tool.*

**! WARNING:** *To reduce the risk of serious personal injury, DO NOT suspend tool overhead or suspend objects from the integral hang hook. ONLY suspend tool on the VERSATRACK Trackwall using the integral hang hook.*

**! WARNING:** *The VERSATRACK integral hang hook is intended to mount the tool onto a VERSATRACK Trackwall rail. Do not use the integral hang hook to mount the tool to any other surface.*

**! WARNING:** *The VERSATRACK integral hang hook is not a belt hook.*

**! WARNING:** *When hanging objects on a VERSATRACK Trackwall rail, adequately space the tools in order to not exceed 75 lb (35 kg) per linear foot.*

**! WARNING:** *Before using the tool make sure that the VERSATRACK integral hang hook is returned to its original position.*

Find more information at <https://www.craftsman.com/products/storage-garage/versatrack-trackwall-system>.



# SPECIFICATIONS

Power	9-ft. 9V, 1.2A power adapter (included) 2 x AAA alkaline or lithium batteries (for backup; optional)
-------	---

## REGISTER ONLINE

Thank you for your purchase. Register your product now for:

- **WARRANTY SERVICE:** Registering your product will help you obtain more efficient warranty service in case there is a problem with your product.
- **CONFIRMATION OF OWNERSHIP:** In case of an insurance loss, such as fire, flood or theft, your registration of ownership will serve as your proof of purchase.
- **YOUR SAFETY:** Registering your product will allow us to contact you in the unlikely event a safety notification is required under the Federal Consumer Safety Act.

Register online at [www.craftsman.com/registration](http://www.craftsman.com/registration)

## REGULATORY INFORMATION

### FCC Radio Frequency Interference

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiver's antenna.
- Increase the distance between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To assure continued appliance, any changes or modifications not expressly approved by the party responsible for compliance could voice the user's authority to operate this equipment. (Example: use only shielded interface cables when connecting to computer or peripheral devices).

### FCC Warning

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

## One-Year Limited Warranty

The Manufacturer will repair or replace, without charge, any defects due to faulty materials or workmanship for one year from the date of purchase. This warranty does not cover part failure due to normal wear or tool abuse. For further detail of warranty coverage and warranty repair information, visit **[www.craftsman.com](http://www.craftsman.com)** or call **1-888-331-4569**. This warranty does not apply to accessories or damage caused where repairs have been made or attempted by others. THIS LIMITED WARRANTY IS GIVEN IN LIEU OF ALL OTHERS, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, AND EXCLUDES ALL INCIDENTAL OR CONSEQUENTIAL DAMAGES. Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so these limitations may not apply to you. This warranty gives you specific legal rights and you may have other rights which vary in certain states or provinces.

### 90-DAY MONEY BACK GUARANTEE

If you are not completely satisfied with the performance of your LED Digital Clock for any reason, you can return it within 90 days from the date of purchase with a receipt for a full refund – no questions asked.

**LATIN AMERICA:** This warranty does not apply to products sold in Latin America. For products sold in Latin America, see country specific warranty information contained in the packaging, call the local company or see website for warranty information.

CRAFTSMAN®  
is a registered trademark of Stanley Black & Decker, Inc., used under license.  
© 2021 CRAFTSMAN

Product Manufactured by:  
Chaney Instrument Company  
Lake Geneva, WI 53147  
U.S. & Canada Only

CMXWDCR75095  
CMXWDCR75095M