


Automatic Pet Feeder With Dial

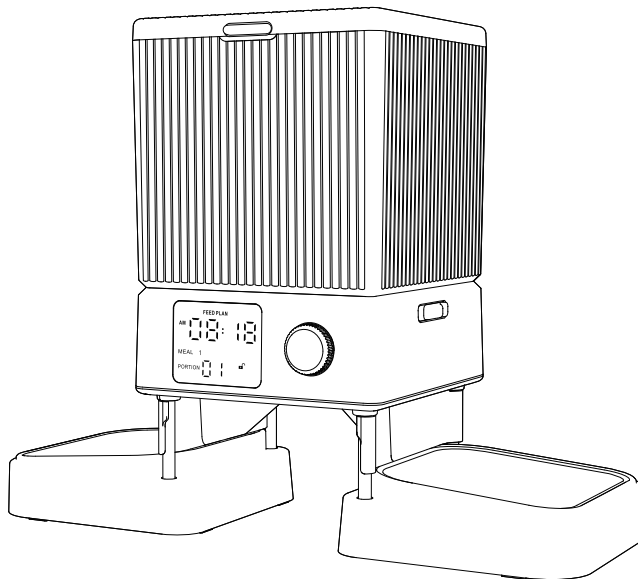

User Manual

Model: PFD -002



Video Tutorial



oneisall Support

Thank you for choosing us! To use the feeder correctly, please take a moment to read this User Manual before you use the product. If any accessories are missing, there are quality issues, or you have any questions about this feeder's usage, please feel free to contact us via support@oneisall.com

For more information, you can visit our website www.oneisall.com

We showcase buyer's voice on our website regularly. You are welcome to record and share your own experience of our products.

Use Precautions

1. Recommend for pets over 6 months old.
2. Indoor use. Avoid direct sunlight. Keep away from fire.
3. Use the attached adapter. Otherwise, the feeder may be damaged or fail to work.
4. DO NOT soak the main machine in water.
5. To prevent pets from pushing over the feeder, we recommend to use against the wall.
6. Children should use it under guidance.
7. Stop to use the desiccant bag if you find it is broken.
8. Please unplug the power cord and remove the batteries at the bottom if you would like to stop using the feeder.


Contents

UK/US

In the Package	01
Product Overview	01
LED Display Introduction	02
Assemble the Feeder	02
Program Settings	03
Statement for LED Display	06
The Desired Amount of Kibbles	07
Tips for Cleaning	09
Specification	09
Troubleshooting	10
Warranty	11

In the Package

 
UK/US



1 x Automatic Pet Feeder



2 x Stainless Steel Bowl and Holder

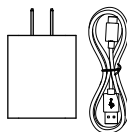

1 x Power Cord with Adapter



1 x Desiccant Bag



1 x User Manual



 
1 x Quick Guide



1 x Sponge



4 x Metal Post



2 x Food Slides

Product Overview

Lid button

Lid

Food tank

LED Display

Switch for the tank

 
Food slide

Dial

Metal post


Stainless steel bowl

Bowl holder



Desiccant box


Battery compartment

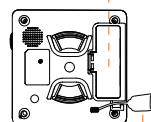

Type-C port

LED Display Introduction

UK/US

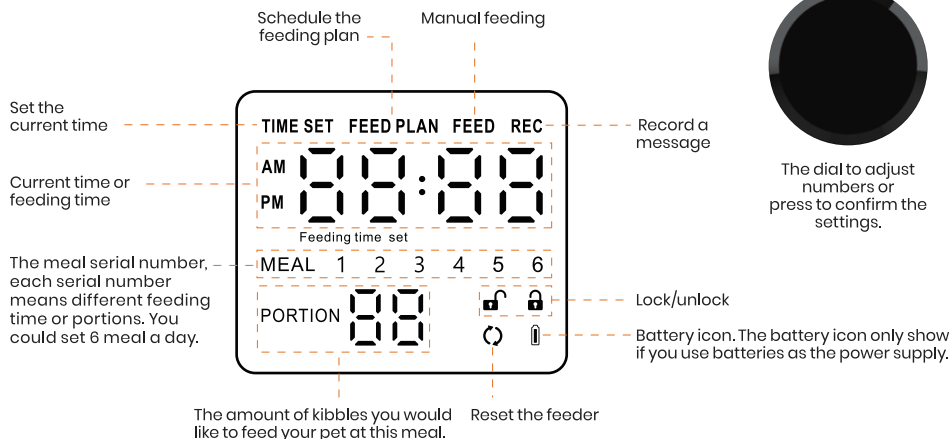

1. The feeder would lock itself if you don't operate it and wait for 30 seconds.
2. Press and hold the dial for 3 seconds to unlock the feeder.

Assemble the Feeder



Please scan the QR code below to obtain detailed assembly video for the cat feeder.

Assemble the Feeder

Program Settings

UK/US

You may need to know before setting:

If the feeder is locked, press and hold the button for 3 seconds to unlock it.



Rotate to select menu and adjust numbers.



Click for confirmation.



Current Time Setting

1. Rotate the dial to select the TIME SET menu.



2. Click the button to enter the current time setting.



3. Turn the dial to adjust the hour and minute numbers. Click to confirm.



Tips:

You need to confirm the numbers of hours and minutes separately.

If you set the feeding plan without setting the current time, it will lead to inaccurate feeding, because the time may pass.


Feed Plan Settings

UK/US

1. Rotate the dial to select the FEED PLAN menu. Click to enter the feed settings.



2. Turn the dial to select the feed serial number, and click the dial to confirm it.

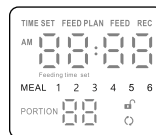

3. Turn the dial to adjust the hour and minute numbers. Click to confirm them.



4. Turn the dial to adjust the portion number. Click the dial to confirm it.



5. Repeat 2-4 if you need to set up the next meal.

6. To return to the main menu, DO NOT touch the dial and wait for 10 seconds.




Tips:

1. The PORTION number shown on the display means the amount for each bowl.
2. It Does Not support to deliver different portions to each bowl.


Manual Feeding Setting

UK/US

1. Rotate the dial to select the FEED menu.

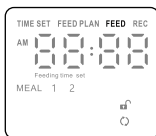

2. Click it to release 1 portion of food.

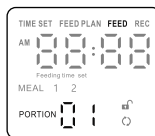


Note:

When the FEED menu flashes, click the dial for multiple times within 1 second to release more portions.

Record A Message

1. Turn the dial to REC menu. Click it to enter the record setting.

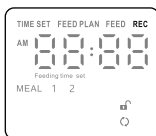

2. Press and hold the dial, speak to the microphone.



3. When the recording is over, release the dial and the feeder will automatically play the previous recording as a preview.



4. You can repeat 1-3 to change the recording.

Tips:

1. You can record a message within 10 seconds.
2. During the recording process, the feeder displays a 10-second countdown.

Reset the Feeder

UK/US

1. Rotate the dial to select .
2. Press and hold for 7 seconds to restore the device to factory settings.



Tips:

You will hear 2 sounds of Beep when the feeder restore to factory.

Statement for LED Display

1. When setting the feeder, if there is no operation within 10 seconds, the feeder would back to standby automatically.




In standby, unlocked.

2. No button for Locking. Do Not operate and wait for 30 seconds, the feeder would lock automatically.



Locked.

3. When using batteries only, if you do not operate, the display would be off within 30 seconds.

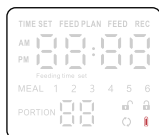

4. The feeder uses a 12-hour clock.

5. The battery icon only occurs when using the battery as the only power supply. The icon would flash when the battery gets low.



6. The meal serial number would be off when the plan execution is completed. It would lights up again at 12:00 AM.

The Desired Amount of Kibbles

Note: The amount of every portion is not adjustable. Pet owners should adjust the number of portions based on their pet's daily meals and appropriate amount per meal.

The size of the kibble we used in our lab: 0.3 inch. Here's the data from our experiment

Cup	Portion	Gram	oz	ml
1/16	1	10	0.35	10
1/8	2	20	0.7	20
1/4	3	30	1.05	30
1/3	4	40	1.4	40
1/2	6	60	2.1	60
1	12	120	4.2	120

This data is for reference only. You need to test out the right amount for your pet, based on the dry food you used.

 
 
Tips:

- 1. The PORTION number shown on the display means the amount for each bowl.
- 2. It Does Not support to deliver different portions to each bowl.

Here are the steps:

UK/US



1. In the following steps, let's assume that your two pets eat the same amount.
2. For example, $\frac{1}{2}$ cup equals to 6 portions, so $\frac{1}{4}$ cup would equals to 3 portions.



3. Set the portion number to 3.

4. Measure the delivered kibbles. If the kibbles are measured as the amount you need, it means this setting is OK.

5. Otherwise, adjust the portion number to let it get close to the desired amount.

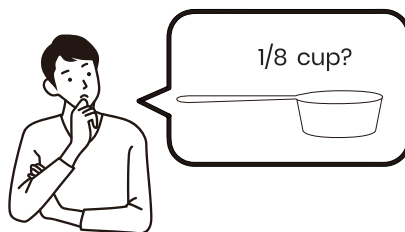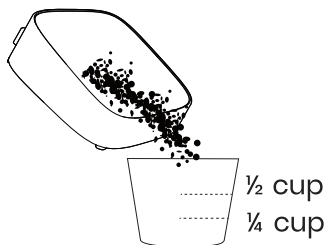

Please scan the QR code below for a detailed cleaning video of the cat feeder.



Specification

Model:	PFD-002
Product Size:	7.4 x 7.2 x 9.9 in
Capacity:	20 Cups (4.7 lb dry food)
Portion Size:	6 Portions=1/2 Cup=55 G
Material:	ABS+304 stainless steel
Input:	5V DC/1A
Food:	Dry food, less than 0.5 inch in diameter
Power Supply:	Cord suggested/batteries for backup
Battery Type:	4xAA batteries

Troubleshooting

UK/US

Please attach your troubleshooting and order ID, contact us via email support@oneisall.com. We would help you solve the problem fast.

Problems	Solutions
The feeder can not work	Check if the cord connected well.
	Do not use batteries, use another type-C charging cord to see if the feeder works.
	Unplug the cord and use new batteries to see if it works.
Desiccant Replacement	Email us:support@oneisall.com
The dial do not work	Try to press and hold it for 3 seconds to unlock the feeder.
Food stuck or show E-01 error code	Make sure the kibble size less than 0.5 inch in diameter.
	Check if the tank and food outlet keeps dry.
	Check if the food keeps dry and fresh.
	If the food stop in the outlet, clean it.
	If you use without cord, replace the batteries.
LED Display is off	When using the battery as the only power source, the screen would be off to save electricity. But the feeder would work normally.

WE ARE READY TO HELP

oneisall offers a standard 2-year warranty. If you have any issues with your oneisall product, please do not hesitate to contact us. Be sure to include your proof of purchase, model number, and any relevant photos or videos in your message to expedite the process. Our oneisall support team is available 7 days a week and will respond to your inquiry within 24 hours. Thank you for choosing oneisall.

Please note that the oneisall warranty does not apply to used products or purchases made from unauthorized sellers. It's important to be aware that the warranty also does not cover consumable parts such as blades, guards, filters, brushes, and similar items. These parts may require regular replacement or maintenance.

✉ support@oneisall.com

☎ +1 877-522-8578 (US) **Mon-Fri** 8am-5pm(PST)

🌐 www.oneisall.com



Guide video



@Oneisall Official

oneisall

TRANSFORM HOW YOU PET



Video Tutorial



oneisall Support

ON-D03EU