 


BODEGA
C O O L E R

INSTRUCTION MANUAL

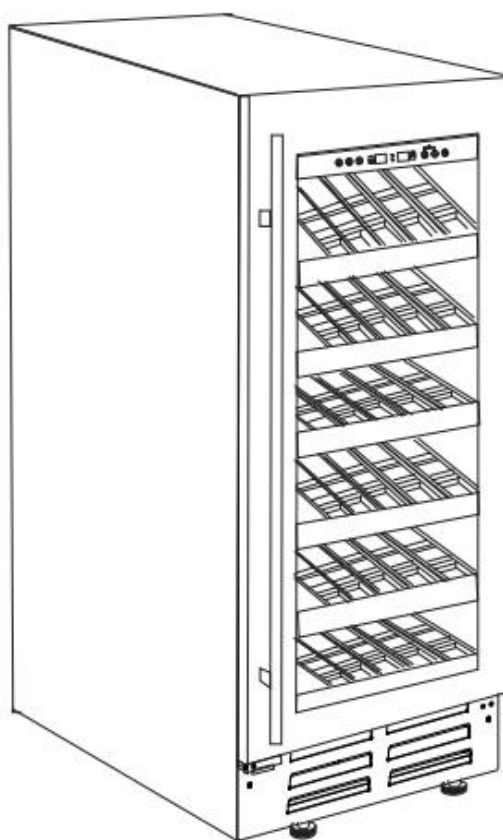

WINE CELLAR
BRAND: BODEGACOOLE
MODEL: JC-85A / JC-145A

■ THIS manual contains important information including safety and installation instructions of the appliances. Please read it carefully before use and follow all safety information & instructions. It is recommended to keep this manual for easy reference so that you can be familiar with the operation of the appliance.

WINE CELLAR

BODEGA
C O O L E R

CONTENTS

WARNING-----	2
IMPORTANT SAFETY INSTRUCTIONS-----	3
UNPACKING AND INSTALL THE DOOR HANDLE -----	4
INSTALLATION INSTRUCTIONS-----	4
OPERATING YOUR WINE CELLAR-----	7
CARE & MAINTENANCE-----	10
TROUBLESHOOTING GUIDE-----	11
TECHNICAL DATA-----	12
WARRANTY -----	14

►WARNING

- To prevent damaging the door gasket, make sure to have the door all the way opened when pulling shelves out of the rail compartment.
- The appliance must be positioned so that the plug is accessible. Release the electric cord. Move your cabinet to its final location. Do not move your Cabinet while loaded with wine. You might distort its body. The wine cellar should be installed in a suitable place in order to avoid touching the compressor with hand.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- If the supply cord is damaged, it must be replaced by manufacturer of its Service agent or a similarly qualified person in order to avoid a hazard.

PLEASE DON'T TRY TO PLUG INTO OR EXTENSION THE CABLE IN ANY CASE.

►IMPORTANT SAFETY INSTRUCTIONS

⚡WARNING⚡	To reduce the risk of fire, electrical shock, or injury when using your appliance, follow these basic precautions:
• Read all instructions before using the Wine cellar. • DANGER or WARNING: Risk of child entrapment. • Child entrapment and suffocation are not problems of the past. Junked or abandoned appliances are still dangerous even if they will “just sit in the garage a few days”. • Before you throw away your old Wine Cellar: Take off the door. Leave the shelves in place so that children may not easily climb inside. • Never allow children to operate, play with, or crawl inside the appliance. • Never clean appliance parts with flammable fluids. The fumes can create a fire hazard or explosion. • Do not store or use gasoline or any other flammable vapors and liquids in the vicinity of this or any other appliance. The fumes can create a fire hazard or explosion. Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance. • WARNING: Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction; • WARNING: Do not use mechanical devices or other means to accelerate the defrosting process, other than those Recommended by the manufacturer; • To avoid a hazard due to instability of the appliance, it must be fixed in accordance with the instructions. • WARNING: Do not damage the refrigerant circuit; • WARNING: Do not use electrical appliances inside the food storage compartments of the appliance, unless they are the type recommended by the manufacturer. • Try to avoid use in hot environments. • If the refrigerant of these appliances are R600a , Flammable and explosive articles should not be put in or near the cabinet, to avoid the fire or explode caused. -Save these instructions-	

➤ **Wine cooler self-checking**

The unit will have “bee”, “bee” after power on, this means the wine cooler is self-checking before operation.

► UNPACKING AND INSTALL THE DOOR HANDLE

 
Remove the exterior and interior packing materials.

Install the door handle provided with the appliance by following these steps:

Step 1 — Remove the gasket at the inner side of the door to expose the two screw holes.

Step 2 — Install the handle tightly with the screws and washers provided.

Step 3 — Tidy and restore the gasket.

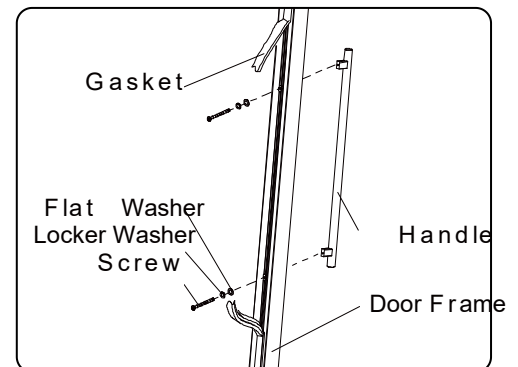

► INSTALLATION INSTRUCTIONS

➤ **Before Using Your Wine cellar**

- Remove the exterior and interior packing.
- Before connecting the Wine cellar to the power source, let it stand upright for approximately 24 hours. This will reduce the possibility of a malfunction in the cooling system from handling during transportation.
- Use a soft cloth to clean the interior surface with lukewarm water.
- This appliance is intended to be used in household and similar applications such as
 - – staff kitchen areas in shops, offices and other working environments;
 - – farm houses and by clients in hotels, motels and other residential type environments;
 - – bed and breakfast type environments;
 - – catering and similar non-retail applications.
- When disposing your appliance, please choose an authorized disposal site.

➤ **Installation of Your Wine Cellar**

- This appliance is designed to be for free standing installation or built-in (fully recessed) (Refer to sticker location the back of this appliance).
- This appliance is intended to be used exclusively for the storage of wine or beverages.
- Place your Wine cellar on a flat floor that is strong enough to support it when it is fully loaded. To level your Wine cellar, adjust the front leveling leg at the bottom of the Wine cellar.
- This appliance is using flammability refrigerant. So never damage the cooling pipework during the transportation. Locate the Wine cellar away from direct sunlight and sources of heat (stove, heater, radiator, etc.). Direct sunlight may affect the acrylic coating and heat sources may increase electrical consumption. Extreme cold ambient temperatures may also cause the unit not to perform properly.
- Avoid locating the unit in moist areas.
- Plug the Wine cellar into an exclusive, properly installed-grounded wall outlet. Do not cut or remove the third (ground) prong from the power cord under any circumstances. Any questions concerning power and/or grounding should be directed toward a certified electrician or an authorized Products service center.

• ➤ **Attention**

- Store wine in sealed bottles;
- Do not overload the cabinet;
- Do not open the door unless necessary;
- Do not cover shelves with aluminum foil or any other shelf material which may prevent air circulation;
- Should the Wine cellar be stored without use for long periods, it is suggested to leave the door ajar to allow air to circulate inside the cabinet after a careful cleaning, avoiding possible formations of condensation, mold or odors.

➤ **Ambient Room Temperature Limits**


This appliance is designed to operate in ambient temperatures specified by its temperature class marked on the rating plate.

Class	Symbol	Ambient Temperatures range(°C / °F)
Extended Temperate	SN	+ 10°C / 50 °F to + 32°C / 89.6°F
Temperate	N	+ 16°C / 60.8°F to + 32°C / 89.6°F
Subtropical	ST	+ 16°C / 60.8°F to + 38°C / 100.4°F
Tropical	T	+ 16°C / 60.8°F to + 43°C / 109.4°F

Description of product model

Model	Description
JC-85A	26bottles single zone wine cellar
JC-145A	46 bottles single zone wine cellar

 
The standard bottles as below:

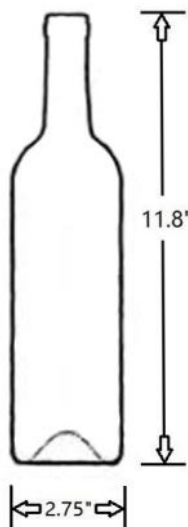


The stated capacity is dependent on the size and shape of standard Bordeaux 750ml bottle with diameter of 2.75".

When accommodating larger bottles, you can remove shelves. This will reduce the stated bottle capacity.

 JC-85A

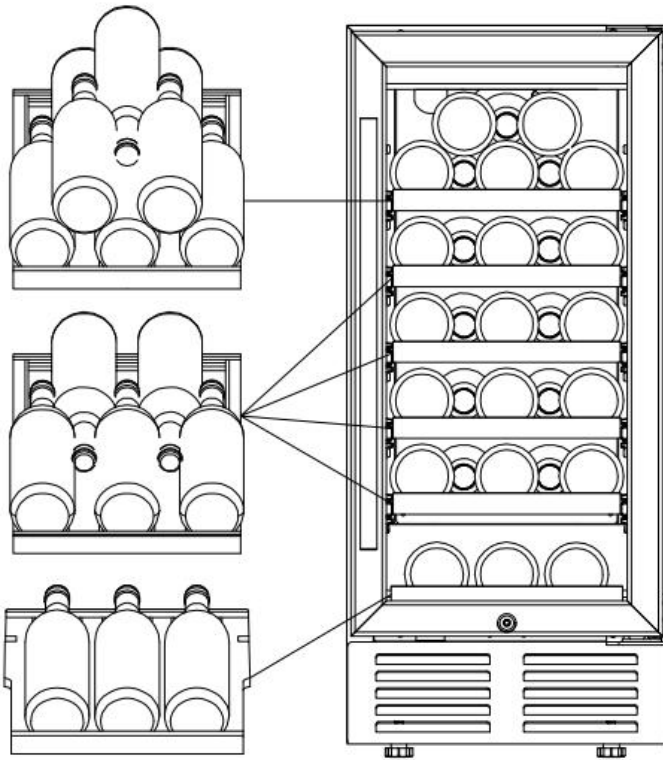

JC-145A

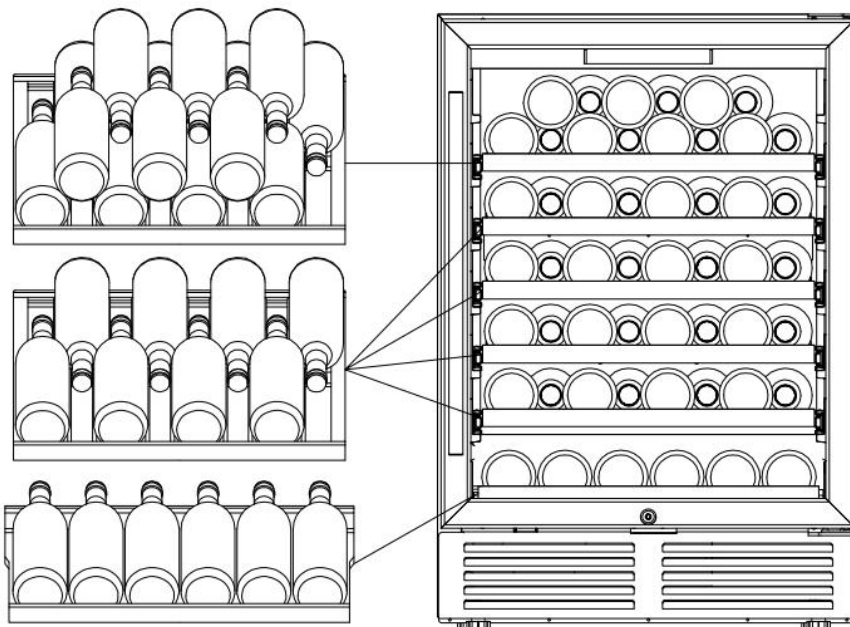 

WINE STORAGE

- To prevent damaging the door gasket, make sure to have the door opened fully all the way before pulling the shelves out.


- Please store wine in sealed bottles.
- Should the wine cooler be left empty for long periods it is suggested that the appliance is unplugged, and after careful cleaning, leave the door ajar to allow air to circulate inside the cabinet in order to avoid possible condensation, mold or odours forming.
- Recommended Temperatures for chilling/storage your wines.

Red Wines	15-18°C / 59-64.4°F
Dry/White Wines	9-14°C / 48.2-57.2°F
Rose Wines	10-11°C / 50-51.8°F
Sparkling Wines	5-8°C / 41-46.4°F

▶ OPERATING YOUR WINE CELLAR

FOR JC-85A/JC145A WINE CELLAR

 ➤ Control System Instruction

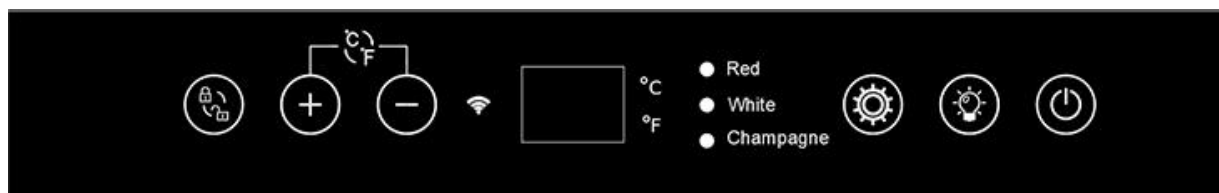

- Power switch : After the unit is power on, press  for 3 seconds to turn on or off the unit.
- Touch the button  and , you can interchange the Fahrenheit (°F) and Celsius(°C) display .
- Temperature setting button : Press  to select the item you want. We have three kinds of items, red wine: 16°C, white wine: 10 °C, champagne: 6 °C. When press it first time, the display flashes and shows the setting temperature. After 5 seconds it shows the measured interior temperature. Press  to increase the setting temperature and press  to decrease the setting temperature.
- Display window: 2-digit LED display to show setting temperature or actual interior temperature.
- Light button : Press  to turn on or off.
- Key lock function : Long press  for 3 seconds to lock/unlock.

➤ Setting The Temperature Controls

- You can set the temperature as you desire by pushing the “+”or “-”button. When you push the two buttons for the first time, the LED readout will show the original temperature set at previous time.
- The temperature that you desire to set will increase 1°C/1°F if you push the  button once, on the contrary the temperature will decrease 1°C/1°F if you push the  button once.

- To view the “set” temperature. (anytime) press and hold the corresponding button for approximately 5 seconds, the “set” temperature will temporarily “flash” in the LED display for 5 seconds.

•

Model	Temperature range
JC-85A/JC-145A	The temperature setting can be adjusted from 5°C/41°F to 20°C /68°F. The temperature preset at the factory is red wine: 16 °C , white wine: 10 °C , champagne: 6 °C .

➤ Attention

If the unit is unplugged, power lost, or turned off, you must wait 3 to 5 minutes before restart the unit. If you attempt to restart before this time delay, the Wine Cellar will not start. If first time use or longer absence of using, the temperature will be different between setting and LED display temperature. After running a period, the temperature will be reverting back.

➤ Shelves

- To prevent damaging the door gasket, make sure to have the door all the way opened when pulling shelves out of the rail compartment.
- For easy access to the storage content, you must pull the shelves approximately 1/3 out of the rail compartment, however this unit was designed with a notch on each sides of the shelf tracks to prevent bottles from falling.
Please refer to the following direction for replace shelf with different method.

Type A

If need to take out any shelf, move the shelf towards the gap on the both sides and alignment with shelf support A. Then lift upwards the shelf and pull out it from the cabinet once the shelf support disengaged from the gap.(Figure A)

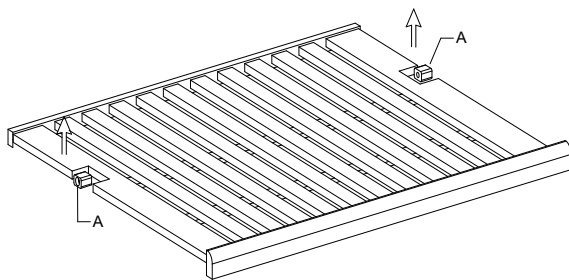 


Figure A


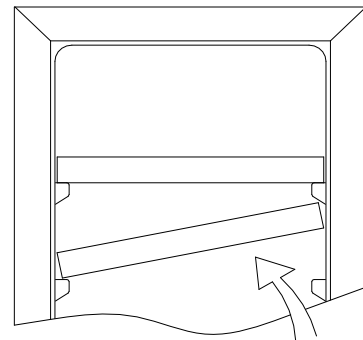 


Figure B

Type B

When removing any of these shelves out of the rail compartment, To fit or remove the shelf, tilt the shelf as per the diagram and simply pull out, or push in the shelf until it sits on the support brackets securely.(Figure B)

 
BUILT-UNDER SERIES (Built under a kitchen table top)

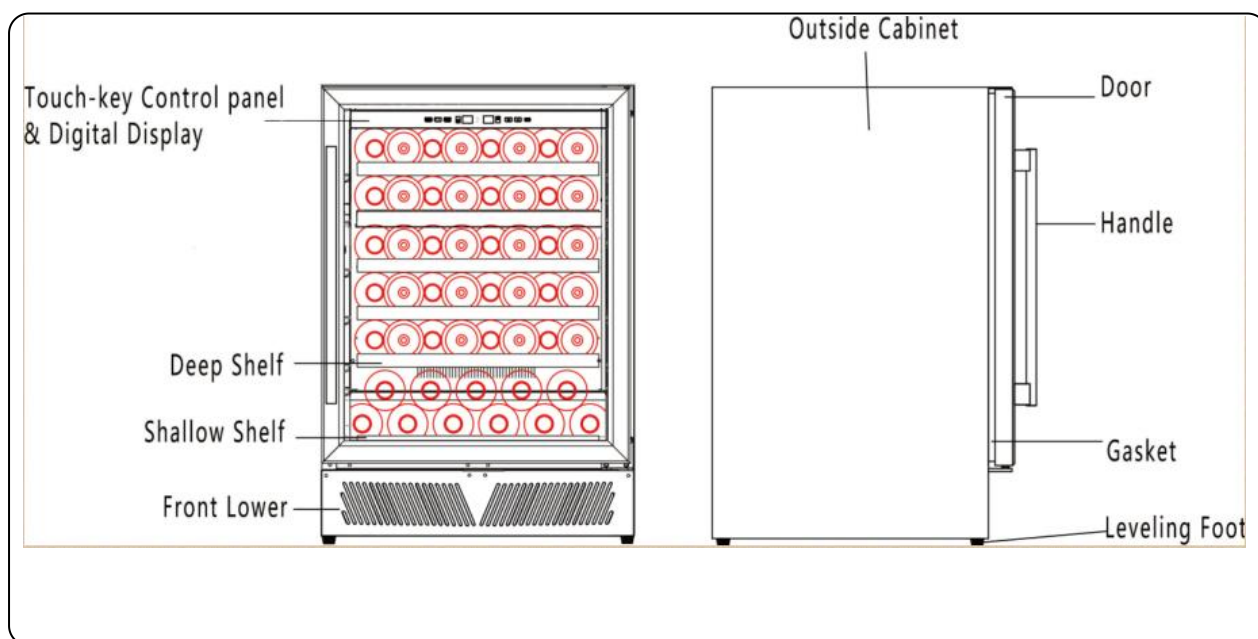


Remark: The above picture is for reference only. Please refer to the actual product.

➤ Installation specifications for built-in purposes

 JC-85A

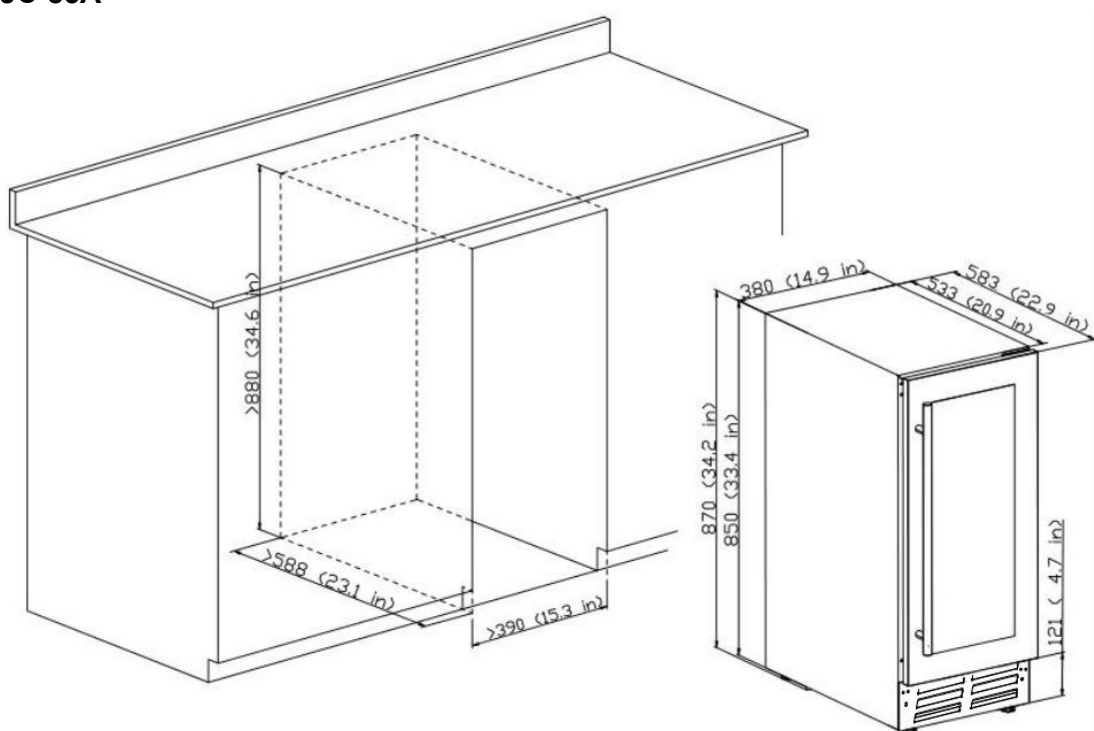

JC145A

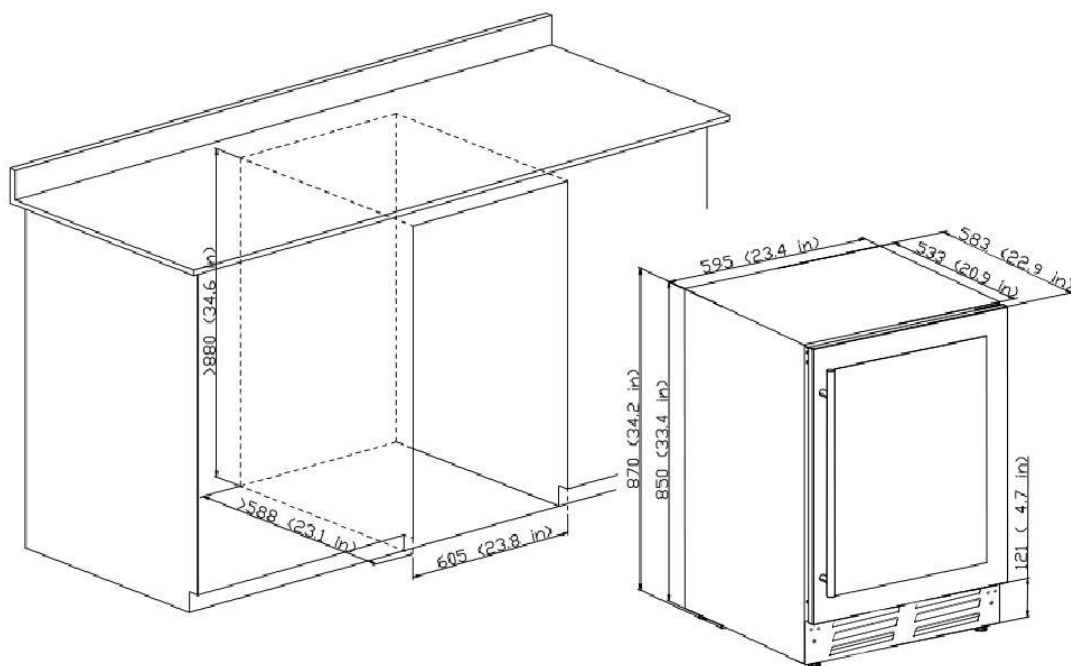 

LOCK & UNLOCK THE DOOR (FOR OPTION)

Lock is an optional function. If your Wine Cellar has such function, a key should be attached inside the packing of this Manual.

Insert the key into the lock and turn it counter-clockwise to unlock the door. To lock it, please follow the reversed operation. Please save the key well.


CHARCOAL FILTRATION SYSTEM

Your wine is a living object that breathes through the cork of its bottle. In order to preserve the quality and taste of your fine wines, they must be stored at the ideal temperature and ambient conditions. Your cellar is equipped with an active charcoal filtration system to ensure air purity, cooling efficiency, and to maintain an odor free cabinet for the storage of your fine wines. The filter assembly is located at the rear panel inside your cellar.

Keep in mind, that this filter must be changed every 12 months and purchase the new one from the distributor.

To replace your filter:

1	Remove the bottles of wine stored on the two (2) shelves in front of the filter.
2	Remove the shelves and set aside to be replaced once you have changed the filter
3	Hold the filter and turn it at 45 degrees in the counter-clockwise direction and then pull it out.
4	Remove the existing filter and replace with a new one.
5	Put the new filter into the hole and then turn the filter at 45 degrees in clockwise direction.

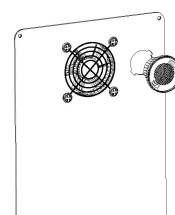 

Turn Left to remove filter.

▶ APP CONNECTION



Scan the QR Code below with your smartphone or search it in the APP Store or Google Play to download the "QZsmart" app. There are two ways to connect the APP WiFi mode and Bluetooth mode.

WIFI MODE:

PREPARATION BEFORE USE:

1. Make sure your device is on and ensure that your smartphone is connected to 2.4 GHz Wi-Fi network.

NOTE: This device only supports 2.4GHz Wi-Fi@ network, not 5GHz Wi-Fi@ network

2、Ensure that the Bluetooth function of the mobile phone is enabled at the same time; otherwise, the device cannot be automatically searched.

 
3. Download the QZsmart app from the App Store or Google Play™.

NOTE: Authorize the app to access network and location services.

4. If you are using the app for the first time, click the "Sign up" button and register. If you already have an account, click the "Log in" button.

5、For better WIFI connection, please reset the product WIFI before using it for the first

time. You can turn off the device switch, press and hold "  " and "  " on the control panel at the same time for 5 seconds, and hear a beep to disconnect.

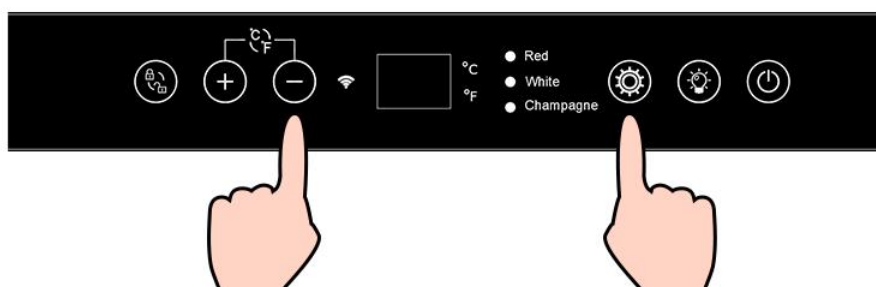

ADD DEVICE

1. From the Home Page, press "Add Device" or press "  " in the top right corner of the screen. (If you already have a device added to your account, the "Add Device" button will not appear.)

2. Connecting

➤ Auto-connect: (Featured First)

The app will automatically search when Wi-Fi and Bluetooth are switched on, so you can add the corresponding product directly from the automatic search.

Step 1: Press "Add Device" or press "  ".

Step 2: When the device is found, press Add. The Bluetooth function must be enabled during this process.

Step 3: Select your Wi-Fi network. (Be sure to use a 2.4G network)

Step 4: Enter your router password.

Step 5: Wait for connection and click "NEXT".

Step 6: Once the device is added, you can use the menu to change the name and location of the device.

Step 7: When you are finished, click "Done".

➤ Manual connection:

Select your model from the device menu.

Step 1: Press "Add Device" or press "  ".

Step 2: Select the corresponding product type and click the product diagram of the corresponding model

Step 3: After the product is shut down, press "Next".

Step 4: Press and hold "  " and "  " on the control panel for 5 seconds, hear a "beep" and press "Next". (Confirm the WIFI LED is blinking slowly.)

Step 5: Select your Wi-Fi network. (Be sure to use a 2.4G network)

Step 6: Enter your router password.

Step 7: Click "Confirm." The next screen will say "Connect your mobile phone to the device' s hotspot".

Step 8: Click "Go to connect." This will take you to your phone' s settings (or Wi-Fi list for Android).

Step 9: Select "SmartLife-XXXX."

Step 10: Navigate back to the QZsmart App.

Step 11: Click "Next". Your smartphone will automatically connect.

Step 12: Once the device is added, you can use the menu of the app to change the name of the device.

Step 13: When you are finished, press "Done".

■ Follow the APP interface, there are detailed operation reminders in the APP interface, you need to follow the steps one by one;

NOTE: Connection may take up to 60 seconds.

*Once the device is added, you can use the menu of the app to change the name of the device.

*When you finished, press "Done".

NOTE: Your mobile device is connected to a 2.4GHz Wi-Fi network when pairing with the app. Please select the 2.4GHz network when selecting a Wi-Fi network on the app during setup.

BLUETOOTH MODEL:

Bluetooth function can be used in non-wifi environment.

PREPARATION BEFORE USE:

Please be sure to connect WIFI successfully for the first time. (Again, you must connect to WIFI first, otherwise you will not be able to use Bluetooth in non-wifi environments.)

NOTE:

After the WiFi connection is disconnected, wait about 2-3 minutes before you can directly use the Bluetooth control.

USING THE MY APP

The main interface allows you to select the temperature setting items and set "LOCK", "ON /Off" and "LED".

HOW TO UNBIND

 
A device can only be connected to one mobile phone.

➤ First method : You can turn off the device switch,

press and hold "  " and "  " on the control panel at the same time for 5 seconds, and hear a beep to disconnect.

➤ Second method : Removing connection with the app:

Open the app and go to the device page. Click "  " in the upper right corner, and then click "Remove Device" at the bottom.

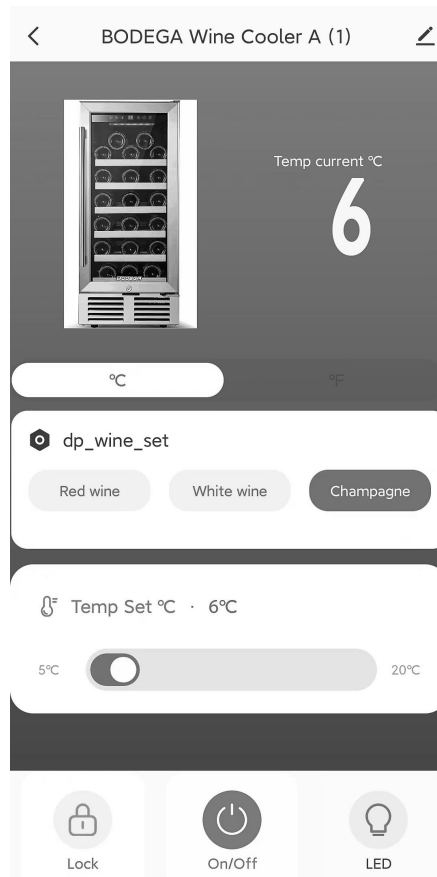

CAUTIONS

*There will be a delay in operating the machine on the mobile phone, about 1-3 minutes, please be patient.

*The language of the APP automatically switches with the language of the mobile system.

*You can lock or unlock the control panel on the refrigerator by operating the APP lock icon. Please note that if you want to lock the refrigerator, please control it through the APP, the operation panel of the refrigerator does not have the function of locking and unlocking.

▶ CARE & MAINTENANCE

➤ **Clean your Wine Cellar**

Turn off the power, unplug the appliance, and remove all items including shelves and rack. Wash the inside surfaces with a warm water and mild solution.

Wash the shelves with a mild detergent solution.

Wring excess water out of the sponge or cloth when cleaning area of the controls, or any electrical parts.

Wash the outside cabinet with warm water and mild liquid detergent. Rinse well and wipe dry with a clean soft cloth.

➤ **Power failure**

Most power failures are corrected within a few hours and should not affect the temperature of your appliance if you minimize the number of times the door is opened. If the power is going to be off for a long period of time, you need to take the proper steps to protect your contents.

➤ **Vacation Time**

Short vacations: Leave the Wine Cellar operating during vacations of less than three

weeks.

If the appliance will not be used for several months, remove all items and turn off the appliance. Clean and dry the interior thoroughly. To prevent odor and mold growth, leave the door open slightly: blocking it open if necessary.

➤ **Moving your Wine Cellar:**

Remove all items.

Take out the loose items inside the wine cellar (such as shelf), or fix the loose items with the foam.

Turn the adjustable leg up to the base to avoid damage.

Tape the door shut.

Be sure the appliance stays secure in the upright position during transportation. Also protect outside of appliance with a blanket or similar items.

➤ **Energy saving tips**

The Wine Cellar should be located in the coolest area of the room, away from producing appliances, and out of the direct sunlight.

▶ TROUBLESHOOTING GUIDE

If you feel the appliance is out of order, follow these instructions to try to see if you can solve the problem simply by yourself before calling for service.

Problem	Possible Cause
Wine Cellar does not operate	No plugged in. The appliance is turned off. The circuit breaker tripped or a blown fuse.
Wine Cellar is not cold enough	Check the temperature control setting. External environment may require a higher setting. The door is opened too often. The door is not closed completely. The door gasket does not seal properly.
Turns on and off frequently	The room temperature is hotter than normal. Overload of the cabinet The door is opened too often. The door is not closed completely. The temperature control is not set correctly. The door gasket does not seal properly.
The light does not work	Not plugged in. The circuit breaker tripped or a blown fuse. The bulb has burned out. The light button is "OFF"
Vibrations	Check to ensure that the Wine Cellar is level.
Too much noise	The rattling noise may come from the flow of the refrigerant, which is normal. As each cycle ends, you may hear gurgling. Contraction and expansion of the inside walls may cause popping and crackling noises. The Wine Cellar is not level.

The door will not close properly	The Wine Cellar is not level. The door was reversed and not properly installed. The gasket is dirty. The shelves are out of position.
The control panel does not work	Not plug in The control panel is locked. Please press  and  at the same time for 3 seconds to unlock.
The unit beeps.	Wine cooler self-checking. It's normal.
Condensation on the glass surface	Avoid using in high temperature environments. Refrigerator refrigeration glass surface low temperature, high ambient temperature air encounter low temperature glass door will produce condensation, belongs to the normal phenomenon.
Bluetooth connection unavailable	The connection is not correct. 1. When using Bluetooth mode for the first time, it can only be used after the 2.4G WiFi network is connected successfully. 2. After the WiFi connection is disconnected, wait about 2-3 minutes before you can directly use the Bluetooth control.

Before disposal of the appliance:

1. Disconnect the main plug from the main socket.
2. Cut off the main cable and discard it.

► TECHNICAL DATA

Model	JC-85A	JC-145A
Total Volume	2.88 Cu. Ft	4,89 Cu.Ft,
Power	115V~60Hz	115V-60Hz
Amps	1.0A	1.2A
Start-Up Amps	10A	10 A
Power Input	75W	100 W
Pressure High Side	105PSL	105 PSL
Pressure Low Side	55PSL	55 PSL
Refrigerant	R600a	R600a
Amount	0.77 oz.	0.98 oz.
Dimensions(HxWxD)	34.2" x 14.9" x 22.9"	34.2" x 23.4" x 22.9"

MANUFACTURER: ZHONGSHAN BODEGA ELECTRICAL APPLIANCE CO., LTD

ADD: NO.20 JIAN MIN RD., HUANGPU TOWN, ZHONGSHAN CITY, GUANGDONG, CHINA

Contact: Mickey

Tel: +1 (313) 913-7585

E-Mail: info@bodegacooler.com



BODEGA

C O O L E R

Thank you for purchasing **BODEGACOOLER** product. We sincerely hope that you are satisfied with the product.

We'd like to offer you **12-month warranty** for free.

Once activated the warranty, you will be ensured that if anything goes wrong with your product. Replacement unit/parts will be warranted during the warranty period.

———— What you need to do ————

Any help or questions during use, please contact us via website

www.bodegacooler.com, send email to **info@bodegacooler.com**, we will service you within 24 hours.

When contacting us, we suggest to send Order ID,

problem and a photo or a video for helping us much

more clearer about the problem and offer you the best solution.

C

O

O

L

E

R

✉ info@bodegacooler.com

<https://www.bodegacooler.com/> 🔍