



Instruction Manual

SAVE THESE INSTRUCTIONS—This manual contains important safety and operating instructions for power units.

Product Name:	Resin Angel Outdoor Patio Fountain
SKU #:	WHF718

Thank you for purchasing this LuxenHöme product. This product has been manufactured with the highest standards of safety and quality.

PLEASE READ ALL INSTRUCTIONS BEFORE ASSEMBLY.

Please make sure to unpack all the components from the packaging inside the carton to ensure that there are no missing or damaged parts. Do not attempt to assemble or use the product if any parts are missing or damaged.

CARTON CONTENTS:

Description	Quantity
Fountain Base	1
Fountain Bowl	1
Angel and Pot	1
Pump	1

Compatible Pumps for this fountain:

 
 
 
 
Pump Model No.
JR250
AP333
YH-300-70

Tools required for assembly: No tools are required for assembly.

Assembly Instructions:

1. Unpack the box's contents and check to ensure that all items are accounted for and in good condition.
2. Select a flat, level surface for your fountain's assembly and final location.
3. Place the fountain on a flat, level surface. Insert the water supply tube into the pump outlet from the opening at the back of the fountain base and bowl. Place the pump upright in the basin and draw the pump power cord out of the fountain back. Attach the bird figurine to the pot by inserting the bird's peg into the notch in the fountain. (①)
4. Add clean water into the basin. The water level should be approximately 1.18in (30mm) lower than the basin's edge. The pump will be submerged in the water. (②)
5. Connect the pump power cord to a ground fault circuit interrupter (GFCI) outlet, and the product will begin functioning as intended. (③)
6. To eliminate the possibility of water damage around your fountain, check for leaks and excessive splashing after the initial setup of your fountain. It is highly recommended that this fountain be placed where it cannot be damaged.
7. Do not leave your fountain running for extended periods when no one is present to observe the performance.
8. Check the area around your fountain regularly to ensure that there is no leakage.
9. Please refresh the fountain with water each week to ensure it is in good condition.
10. Do not add harmful chemicals to the water, as it may alter the paint finish.

Product Name:	Resin Angel Outdoor Patio Fountain
SKU #:	WHF718

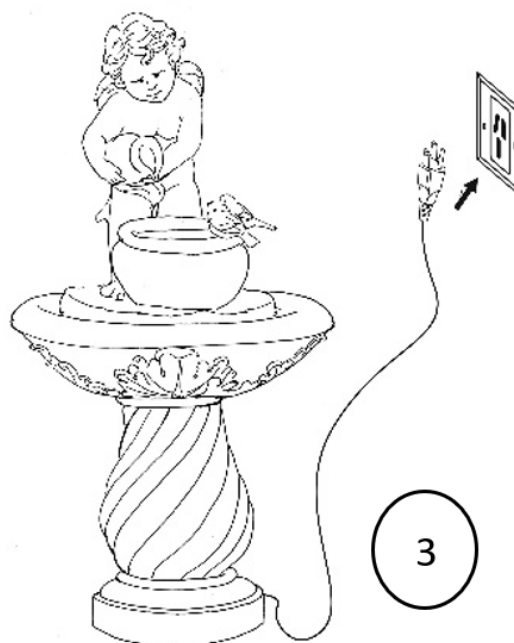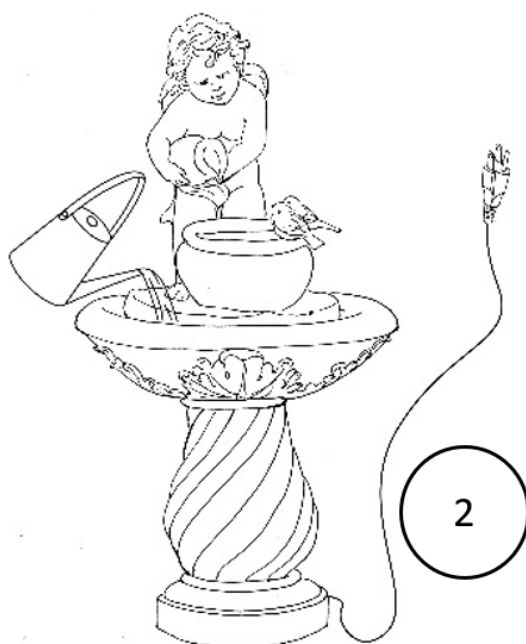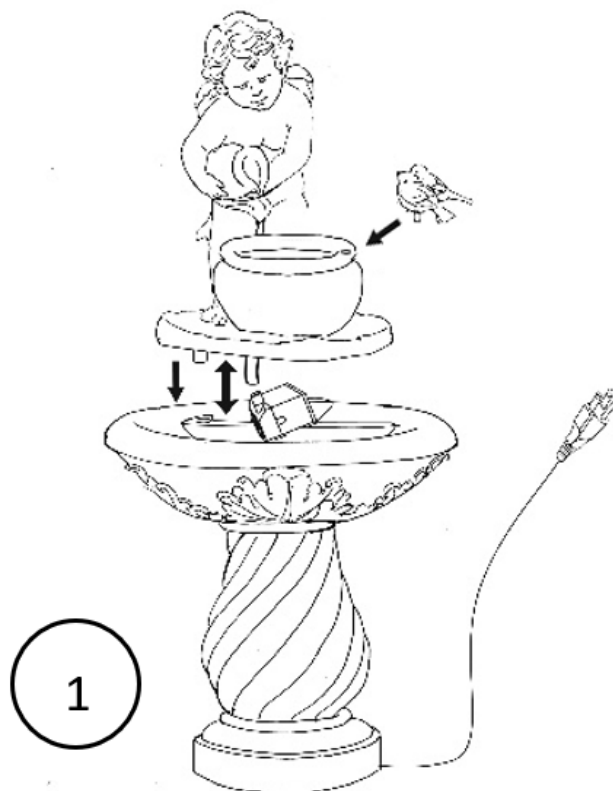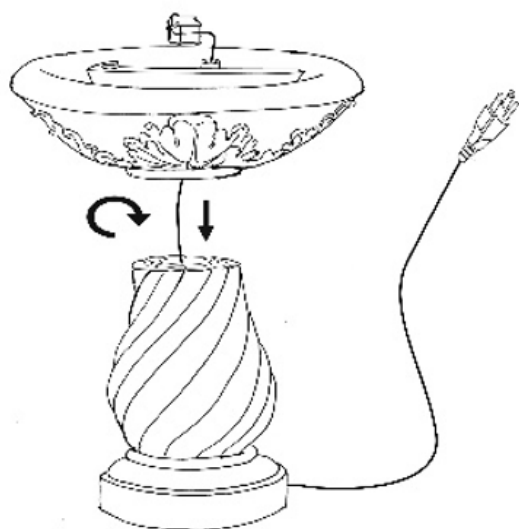

Note: The above diagram is for illustrative purposes only.

Product Name:	Resin Angel Outdoor Patio Fountain
SKU #:	WHF718

MAINTENANCE OF YOUR PUMP:

- Keep the water clean – clean water will prolong the useful life of your pump.
- Use a pre-filter on your pump if available.
- Regular cleaning of the pump will be necessary depending upon the environment in which it is operated. Clean the pump when it is visibly soiled or when a noticeable drop in performance is detected. **Failure to clean the pump will result in overheating of the pump and the voiding of the warranty!**
- Before cleaning, always disconnect the pump from the power source.
- Disassemble the pump by removing the inlet screen & the impeller housing. Remove the impeller/rotor assembly by gently pulling on the impeller blades. Use a soft cloth or brush to clean the area inside the pump where the impeller/rotor assembly was. Clean the inlet screen, impeller housing & impeller in warm soapy water. Reassemble the pump and inspect it for proper operation.

MAINTENANCE OF YOUR FOUNTAIN:

- Unplug the pump from electric power before servicing, cleaning, or moving.
- Keep water clean - using clean water will reduce mineral deposits and improve water clarity.
- Clean the fountain periodically to prevent mineral deposits and contamination. Use warm soapy water and a stiff brush for heavily stained surfaces. **Do not use harsh chemicals, which will damage the finished surface and void the warranty.**
- Add clean water periodically to ensure the pump is fully submerged.
- Disconnect the power and empty the basin if the fountain will not be used for an extended time.
- If installed outdoors and in a freezer area of the country, ensure all water is removed and the unit completely dry. **This product is NOT to be operated below 41°F (5°C) freeze damage may occur.**



Special Warnings and Cautions:

CAUTION:

- The pump has been evaluated for use with water only.
- Do not use the pump in water exceeding 35°C / 95°F.
- Do not use the pump in flammable liquids.
- Do not use the pump for industrial purposes.
- Do not use the pump in vehicles, ships, aircraft, or swimming pools.
- Do not use the pump in a location where special conditions prevail, such as the presence of a corrosive or explosive atmosphere (dust, vapor, or gas).
- Do not let the pump run dry. The pump must be completely submerged for proper operation and cooling.
- Do not lift the pump by its power cord.
- Keep the plug dry. Do not expose the plug to water or steam.
- Before connecting to the power source, ensure the pump is assembled and completely submerged in water.
- Check the water level regularly to ensure the pump is completely submerged during operation. The pump should be fully submerged during operation. Do not add water while operating the product. Always disconnect the pump from the power source before adding water.



Instruction Manual

SAVE THESE INSTRUCTIONS—This manual contains important safety and operating instructions for power units.

Product Name:	Resin Angel Outdoor Patio Fountain
SKU #:	WHF718

WARNINGS:

- To reduce the risk of electric shock, connect only to a properly grounded, grounding-type receptacle.
- To reduce the risk of electric shock, use only on portable, self-contained fountains no larger than 5 feet in any dimension.
- Do not exceed the voltage shown on the pump.
- Always disconnect the pump from the power source before beginning maintenance or work on the pump or fountain.
- Inspect the power cord for damage before installation and/or maintenance. Replace the entire pump if damage is found.
- For pumps with a 3-prong, grounded type plug, do not remove the grounding pin from the plug on the power cord.

TIPS AND TROUBLESHOOTING:

1. Ensure the pump's flow control switch is set to maximum (+) before operating. Once the flow is established, the pump can be adjusted downward to the desired level.
2. If the pump operates without flow, check to ensure the pump is fully submerged.
3. If the pump operates without flow, check the supply tubing for kinks and correct it.
4. If the pump operates, but there is no flow, and if the pump is submerged and there are no kinks in the supply tubing, lift the pump from the water. Remove supply tubing at the pump outlet and clean tubing inside and out if necessary. Reset the pump in water (outlet side up) and once water begins to flow, re-attach the supply tubing.