

POWER KING®

PK0803-EH Stump Grinder w/ Electric Start & Hour Meter



OWNER'S MANUAL AND OPERATIONS GUIDE



WARNING: This product can expose you to chemicals including benzene, carbon monoxide, and lead which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.

TABLE OF CONTENTS

Preface.....	3
Safety Precautions.....	4
Operations.....	7
Maintenance.....	12
Specifications.....	14
Parts List.....	15
Assembling.....	17
Return and Warranty.....	23

Preface

Thanks for purchasing the Stump Grinder by QV Tools!

To get the most out of your purchase, please read the manual before operating the stump grinder.

We ask you to please read this manual carefully in order to familiarise yourself with this product. After reading, please store this instructional manual for future reference.

If you have any questions or concerns, **please call us at 1-800-344-3371.**

WARNING! Failure to follow the proper protocols listed in the manual may cause personal injury to the operator or damage the equipment.



WARNING: This product can expose you to chemicals including benzene, carbon monoxide, and lead which is known to the State of California to cause cancer and birth defects or other reproductive harm.


For more information go to www.P65Warnings.ca.gov.

Safety Precautions

- ❑ Keep the working area clean and well lit.
- ❑ Do not operate the stump grinder in the presence of flammable liquids, gasses, or dust.
- ❑ Keep children and bystanders at least 50 feet away while operating the stump grinder. Stop the engine when another person or pet approaches.
- ❑ Only responsible, properly instructed individuals should operate this machine.
- ❑ Inexperienced operators must always be carefully supervised.
- ❑ Do not expose the stump grinder to rain or wet conditions.
- ❑ Stay alert, watch what you are doing and use common sense when operating a stump grinder. Do not use a stump grinder while you are tired or under the influence of drugs, alcohol, or medication. A moment of inattention while operating any stump grinder may result in serious personal injury.
- ❑ Use safety equipment. Always wear eye protection. Safety equipment such as a dust-mask, non-skid safety shoes, hard hat, and hearing protection used for appropriate conditions will reduce risk of personal injuries.
- ❑ Dress properly. Do not wear loose clothing or jewelry. Keep your hair, clothing and gloves away from moving parts. Loose clothes, jewelry or long hair can be caught in moving parts.
- ❑ Use ear protectors or ear plugs rated for at least 20 dba to protect your hearing.
- ❑ Do not start the engine until the machine is in the cutting position next to the stump.
- ❑ Do not overreach. Keep proper footing and balance at all times. This enables better control of the stump grinder in unexpected situations.

Safety Precautions (cont.)

- ❑ If devices are provided for the collection of dust extraction, ensure that that these devices are connected and properly used. Use of one of these devices can reduce dust related hazards.
- ❑ Check stumps to be removed for embedded nails, wire, metal fence posts, rocks, and other buried impediments which may become dangerously thrown or cause unexpected machine movements when hit by the cutting wheel.
- ❑ Make sure that all shields and guards are in place and are in good condition prior to operating the machine. Check the cutting wheel for damage or missing teeth and replace as necessary.
- ❑ Ensure that everyone in the vicinity is aware of the **danger zone** associated with this machine. Any person must avoid the **danger zone** at all times when the machine is in operation.

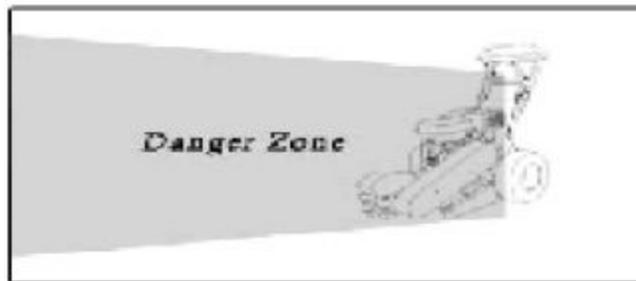

- ❑ Make sure that no one is working on, underneath, or close to the machine before starting the engine or beginning to move the machine. Make sure that the area is free of personnel.
- ❑ Don't make alterations or modifications to your stump grinder.
- ❑ Check with your local council and utility providers for the locations of buried pipes and cables where applicable. Do this before operating the machine.

Fuel Safety


WARNING! Pay attention and use extreme care while handling fuel. Fuel is extremely flammable and the vapors are highly explosive.

- ❑ Never remove the fuel cap or add fuel with the machine running. Stop the engine and allow engine and exhaust components to cool before refueling or storing.
- ❑ Add fuel outdoors in an open area. Do not smoke while adding fuel.
- ❑ Fill your engine with 10w-30 / 10w-40 / 15w-40 non-synthetic engine oil before use or serious damage will occur.
- ❑ Never refuel or store the machine in a place where there is an open flame, spark, or other ignition objects.
- ❑ If you spill gasoline, do not attempt to start the engine. Move the machine away from the area of the spill and avoid creating any source of ignition until the gas vapors have dissipated. Wipe up any spilled fuel to prevent a fire hazard and properly dispose of the waste.
- ❑ Always make sure the fuel cap is securely tightened and replace before starting.
- ❑ If the fuel tank needs to be drained, it should be done outdoors.
- ❑ The muffler and engine become very hot and can cause severe burn. Do not touch.

OPERATIONS

Adding Oil To The Engine

1. Only fill the fuel tank to a level 15mm lower than the top of the fuel tank. Do not overfill.
2. Use the dipstick to check the oil level. Use 10w-30 / 10w-40 / 15w-40 non-synthetic engine oil. Fill to the correct level before use.

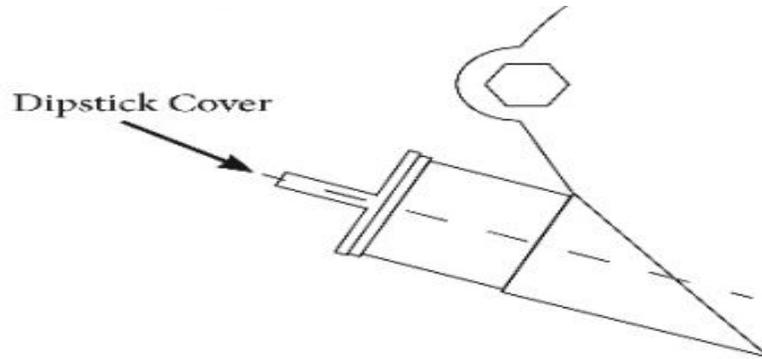

NOTE: The engine is shipped without oil. Operating the engine with no oil or oil at a low level will destroy the engine. This is **not** covered under warranty.

Starting The Engine

- Lock the travel wheel by pulling the brake lever back fully.
- Make sure throttle is in slow position.

Do not allow the rope to snap back. Set it back by hand to prevent damage to the starter.

- If the engine is cold, move the choke lever to the closed position.
- Raise the cutter wheel 4 to 5 inches off the ground by pushing downwards on the handle bar and hold it in that position.

This next step may cause the cutter wheel to rotate. Keep everyone away.


- Pull the starter rope lightly until you feel resistance, then pull briskly.
- Move the choke lever to the open position.

The next step causes the cutter wheel to rotate. Again, keep everyone away.


- Move the throttle to fast. If the engine is cold, allow the engine to idle (throttle set to slow) for a few minutes before cutting.

Removing Stumps

- ❑ Remove all loose pieces of wood, stones, wire and other debris from the area before beginning stump removal.
- ❑ Wind direction should be considered, as it will influence the direction in which dust and wood chips are directed.
- ❑ Never operate the grinder after dark. There will be no adequate light for the operator to use the grinder safely.
- ❑ Always allow a cold engine time to warm up before cutting a stump.
- ❑ Only the portion of cutting wheel within the 80 degree area shown below should engage the stump. Never undercut the stump or use the bottom of the cutting wheel for cutting purposes.

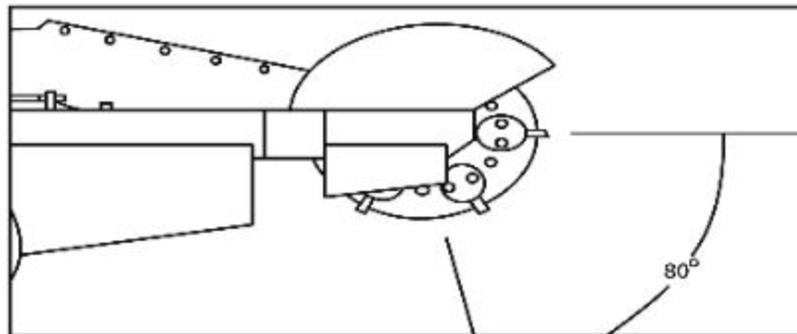


- ❑ Never leave controls when the cutting wheel is rotating.
- ❑ Do not angle engine more than 25 degrees while in operation. Doing so can cause damage to the engine.

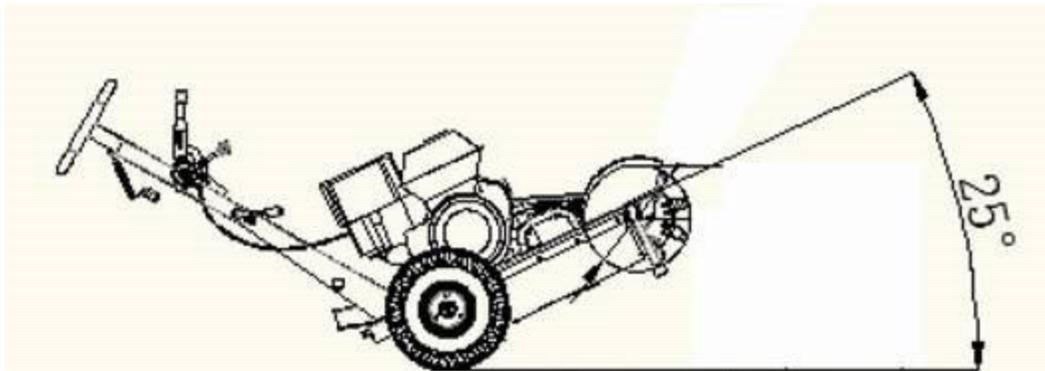

Operating Tips!


- ❖ Use smooth and comfortable side to side movements while operating.
- ❖ When you need to cut smaller roots, it may be more effective to do so before cutting the stump, rather than after.
- ❖ Should the chip build-up become excessive when cutting, shut off the machine, wait for the cutting wheel to stop rotating, retract the machine from the stump and rake away the chips. It is also possible to use the cutter wheel to push chips off the the side.
- ❖ **In order to prevent any of the wheels becoming stuck in the hole. Move the grinder to the other side of the stump to continue removal or by filling the hole with chips before continuing.**

You will want to prepare the grinder at the stump by placing it into position with the cutting wheel near the top edge of the stump. (See image below)

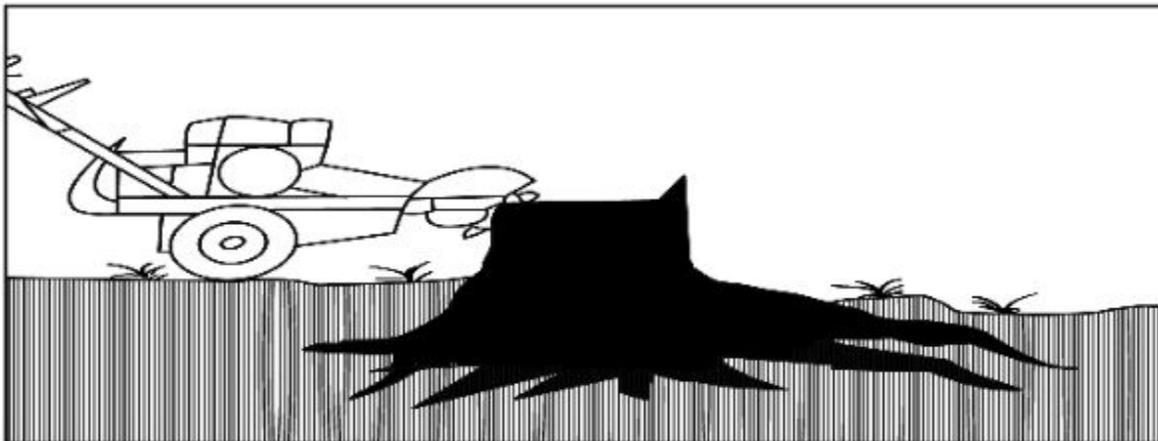


Removing Roots

1. Make sure the throttle is set to **fast**. The cutter wheel will accelerate to cutting speed.
2. Swing the cutting wheel to one side, then lower it into the nearest roots that are buried at the foot of the stump.
3. Swing the cutting wheel before each sweep until the roots are sufficiently removed.

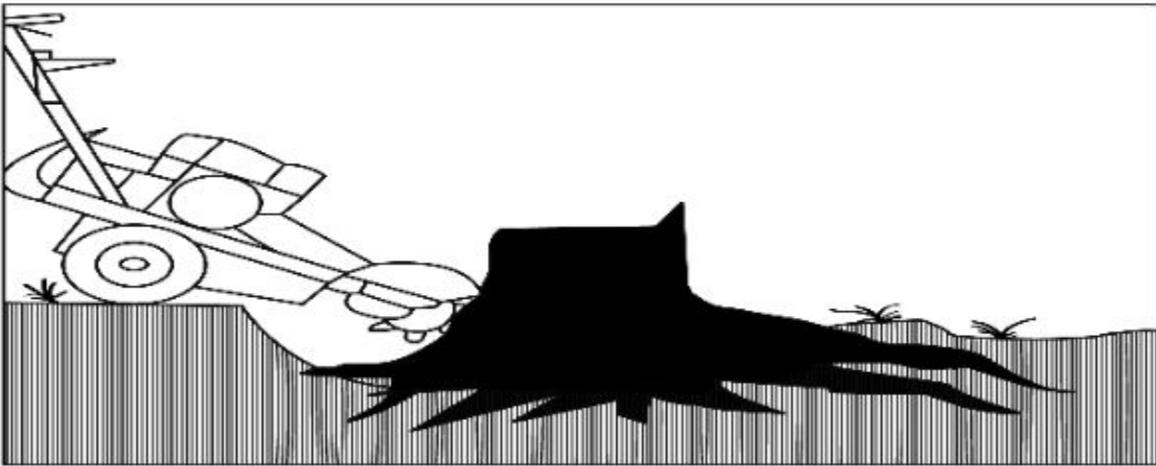

Cutting The Full Stump

1. Make sure the throttle is set to **fast**. The cutter wheel will accelerate to cutting speed.
2. Direct the cutter wheel against the stump, beginning with the nearest top corner of the stump. Steadily sweep it across the stump left and right, cutting away a ½ inch of wood with each sweep.
3. Raise and lower the cutter wheel between sweeps by lowering and raising the control handle.
4. Roll the machine forward and back by pushing and pulling on the control handle. To do this, release the brake. Relock it when the machine has been repositioned and continue cutting.

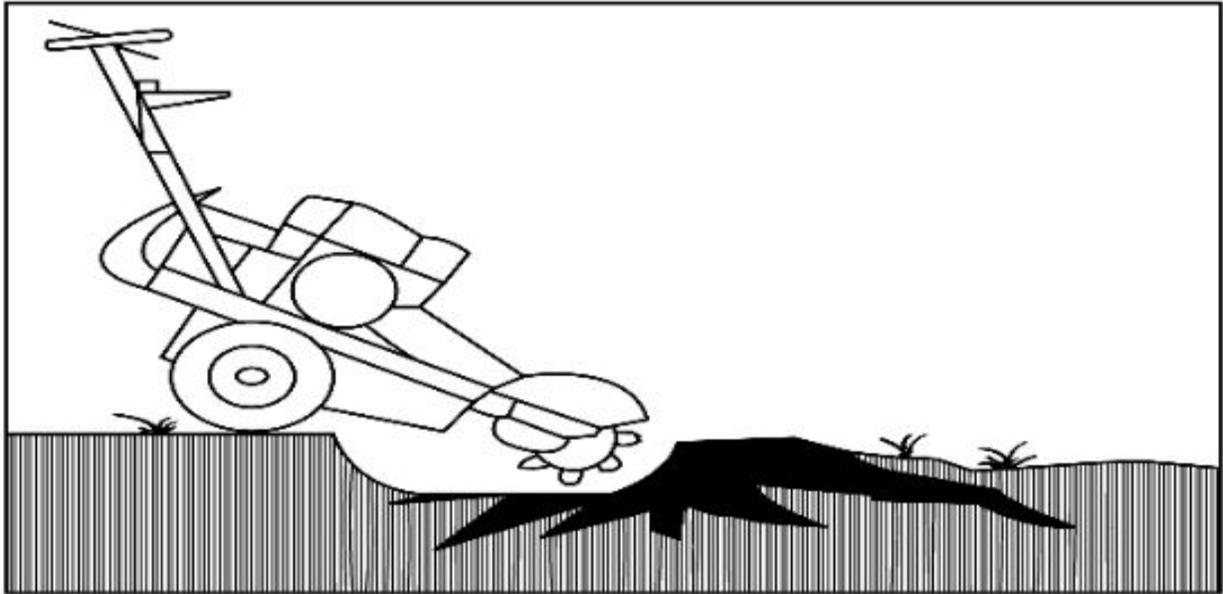

Continue with the final removal of roots

Cut the remaining roots as described in step 2 until satisfactorily removed.

Shutting Off The Grinder

1. When stopping the machine after normal operation, lower the engine speed to **slow** and press the emergency switch.
2. Set park brake before leaving the controls.
3. Shut off the engine by pressing the on/off switch.

Standard Shutdown Procedure

In consideration of your own safety and that of other, you should always use the following normal shutdown procedures before departing from the controls for any reason including cleaning, servicing, transporting, or inspecting the stump grinder. Never deviate from this procedure unless instructed in this manual or in an emergency that requires it.

WARNING! A rotating cutting wheel is very dangerous. Stand at controls and ensure that the cutting wheel comes to a complete stop before doing anything else.

1. Move the engine throttle to the **slow** position.
2. Push the emergency (on/off) switch to stop the engine.
3. Set park brake before leaving controls.

Emergency Shutdown Procedure

1. Immediately press the emergency (on/off) switch to stop the engine.
2. Be sure to allow all moving parts to come to a complete stop.
3. Pull the brake lever to engage the brake.
4. Rectify the emergency situation and return to normal operation.

Maintenance

- Make sure all nuts, bolts, and screws are tightened.
- Never store the equipment with petrol in the tank inside a building where fumes can reach an open flame or spark. Allow the engine to cool before moving the grinder.
- To reduce fire hazards, keep the engine and petrol storage area free of grass, dirt, and excessive grease.
- Replace worn or damaged parts for safety. If the fuel tank has to be drained, this should be outdoors.
- Regularly check the oil level and add some oil or replace it if necessary.
- Frequently check the grinder and ensure that all bark and dirt deposits are removed from beneath the deck.
- Lubricate the wheel axle and the bearings with grease regularly.
- Check the cutting wheel often. In order to achieve clean work, the blade should always be sharp and well balanced.

- ❑ Check the tightening of all bolts and screws at regular intervals. Nuts and bolts that are worn out or badly tightened can damage the engine or the frame.
- ❑ If the grinder hits an obstacle violently, stop the grinder and take it to a specialist for inspection.

Transportation

The stump grinder is designed to be transported via a van or small trailer. The machine is equipped with grab bars that are to be used for both lifting the machine and strapping it down. This machine weighs approximately 240lbs (110kg) and should only be lifted using correct apparatus or an adequate number of people working as a team.

There are legal road requirements for towing equipment and trailers (such as lighting and licensing). It is the owners responsibility to be aware of these laws and to adhere to them.

Specifications


Stump Grinder

- ❖ Diameter of Cutting Wheel: 11.8"
- ❖ Cutting Wheel Thickness: 3.5"
- ❖ Cutting Depth Below Ground: 11"
- ❖ Cutting Depth Above Ground: 14"
- ❖ Machine Width: 29.9"
- ❖ Teeth: 9pcs
- ❖ Tire Size: 145 / 70 - 6
- ❖ Brake Type: Drum
- ❖ Belts: 2 x B54 V-Belt

Engine

- ❖ Engine Type: Kohler CH440 4-Cycle Commercial
- ❖ Displacement: 429cc
- ❖ Max Output: 14HP/3600RPM
- ❖ Fuel Type: Unleaded 87 Octane or Higher
- ❖ Oil Weight: 10W-30
- ❖ Oil Capacity: 1.4qts

PARTS LIST

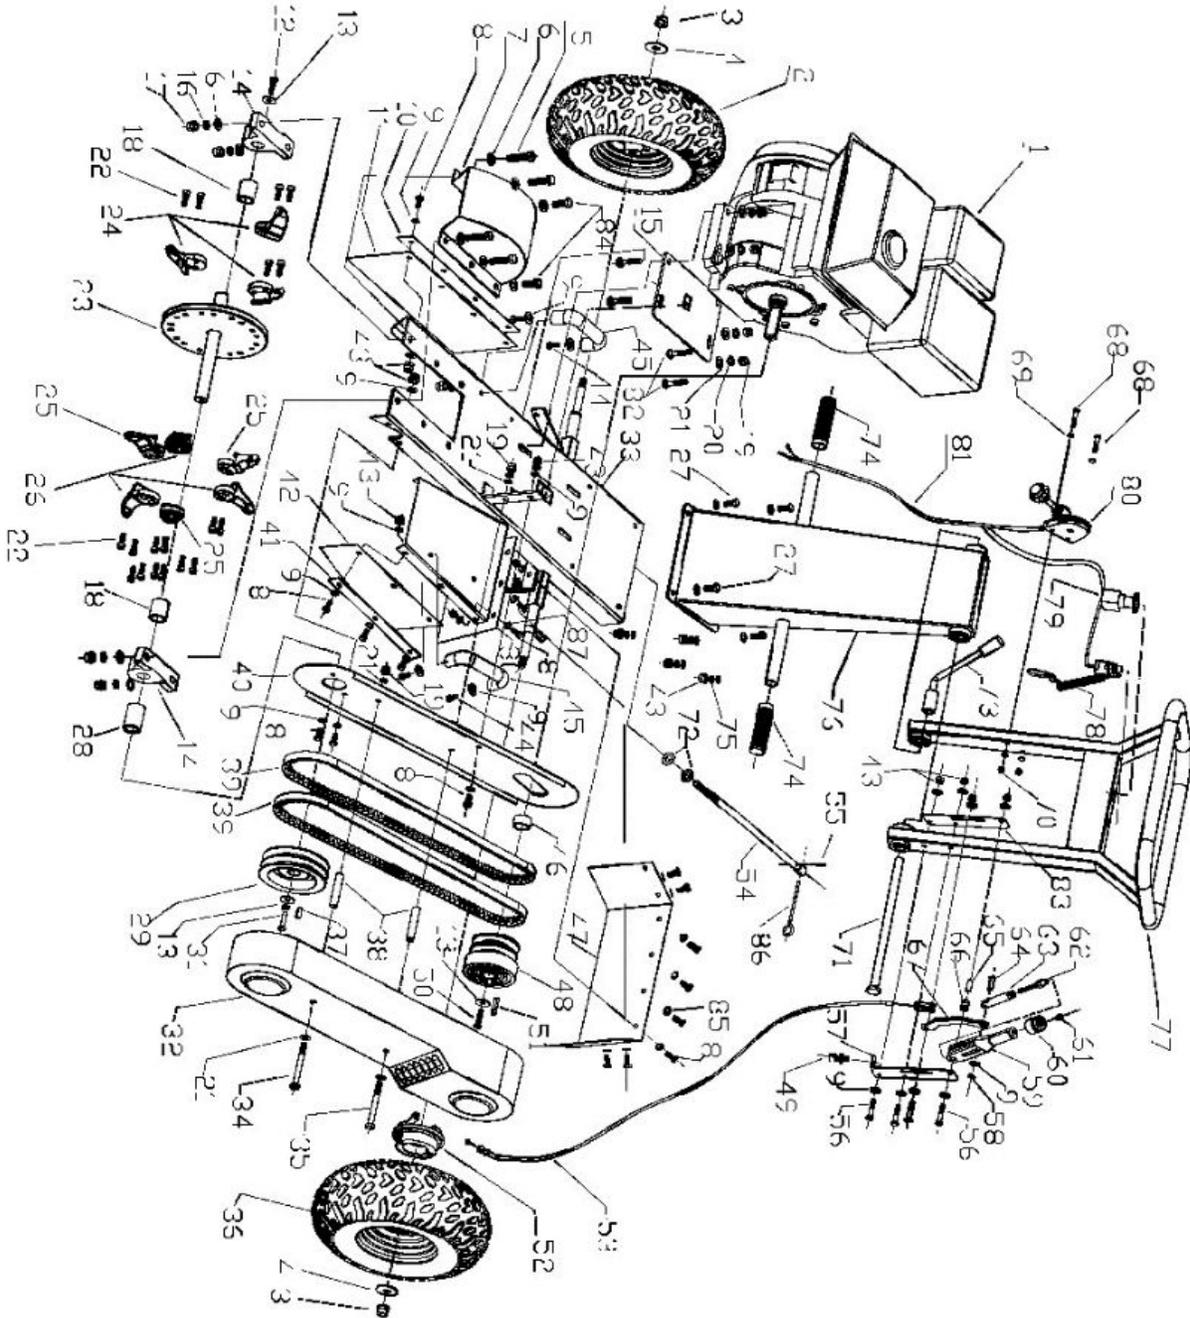

Stump Grinder


15

No.	spare part	Quantity	No.	spare part	Quantity
86	Rocker	1	43	Nylon locknut	25
85	Flat Washer	11	42	Inclined spacer	1
84	Hexagon socket screw	2	41	Short layering	1
83	Inner mounting plate	1	40	Deputy belt cover plate	1
82	Step bolt	4	39	belt	2
81	Throttle Cable	1	38	casing	2
80	Throttle switch	1	37	Flat key	1
79	Emergency stop switch	1	36	Left tire	1
78	safety rope switch	1	35	Hex bolt	1
77	handrail	1	34	Hex bolt	1
76	handrail support	1	33	Chassis assembly	1
75	Spring washer	1	32	Belt cover	1
74	Hand sets	1	31	Hexagon socket screw	1
73	Angle adjustment knob	2	30	Small spacer	1
72	Flat Washer	2	29	Large pulley	1
71	Hex bolt	2	28	Edge spacer	1
70	Nylon locknut	2	27	Hex bolt	1
69	Flat Washer	1	26	Left Cutter	3
68	Hex bolt	2	25	Straight Cutter	3
67	Connecting plate	2	24	Right Cutter	3
66	spacer sleeve	2	23	Cutter plate	1
65	Liner	1	22	Hexagon socket screw	
64	Axle pin	1	21	Flat Washer	30
63	Connecting pipe	1	20	Spring washer	9
62	Threaded rod	1	19	Nylon locknut	19
61	Hex round head bolt	3	18	The spacer	2
60	lid	1	17	Nylon locknut	8
59	The handbrake	1	16	Spring washer	8
58	Shaft Collar	1	15	Power holding board	1
57	Outer mounting plate	1	14	Vertical Bearing	2
56	Hexagon socket screw	4	13	Big Washer	2
55	Cylindrical spring pin	3	12	Hexagon socket screw	1
54	Adjustment screw	1	11	Long spacer	1
53	Handbrake cable	1	10	Long layering	1
52	Brake	1	9	Flat Washer	44
51	Flat washer come with Engine	1	8	Hex round head bolt	21
50	Engine Bolt	1	7	Cutter shield	1
49	Handbrake cable adjusting bolt	1	6	Flat Washer	12
48	Clutch pulley	1	5	Hexagon socket screw	4
47	Partition panel	1	4	Flat Washer	2
46	Engine spacer	1	3	Nylon locknut	2
45	Handle	2	2	The right Tire	1
44	Hexagon socket screw	4	1	Engine	1

Stump Grinder


16

Assembly

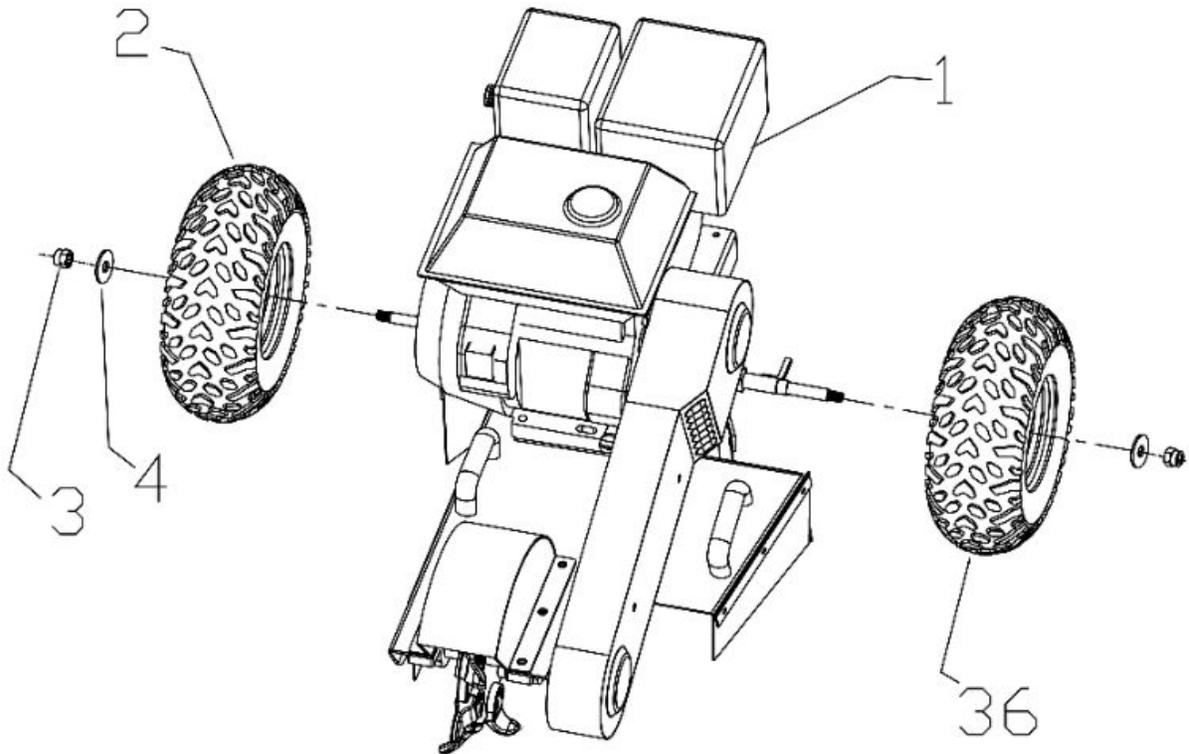


1	2	3	4	36
engine	wheel	Nylon anti loose nut	flat washer	wheel

Assembly (cont.)

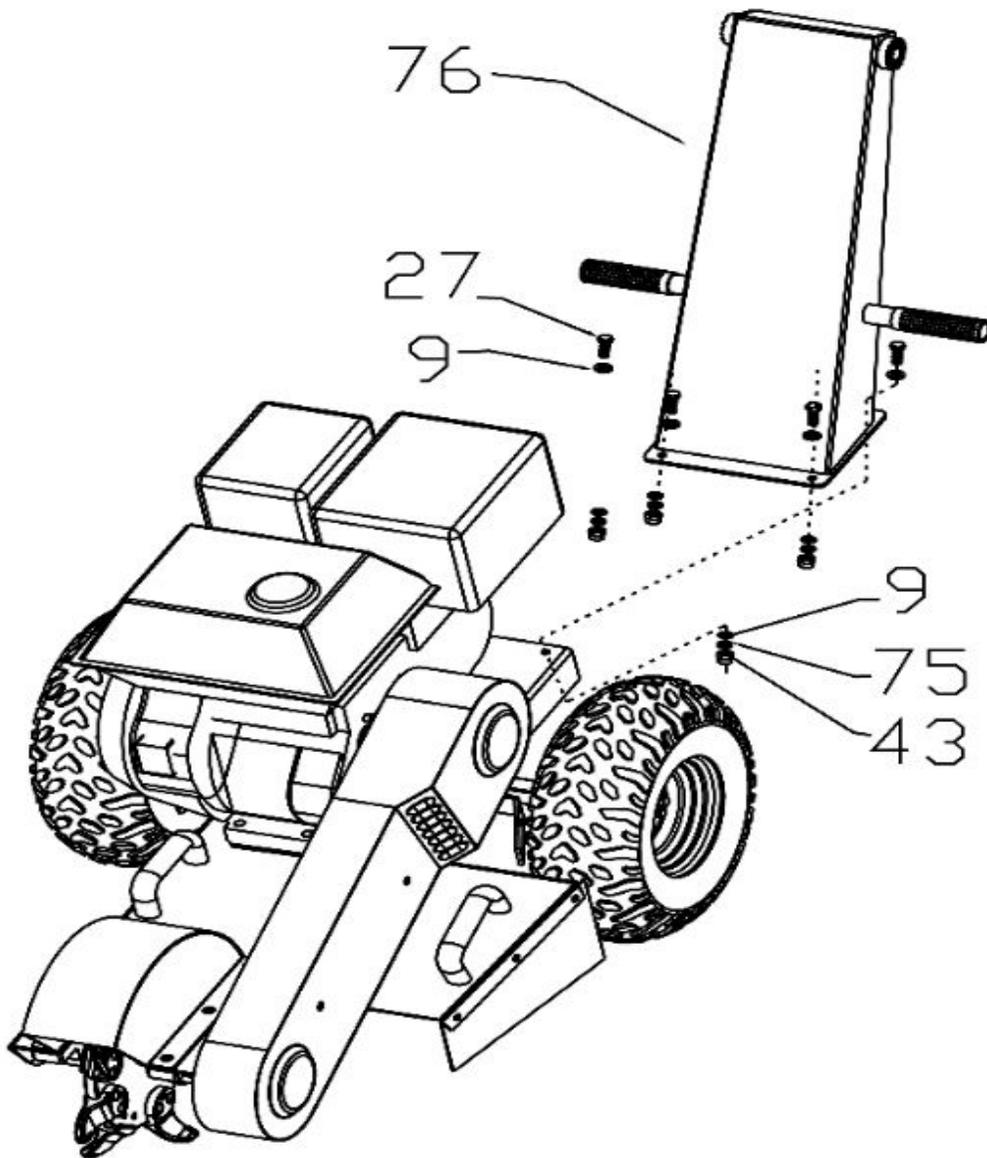


9	27	43	75	76
flat washer	outer six angle bolt	Nylon anti loose nut	spring washer	arm handle

Assembly (cont.)

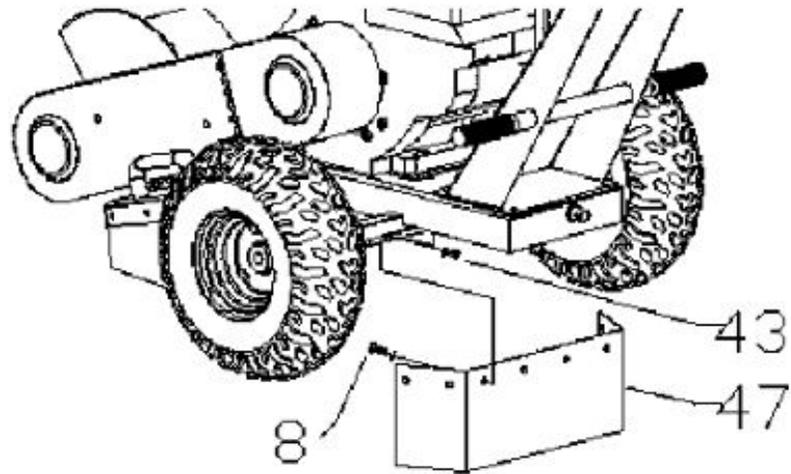


8	43	47
Bolt	lock nut	leather protector

Assembly (cont.)

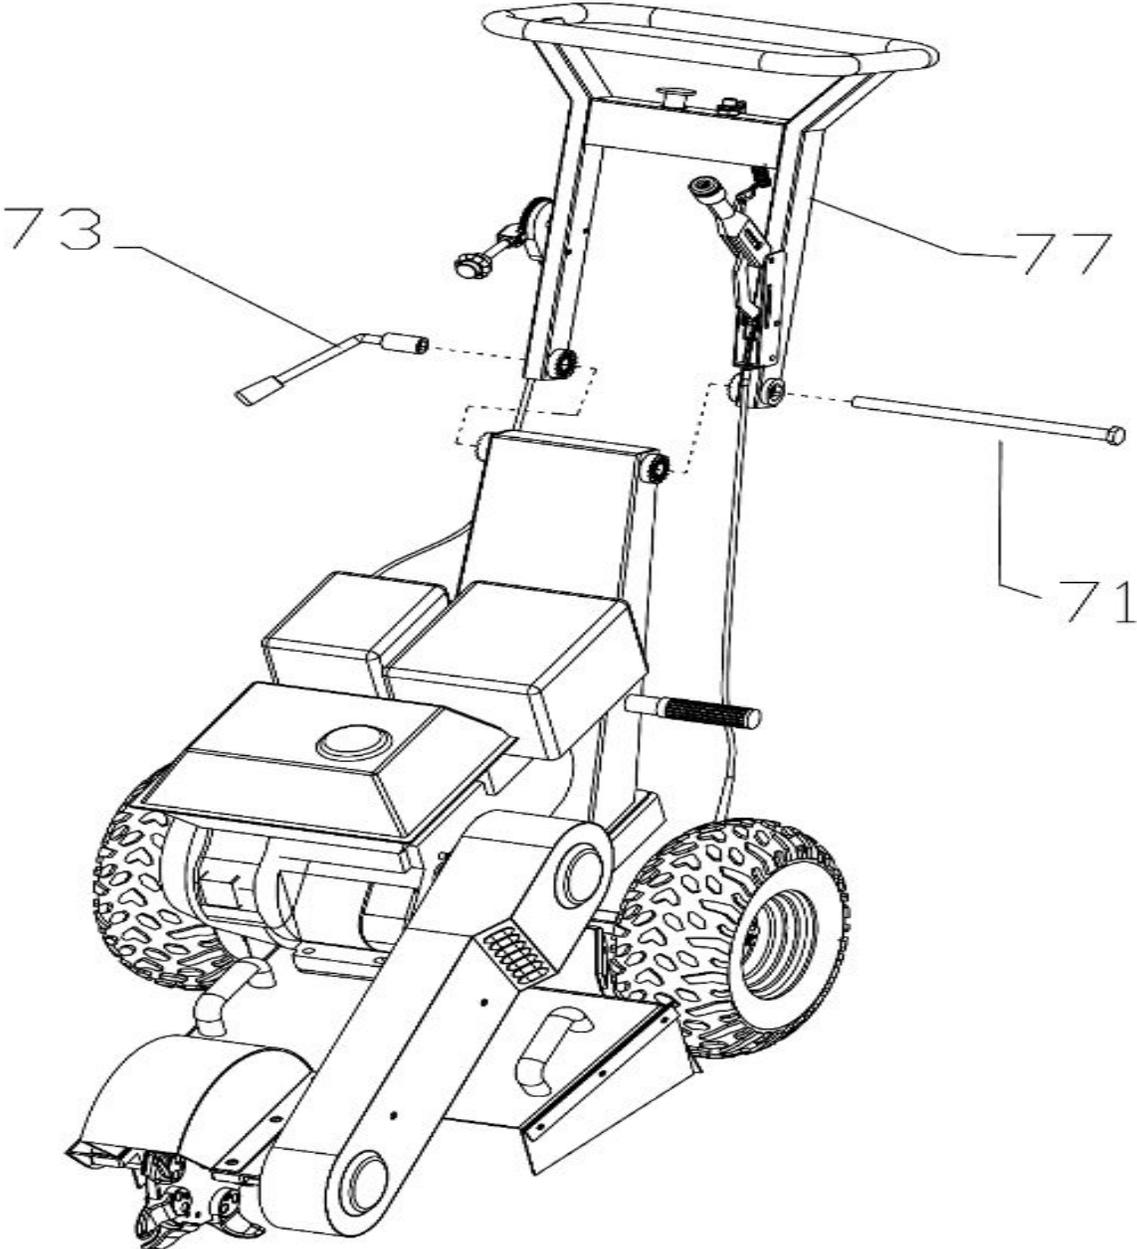


71	73	77
outer six angle bolt	Adjustable handle bar	handle

Assembly (cont.)

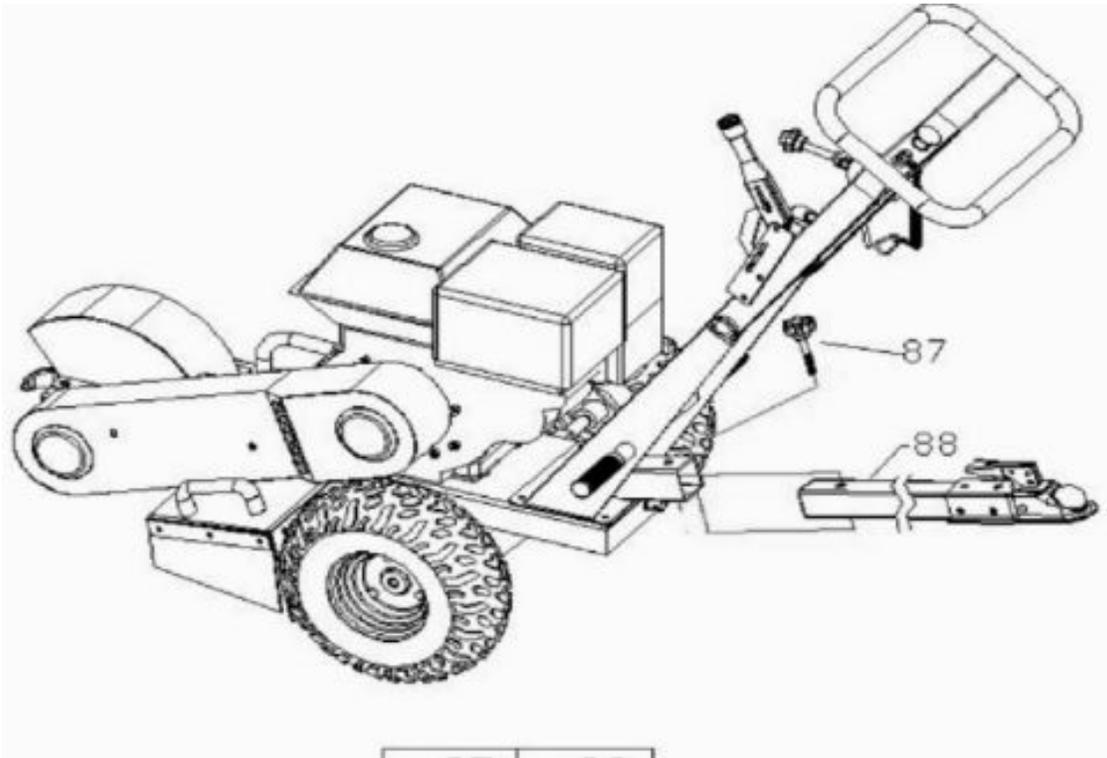

87	88
Knob	Tow bar

Assembly (battery)

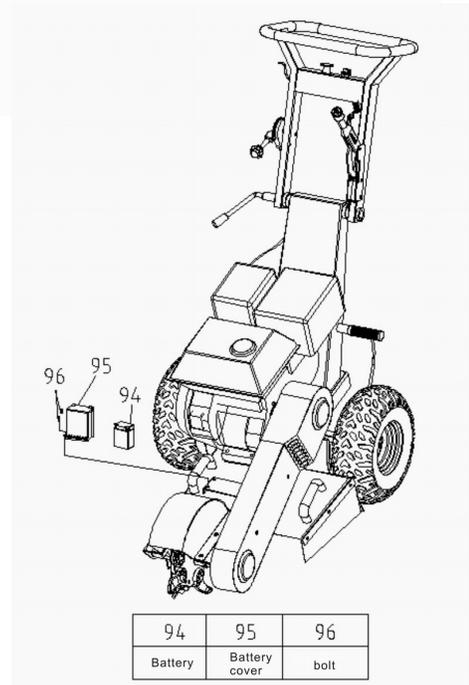

94	95	96
Battery	Battery cover	bolt

Connect the wires as shown below



Place the stand when in storage



WARRANTY POLICY

Thank you for choosing QV TOOLS Products. We're here to ensure that your experience is perfect. In some rare instances, you may need some help with a warranty claim.

Please call us at 1-800-344-3371.

Product must be registered to activate the warranty. Warranty registration is below. Warranty begins from date of purchase.

Engine Warranty

Kohler engines are covered with a 3-year commercial and 3-year residential warranty for Command Pro series. Parts and Labor are covered as well. Power King engines by Lifan are covered with a 1-year residential warranty. QV Power 3pt 40hp gear box warranty 1-year. Visit your engine manufacturer for warranty details or visit www.QVTools.com.

Equipment warranty

Manufactures defects of chassis and component parts are covered for 1 year. Only parts are covered. Shipping cost is not covered.

QV Tools will replace any part that is proven to be defective in material or workmanship. This warranty is not valid for products or parts affected or damaged by accident, collision, normal wear, fuel contamination, abuse, neglect, misuse, alteration and/or unsuitable use or unauthorized parts. Transportation charges to and from service centers, if assigned, is not covered. Shipping cost of product for repair is not covered. Labor to repair equipment is not covered. Consumable parts such as brake pads, tires, racks, splines, grinding teeth, blades, bar blades, etc. are not covered under warranty. Power King has all replacement parts at value pricing.

Damaged Products

You must take the time to inspect the goods before you sign the delivery receipt from the carrier. If you sign the delivery receipt without inspecting the shipment, you will be responsible for filing a freight claim and arranging for a repair or return of the damaged goods.

Concealed damage claims must be reported immediately.

Suspected Damage

On occasion, the outer carton may look damaged, but the product inside the box is perfectly fine. If you suspect concealed damage, notate **"Possible Freight Damage" on the delivery receipt while the driver is present. This way, if you discover later that the product is damaged, the remedy of a freight claim is less of a hassle.**

Obvious Damage

Do not sign for damaged products. If your product arrives damaged, **please (a) REFUSE DELIVERY and (b) Call where you purchased the item Immediately so the dealer can process the appropriate claims and coordinate an exchange for you.**

Defective Products

We encourage you to test your product within 15 days of receipt so we can quickly remedy any mechanical problems. If you think your product is defective, **call QVTools at 1-800-344-3371**. In most cases, it's a simple issue that can be resolved over the phone. We have expert technicians standing by to help resolve your issue. Please have your model number and serial number available and your proof of purchase receipt for faster service.

Original Owner Warranty

Warranty is non-transferable and covers the original owner only who purchased from a QVTOOLS authorized dealer.