




Wardrobe

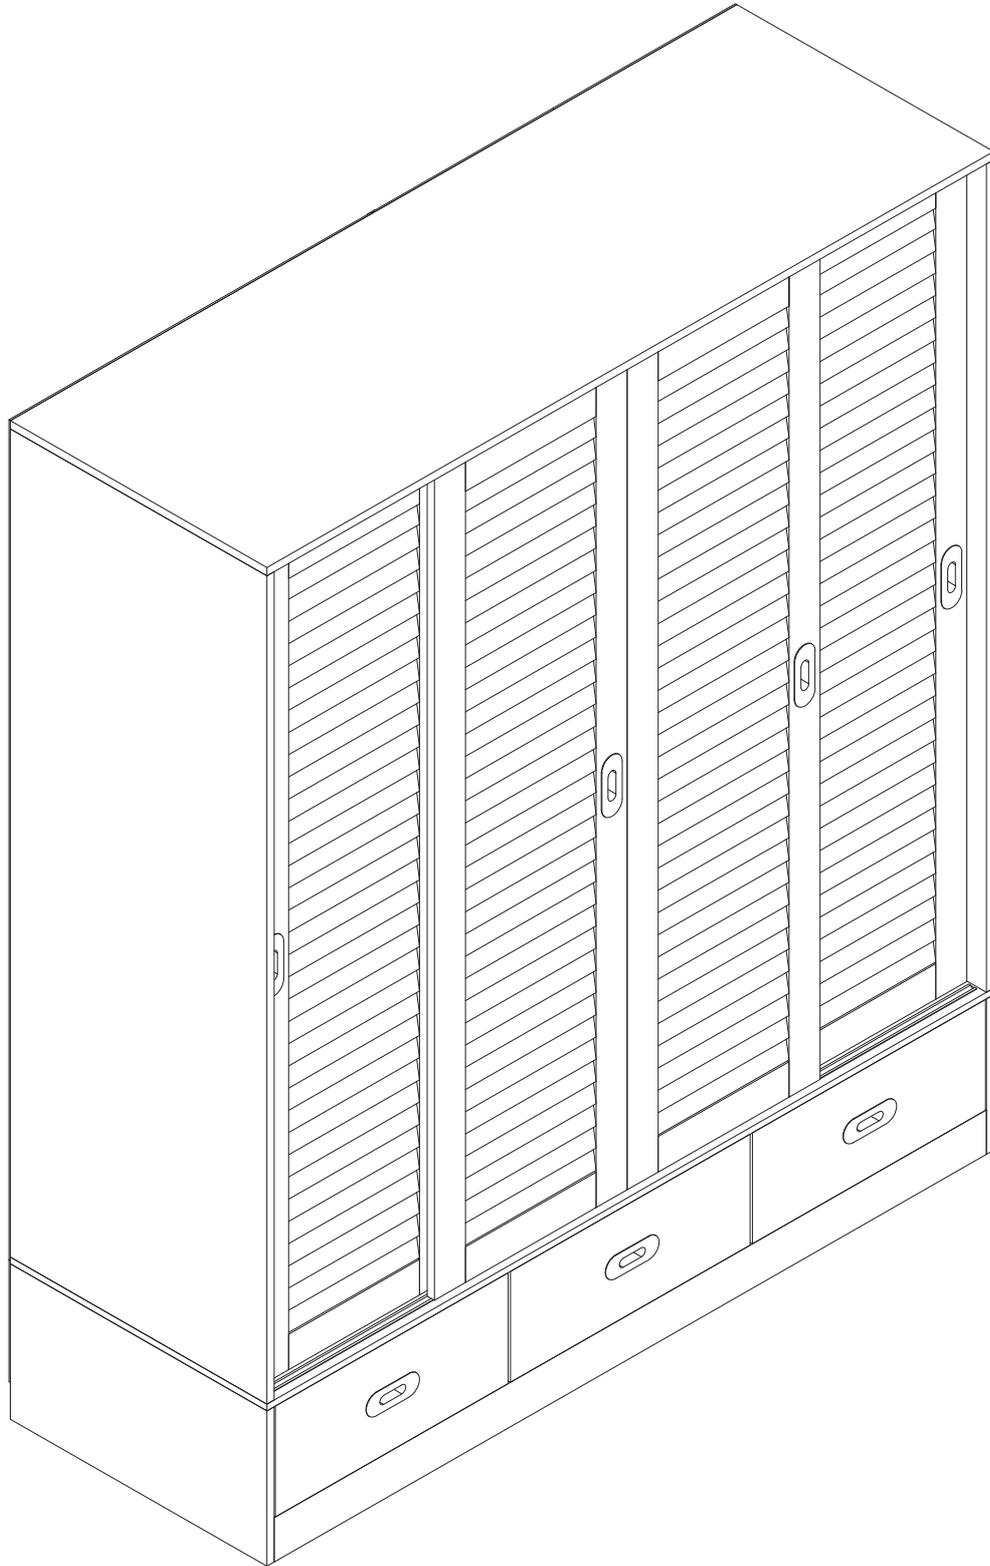

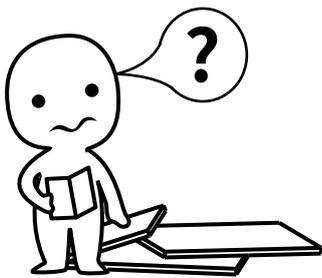


IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

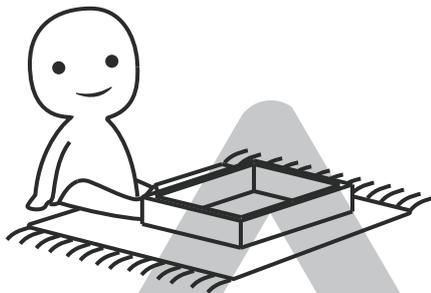


AVOID SCRATCHES!

In order to avoid scratching this furniture should be assembled on a soft layer- could be a rug.

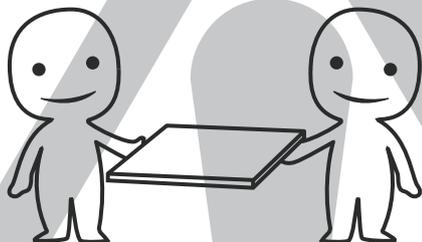

IMPROVE EFFICIENCY !

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

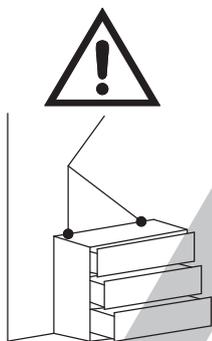

ANTI-TOPPLE WARNING !


Overturnd furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !



It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

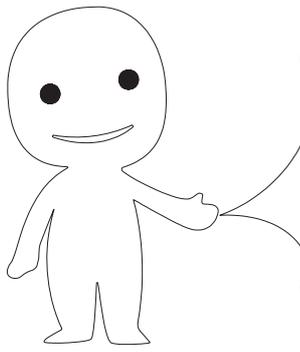


Please prepare the following tools

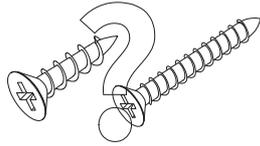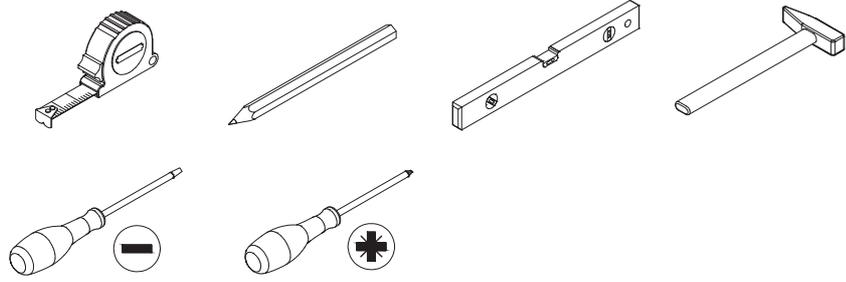

When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

Ax46

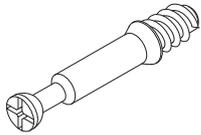


Ø6x35mm

Bx46




Ø15x9.5mm

Cx32

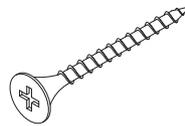

Ø4x35mm

 Dx52




Ø6x30mm

Ex36



Ø3.5x12mm

 Fx8



Gx8



Hx14



Ø4x12mm

Ix7



Jx6



Kx42




Ø2.5x14mm

Lx14



 Mx2



Nx4



Ø4x12mm

Ox2




Px64




Ø2.5x12mm


CLx3

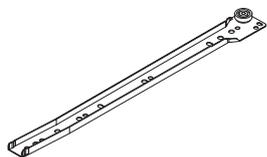


CRx3

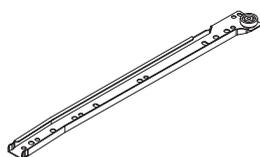


DLx3

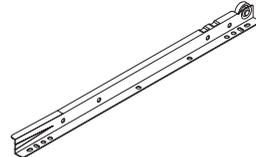


DRx3



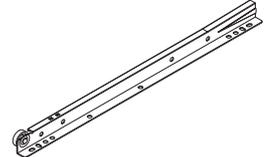


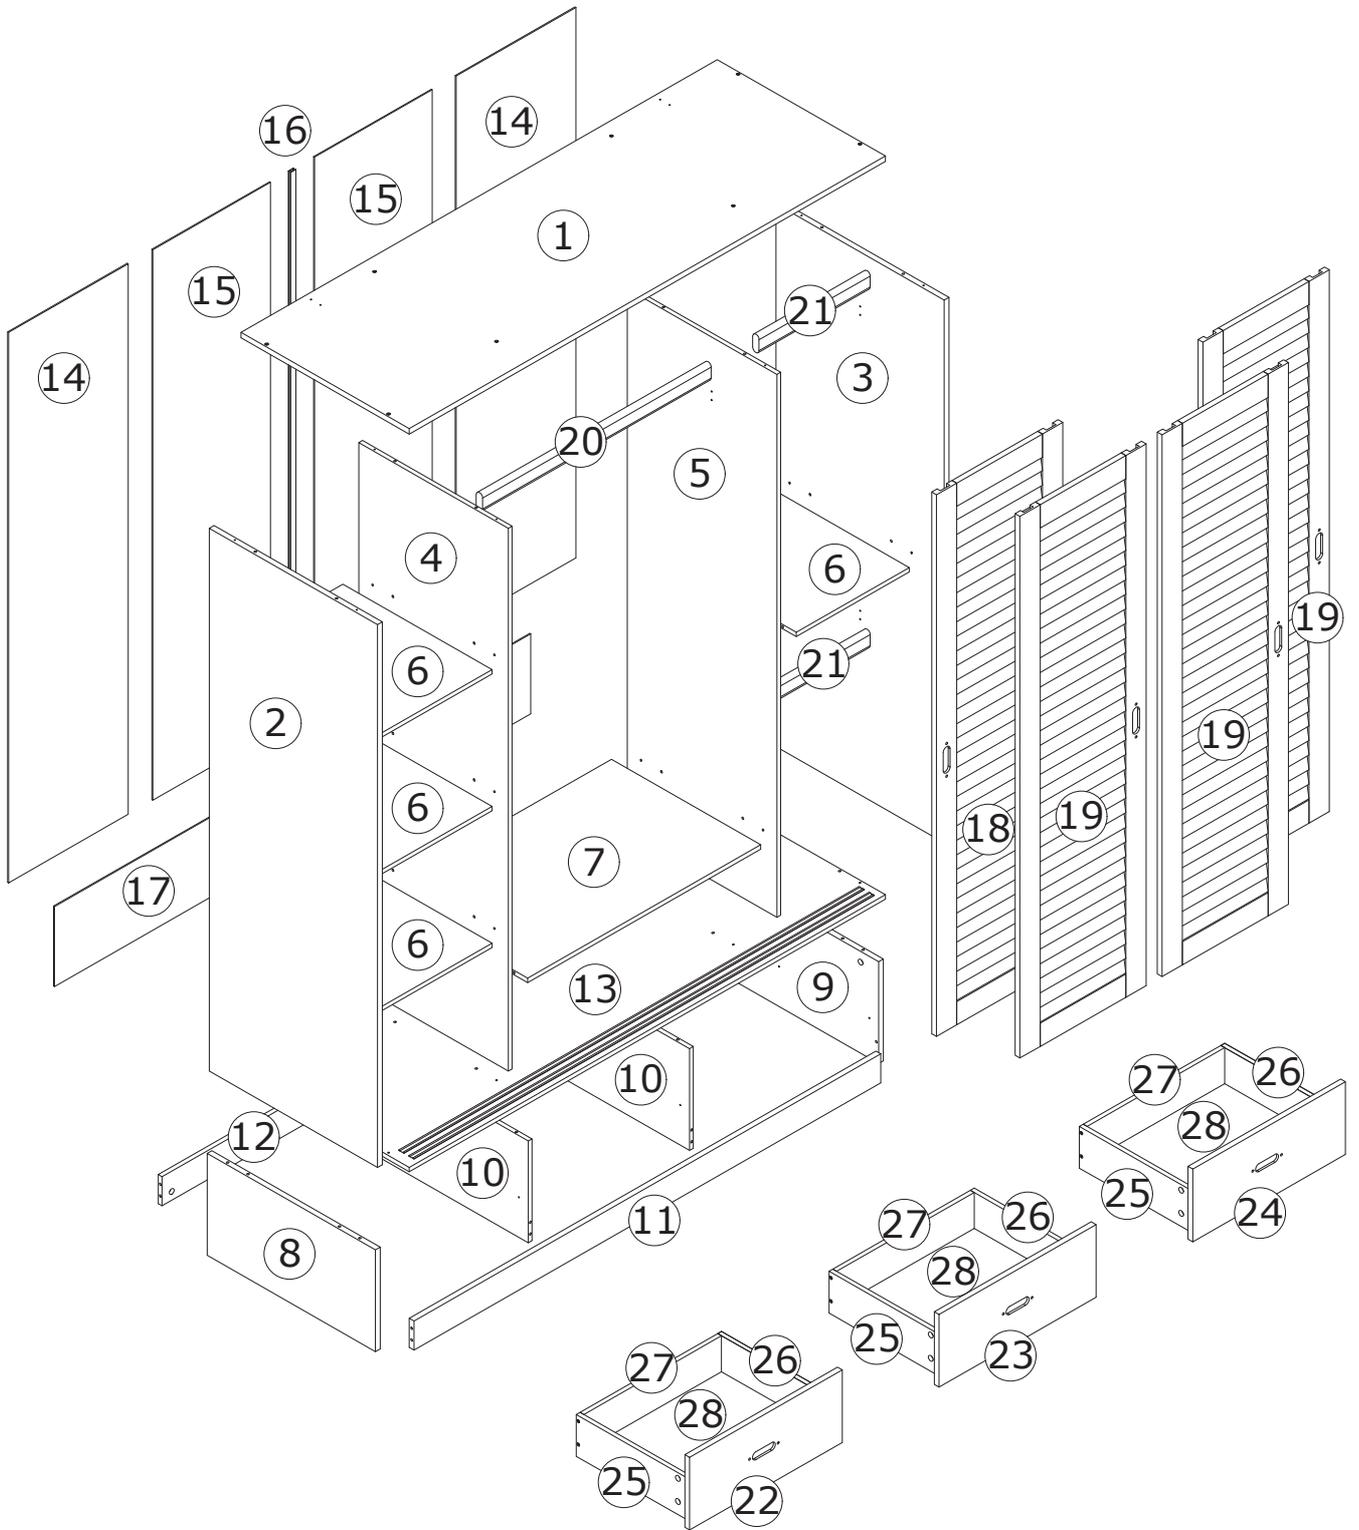


1

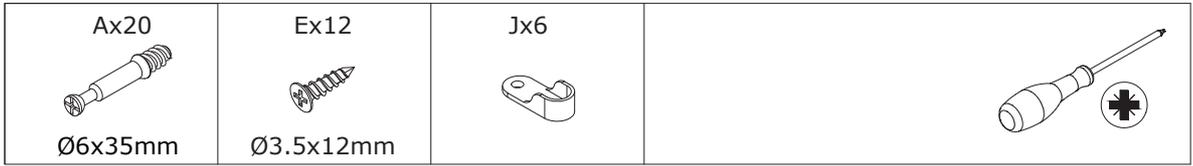

Insert quickfit screw(A) into corresponding holes in plate 2 and 3 with a screwdriver as shown.

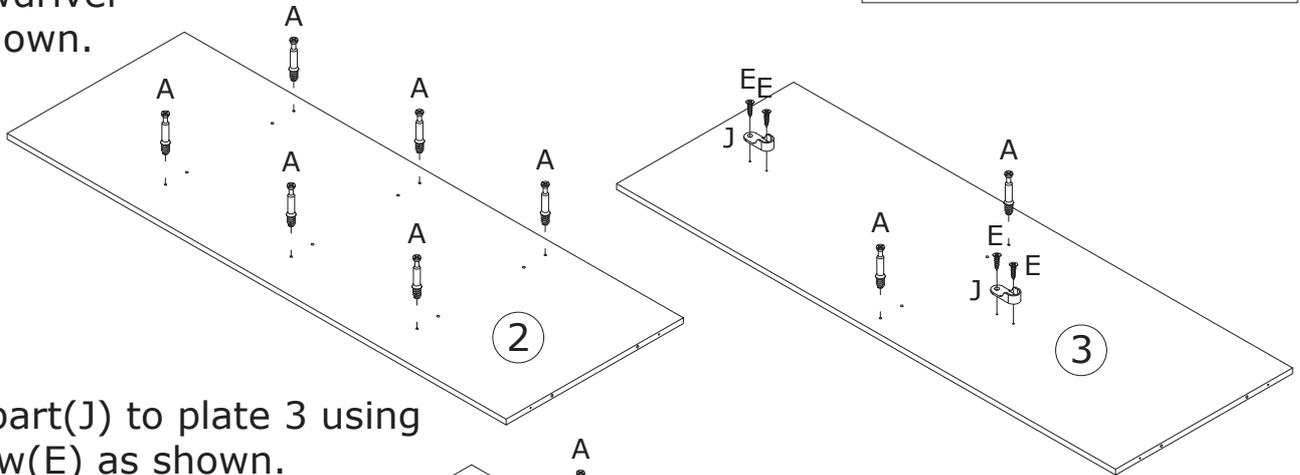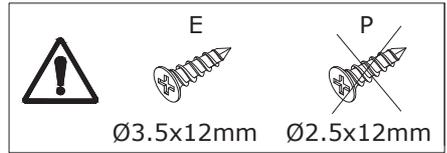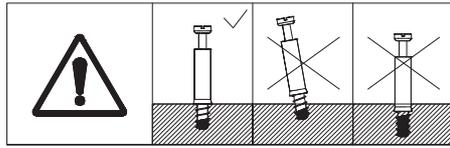

Fix part(J) to plate 3 using screw(E) as shown.


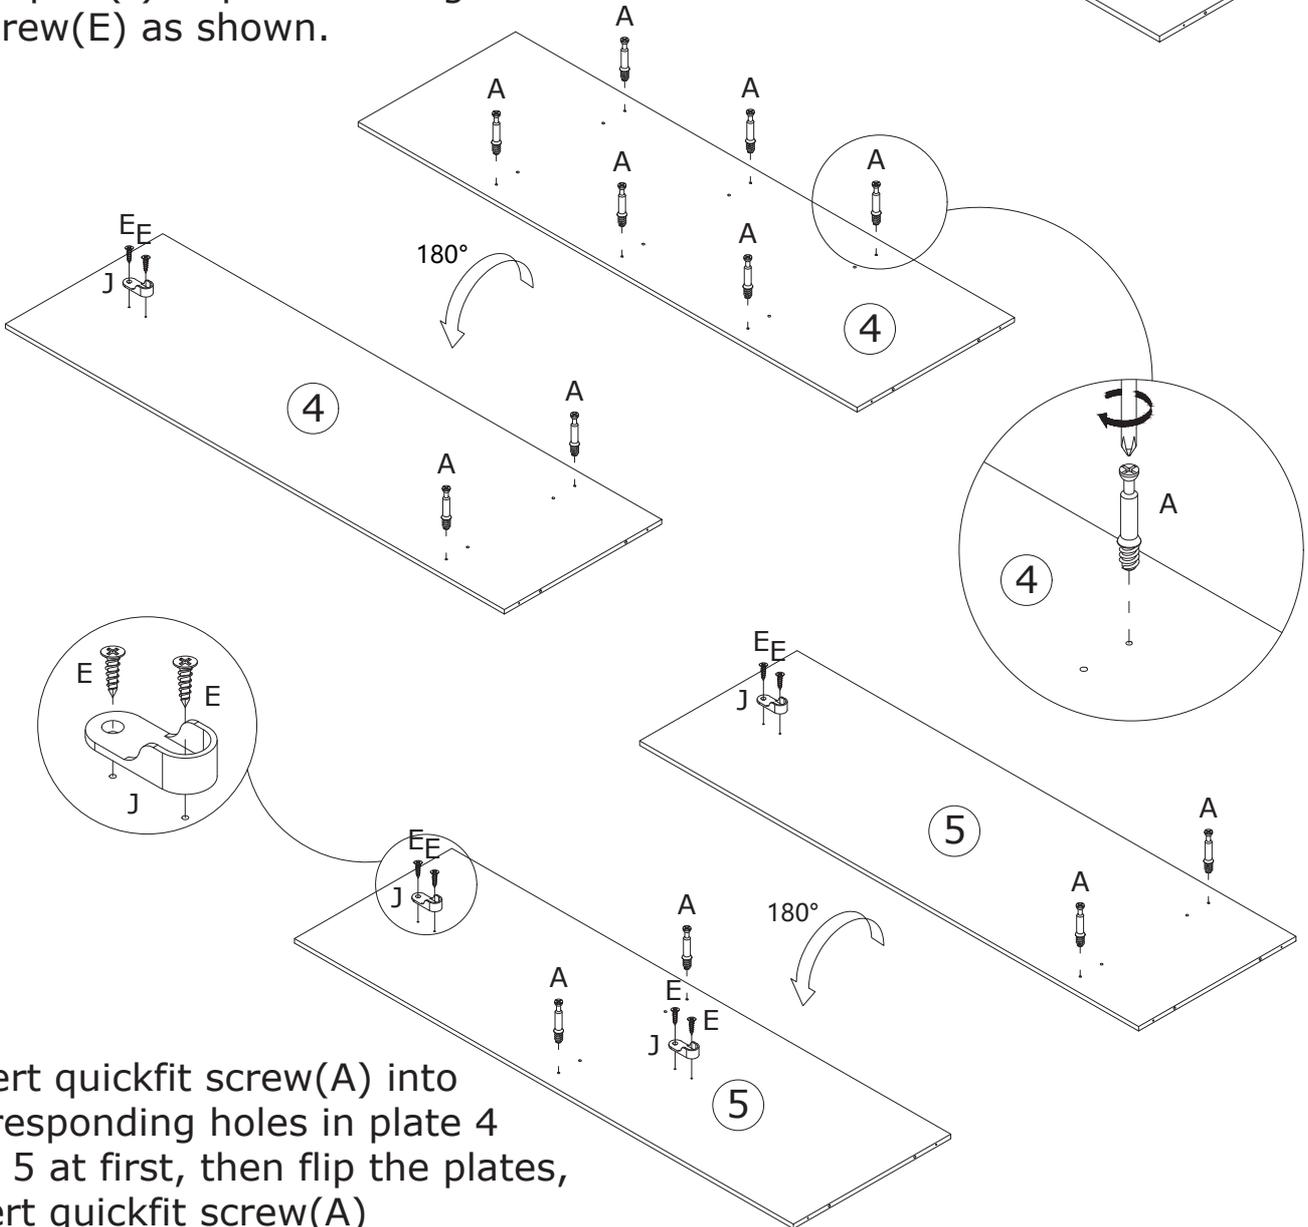


Insert quickfit screw(A) into corresponding holes in plate 4 and 5 at first, then flip the plates, insert quickfit screw(A) and fix part(J) as well.

2





Insert wooden dowel(D) into plate 7 and 6 as shown.

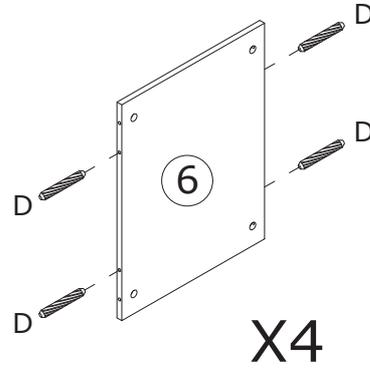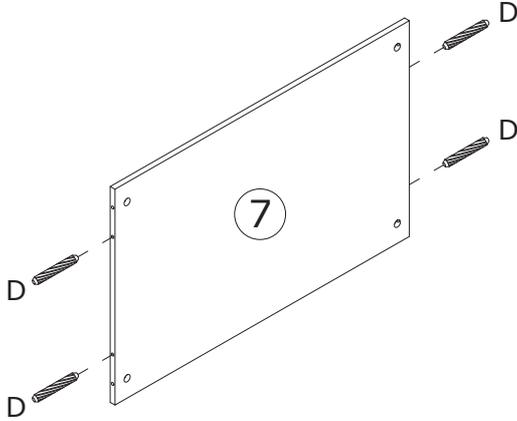



3





Connect plate 2 and 4 with plate 6, put cam lock(B) into holes in plate 6 and turn clockwise to tighten as shown.

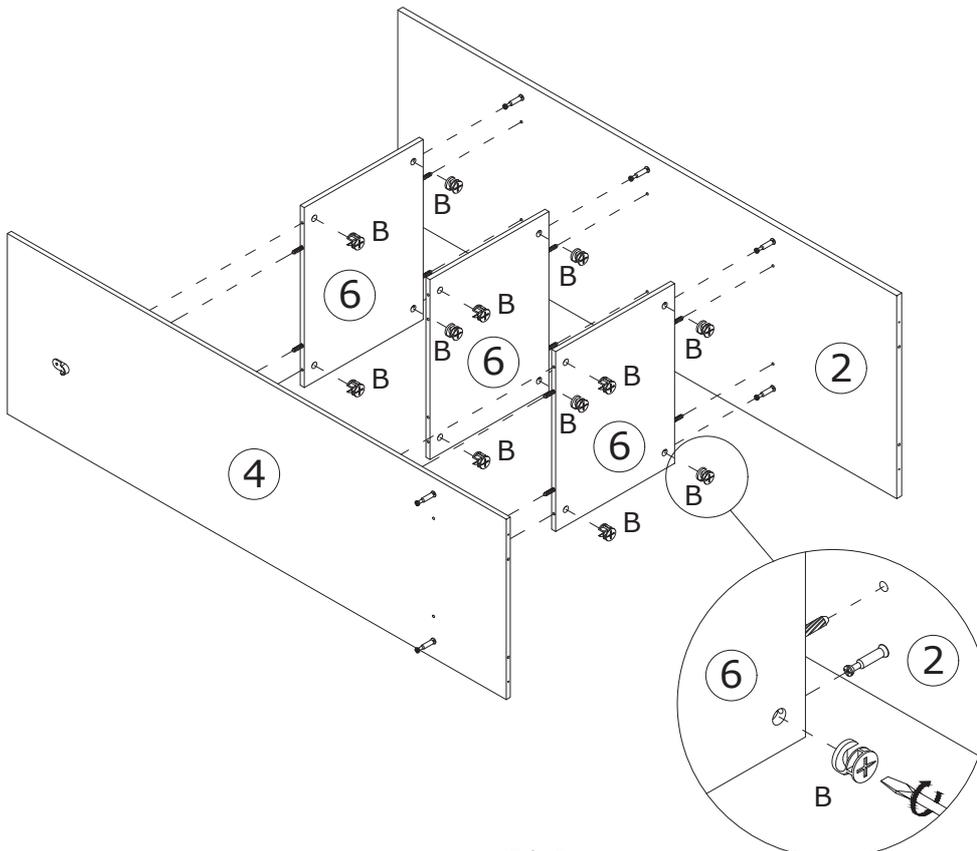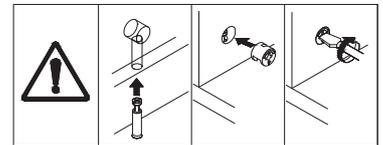



4

 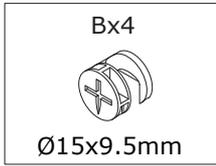



Connect plate 4 and 5 with plate 7 using wooden dowel(D), put cam lock(B) into holes in plate 7 and turn clockwise to tighten as shown.

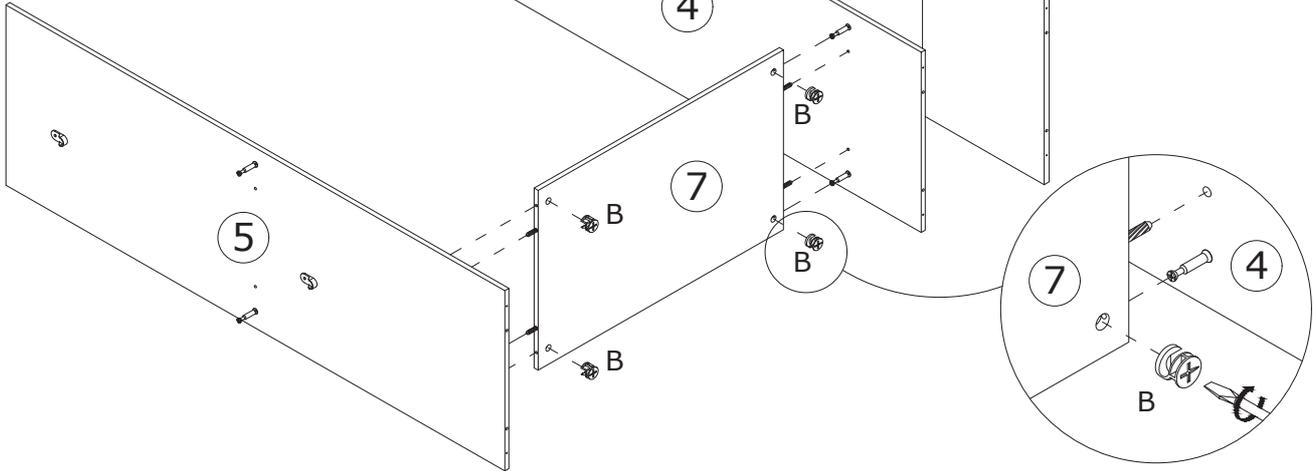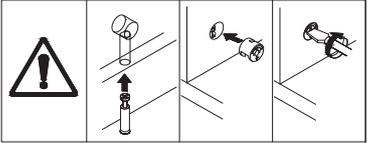


5

 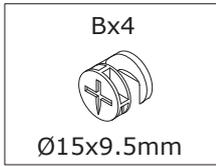



Connect plate 3 and 5 with plate 6, put cam lock(B) into holes in plate 6 and turn clockwise to tighten as shown.

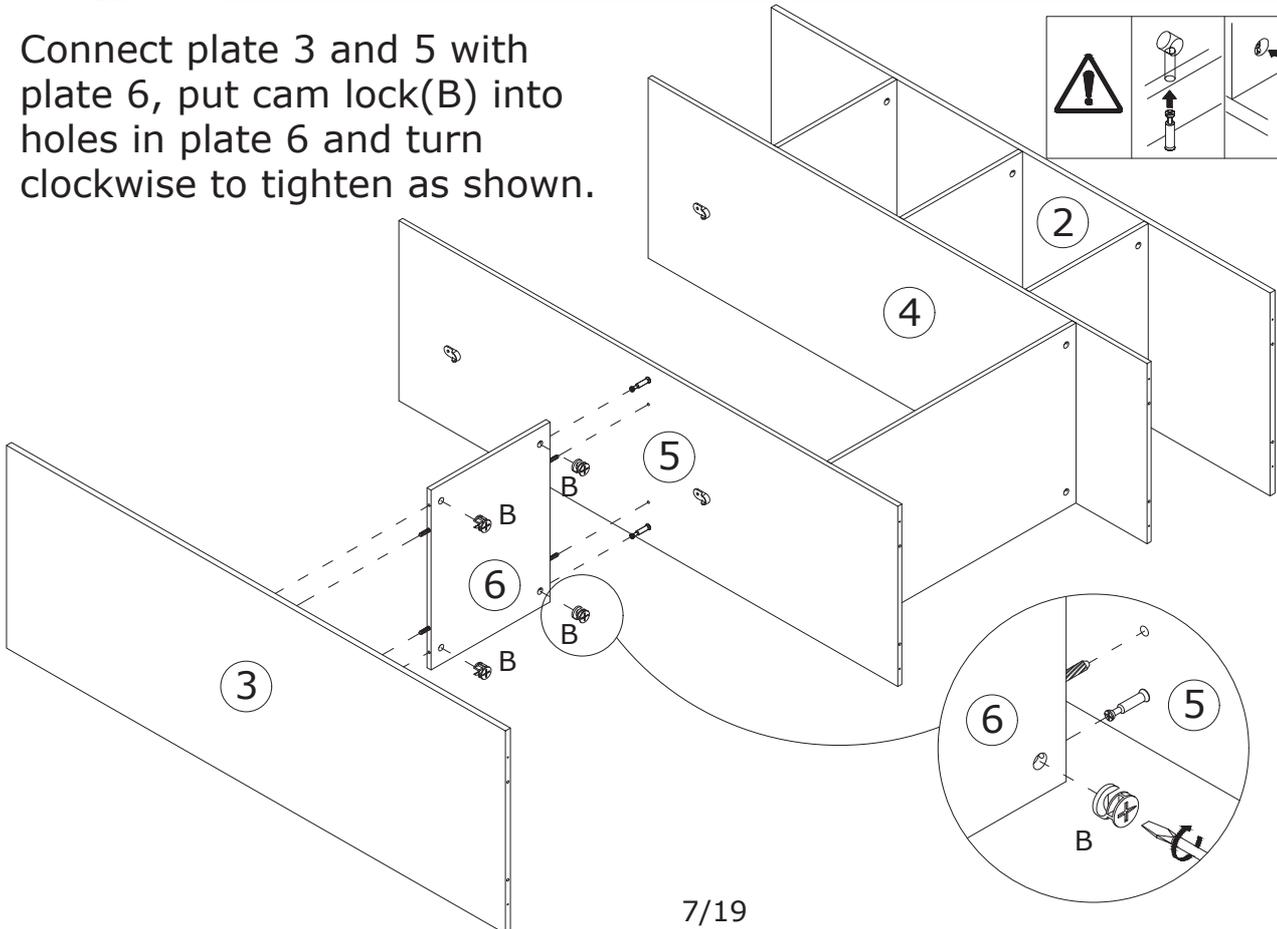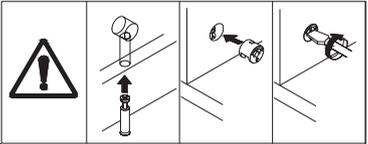

6

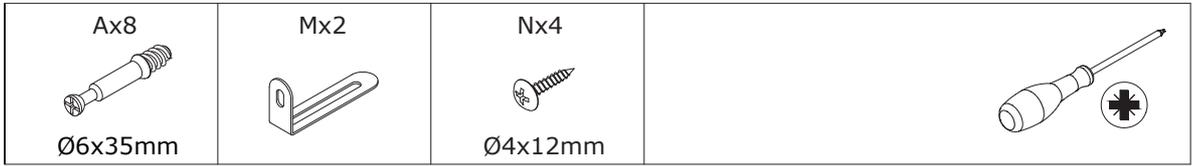


Fix part(M) to plate 1 using screw(N) as shown.

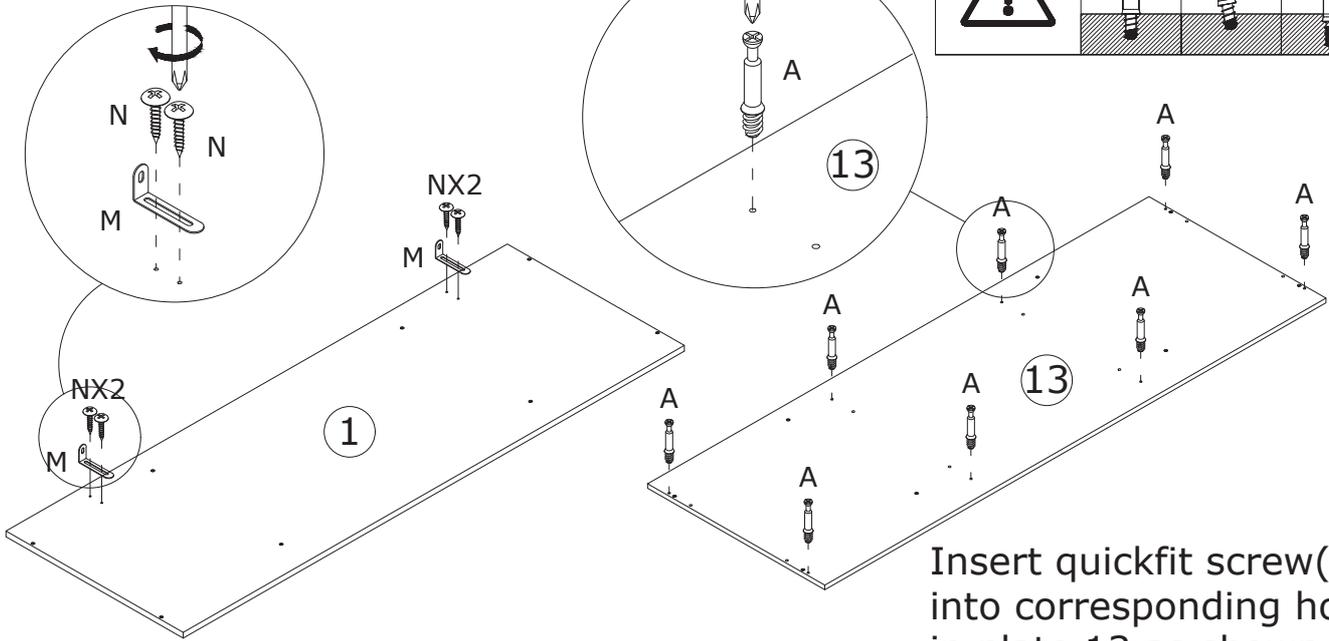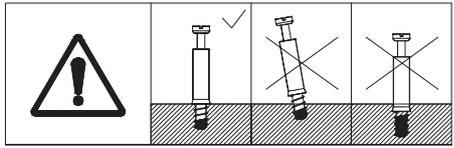


Insert quickfit screw(A) into corresponding holes in plate 13 as shown.

7

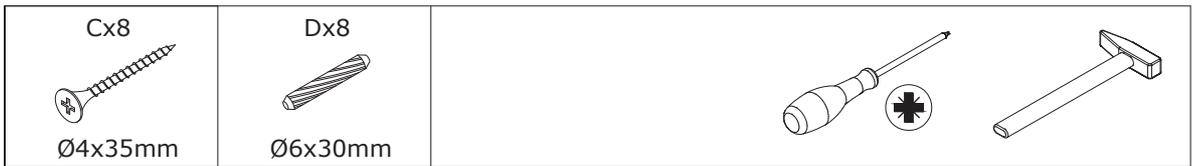


Attach plate 1 to plate 3,5,4 and 2 with wooden dowel(D), then fix using screw(C) as shown.

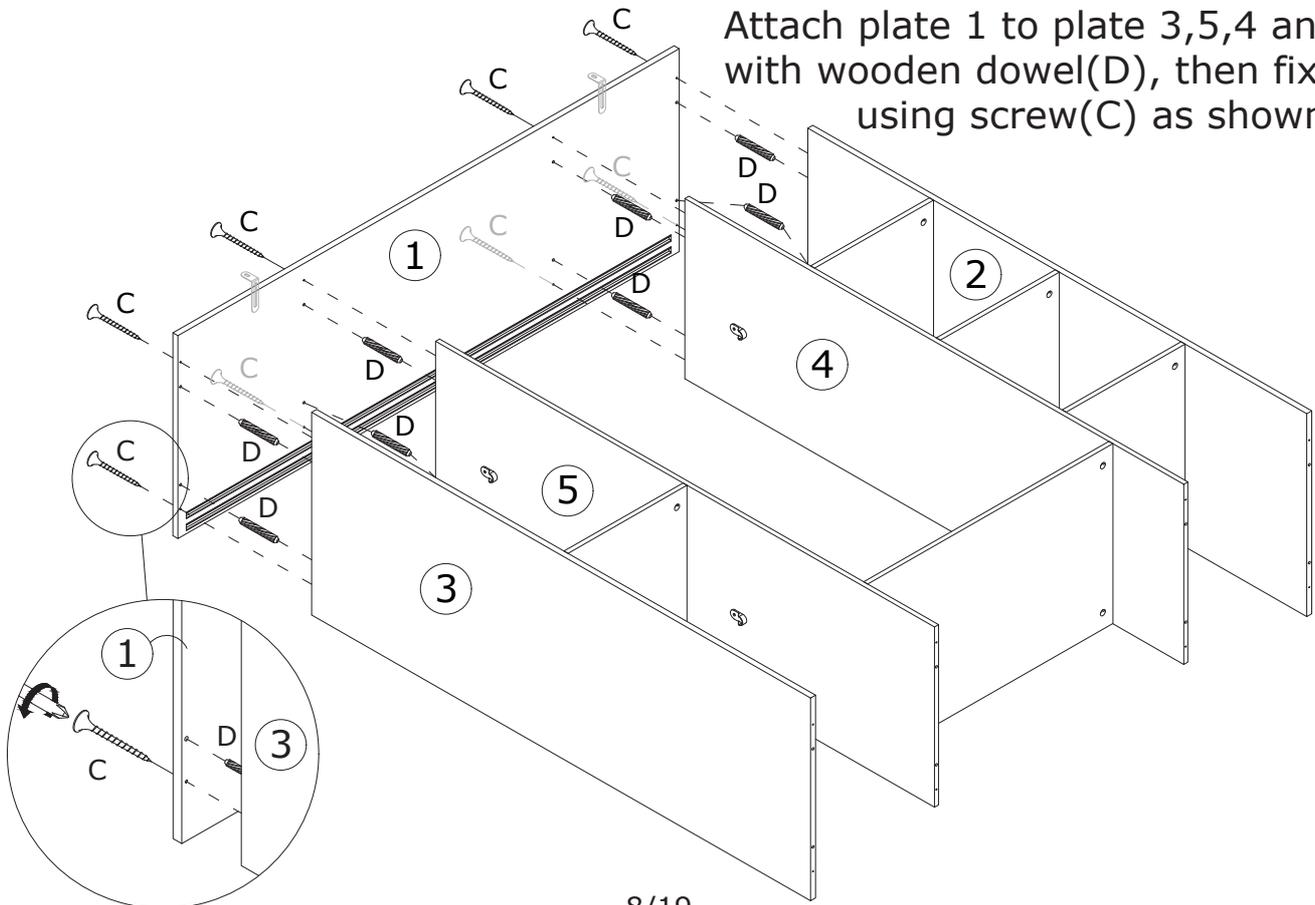









8



Attach plate 13 to plate 3,5,4 and 2 with wooden dowel(D), then fix using screw(C) as shown.

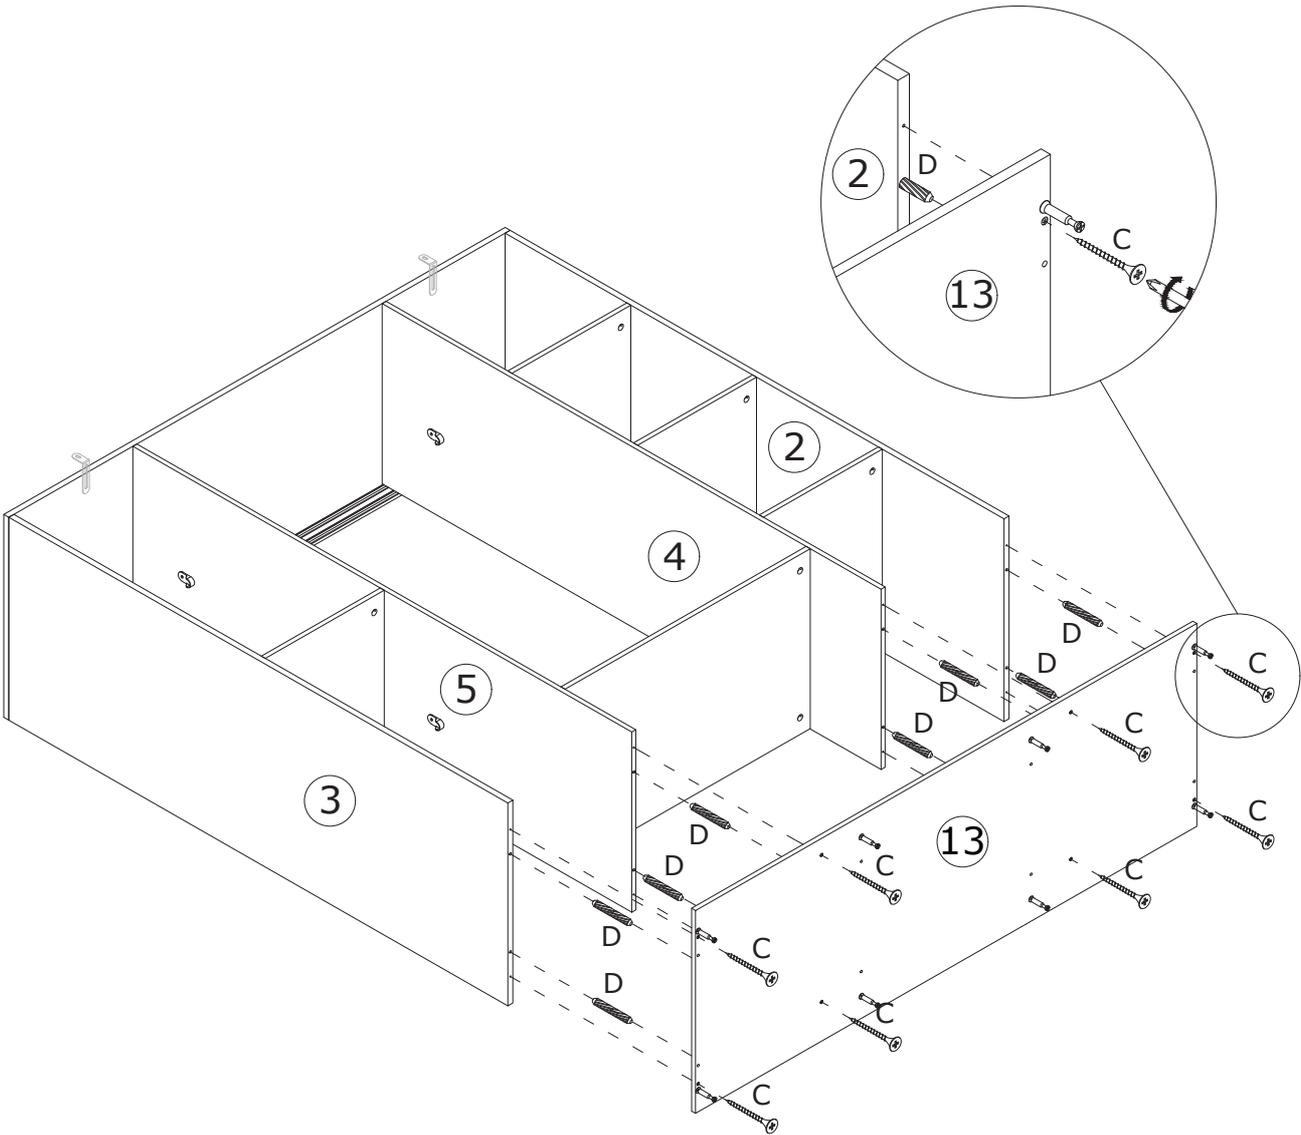




9

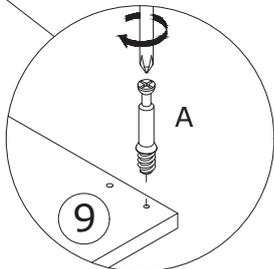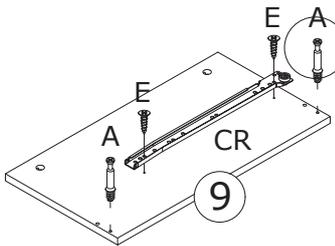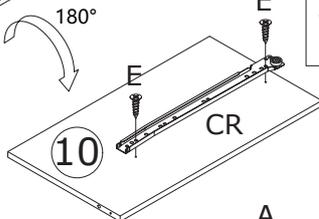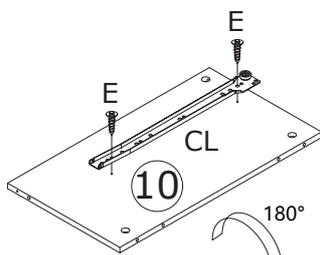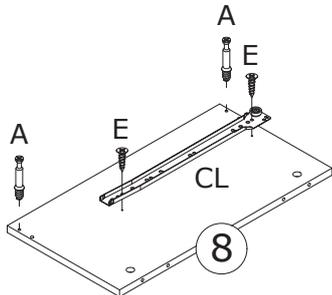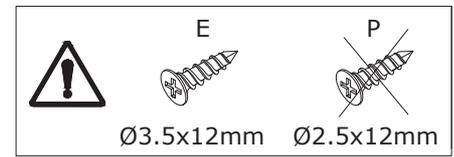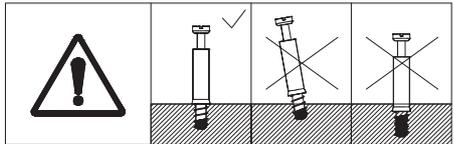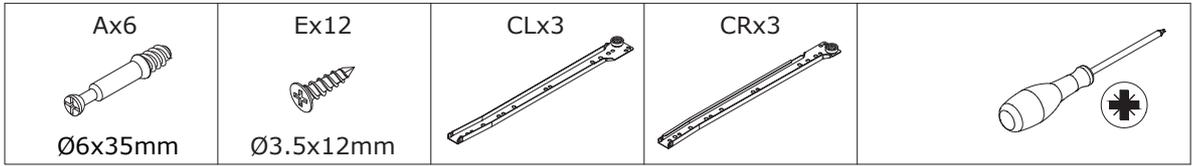

Insert quickfit screw(A) into corresponding holes in plate 8,9 and 11 as shown.

Fix slide rail(CL) and (CR) to plate 8 and 9 using screw(E) as shown.



Fix slide rail(CL) to plate 10 using screw(E) at first, then flip the plate, fix slide rail(CR) as shown.

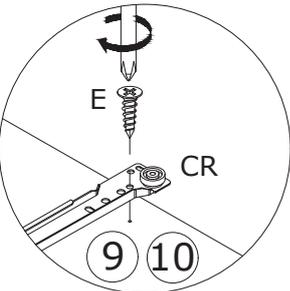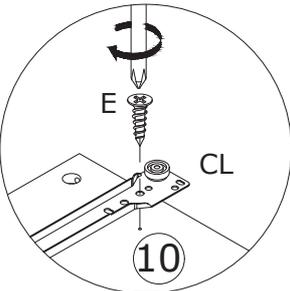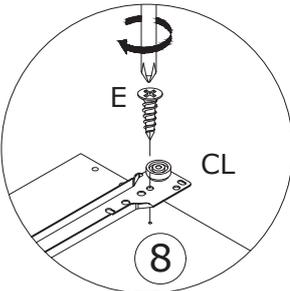

10




Attach plate 10 to plate 11 with wooden dowel(D), put cam lock(B) into holes in plate 10 and turn clockwise to tighten as shown.

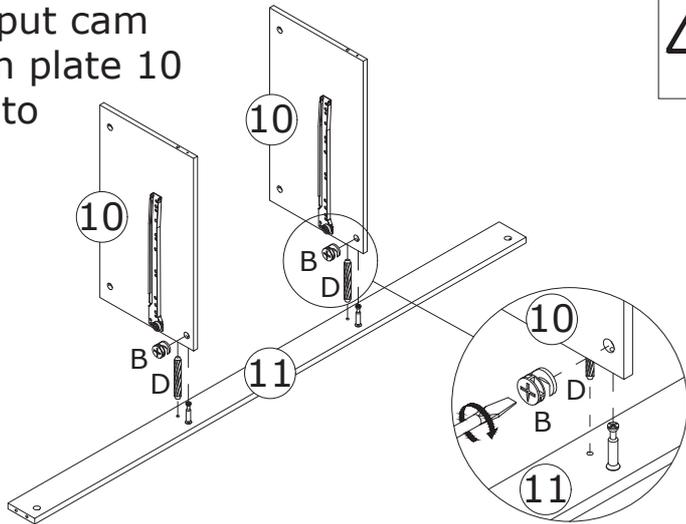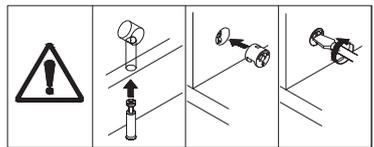

11





Attach plate 12 to plate 10 with wooden dowel(D), then fix using screw(C) as shown.

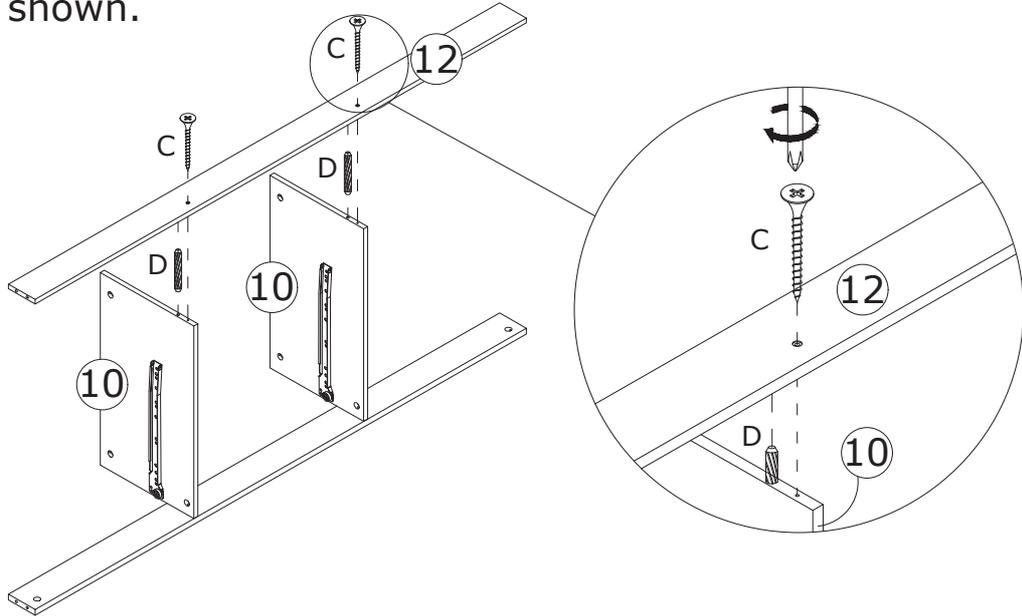

12




Attach plate 8 and 9 to plate 11 and 12 with wooden dowel(D), put cam lock(B) into holes in plate 11,12 and turn clockwise to tighten as shown.

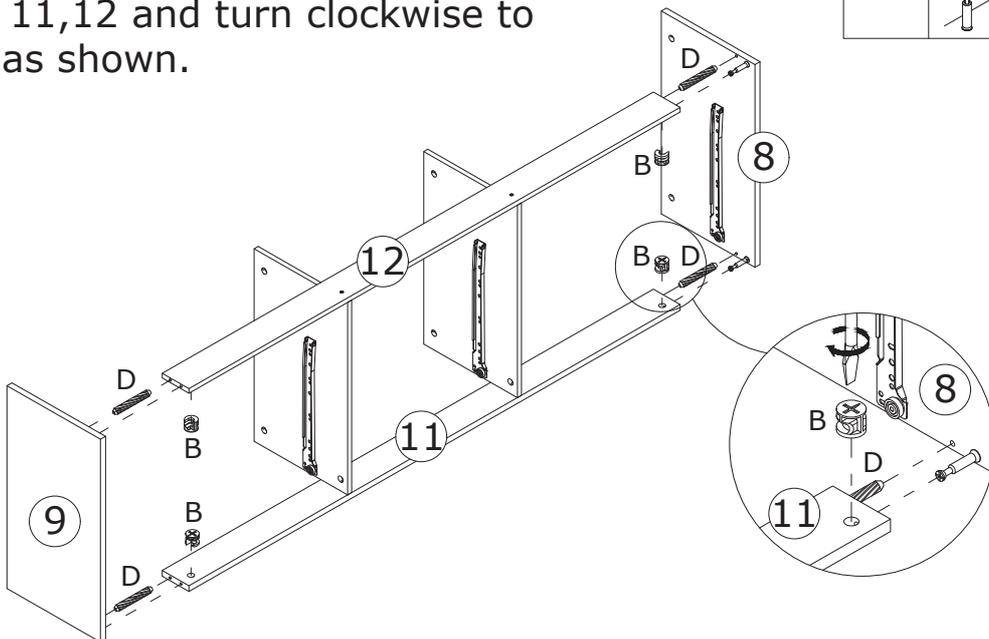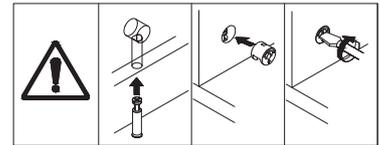

13



Attach the component to plate 13 with wooden dowel(D), put cam lock(B) into holes in plate 9,10,8 and turn clockwise to tighten as shown.

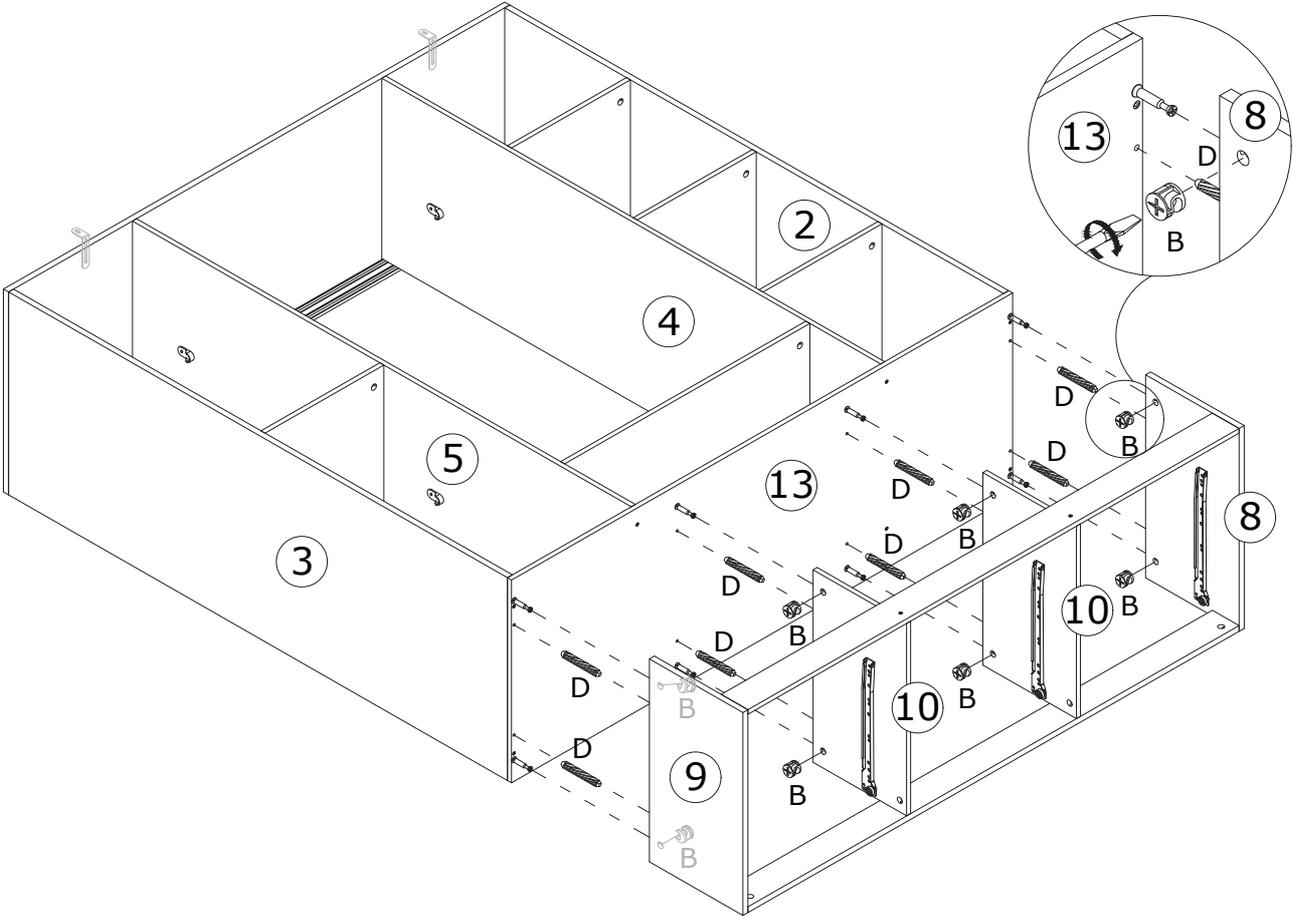


14

Kx42




Ø2.5x14mm

 Lx14




Fix back plate 14,15 and 17 using screw(K) at first.
Fix each plate 14,15 and 17 together using part(L)
with screw(K) as shown.

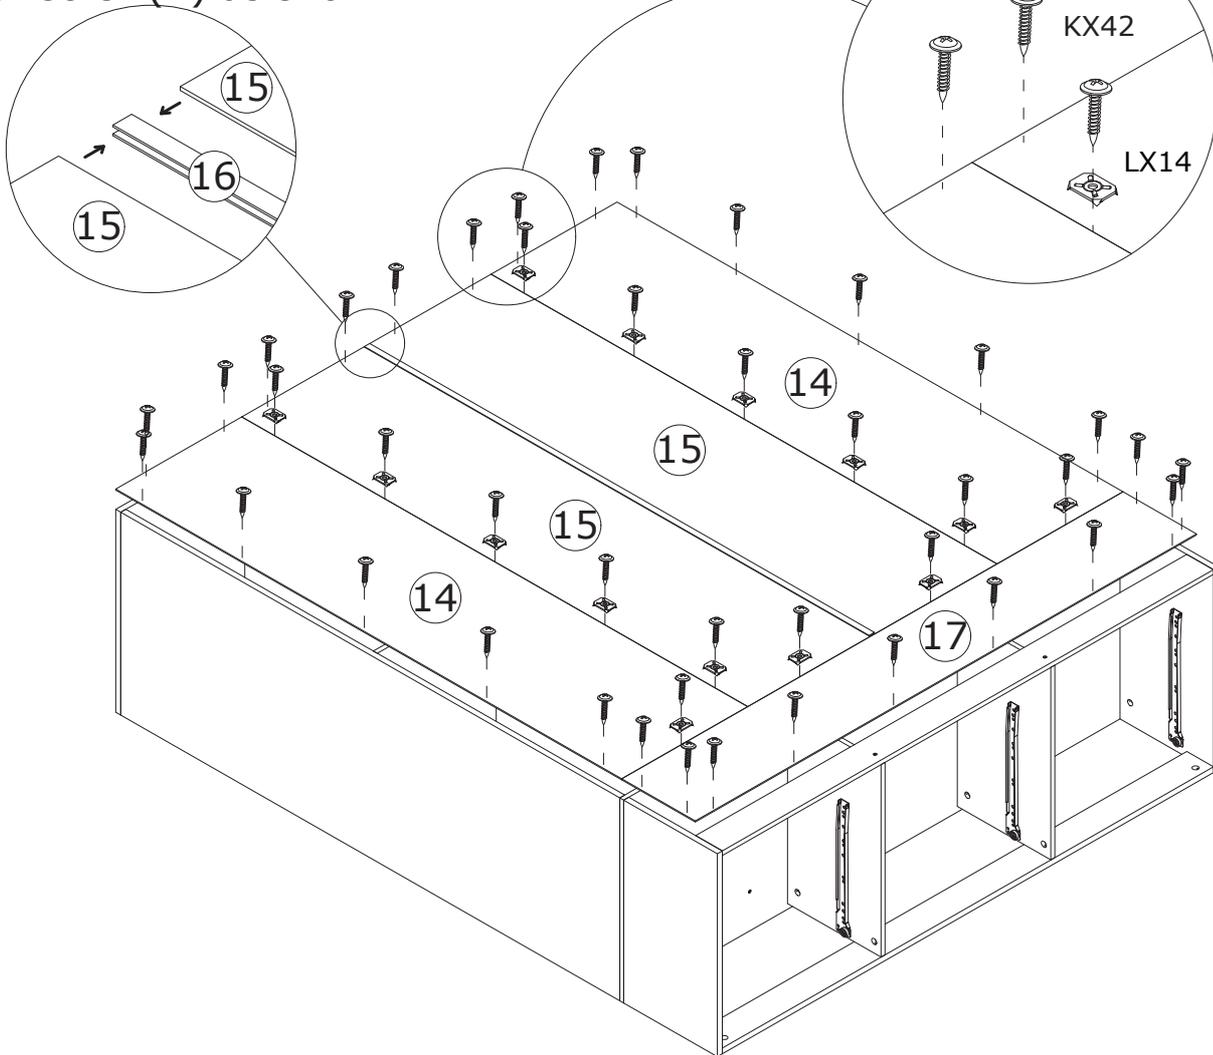


15

 
Cx12



Ø4x35mm

 


Fix plate 25 and 26 with plate 27
using screw(C) as shown.

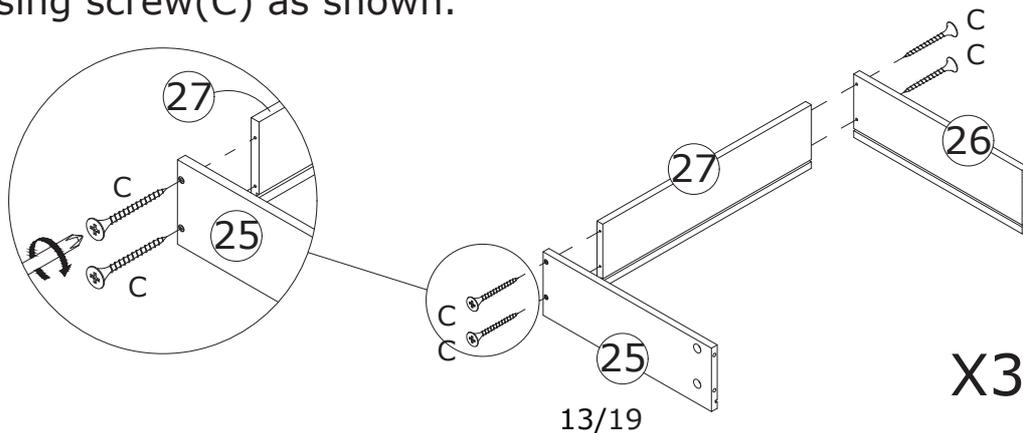


13/19

16





Slide plate 28 along grooves as shown.

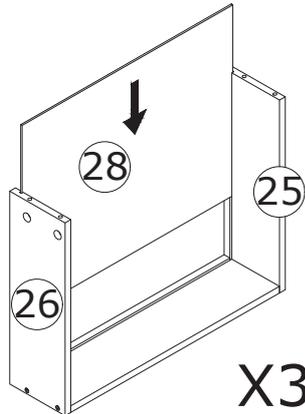



17

 

Insert quickfit screw(A) into plate 22,23 and 24 as shown.
Fix handle(I) using screw(H) as shown.

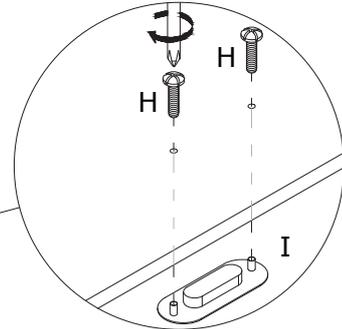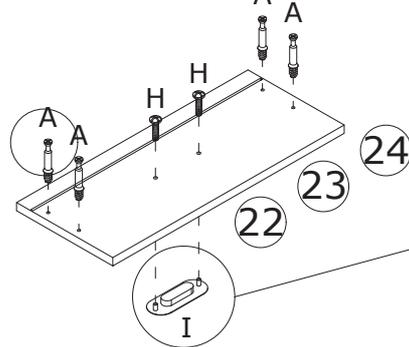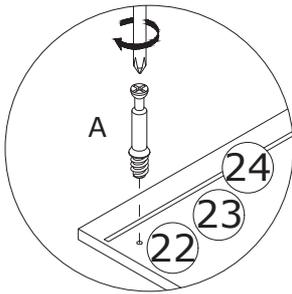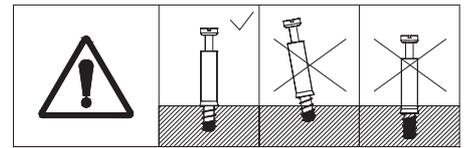

18

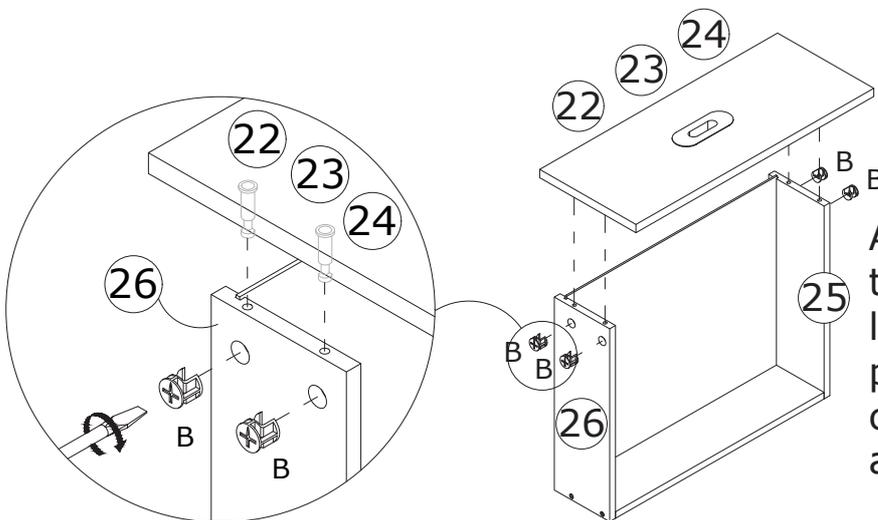 

Attach plate 22/23/24 to the drawer, put cam lock(B) into holes in plate 25,26 and turn clockwise to tighten as shown.


19

Ex12







Ø3.5x12mm

DLx3

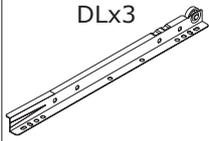

DRx3

 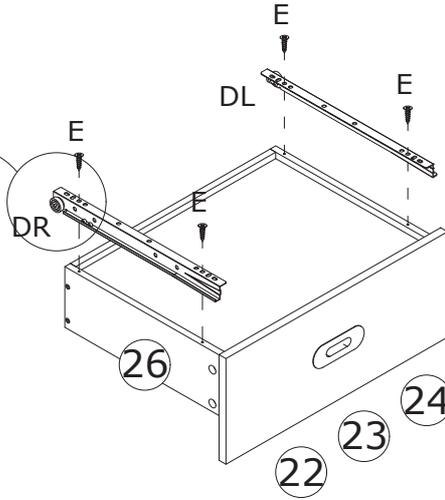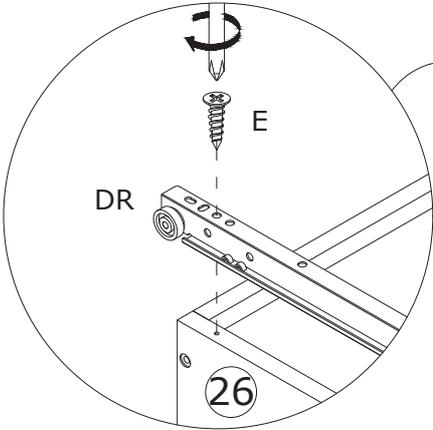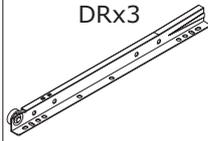

E



Ø3.5x12mm

P




Ø2.5x12mm


Fix runner(DL) and (DR) to plate 25 and 26 respectively using screw(E) as shown.

20



Align rails, slide the drawers.
Place clothing rod 20 and 21 in.

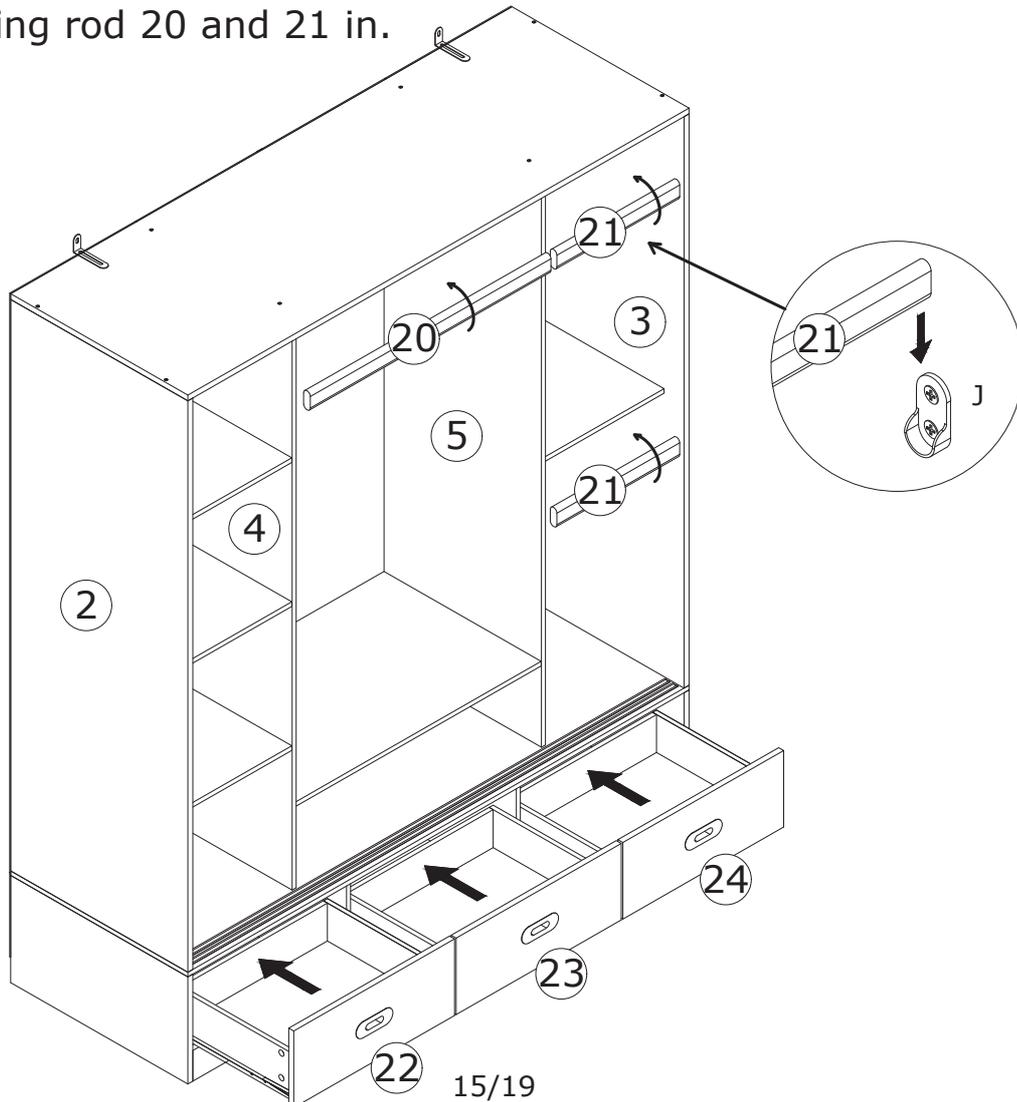

21
 
<p>Fx8</p> 	<p>Gx8</p> 	<p>Hx8</p>  <p>Ø4x12mm</p>	<p>Ix4</p> 	<p>Px64</p>  <p>Ø2.5x12mm</p>	
--	--	---	---	--	---


Fix part(G) and (F) to plate 18 and 19(X3) using screw(P) as shown.
 Fix handle(I) to these plates using screw(H) as shown.

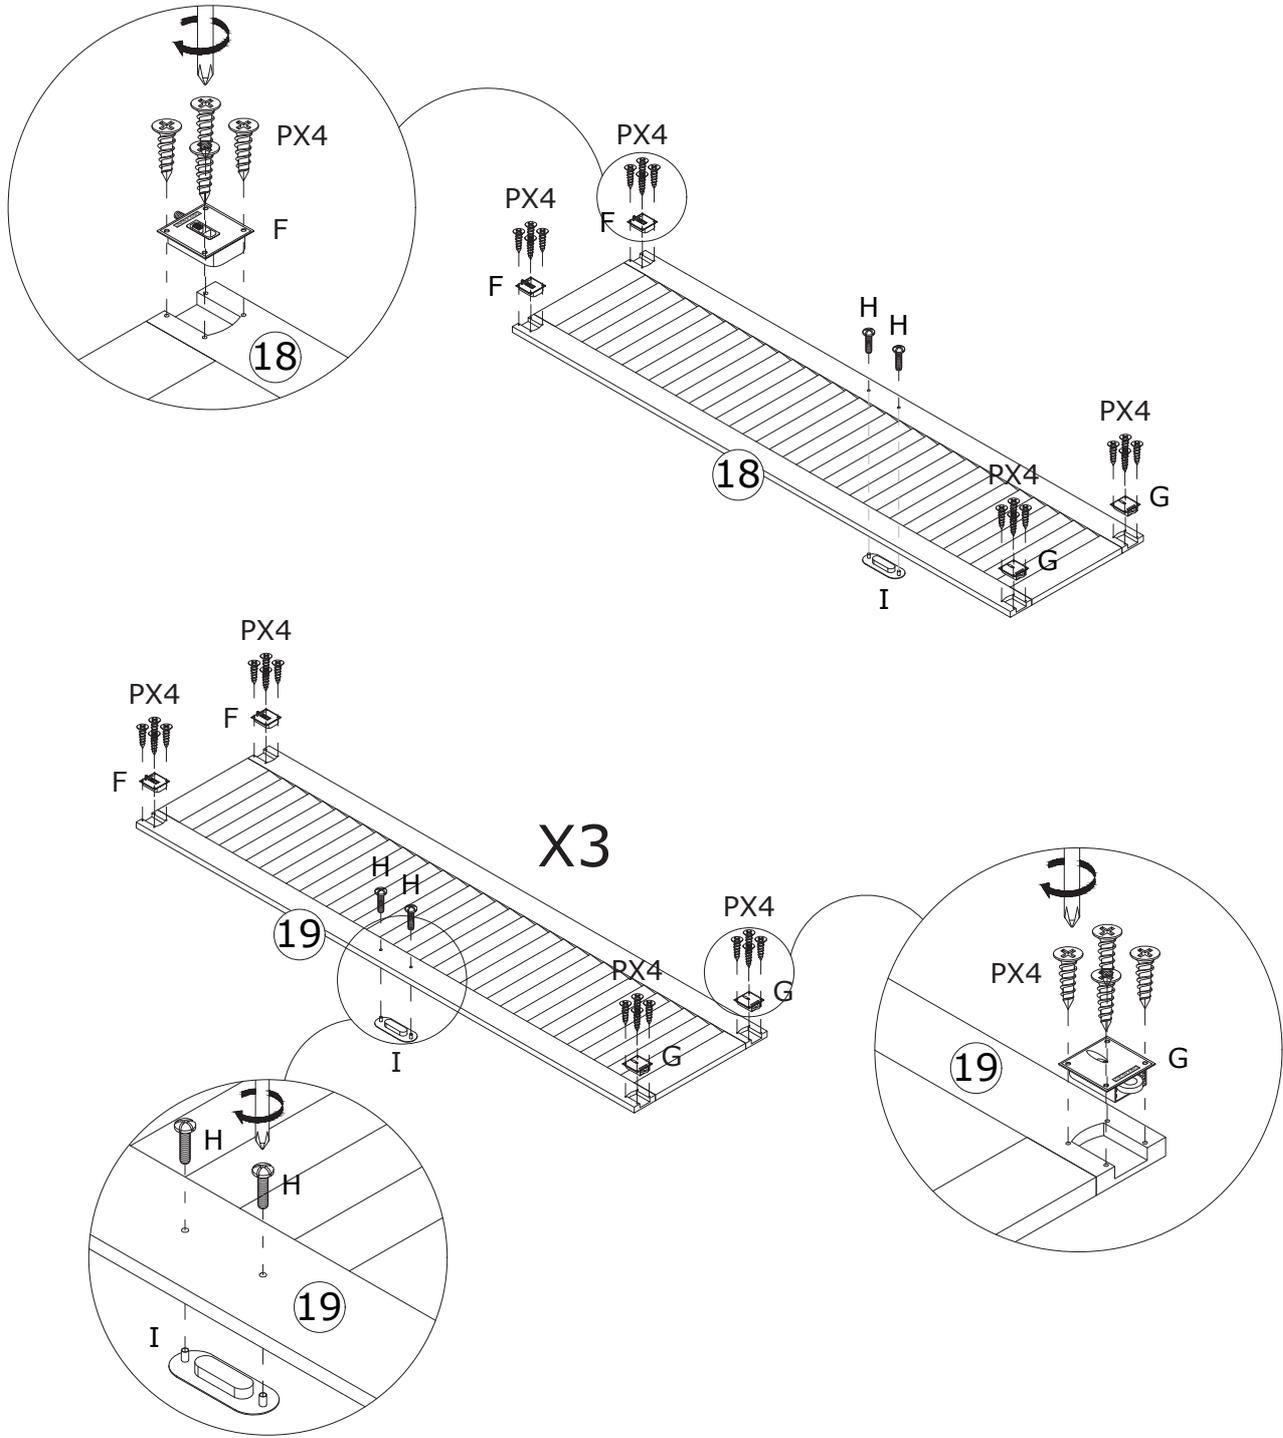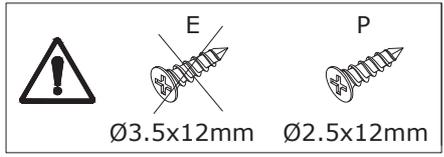


22




1

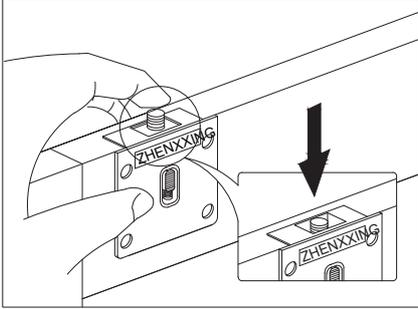


2

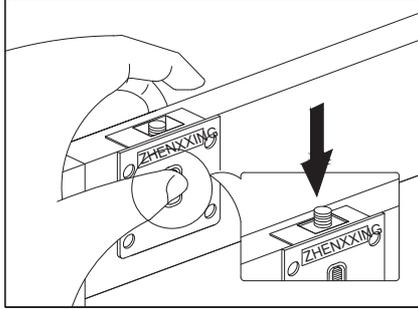




3

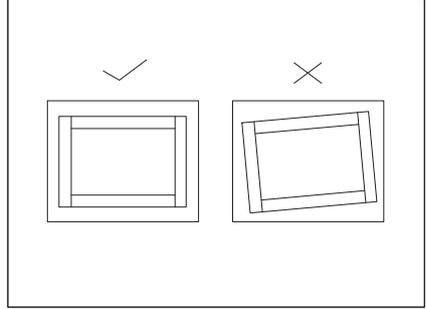


Attach door plate as shown.

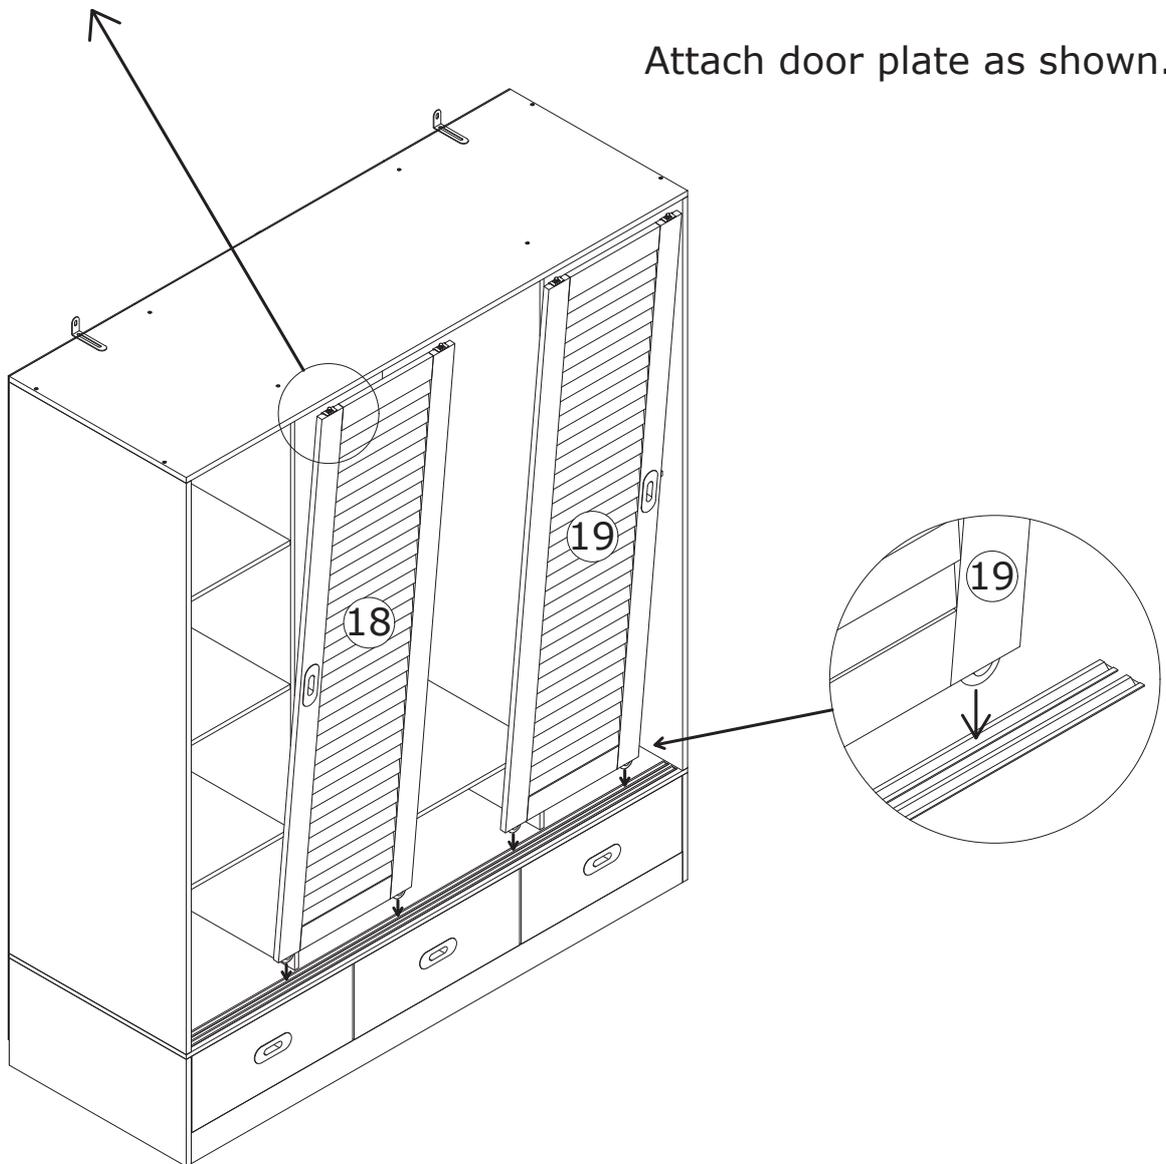



23

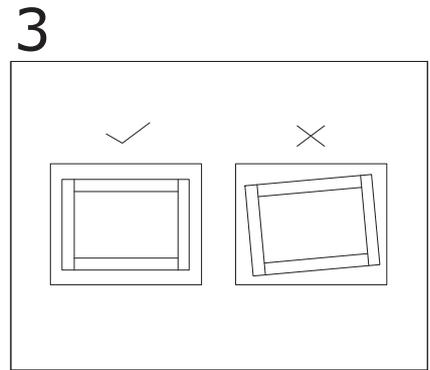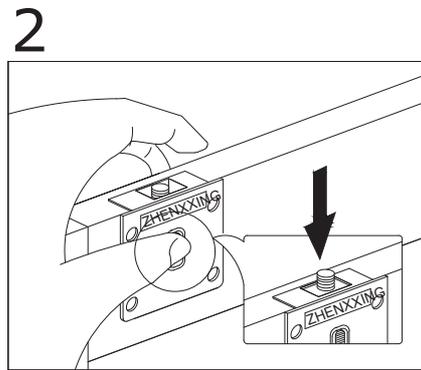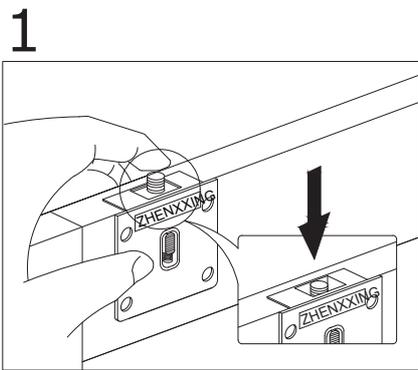


Attach door plate as shown.

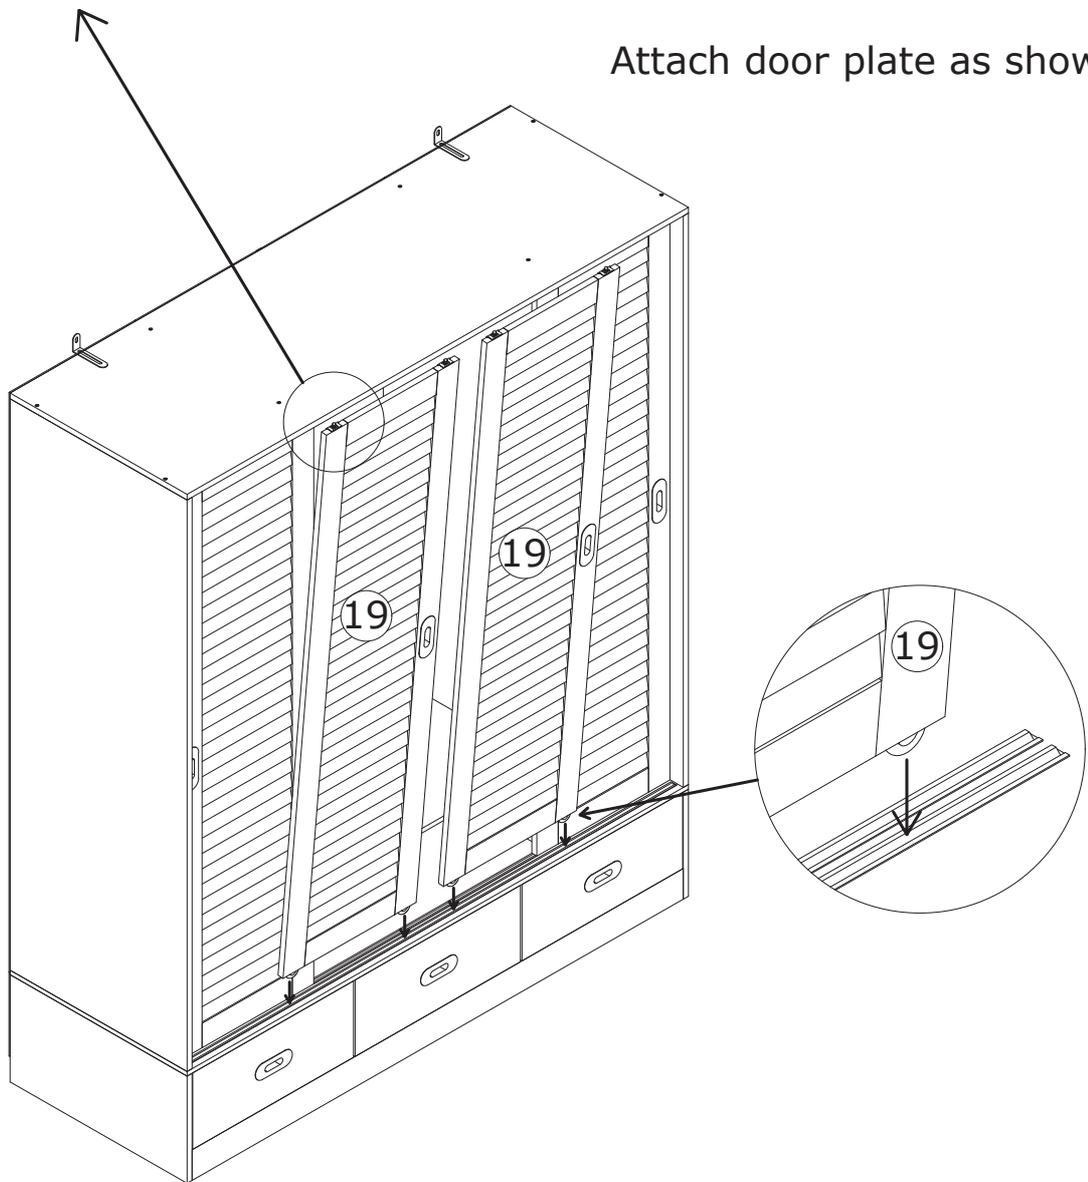

24

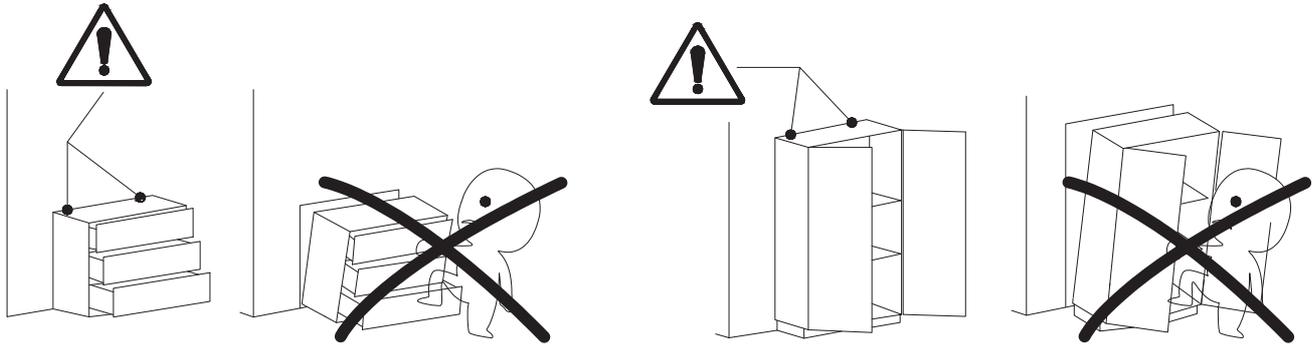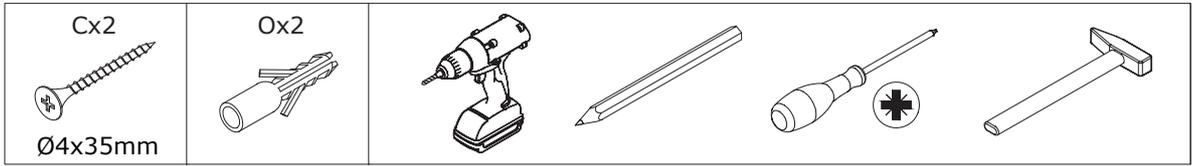

Install anti-tipping device as shown.
Once assembled lift furniture into place, do not drag. Use a drill to create a small hole lining up with the top of the safety strap (M). Fasten to wall using wall anchor (O), wall screw (C). Ensure the unit is balanced and steady before use. You're done, enjoy

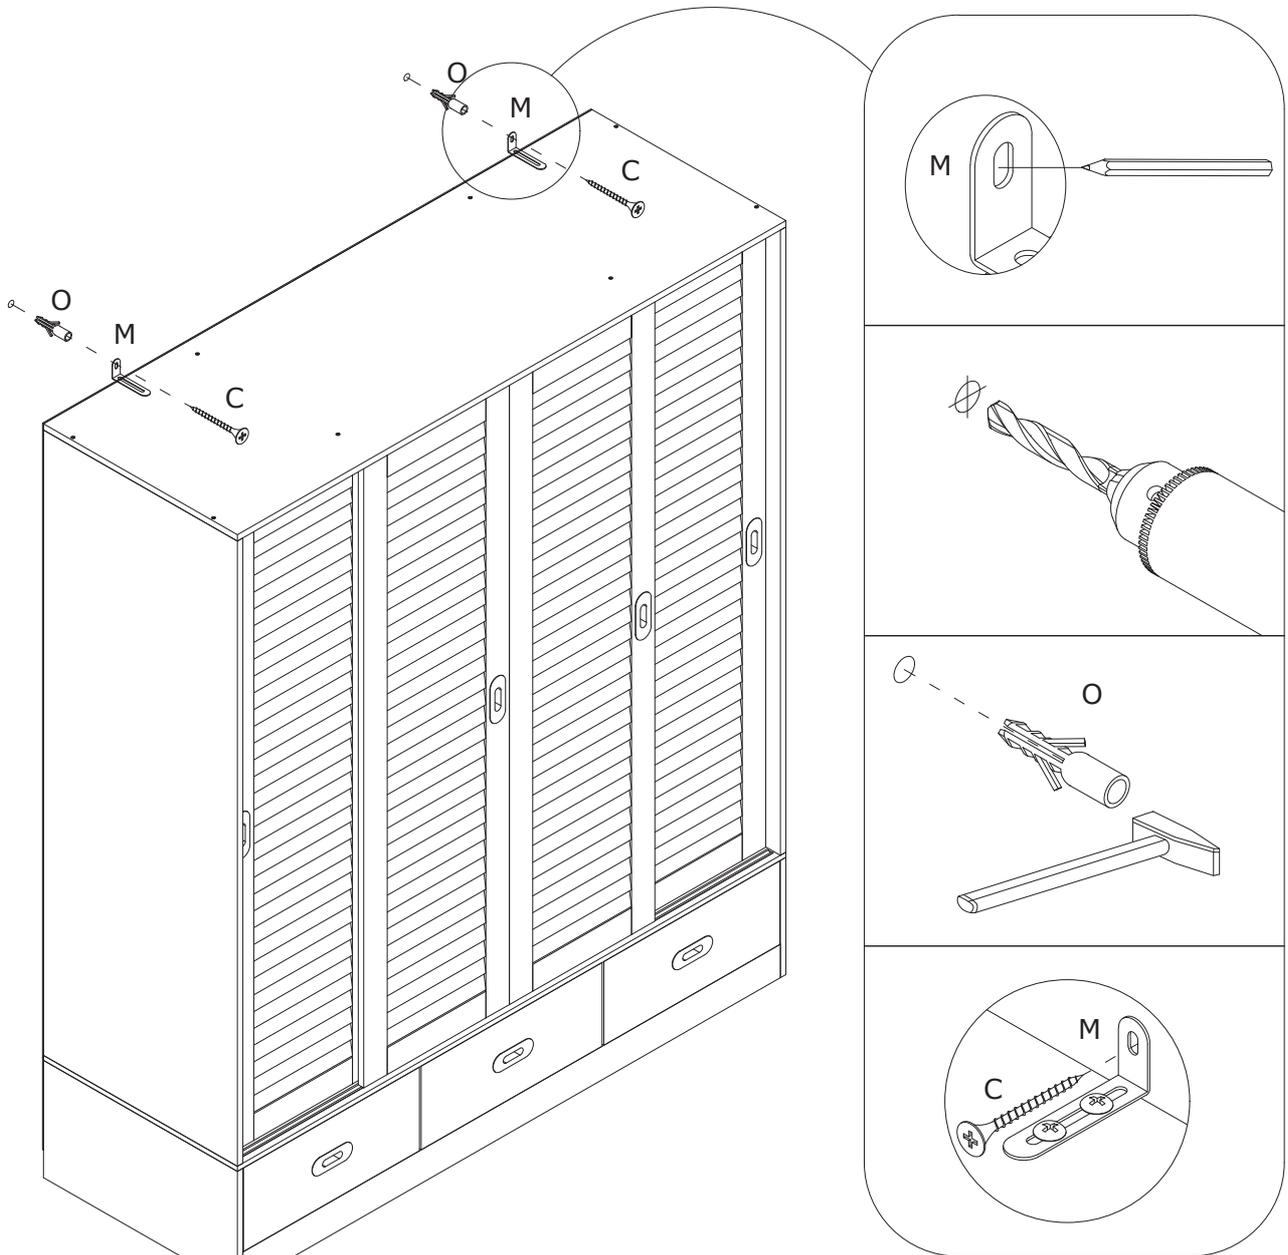

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOU ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.