 


WARM SHAKER / NORFOLK / LEXINGTON

WIDE CONSOLE / SOFA TABLE

MODEL # AXCRWSH07-LGB

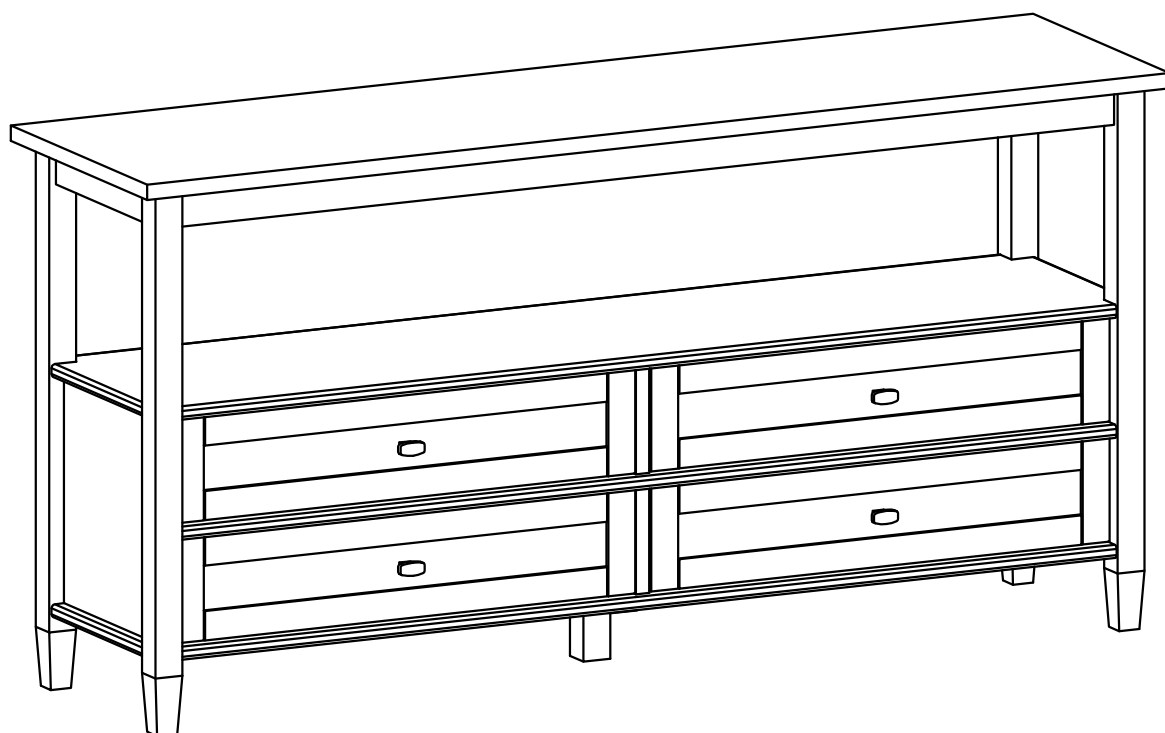



Questions, problems, assembly help, missing parts?

No need to return the product, we will gladly help and ship your
replacement parts free of charge

Please call Customer Service at 1-866-518-0120 ext. 262

Monday to Friday between 9 am –4 pm EST

or go to

www.simpli-home.com/parts request

In order to assist you in a timely manner, please have the following
information ready:

Model # _____ Part Number or Letter _____

Purchased at _____ Date of Purchase _____

If you wish to return the product, please contact the retailer where the
product was purchased.

IMPORTANT : Please read this manual carefully before beginning assembly of this product. Keep this manual for future reference.

SAFETY INFORMATION

Identify all the parts and hardware. Do not discard of the packaging until you have checked that you have all of the parts and hardware required. Hardware package may have spare parts.

WARNING: This item contains small parts which can be swallowed by children and pets. Keep children and pets away during assembly. To avoid danger of suffocation, always keep plastic bags away from children and pets. We recommend that you assemble this unit on a carpeted floor to avoid scratches. If using power tools, set the tool to low torque to avoid damage.

May require 2 people for ease of assembly.

IMPORTANT : Please read this manual carefully before beginning assembly of this product. Keep this manual for future reference.

CARE and MAINTENANCE

Perhaps the greatest environmental damage to wood furniture comes from wide swings in relative humidity (RH) in our homes. Wood absorbs and desorbs water as relative humidity rises and falls, and in doing so it swells and shrinks. Making matters worse, it expands and contracts unequally along different grain directions. As humidity changes, the components of wooden objects are continually pushing and pulling against each other. This pressure often results in parts of furniture no longer fitting together closely or becoming distorted or breaking from their own internal stresses.

The response to relative humidity changes begins with determining the annual average RH for your particular space. Then try to keep the RH in the space where your furniture is as close to that average as possible, generally within about 10% up or down. De-humidify in the summer and humidify in the winter.

Be aware that raising the temperature lowers the humidity and vice versa. Thus, modern heating systems, which can drive down interior RH in the winter, almost invariably cause problems for furniture. To counteract their effect, you can either modify the RH by keeping furniture containing spaces cooler in the winter or most importantly, have a good working humidifier for your home. A humidistat automatically works to balance the humidity in your home so it is constant. Dry indoor air can suck enough moisture from its surroundings to do permanent damage to wood, causing it to crack or split.

Remember, that not all woods are created equal. Two factors that help determine how rapidly a wood will lose moisture are pore size and surface hardness. A piece made from a dense and hard wood will dry less rapidly than pieces made from softer woods.

Furniture that is sealed and lacquered will lose moisture more slowly than an unfinished piece while pieces with veneer finishes are not only stronger, but lose moisture more slowly than other finishes.

To help protect your wood furniture, take these steps:

 
- Use a humidifier, preferably one with an automatic control system that can sense the humidity level and adjust itself accordingly. Don't over-humidify; that can damage wood by causing it to expand and contract.
- Keep furniture out of direct sunlight, which can cause it to dry out, crack and warp.
- If you can avoid it, don't put furniture near heating vents. If you must, keep the piece 3 to 4 inches away from the wall, giving the heat and air space to circulate.
- Dust with soft dry cloth.
- Do not use liquid or aerosol products.
- To avoid marking, do not place rubber on surface (foot pads, etc.)
- For soil build-up, wipe with damp cloth & dry.
- Do not use abrasive cleaners.

PRE-ASSEMBLY INFORMATION

MODEL # AXCRWSH07-LGB


PART DESCRIPTION

A

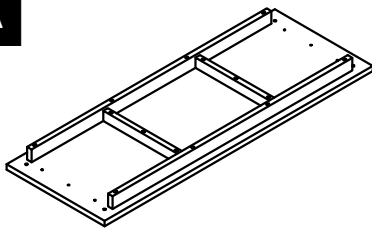


TOP
QTY 1

 BL

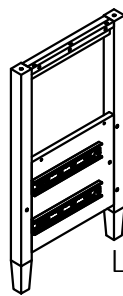


LEFT SIDE
QTY 1

 BR

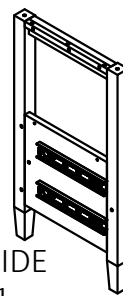


RIGHT SIDE
QTY 1

 C

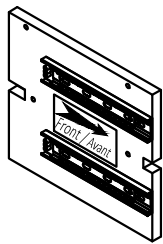


DIVIDER
QTY 1

 D

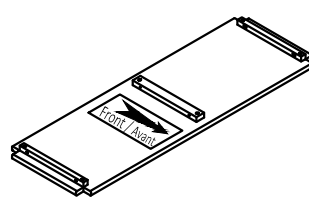


TOP SHELF
QTY 1

 E

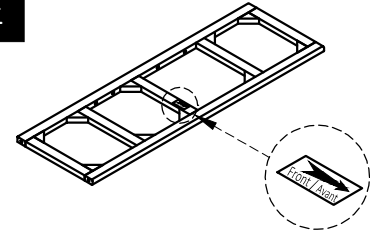


MIDDLE FRAME
QTY 1

 F

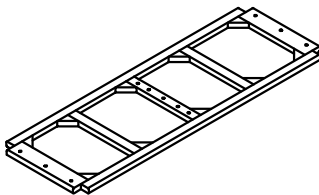


BOTTOM FRAME
QTY 1

 G

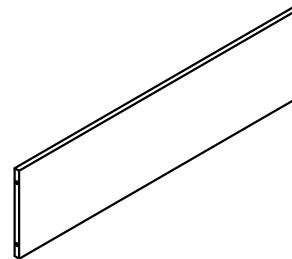


BACK PANEL
QTY 1

 H

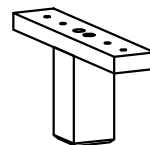


BOTTOM SUPPORT LEG
QTY 1

 I

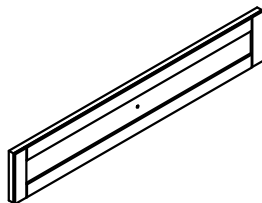


DRAWER FRONT
QTY 4

 JL

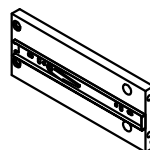


LEFT DRAWER SIDE
QTY 4

 JR

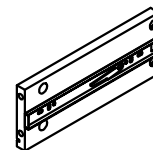


RIGHT DRAWER SIDE
QTY 4

 K

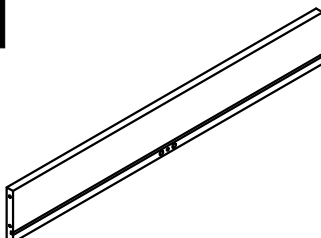


DRAWER BACK
QTY 4

 L

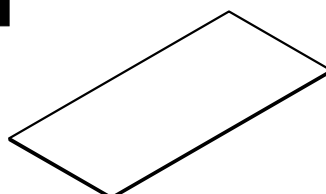

DRAWER BOTTOM
QTY 4

 M

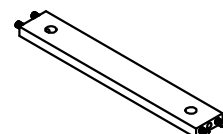


BOTTOM DRAWER SUPPORT
QTY 4

NEED HELP? For help with assembly or if you are missing a part,
Please call customer service at 1-866-518-0120 ext. 262 (9 am to 4 pm EST)


HARDWARE DESCRIPTION

 1

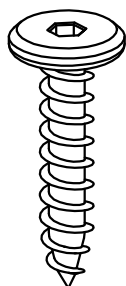

ALLEN KEY SCREW
M6 X 30mm
QTY 39

 2




CAM LOCK PIN
CAM LOCK
QTY 24 SETS

3




WOOD DOWEL
Ø8 X 30mm
QTY 14

 4




ALLEN KEY
QTY 1

 5

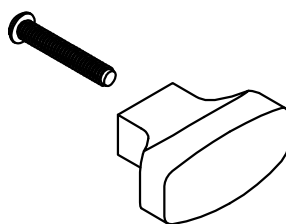


HANDLE
M4 X 25 mm
QTY 4 SETS

 6




PHILLIPS SCREW
M4 X 30mm
QTY 4

 7




PHILLIPS SCREW
M4 X 40mm
QTY 4

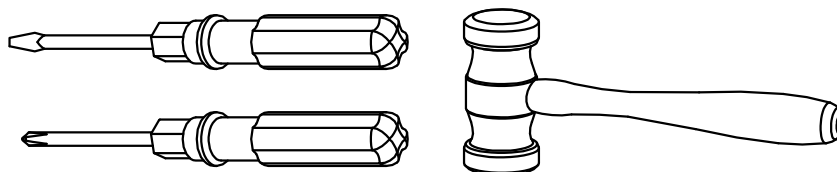 


Required -
Flathead screwdriver
Phillips screwdriver
Rubber mallet
Not Included

 NEED HELP? For help with assembly or if you are missing a part,
Please call customer service at 1-866-518-0120 ext. 262 (9 am to 4 pm EST)

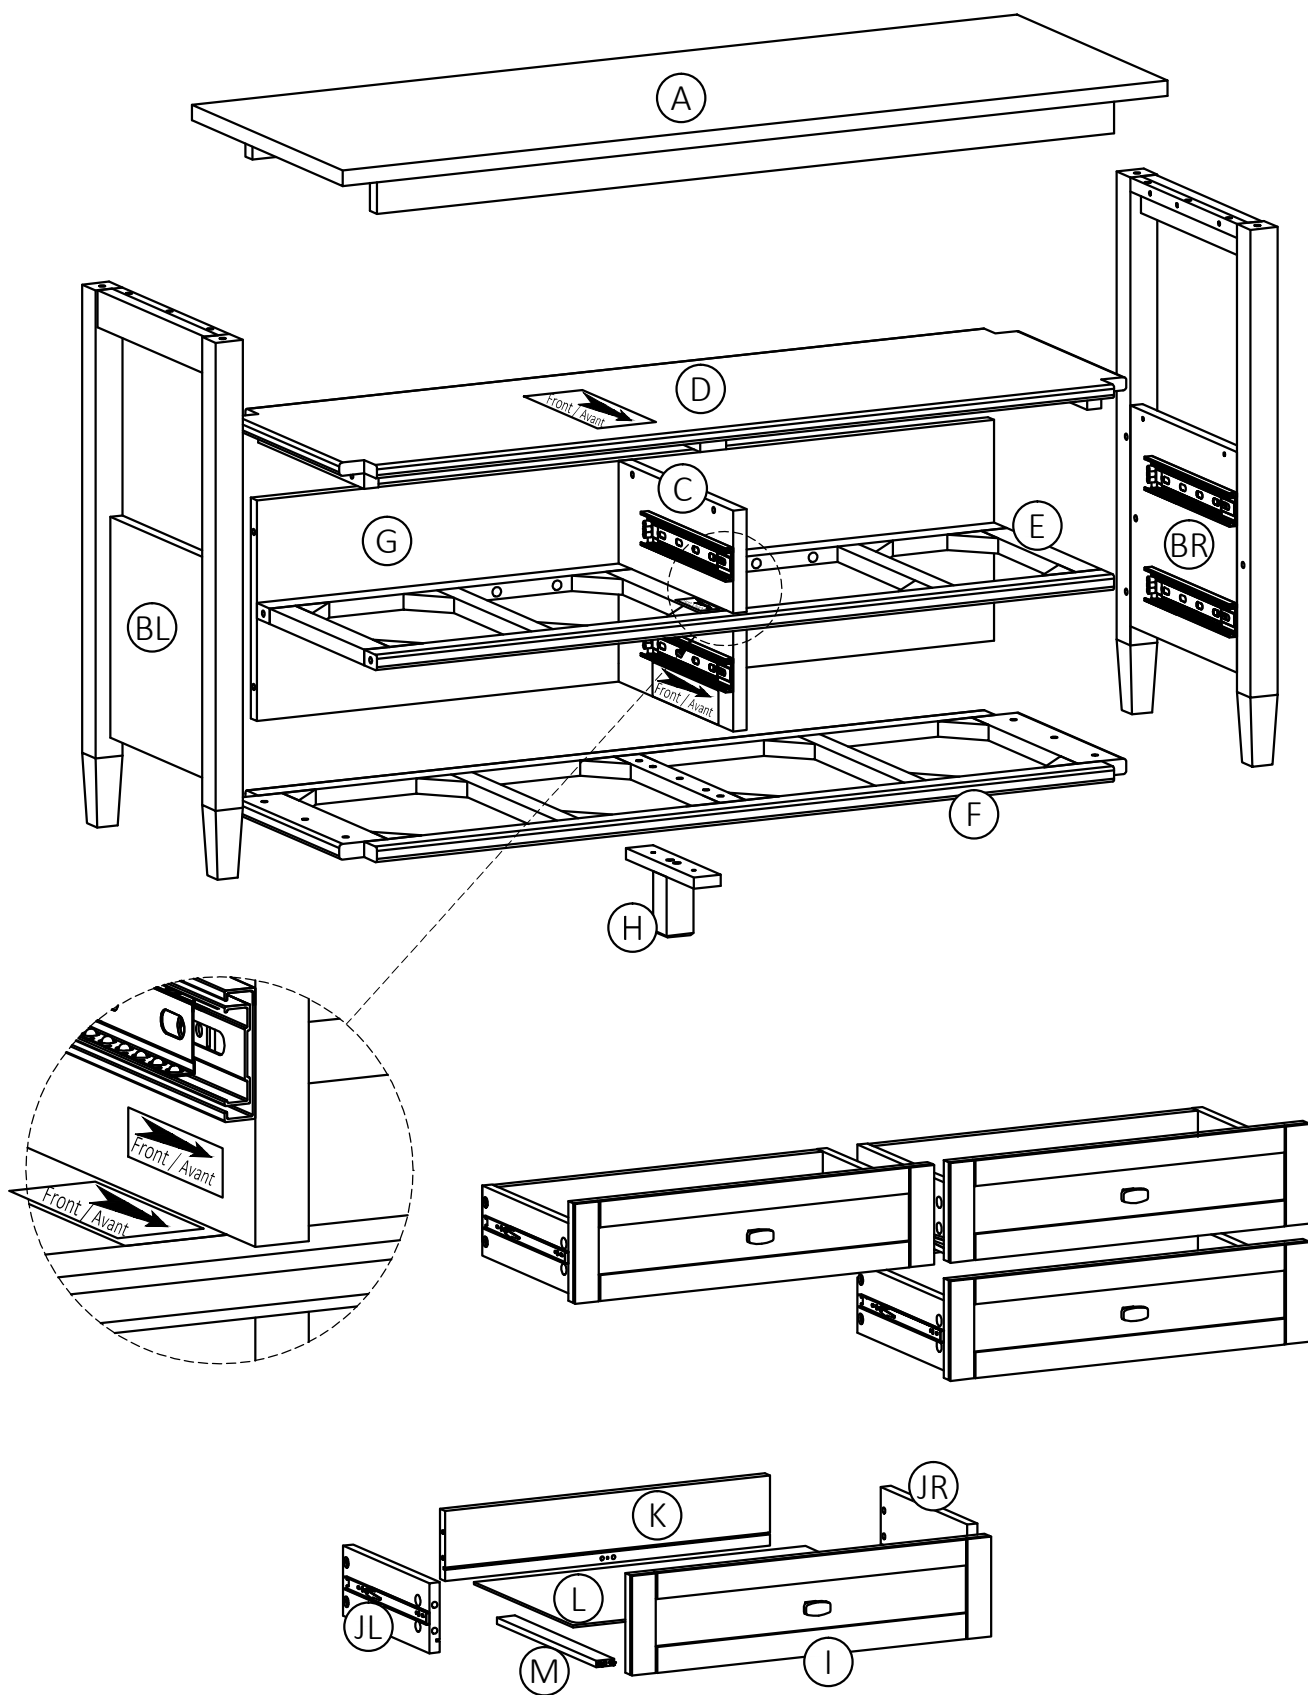


STEP-1

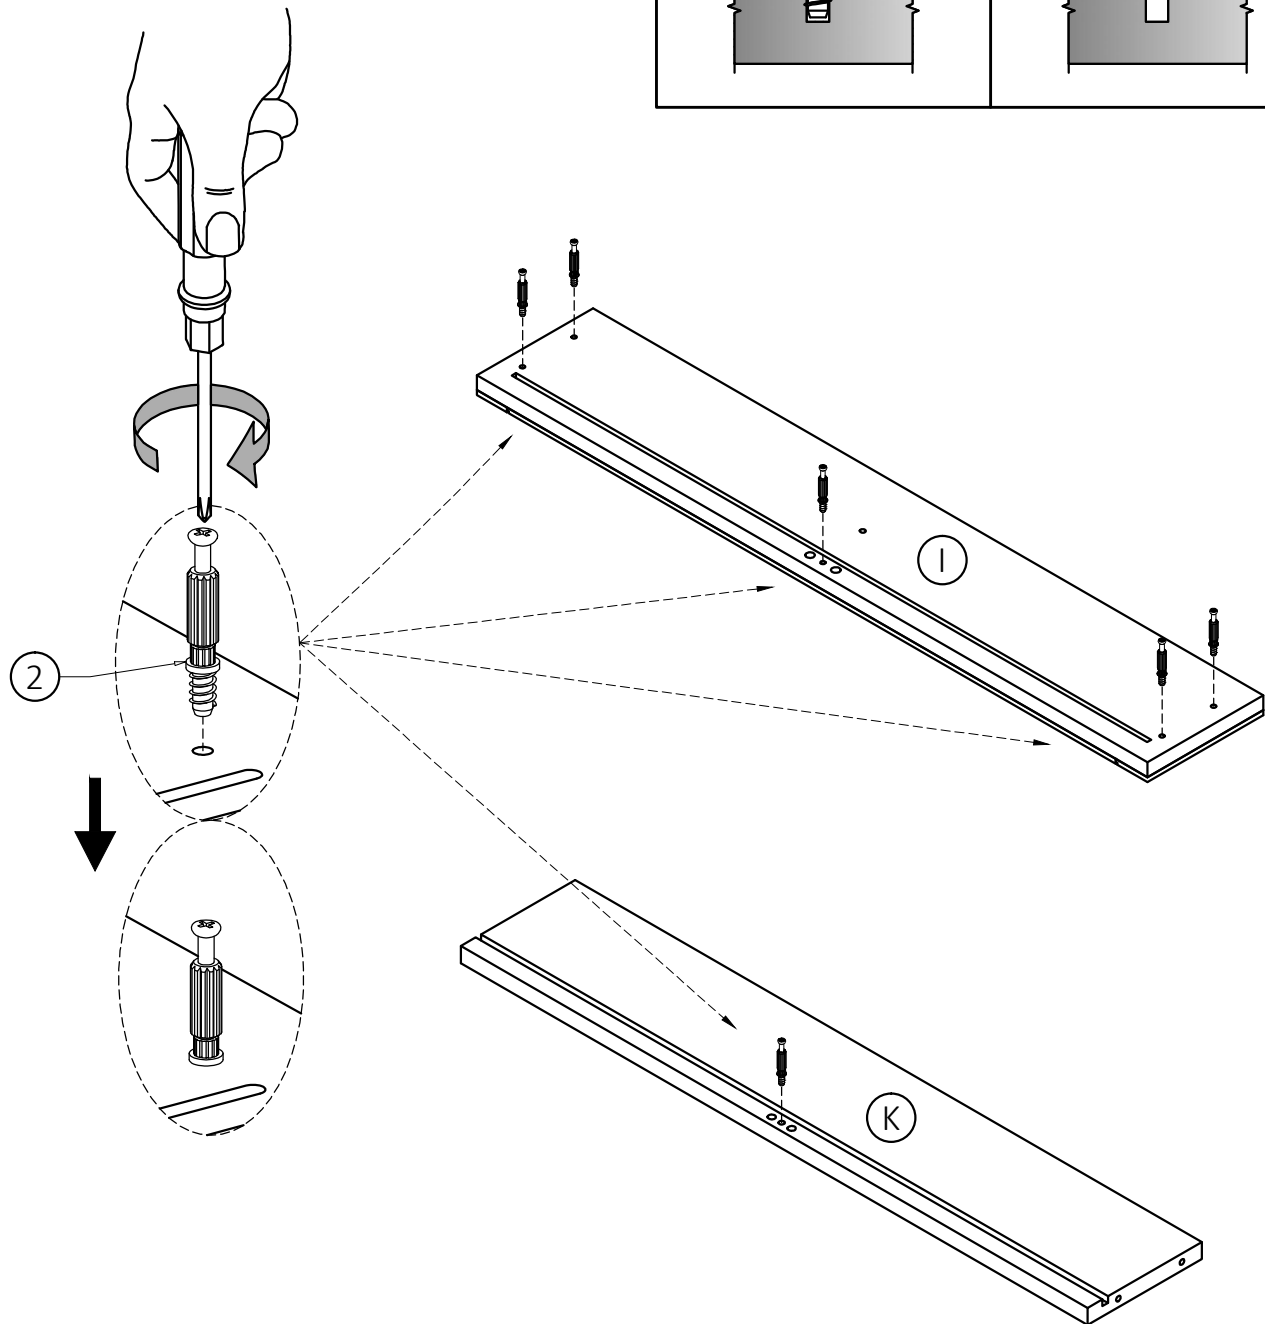 


1. Attach five Cam Lock Pins (2) into pre-drilled holes on back of Drawer Front (1).
2. Attach one Cam Lock Pin (2) into pre-drilled holes on Drawer Back (K).
3. Use Phillips screwdriver to secure Cam Lock Pins. Do not over-tighten.

 STEP-2

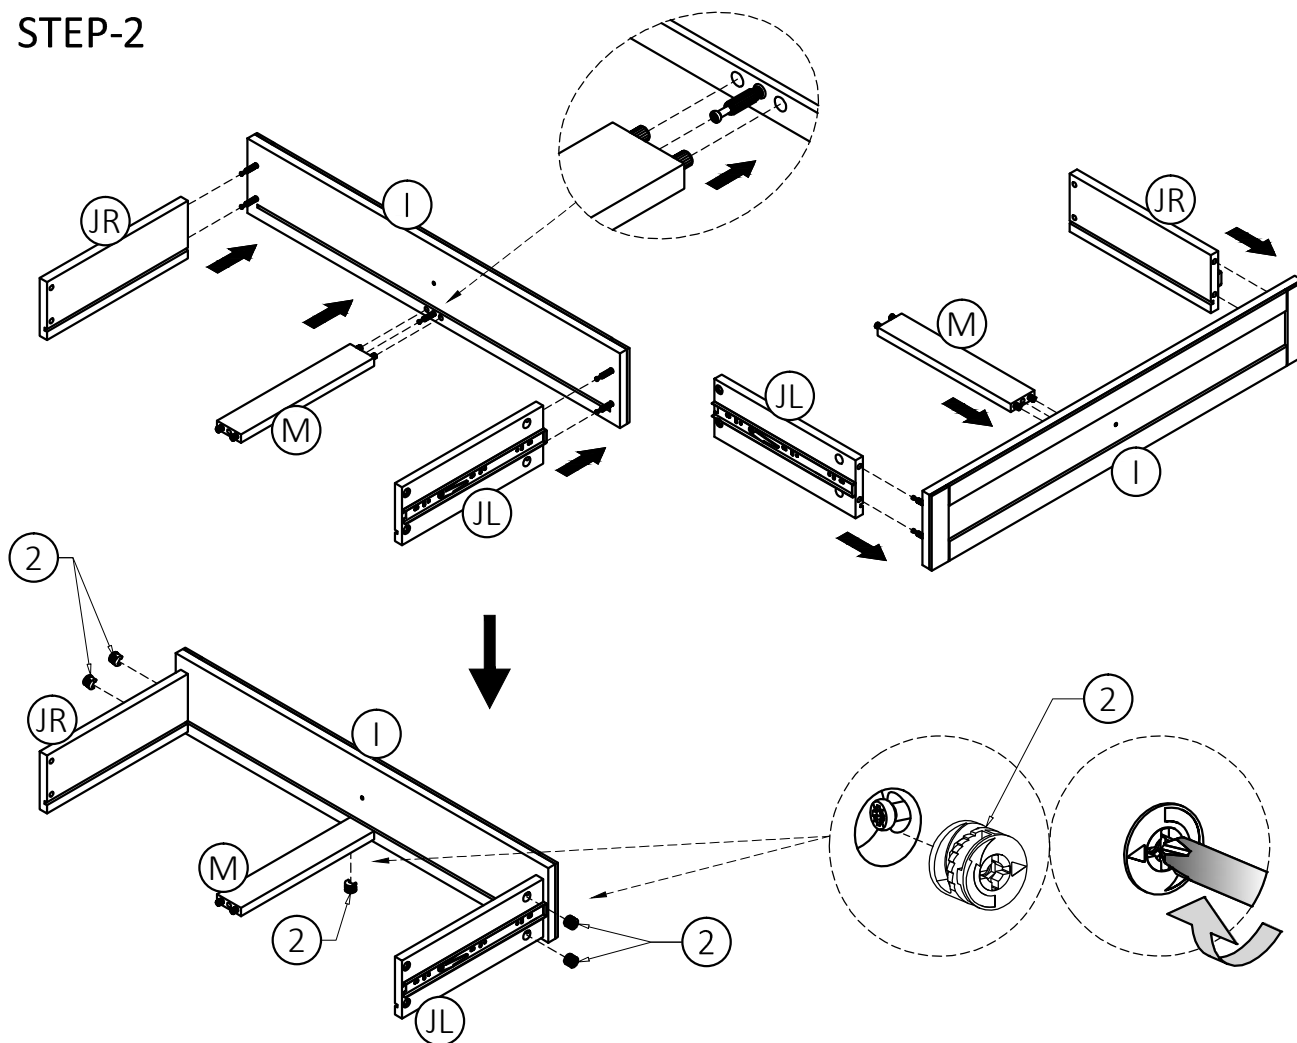


1. Align Cam Lock Pins with guide holes and attach parts (JL), (JR), (M) to Drawer Front (I).
2. Insert two Cam Locks (2) into guide holes on each part (JL), (JR).
3. Insert one Cam Lock (2) into guide holes on part (M).
4. Use Phillips screwdriver to secure Cam Locks. Do not over-tighten.

 STEP-3

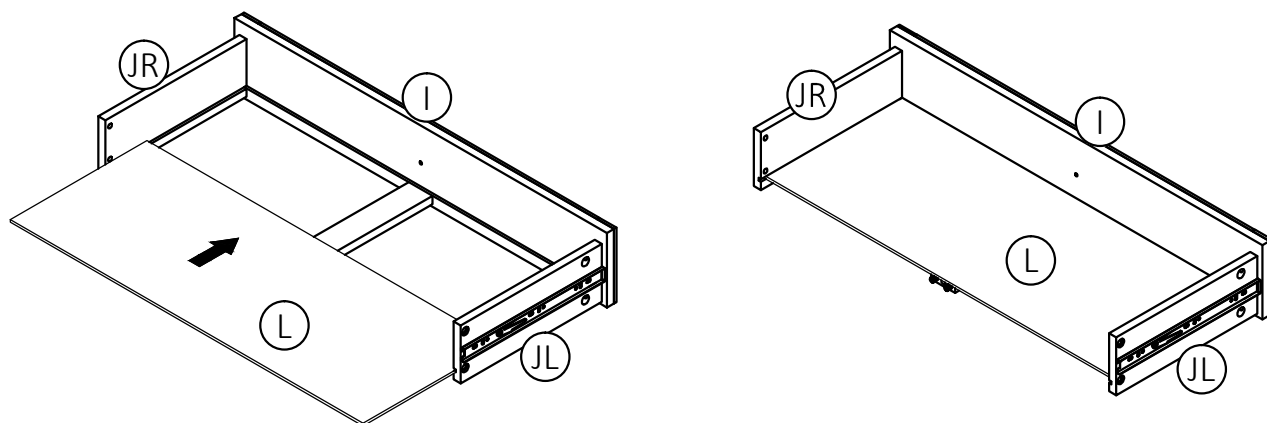


1. Slide Drawer Bottom (L) firmly into slots on Drawer Sides (JL), (JR) and Drawer Front (I).

 STEP-4

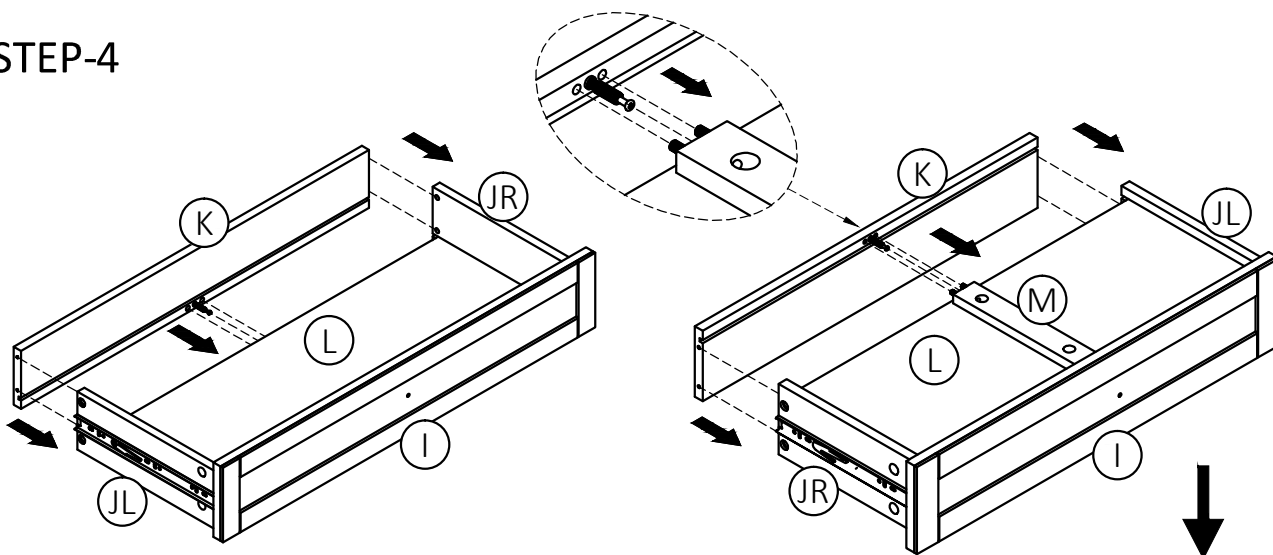


 1. Align Drawer Back (K) with Drawer Bottom (L) and press firmly into slot .
2. Align Cam Lock Pin on Drawer Back (K) with guide hole on Bottom Drawer Support (M).

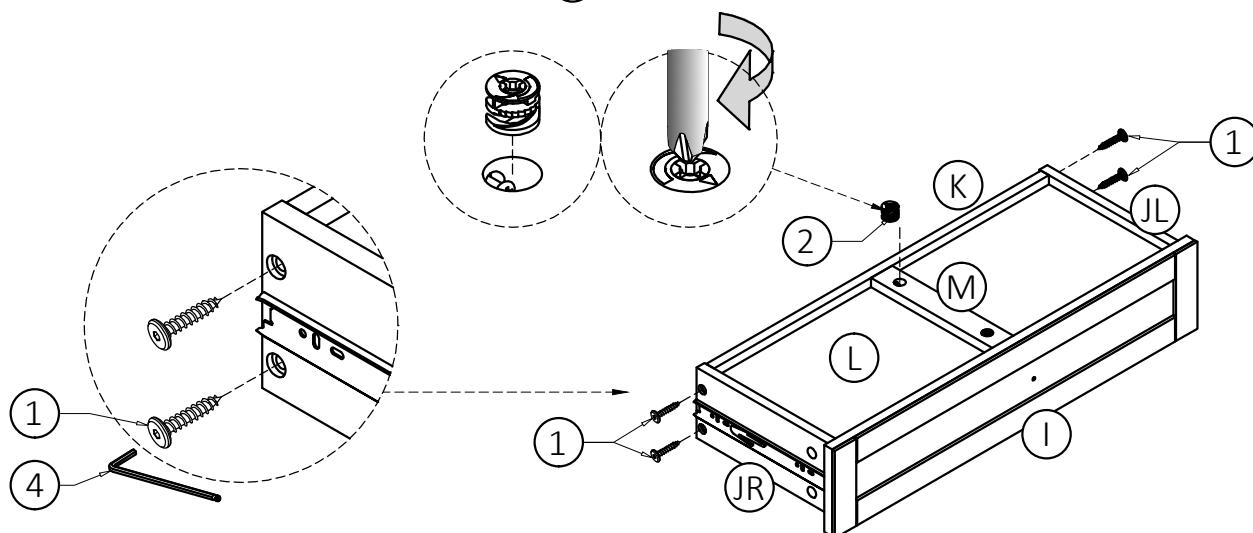

3. Attach Drawer Back using two Allen Key Screws (1) through guide holes on each Drawer Side (JL, JR). Use Allen Key (4) to tighten Screws. Do not over-tighten
4. Insert one Cam Lock (2) into guide holes on Bottom Drawer Support (M).
5. Use Phillips screwdriver to secure Cam Lock. Do not over-tighten.

 
STEP-5

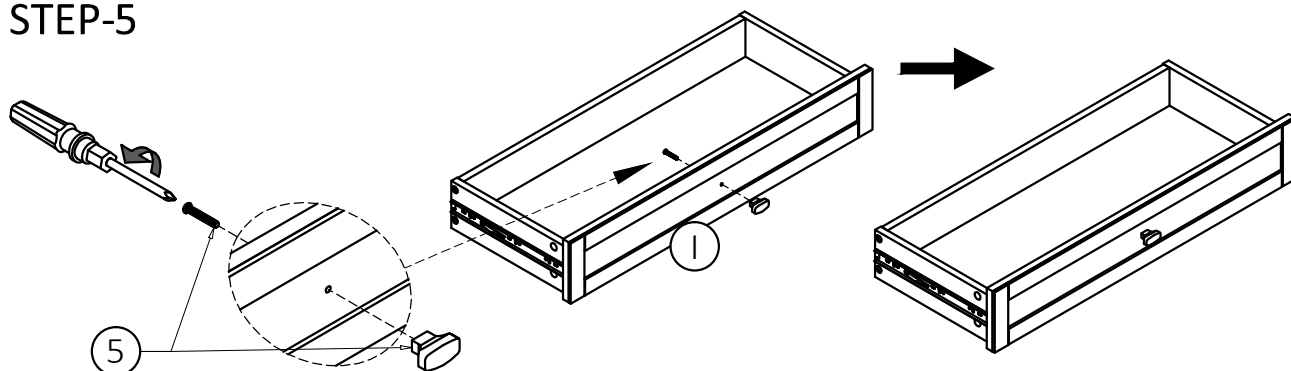

1. Use Phillips screwdriver to attach Handle (5) to Drawer Front (I).


Repeat Step 1-5 for the rest drawers.

 STEP-6

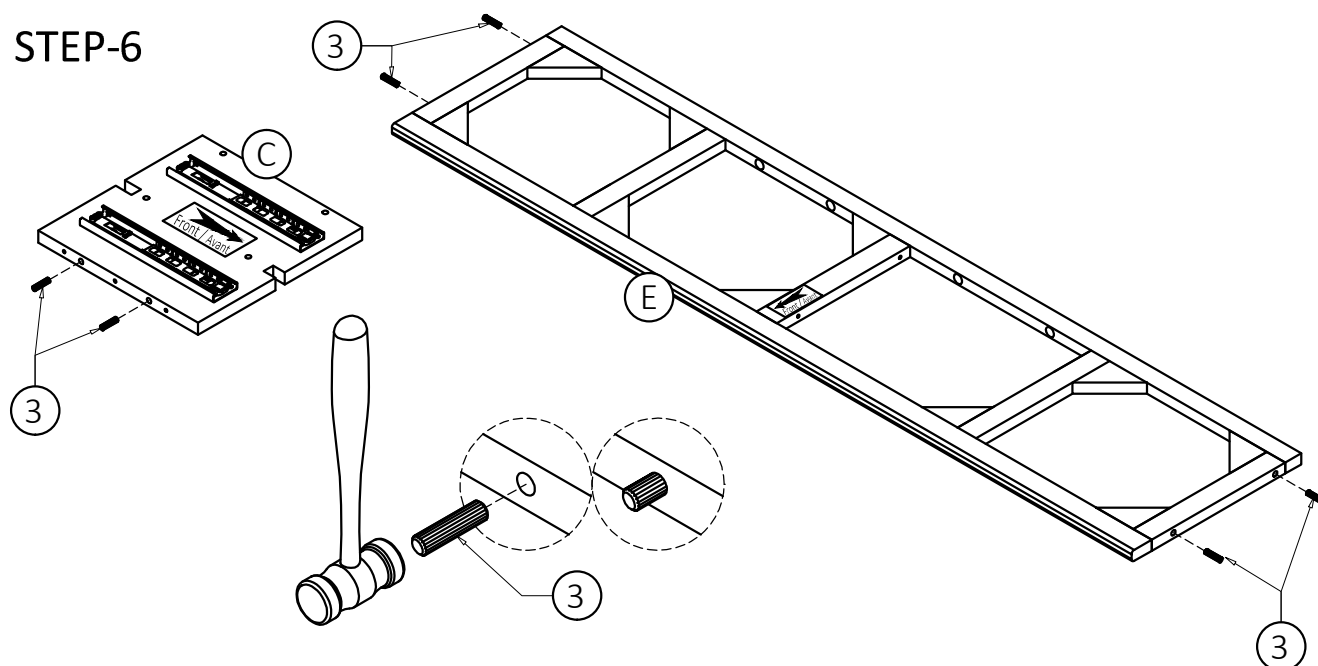


1. Insert Dowels (3) into guide holes on Divider (C) and Middle Frame (E).
2. Use rubber mallet to tap Dowels (3) into bottom of holes securely. 1/2 length of Dowels should be exposed.

 STEP-7

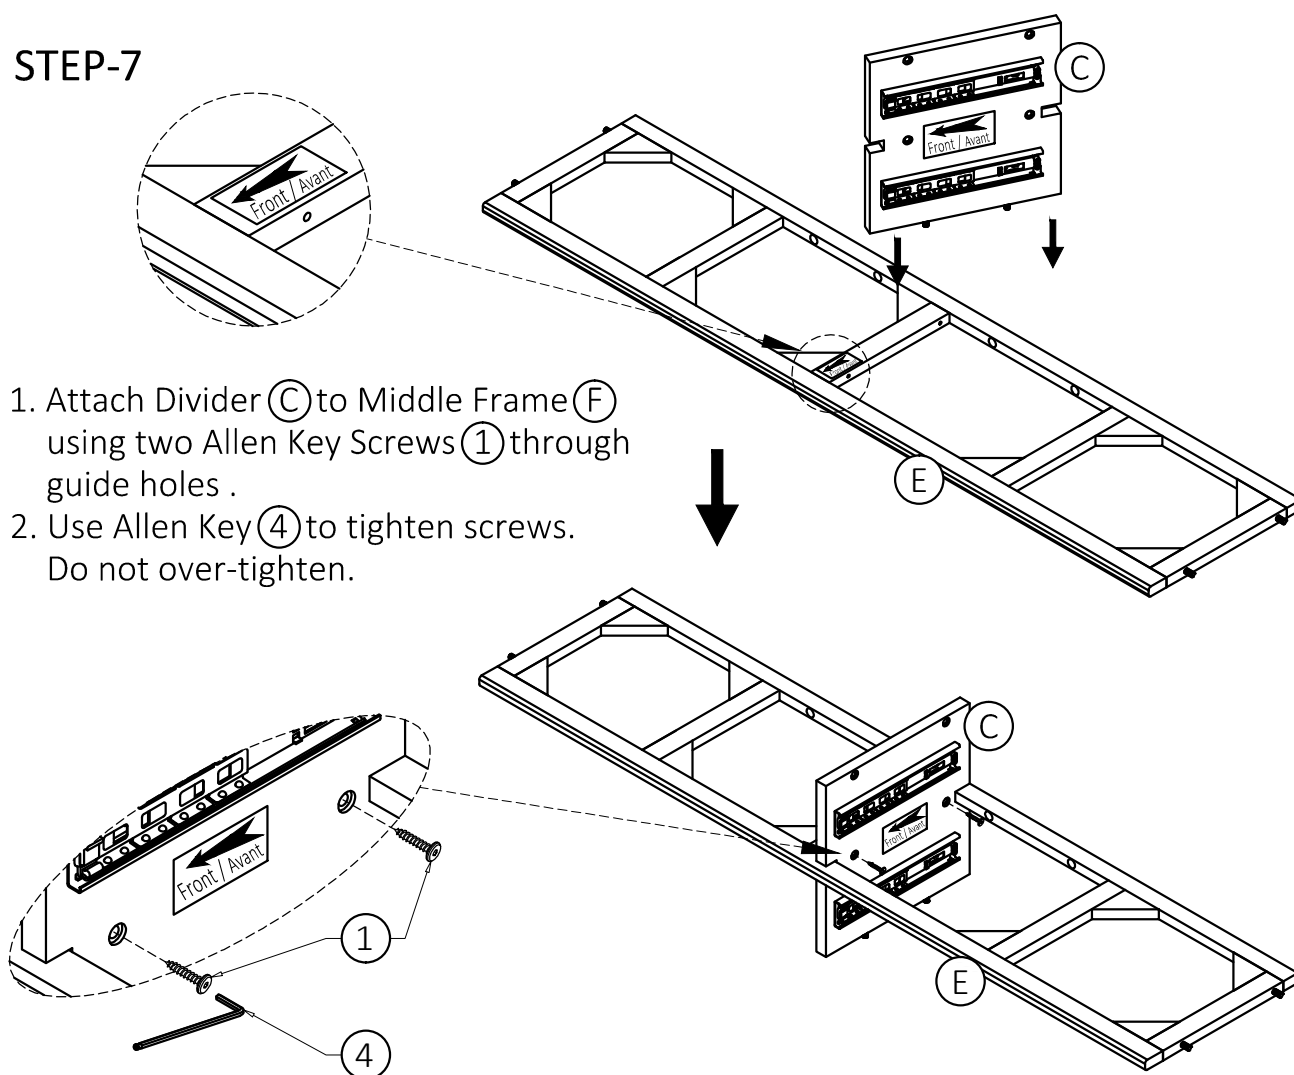


1. Attach Divider (C) to Middle Frame (E) using two Allen Key Screws (1) through guide holes.
2. Use Allen Key (4) to tighten screws. Do not over-tighten.

 STEP-8

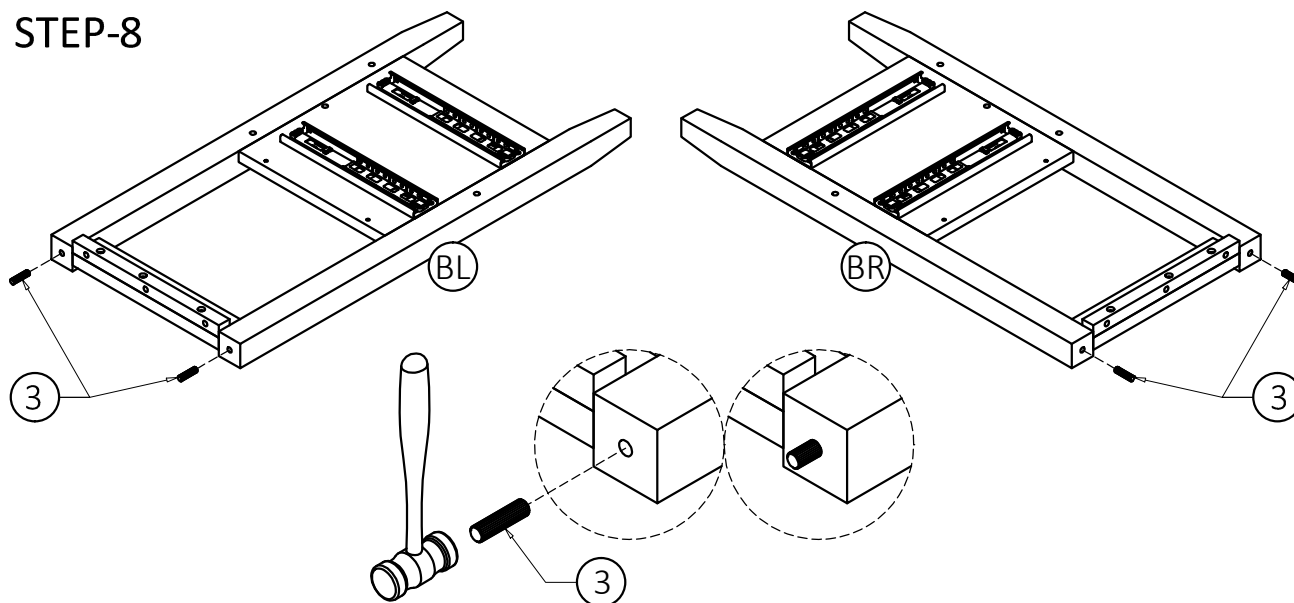

1. Insert Dowels (3) into guide holes on each Side (BL, BR).
2. Use rubber mallet to tap Dowels (3) into bottom of holes securely. 1/2 length of Dowels should be exposed.

 STEP-9

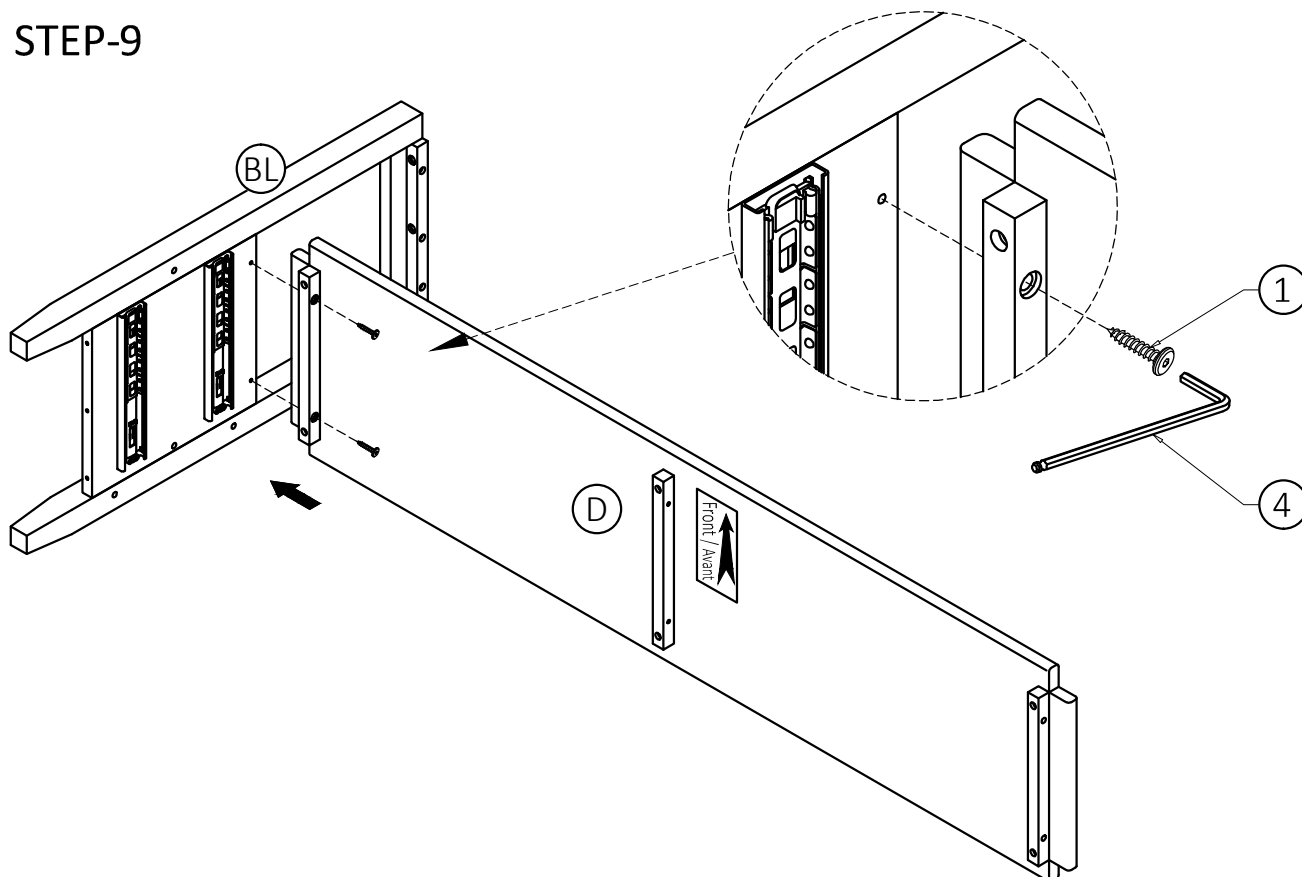


1. Attach Top Shelf (D) to Left Side (BL) using two Allen Key Screws (1) through guide holes.
2. Use Allen Key (4) to tighten screws. Do not over-tighten.

STEP-10

The diagram shows the assembly of the middle frame (E) onto the left side (BL). Arrows indicate the direction of movement for the middle frame. A circular inset shows a close-up of the dowel alignment. The label 'Front / Avant' is visible on the middle frame.


1. Align Dowels with guide holes on Left Side (BL) and attach Middle Frame (E) to Left Side (BL).

 1. Align Dowels with guide holes on Left Side (B) and attach Middle Frame (E) to Left Side (B).

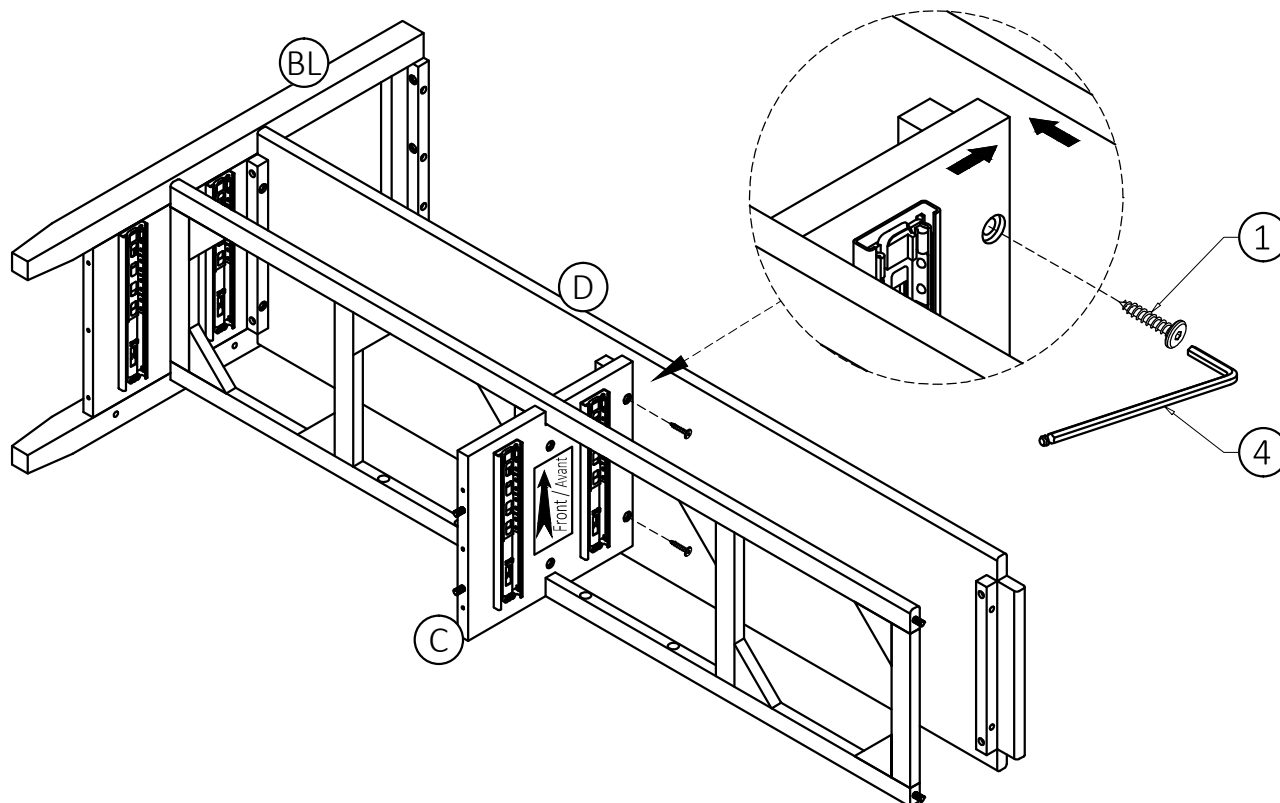


2. Use two Allen Key Screws ① to attach Divider ③ through guide holes.
3. Use Allen Key ④ to tighten Screws. Do not over-tighten.

 STEP-11

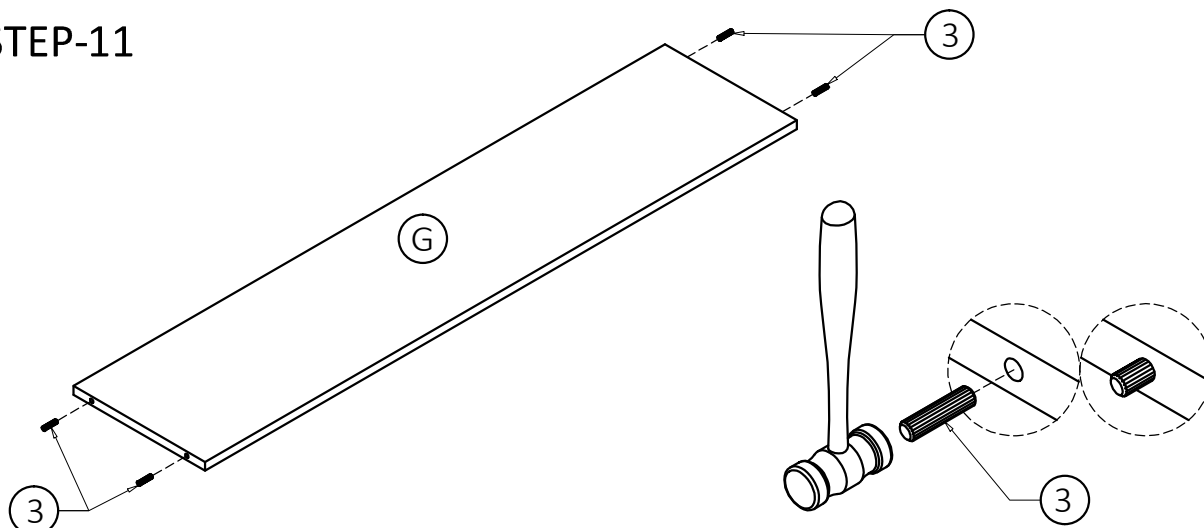


1. Insert Dowels (3) into guide holes on Back Panel (G).
2. Use rubber mallet to tap Dowels (3) into bottom of holes securely. 1/2 length of Dowels should be exposed.

 STEP-12

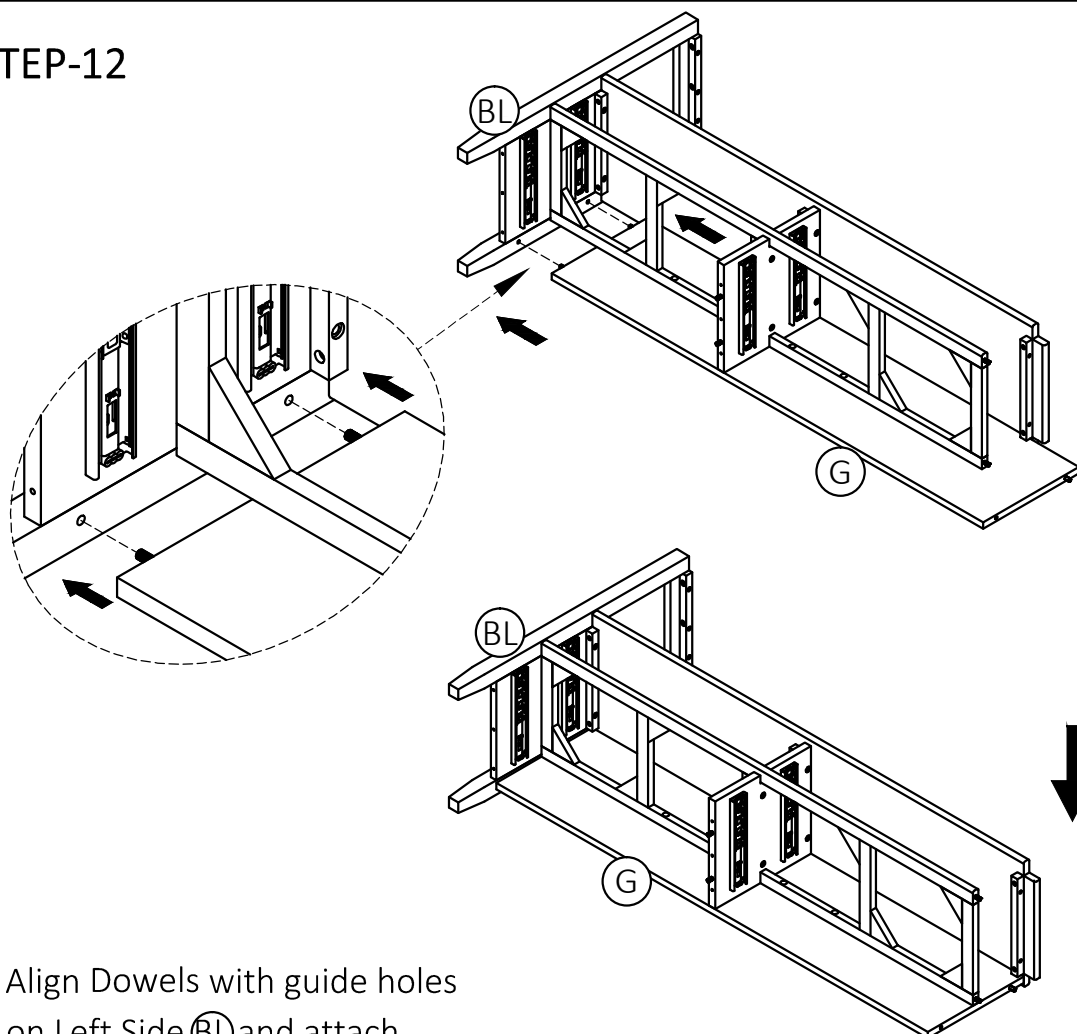


1. Align Dowels with guide holes on Left Side (BL) and attach Back Panel (G) to Left Side (BL).

 STEP-13

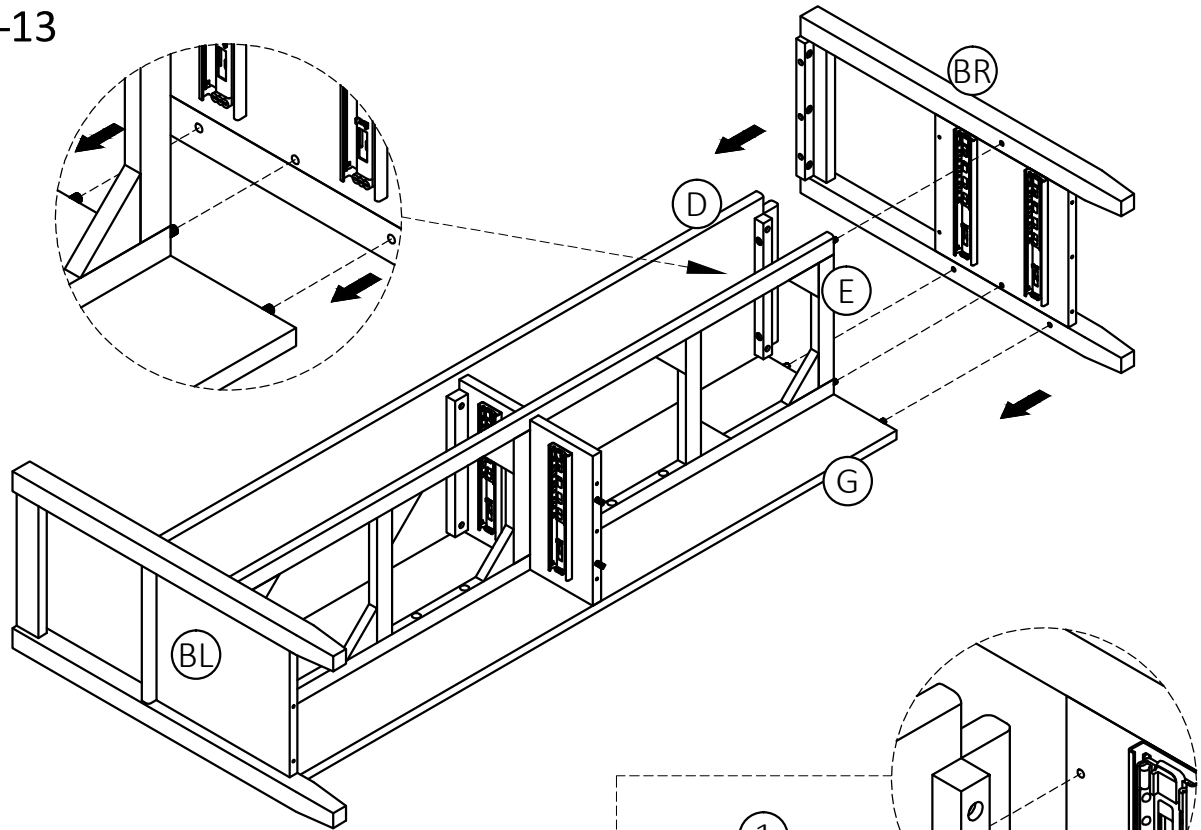


 1. Align Dowels with guide holes on Right Side (BR) and attach Right Side (BR) to parts (D), (E), (G).

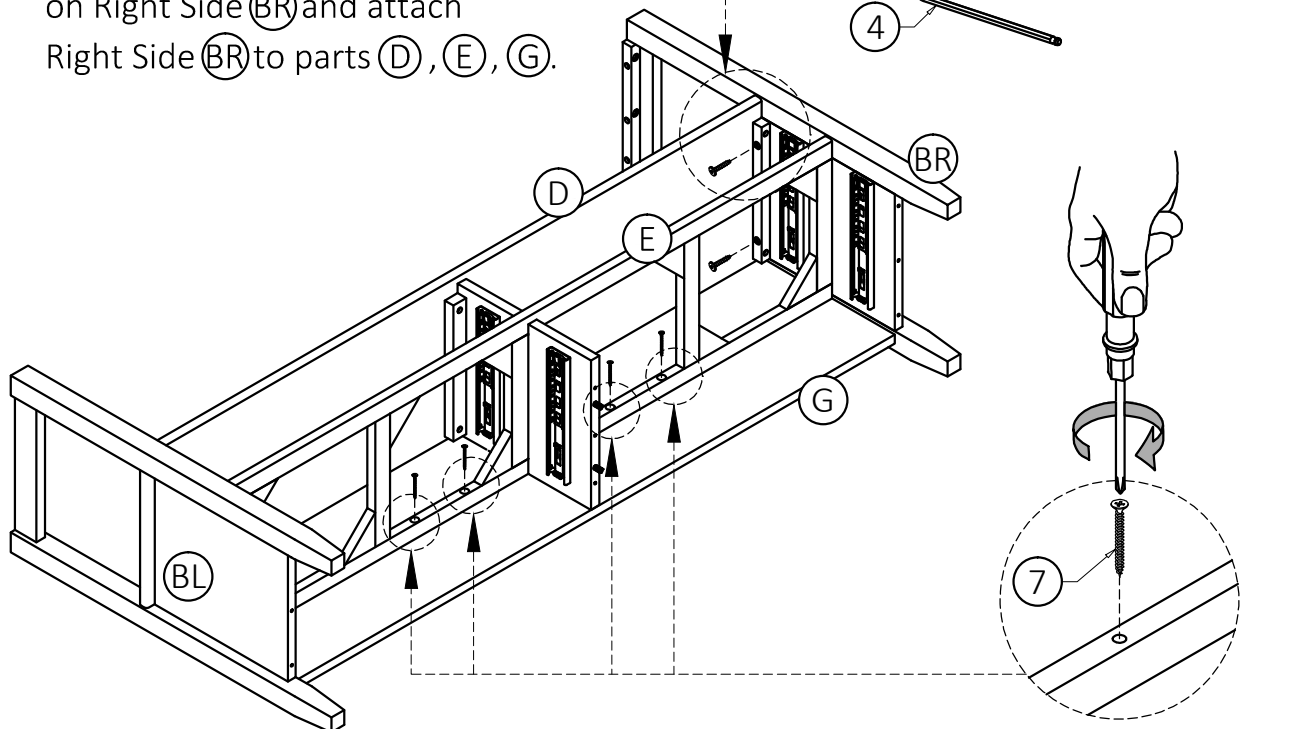


2. Attach Top Shelf (D) to Right Side (BR) using two Allen Key Screws (1) through guide holes .
3. Use Allen Key (4) to tighten screws. Do not over-tighten.
4. Use Phillip Screws (7) to attach Middle Frame with Back Panel (G) through guide holes. Use Phillips screwdriver to tighten Screws. Do not over-tighten.

 STEP-14


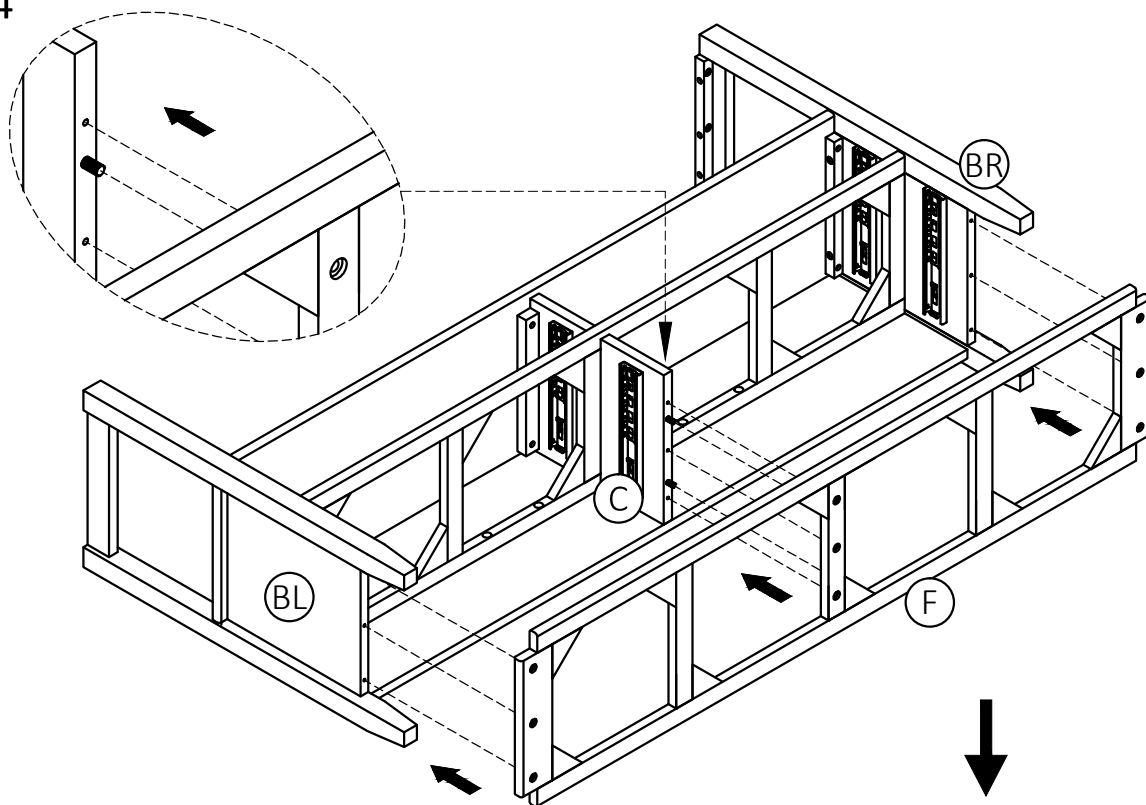


 1. Align Dowels with guide holes on Bottom Frame (F) and attach Bottom Frame (F) to parts (BL), (BR), (C).


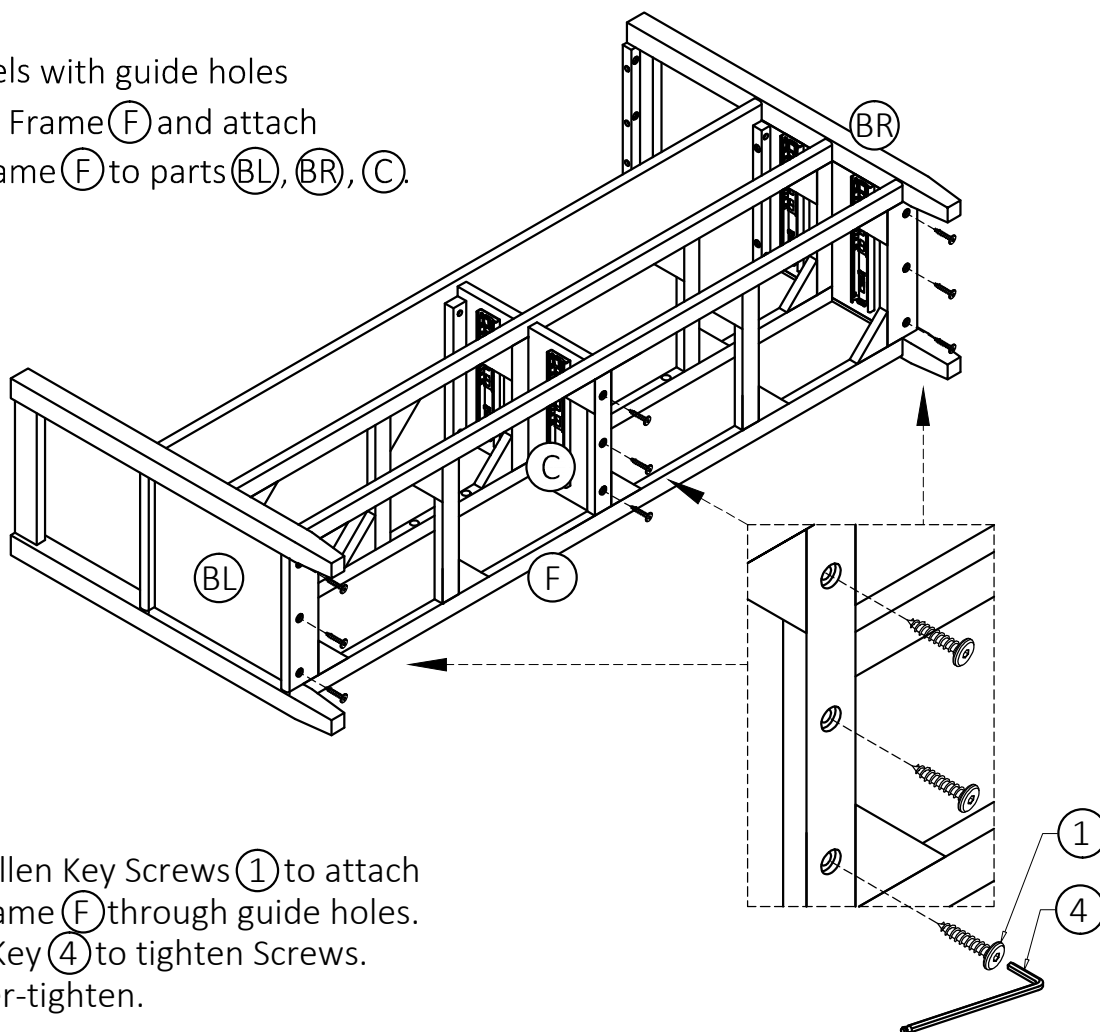


2. Use nine Allen Key Screws (1) to attach Bottom Frame (F) through guide holes.
3. Use Allen Key (4) to tighten Screws. Do not over-tighten.

  
STEP-15

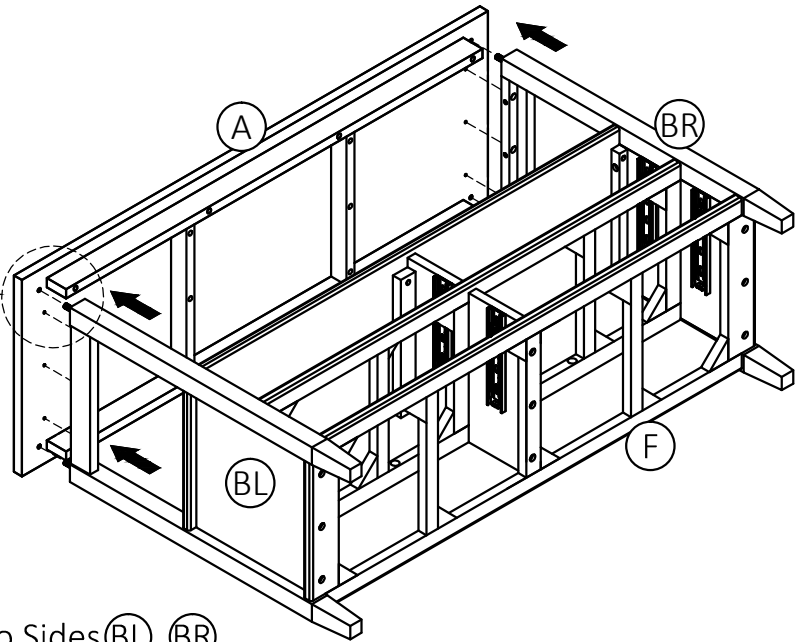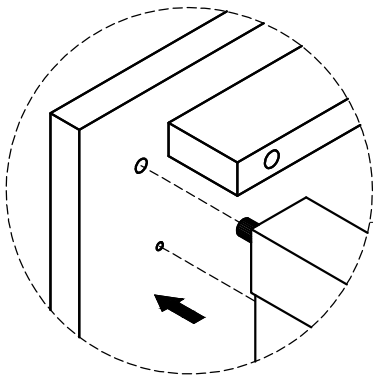

  
1. Align Dowels with guide holes on Top (A) and attach Top (A) to Sides (BL, BR).

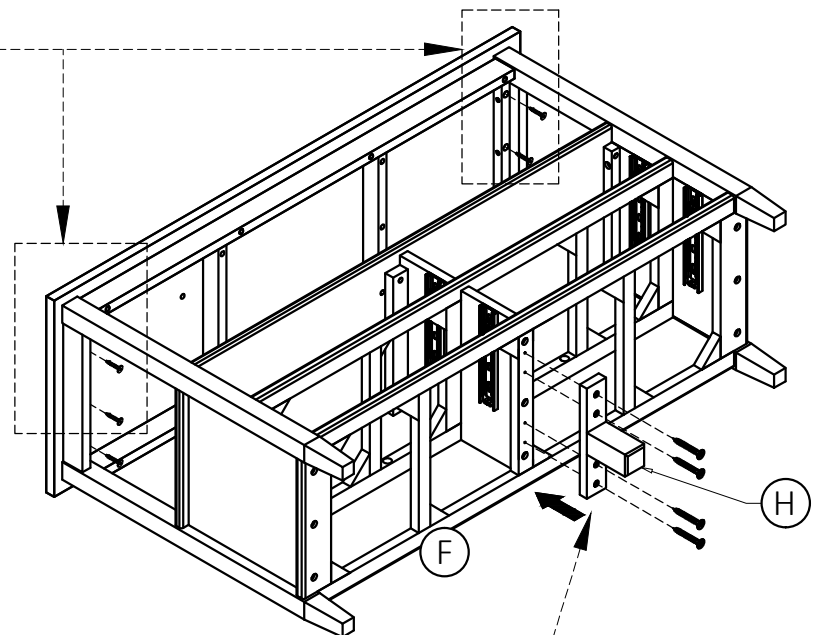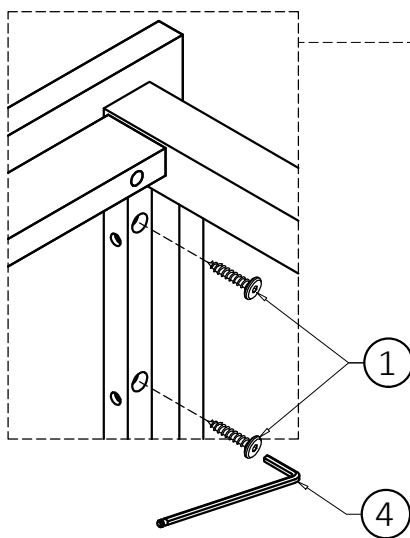

2. Attach Top (A) to Sides (BL, BR) using six Allen Key Screws (1) through guide holes .
3. Use Allen Key (4) to tighten screws. Do not over-tighten.
4. Use Phillip Screws (6) to attach Bottom Support Leg (C) with Bottom Frame (F) through guide holes. Use Phillips screwdriver to tighten Screws. Do not over-tighten.

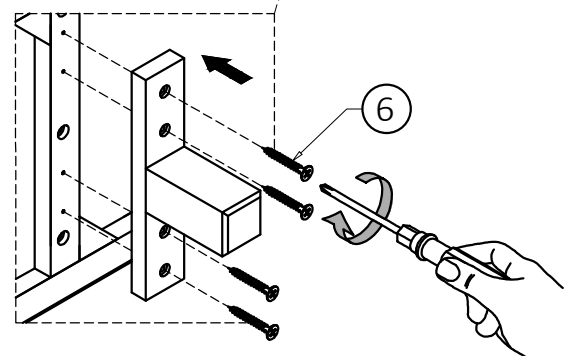 

STEP-16

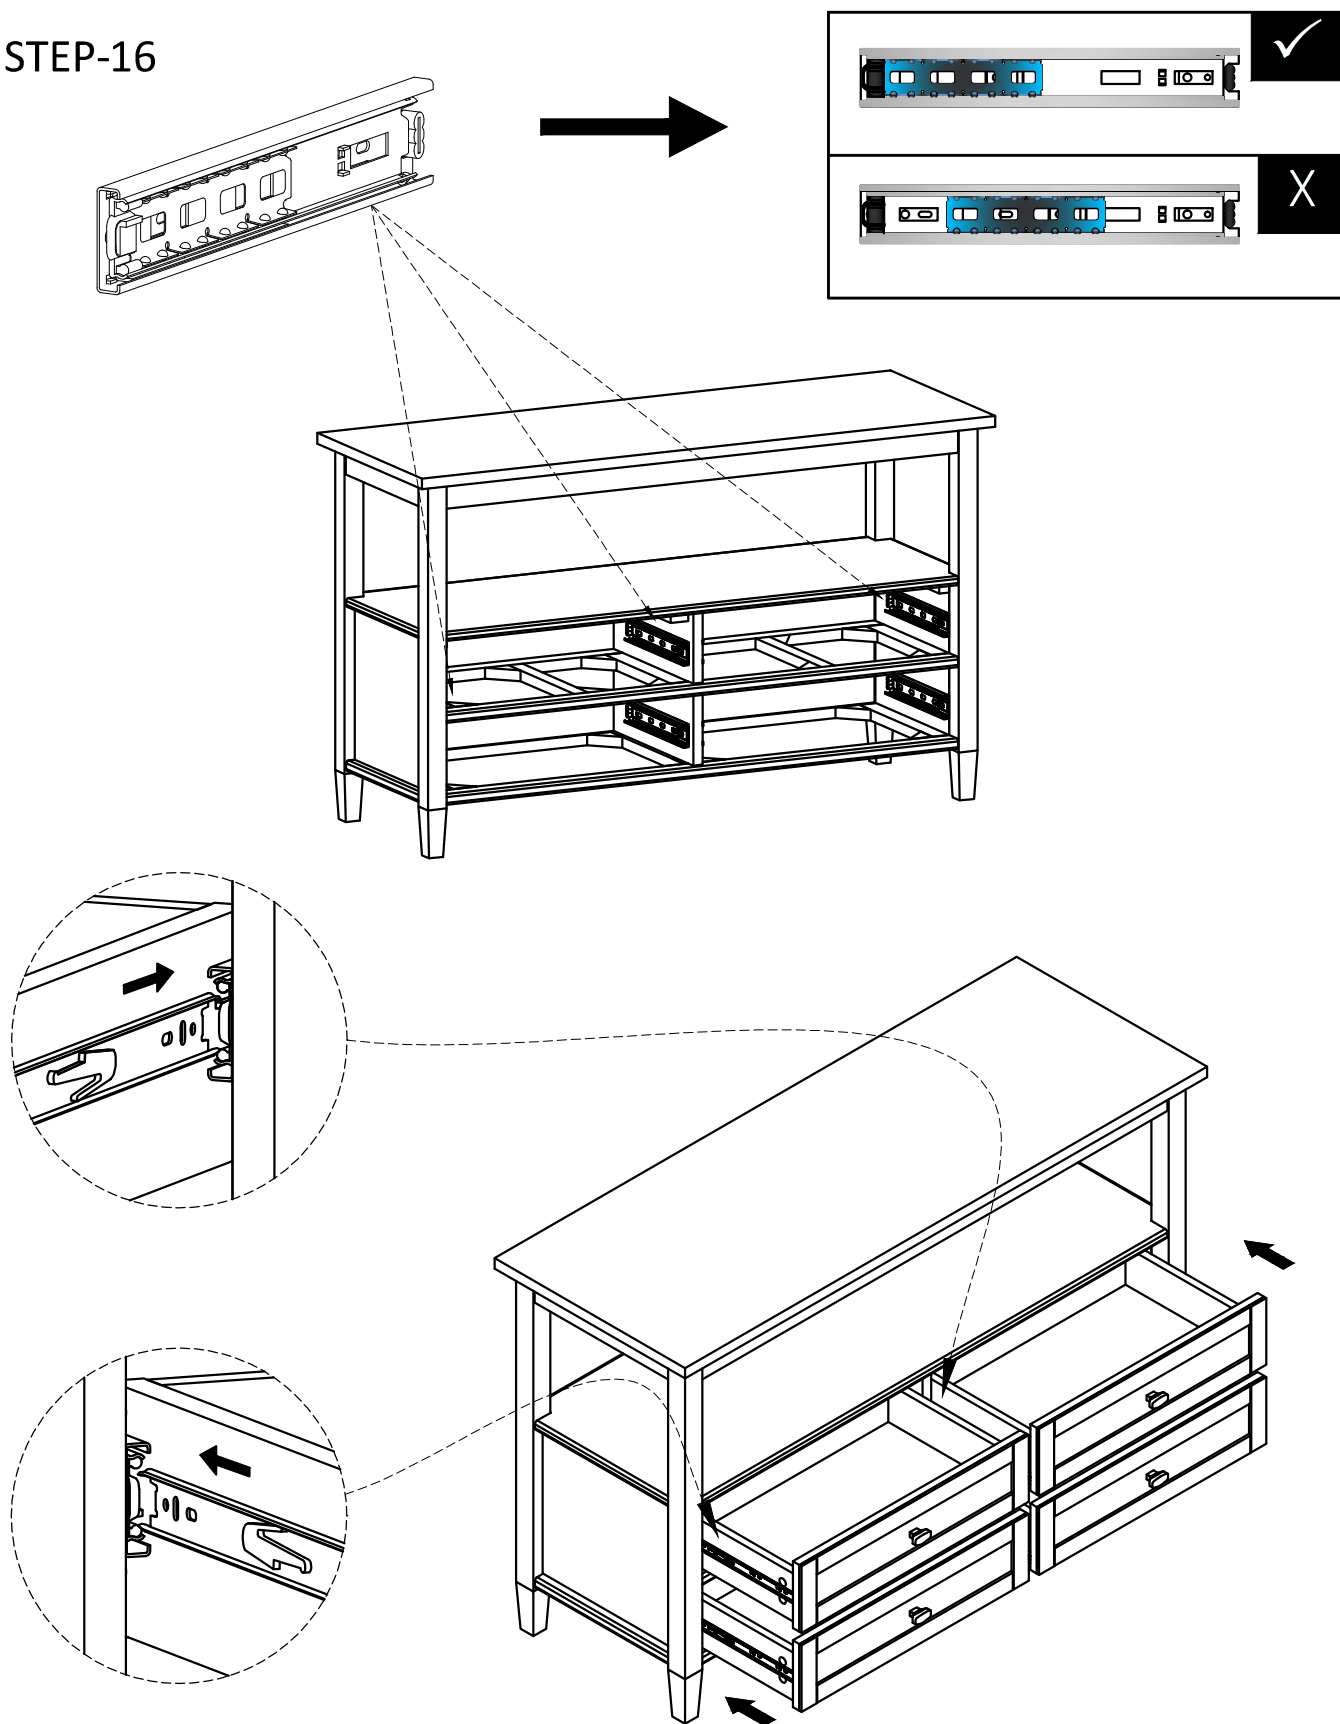 

1. Insert assembled drawers into glides on assembled table.

WARRANTY

Thank you for purchasing a Simpli Home – Wyndenhall – Brooklyn + Max product. These products have been made to demanding, high-quality standards and are guaranteed for domestic use against manufacturing faults for a period of 12 months from the date of purchase. This warranty does not affect your statutory rights.

In case of any malfunction of your product (failure, missing parts, etc.) please contact us at our toll free service line at 1-866-518-0120 ext. 262 from 9 am to 4 pm, Monday to Friday, Eastern Standard Time or by email at customerservice@simpli-home.com.

We reserve the right to repair or replace the defective product, at its discretion.

This product is guaranteed for 12 months if used for normal purposes. Any warranty is invalid if the product has been overloaded or subject to neglect, improper use or an attempted repair by other than an authorized agent. Heavy-duty or daily professional/commercial usage are not guaranteed.

Due to continuous product improvement, we reserve the right to change the product specifications without prior notice.