

MS834100TX

Dandridge TV/Media  
Stand-Black

Assembly Instructions



Southern  
ENTERPRISES

For assistance with assembly, contact:  
Southern Enterprises, Inc.  
customer service 1-800-633-5096  
[sservice@seidal.com](mailto:sservice@seidal.com)  
[www.seidal.com](http://www.seidal.com)

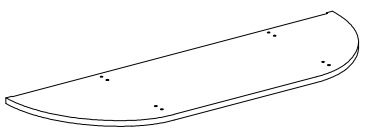 
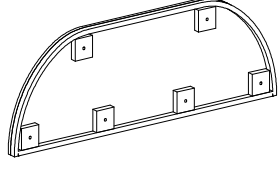 
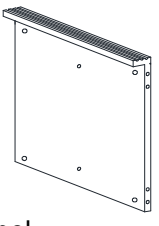 
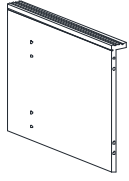 
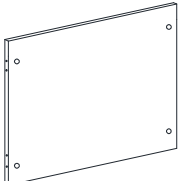 
 
 


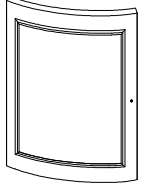 
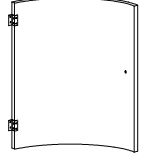 
 
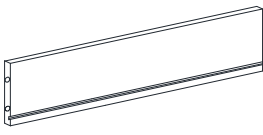 
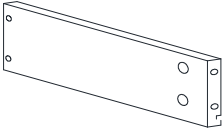 
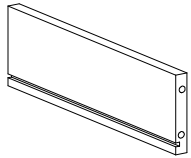 
PO# :

 
 
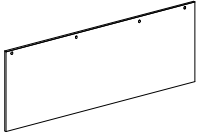 
 
 
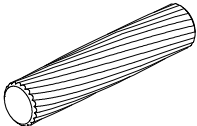 
 
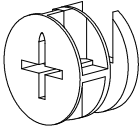 
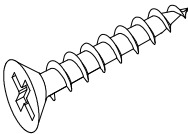 
 
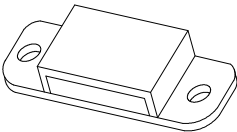 
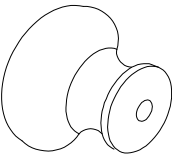 

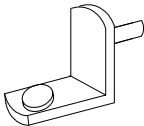 














# Dandridge TV/Media Stand-Black

## Parts list

Please check packaging for all parts and hardware before discarding. Unpack and lay parts on clean, padded surface like carpet or blanket. Check that you have all parts indicated. Call customer service if hardware is missing. Before beginning assembly, carefully study the diagrams below and sort your hardware according to the pictures. Using the incorrect hardware will cause damage.

<b>A</b> Quantity of 1  top panel	<b>B</b> Quantity of 1  bottom panel	<b>C</b> Quantity of 1  left side panel
<b>D</b> Quantity of 1  right side panel	<b>E</b> Quantity of 1  fixed shelf panel	<b>F</b> Quantity of 1  left fixed shelf panel
<b>G</b> Quantity of 1  right fixed shelf panel	<b>H</b> Quantity of 1  right post	<b>I</b> Quantity of 1  left post
<b>J</b> Quantity of 1  left door	<b>K</b> Quantity of 1  right door	<b>L</b> Quantity of 1  adjustable shelf panel
<b>M</b> Quantity of 1  drawer back	<b>N</b> Quantity of 1  drawer side left	<b>O</b> Quantity of 1  drawer side right

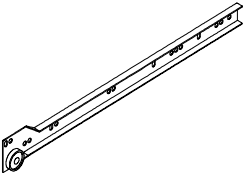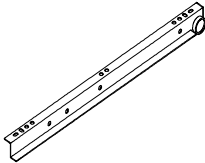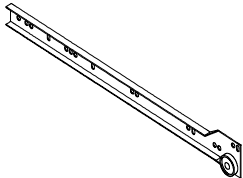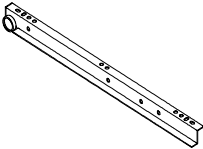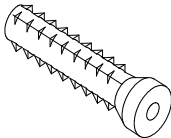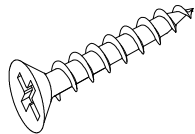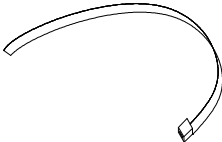            
<b>P</b> <p>Quantity of 1</p>  <p>drawer bottom</p>	<b>Q</b> <p>Quantity of 1</p>  <p>drawer front</p>	<b>R</b> <p>Quantity of 1</p>  <p>upper back panel</p>
<b>S</b> <p>Quantity of 1</p>  <p>lower back panel</p>	<b>T</b> <p>Quantity of 6</p>  <p>leg</p>	
<b>1</b> <p>Quantity of 26</p>  <p>wood dowel Dia 5/16" x 1-3/16"L</p>	<b>2</b> <p>Quantity of 20</p>  <p>cam bolt</p>	<b>3</b> <p>Quantity of 20</p>  <p>cam lock</p>
<b>4</b> <p>Quantity of 4</p>  <p>medium screw: Dia 1/8" x 1"L</p>	<b>5</b> <p>Quantity of 20</p>  <p>pan head screw: Dia 1/8" x 5/8"L</p>	<b>6</b> <p>Quantity of 2</p>  <p>magnet</p>
<b>7</b> <p>Quantity of 4</p>  <p>knob</p>	<b>8</b> <p>Quantity of 4</p>  <p>small bolt</p>	<b>9</b> <p>Quantity of 4</p>  <p>shelf pin</p>

<p><b>10</b></p> <p>Quantity of 24</p>  <p>sticker cover</p>	<p><b>11</b></p> <p>Quantity of 4</p>  <p>bracket</p>	<p><b>12</b></p> <p>Quantity of 12</p>  <p>short screw : Dia 1/8" x 1/2"L</p>
<p><b>13</b></p> <p>Quantity of 1</p>  <p>left female slide</p>	<p><b>14</b></p> <p>Quantity of 1</p>  <p>left male slide</p>	<p><b>15</b></p> <p>Quantity of 1</p>  <p>right female slide</p>
<p><b>16</b></p> <p>Quantity of 1</p>  <p>right male slide</p>	<p><b>17</b></p> <p>Quantity of 4</p>  <p>plastic anchor</p>	<p><b>18</b></p> <p>Quantity of 4</p>  <p>screw : Dia 1/8" x 1-5/8"L</p>
<p><b>19</b></p> <p>Quantity of 4</p>  <p>screw : Dia 1/8" x 5/8"L</p>	<p><b>20</b></p> <p>Quantity of 2</p>  <p>plastic strap</p>	
<p><b>Care and Cleaning Instructions:</b> Before using, wipe with a clean, dry cloth. Periodically apply furniture wax to renew the finish. Avoid rubbing or scratching the surface with rough or abrasive objects.</p>		<p>For replacement parts or questions, please call customer service at 1-800-633-5096</p>
<p>Assembly Tool Required No.2 Phillips Screwdriver (Not included)</p>		

**Tool List: 3/16" drill bit, drill, tape measure and pencil.**
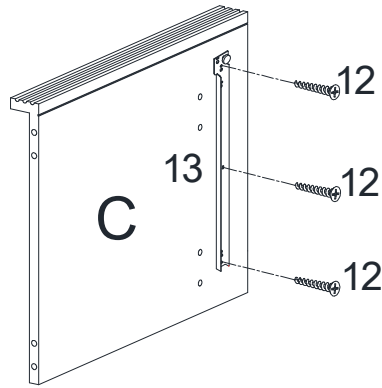 
# Dandridge TV/Media Stand-Black


## Assembly Instructions



Attach female slide left (13) to left side panel (C) with short screws (12).

Tighten screws with phillips screwdriver.

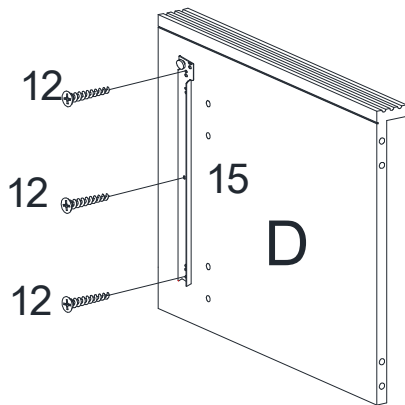 
**Figure 1**



Attach female slide right (15) to right side panel (D) with short screws (12).

Tighten screws with phillips screwdriver.

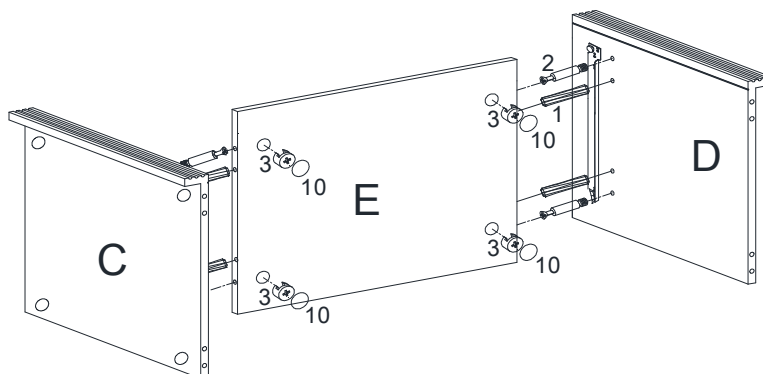 **Figure 2**




Insert cam locks (3) into holes on fixed shelf panel (E). Screw cam bolts (2) into holes on left side panel (C). Attach left side panel (C) to fixed shelf panel (E) by inserting wood dowels (1) and cam bolts (2) into corresponding holes until left side panel (C) and fixed shelf panel (E) meet.

Tighten by rotating cam locks (3) clockwise with phillips screwdriver.

Repeat with right side panel (D)


Cover cam lock holes with sticker covers(10)

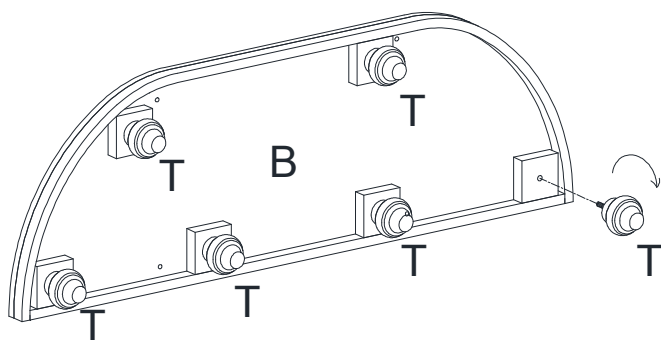 **Figure 3**



Attach legs (T) to assembled unit tightening by hand.

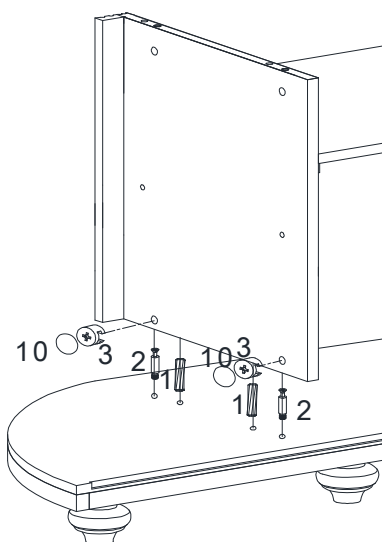 **Figure 4**




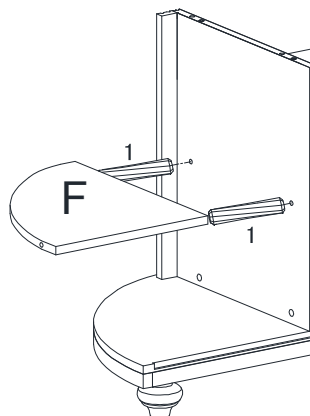 Insert cam locks (3) into holes on assembled unit. Screw cam bolts (2) into holes on bottom panel (B). Attach assembled unit to bottom panel (B) by inserting wood dowels (1) and cam bolts (2) into corresponding holes until assembled unit and bottom panel (B) meet.

Tighten by rotating cam locks (3) clockwise with phillips screwdriver.


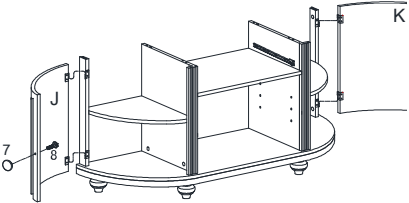 
Cover cam lock holes with sticker covers (10).

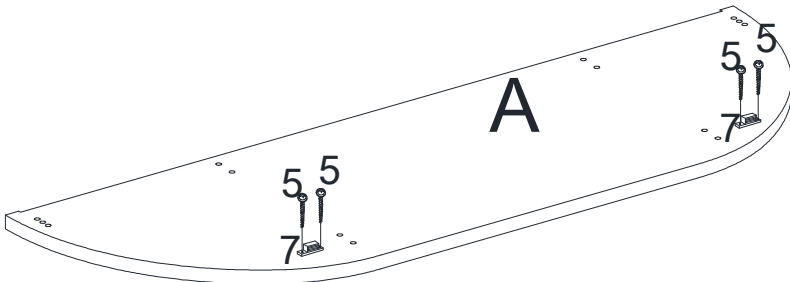 
**Figure 5**



Insert wood dowels (1) into holes on assembled unit and attach two side fixed shelf panels (F) and (G).

**Figure 6**
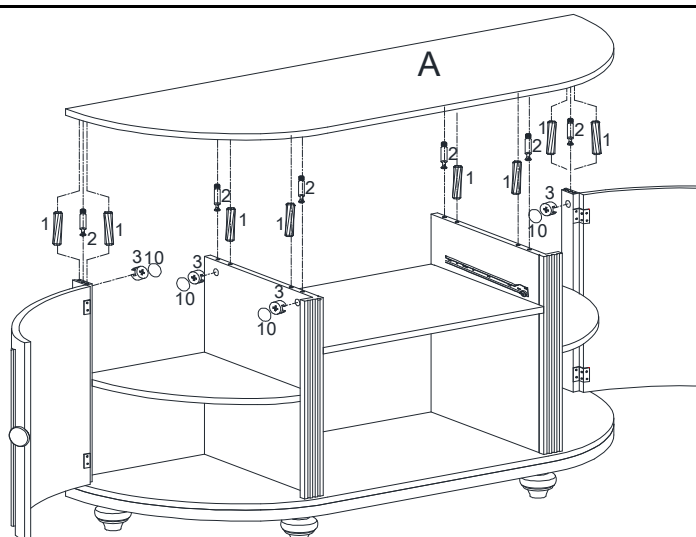 
<p><b>Figure 7</b></p>	<p>Insert cam locks (3) into holes on post (H) and (I). Screw cam bolts (2) into holes on assembled unit. Attach the two posts (H) and (I) to assembled unit by inserting wood dowels (1) and cam bolts (2) into corresponding holes until posts (H), (I), and assembled unit meet.</p> <p>Tighten by rotating cam locks (3) clockwise with phillips screwdriver.</p> <p>Cover cam lock holes with sticker covers (10)</p>
 <p><b>Figure 8</b></p>	<p>Attach the two doors (J) and (K) to assembled unit by inserting the pre-installed female hinge on the doors to the pre-installed male hinge on posts (H) and (I).</p> <p>Attach handles (7) to the doors with small bolts (8).</p> <p>Tighten small bolts (8) with phillips screwdriver.</p>
 <p><b>Figure 9</b></p>	<p>Attach magnets (7) to top panel (A) with pan head screws (5)</p> <p>Tighten screws with phillips screwdriver.</p>




Insert cam locks (3) into holes on assembled unit. Screw cam bolts (2) into holes on top panel (A). Attach top panel (A) to assembled unit by inserting wood dowels (1) and cam bolts (2) into corresponding holes until top panel (A) and assembled unit meet.

Tighten by rotating cam locks (3) clockwise with phillips screwdriver.

Cover cam lock holes with sticker covers(10)

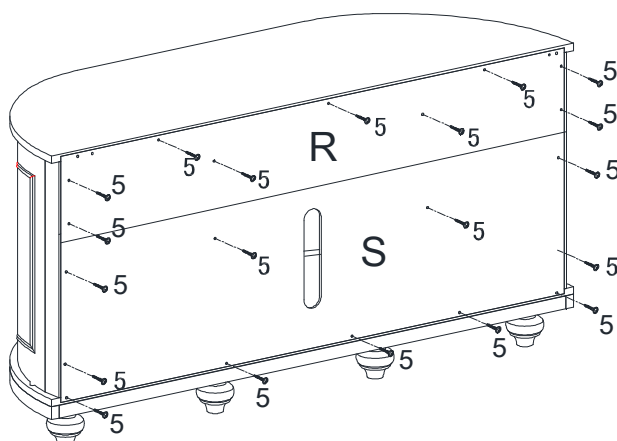 
**Figure 10**



Attach upper back panel (R) and lower back panel (S) to assembled unit with pan head screws (5)

Tighten screws with phillips screwdriver.

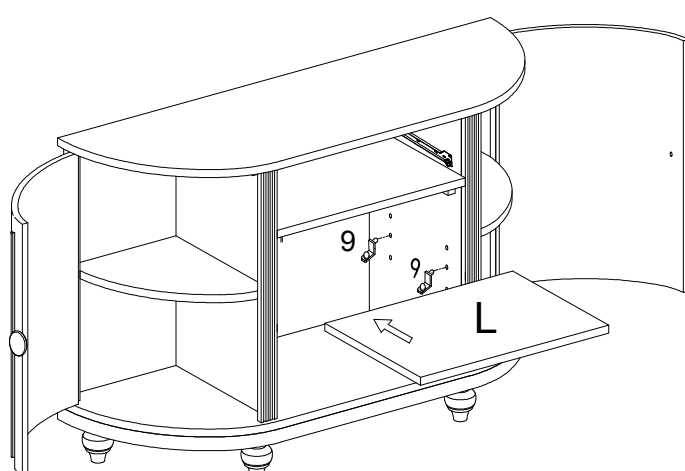 **Figure 11**




Insert shelf pins (9) into holes inside the assembled unit.

Place adjustable shelf (L) on shelf pins as shown.

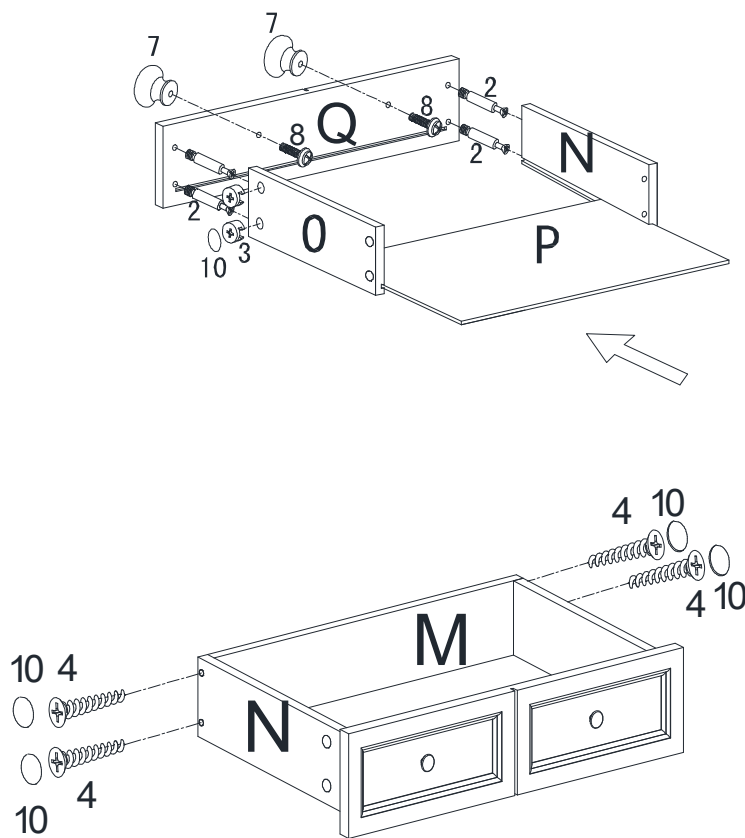 **Figure 12**





Insert cam locks (3) into holes on drawer side panel left (N) and drawer side panel right (O), screw cam bolts (2) into holes on drawer front panel (Q). Attach the drawer side panel left (N) and drawer side panel right (O) to drawer front panel (Q) making sure the grooves align.

Tighten cam locks (3) by turning clockwise with phillips screwdriver.


Cover cam lock holes with sticker covers(10)

Insert the drawer bottom panel (P) into inner grooves of drawer side panels (O), (N), and drawer front panel (Q).

Use medium screws (4) to connect the drawer back panel (M) to the drawer side panels. Tighten screws with phillips screwdriver.

Cover all holes with sticker covers (10).

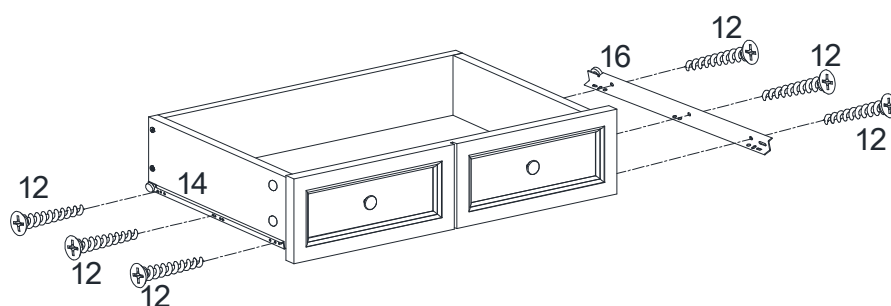 
**Figure 13**



Attach left male slide (14) and right male slide (16) to assembled unit with short screws (12).


Tighten screws with phillips screwdriver.

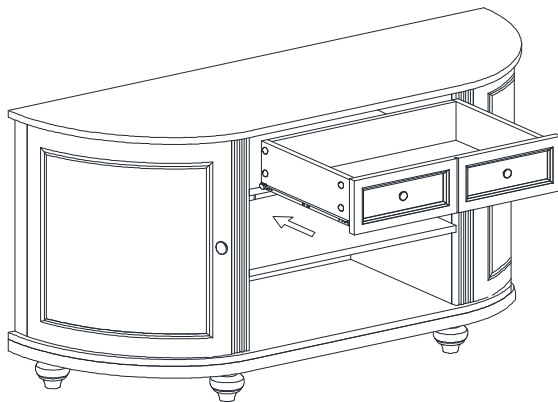 **Figure 14**



Slide assembled drawer into assembled unit. Make sure the drawer's male slides are correctly placed into side panel's female slides. Make sure the drawer slides smoothly.

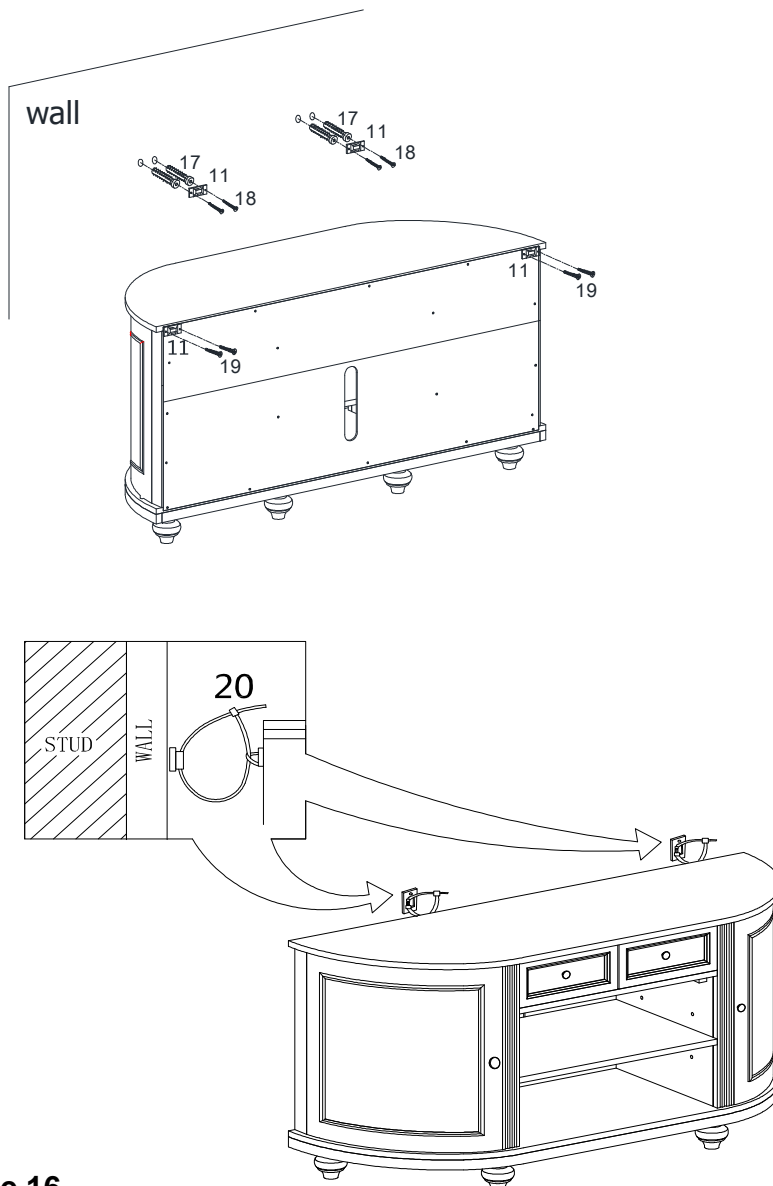 **Figure 15**



Attach bracket (11) to back panel using screws (19). Tighten screws (19) using phillips screwdriver.


Mark two desired locations on the wall and drill two 3/16" holes. Insert plastic anchors (17) into the two holes on the wall as shown, you may need a hammer to do so.

Then attach the brackets (11) to the wall using screws (18). Tighten screws (18) using phillips screwdriver.

Move this item close to the wall and tie the brackets (11) together with plastic straps (20) as shown in diagram.

**Anti-tipping hardware must be used for this product to avoid tipping and injury.**

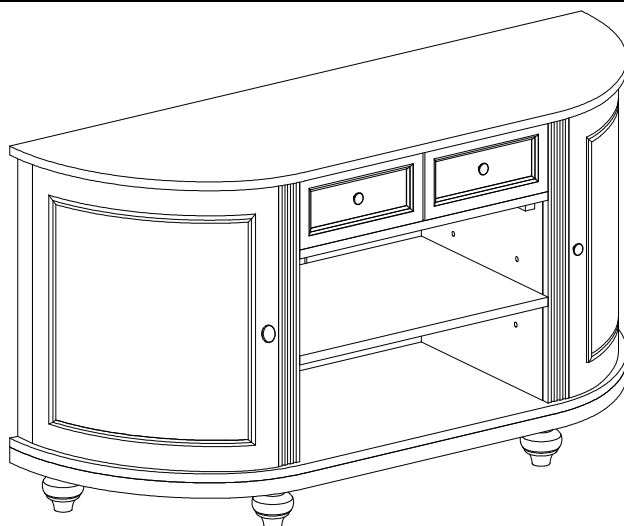 **Figure 16**



Your Danridge TV/Media stand is ready to use

**Figure 17**

## Parts Replacement Form

### Customer Information

Name \_\_\_\_\_

Address \_\_\_\_\_

City/State/Zip Code \_\_\_\_\_

Phone Number \_\_\_\_\_

Please indicate where you purchased this item: Store/Website/Catalog

\_\_\_\_\_

Please indicate color/size/style number:

\_\_\_\_\_

Style No	Parts Letter	Parts Description	Quantity Needed
----------	--------------	-------------------	-----------------

_____	_____	_____	_____
-------	-------	-------	-------

_____	_____	_____	_____
-------	-------	-------	-------

_____	_____	_____	_____
-------	-------	-------	-------

Please immediately examine this product carefully. Any request for missing parts or damage replacement must be received within 90 days of your receipt of the product. Replacement, if available, will be honored within this time frame. Parts will not be available for items arriving fully assembled. We do not recommend modifying product(s) and we are not responsible for any damages due to product modification(s). If damages or missing parts are not reported within 90 days of your receipt, we are under no obligation to provide parts or replacement merchandise.

Please contact Southern Enterprises at 800-633-5096 or in Dallas 972-869-0111/ 9am – 4pm Mon-Fri Central time if you have product issues or email us at [service@seidal.com](mailto:service@seidal.com). Please ask for customer service representative for issues involving damages or replacement parts. Please ask for technical assistance representative for any issues with product and assembly/construction.

Please contact the retailer that you purchased from for returns.



**Southern**  
ENTERPRISES

Customer Service 1-800-633-5096  
[service@seidal.com](mailto:service@seidal.com)  
Southern Enterprises, Inc.  
600 Freeport Parkway, Suite 200  
Coppell, Texas 75019



## CAUTION

The top shelf is intended for a flat screen television with a maximum overall width of 50" and supports up to 175 lb.

The top shelf is NOT INTENDED for tube televisions.

Each center shelf should not be loaded with more than 20 lb. Each side shelf should not be loaded with more than 15 lb.

DO NOT EXCEED RECOMMENDED LOAD. Use with products heavier than the maximum sizes and weights indicated may result in instability causing possible injury.

This unit contains a permanent warning sticker located on underside of top shelf or inside drawer.

Do not allow children under 16 years to move the cart.

Model: MS834100TX  
Dandridge TV/Media Stand  
Southern Enterprises, Inc  
600 Freeport Parkway,  
Suite 200 Coppell, Texas, 75019  
Manufacture Date: 01/20/2014