

INSTALLATION

 
 
Product Manual

Version: 210283-01-24A-AA




IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

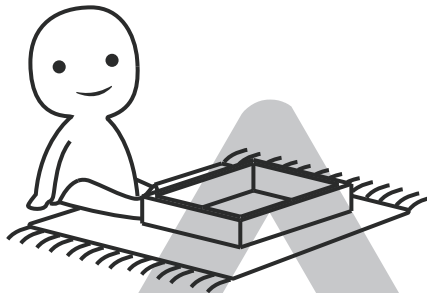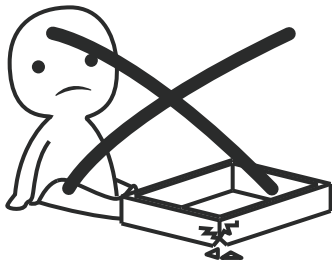



AVOID SCRATCHES!

 In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.

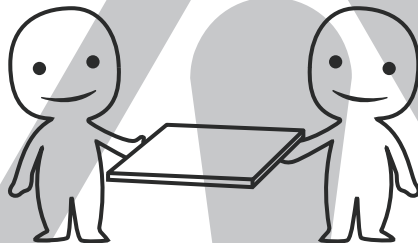

IMPROVE EFFICIENCY !

  Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

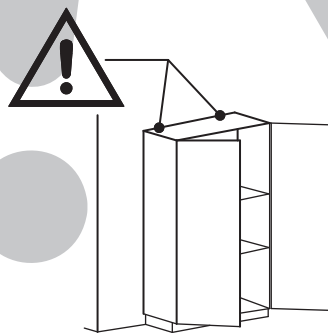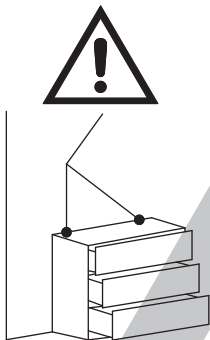

ANTI-TOPPLE WARNING !


Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !





It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

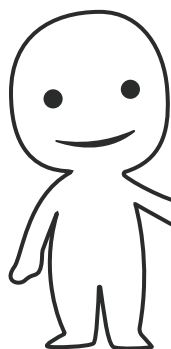


Please prepare the following tools

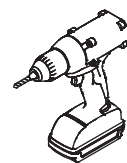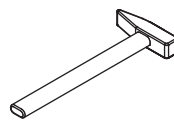   

When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

 A x 36



CRA0635A

B x 36




CRB1595A

C x 26




CRF0630A

 D x 8




E x 13

 


CRC0540A

 G x 4




DGA861A

 H x 1

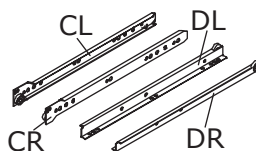


WX0812A

 
I x 40



CRD3512A

  J x 4

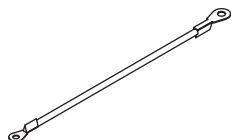

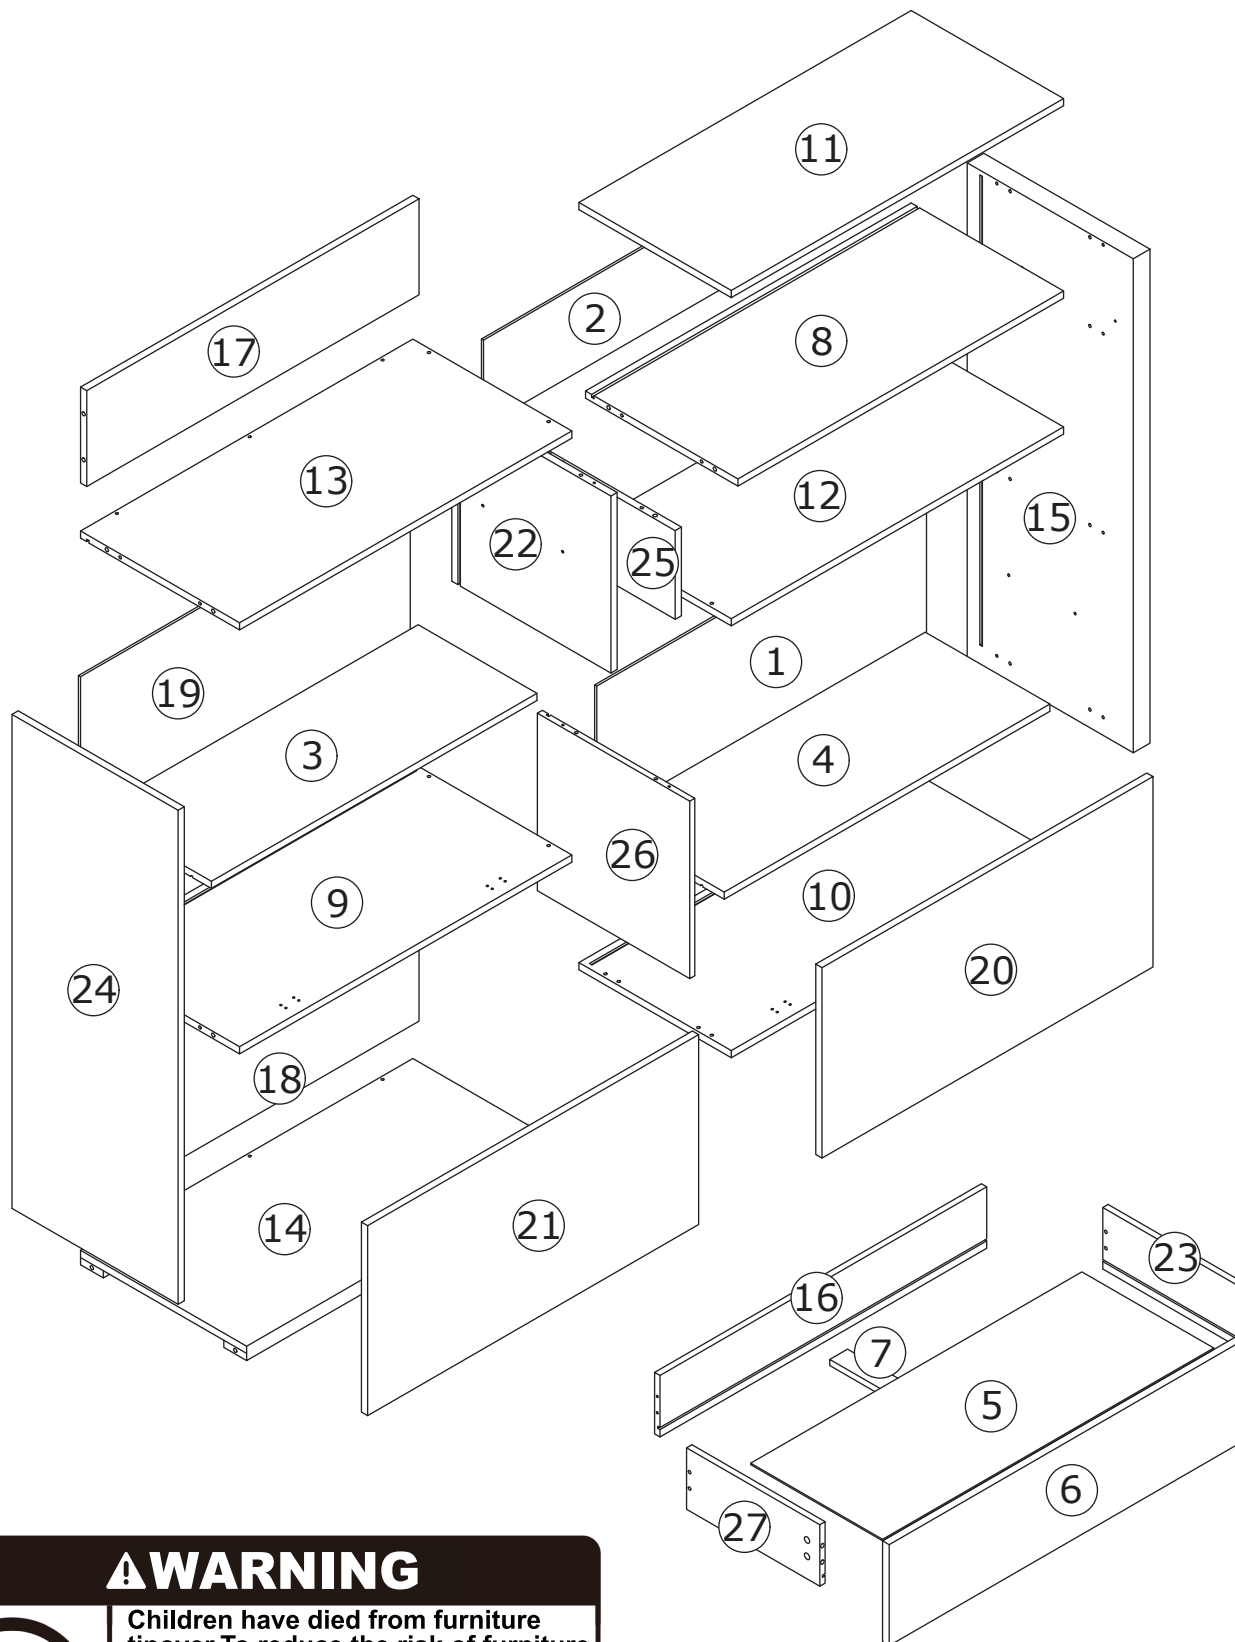


⚠ WARNING



Children have died from furniture tipover. To reduce the risk of furniture tipover:



- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

 *This is a permanent label.
Do not remove!*



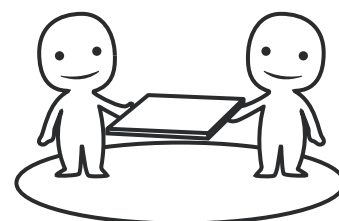


ASSEMBLED BY 2 ADULTS

 
 
1

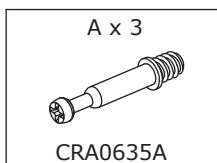

 
 
 
Screw eccentric rod(A) into panel 13 as shown.

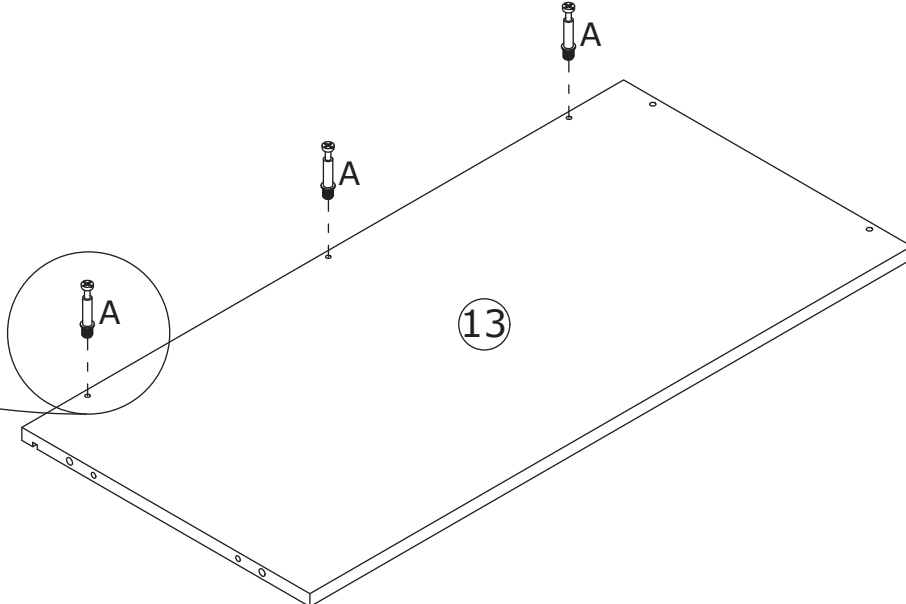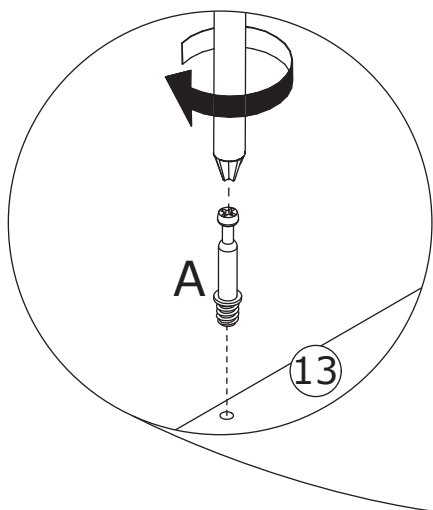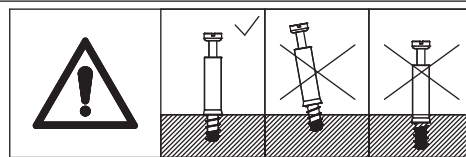



2

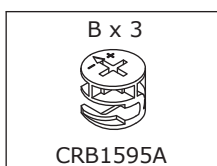  

  
 
Connect panel 13 with panel 17,
add cam lock(B) into panel 17
and turn clockwise to tighten
as shown.

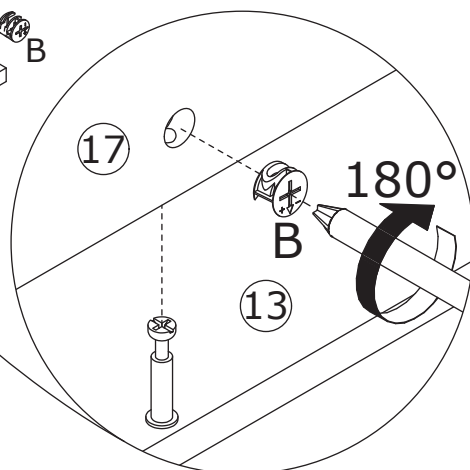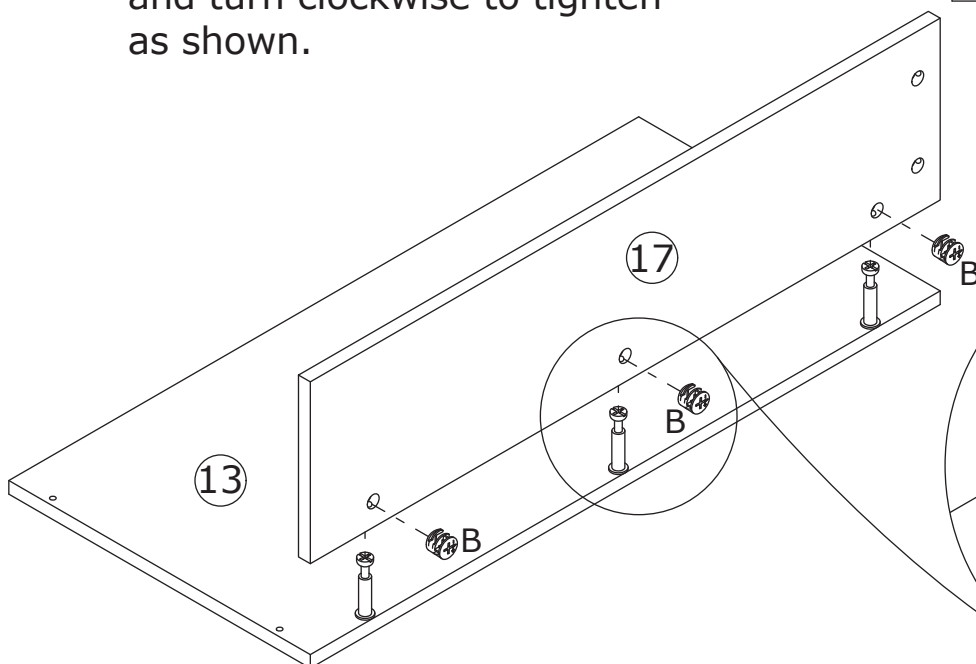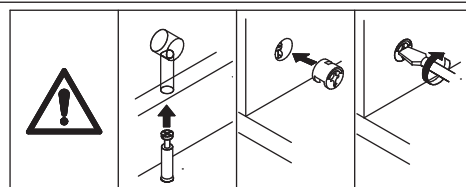





3

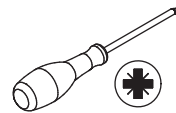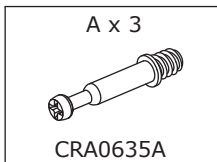 

  Screw eccentric rod(A) into panel 9 at first.

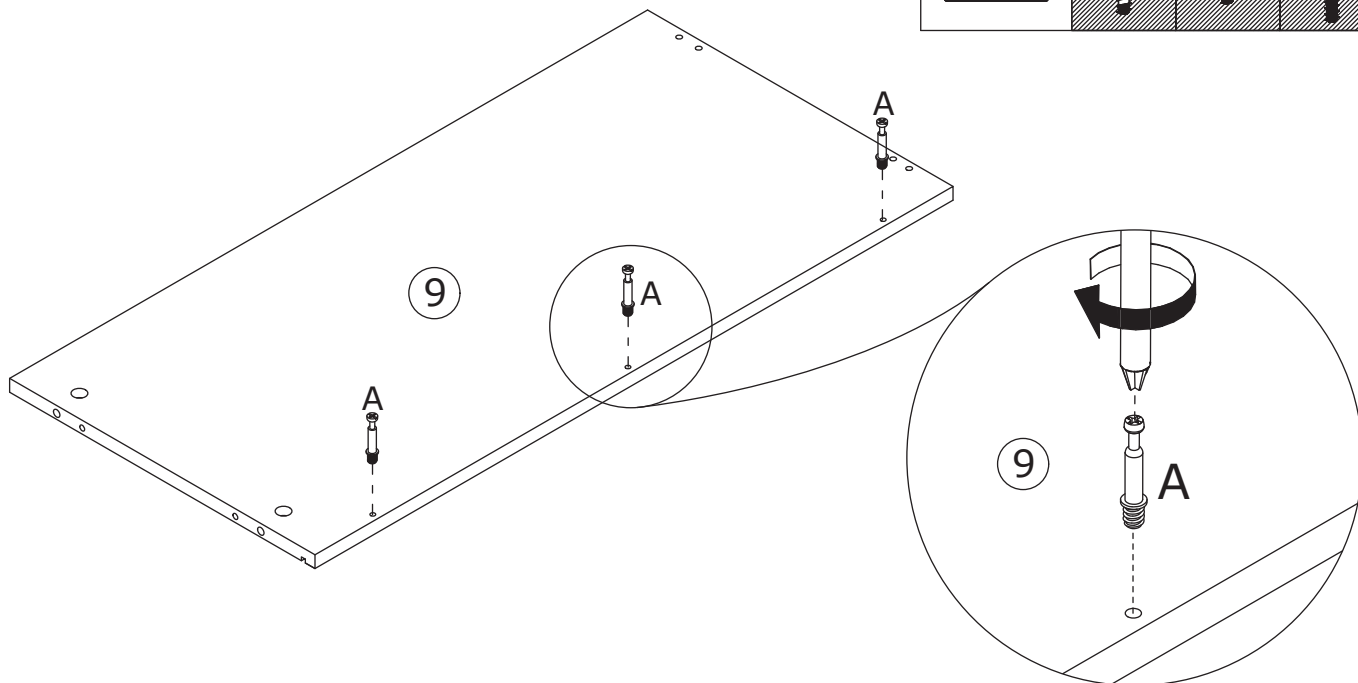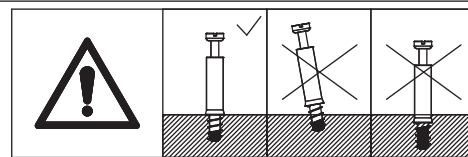

4

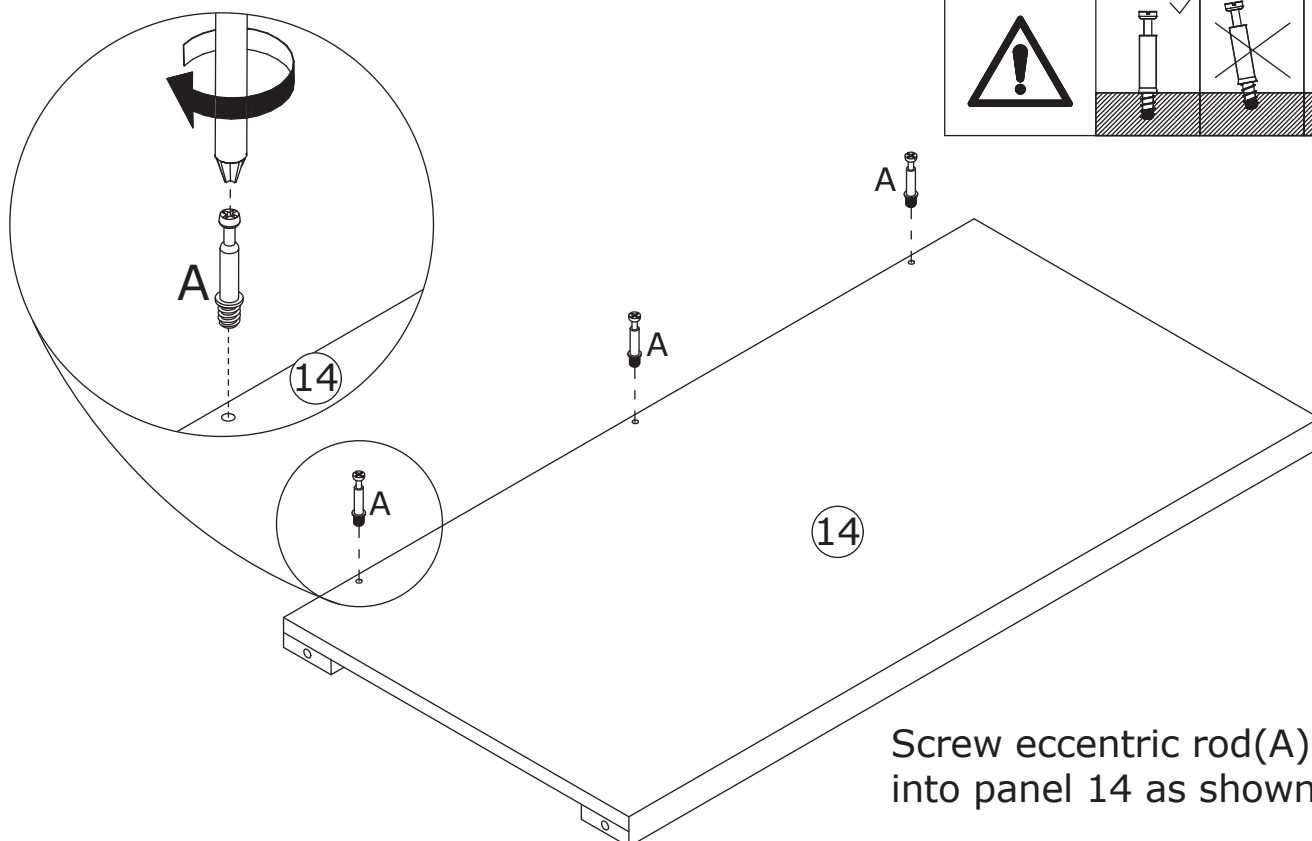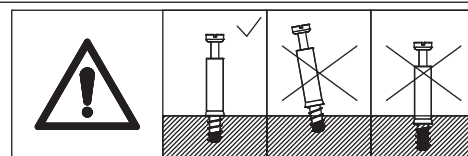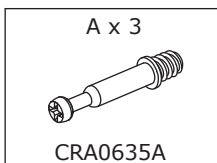    


Screw eccentric rod(A) into panel 14 as shown.

5



B x 6







 
CRB1595A



 
 
Connect panel 14,18 and 9, add cam lock(B) into panel 18 and turn clockwise to tighten as shown.

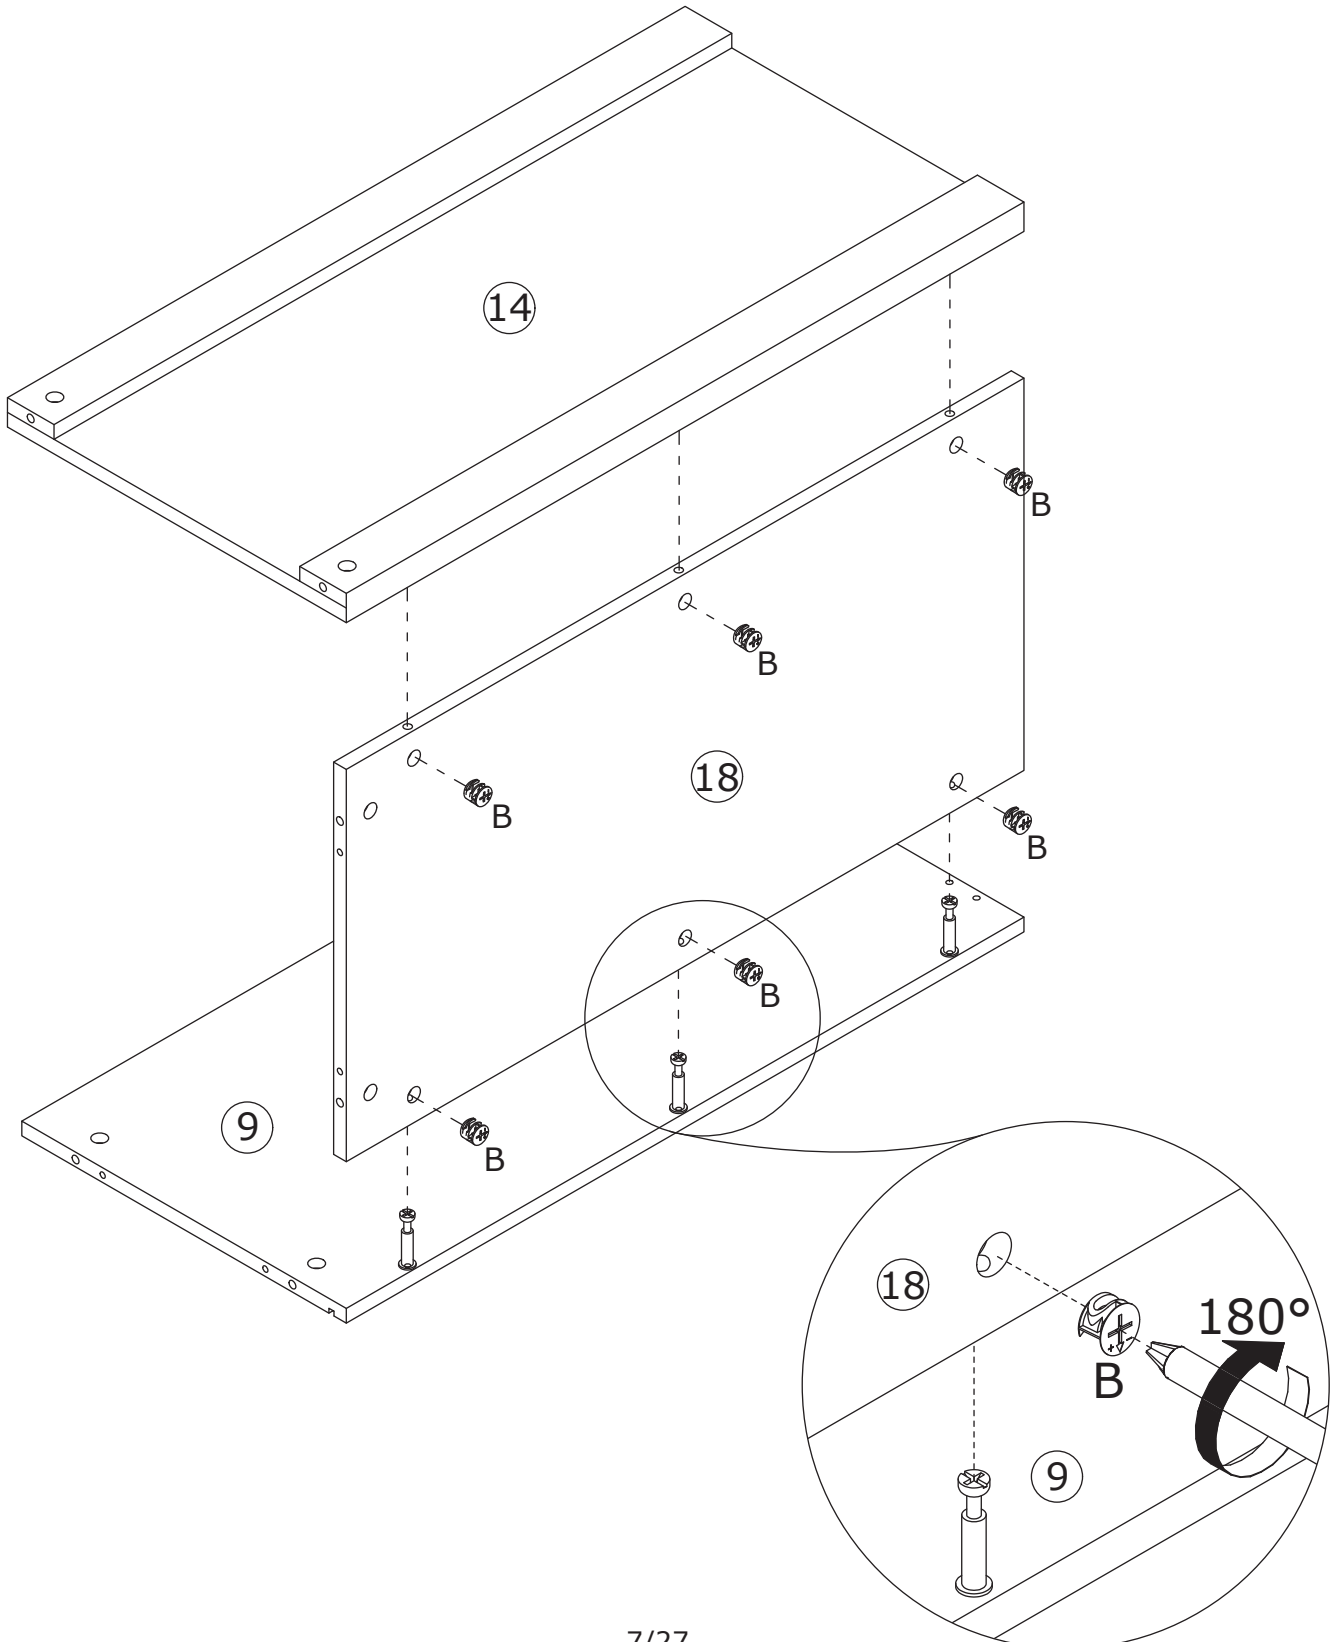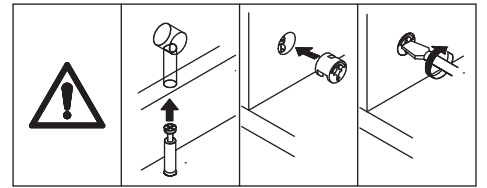

6

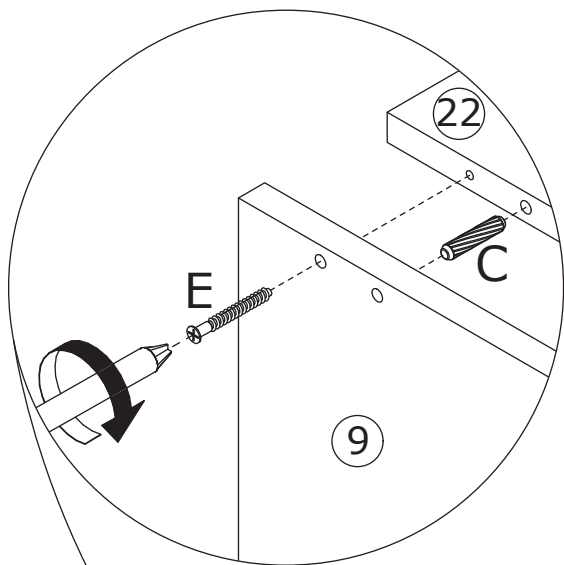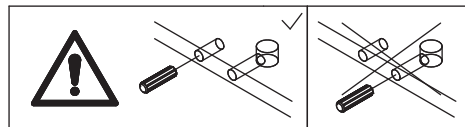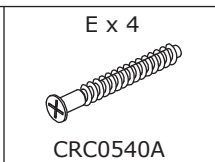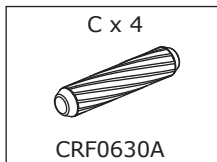     


  Connect the component in step 2 and step 5 to panel 22 using wooden dowel(C) and fix with screw(E) as shown.

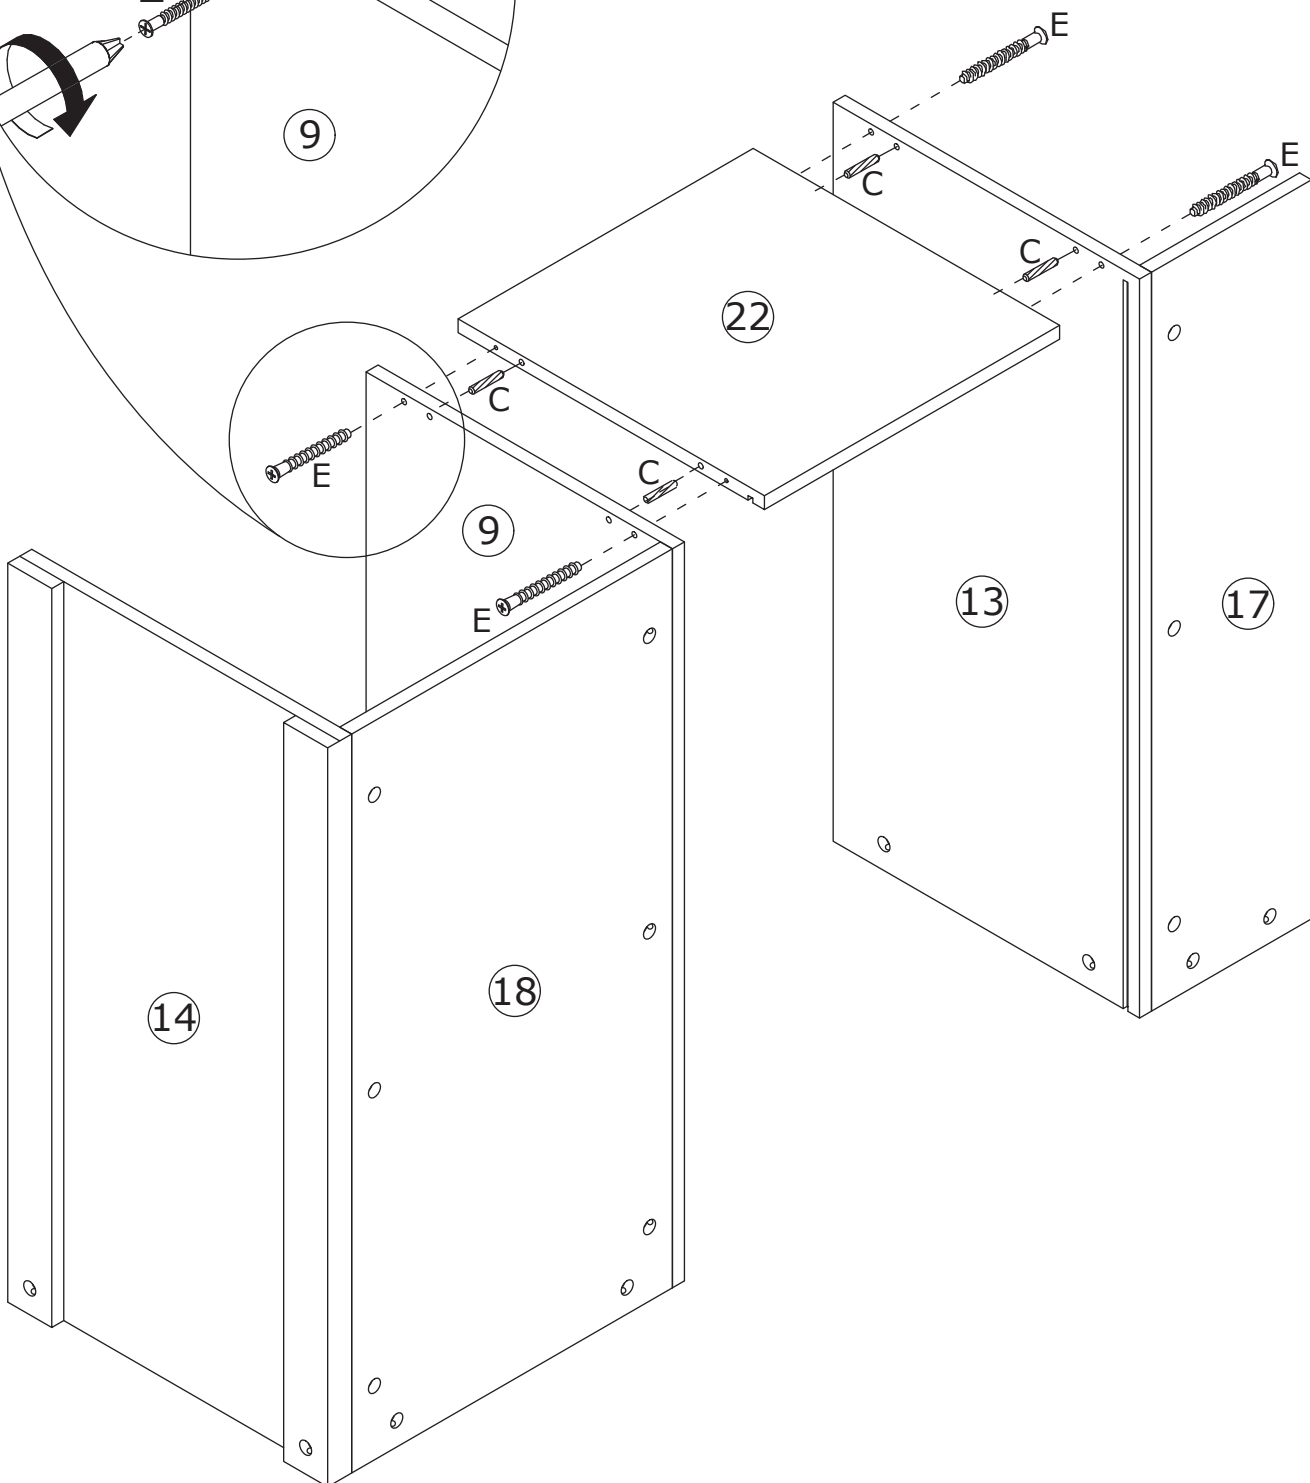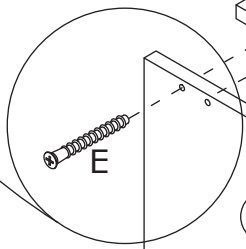




7

 Flip the whole upside down.
Insert panel 19 into grooves
of panel 9 and 13 as shown

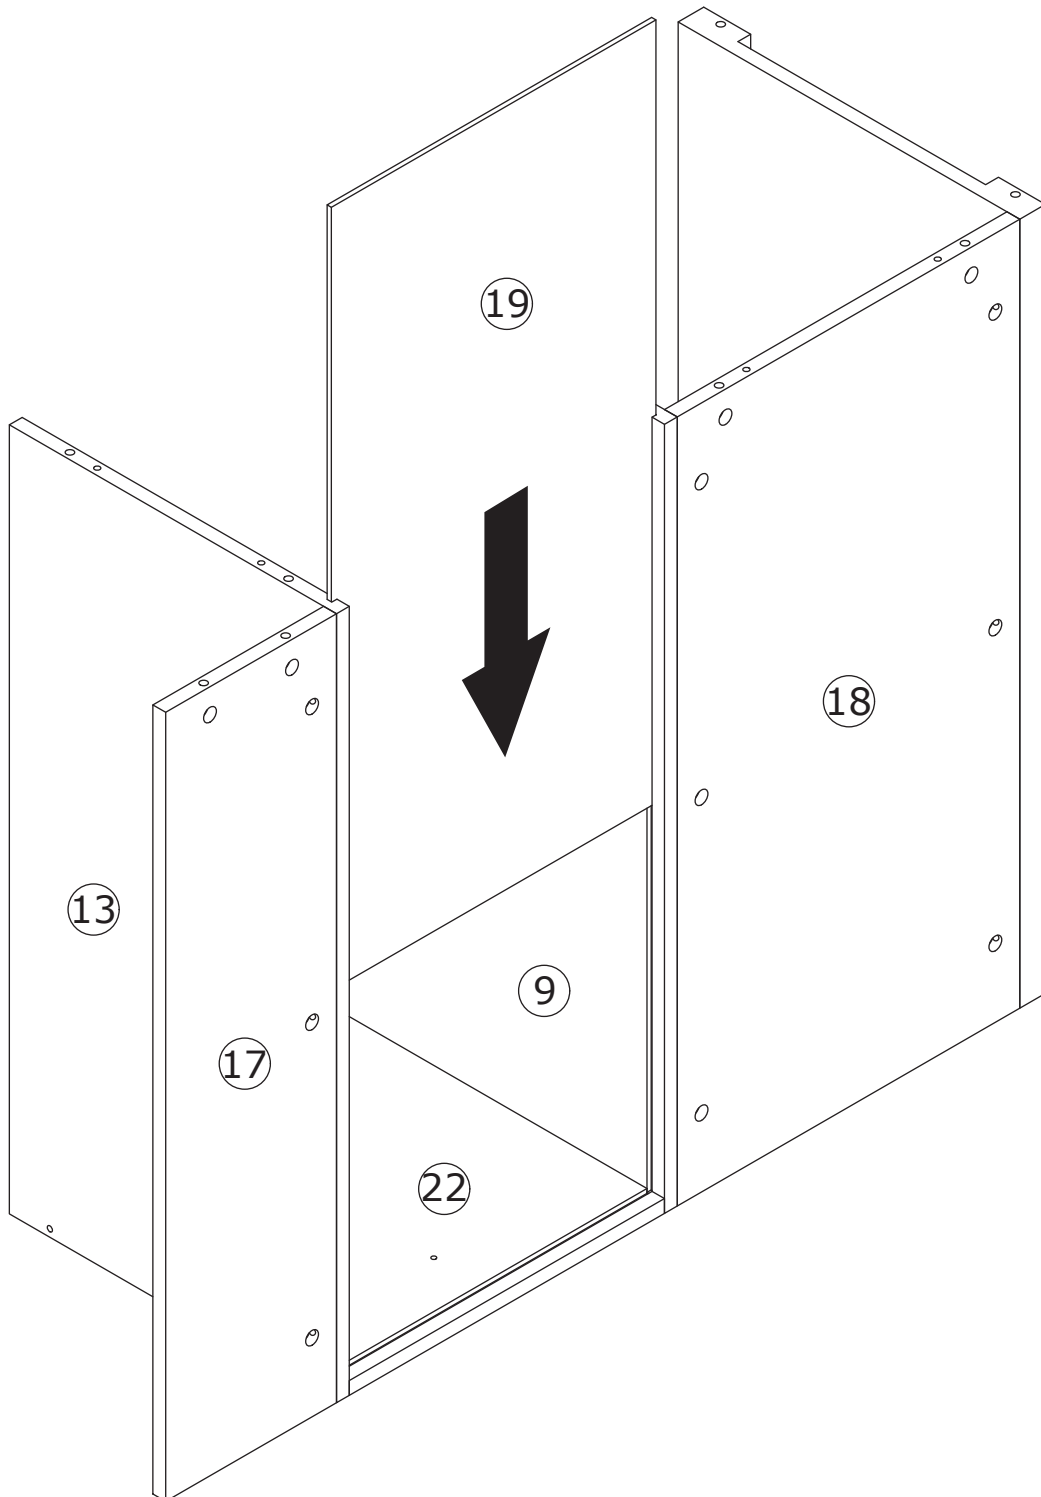


8

   A x 10
CRA0635A

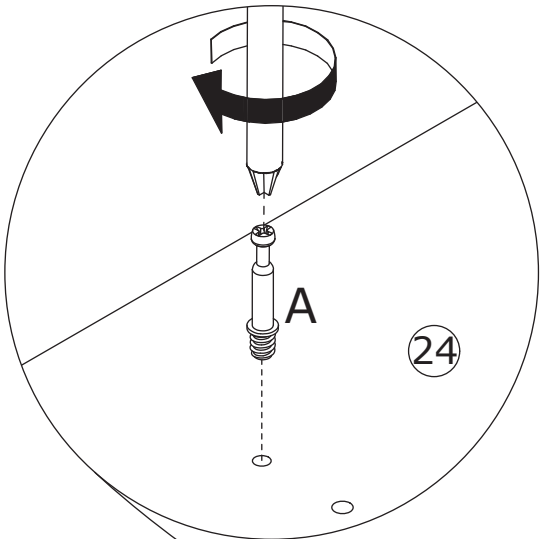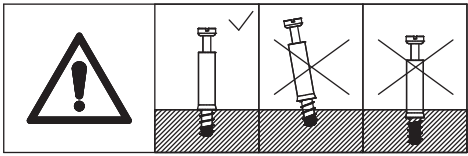

 Screw eccentric rod(A)
into panel 24 as shown.

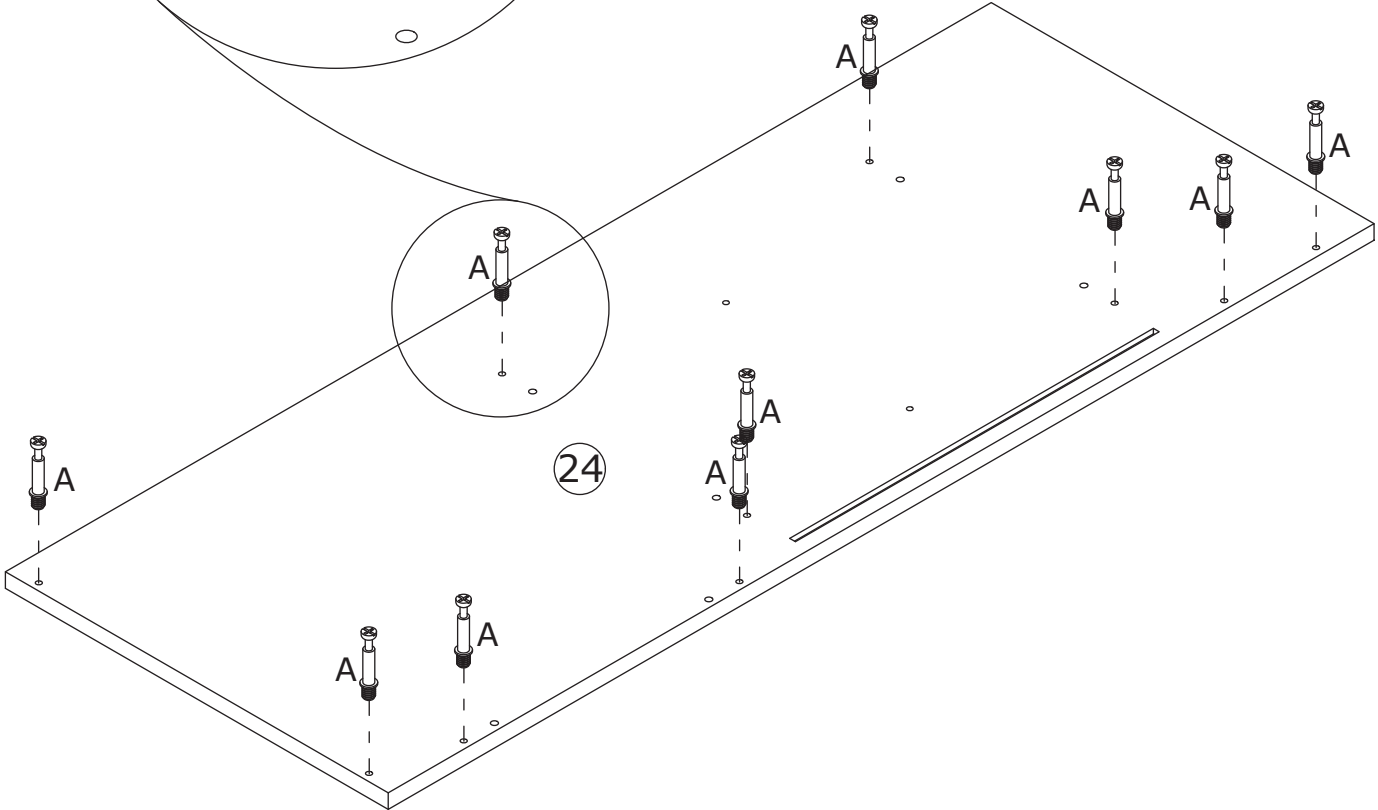


9

B x 10




CRB1595A


 
C x 6




CRF0630A

 

  
Attach panel 24 to the component in step 7 using wooden dowel(C).
Add cam lock(B) into panel 9,13,14,17 and 18 and turn clockwise to tighten as shown.

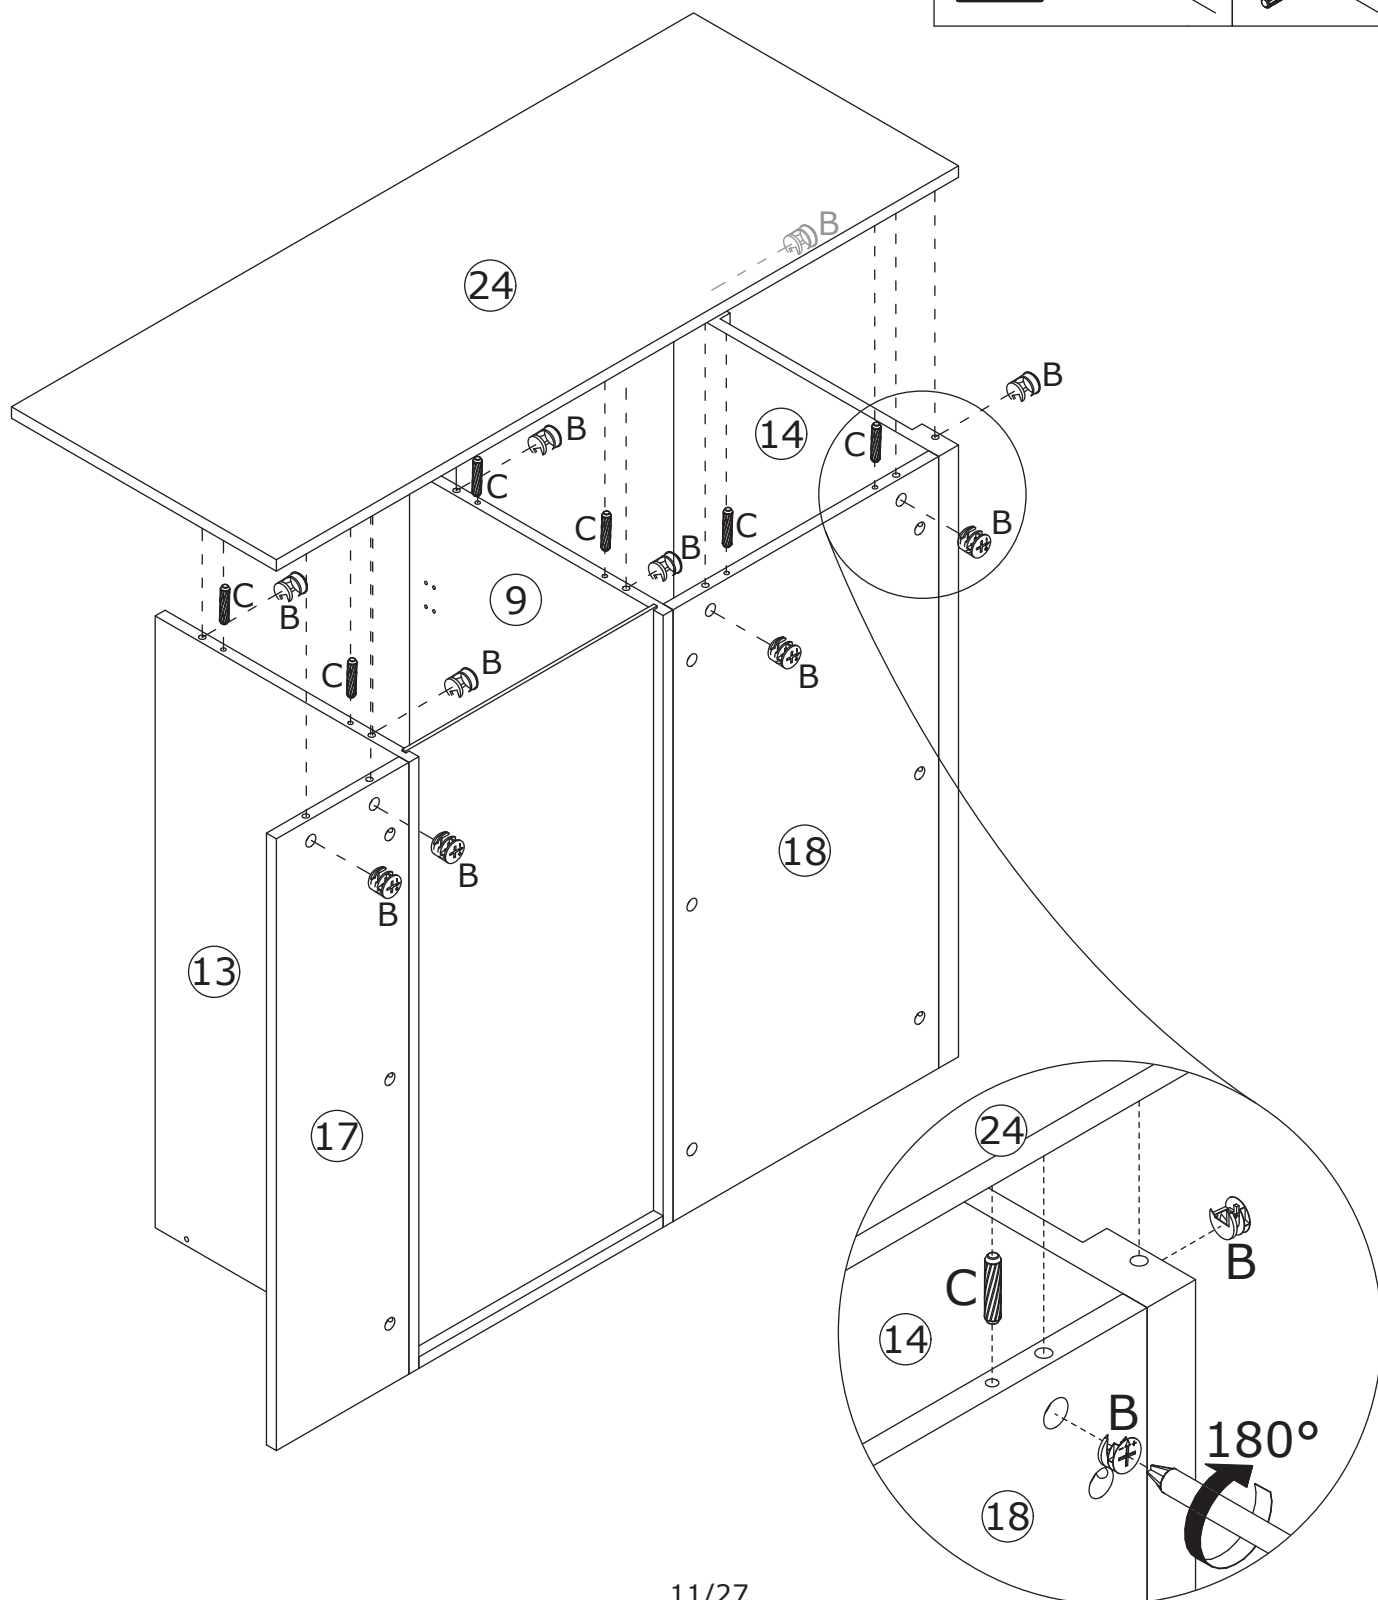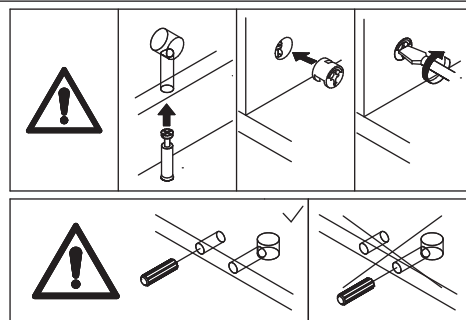

10

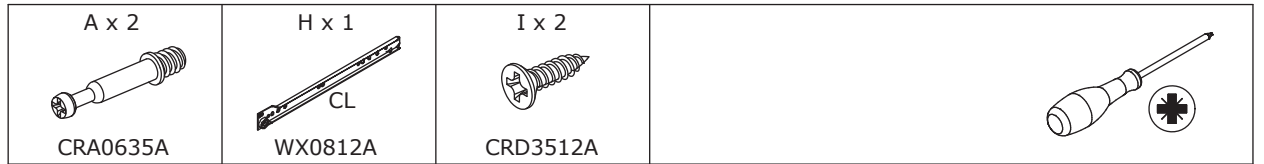 

 
Screw eccentric rod(A) into panel 25 at first, fix rail H(CL) into panel 25 with screw(I) as shown.

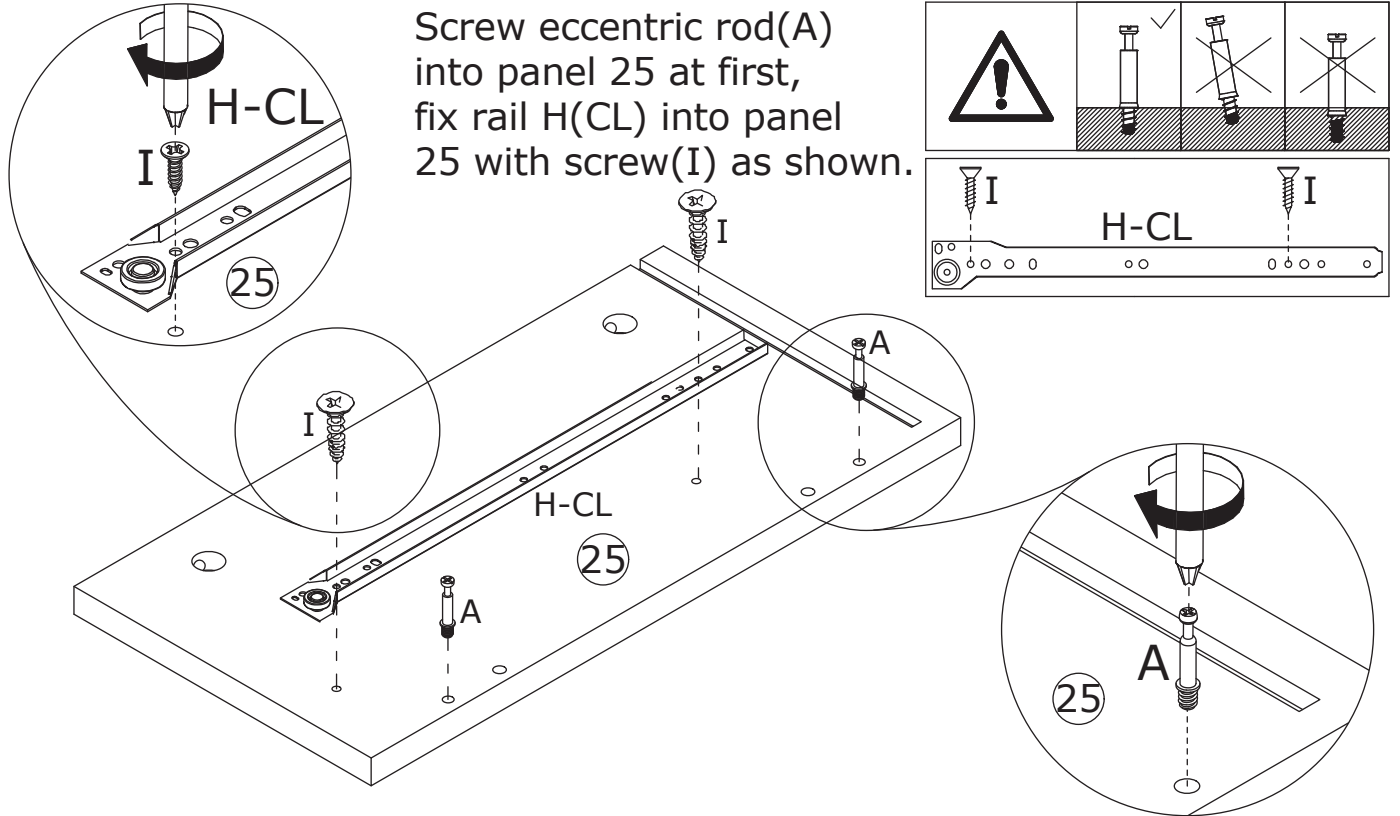




11




 
Screw eccentric rod(A) into panel 11 at first.

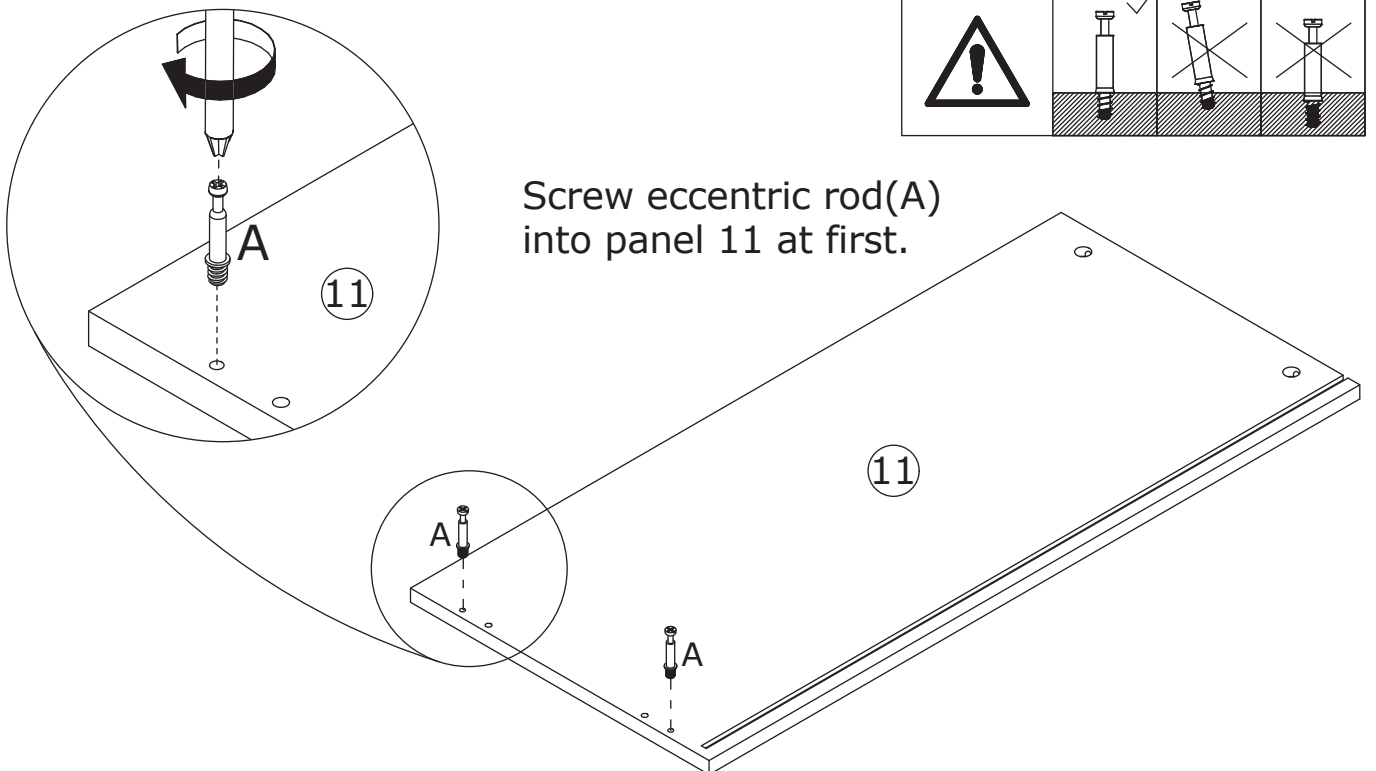

12

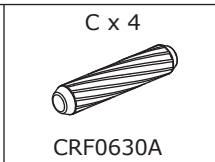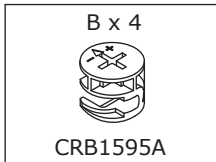   


  Connect panel 11 and 8 to panel 25 with wooden dowel(C), add cam lock(B) into panel 8 and 25 then turn clockwise to tighten as shown.

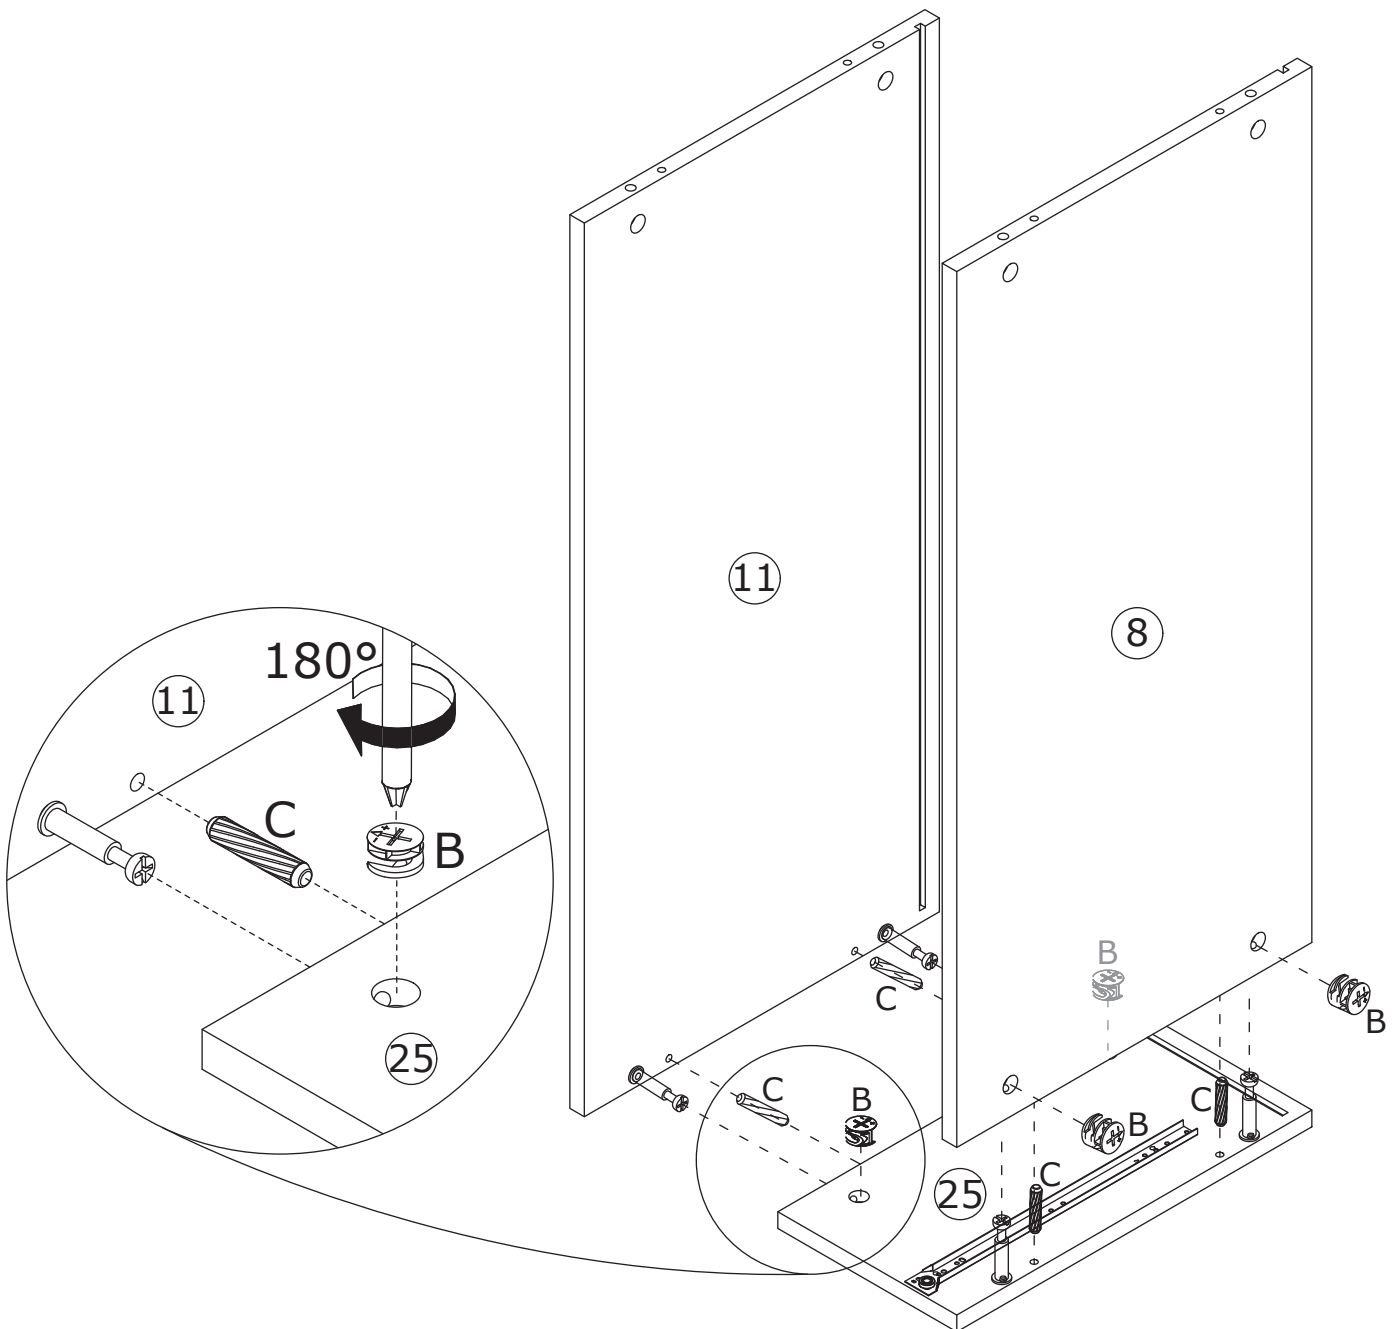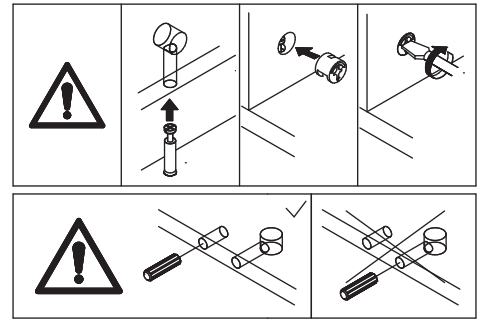


13

 Insert panel 2 into grooves
of panel 8 and 11 as shown.

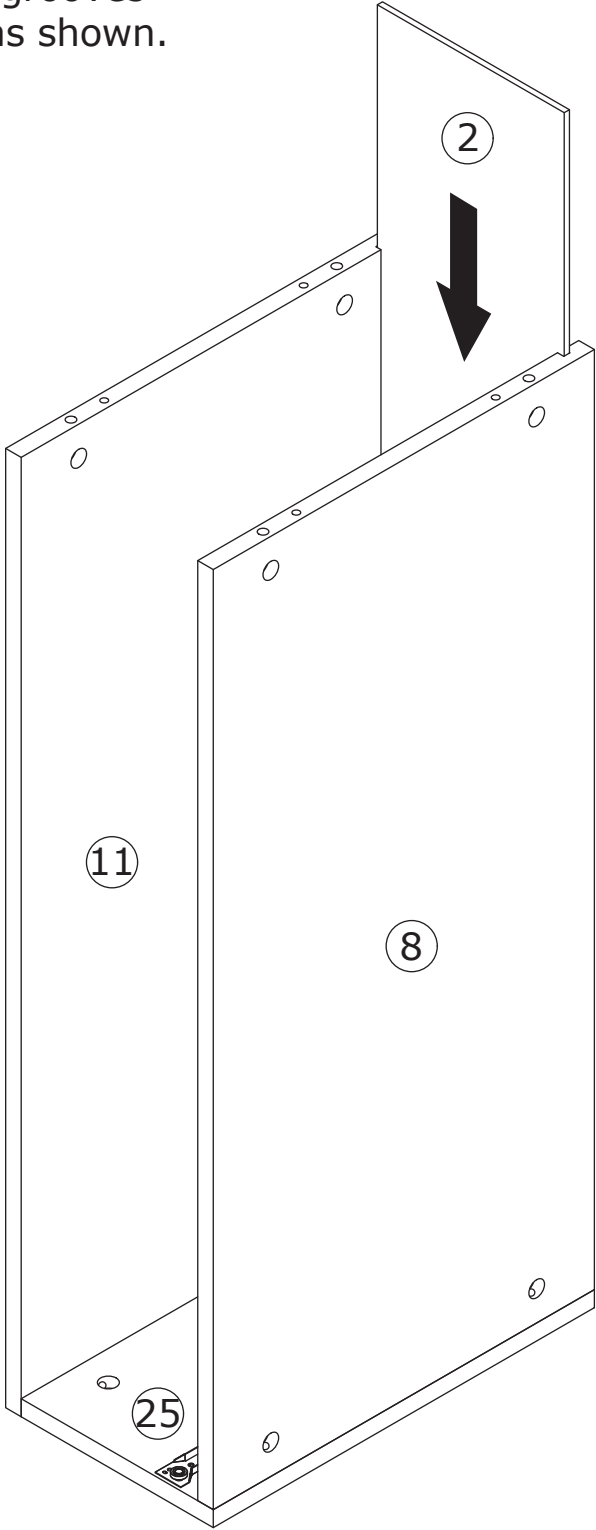


14

 C x 4






CRF0630A

 
E x 4



CRC0540A

   


 Connect panel 10 and 12 to panel 26 with wooden dowel(C), then fix with screw(E) as shown.

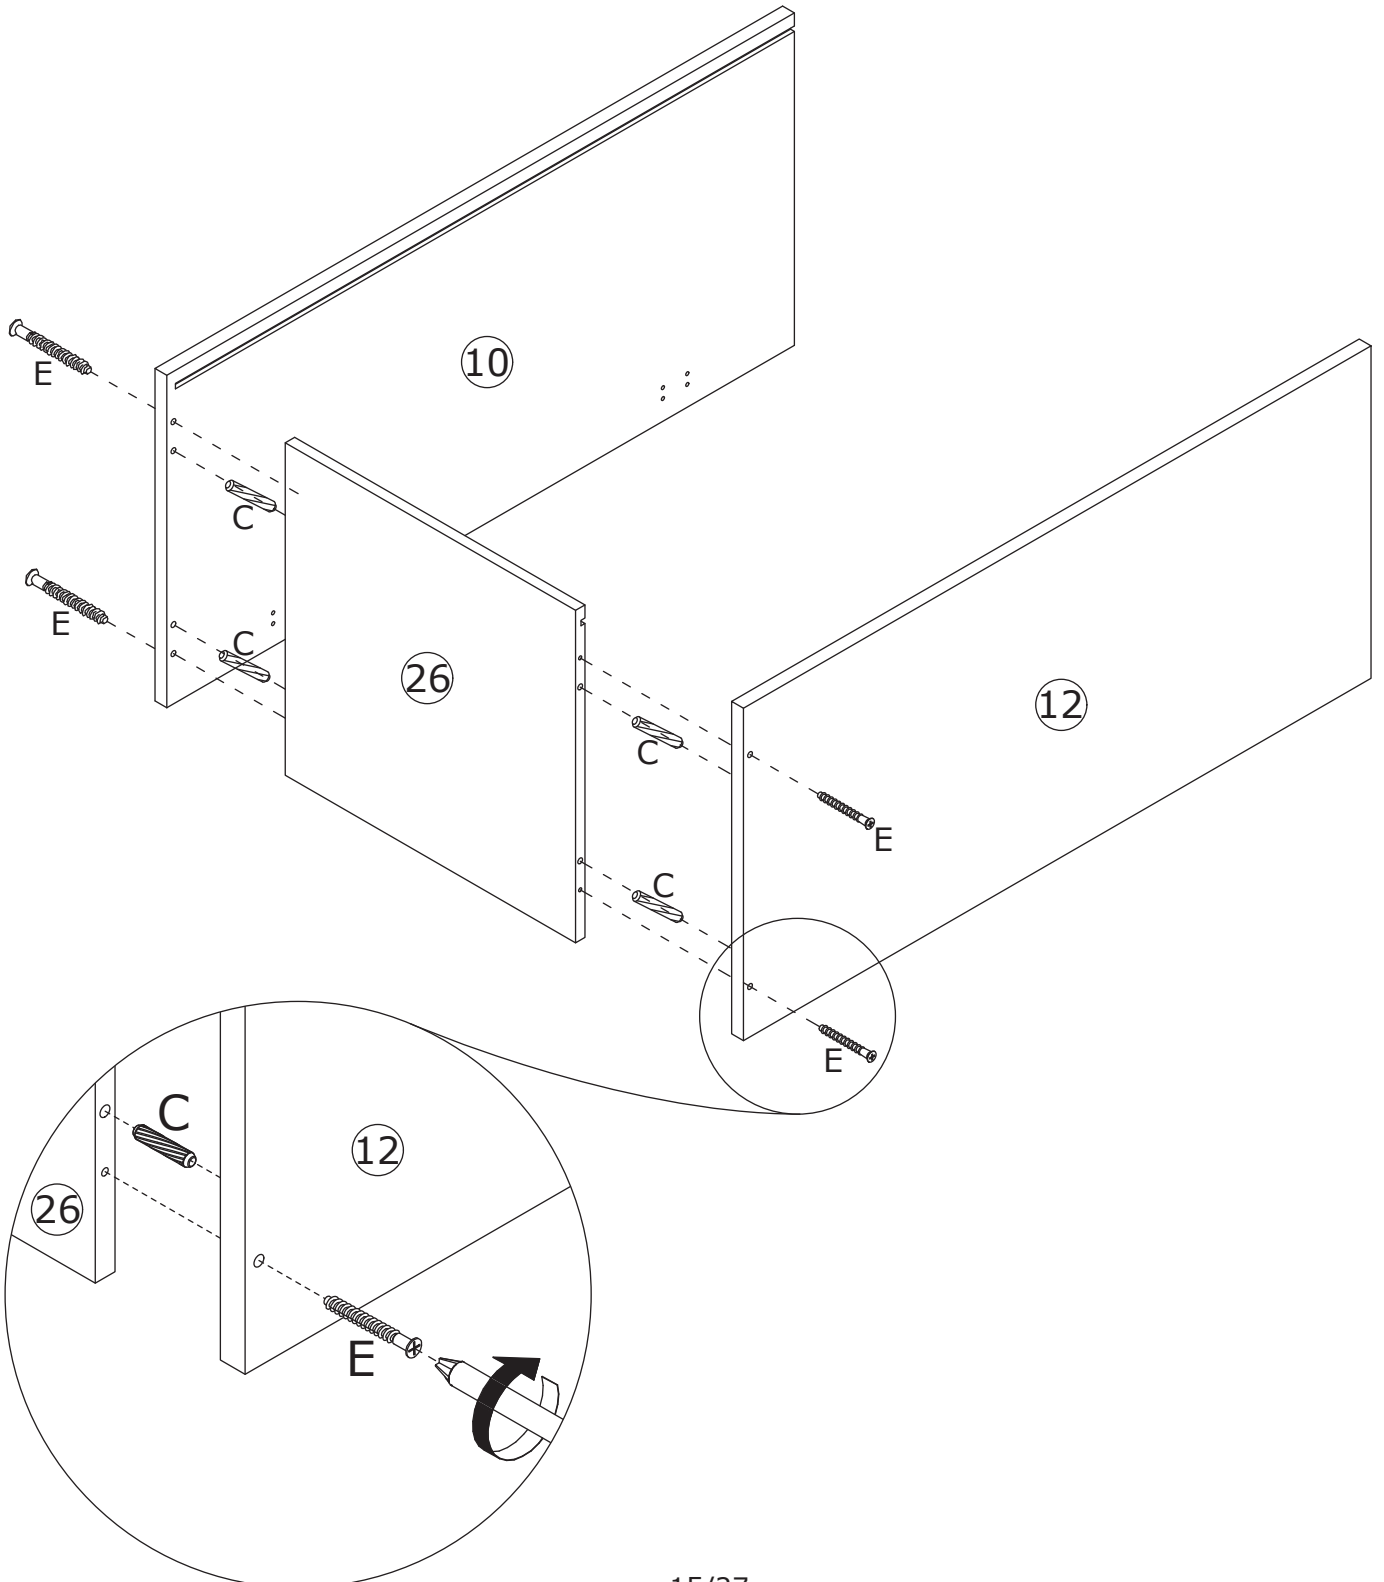

15

 Insert panel 1 into grooves of panel 10 and 12 as shown.

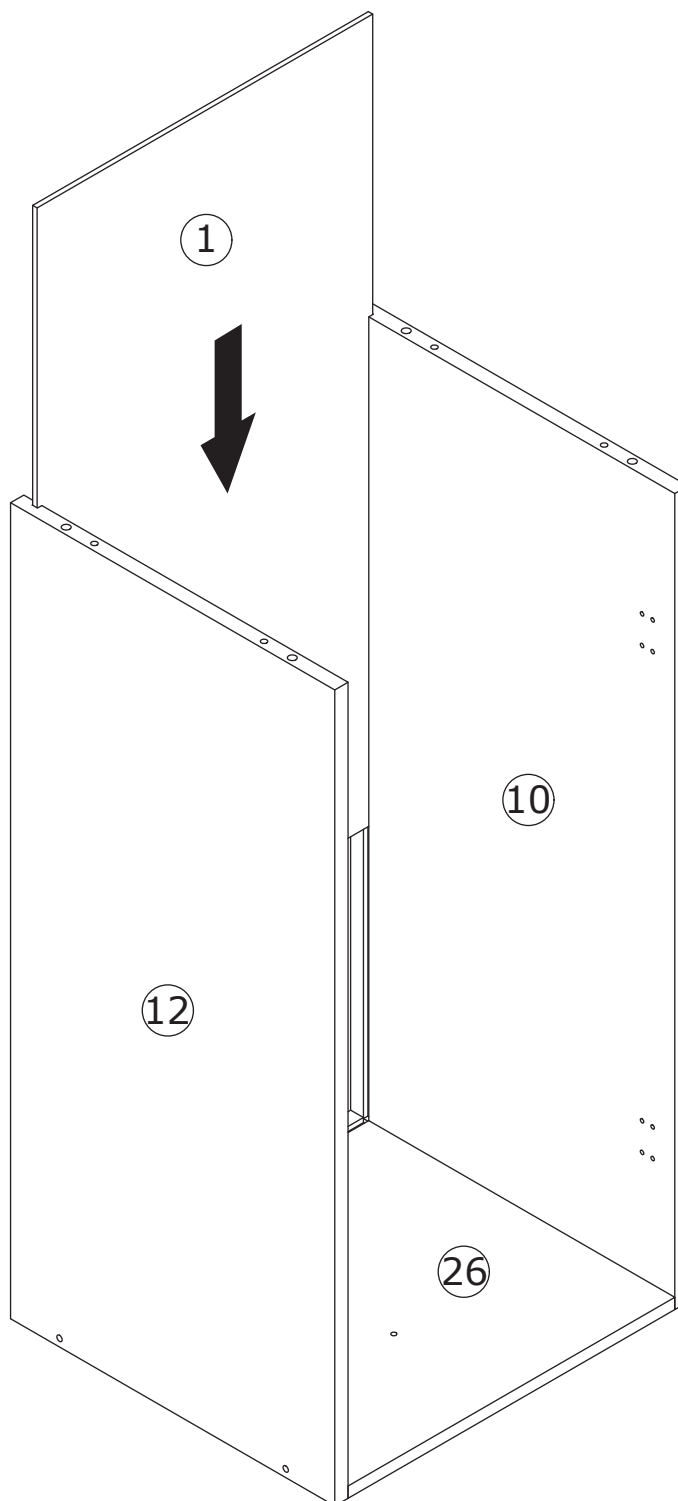


16



A x 8
CRA0635A

H x 1
CR
WX0812A

 I x 2
CRD3512A



  Screw eccentric rod(A) into panel 15 at first, fix rail H(CR) into panel 15 with screw(I) as shown.

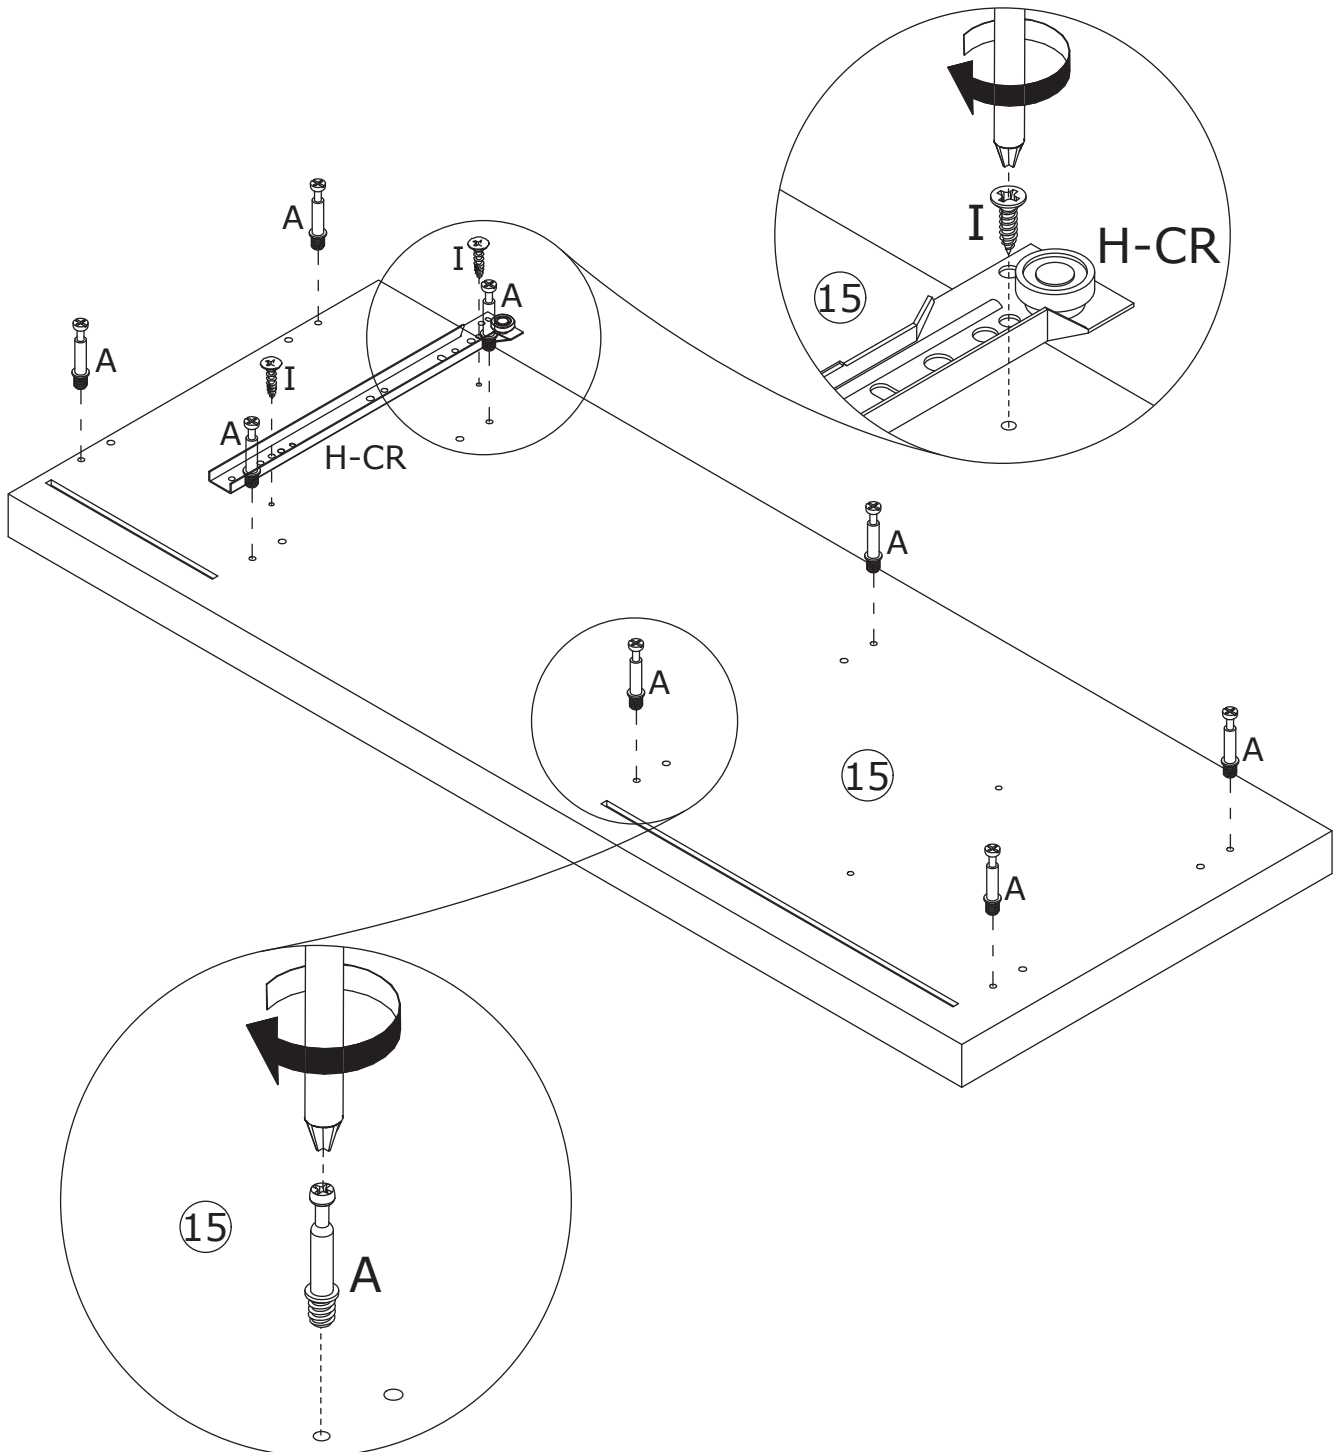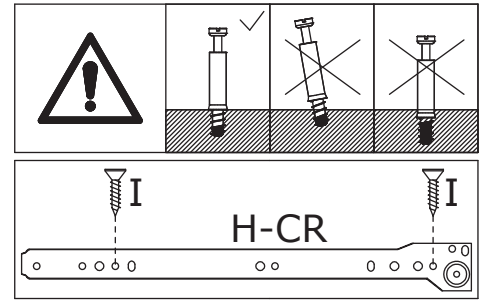


17

B x 8











CRB1595A

 C x 8




CRF0630A

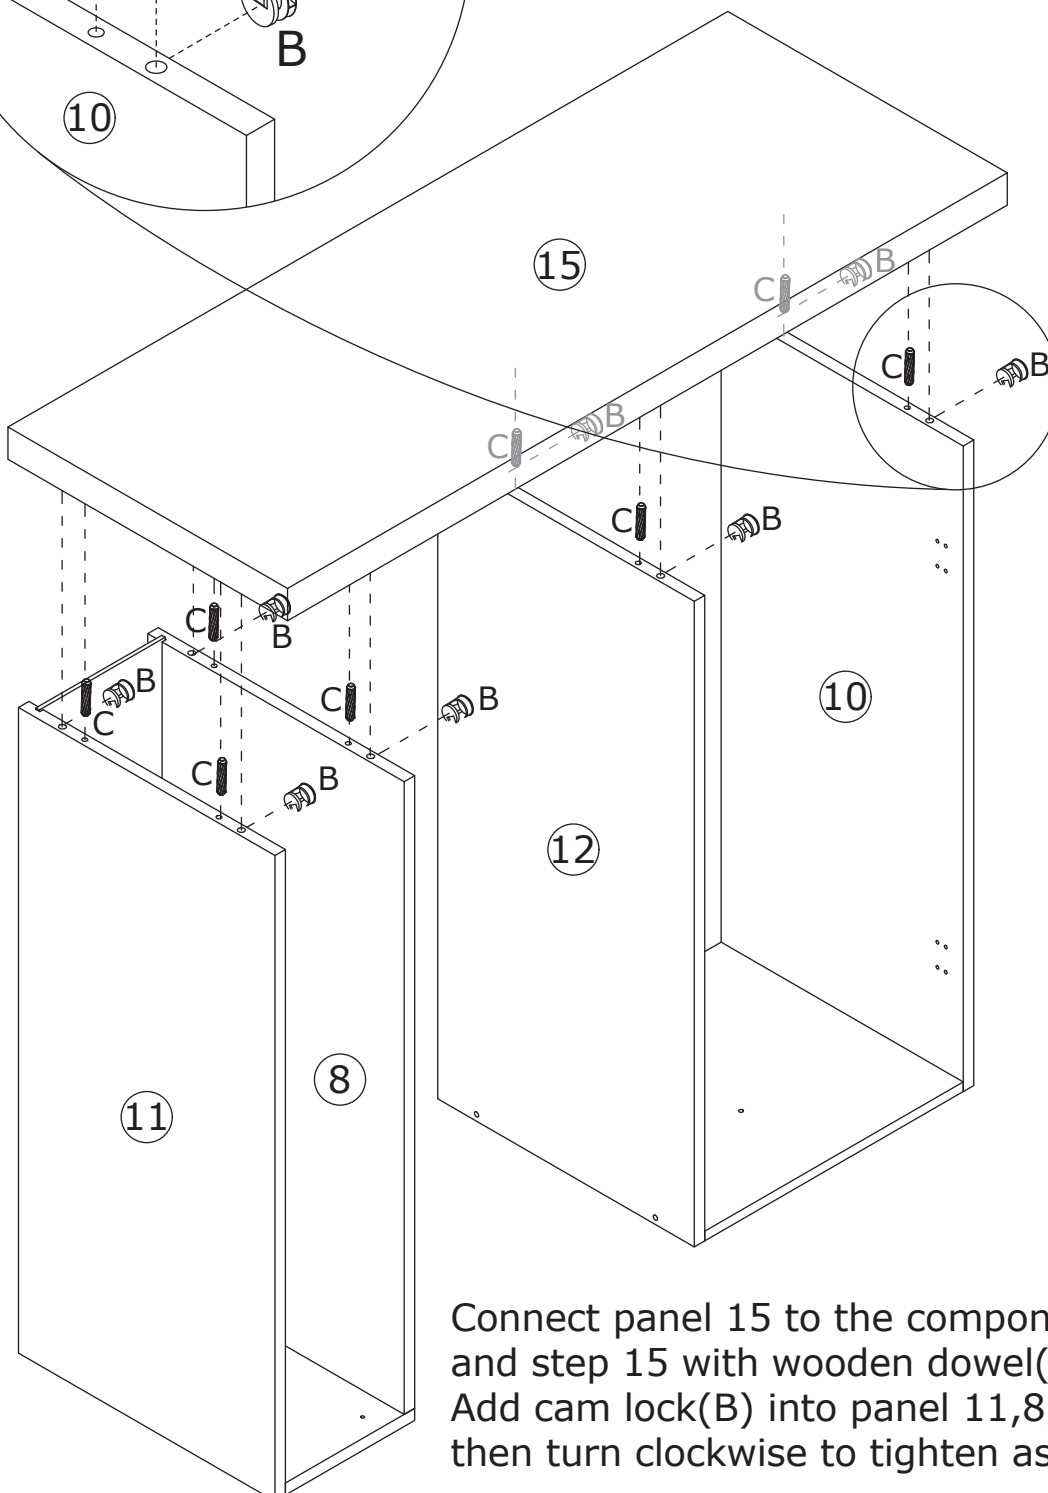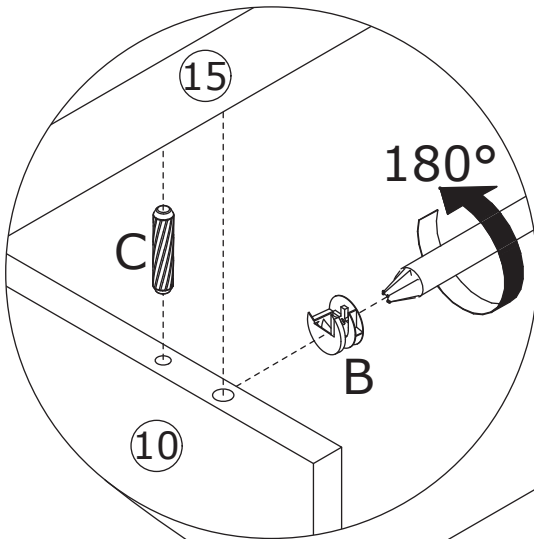        

Connect panel 15 to the component in step 13 and step 15 with wooden dowel(C) as shown. Add cam lock(B) into panel 11,8,12 and 10 then turn clockwise to tighten as shown.

18

 
Assemble the component in step 9 and step 17 as shown.

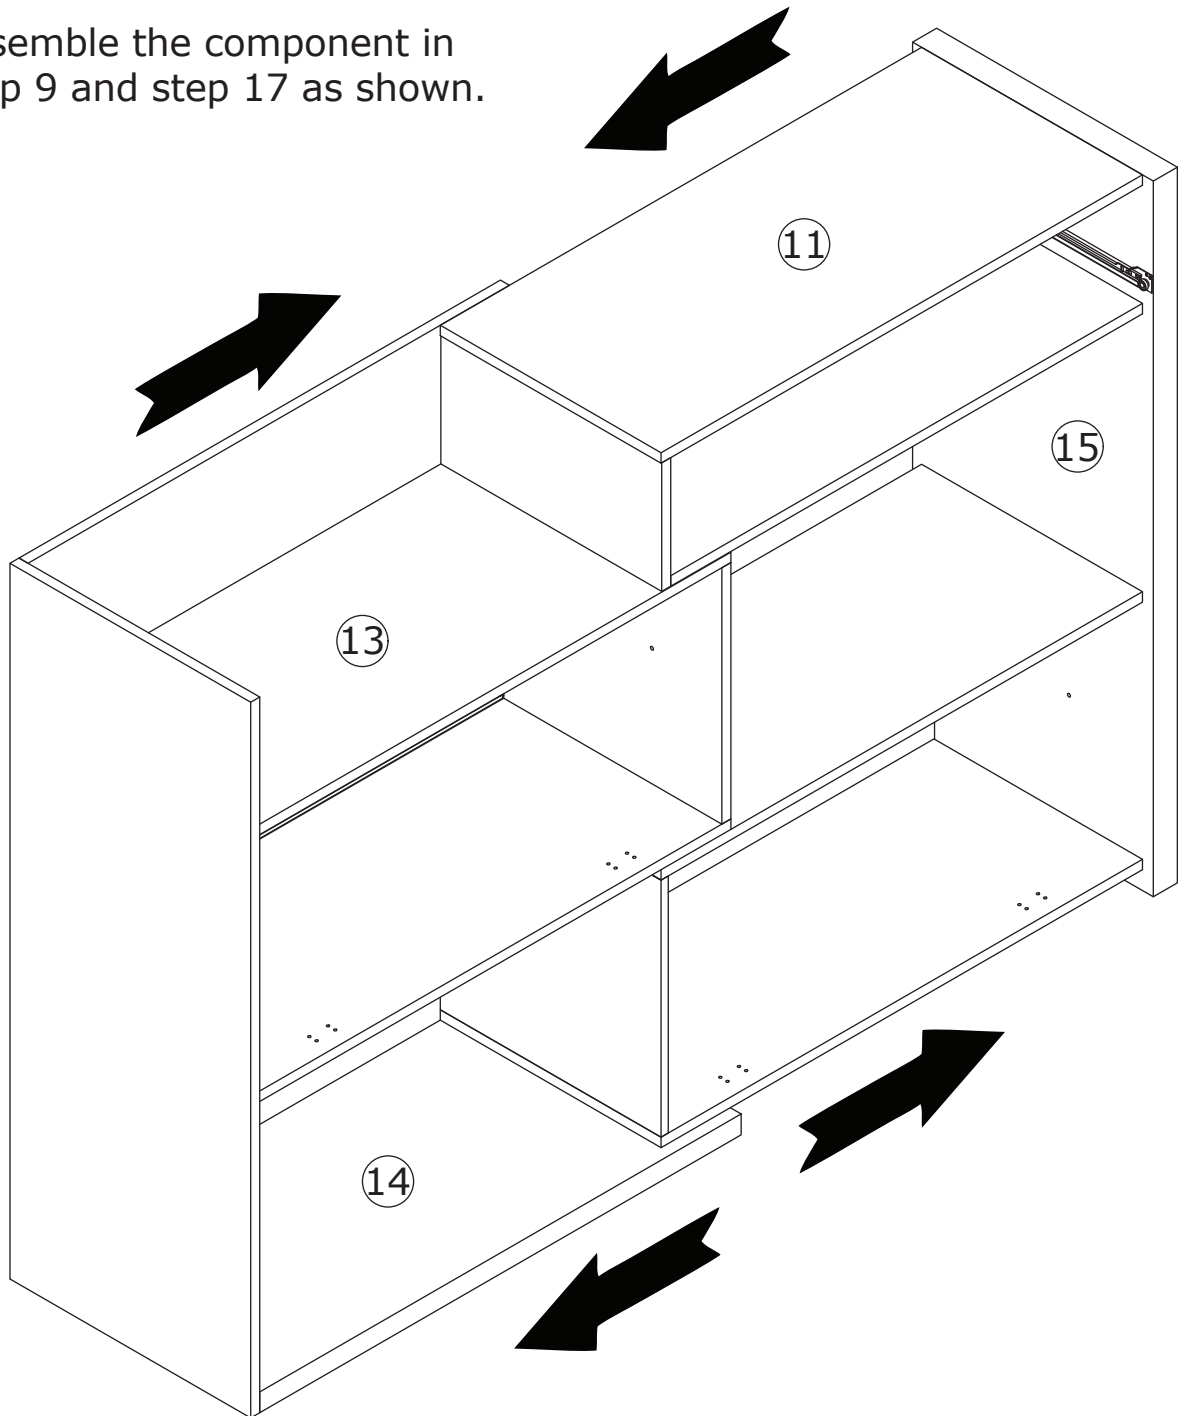


The cabinet can be adjusted left and right according to the space limitation

19

 
E x 5




CRC0540A

 

 Connect panel 7,16,23 and 27 with screw(E) as shown.

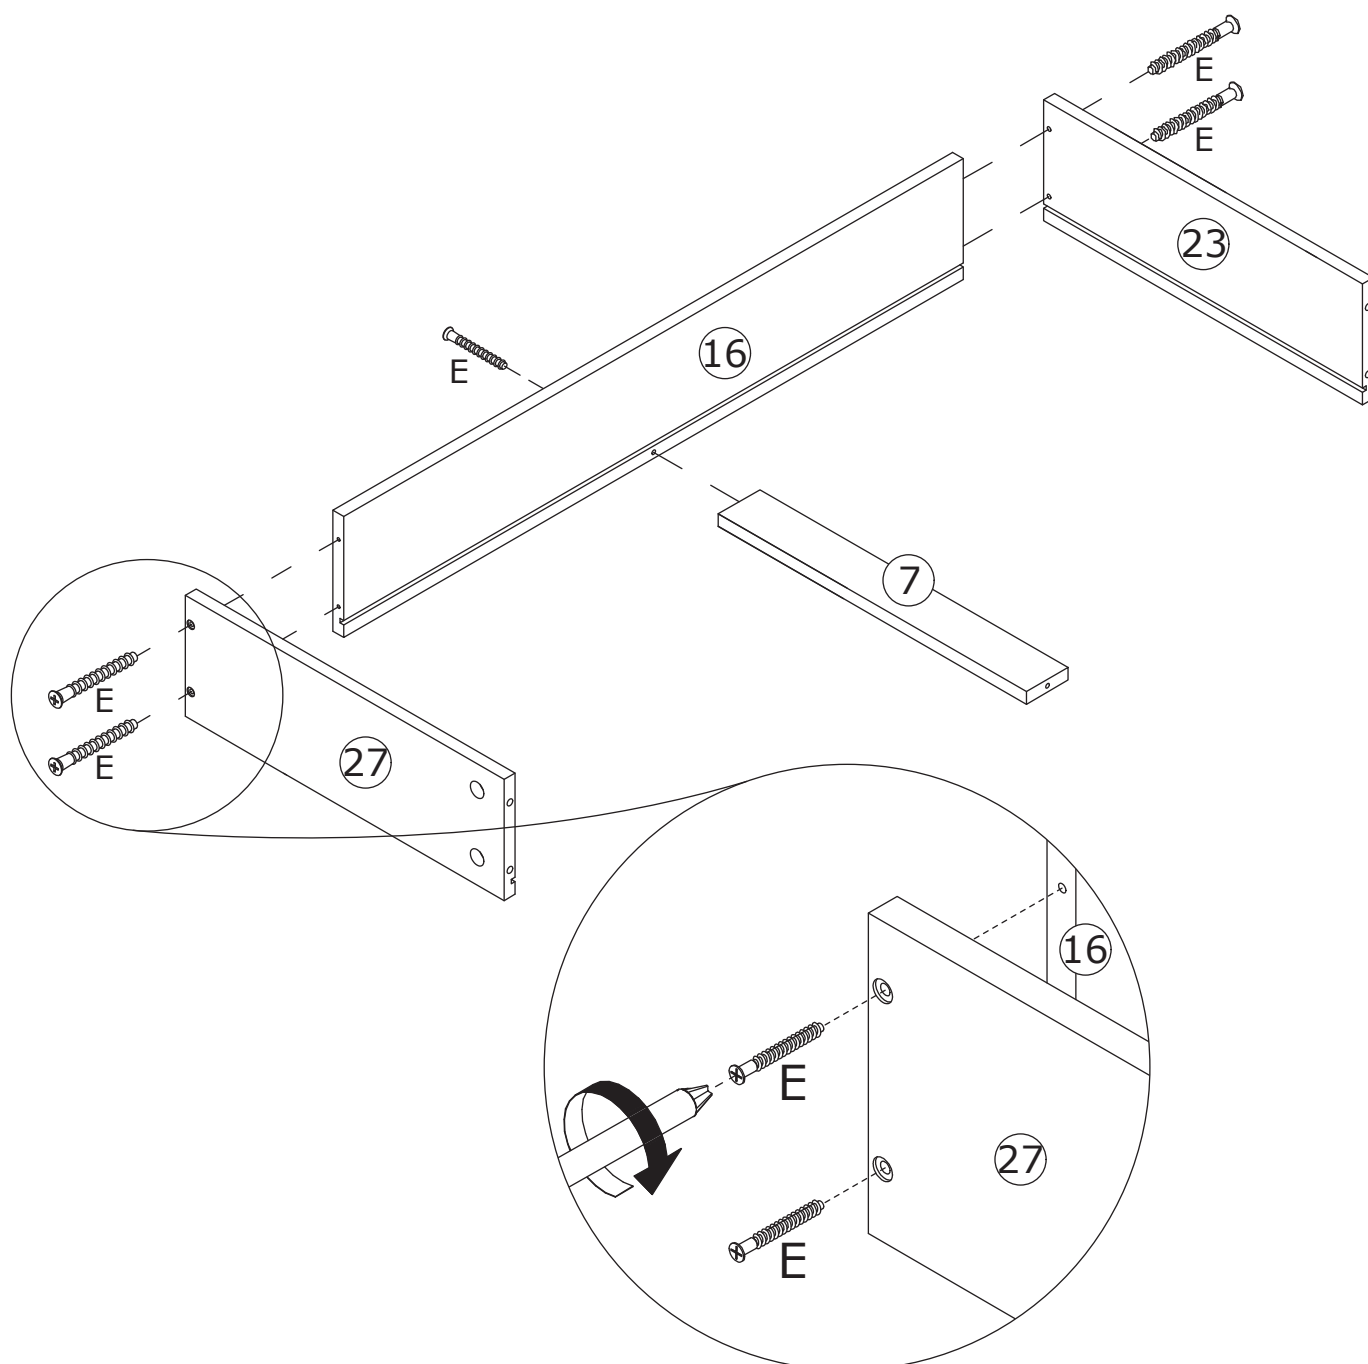


 Insert panel 5 into grooves of panel 23,16 and 27 as shown.

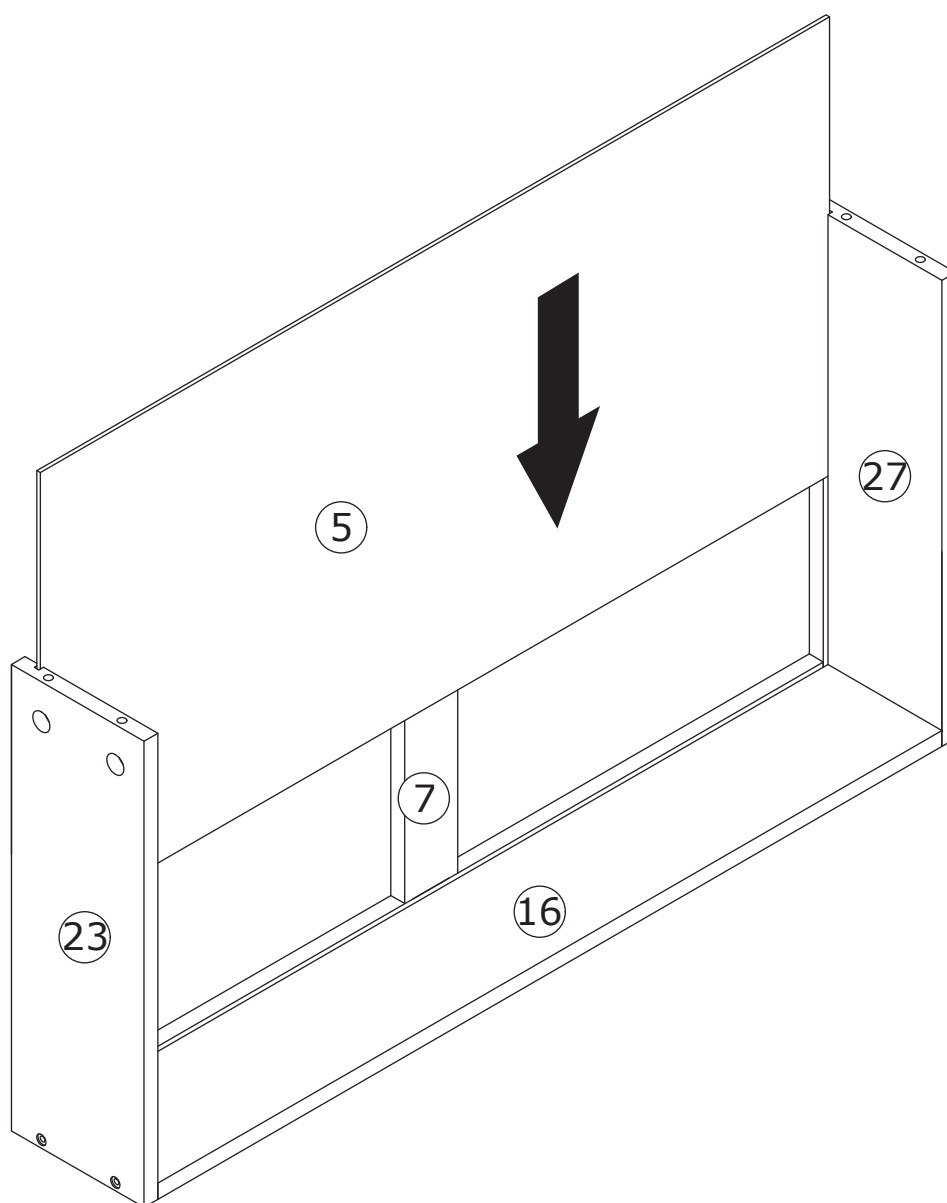


21



 
A x 5



CRA0635A

 

   Screw eccentric rod(A) into panel 6 at first.

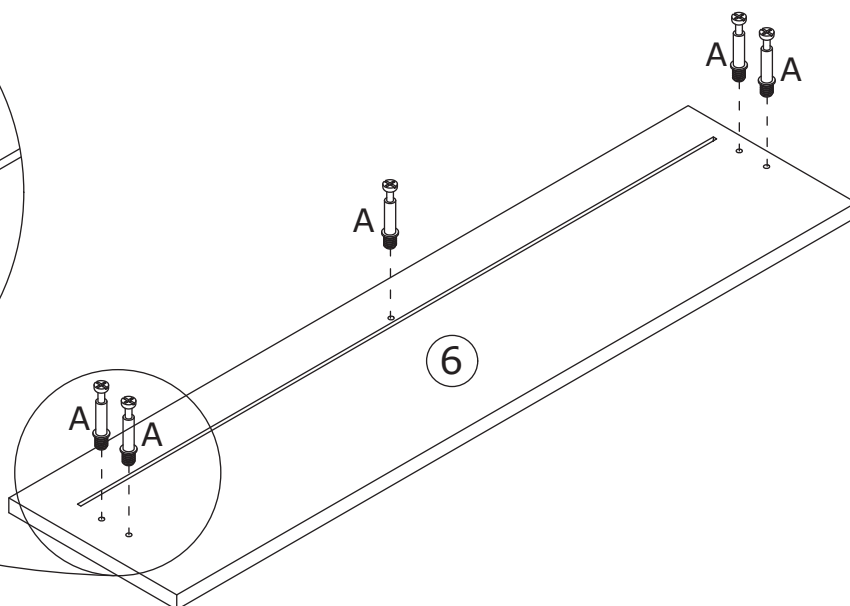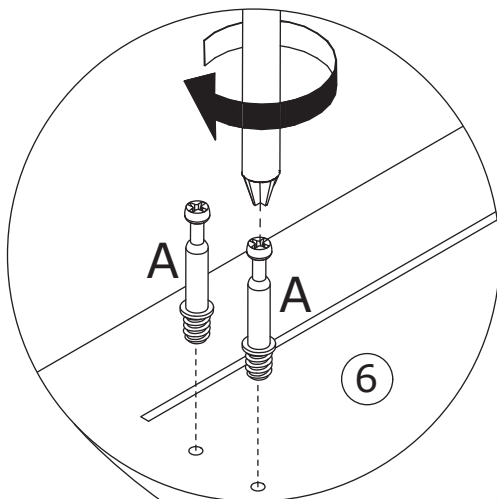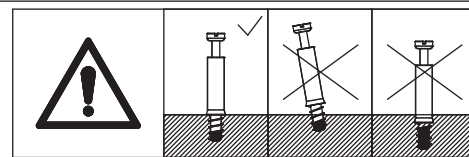

22




B x 5



CRB1595A



 
 
 
Assemble panel 6 to the drawer, add cam lock(B) into panel 23,27 and 7 then turn clockwise to tighten as shown.

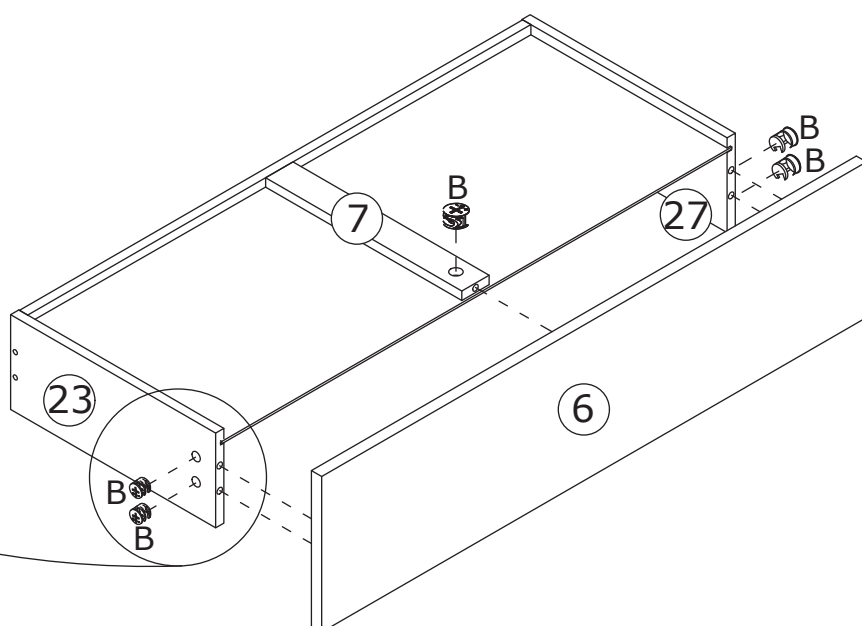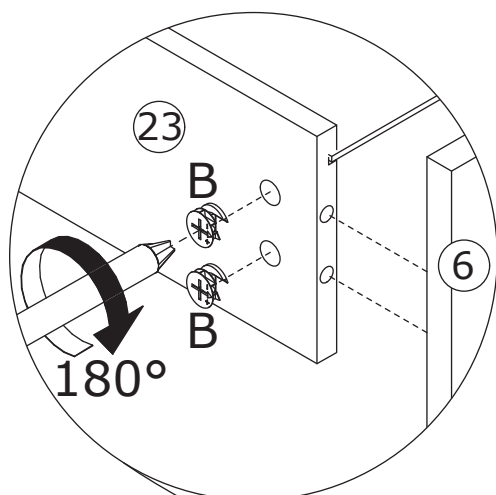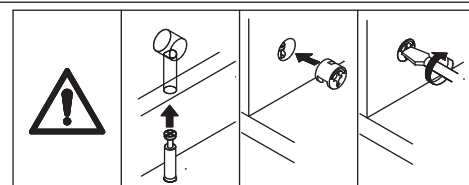

23

H x 1
DL
DR
WX0812A

   
I x 4
CRD3512A

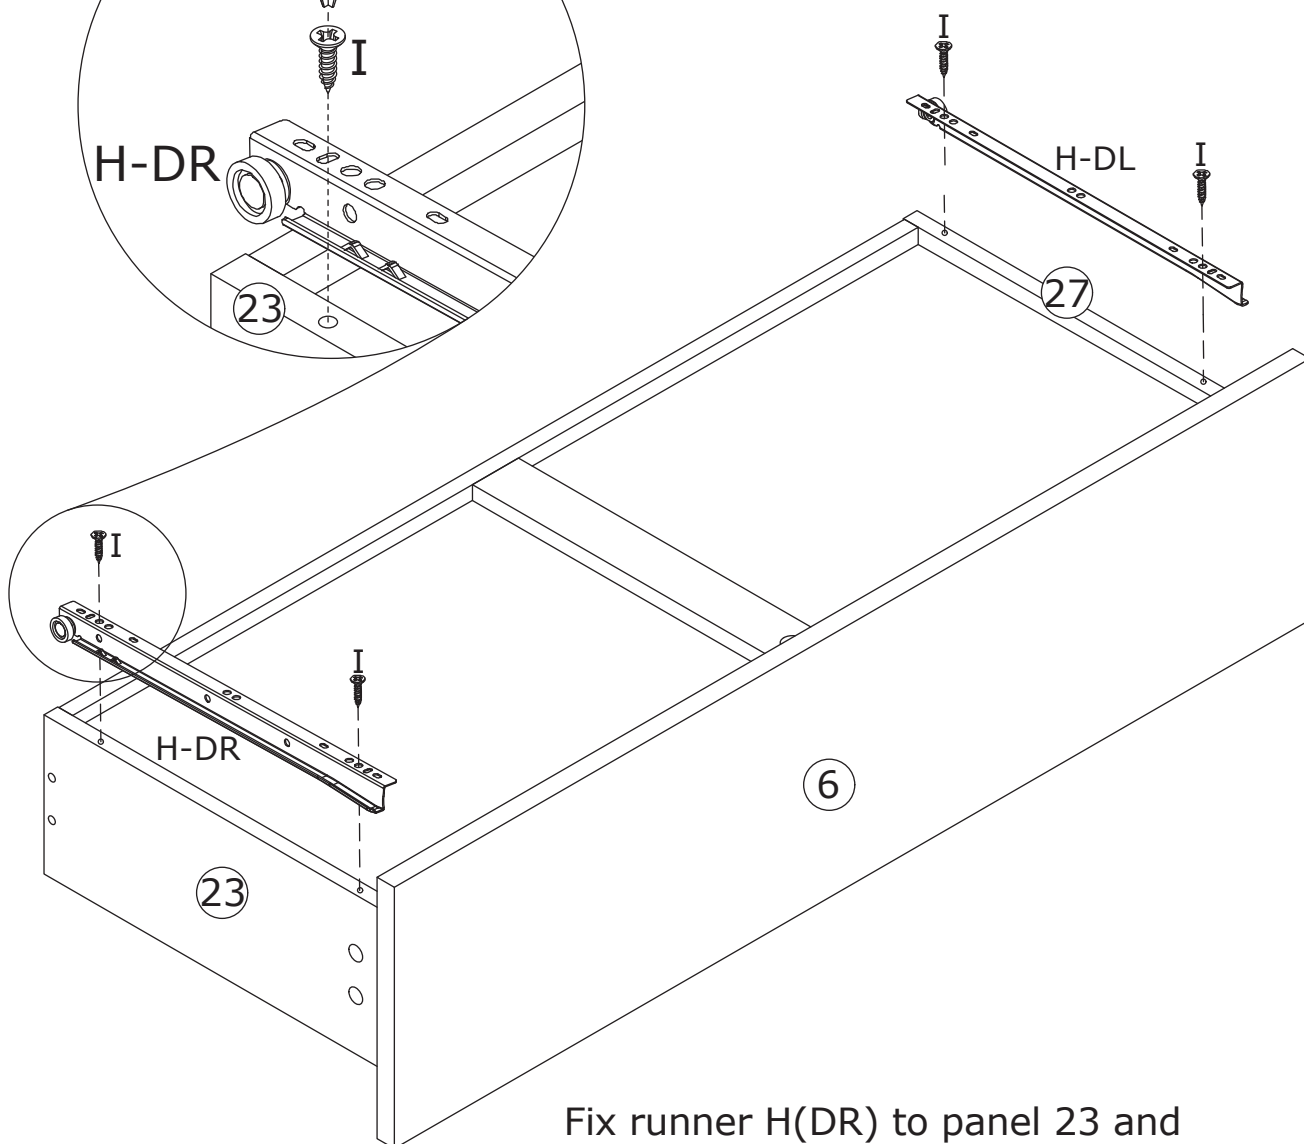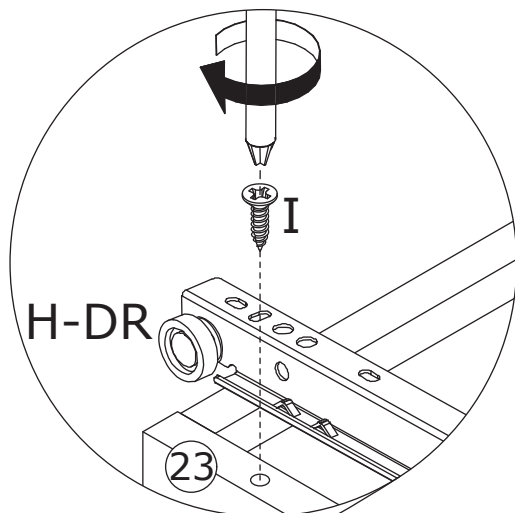


Fix runner H(DR) to panel 23 and runner H(DL) to panel 27 with screw(I) as shown.

24

 D x 8




 Add layer pin(D) to panel 15,26,24 and 22 at first, then put panel 3 and 4 on layer pin as shown.

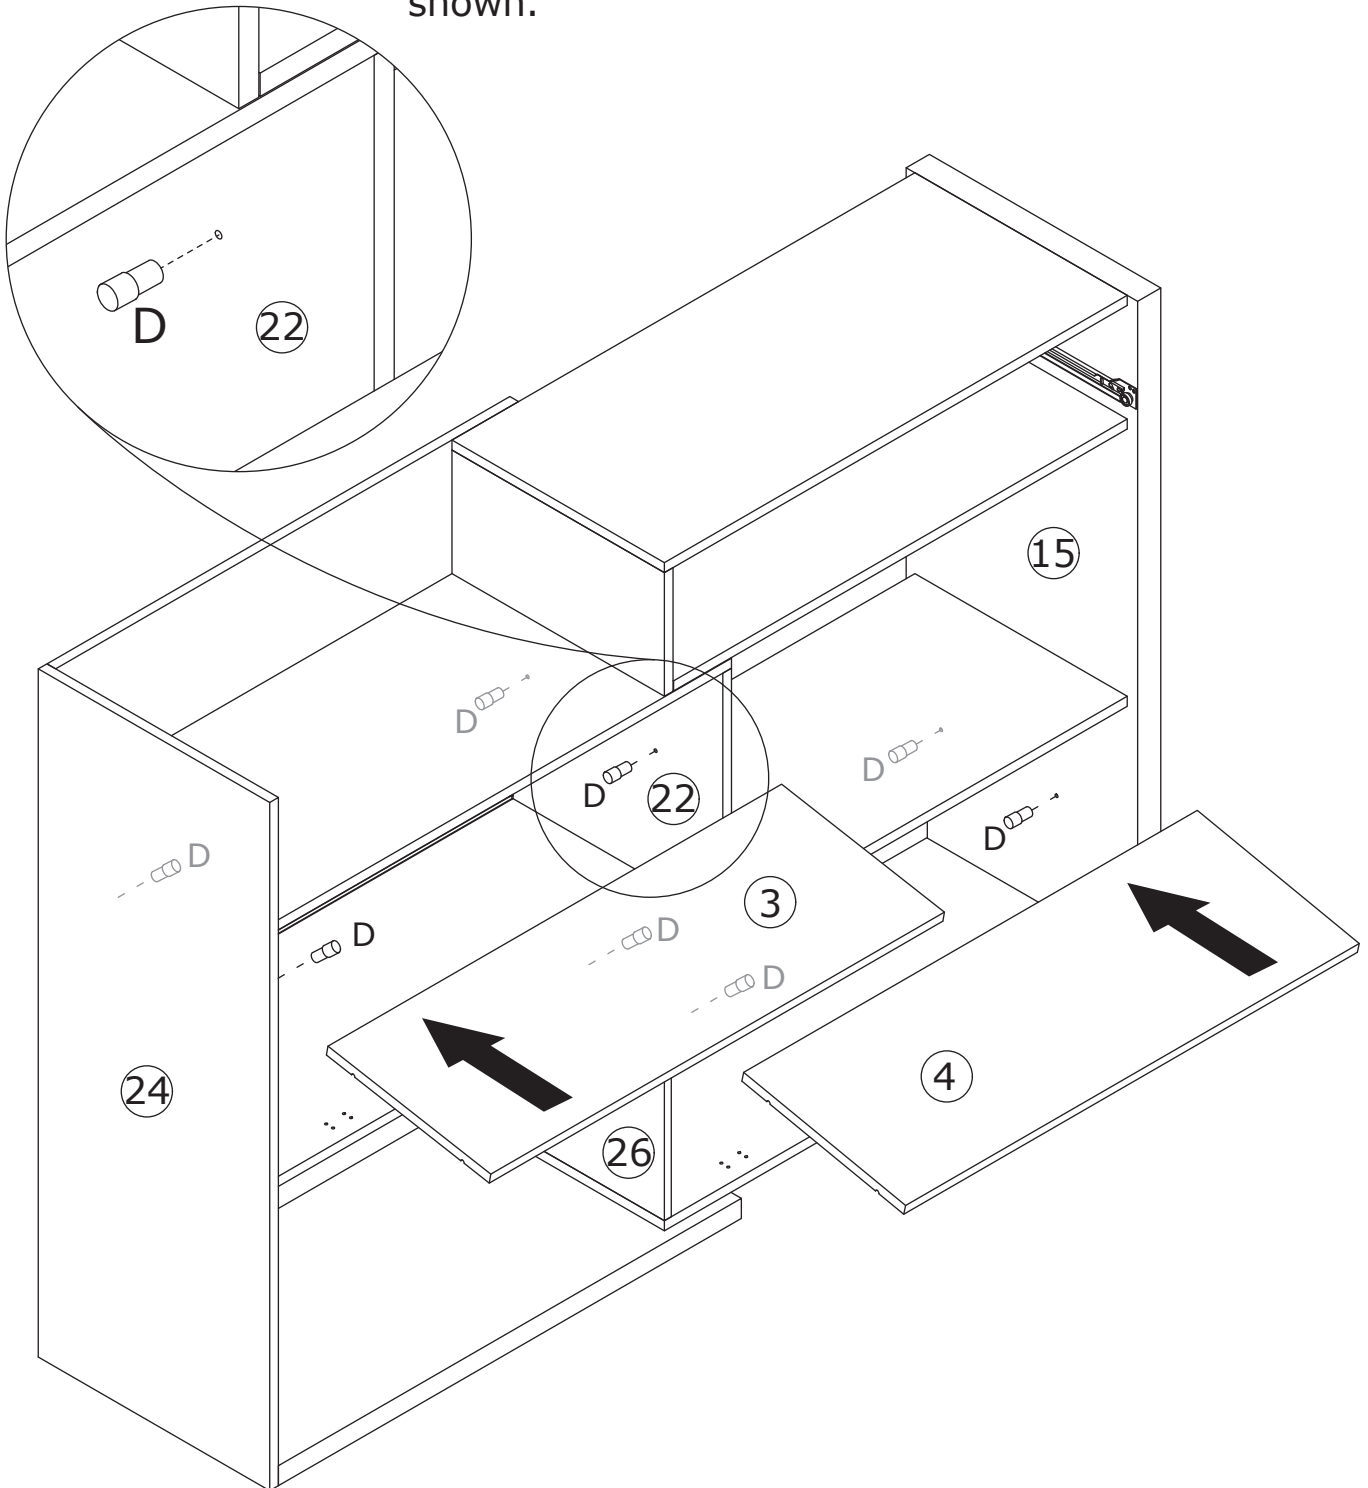

25

 G x 4






DGA861A


I x 8



   CRD3512A

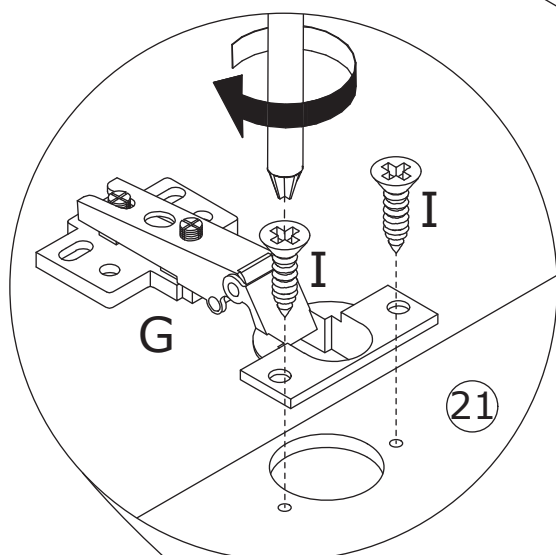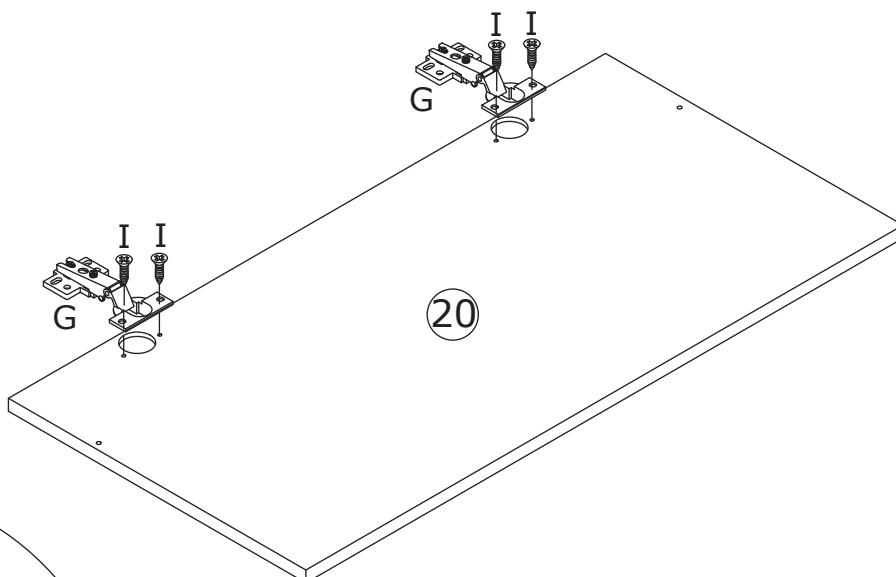

 Fix hinge(G) to panel 20 and 21 with screw(I) as shown.

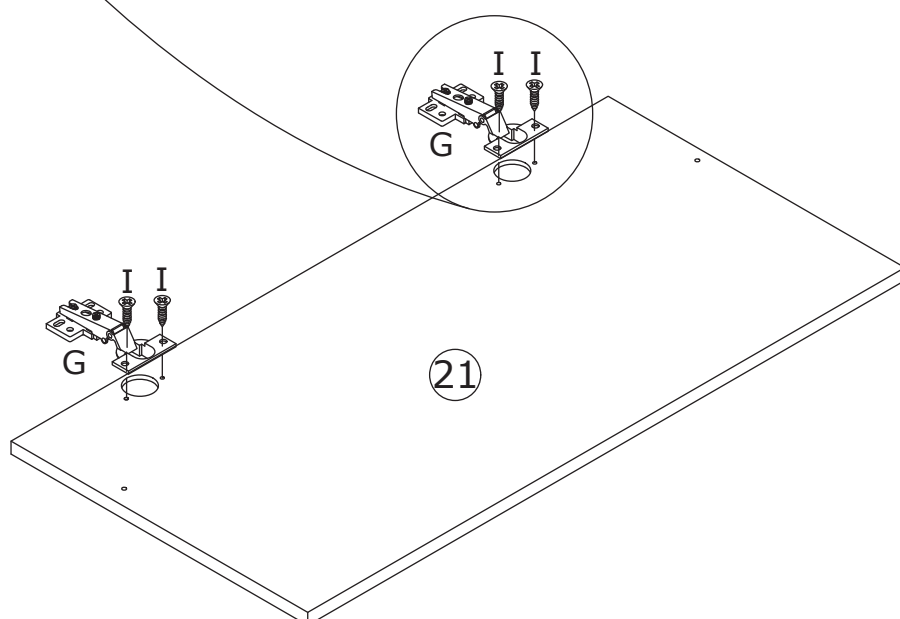



26

I x 24




CRD3512A

 
 
J x 4



 Assemble panel 20 and 21 to the cabinet with screw(I) as shown.
Fix part(J) to the cabinet with screw(I) as shown.

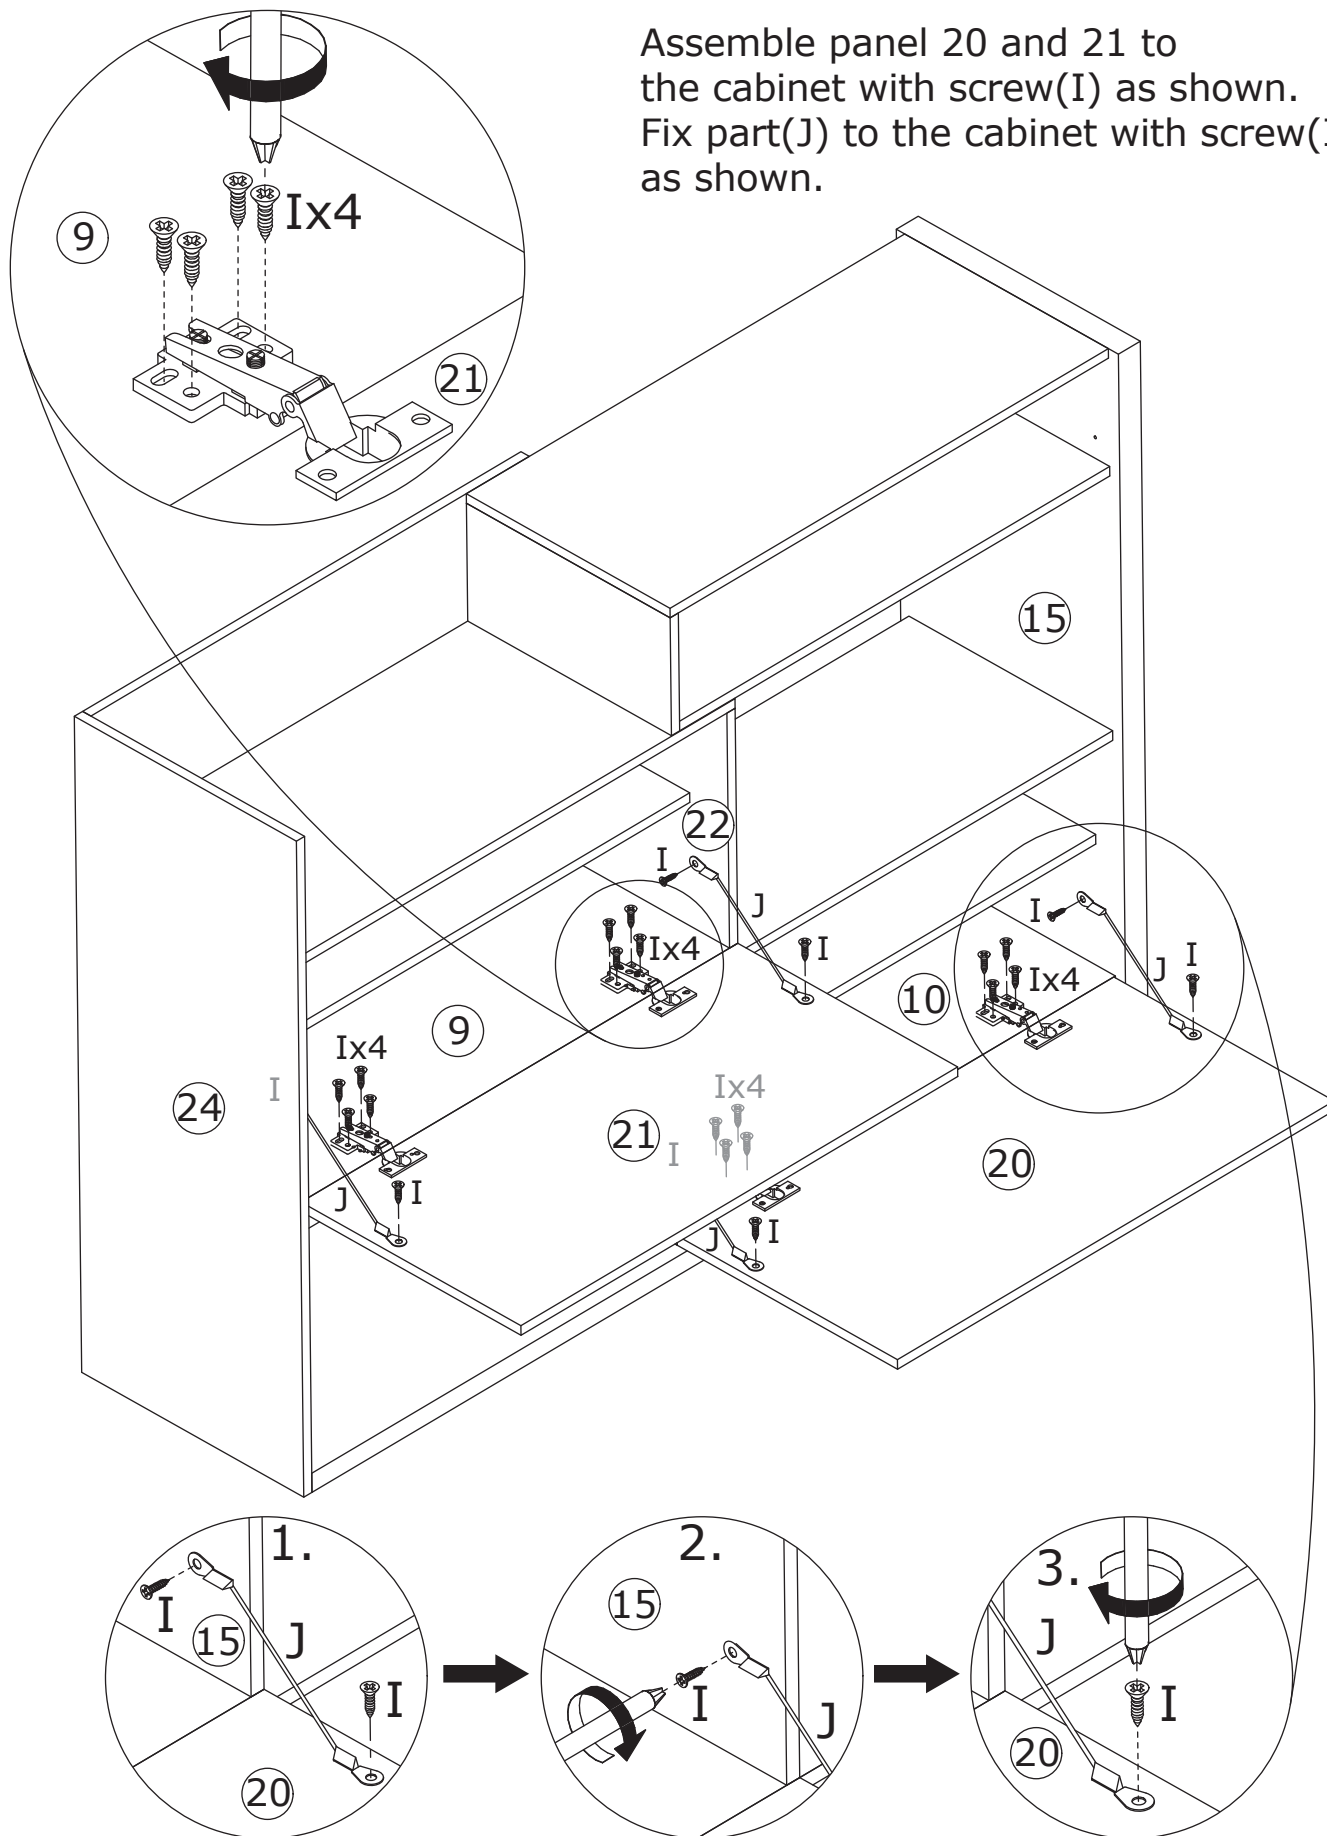

27

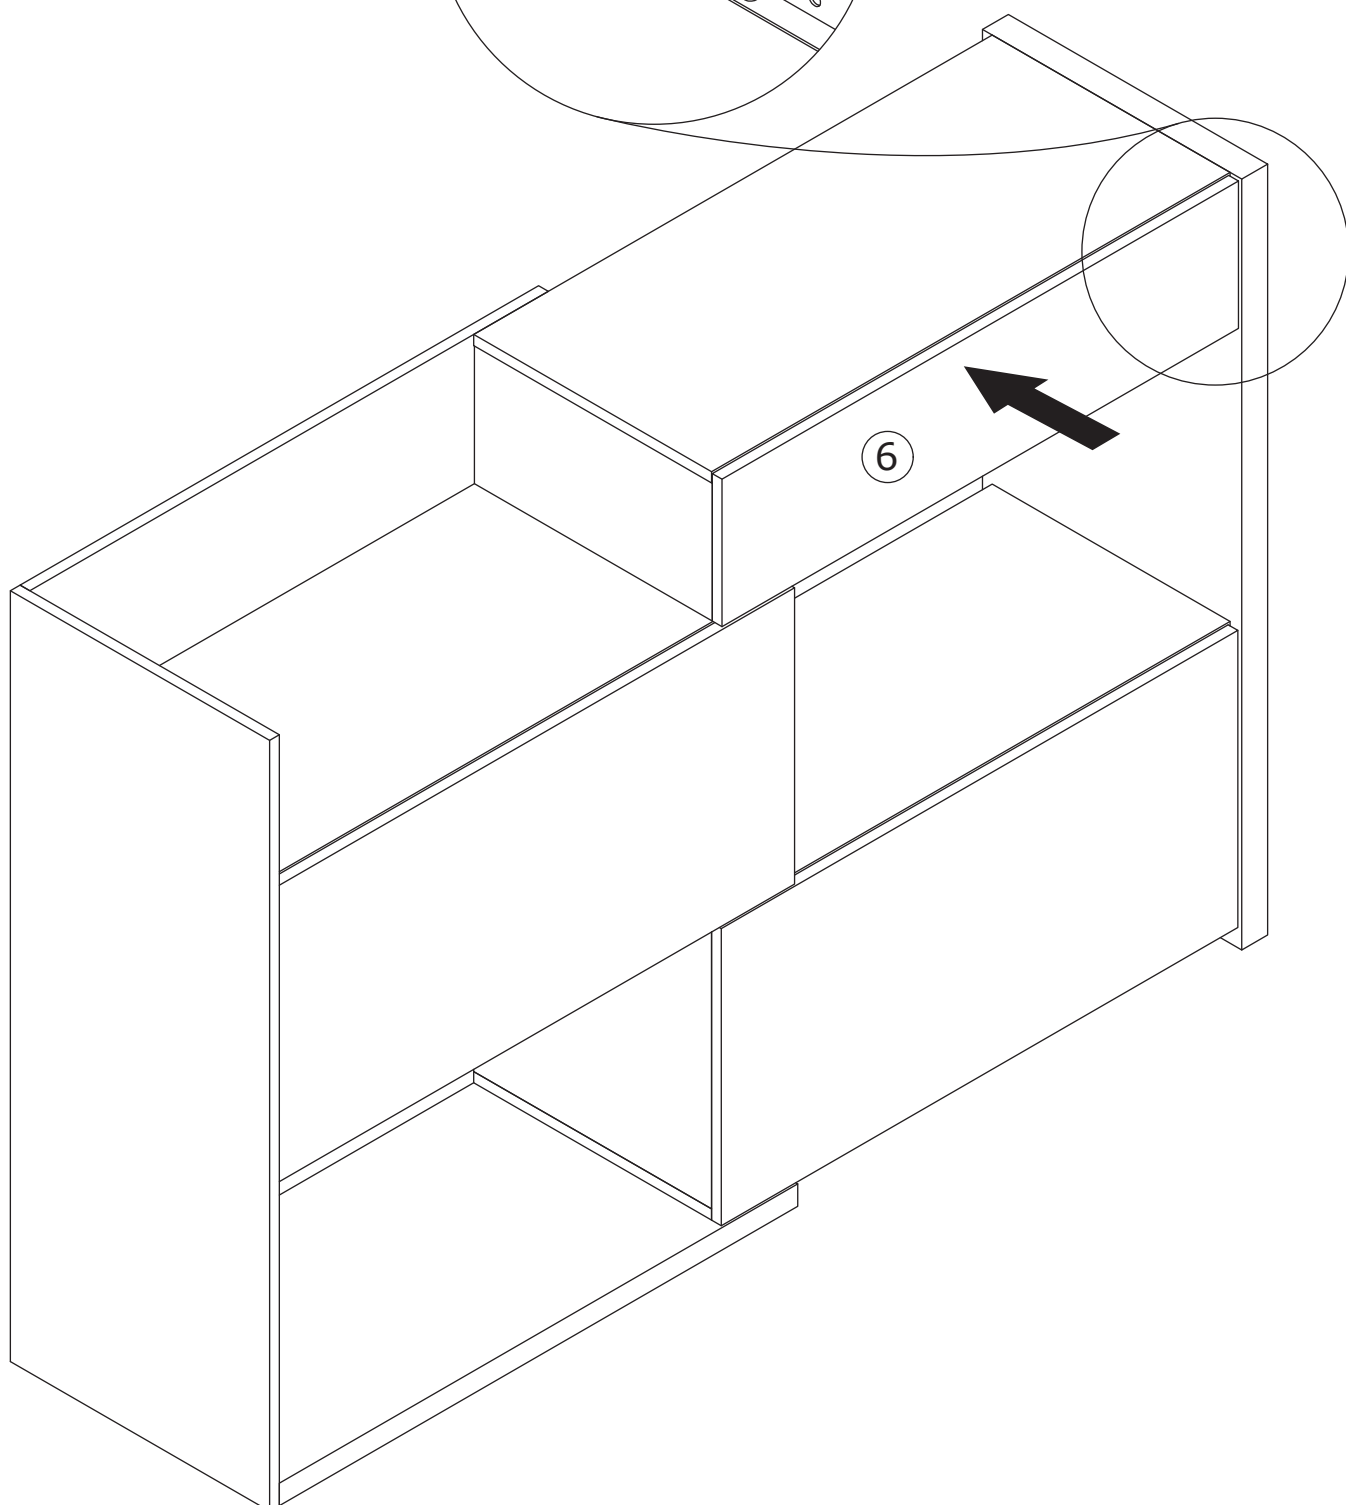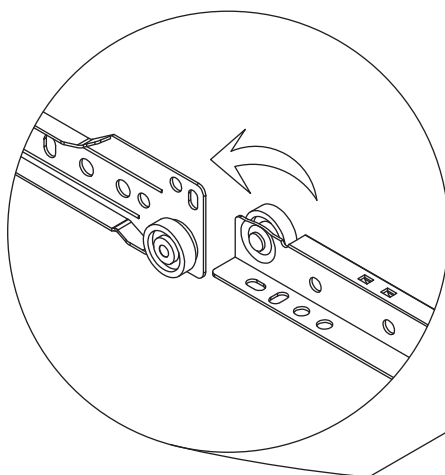  

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOUR ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.

AFTER-SALES CONTACT



feedbackstation@163.com



(303)800-6387